

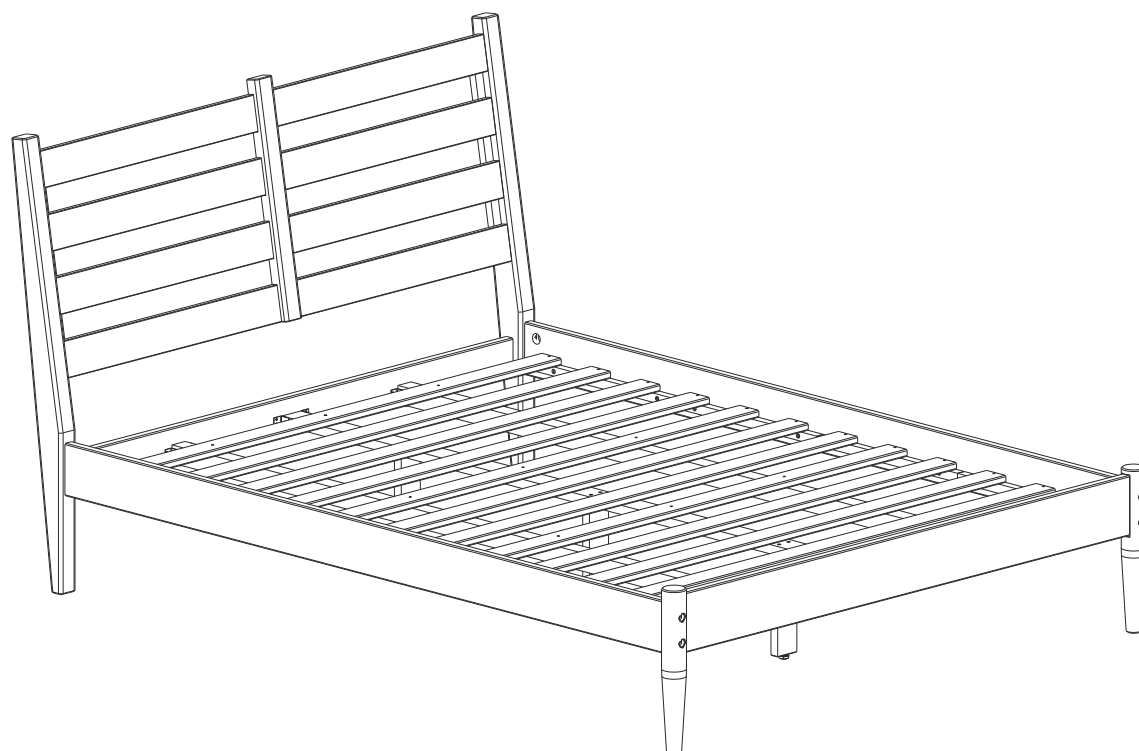
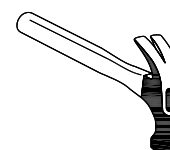


ASSEMBLY INSTRUCTIONS

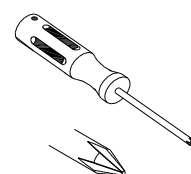


Mid-Century Slat Bed - Full Size

01:20 Hs

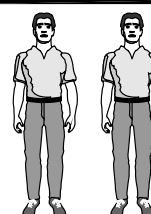

HARDWARE INCLUDED



A - 10x50 Wood Dowel
Qty. 18



B - 4,0x40 Screw
Qty. 8




C - 3,5x16 Screw
Qty. 40




D - 3,5x30 Screw
Qty. 31




E - Screw Nut
Qty. 8




F - Hex Key
Qty. 1

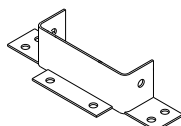


G - Support Bar
Qty. 2




H - 1/4x100 Screw
Qty. 8



I - 7,0x50 Screw
Qty. 6



J - Bed Frame
Separator 104mm
Qty. 02

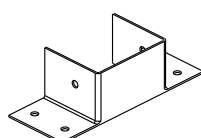

K - Support Bar
Qty. 2




L - 1/4x50 Screw
Qty. 8




M - Wood Hole Cover
Qty. 4


PARTS INCLUDED

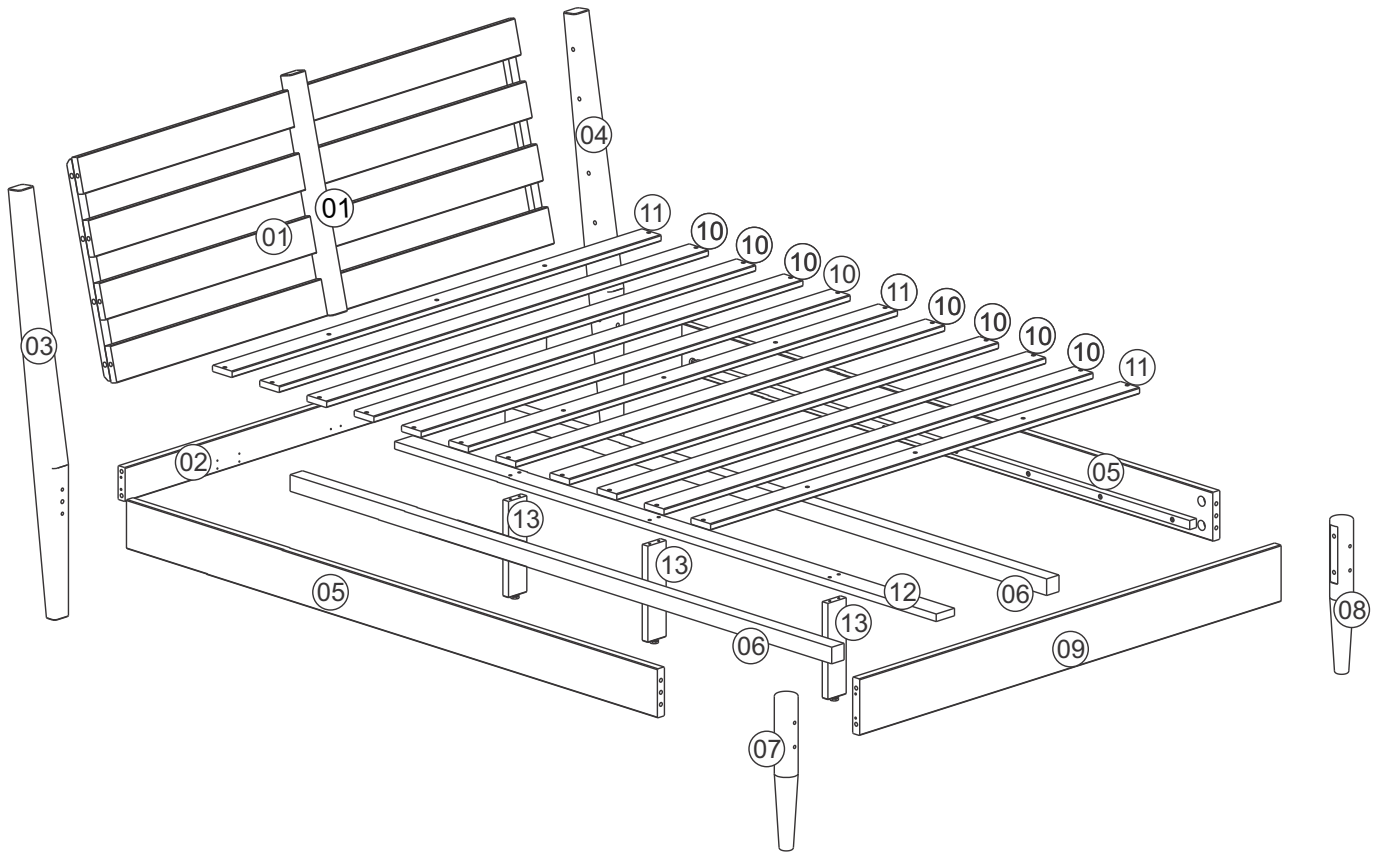



STEP 1

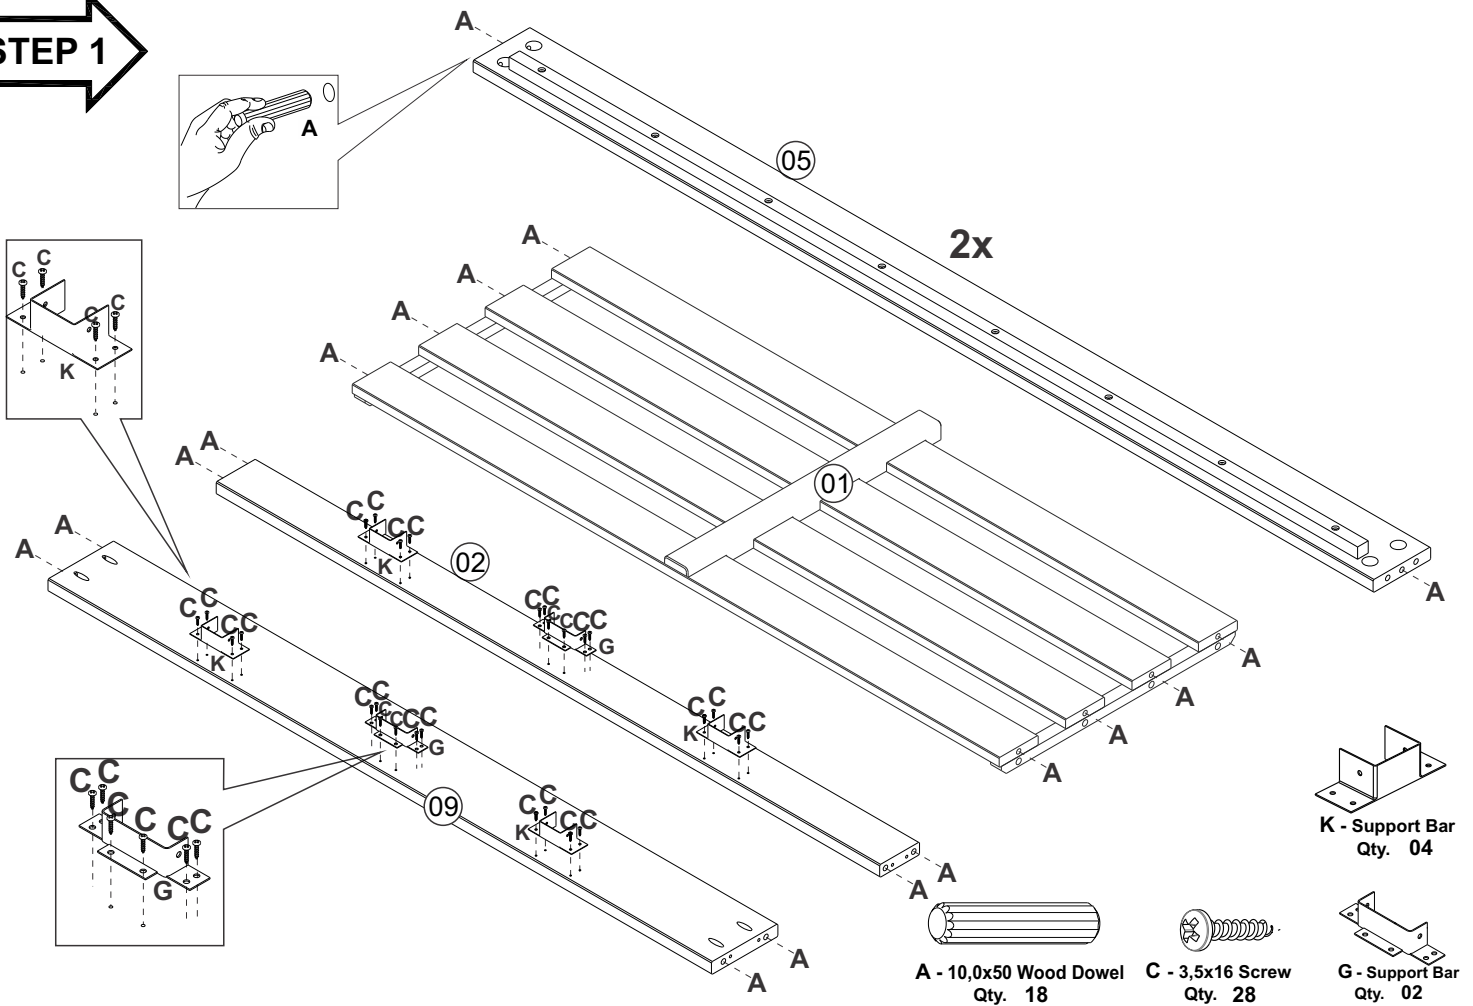



STEP 2

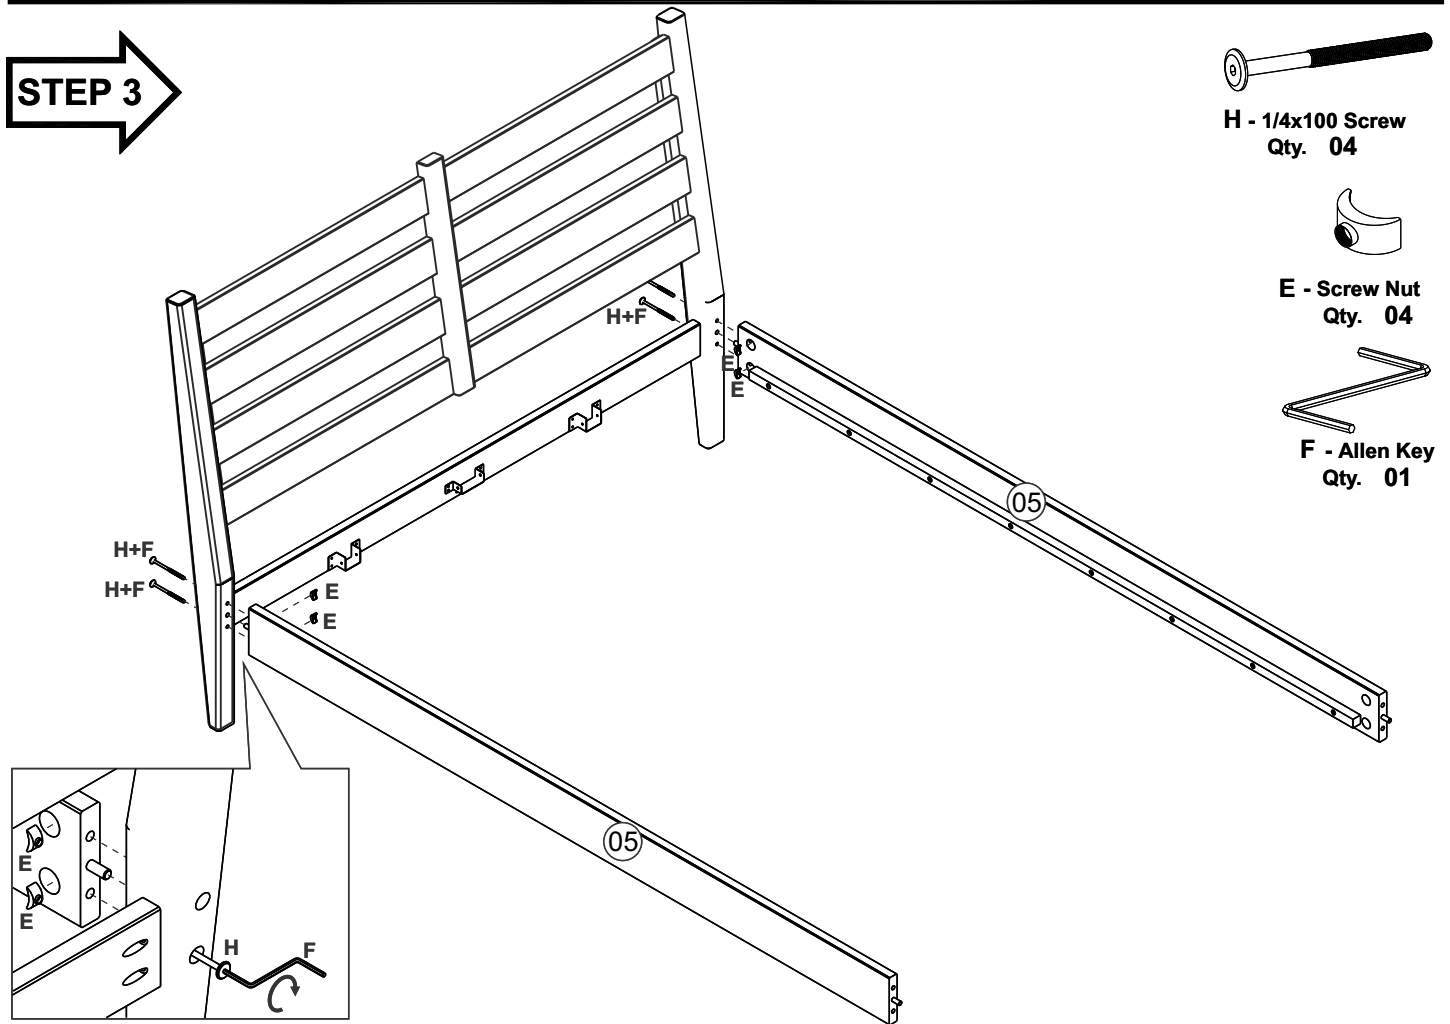

STEP 3



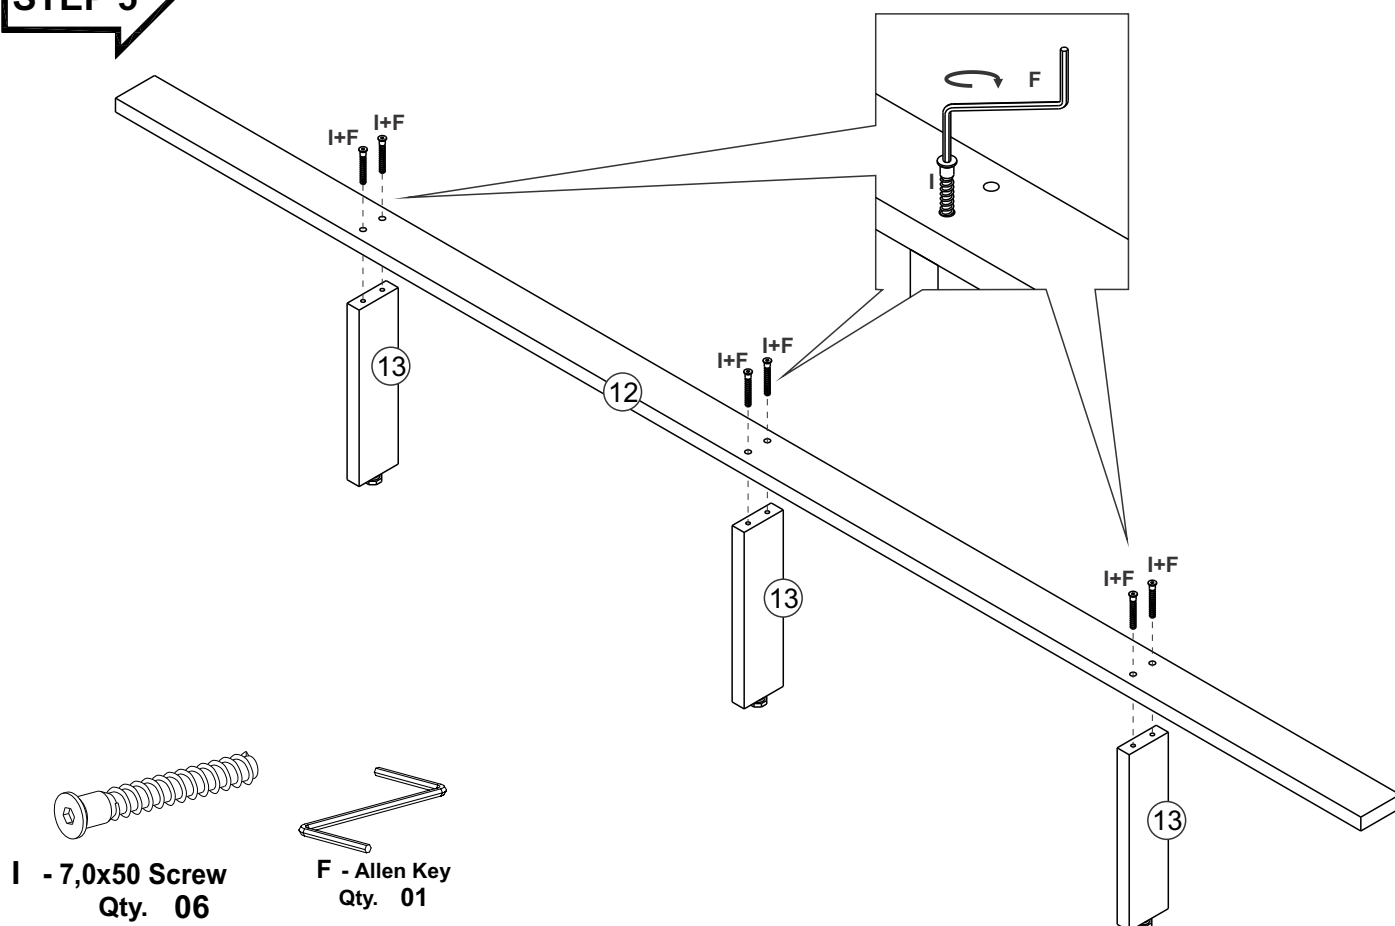
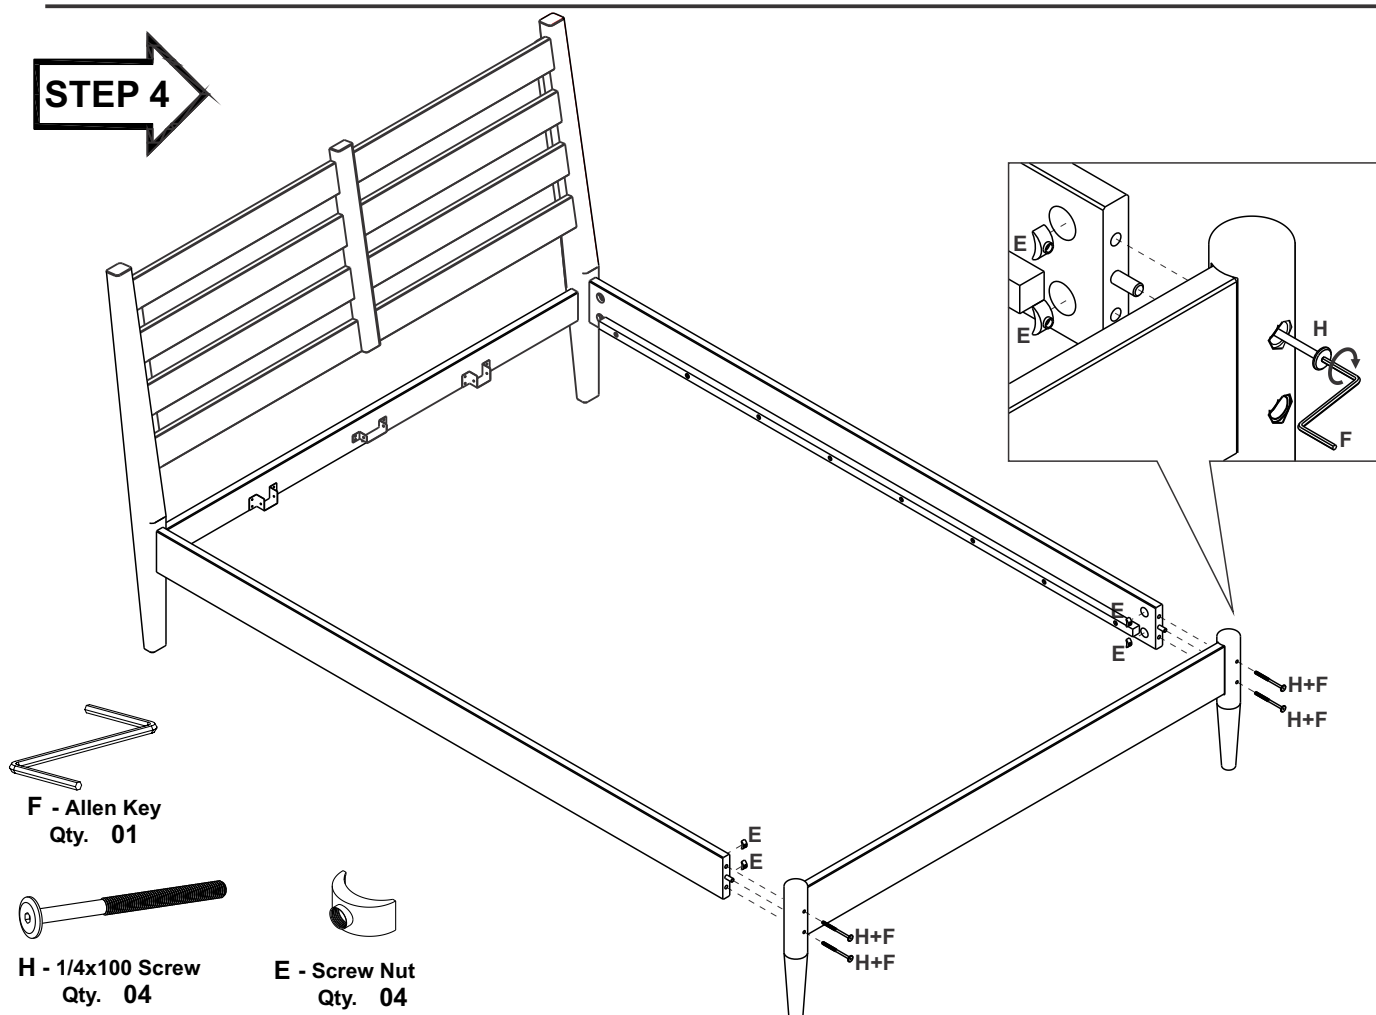


STEP 6

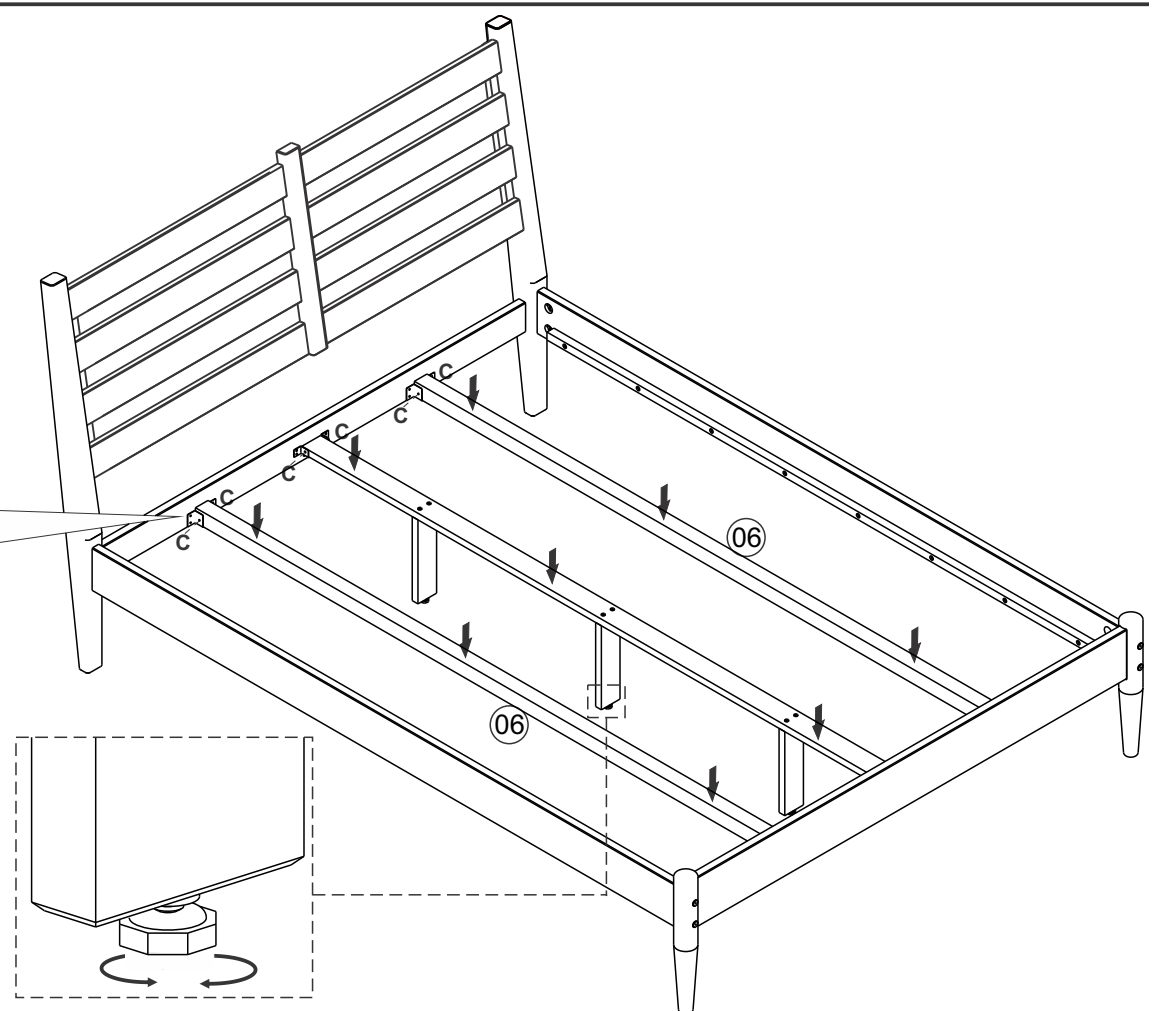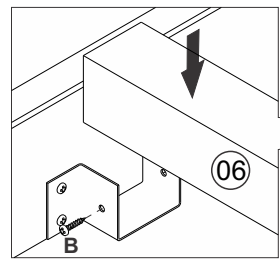

C - 3,5x16 Screw
Qty. 12


STEP 7

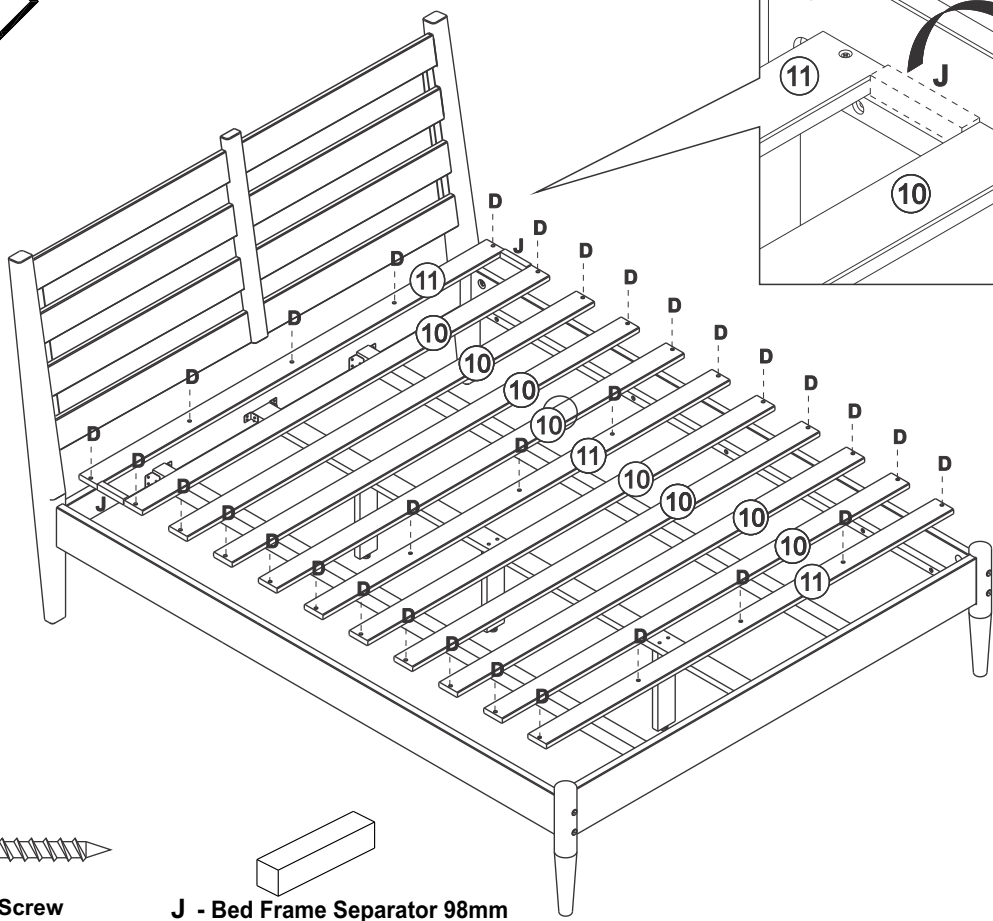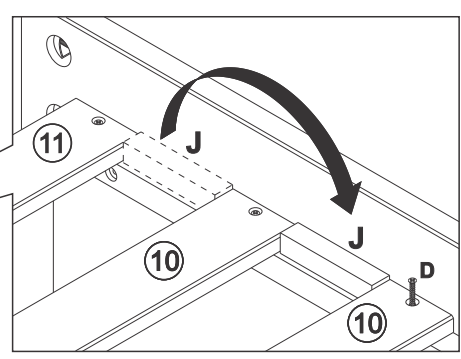

D - 3,5x30 Screw
Qty. 31

J - Bed Frame Separator 98mm
Qty. 02

STEP 8

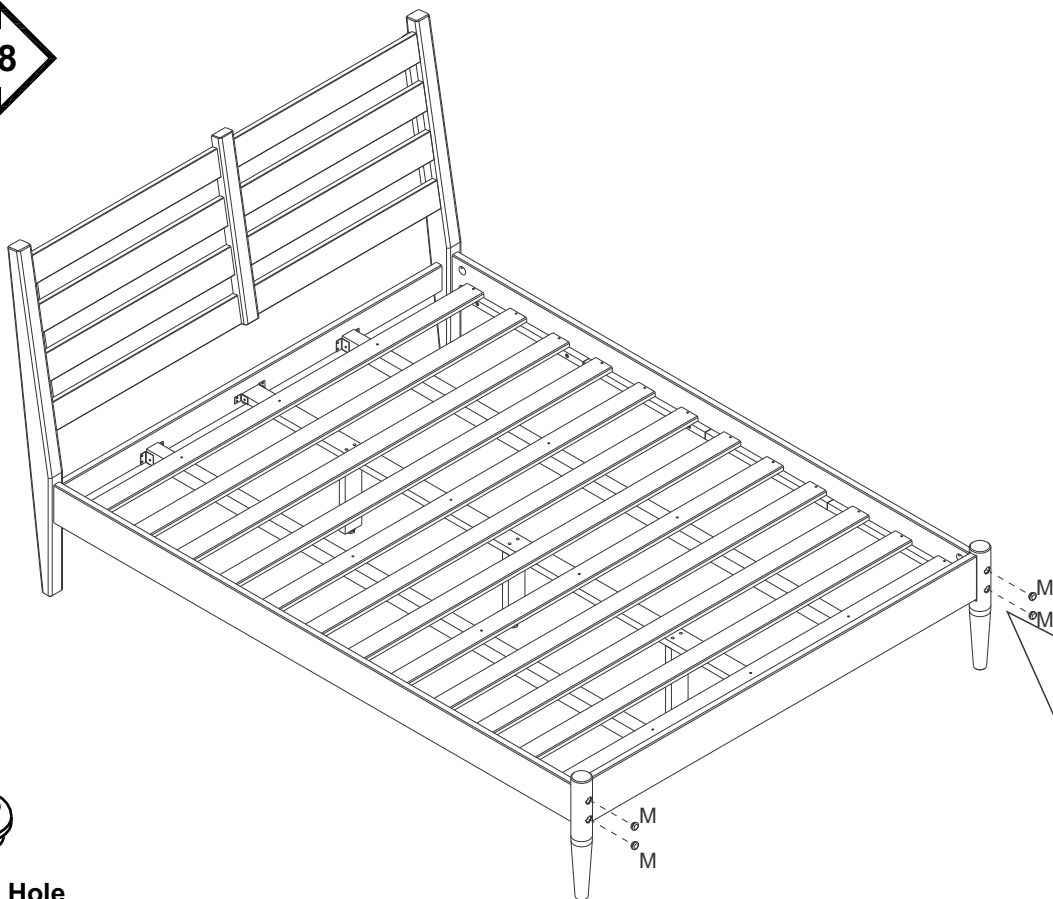

**M - Wood Hole
Cover - Qty. 04**

