




MANHATTAN
COMFORT

Sheridan Side Table NS-5GLF

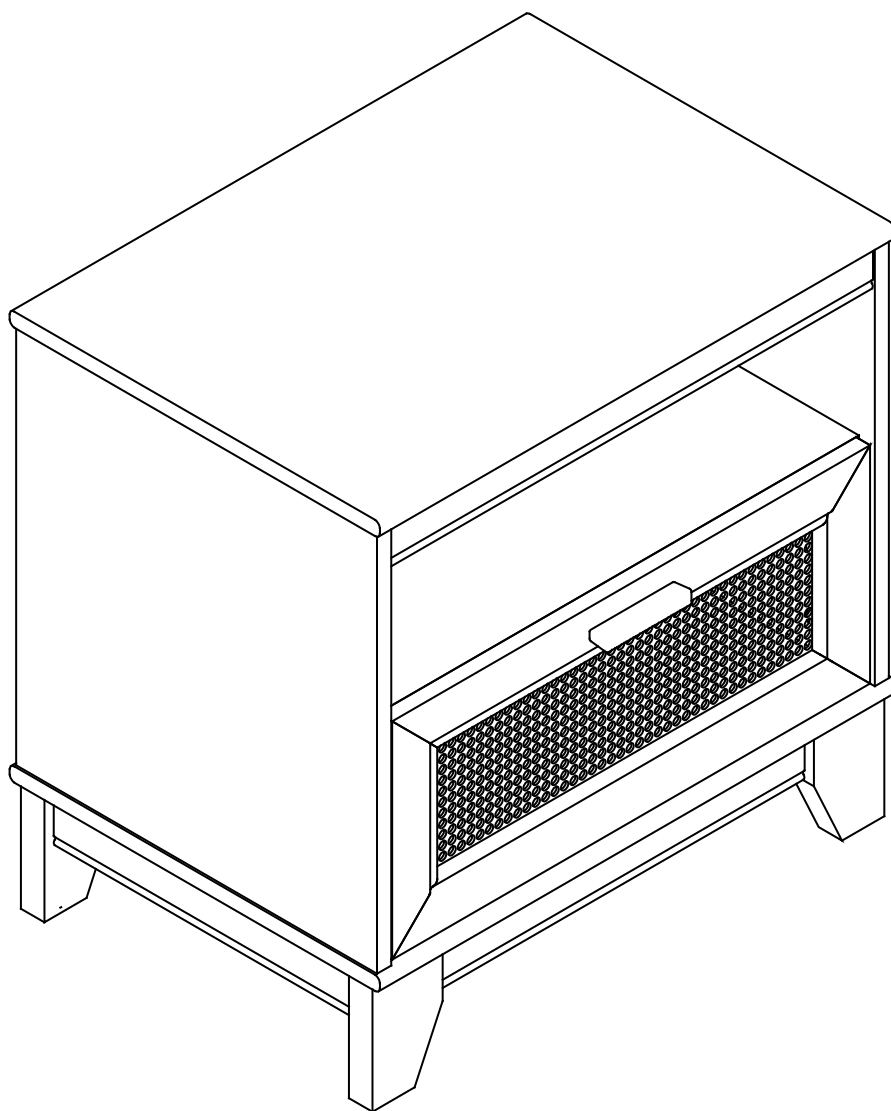







STOP!


Before beginning the assembly process,
ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

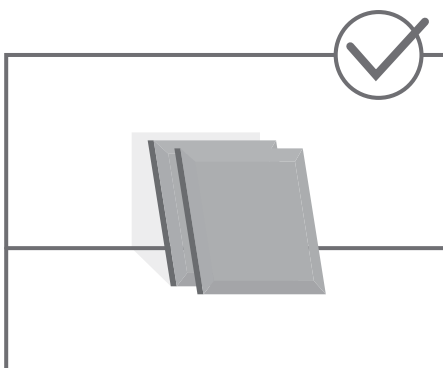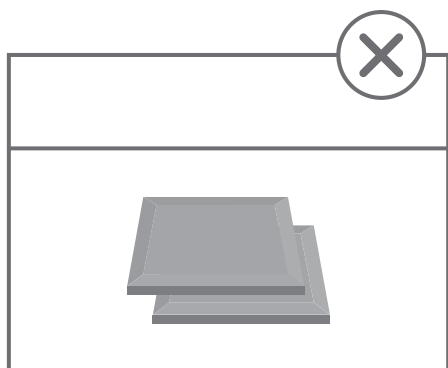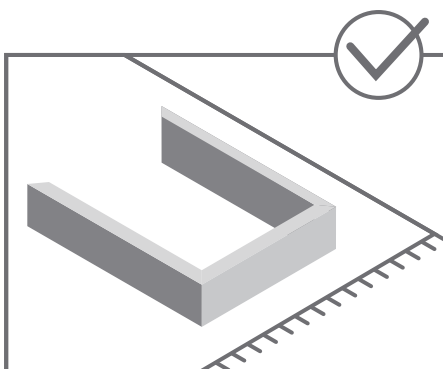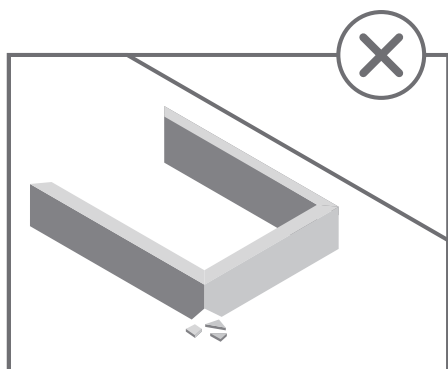

TOOLS REQUIRED

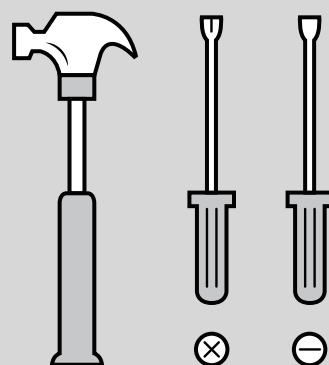


View our assembly video online:
WWW.MANHATTANCOMFORT.COM



Stuck? Question? We are here to help.
tel 908-888-0818
e-mail: help@manhattancomfort.com

Included in this package:

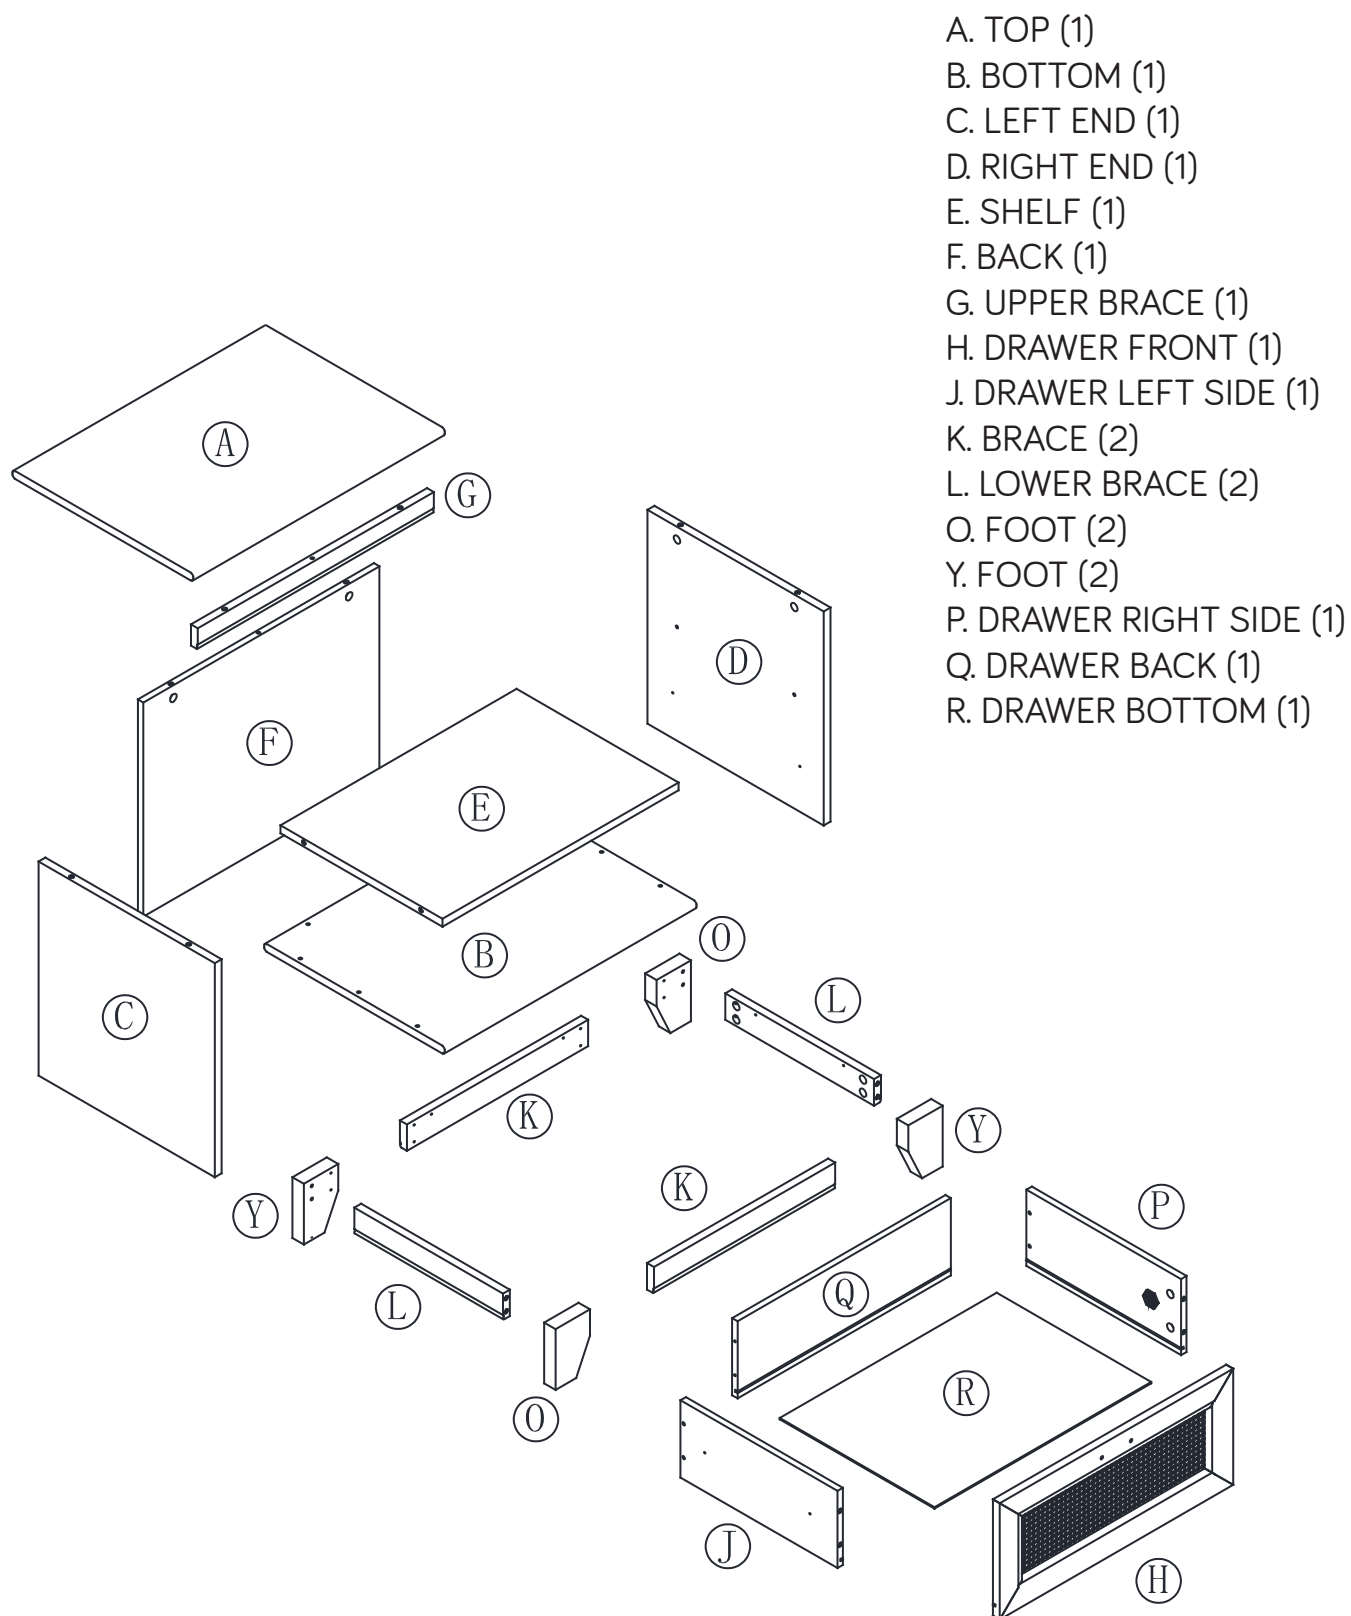

Hardware Identification


① EXTENSION RAIL- 2pcs



② EXTENSION SLIDE- 2pcs




③ CAM SCREW - 24pcs

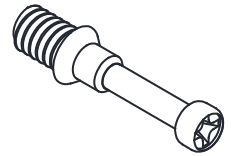


④ HIDDEN CAM - 24pcs




⑤ APPLIQUE CARD- 4pcs

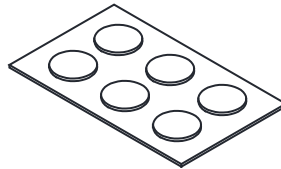


⑥ PULL - 1pc

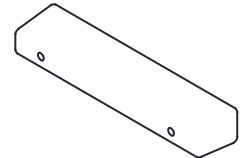


⑦ METAL PLATE-4pcs

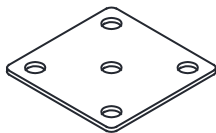

⑧ BRACKET- 8pcs

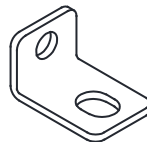


⑨ WOOD DOWEL- 5pcs

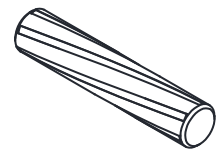

⑩ PAN HEAD SCREW
M5*30mm -10PCS



⑪ PAN HEAD SCREW
M4*20mm -2PCS



⑫ FLAT HEAD SCREW
M4*12mm - 8pcs



⑬ PAN HEAD SCREW
M4*12MM - 32pcs





MANHATTAN COMFORT

WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.











319 Ridge Rd. Dayton, NJ 08810

908-888-0818



Step 1

- ◆ Assemble your unit on a carpeted floor or on the empty carton to avoid scratching your unit or the floor.
- ◆ Turn twenty-four CAM SCREWS (3) into the exact holes shown in the TOP(A), DRAWER FRONT(H), ENDS (C and D) and FEET (O and Y).

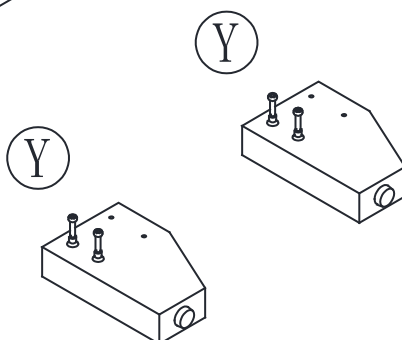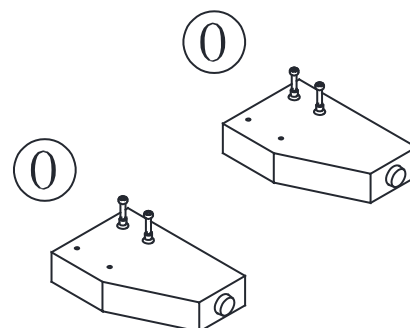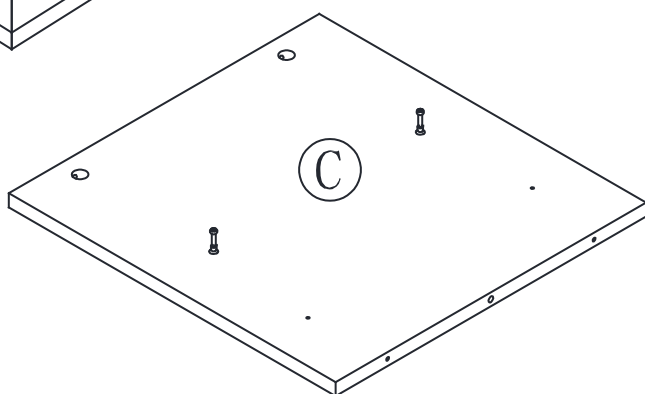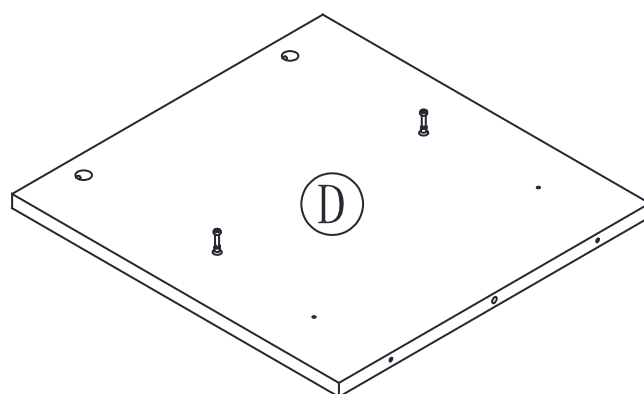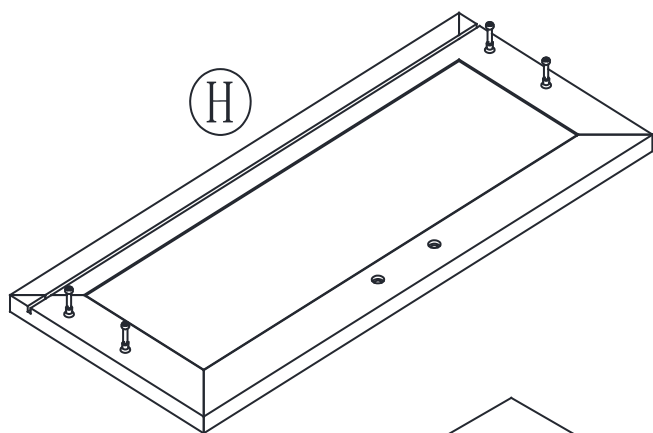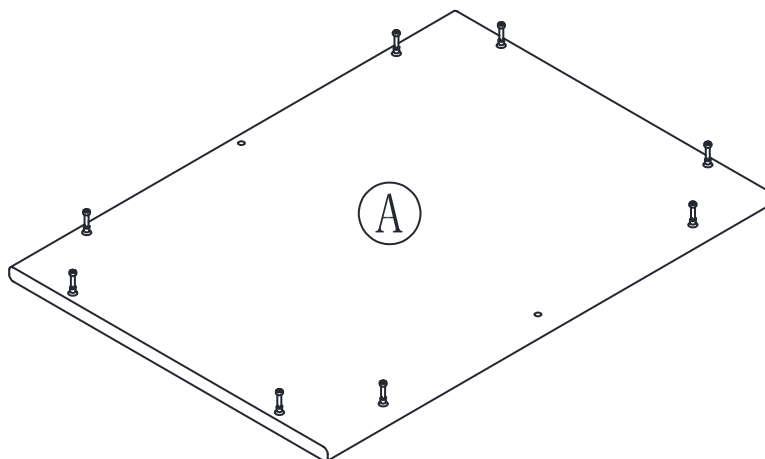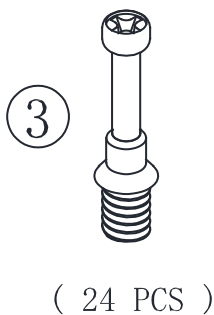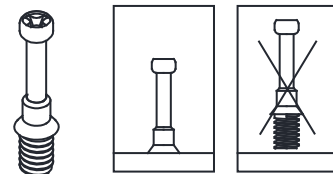




Step 2

- ◆ Push eight HIDDEN CAMS (4) into the ENDS (C and D), BACK(F) and UPPER BRACE(G).

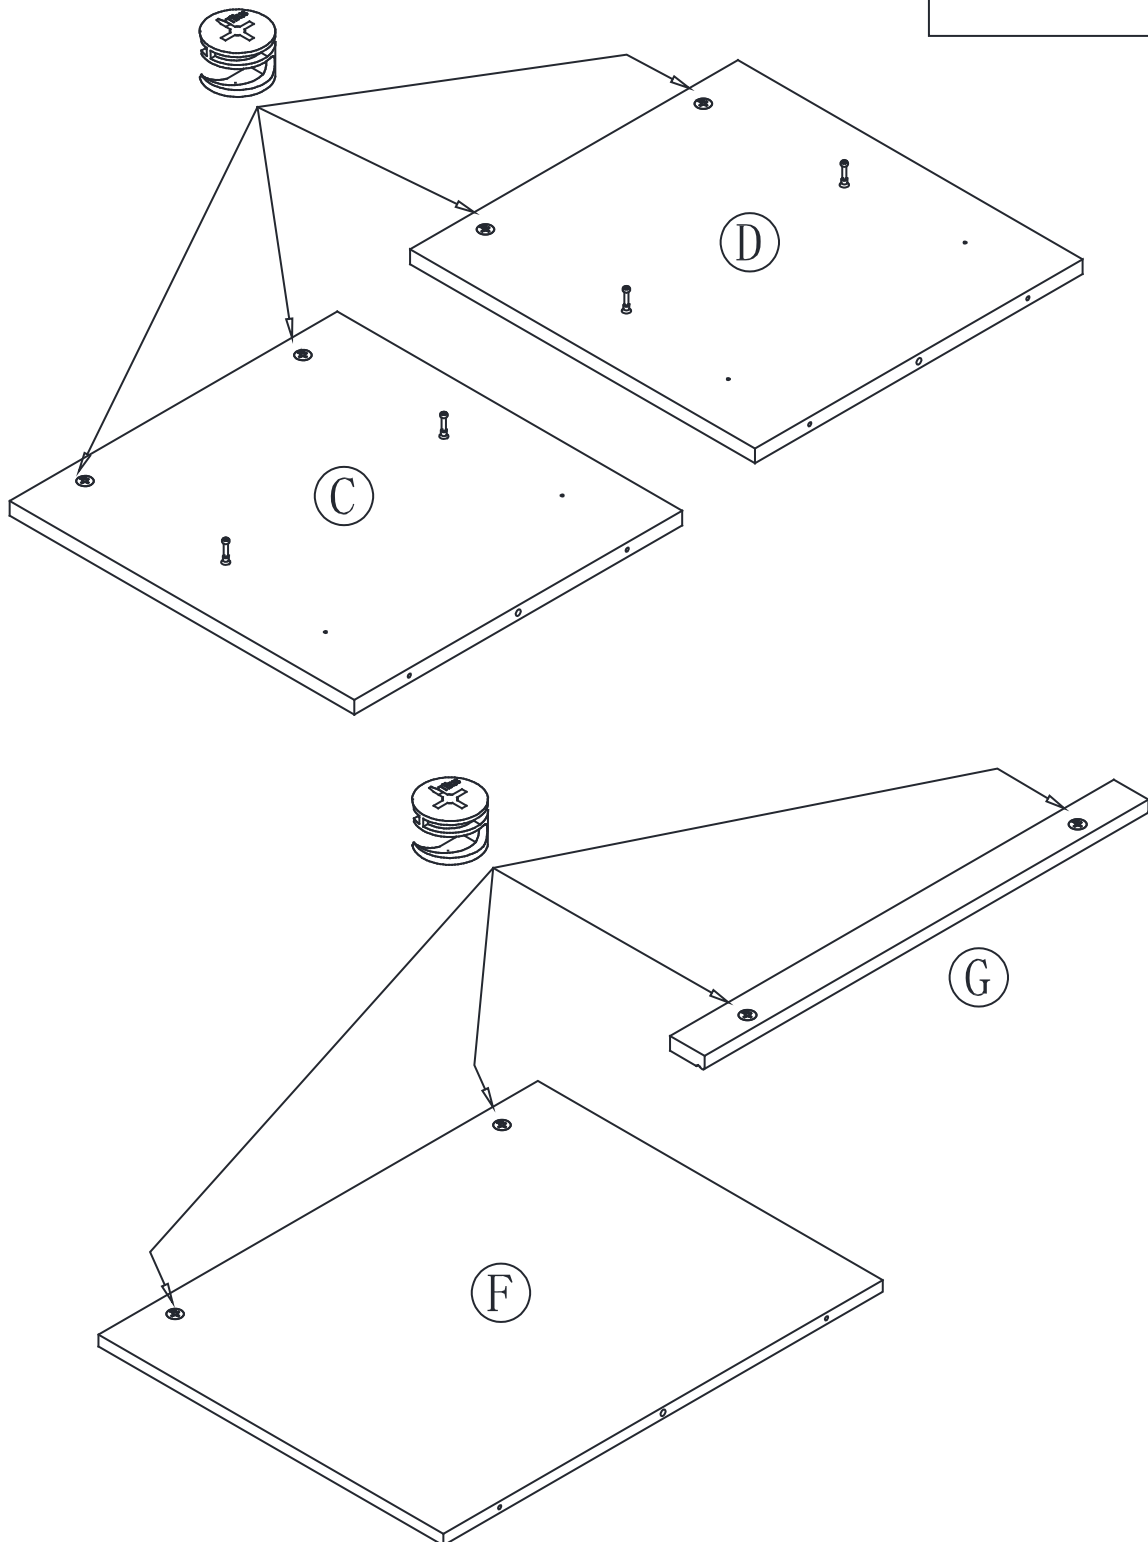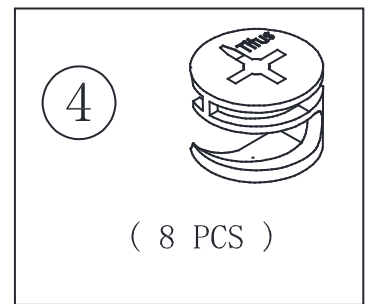



Step 3

- ◆ Push sixteen HIDDEN CAMS (4) into the SHELF (E),
DRAWER SIDES (J and P) and LOWER BRACE (L).

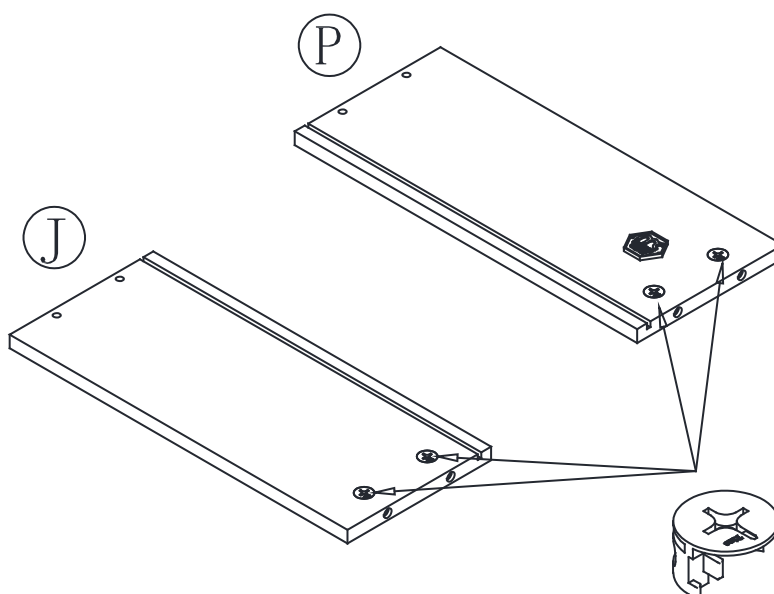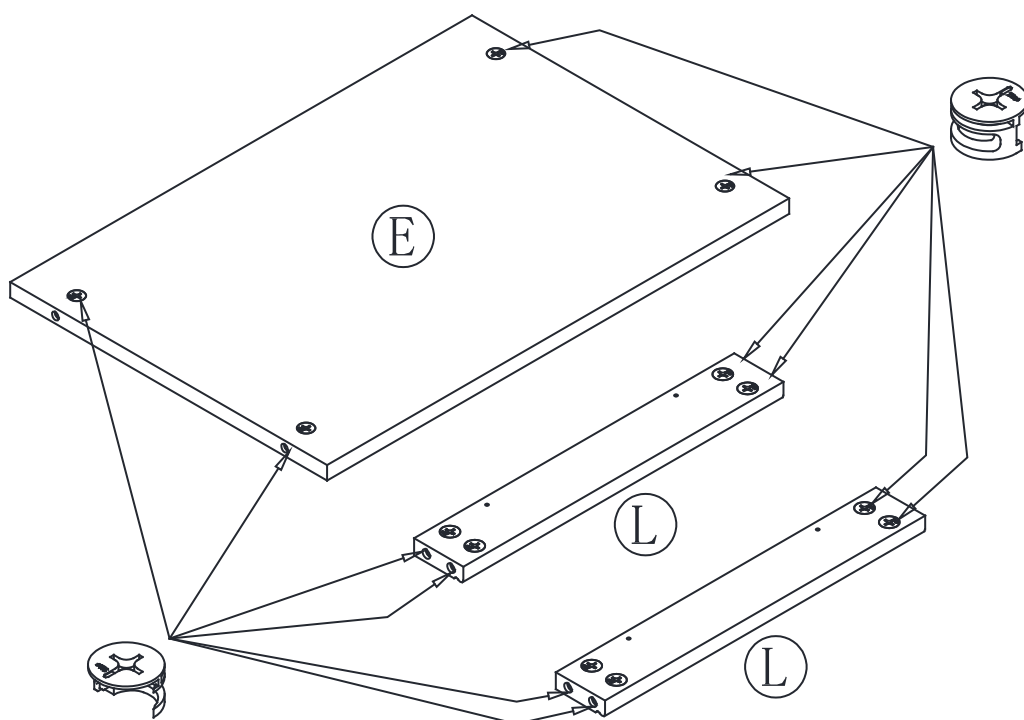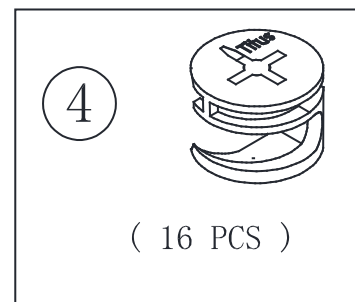


Step 4

- ◆ Fasten the DRAWER SIDES (J and P) to the DRAWER BACK (Q). Use four PAN HEAD SCREWS (10).



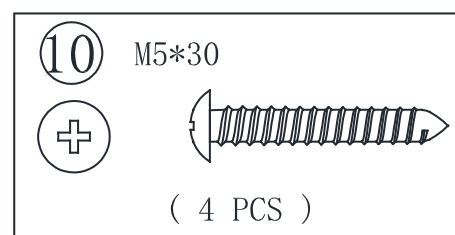
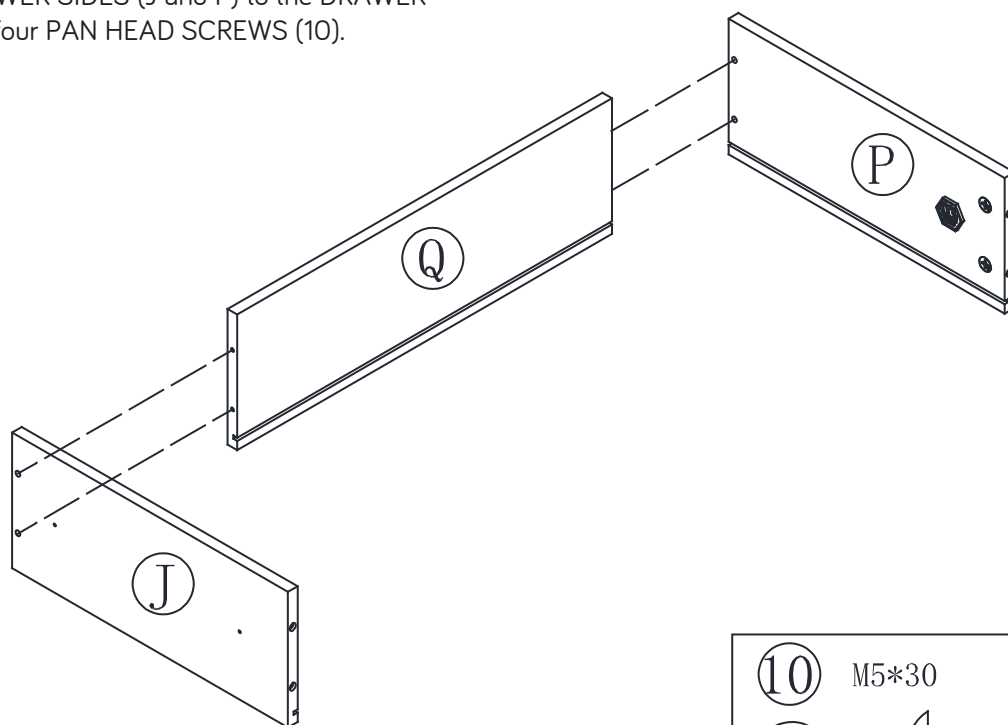


- ◆ Slide the DRAWER BOTTOM (R) into the grooves in the DRAWER SIDES (J and P) and DRAWER BACK (Q).

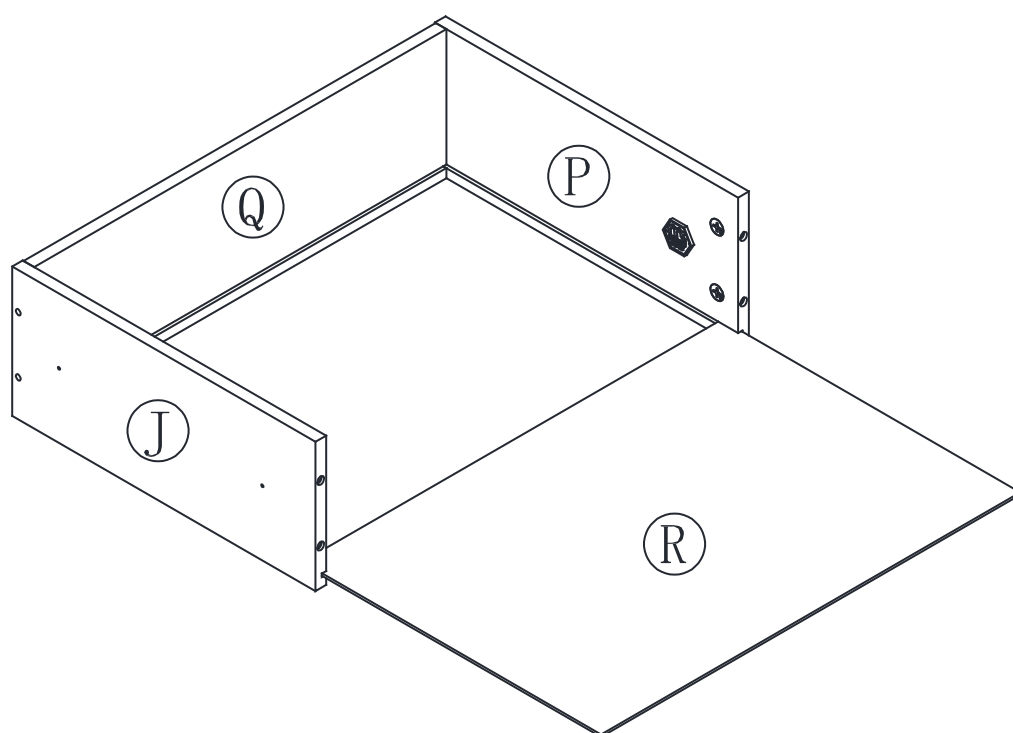





Step 5

- ◆ Fasten the DRAWER FRONT (H) to the DRAWER SIDES (J and P).
Tighten four HIDDEN CAMS.
- ◆ NOTE: Be sure the DRAWER BOTTOM (R) inserts into the groove of the DRAWER FRONT (H).

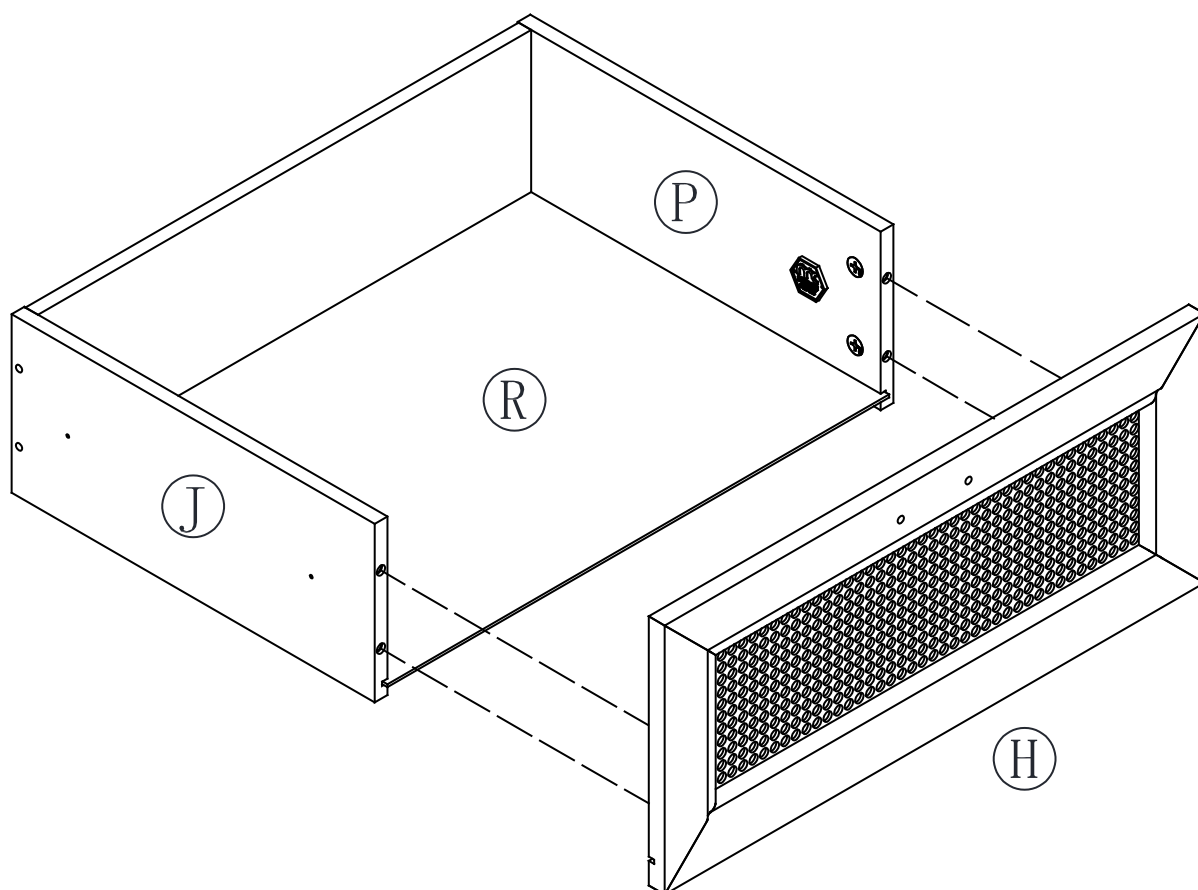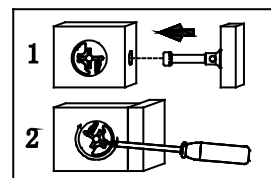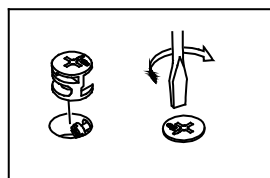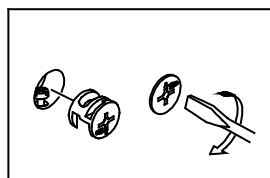


Step 6

- ◆ Separate the EXTENSION SLIDES (2) from the EXTENSION RAILS (1) as shown in the enlarged diagram below. Be prepared, the parts are greasy.
- ◆ Fasten the EXTENSION SLIDES (2) to the DRAWER SIDES (P and J). Use four FLAT HEAD SCREWS (12)
- ◆ Fasten the PULL (6) to the DRAWER FRONT (H). Use two PAN HEAD SCREWS (11).

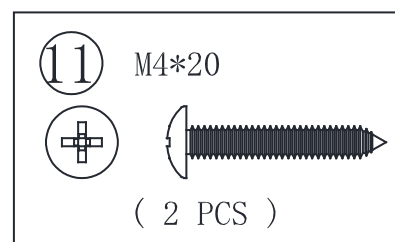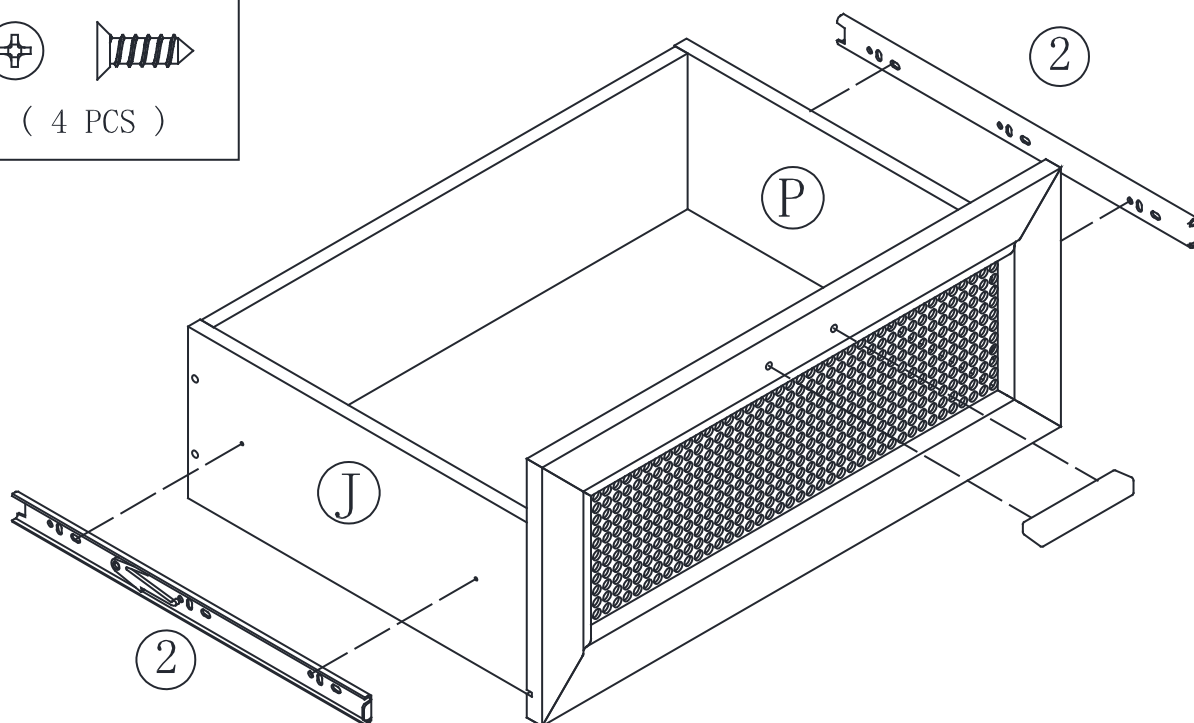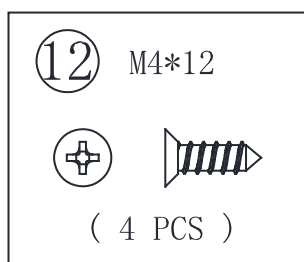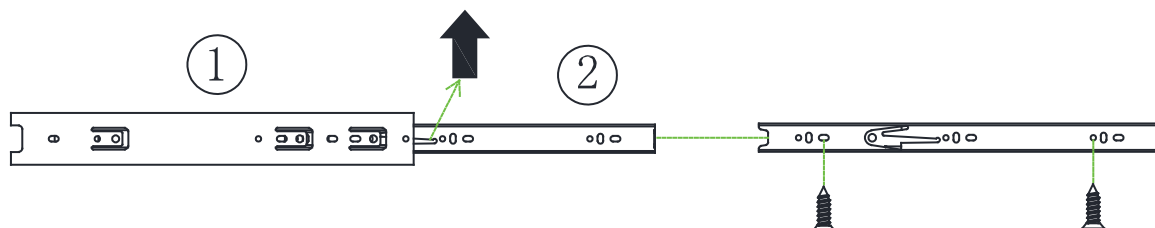





Step 7

- ◆ Fasten the EXTENSION RAILS (1) to the ENDS (C and D). Use four FLAT HEAD SCREWS (12)

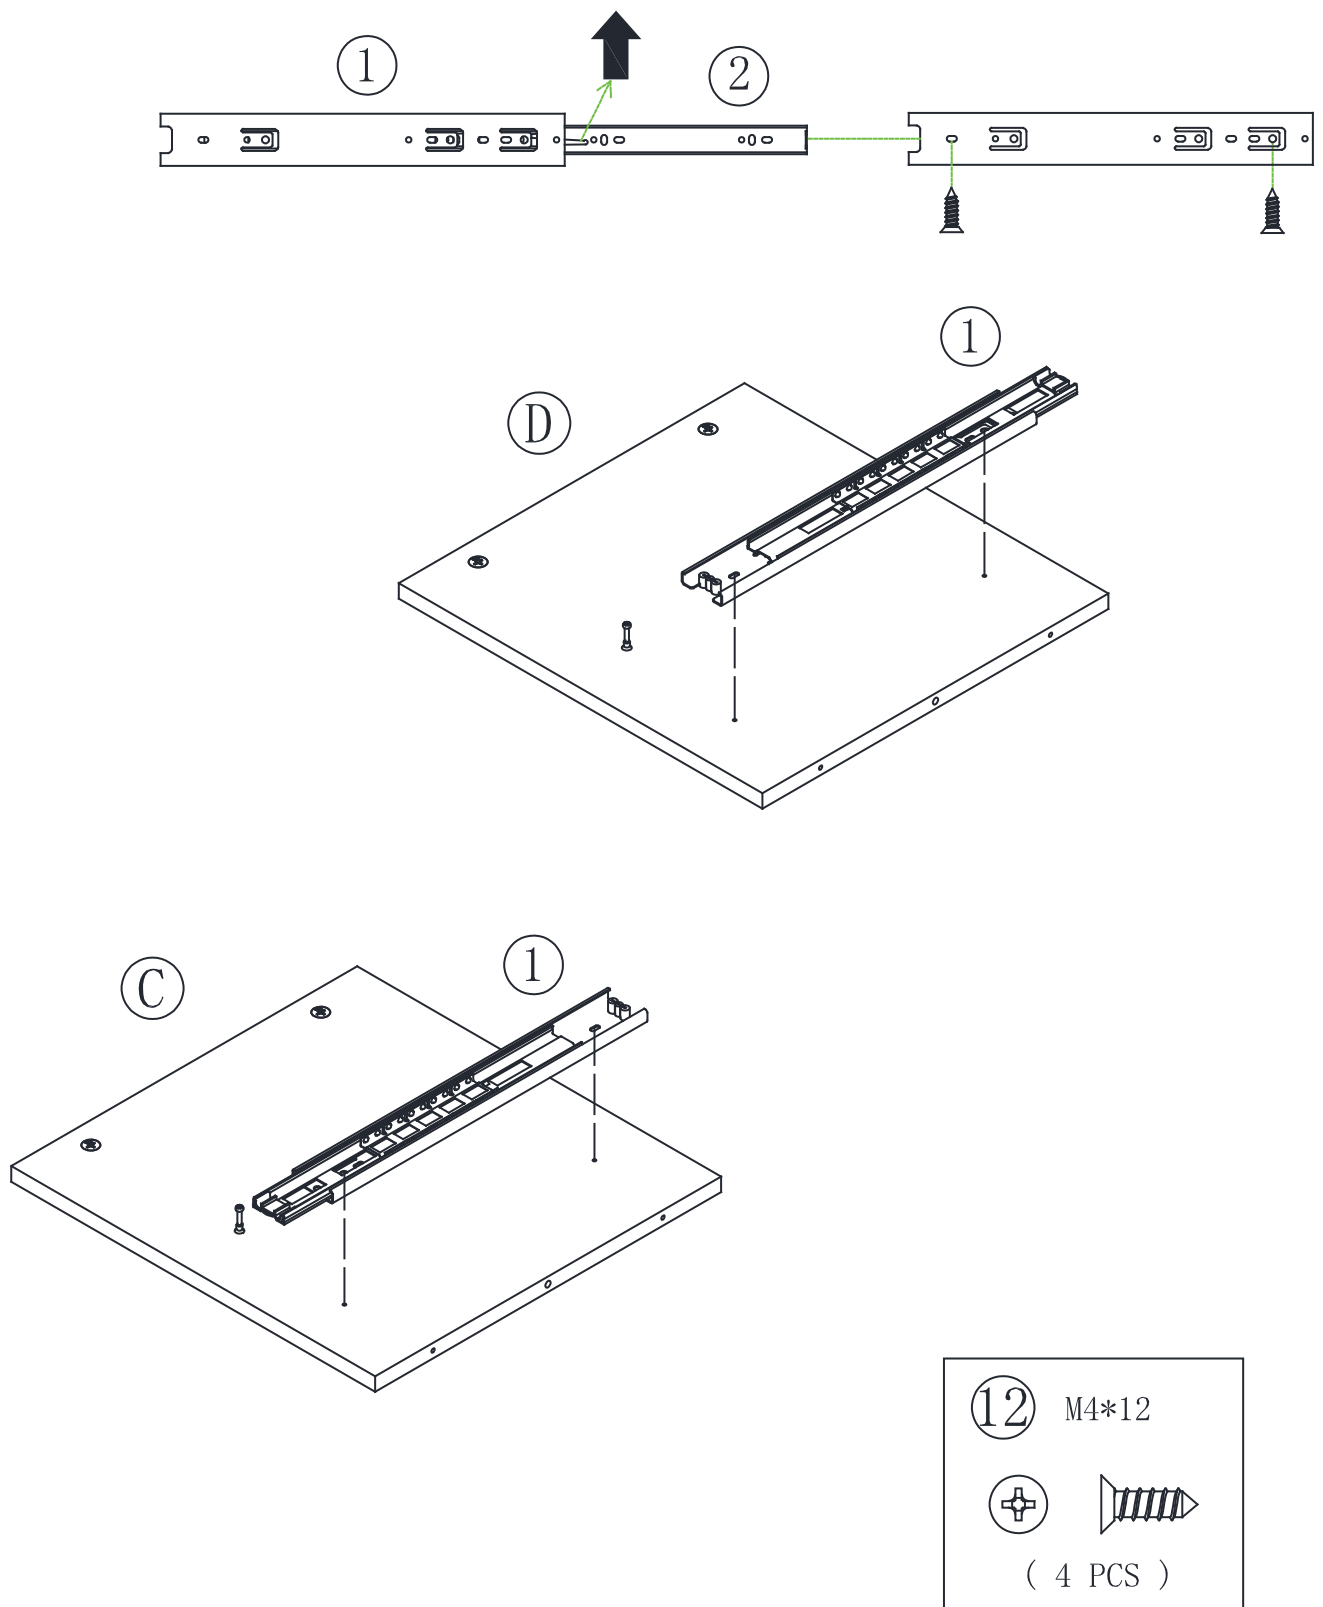






Step 8

- ◆ Fasten the SHELF (E) to the ENDS (C and D). Tighten four HIDDEN CAMS

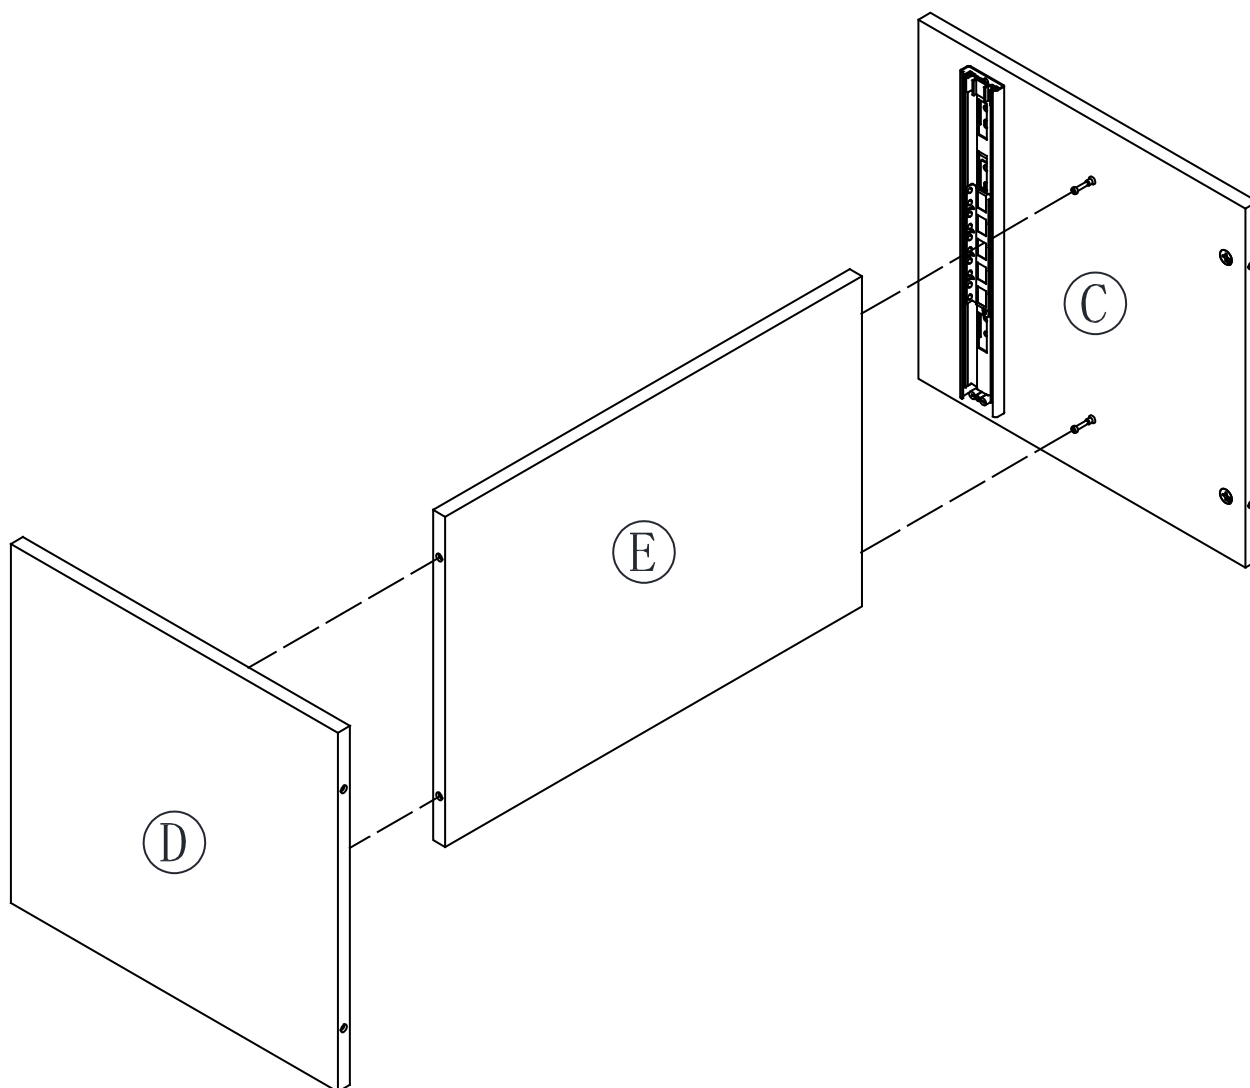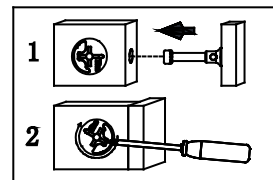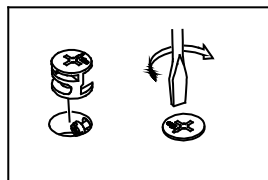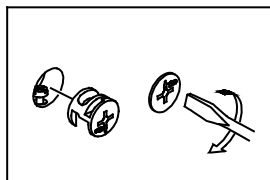





Step 9

- ◆ Insert one WOOD DOWEL (9) into the TOP (A).
- ◆ Fasten the UPPER BRACE (G) to the TOP (A). Tighten two HIDDEN CAMS.

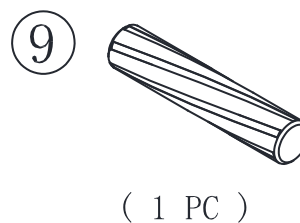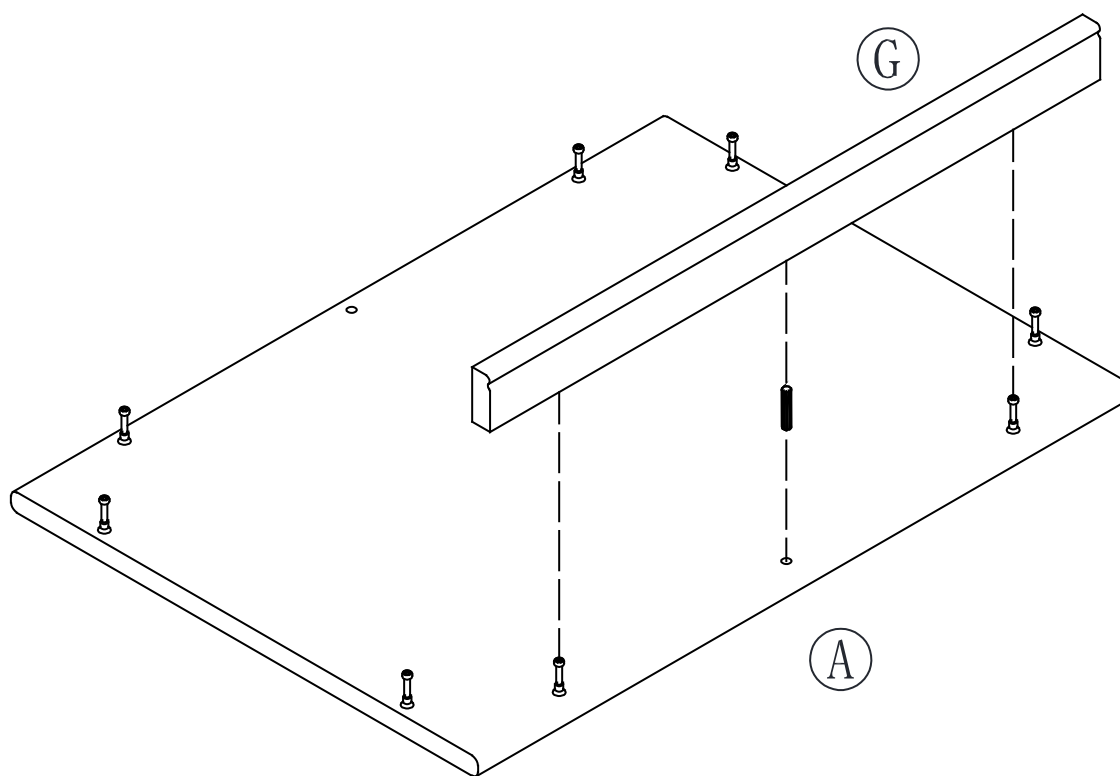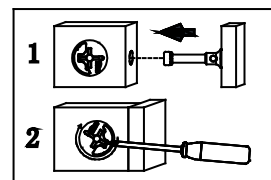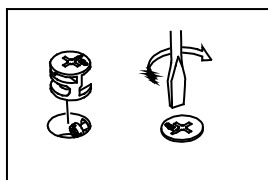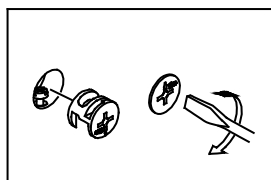





Step 10

- ◆ Fasten the TOP(A) to the ENDS (C and D). Tighten four HIDDEN CAMS.

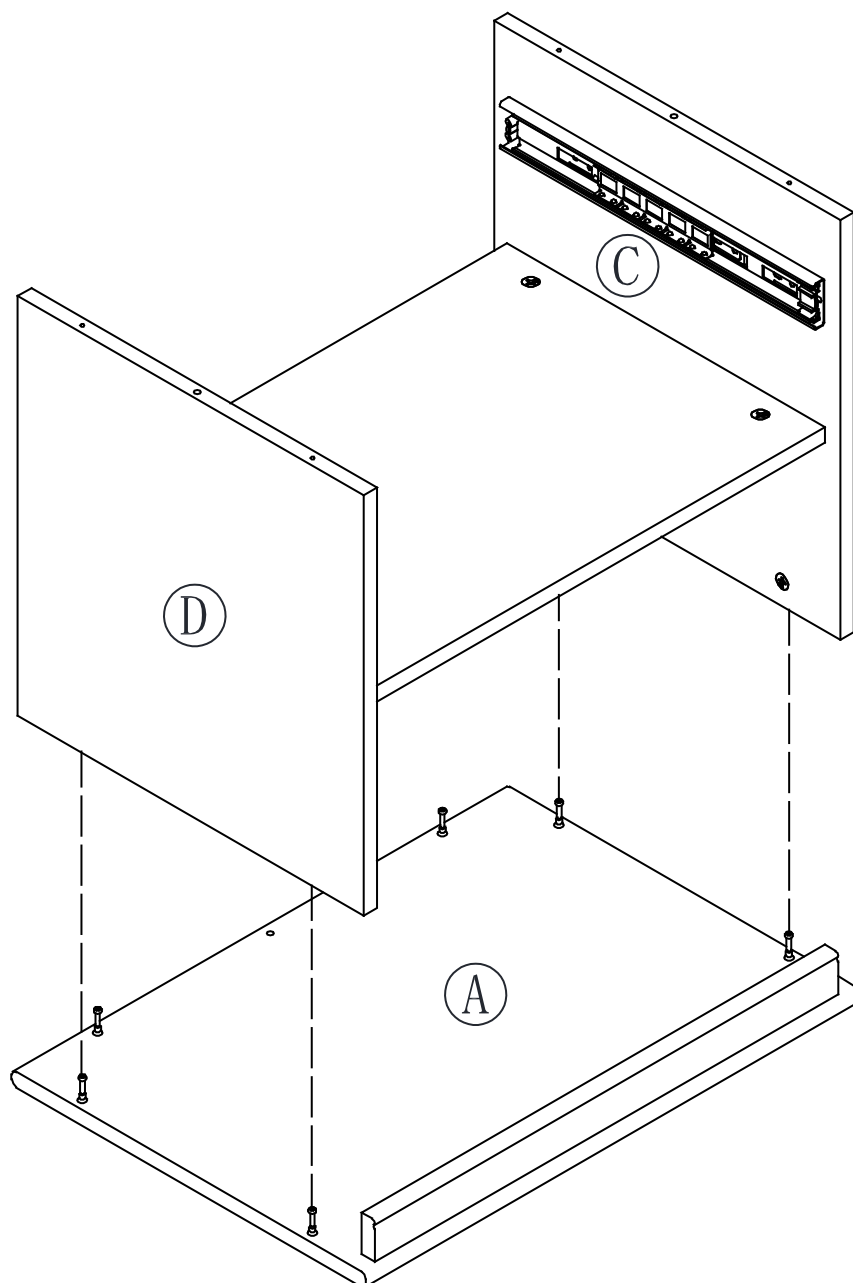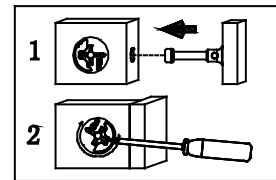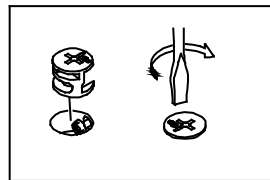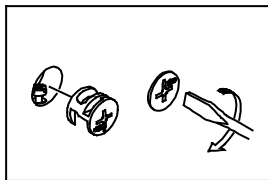


Step 11

- ◆ Insert one WOOD DOWEL (9) into the TOP (A).
- ◆ Fasten the BACK (F) to the TOP (A). Tighten two HIDDEN CAMS

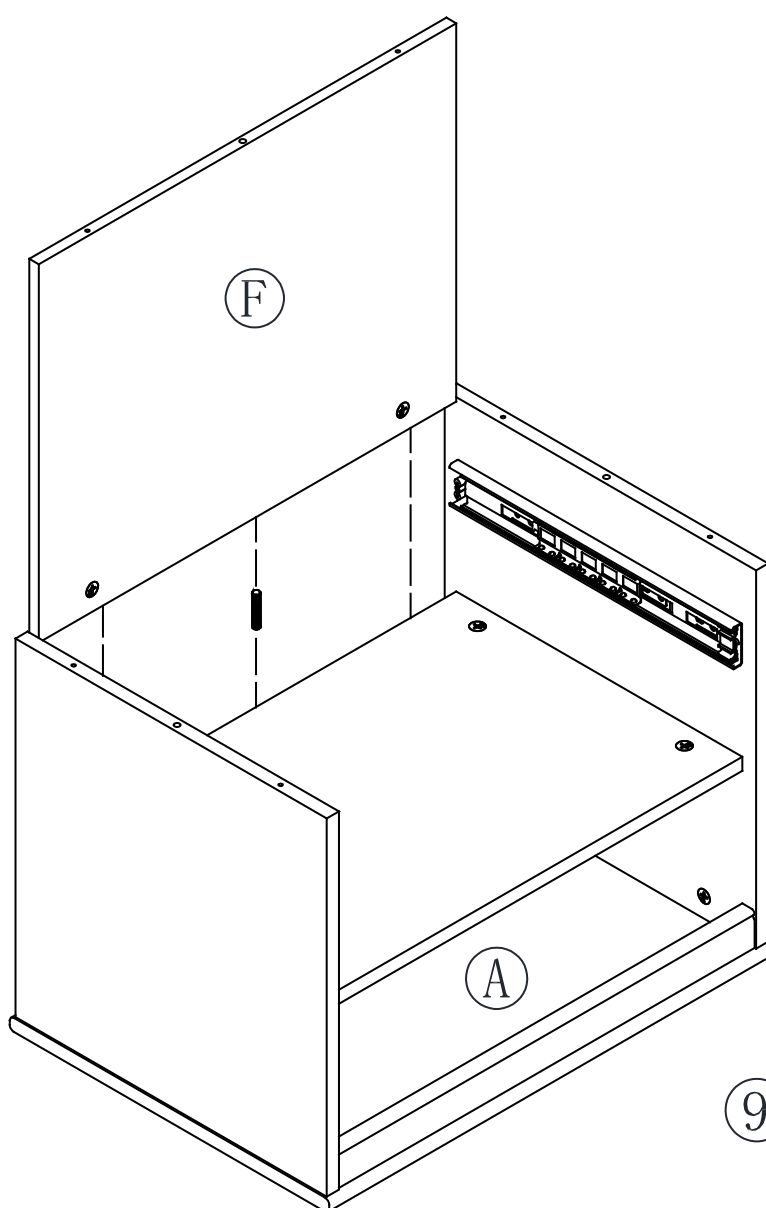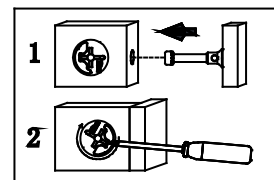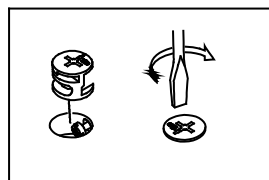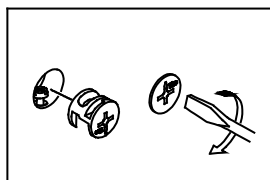



9

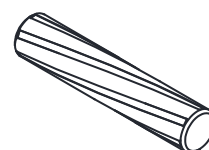

(1 PC)


Step 12

- ◆ Insert three WOOD DOWEL (9) into ENDS (C and D) and BACK (F).
- ◆ Fasten the BOTTOM (B) to the BACK (F) and the ENDS (C and D).
Use six PAN HEAD SCREWS (10)

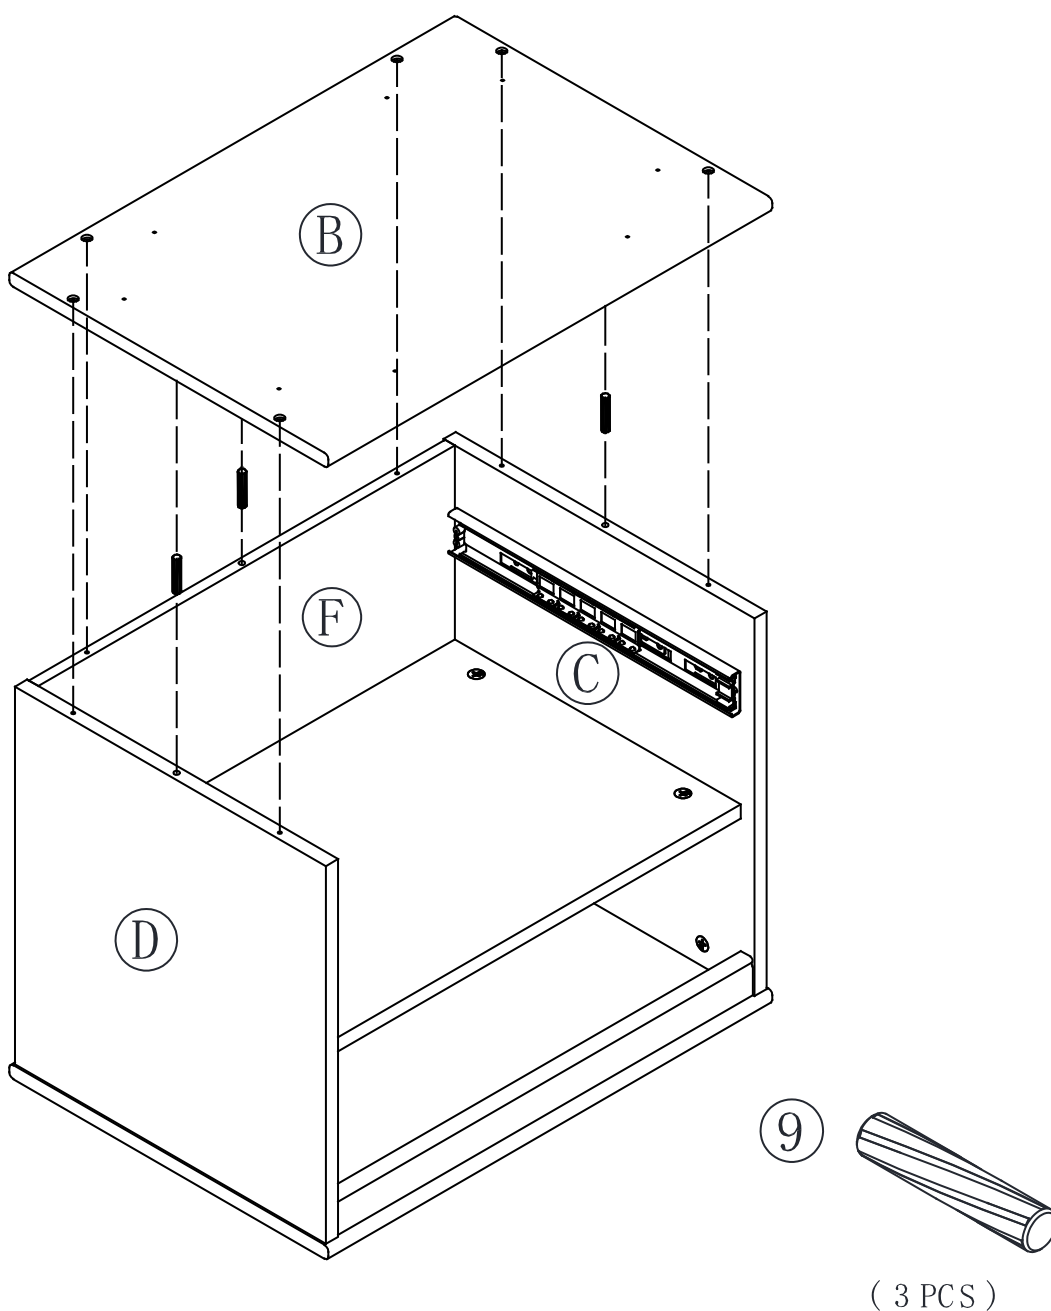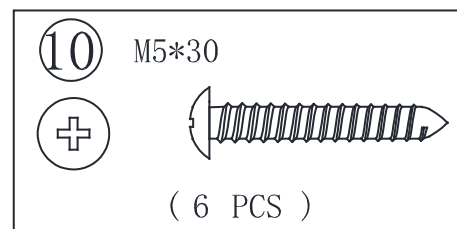


Step 13

- ◆ Fasten four METAL PLATE to the FOOT (O and Y) and the BRACES (K).
Use sixteen PAN HEAD SCREWS.

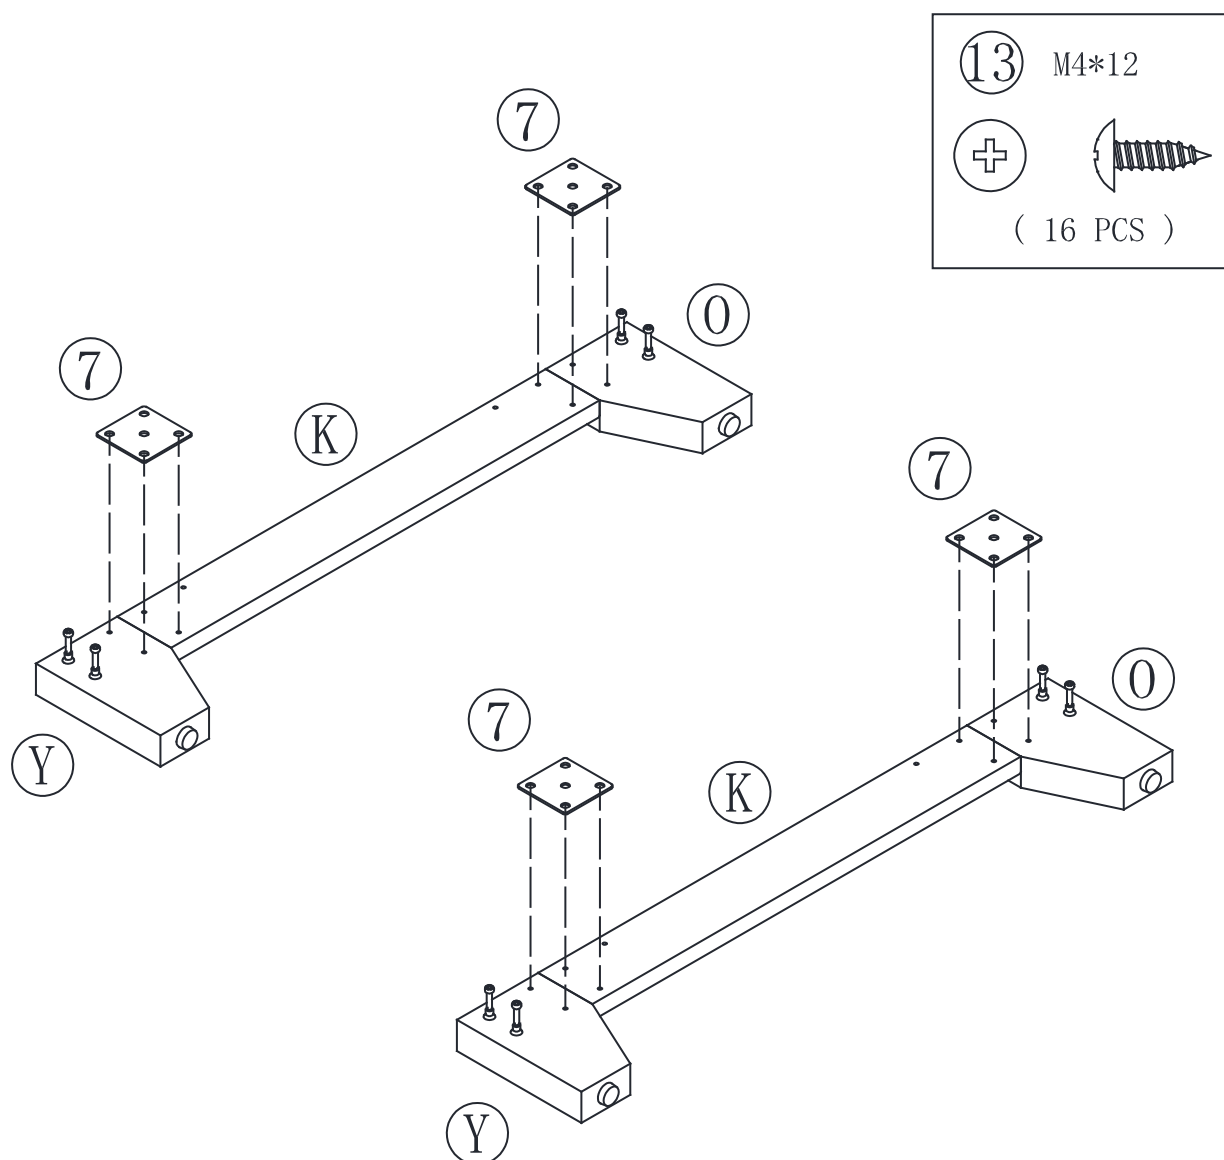





Step 14

- Fasten eight BRACKETS (8) to the BRACES (K) and the LOWER BRACES (L).
Use eight PAN HEAD SCREWS (13).

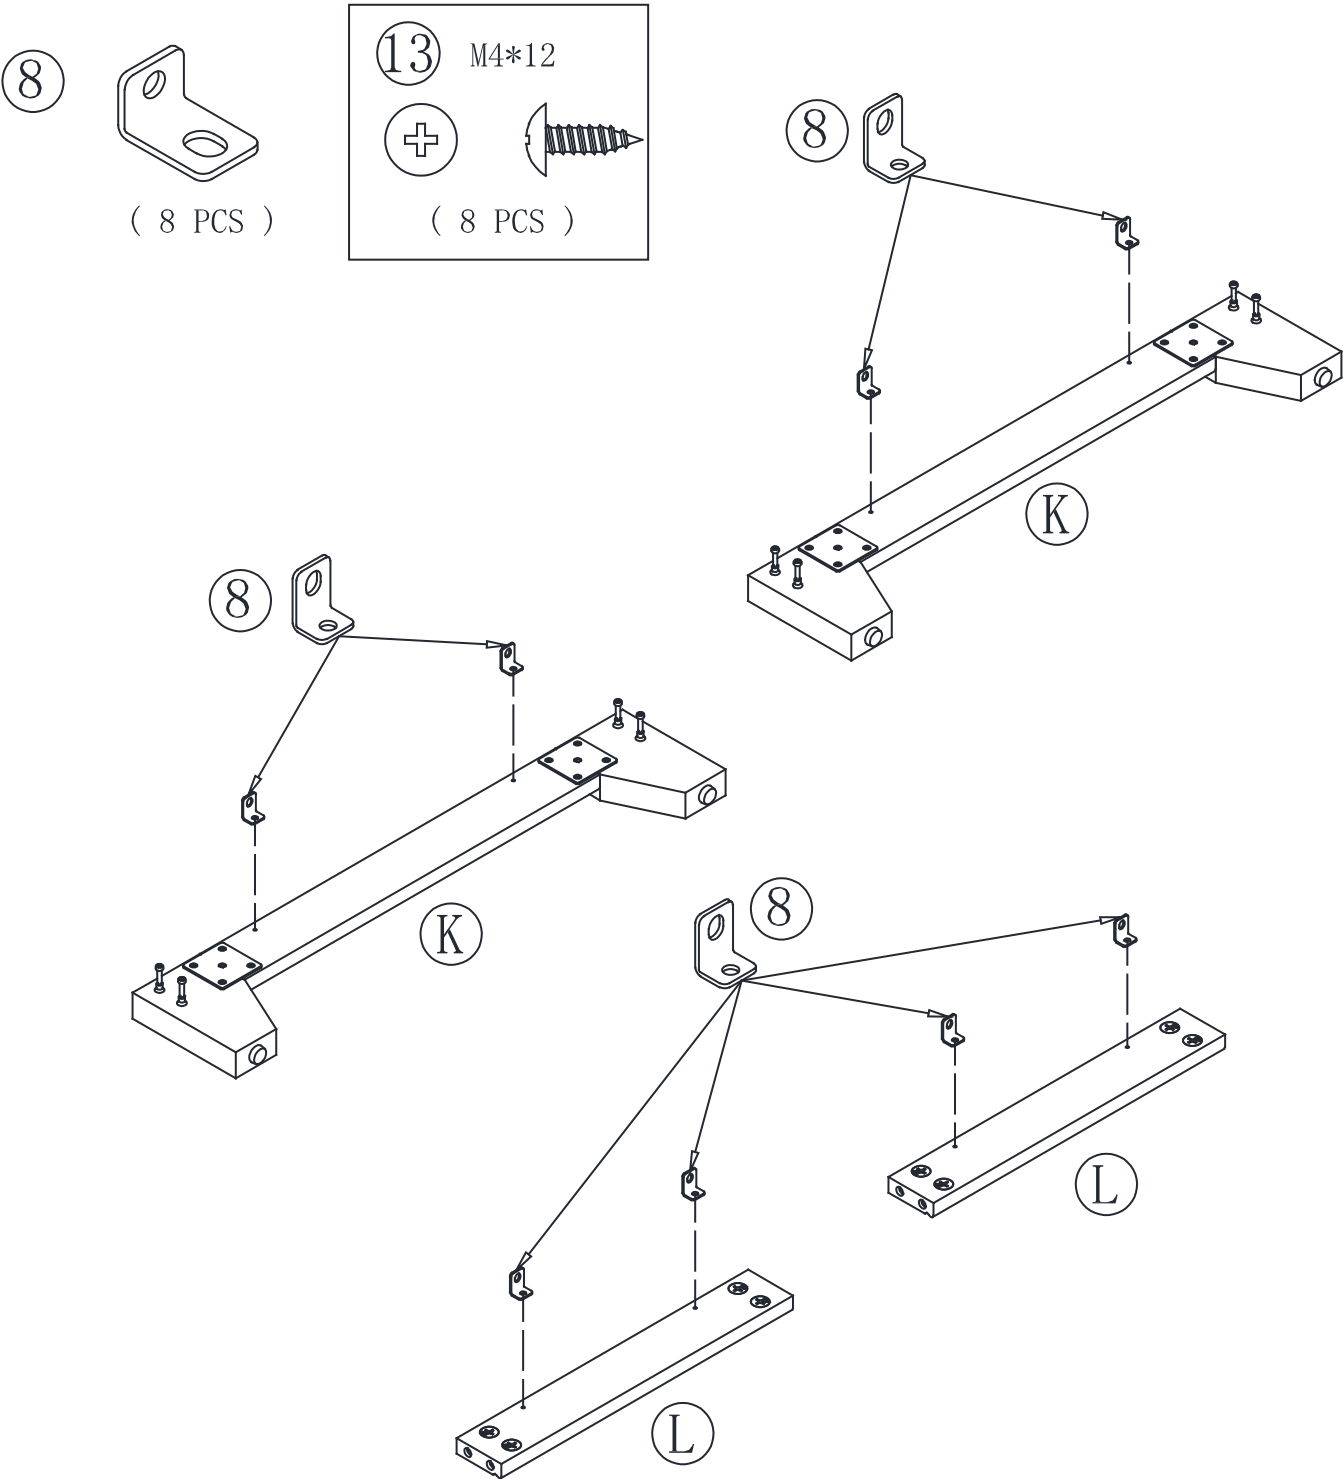



Step 15

◆ Faten two BRACES (L) to the FOOT (Y and O). Tighten eight HIDDEN CAMS.

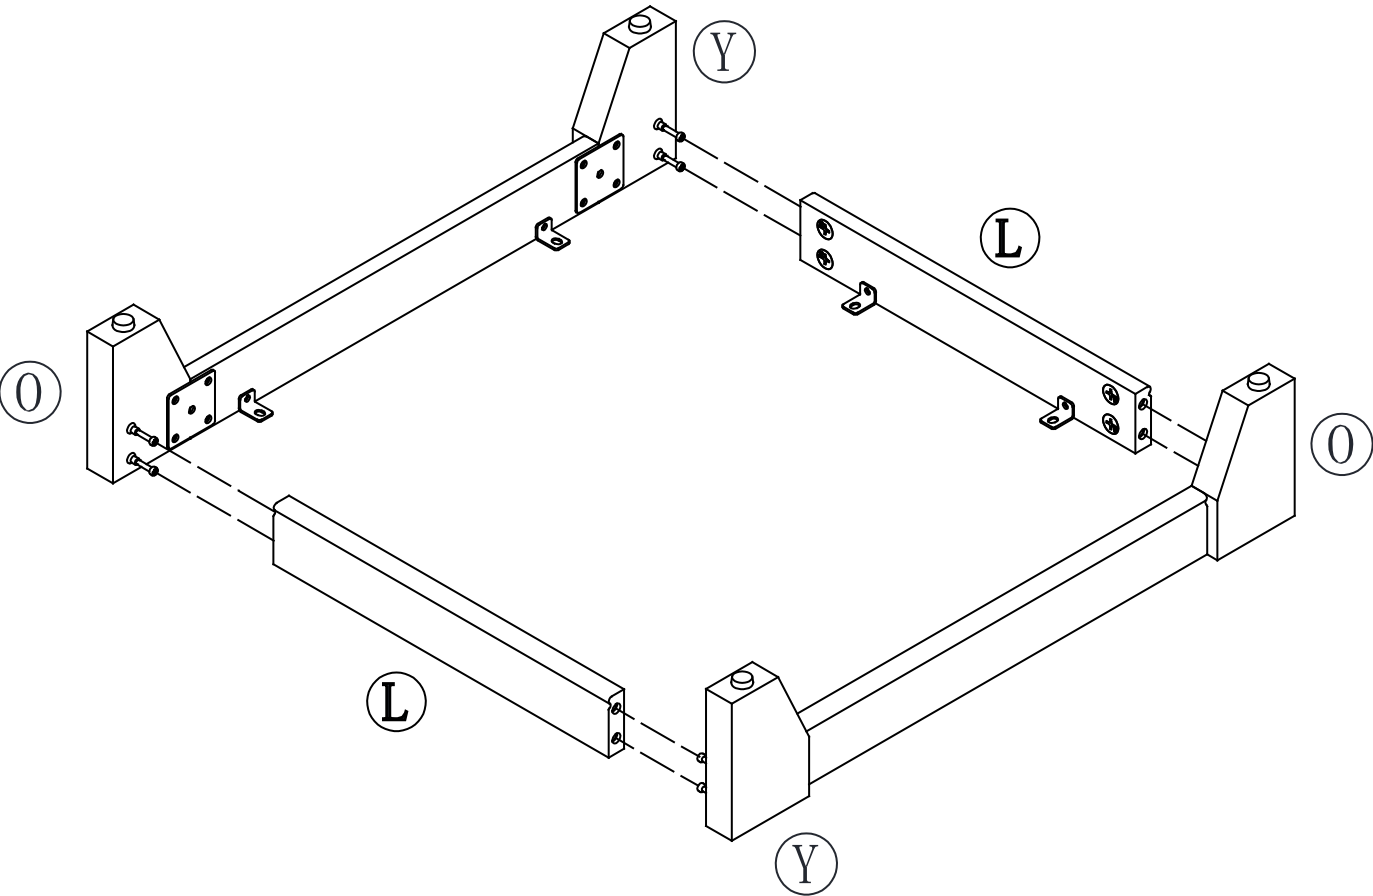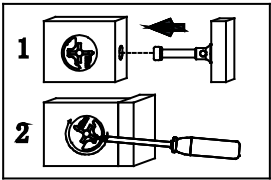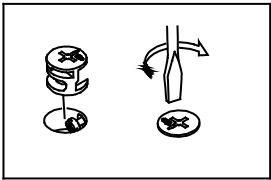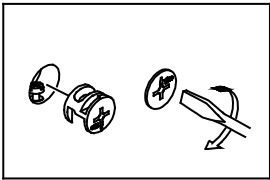

Step 16

- ◆ Fasten the BASE to the BOTTOM (B). Use eight PAN HEAD SCREWS (13).

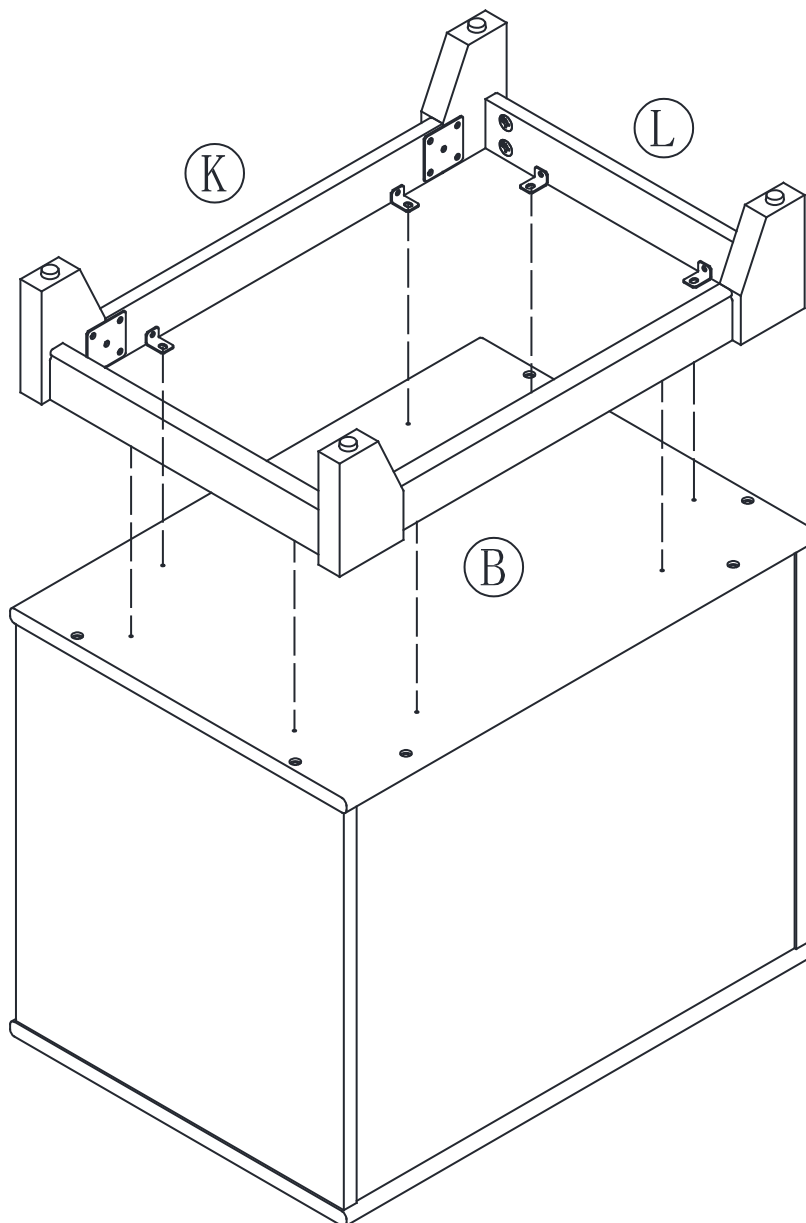
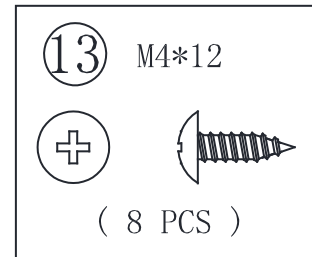


Step 17

- ◆ Carefully stand your unit upright.


To insert the DRAWER (H) into your unit, line up the EXTENSION SLIDES on the drawer with the EXTENSION

- ◆ RAILS on the unit and push the drawer into the unit until the drawer is fully inserted. The drawer will push in hard until it is all the way in, then it will slide in and out easier.

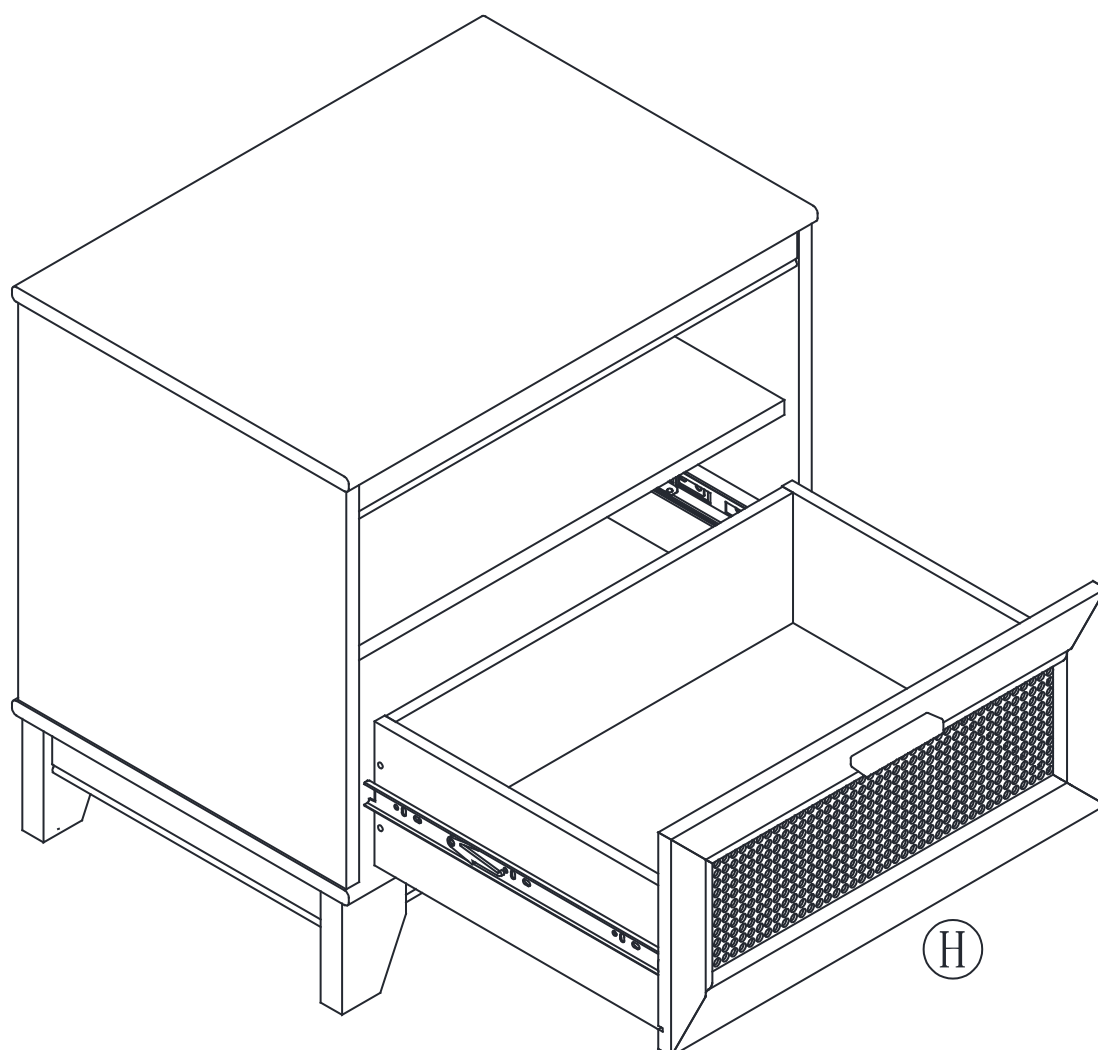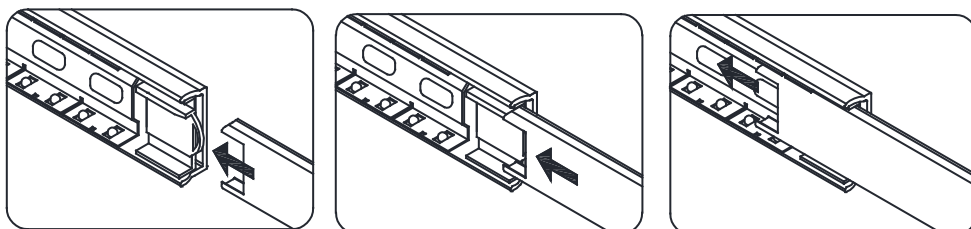

Step 18

- ◆ Peel APPLIQUES from the APPLIQUE CARDS (5) and stick them onto each visible HIDDEN CAM.

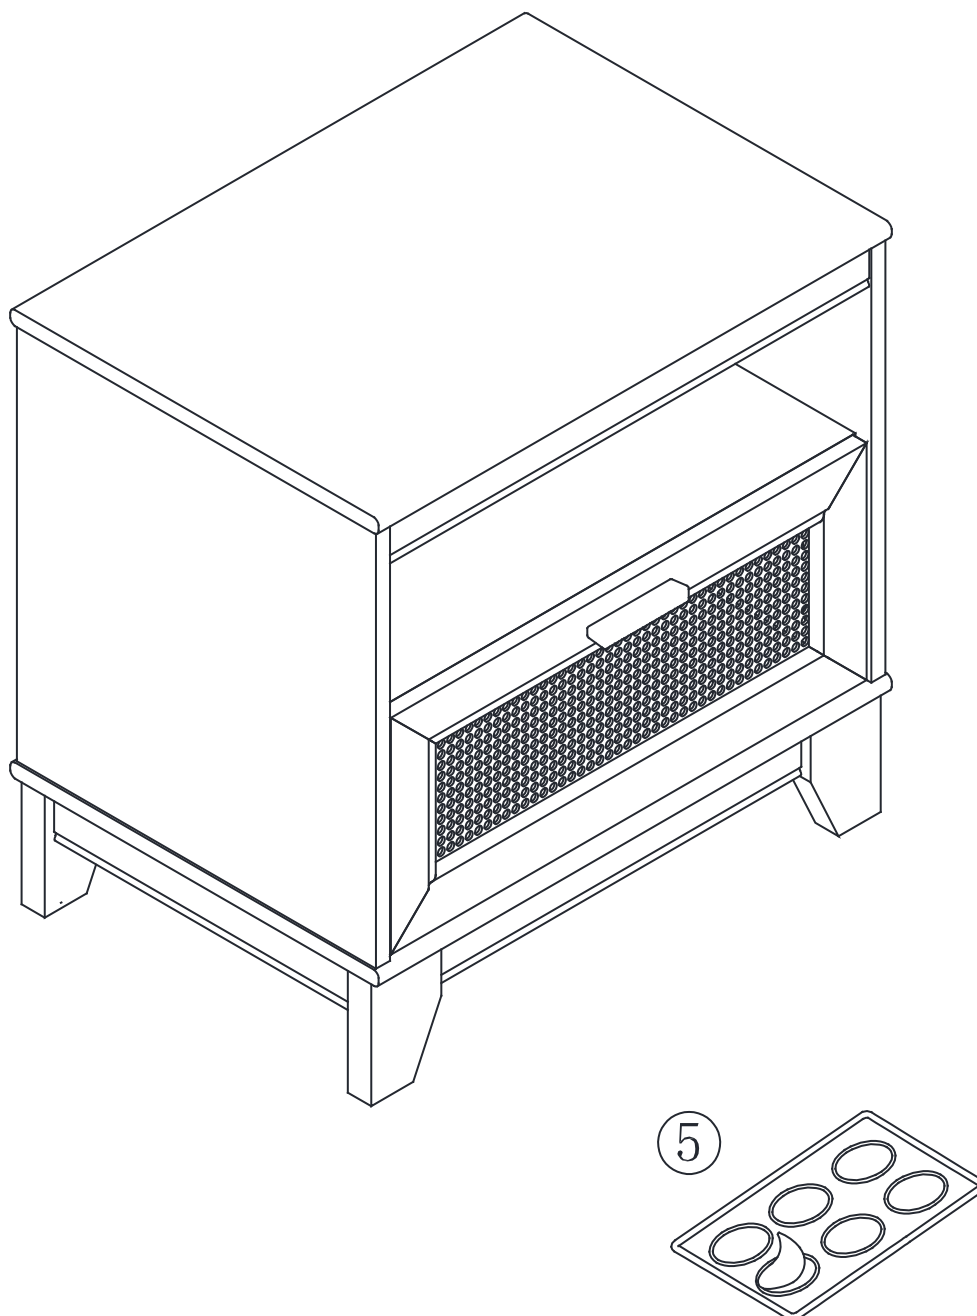

Step 19

