

TRIM GUIDE

SMARTCORE trims and moldings are designed to coordinate effortlessly with your SMARTCORE floor. Each piece is 94" long and features a waterproof core wrapped in vinyl.



BABY THRESHOLD

Used for transitioning from a hard surface floor (SMARTCORE) to a thicker floor such as high pile carpet. It can also be used to transition between flooring and doorway thresholds, and/or around hearths and sliding glass doors.

INSTALLATION INSTRUCTIONS:

Cut **Baby Threshold** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **Baby Threshold** into track to desired depth using rubber mallet.



QUARTER ROUND

Used to accent the transition from the baseboards to floor surface.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Quarter Round** using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.



REDUCER

Used to transition from a hard surface floor (SMARTCORE) to a floor with a lower height (ceramic tile, low pile carpet).

INSTALLATION INSTRUCTIONS:

Cut **Reducer** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **Reducer** into track to desired depth using rubber mallet.




FLUSH STAIRNOSE

Used to provide a flush finishing touch to the front stair edge while providing a safe and secure step.

INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Flush Stairnose** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

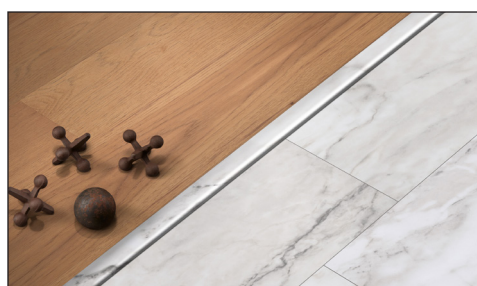


T-MOLDING

Used in doorways to join two adjacent floors that are close to the same height.

INSTALLATION INSTRUCTIONS:

Cut **T-Molding** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **T-Molding** into track to desired depth using rubber mallet.

TRIM ITEM + MODEL DETAILS

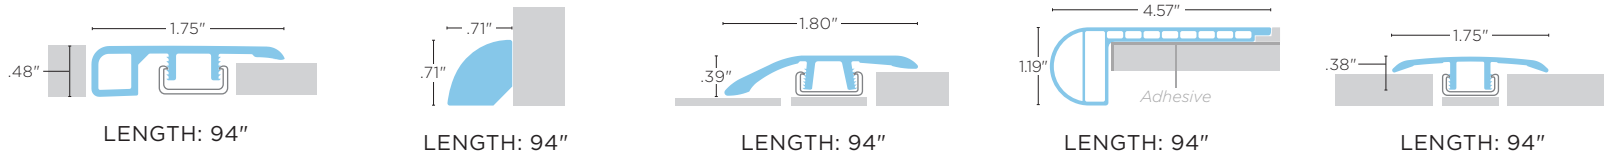

COLOR	ITEM #	BABY THRESHOLD		QUARTER ROUND		REDUCER		FLUSH STAIRNOSE		T-MOLDING	
		SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #	SOS #	MODEL #
Cavern Slate	4138368	4912396	BT6NLO0489	4912423	QTRNLO0489	4912405	RD6NLO0489	4912432	FS6NLO0489	4912414	TM6NLO0489
Glacier Marble	4138370	4912397	BT6NLO0490	4912424	QTRNLO0490	4912406	RD6NLO0490	4912433	FS6NLO0490	4912415	TM6NLO0490
Mesa Marble	4138369	4912398	BT6NLO0930	4912425	QTRNLO0930	4912407	RD6NLO0930	4912434	FS6NLO0930	4912416	TM6NLO0930
Cascade Marble	4138364	4912399	BT6NLO1122	4912426	QTRNLO1122	4912408	RD6NLO1122	4912435	FS6NLO1122	4912417	TM6NLO1122
Aspen Marble	4138365	4912400	BT6NLO1123	4912427	QTRNLO1123	4912409	RD6NLO1123	4912436	FS6NLO1123	4912418	TM6NLO1123
Strata Marble	4138363	4912401	BT6NLO5157	4912428	QTRNLO5157	4912410	RD6NLO5157	4912437	FS6NLO5157	4912419	TM6NLO5157
Jasper Onyx	4138366	4912402	BT6NLO5158	4912429	QTRNLO5158	4912411	RD6NLO5158	4912438	FS6NLO5158	4912420	TM6NLO5158
Sedona Concrete	4138367	4912403	BT6NLO5159	4912430	QTRNLO5159	4912412	RD6NLO5159	4912439	FS6NLO5159	4912421	TM6NLO5159
Palisade Stone	4138371	4912404	BT6NLO6028	4912431	QTRNLO6028	4912413	RD6NLO6028	4912440	FS6NLO6028	4912422	TM6NLO6028

To find these trims on [lowes.com](https://www.lowes.com), search by model number.

