



ZIPPITY

Easy Does It!

CONCORD

Light Post w/ Planter Box
(19 7/8" W x 103 1/2" H)

60 MIN

Approximate assembly time


Want to see a video on how to assemble
this product?

Scan the QR code



ASSEMBLY INSTRUCTIONS

ZP19081

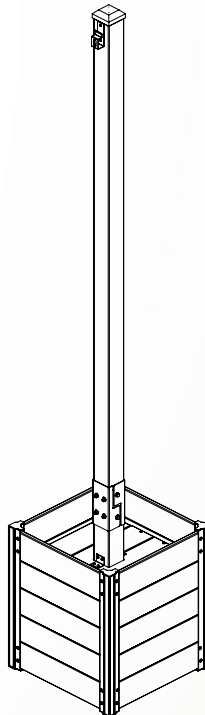

GENERAL INFORMATION

MISSING OR DAMAGED PARTS?



➤ **Visit Our Website**
so we can help you right away!
parts.nychbrands.com

* You can also reach us via phone or email.

Hours of Operation - **Weekdays 9am-5pm EST**

To better help you, **please have the following**

- Your product number (**ZP19081**)
- Your affected part letters (**page 4-7**)
- Your original product box

NEED ASSEMBLY HELP?


If you are having problems with assembly or installation of this product,
please contact at:

📞 **704-892-5222 / 877-234-6196** ✉ **support@zippity-outdoor.com**

NEED TO RETURN?


If for some reason you need to return this product, please allow us to help resolve your issues first. If you still decide to return the product, **you will need to initiate the return from the company you originally purchased from.**

Detailed Product Dimensions & Specifications

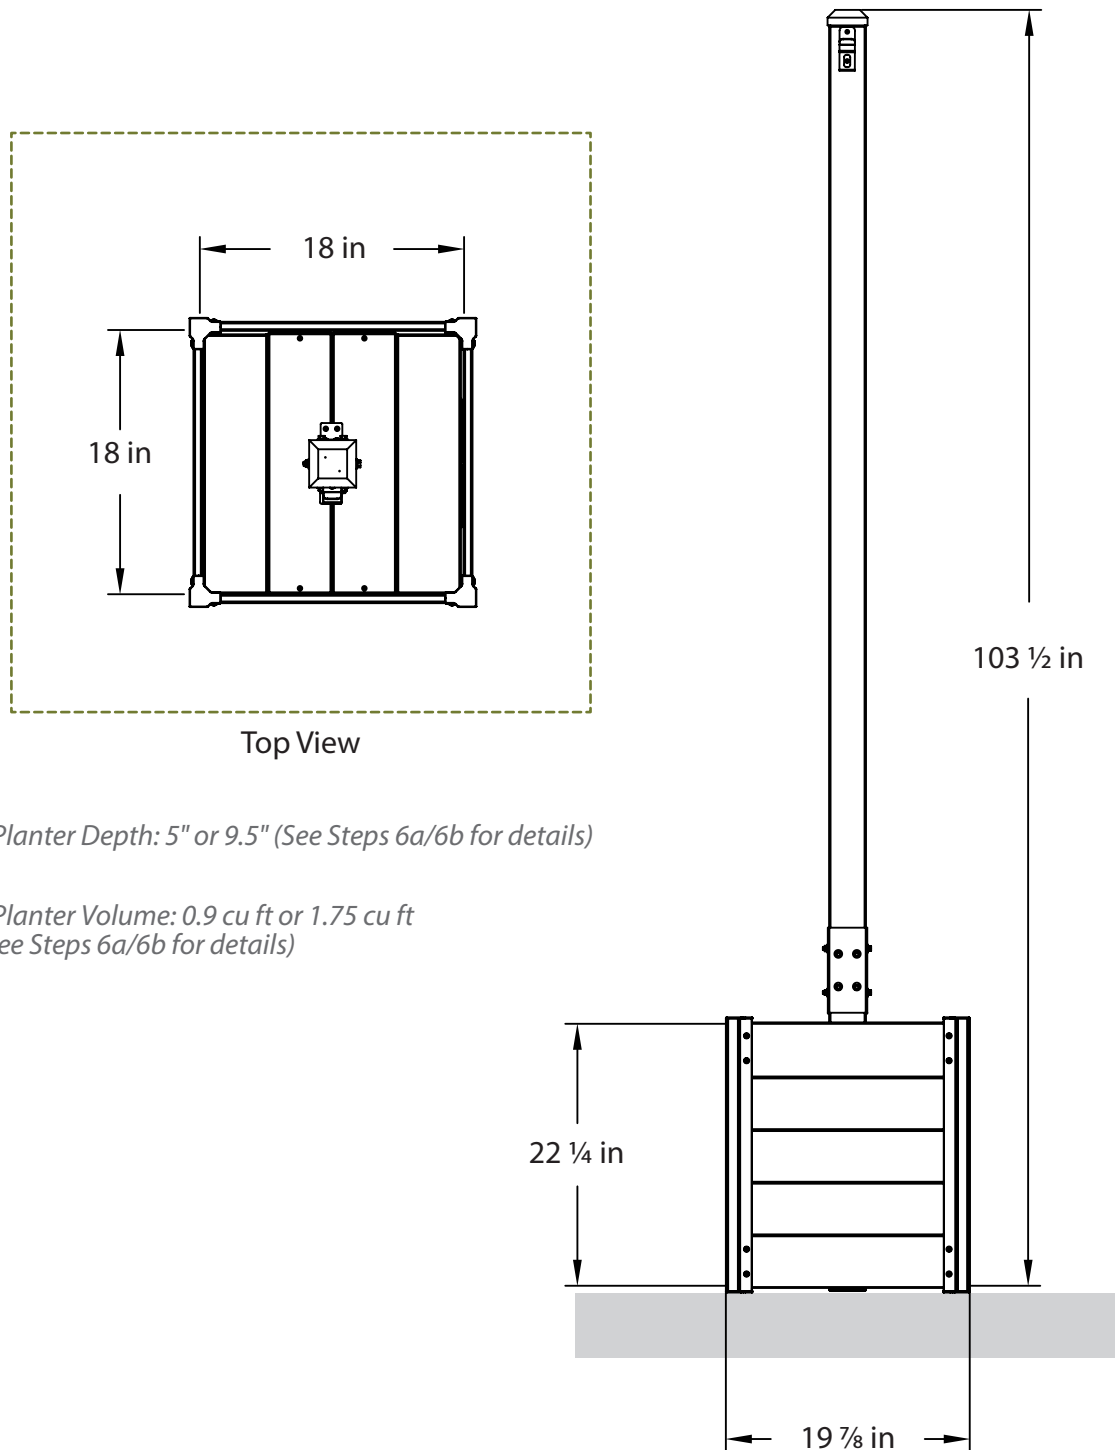


LAY OUT MATERIALS

► Tools required for a smoother installation experience.

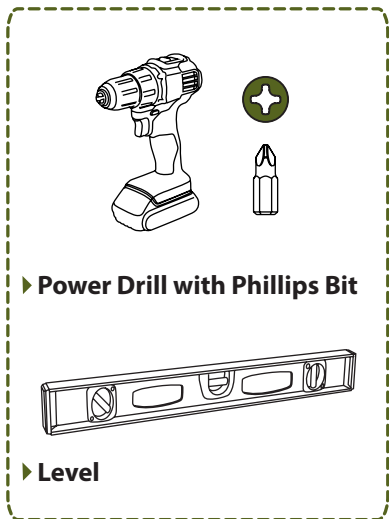

► We recommend 2 people for a smoother assembly.

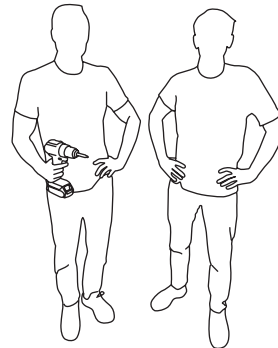

Recommended:

For optimal stability, you will need to fill the lower chamber with roughly 50 lbs of weight. Sand bags or small rocks are recommended.

LAY OUT MATERIALS

LIGHT POST

A

Corner Post (4)
2 1/8" x 2 1/8" x 22"

B

Board (12)
5/8" x 4 1/2" x 17 1/2"






C

Floor Support Board (4)
1 1/2" x 4 1/2" x 17 1/2"






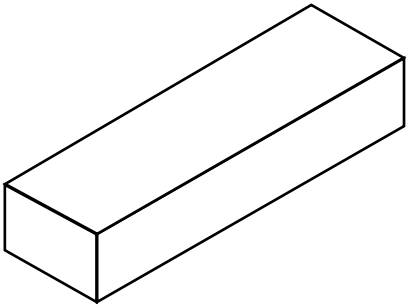
D

Top Board (4)
5/8" x 4 1/2" x 17 1/2"






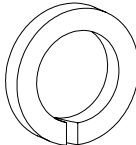
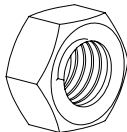
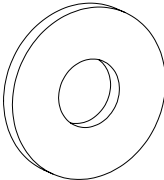
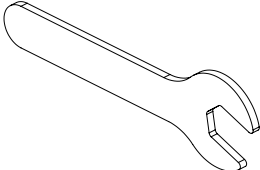
LAY OUT MATERIALS

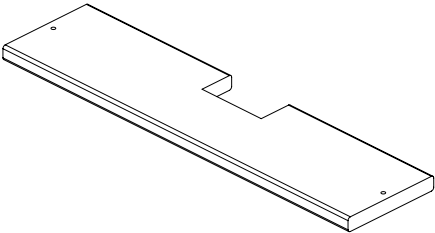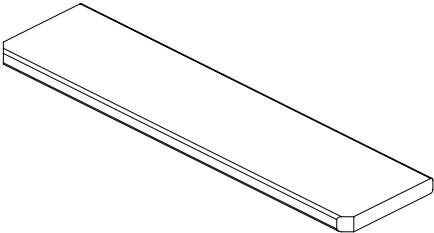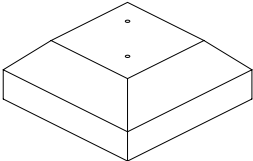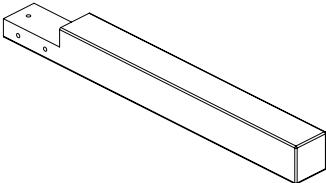
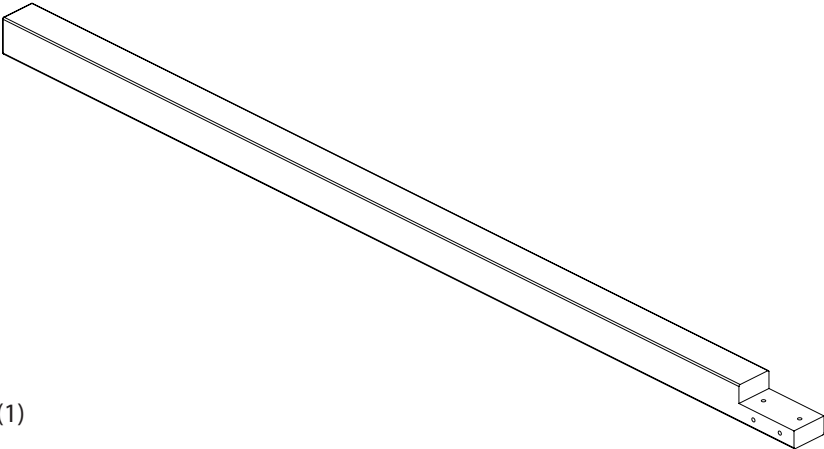
LIGHT POST	
<div>E</div> <div></div> <div>Inside Floor Board (4) 5/8" x 4 1/2" x 17 3/4"</div>	<div>F</div> <div></div> <div>Outside Floor Board (4) 5/8" x 4 1/2" x 17 3/4"</div>
<div>G</div> <div></div> <div>Wooden Post Cap (1) 3 1/4" x 3 1/4" x 1 1/4"</div>	<div>H</div> <div></div> <div>Bottom Light Post (1) 3" x 3" x 28 5/8"</div>
<div>I</div> <div></div> <div>Top Light Post (1) 3" x 3" x 79 1/8"</div>	

LAY OUT MATERIALS

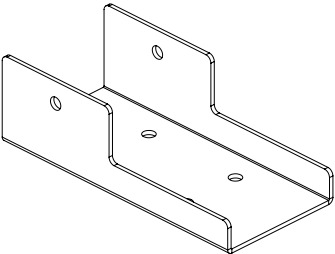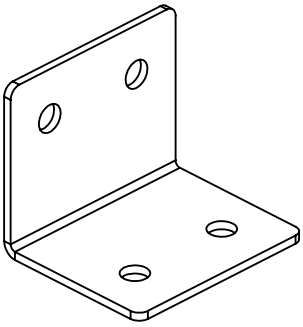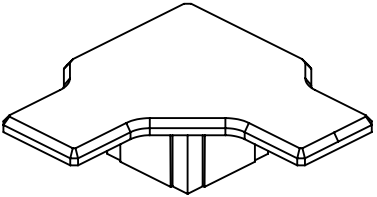HARDWARE & ACCESSORIES	
<div>J</div> <div></div> <div>Post Bracket (2)</div>	<div>K</div> <div></div> <div>Hook (1)</div>
<div>L</div> <div></div> <div>L-Bracket (4)</div>	<div>M</div> <div></div> <div>Post Caps (8)</div>
<div>N</div> <div></div> <div>Dowel (2)</div>	<div>O</div> <div></div> <div>Spacer (4)</div>


LAY OUT MATERIALS

HARDWARE & ACCESSORIES		
<div>P</div> <div></div> <div>5/8" Round Head Self-Drilling Screw (32)</div>	<div>Q</div> <div></div> <div>5/8" Self-Tapping Screw (18)</div>	
<div>R</div> <div></div> <div>1 3/8" Countersunk Wood Screw (8)</div>	<div>S</div> <div></div> <div>2" Countersunk Wood Screw (2)</div>	
<div>T</div> <div></div> <div>3 3/4" Hex Bolt (6)</div>	<div>U</div> <div></div> <div>Spring Lock Washer (6)</div>	
<div>V</div> <div></div> <div>Nut (6)</div>	<div>W</div> <div></div> <div>Flat Washer (12)</div>	<div>X</div> <div></div> <div>Nut Wrench (2)</div>

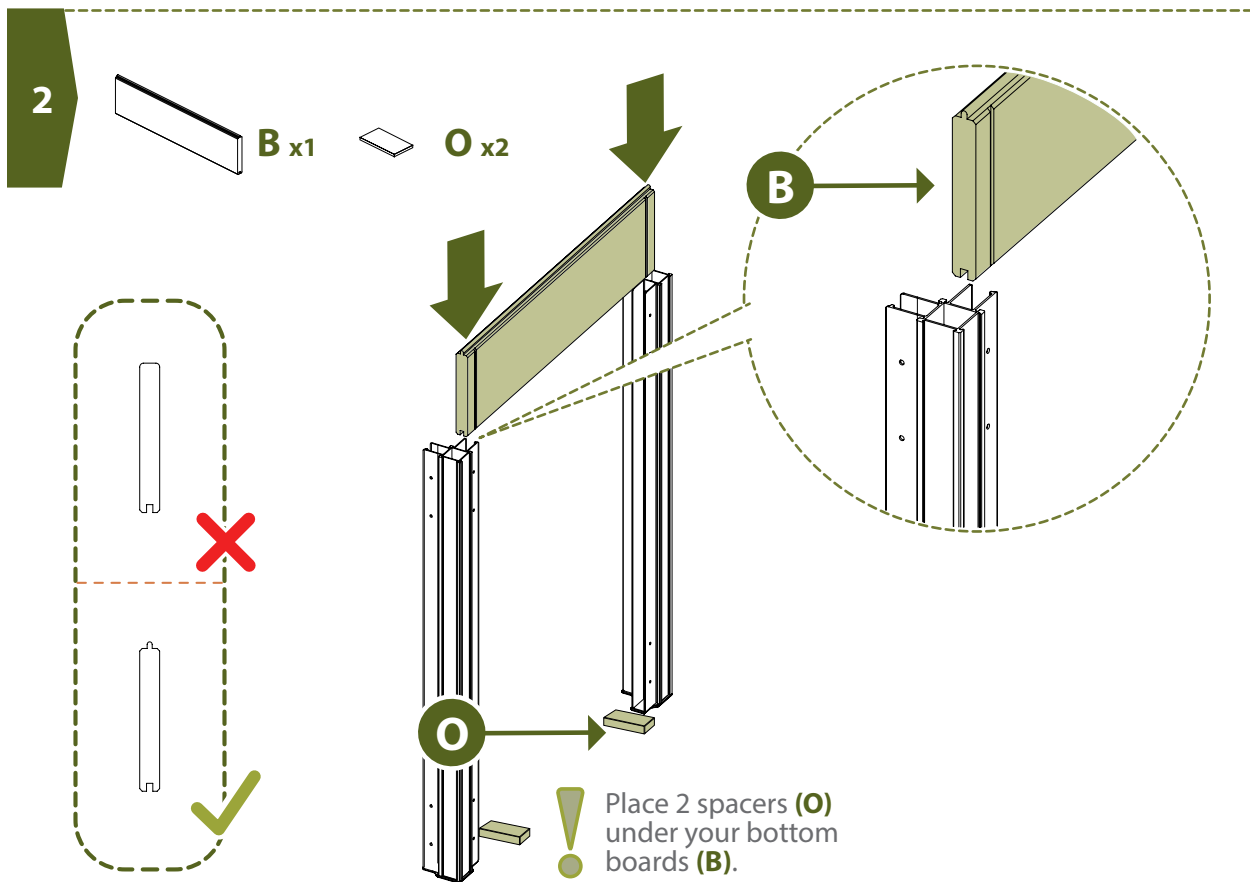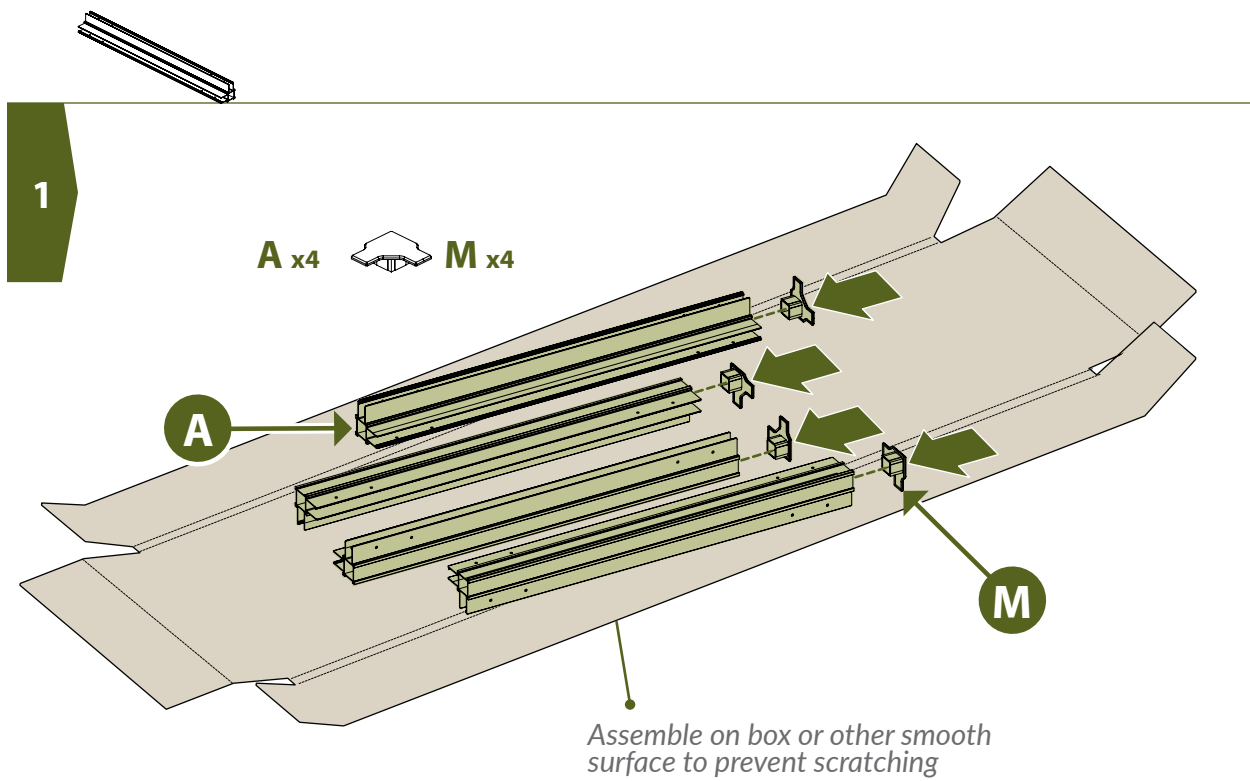


3

 **P x4**

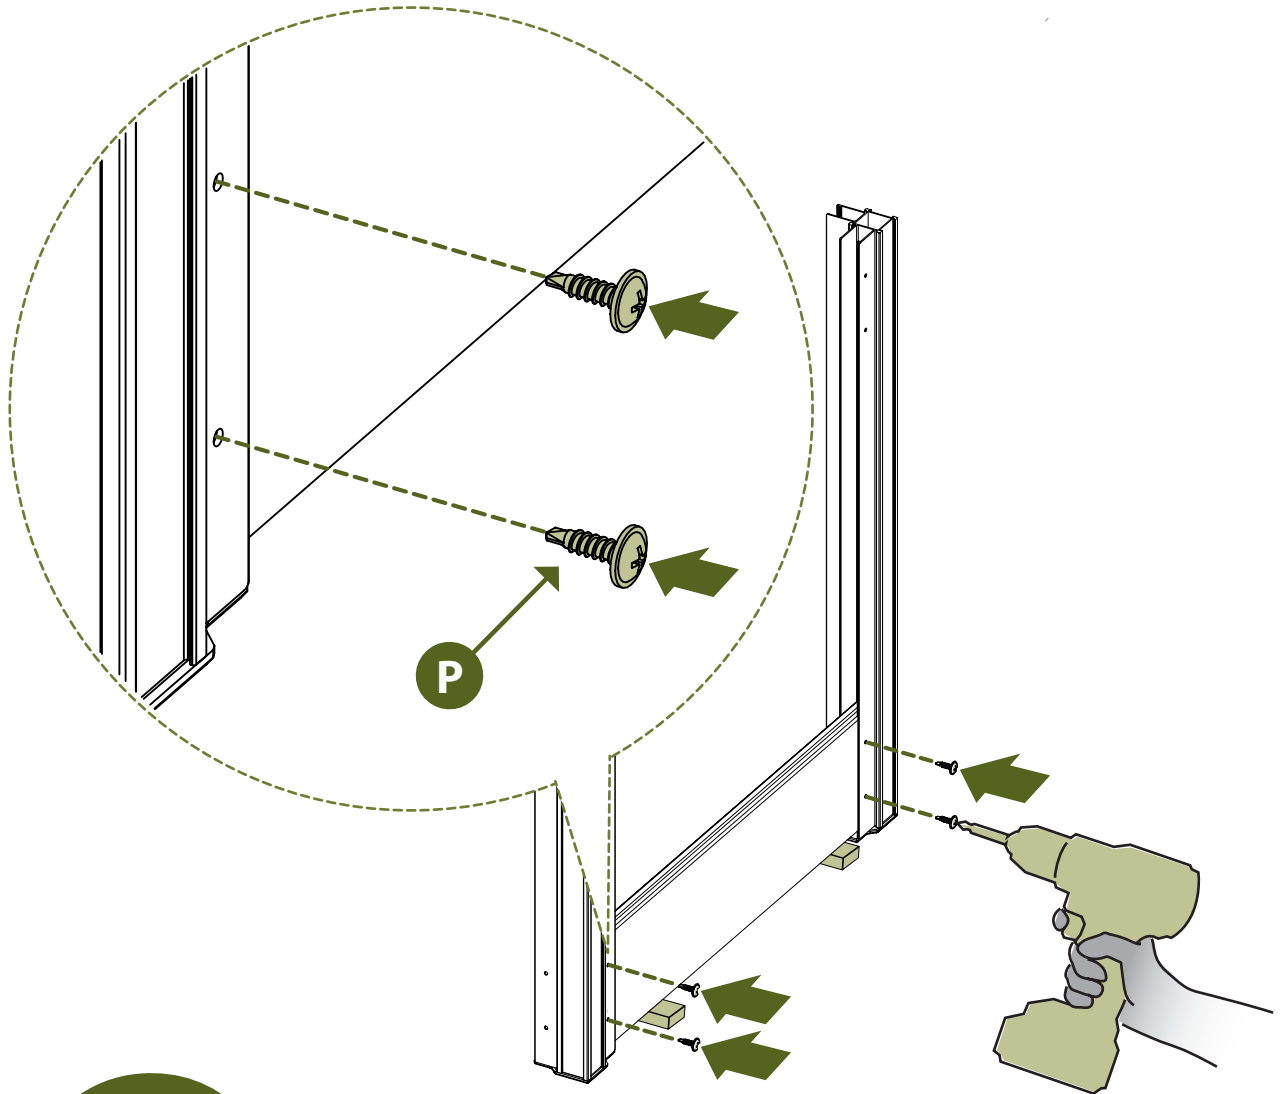

*Repeat steps 2-3
to create an
additional panel*


4



C x2



O x4

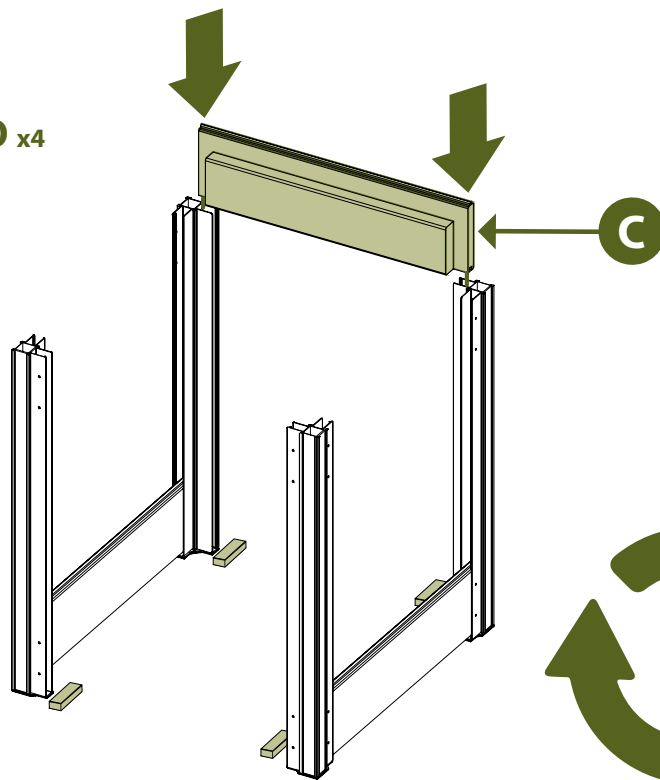


Place spacer (**O**)
under your floor
support boards (**C**).


5




P x8

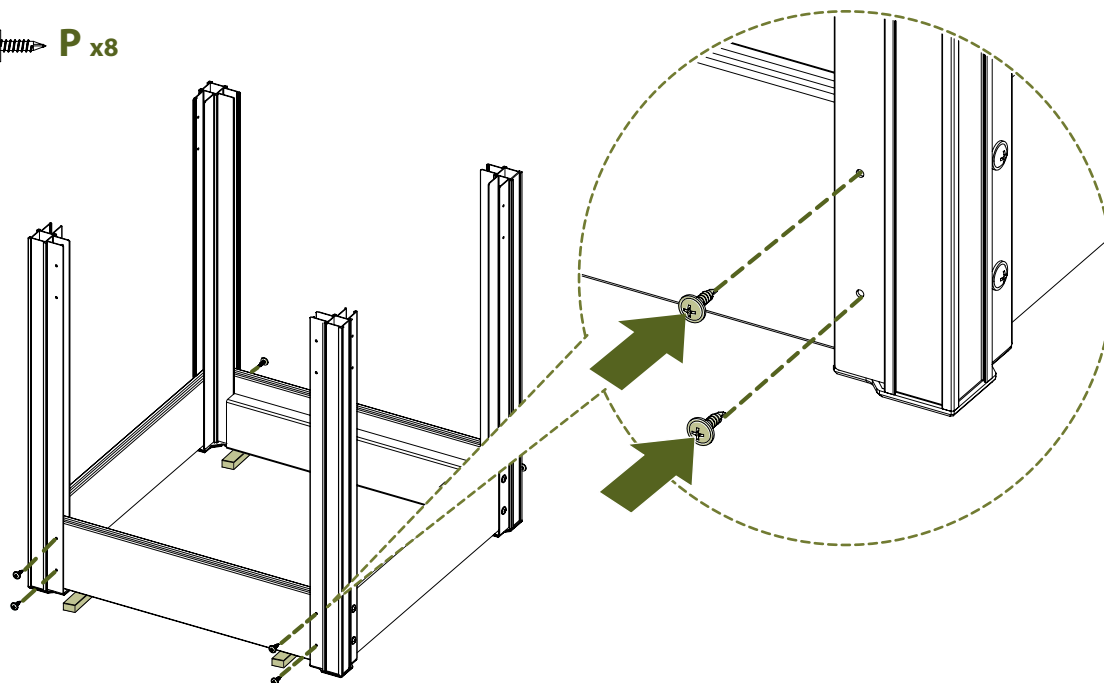


6



E x2




F x2

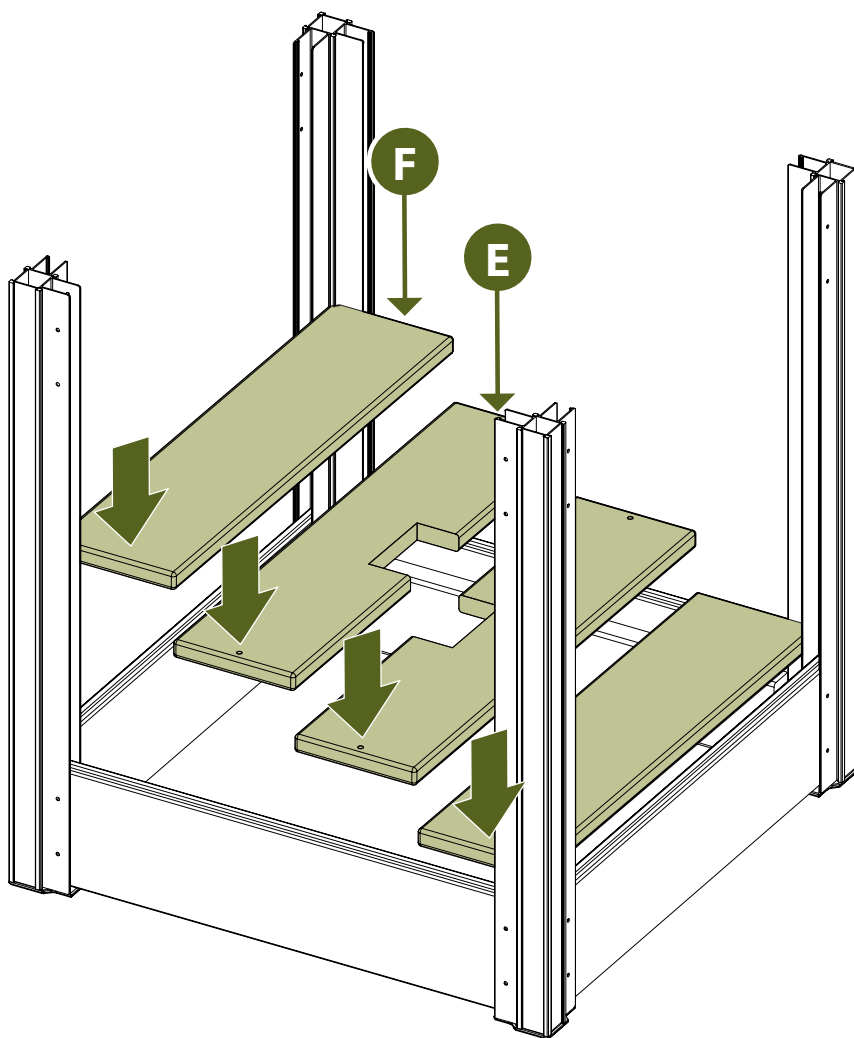

7a




B x4



C x2

► Use this option for a 5" deep planter box.

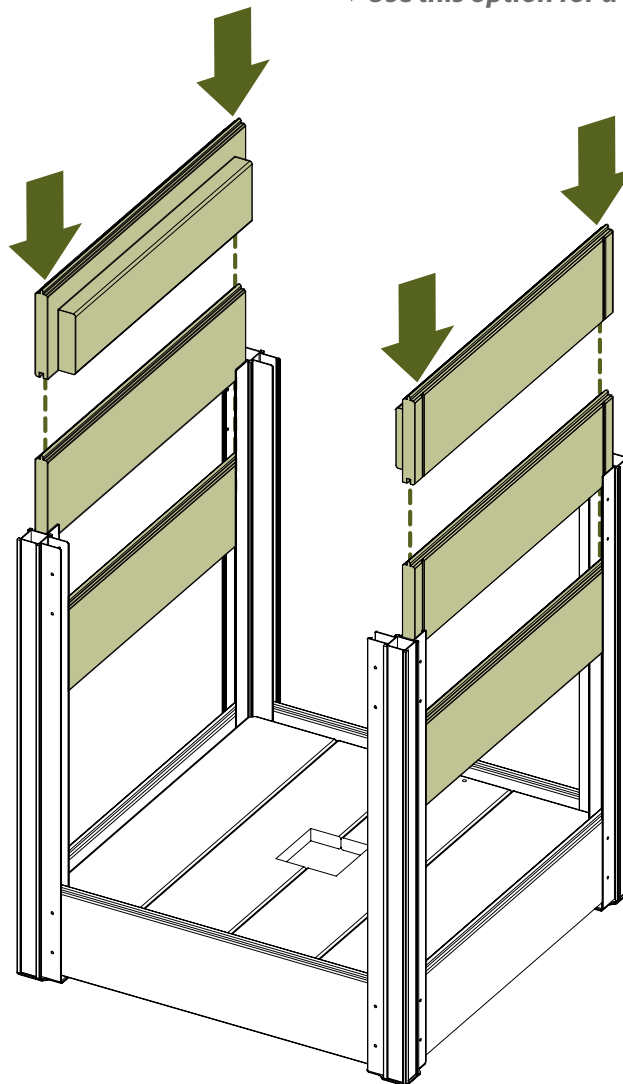


! Top support boards (**C**) should be on the opposite 2 sides as the bottom support boards.

7b




B x4




C x2


► Use this option for a 9.5" deep planter box.

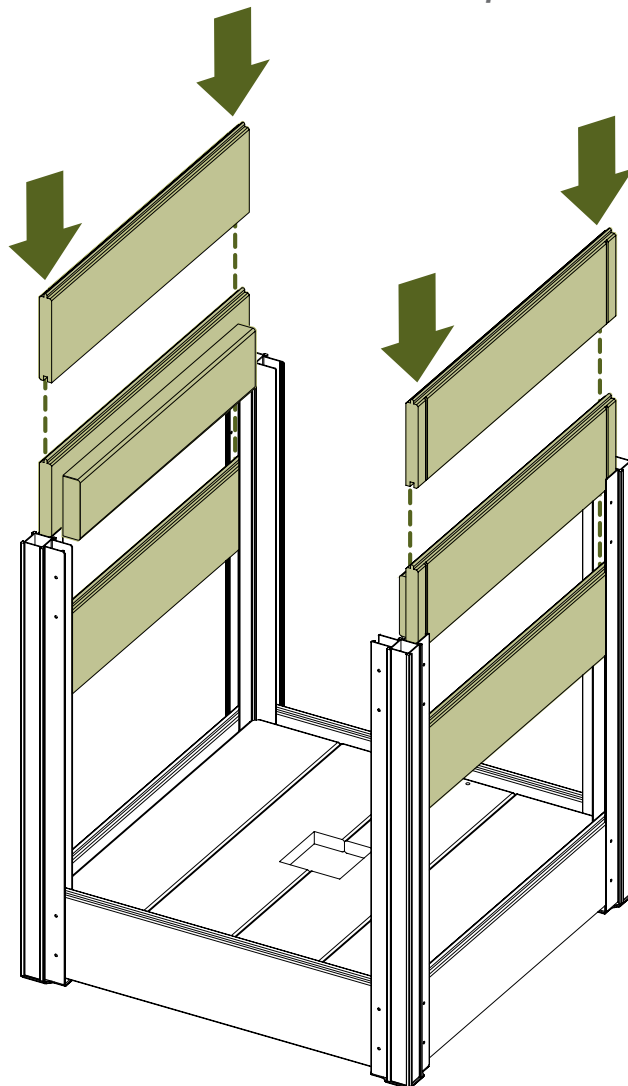


8





E x2




F x2

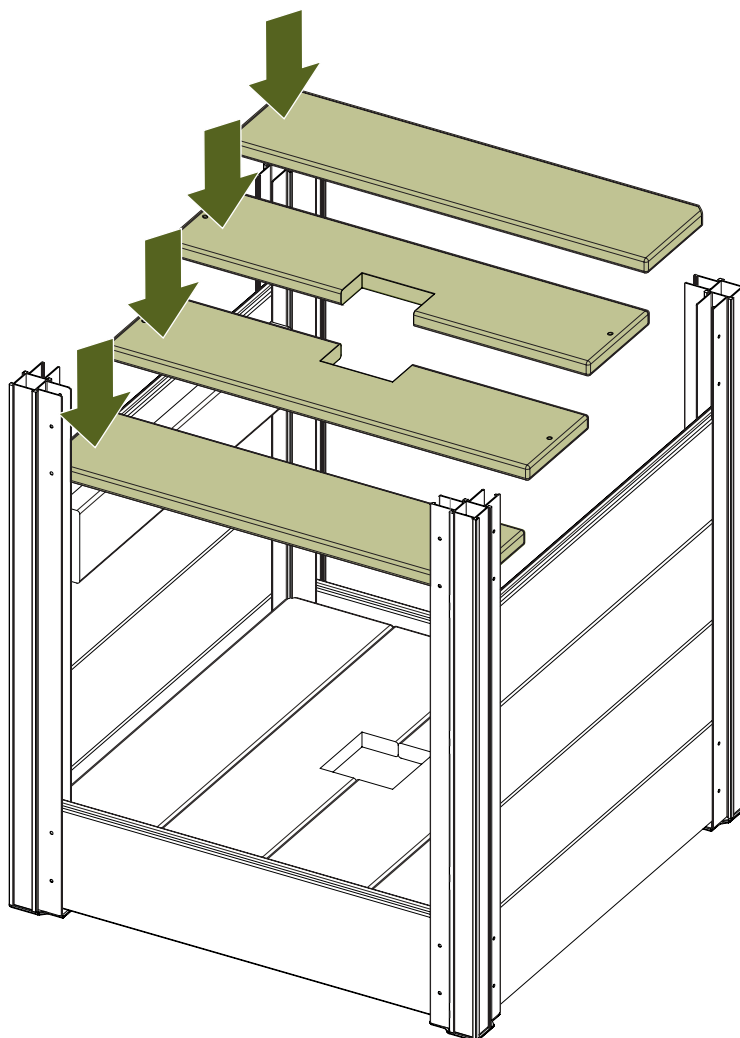


9

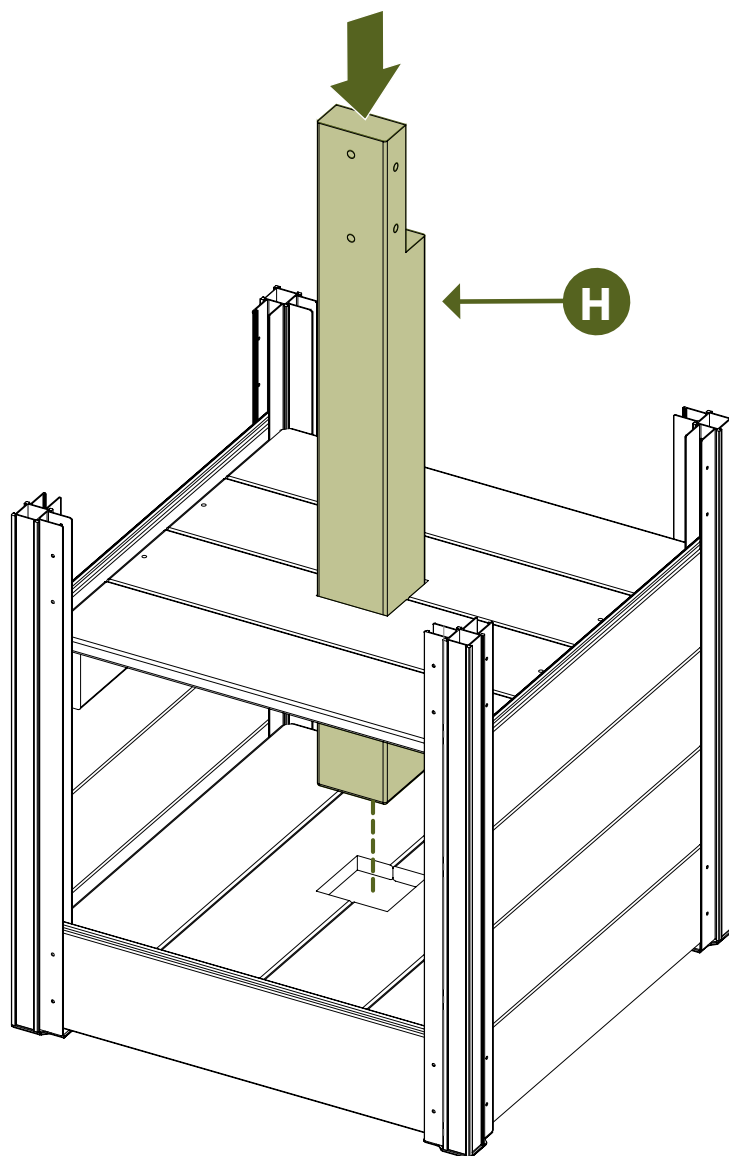


10




! Ensure that bottom post (H) is leveled vertically before placing your screws.

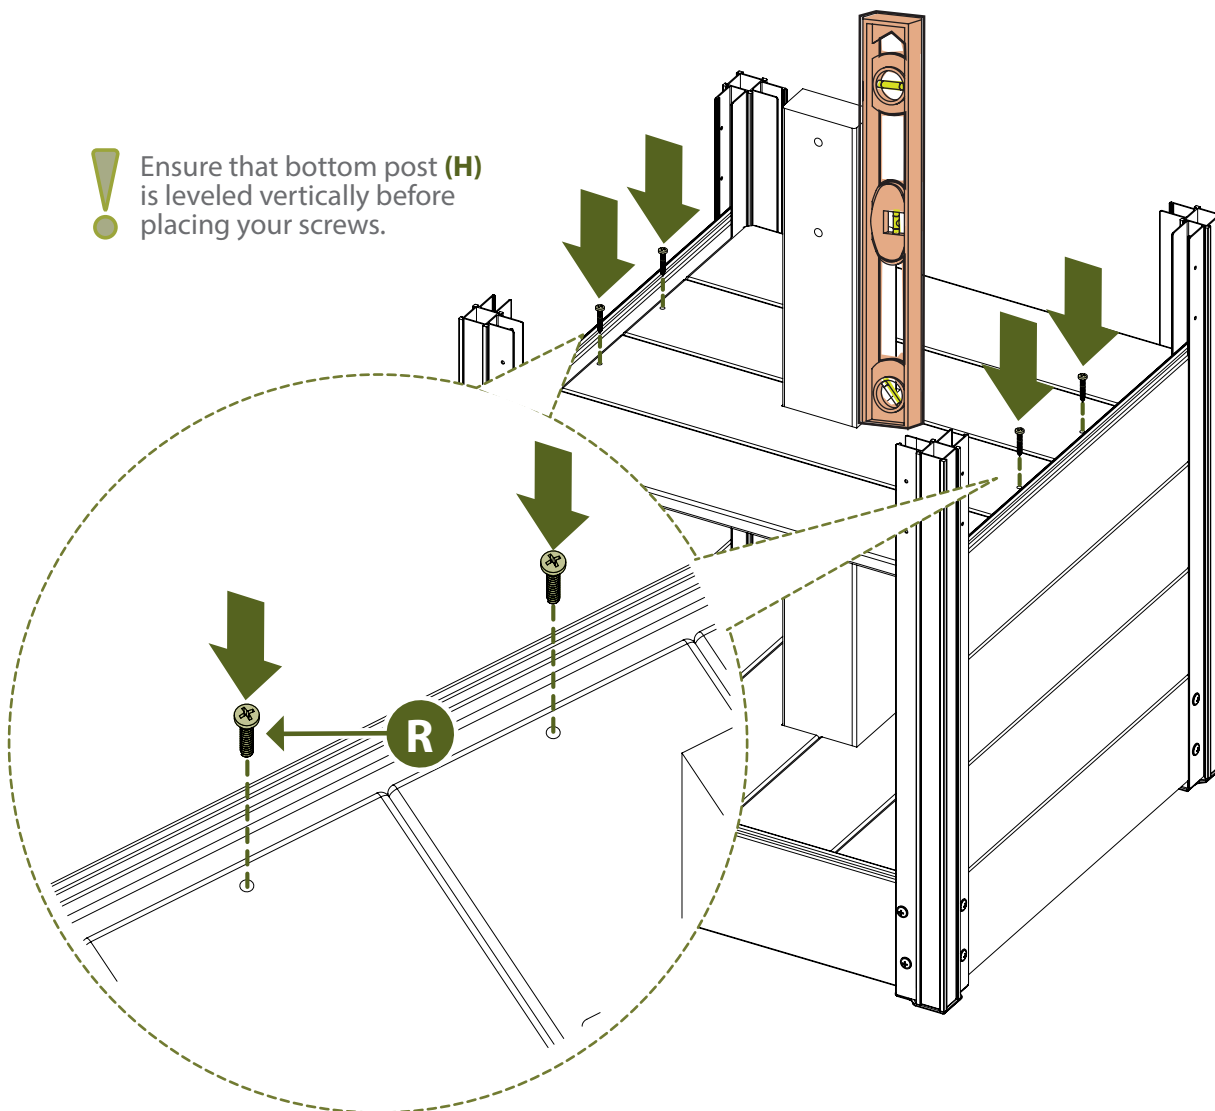


(Recommended)
Temporarily remove your end
boards for your next step.

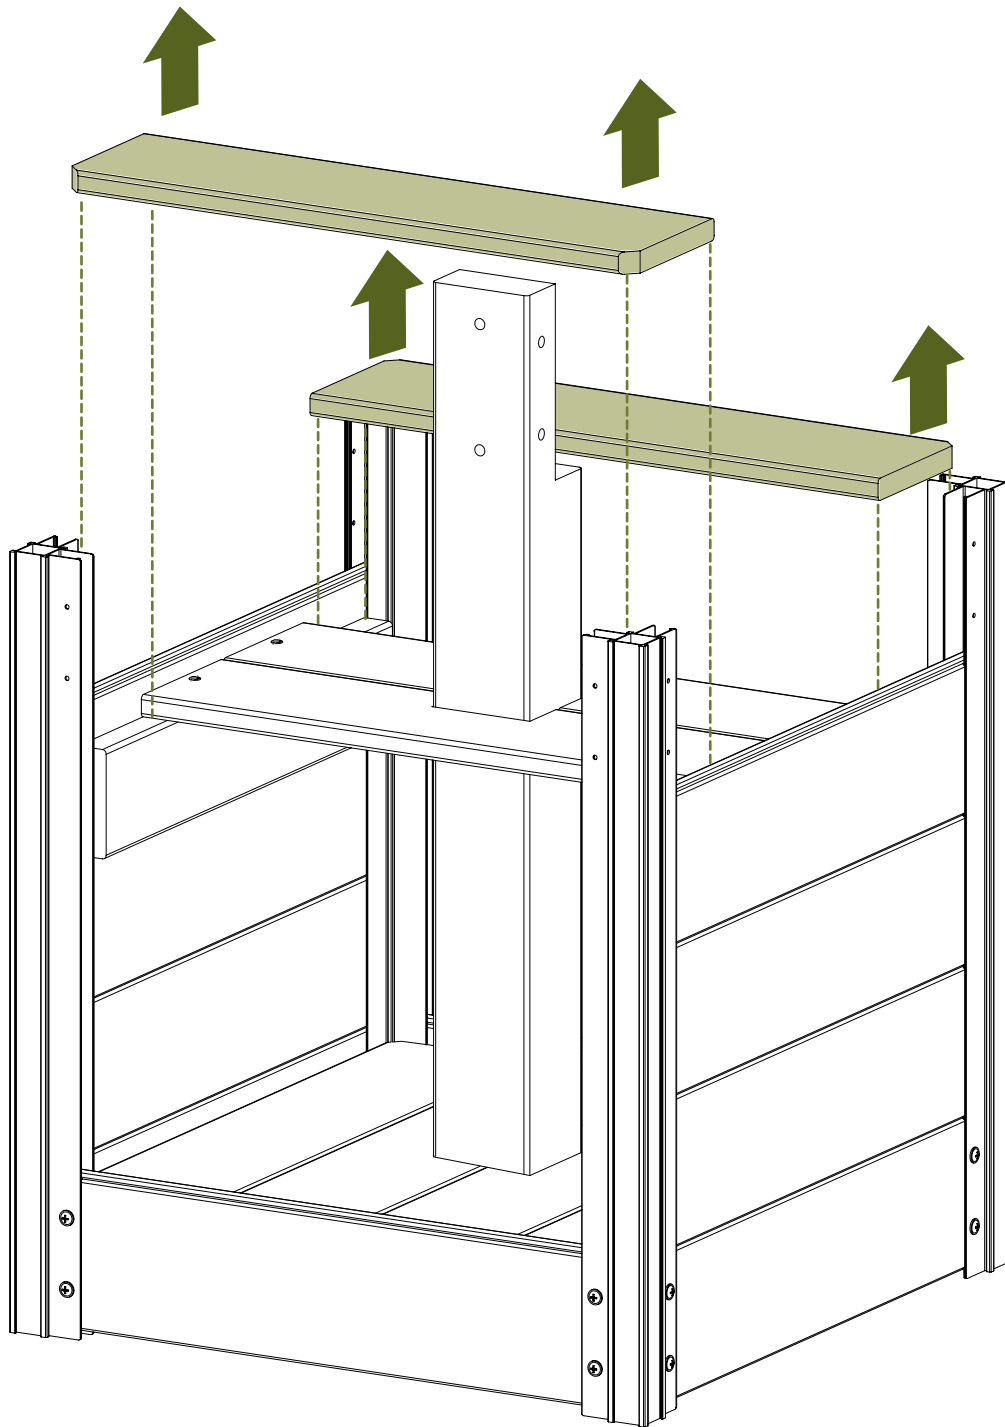

11




! Ensure that bottom post (H) is leveled vertically before placing your screws.

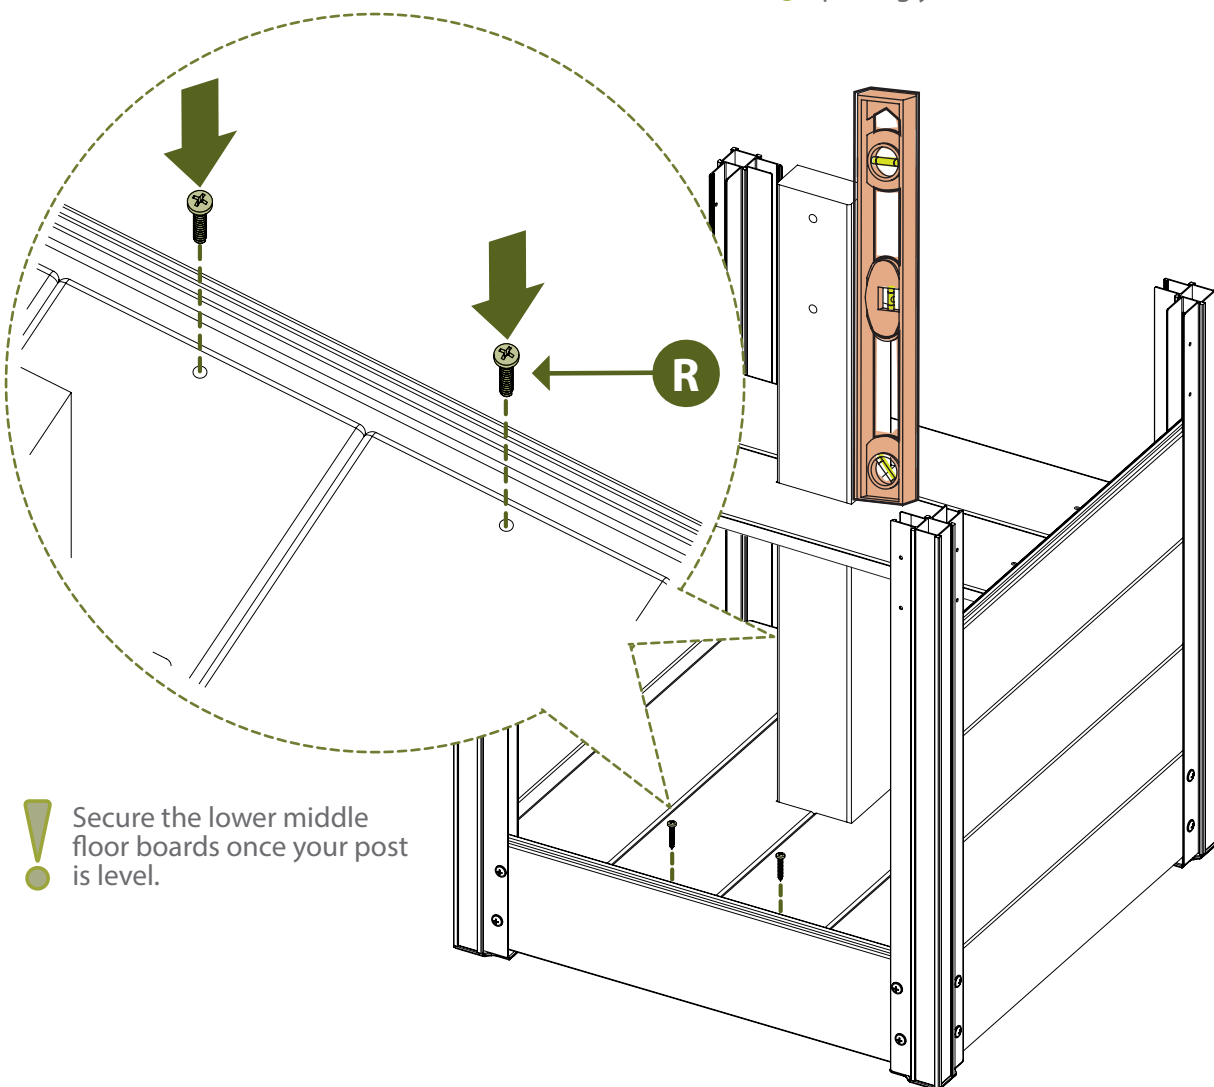

! Secure the lower middle floor boards once your post is level.


12




L x2



Q x8

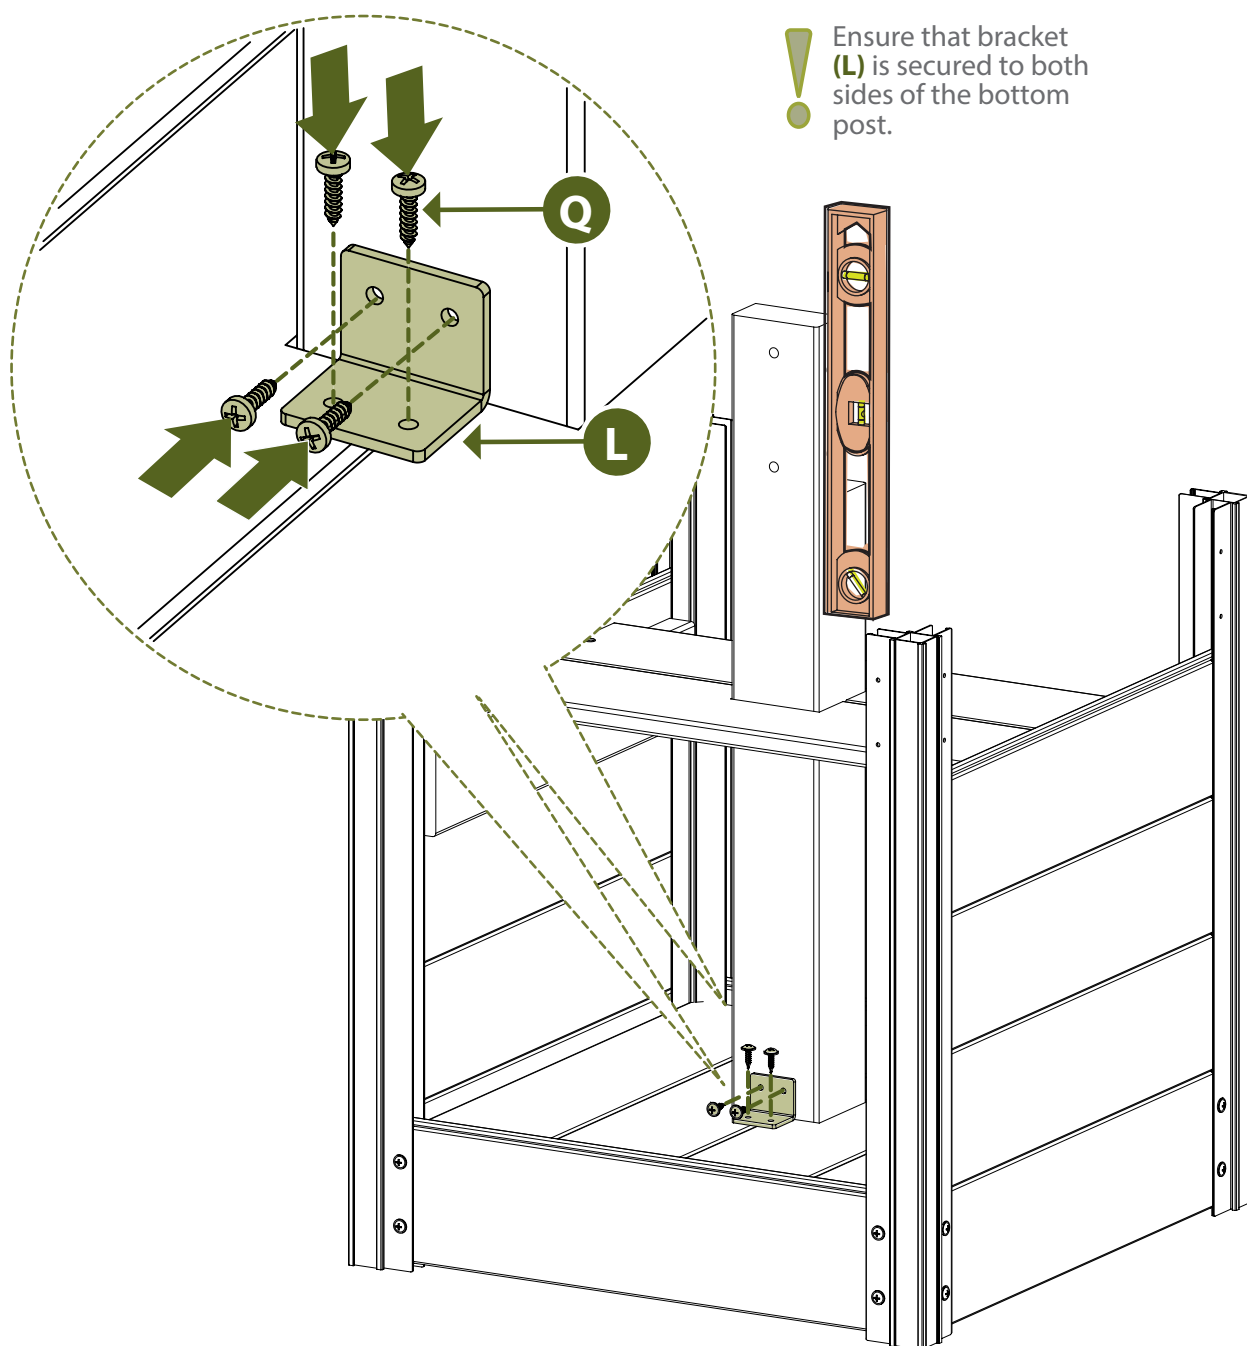


! Ensure that bracket (L) is secured to both sides of the bottom post.

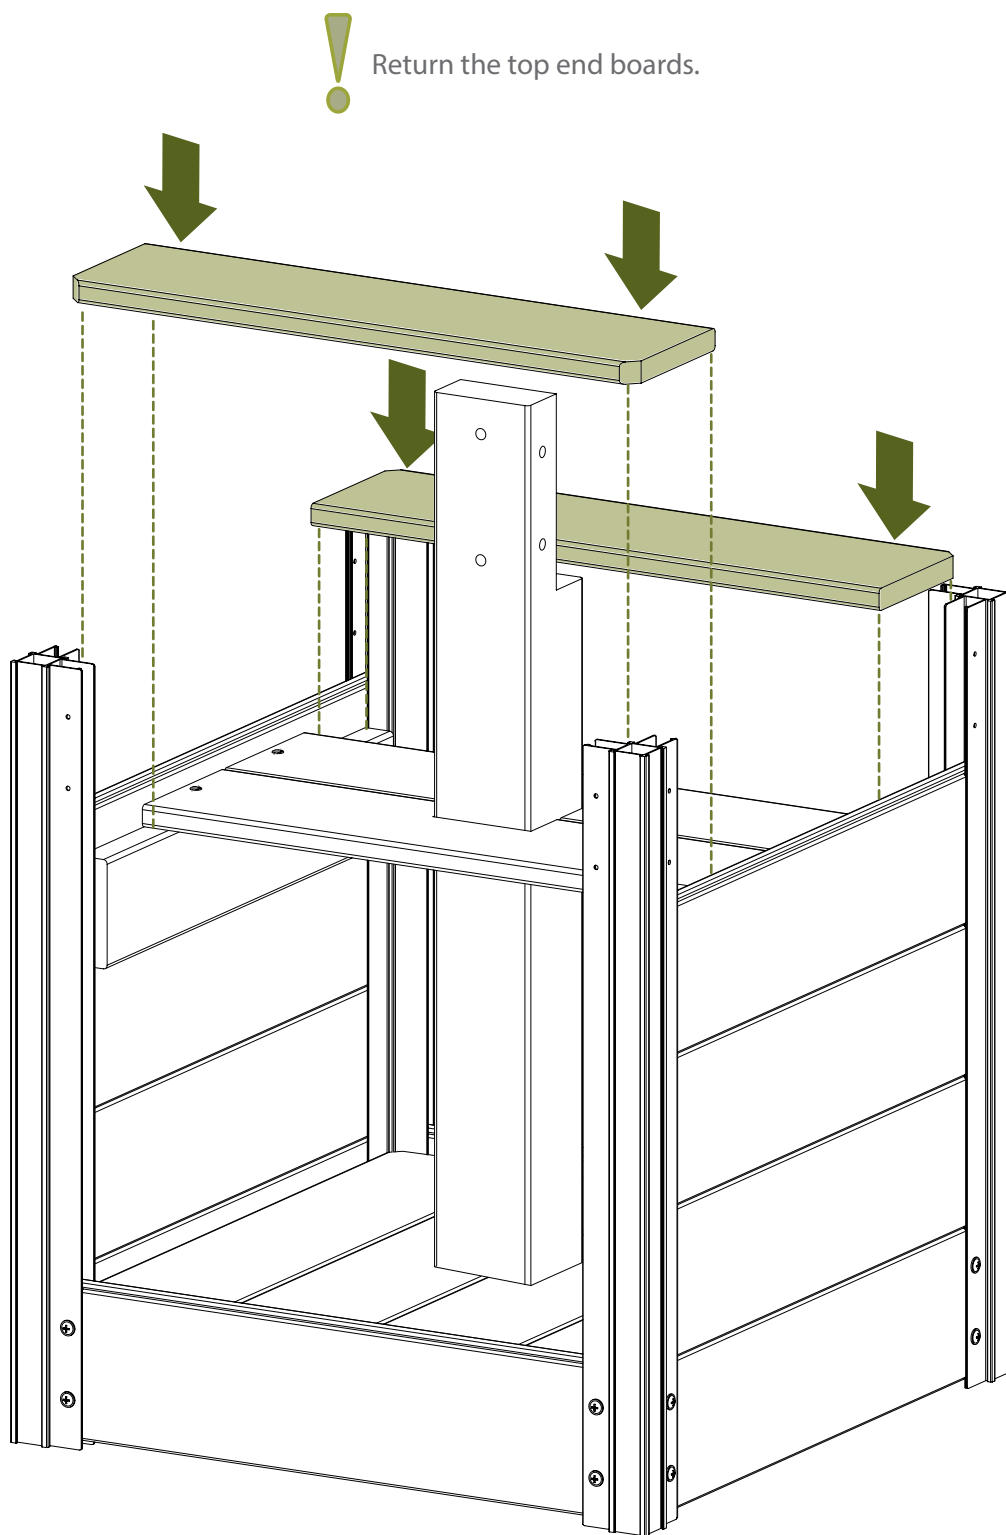

13




! Hook (**K**) can be installed anywhere at top of post (**I**).

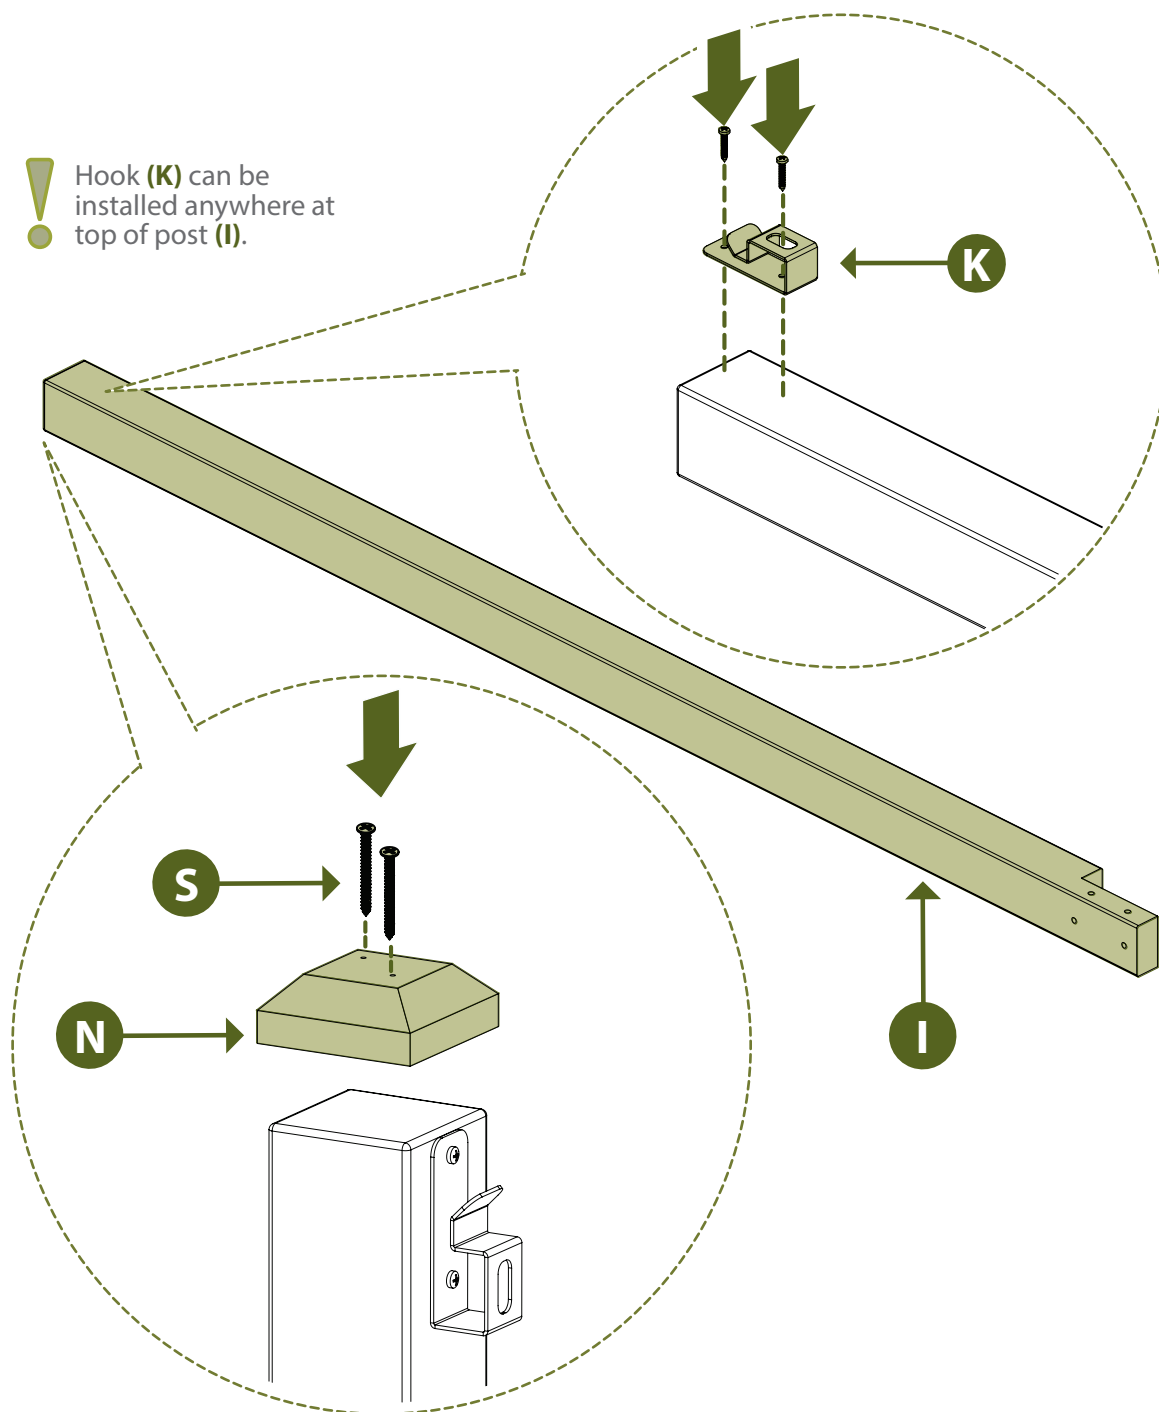


14


J x2

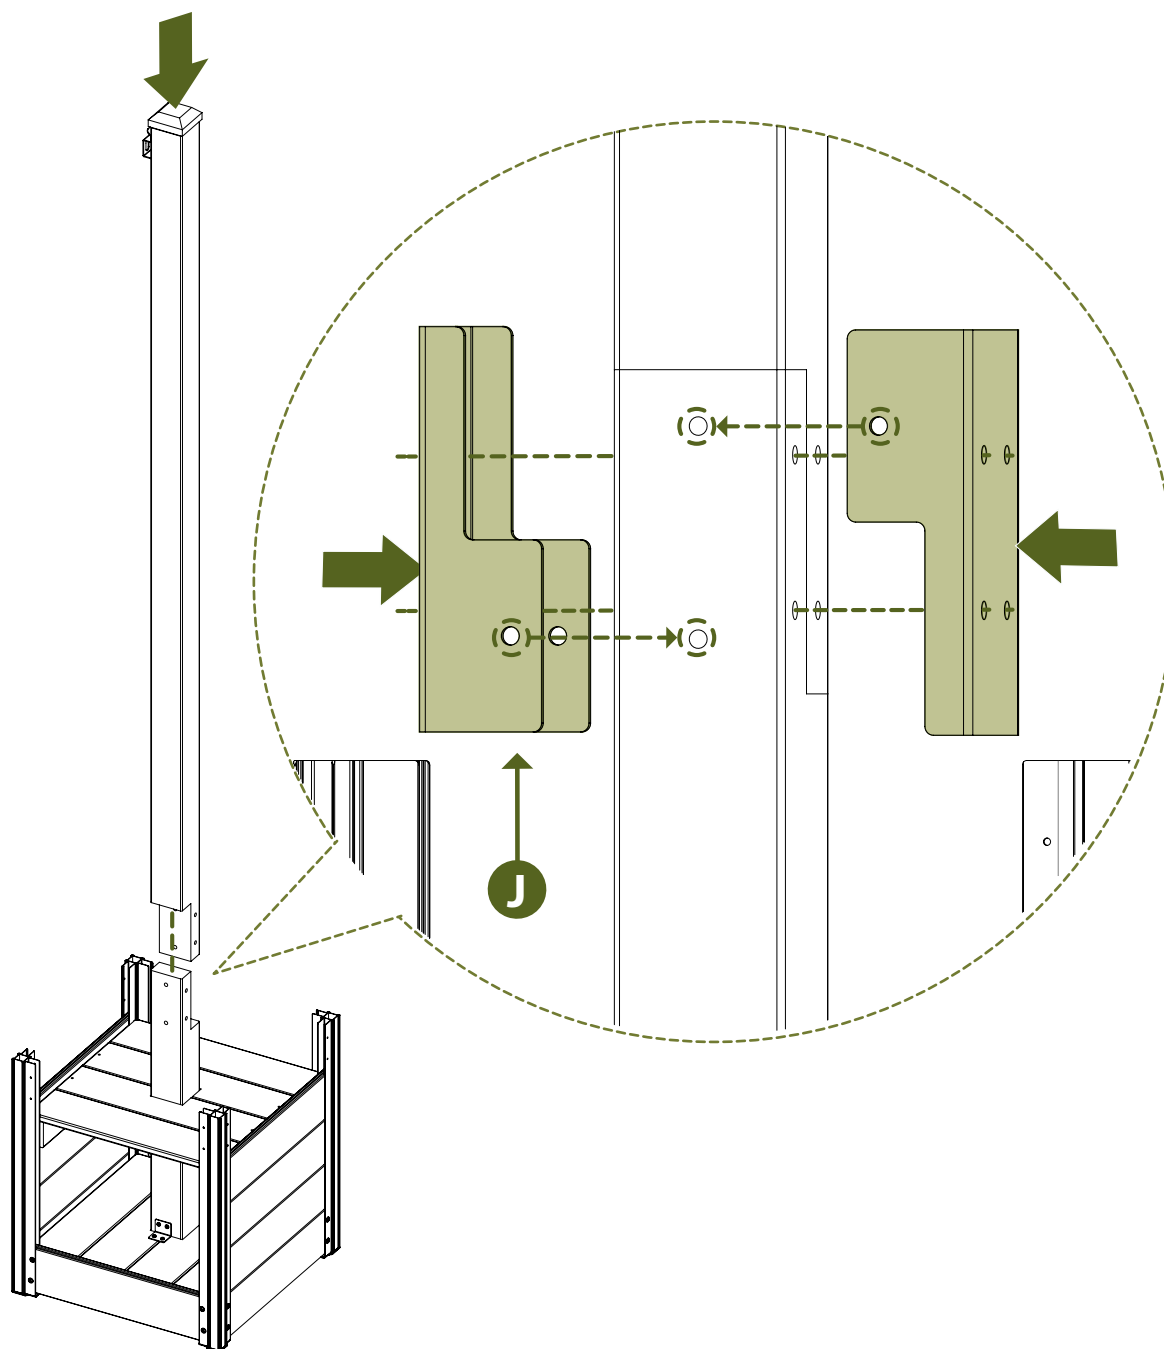

 **T** x6  **U** x6  **W** x12  **V** x6  **X** x2

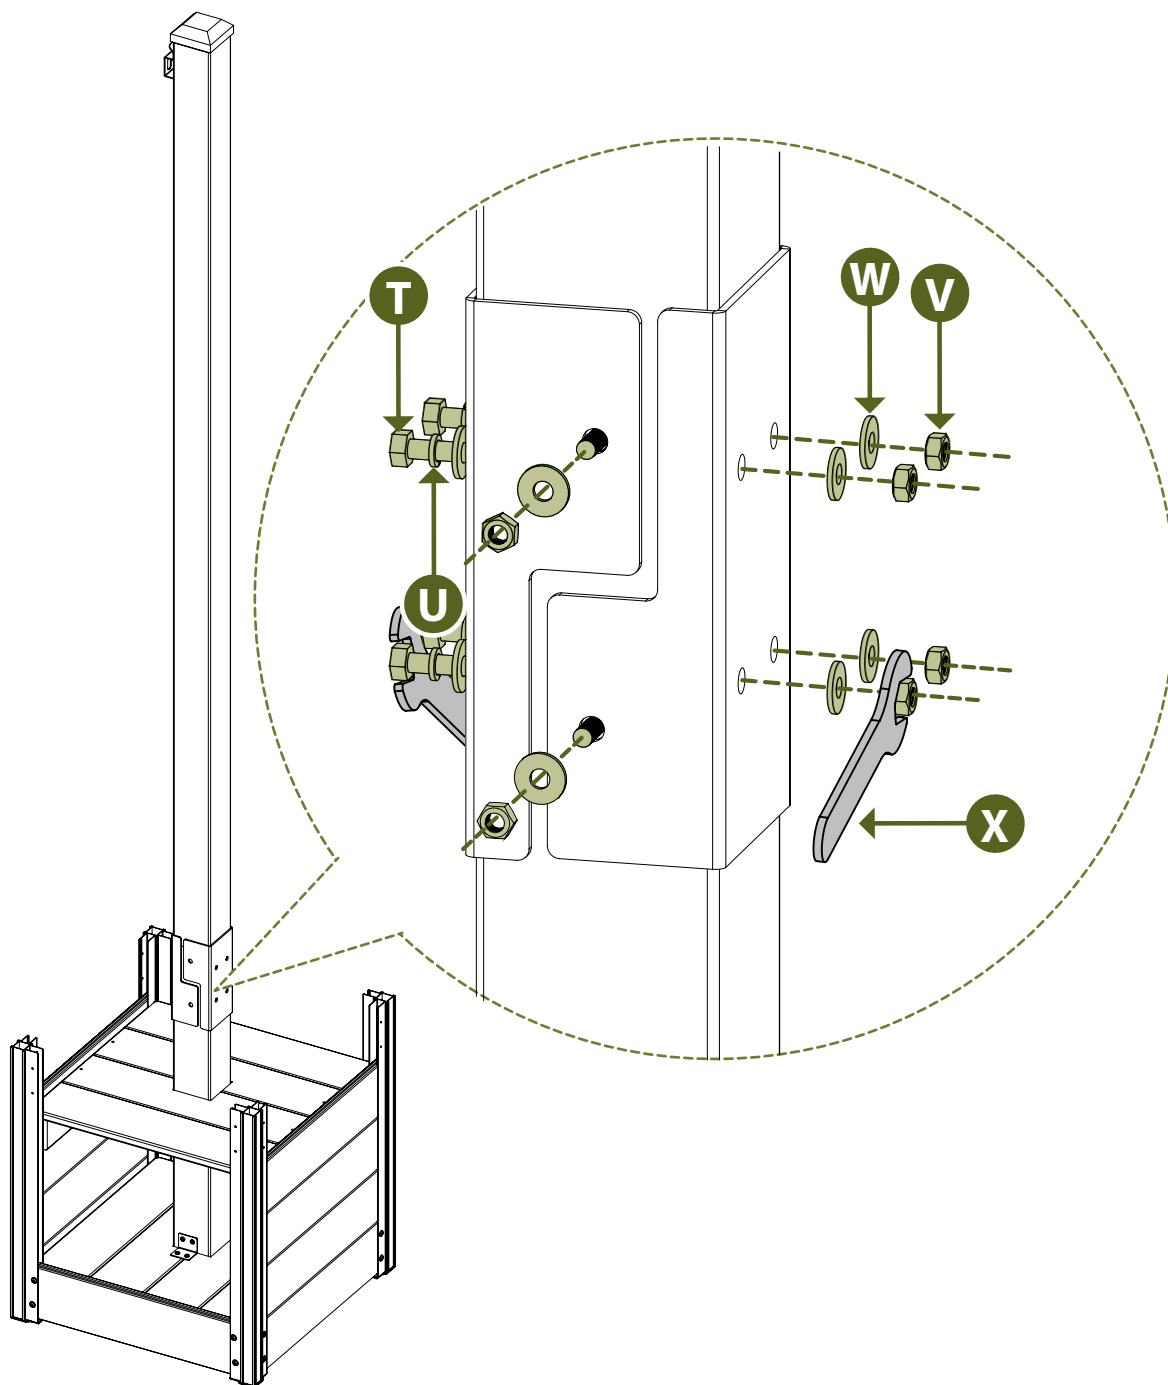

16




L x2



Q x8




Ensure that top post (II) is leveled vertically before placing your screws.

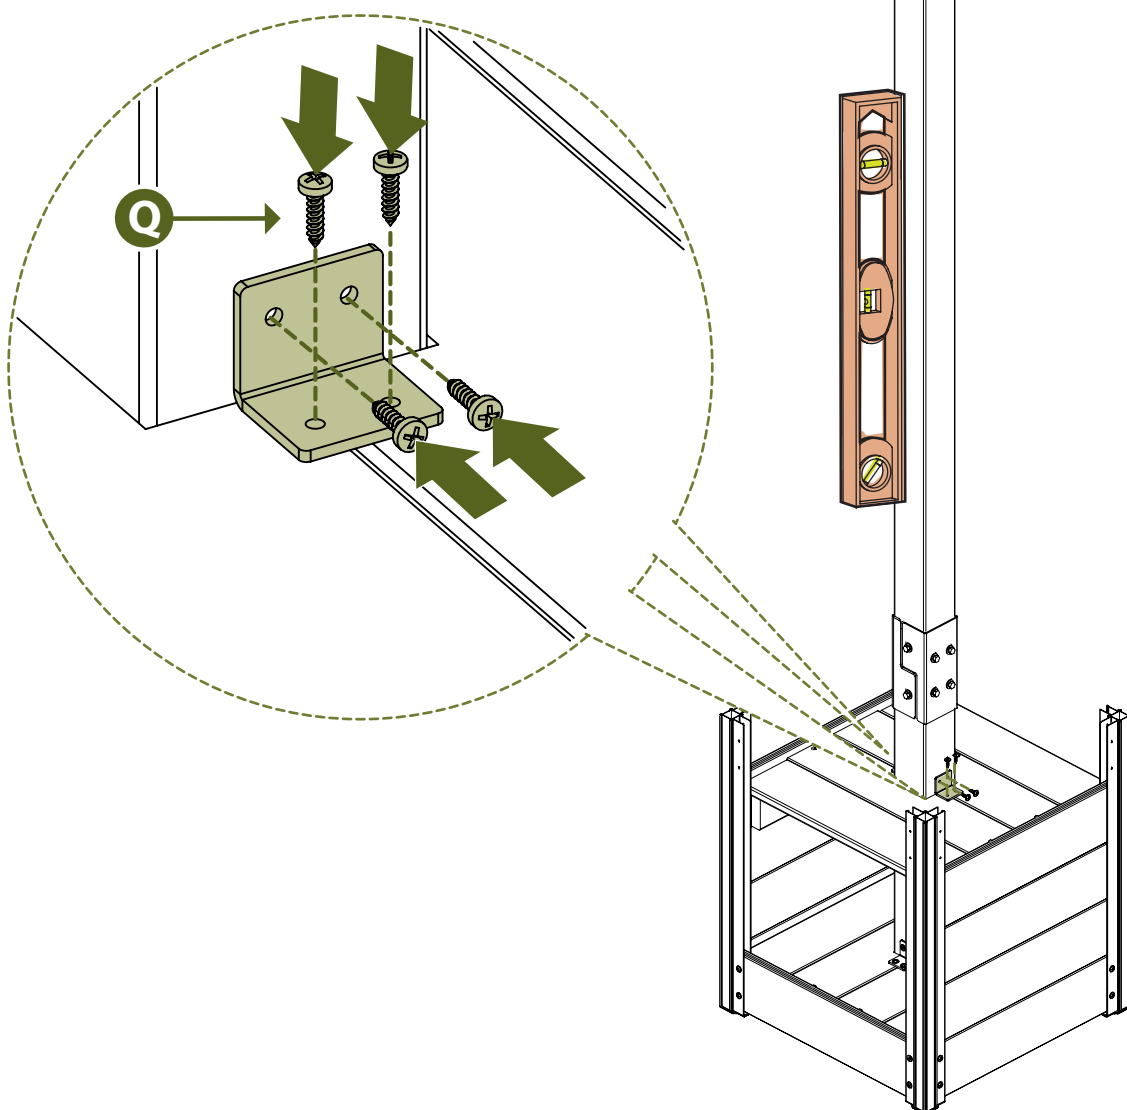


17




B x6

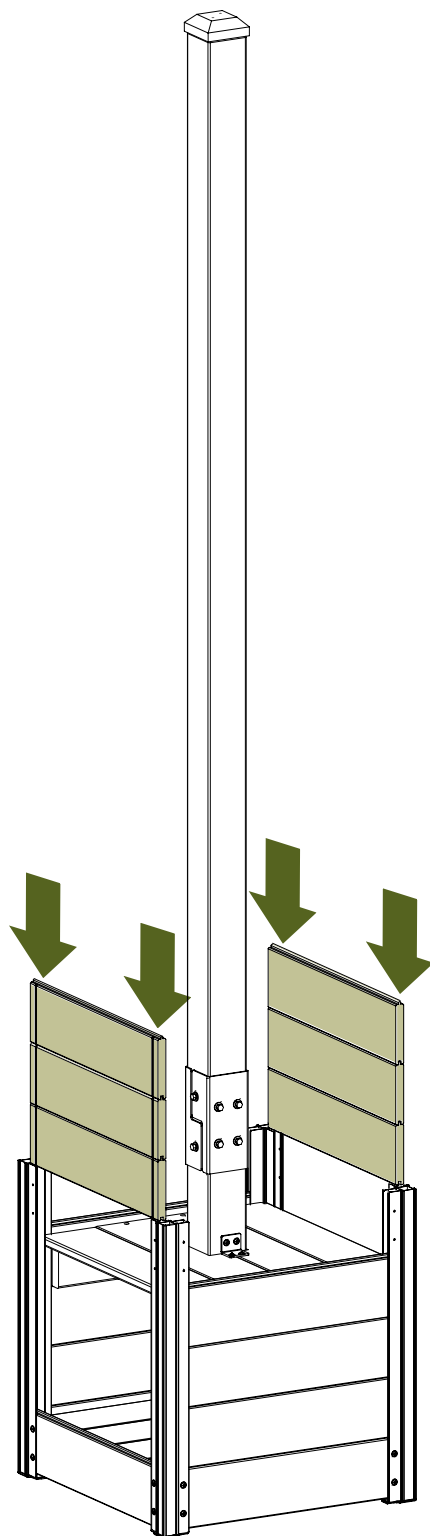

18





D x4

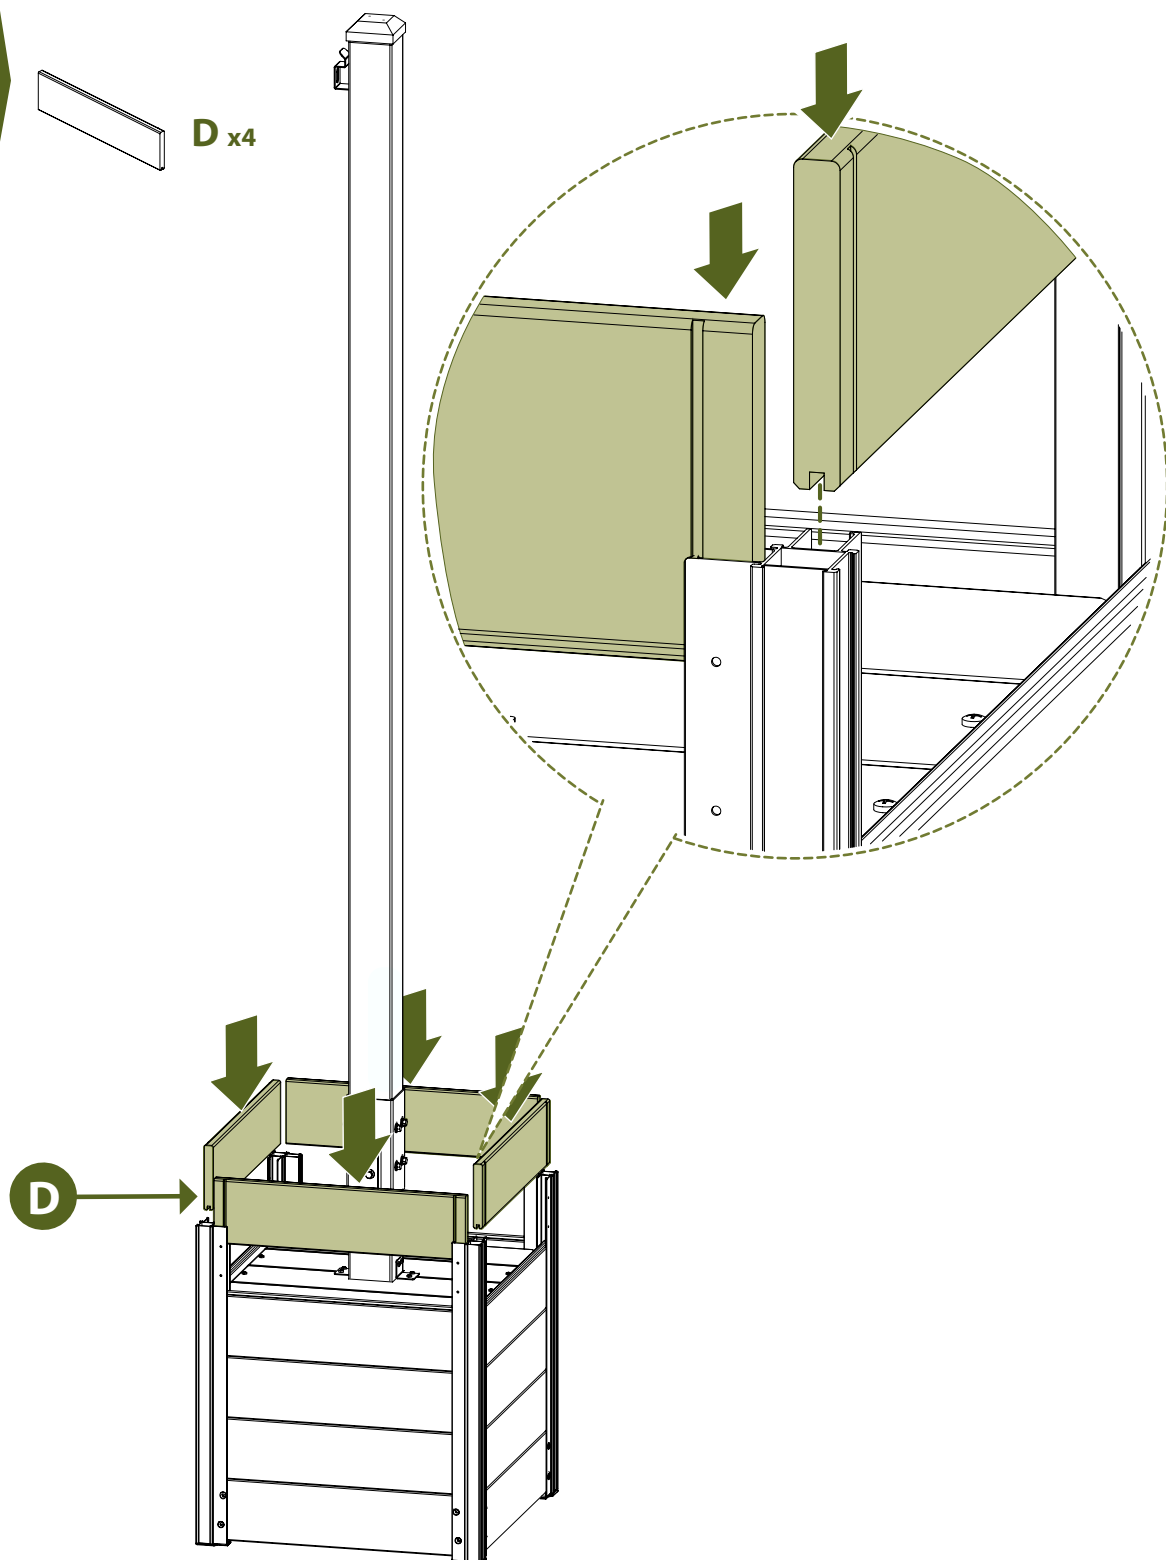


19

 **P x16**

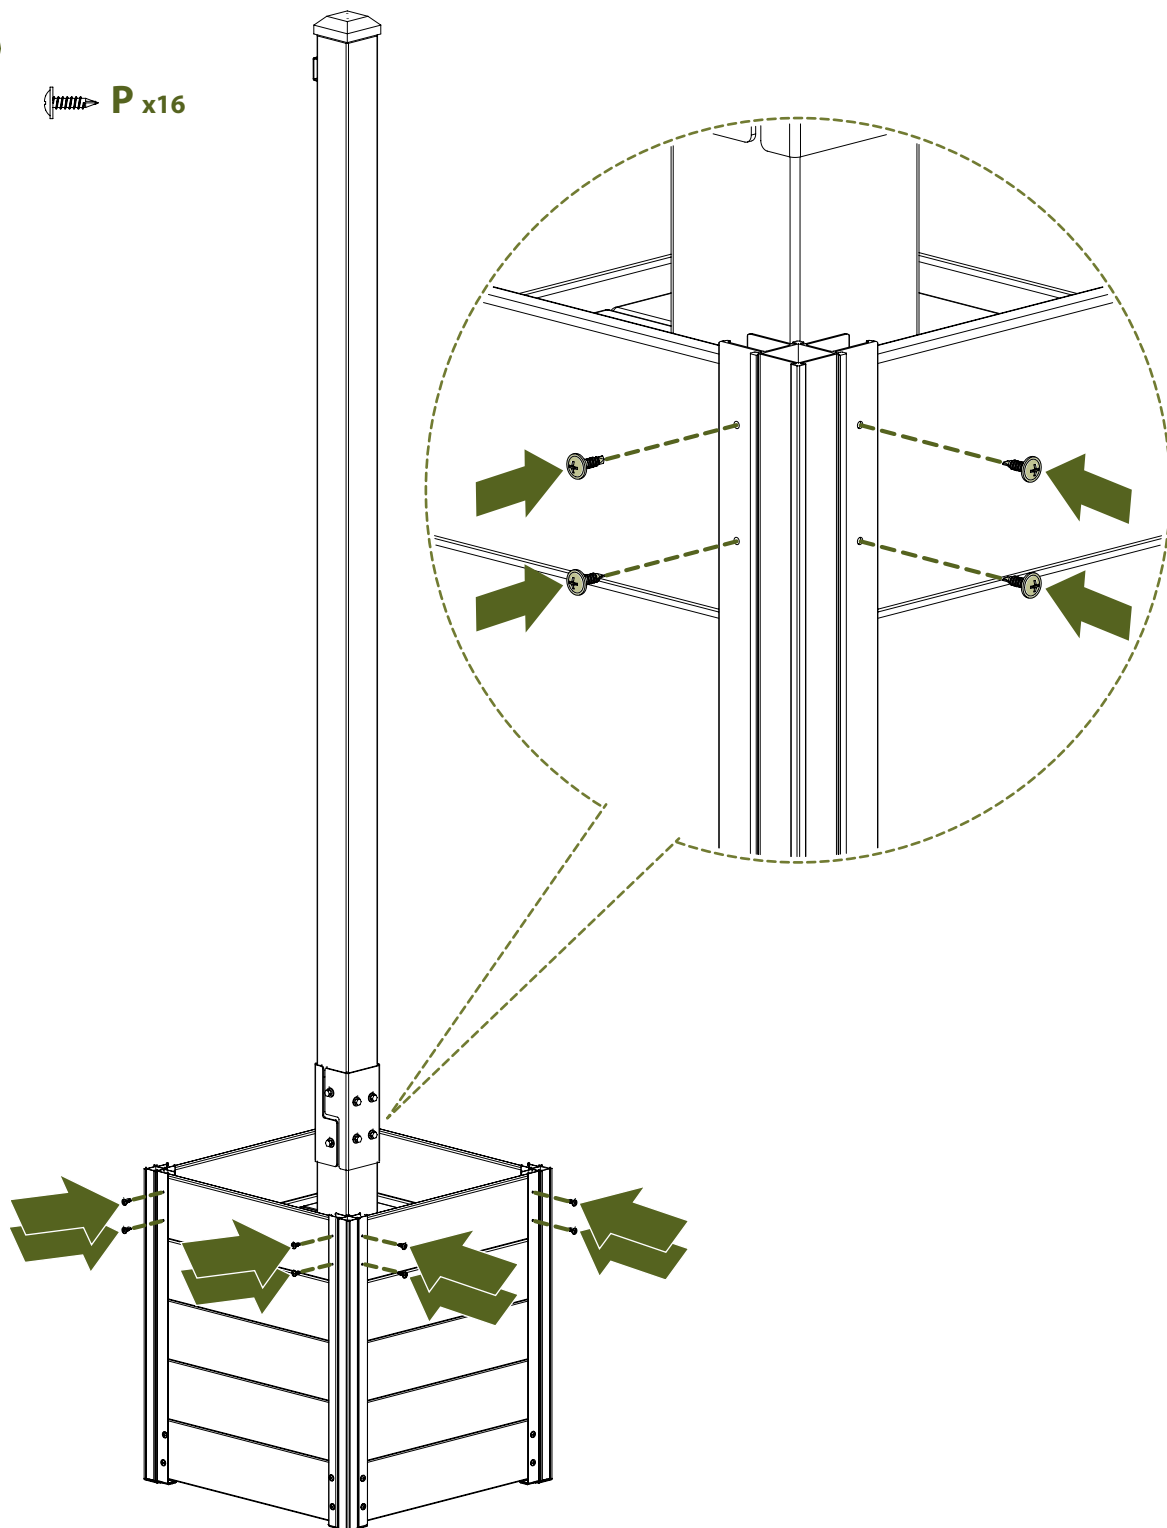

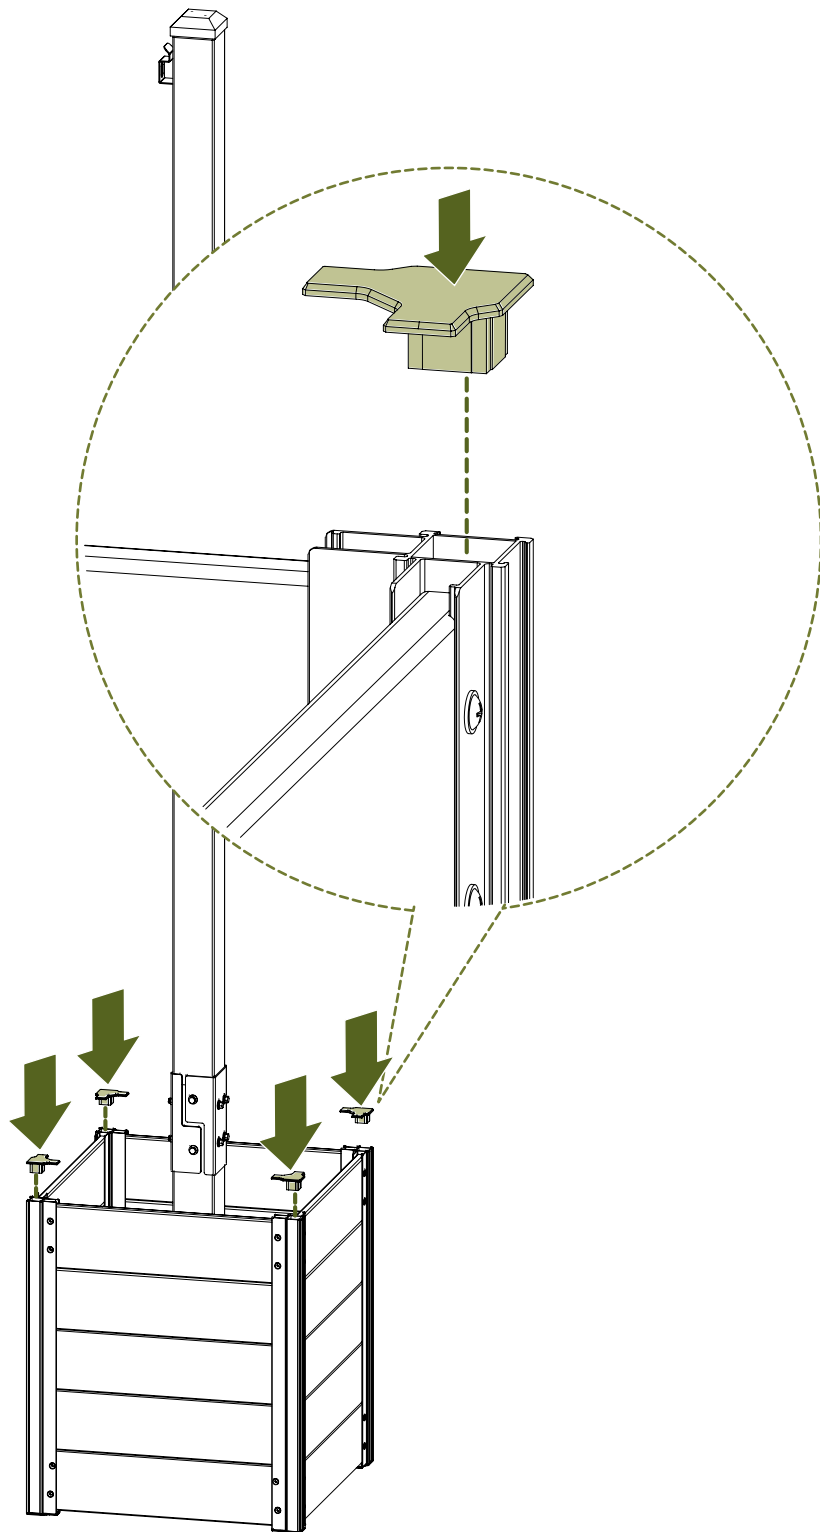
**M x4**

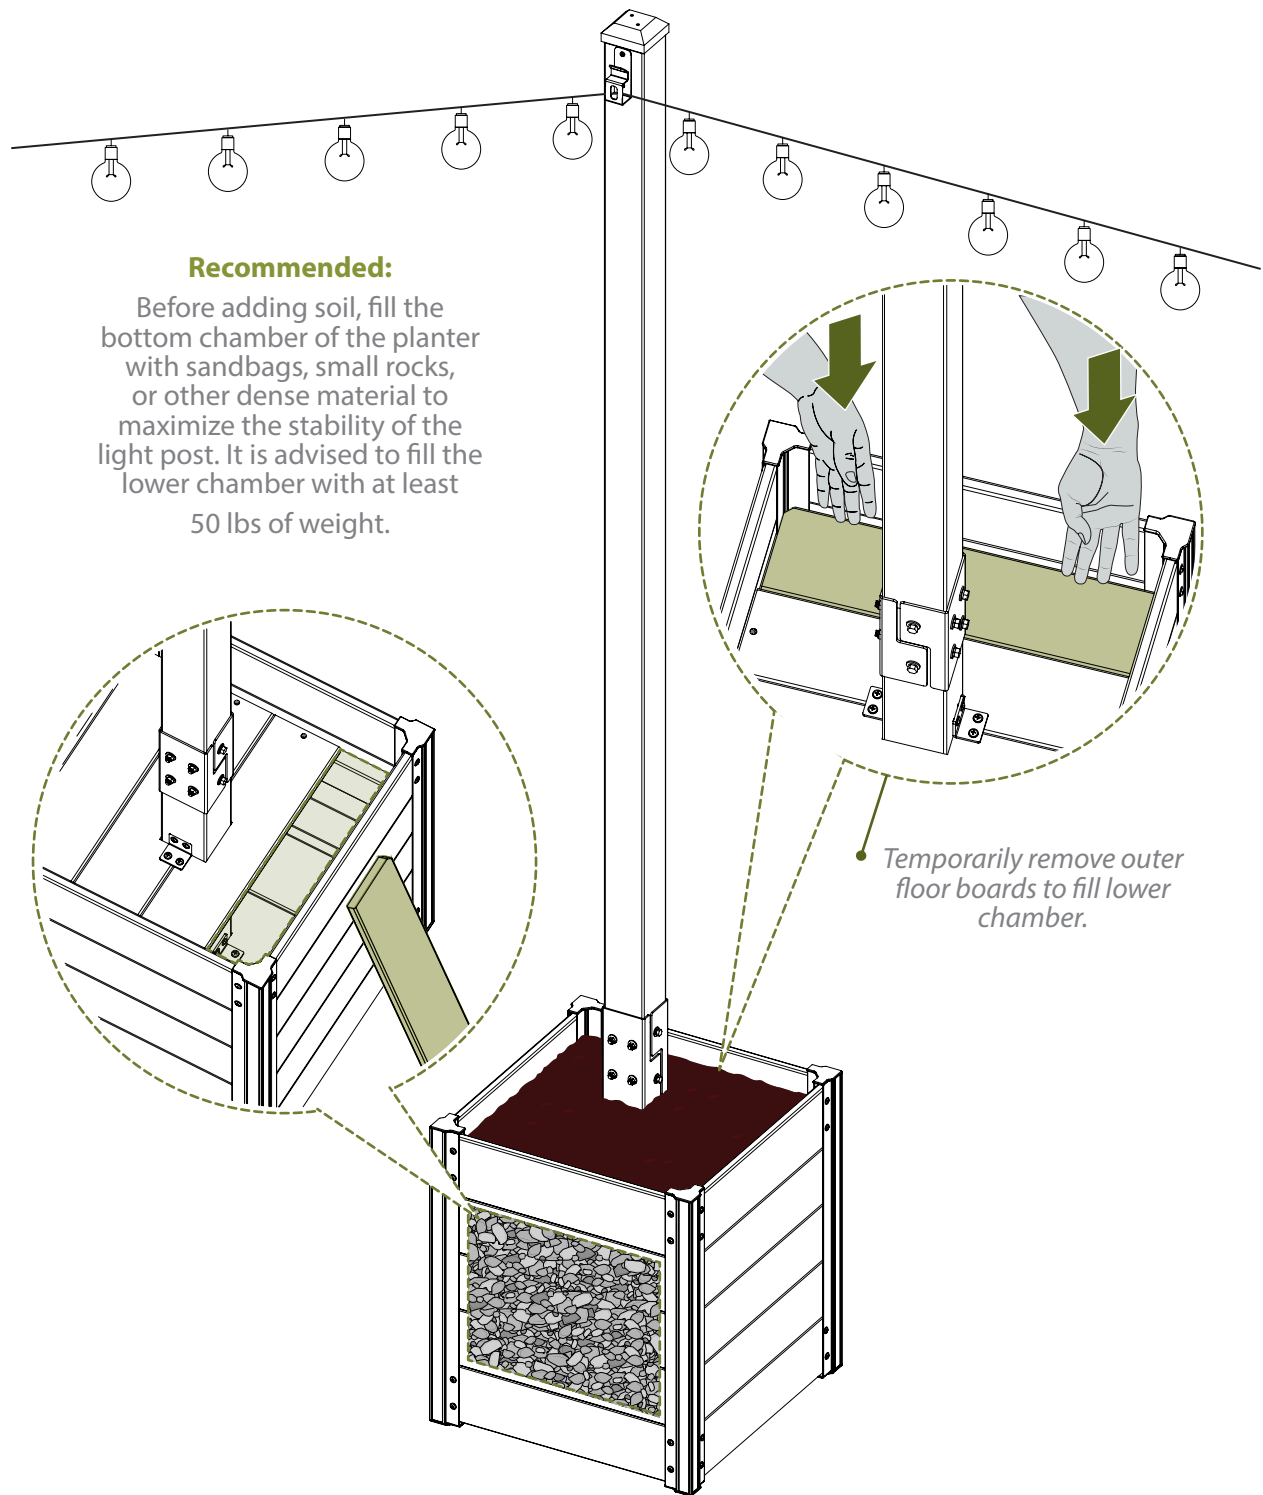

Recommended:

Before adding soil, fill the bottom chamber of the planter with sandbags, small rocks, or other dense material to maximize the stability of the light post. It is advised to fill the lower chamber with at least 50 lbs of weight.

Temporarily remove outer floor boards to fill lower chamber.

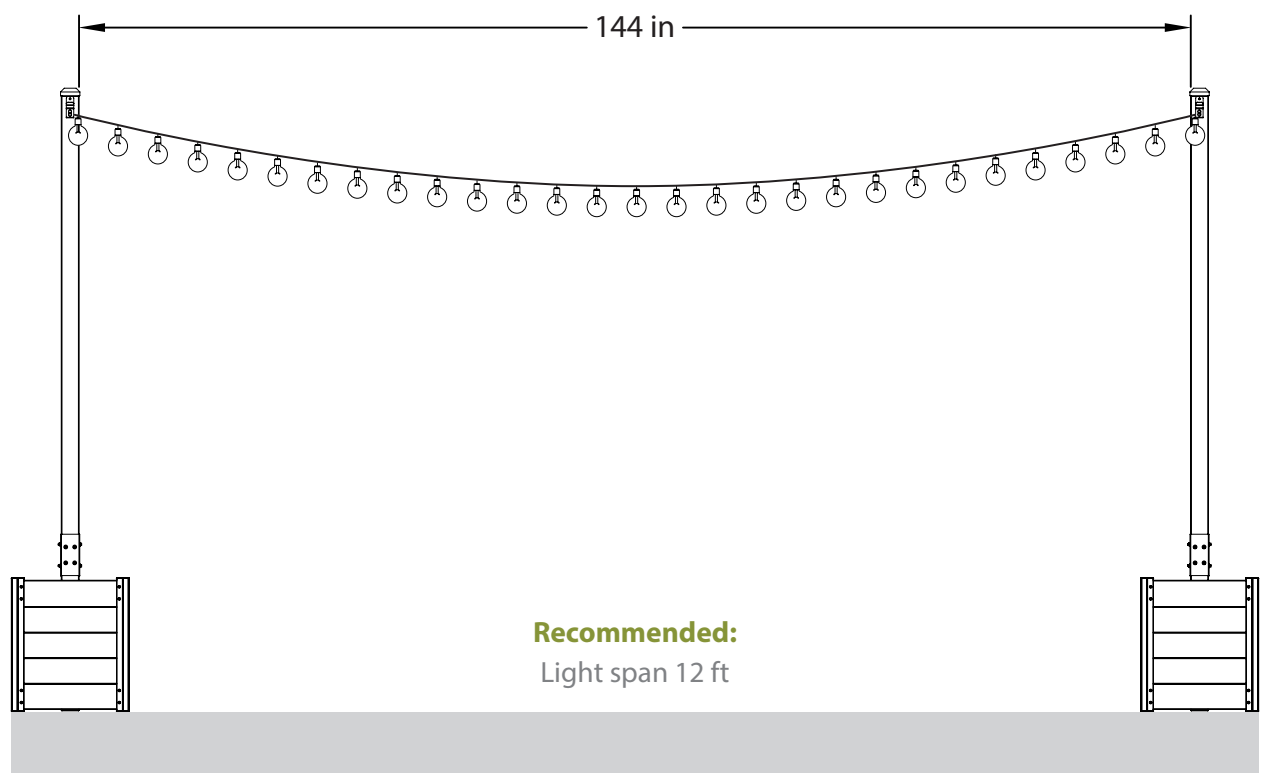



ZIPPITY

Easy Does It!



6935 Reames Rd. Ste. K.
Charlotte, NC 28216



support@zippity-outdoor.com

704-892-5222
877-234-6196



WWW.ZIPPITY-OUTDOOR.COM