


ASSEMBLY INSTRUCTIONS

DINING TABLE


If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net

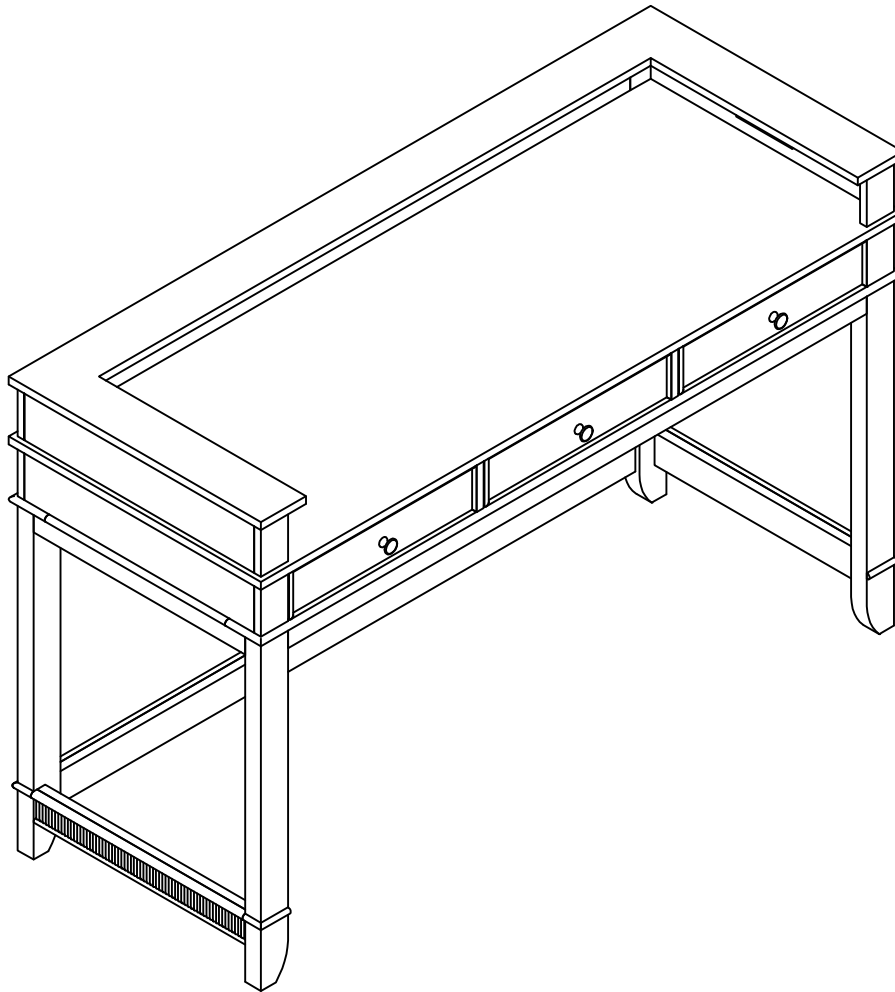







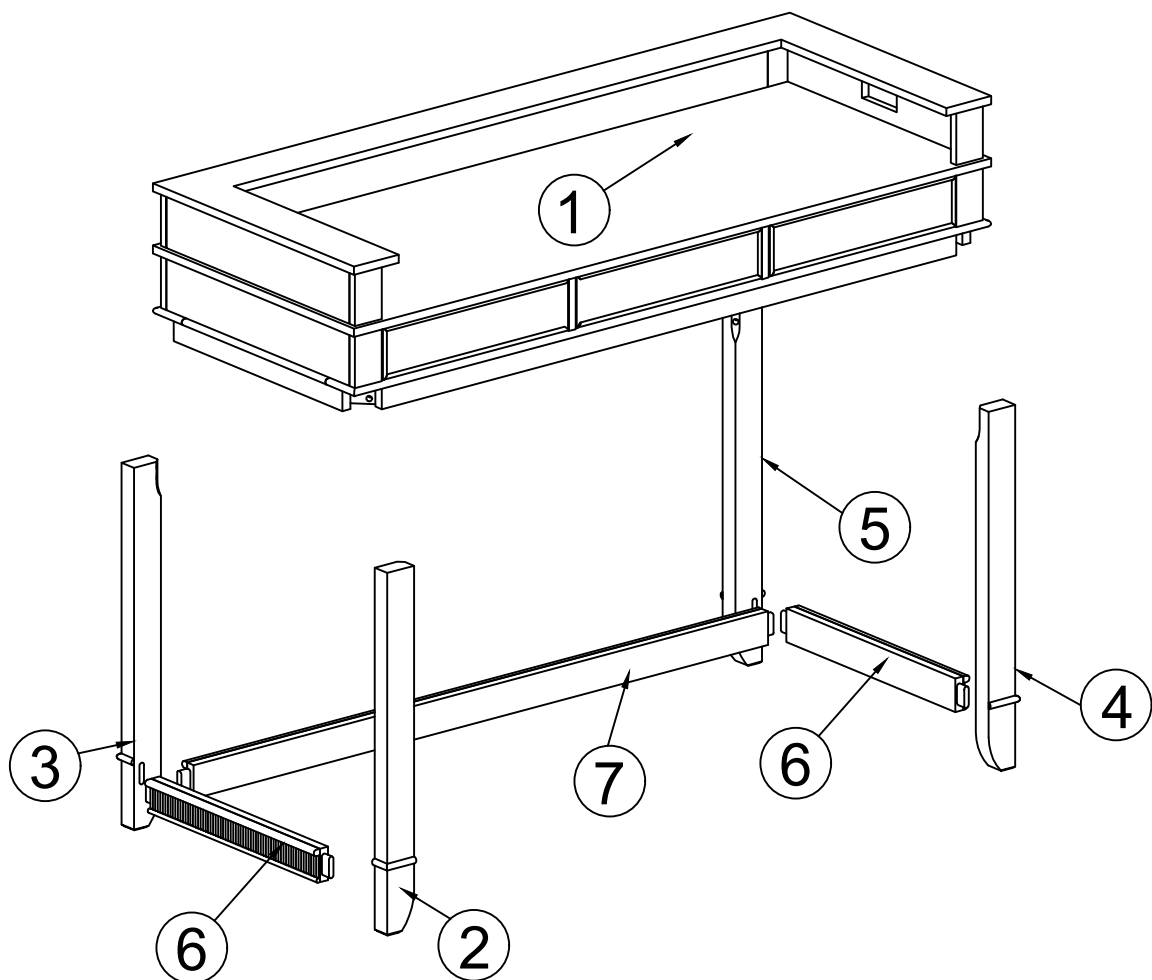


WF309906

IMPORTANT NOTE :

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

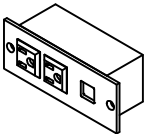


Hardware List For One Table


<div><div>A</div><div><div>Ø1/4" x 50mm</div><div>BOLT (8PCS)</div></div></div>	<div><div>B</div><div><div>Ø1/4" x 11mm</div><div>LOCK WASHER (8PCS)</div></div></div>	
<div><div>C</div><div><div>Ø1/4" x 18mm</div><div>FLAT WASHER (8PCS)</div></div></div>	<div><div>D</div><div><div>4MM</div><div>ALLEN (1PC)</div></div></div>	
<div><div>E</div><div><div>M4 x 45mm</div><div>SCREW (6PCS)</div></div></div>	<div><div>F</div><div><div>USB (1PC)</div></div></div>	
<div><div>G</div><div><div>M4 x 15mm</div><div>SCREW (2PCS)</div></div></div>	<div><div>H</div><div><div>KNOB (3PCS)</div></div></div>	<div><div>K</div><div><div>M4x 35mm</div><div>BOLT (3PCS)</div></div></div>
2 OF 8		

Part List For One Chair


①	②	③
TABLE TOP (1PC)	LEG 1 (1PC)	LEG 2 (1PC)
④	⑤	⑥
LEG 3 (1PC)	LEG 4 (1PC)	SHORT STRECHER(2PCS)
⑦		
LONG STRECHER (1PC)		

STEP 1:

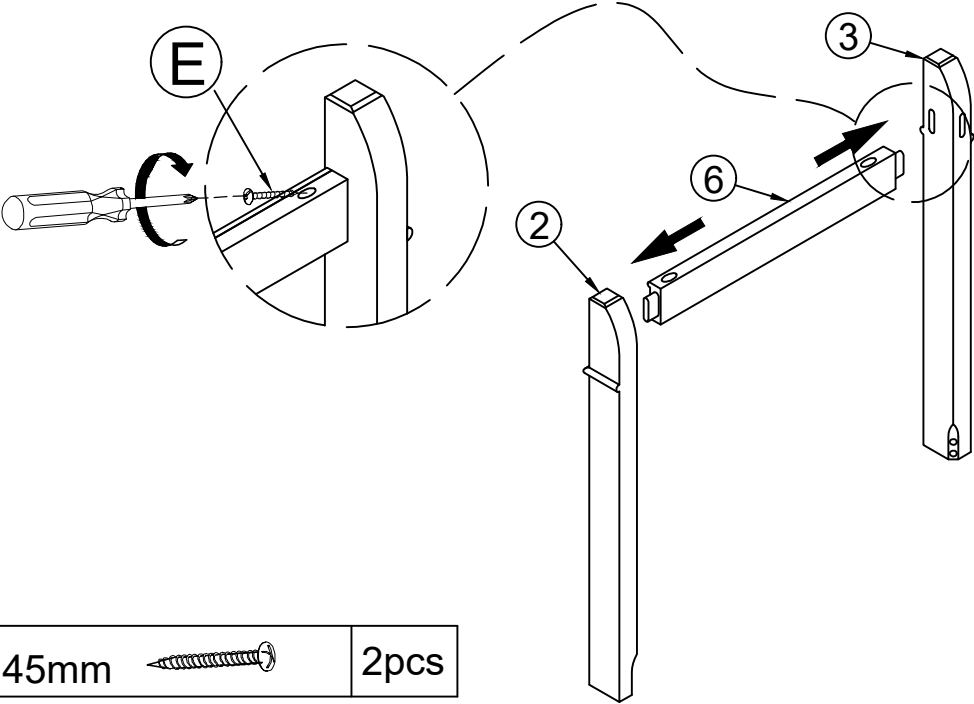




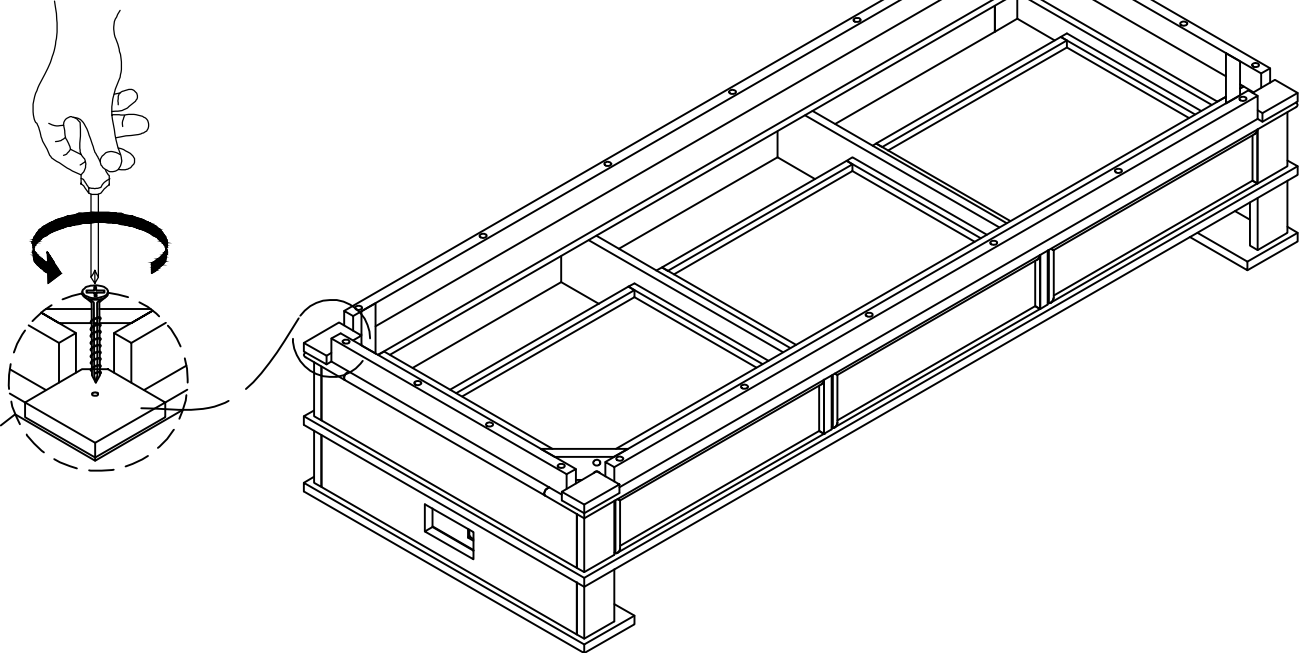

E	M4 x 45mm		2pcs
---	-----------	---	------

STEP 2:

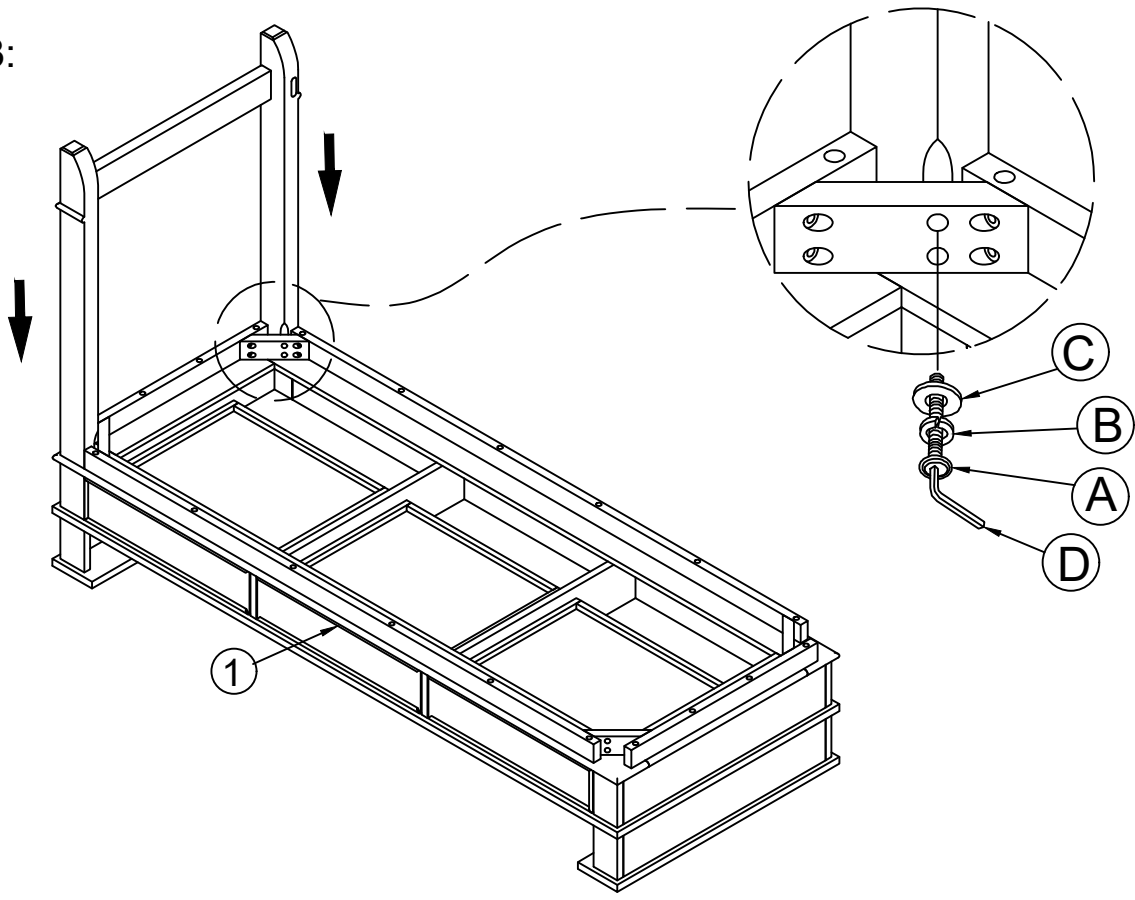


STEP 3:




A	Ø1/4"x50mm		4pcs	B	Ø1/4"x11mm		4pcs
C	Ø1/4"x18mm		4pcs	D	4mm		1pc

STEP 4:

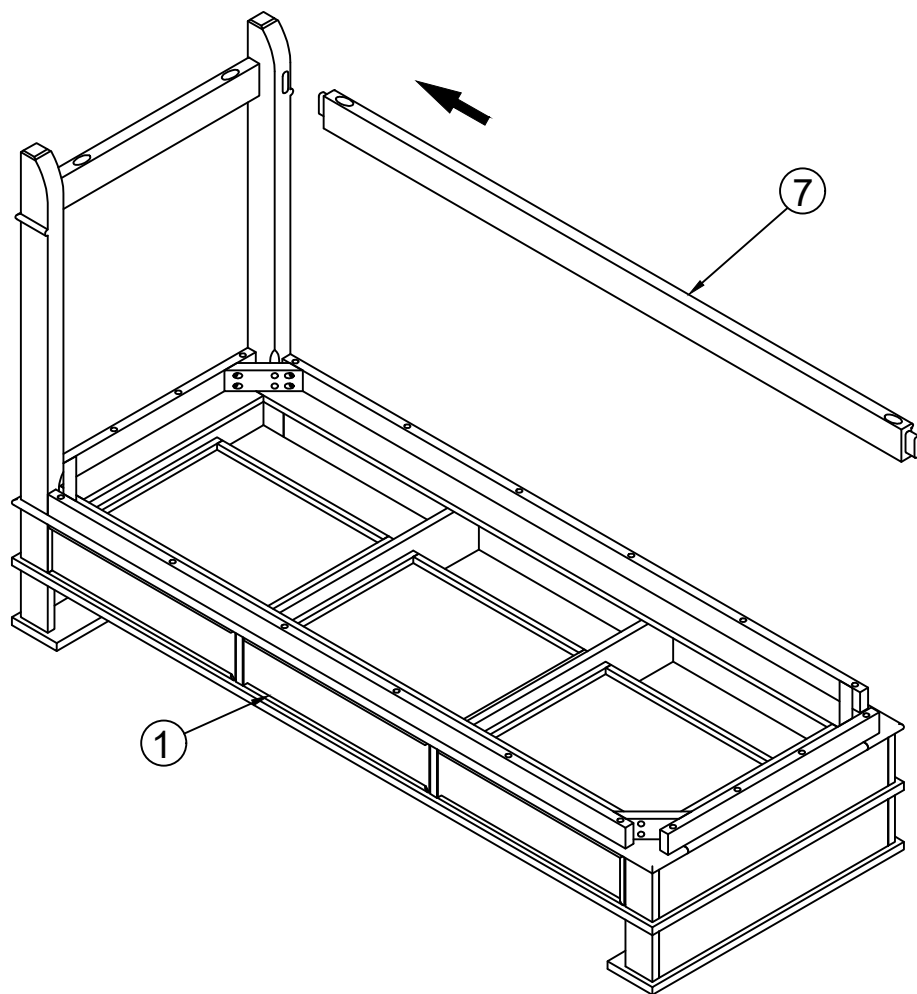

STEP 5:

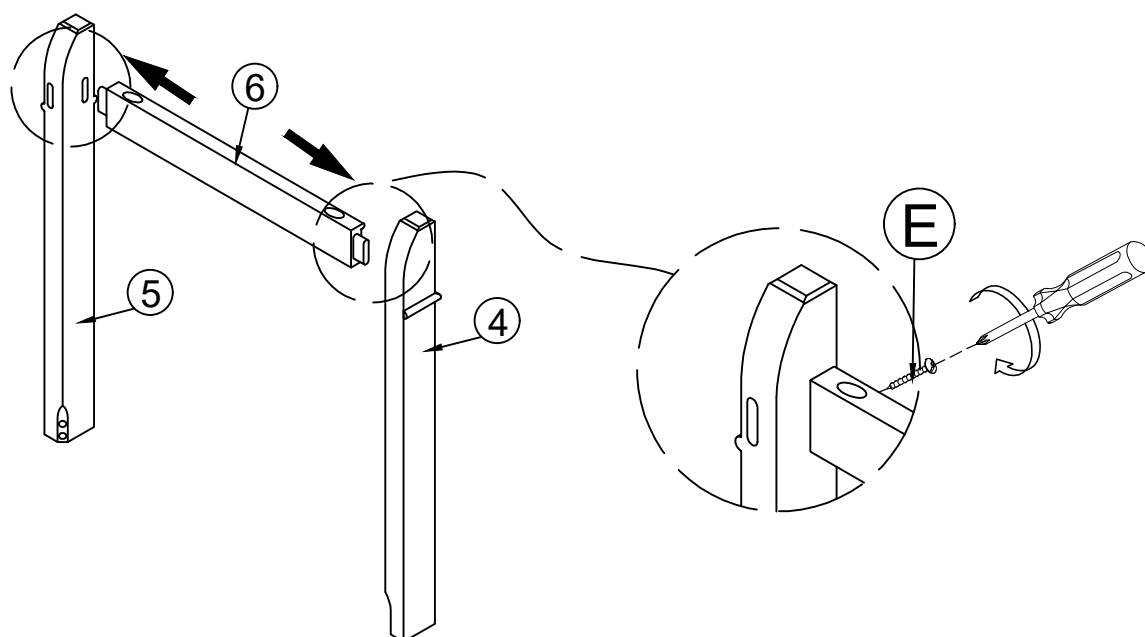


E






M4 x 45mm

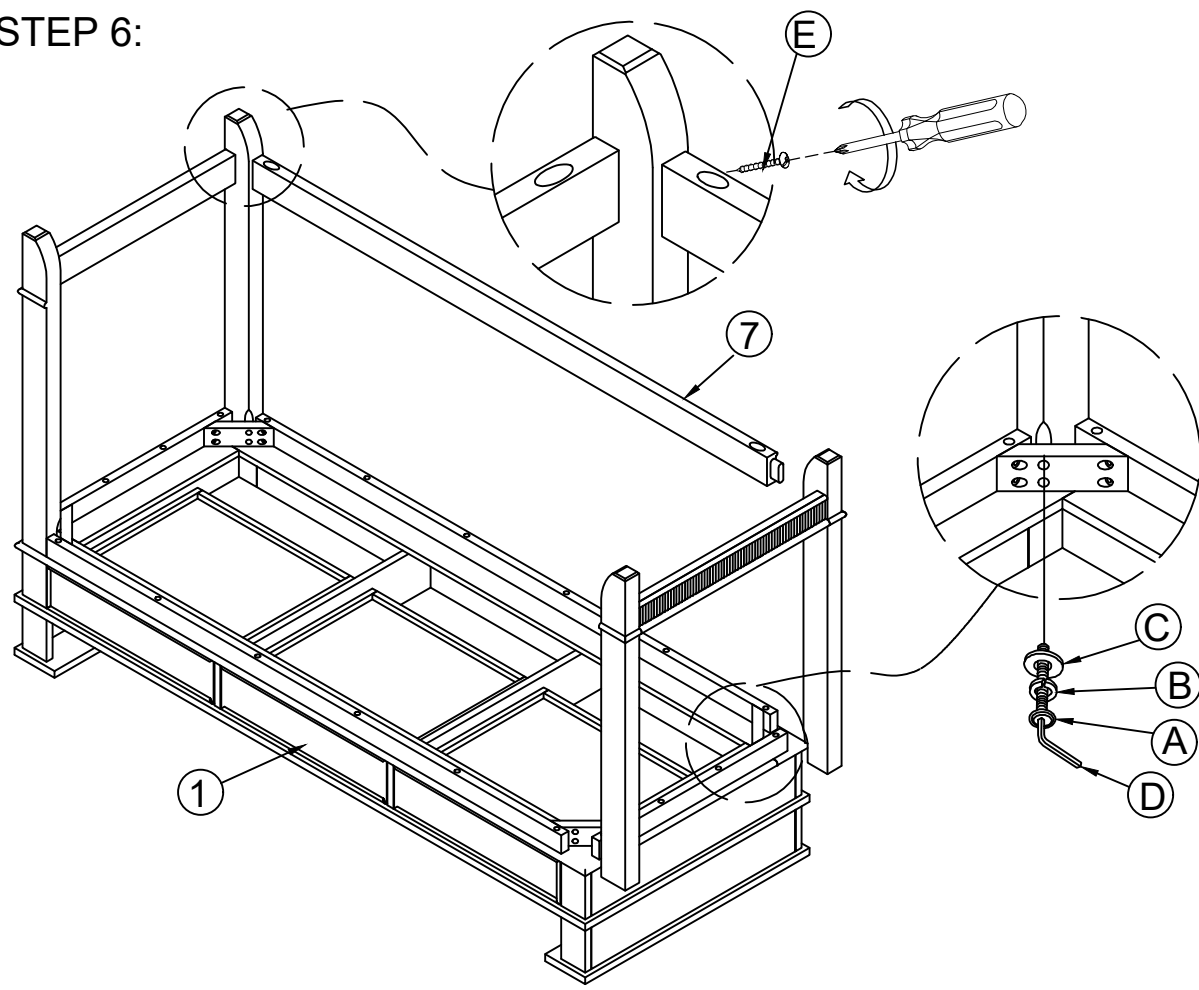


2pcs

STEP 6:




A	Ø1/4"x50mm		4pcs	B	Ø1/4"x11mm		4pcs
C	Ø1/4"x18mm		4pcs	D	4mm		1pc
E	M4 x 45mm		2pcs				

STEP 7:

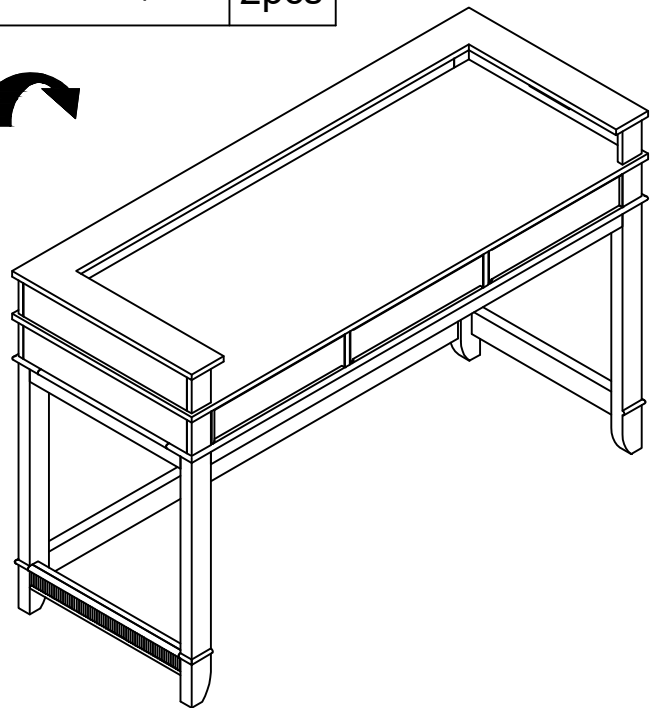

STEP 8:

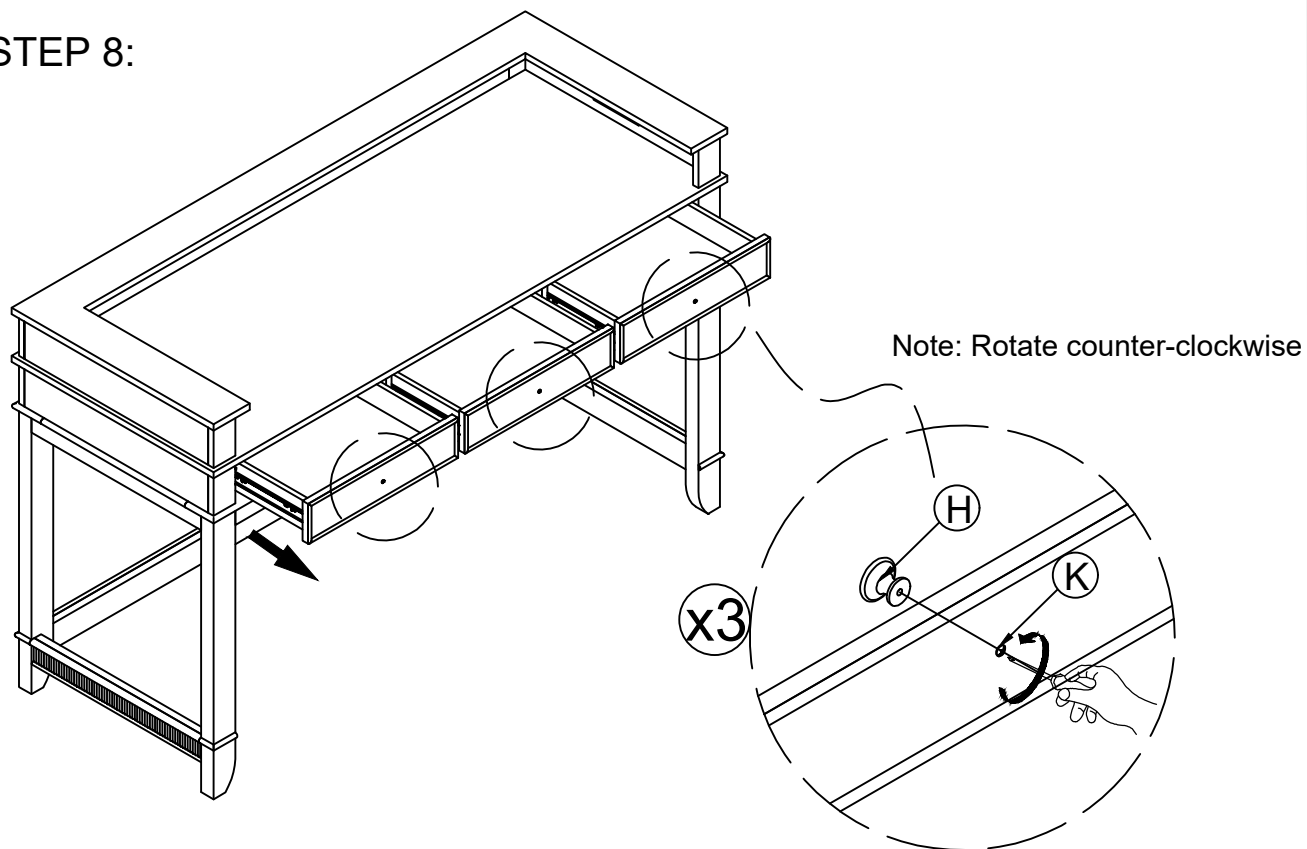

H

KNOB



3pcs


K

M4x 35mm




3pcs

STEP 9:

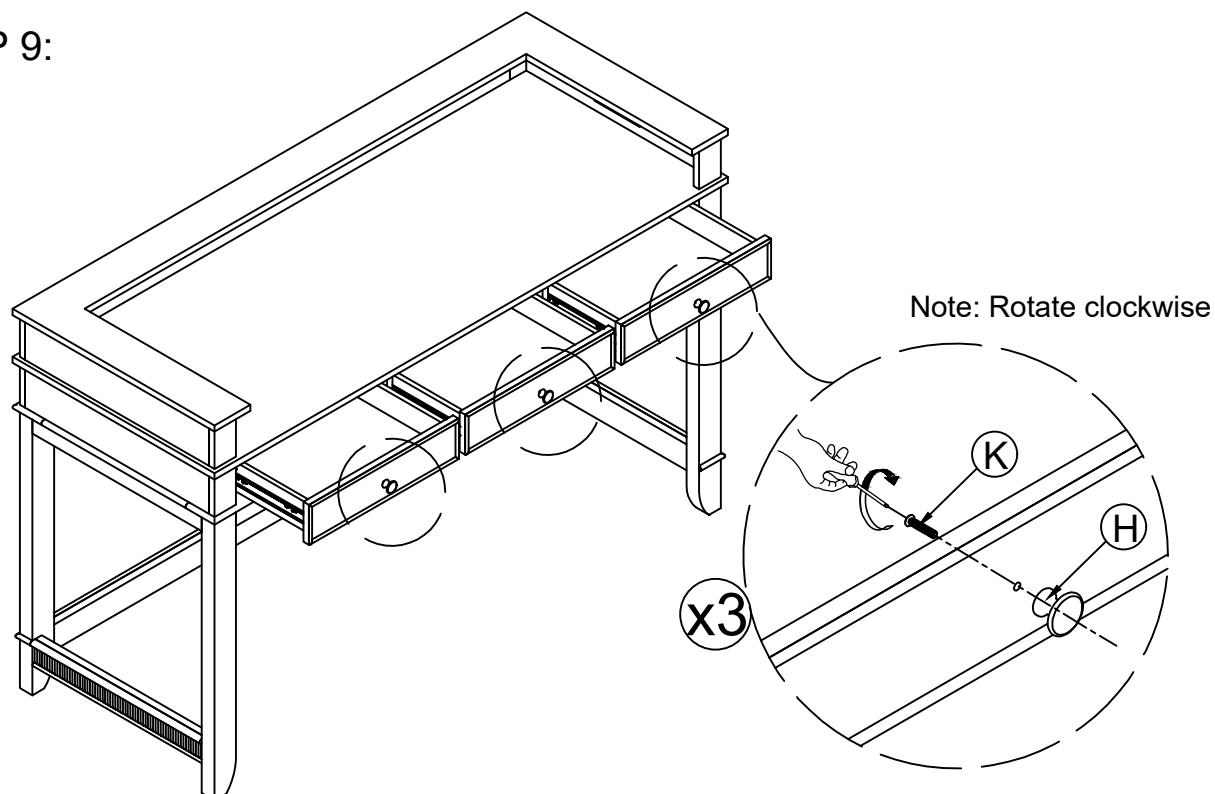

STEP 10:

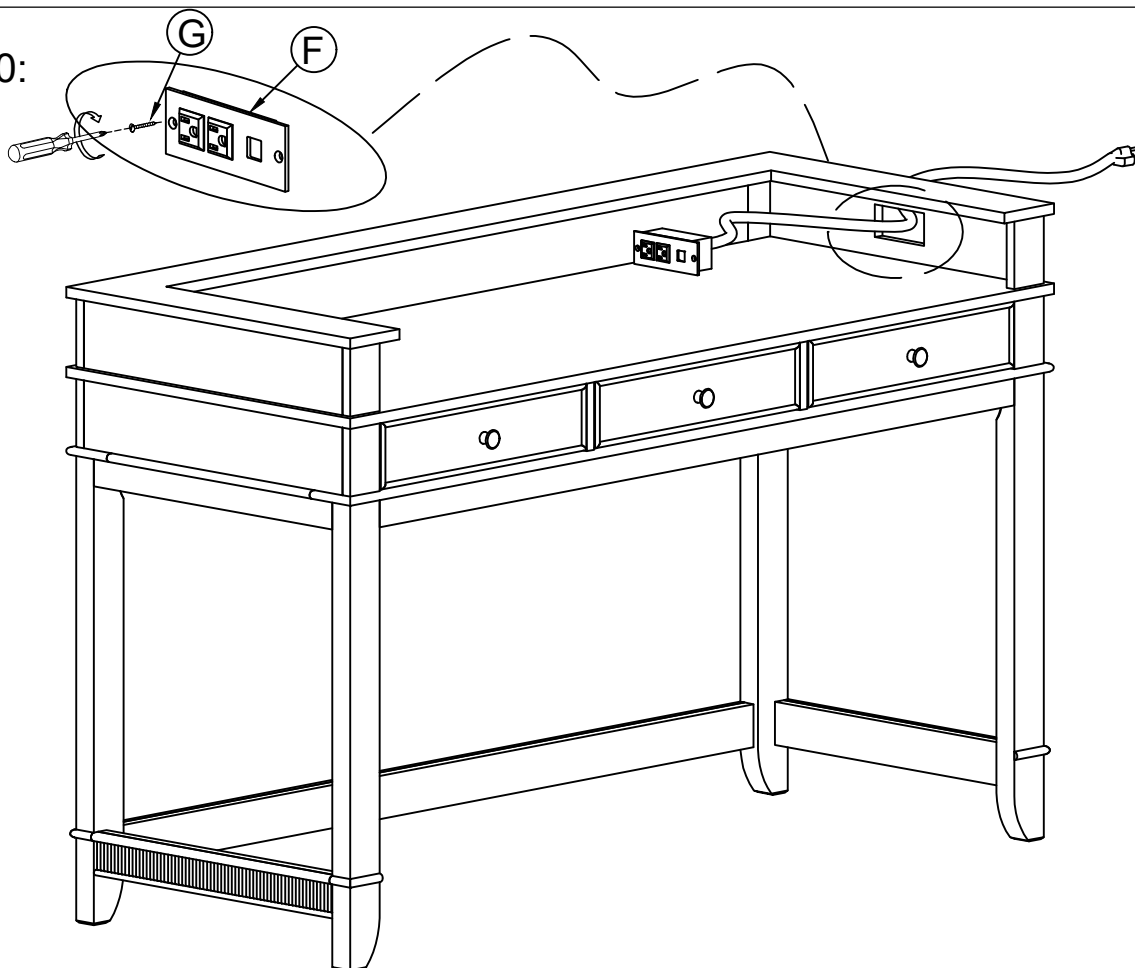

F

USB



1pc

G

M4 x 15mm



2pcs

STEP 11:

