


## BP31P2 INSTALLATION INSTRUCTIONS

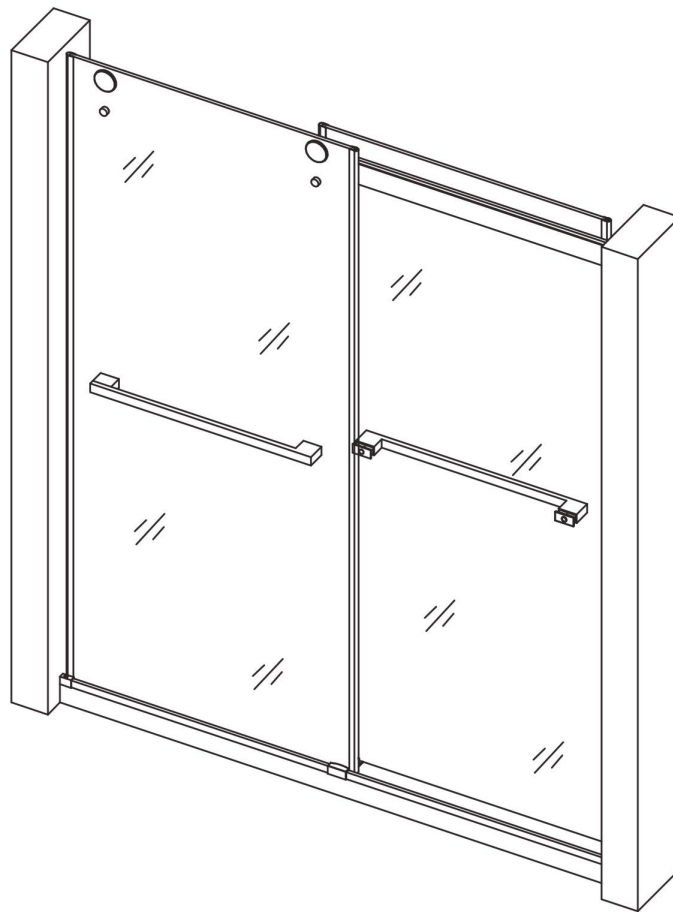



---

## General information

Please inspect the product immediately upon receipt for possible transit damage, missing packs/parts or manufacturing defects. Damage reported later will not be accepted. Please handle the product with care voiding knocks and shock loading to all sides and edges of the glass

**Note:** Safety glass (tempered glass) can not be re-worked.

- Please read these instructions carefully before installation.
- Special care should be taken when drilling walls, to avoid hidden pipes or electrical cables.
- Note: this product is heavy and requires two persons to install it.


## Aftercare instructions

- After use, your shower should be cleaned with soap and water. This is particularly important in districts with "hard water" where insoluble lime salts may be deposited and accumulated
- Cleaners of gritty or abrasive nature should not be used. Care should be taken to avoid contact with strong chemicals such as organic solvents and strippers.
- Glass cleaners can be used but with caution, if in doubt contact the manufacturer of the cleaner in question.
- Please keep these instructions for aftercare and customer service details.







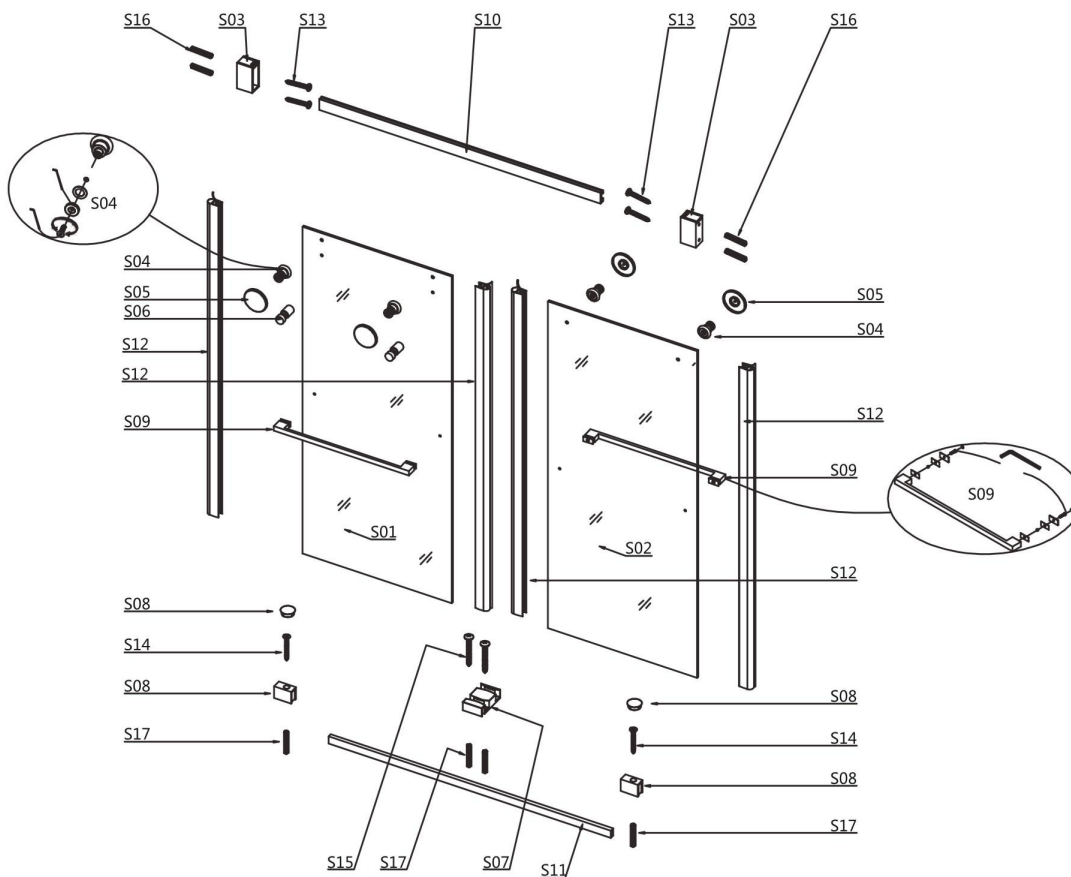











---

Email: [info@exbriteusa.com](mailto:info@exbriteusa.com) Hotline: +1 302 336 8180

## Shower parts




## Hardware parts list

Diagram	Ref	Description	QTY
 Ref:S01	S01	Glass door panel	1
 Ref:S02	S02	Glass door panel	1
 Ref:S03	S03	Stainless steel wall brackets	2
 Ref:S04	S04	Brass+POM rollers	4
 Ref:S05	S05	ABS roller caps	4
 Ref:S06	S06	Stainless steel stopper	2
 Ref:S07	S07	ABS guider	1
 Ref:S08	S08	End of threshold cover cap kit	2
 Ref:S09	S09	Stainless steel towel bar	2
 Ref:S10	S10	Stainless steel top rail	1
 Ref:S11	S11	Aluminum waterproof strip	1
 Ref:S12	S12	PVC waterproof seal strip	4
 Ref:S13	S13	Self drilling screws (ST4.8x40)	4
 Ref:S14	S14	Self drilling screws (ST3.9x40 )	2
 Ref:S15	S15	Self drilling screws (ST3.9x25)	2
 Ref:S16	S16	Expansion sleeve (Ø8)	4
 Ref:S17	S17	Expansion sleeve(Ø6)	4
 Ref:S18	S18	Stopper strip	1

A. Before beginning the installation, make sure that the door and panel fit within the shower enclosure. To do so, measure the height, width, and depth of the shower enclosure and compare these measures to those of the door and panel.


B. Horizontal and vertical studs are needed on the back and side walls in order to install the water fixtures and accessories. See the appropriate installation guides.

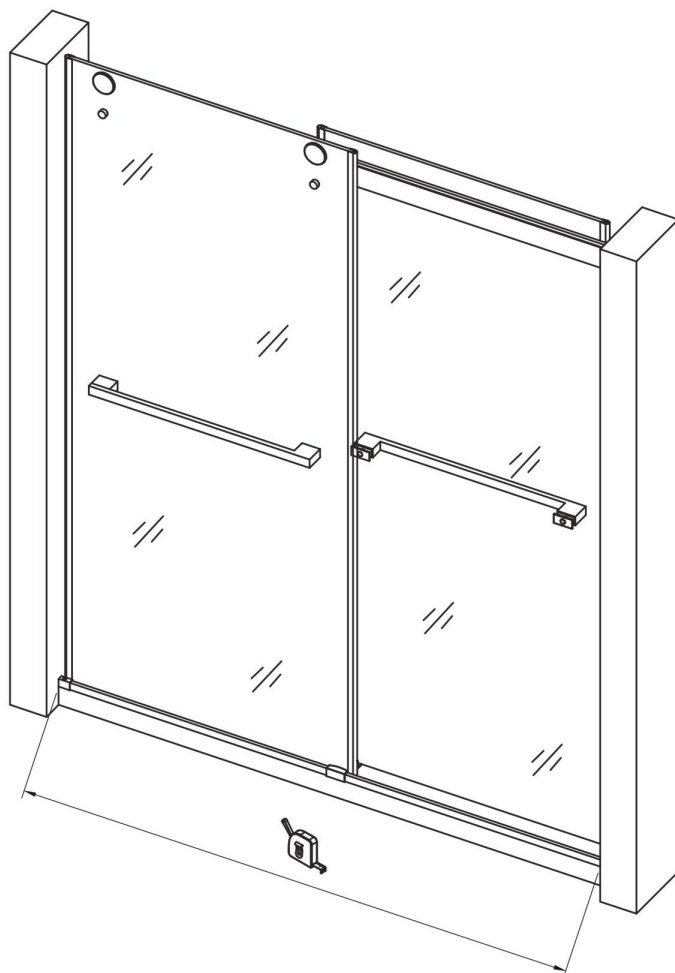


## TOOLS REQUIRED

DESCRIPTION	PART IMAGE	DESCRIPTION	PART IMAGE
Tape measure		Drill	
Spirit level		Flat-head Screwdriver	
Pencil		Cross head Screwdriver	
Ø6mm Drill bit		Hammer	
Ø3mm Drill bit		Silicone Sealant	



Step 1.

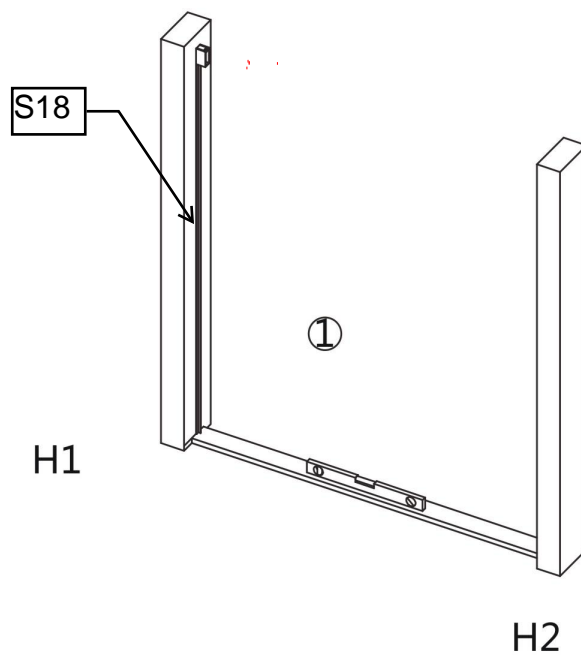



Measure the width of the door enclosure

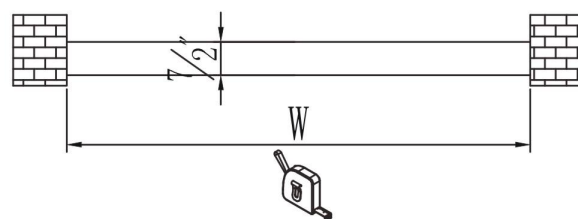



Mark the wall bracket position on the wall with pencil

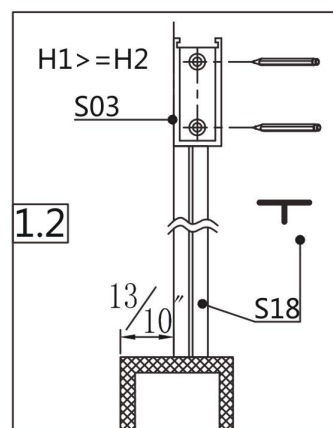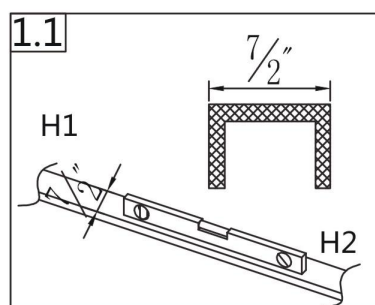




Step 2.

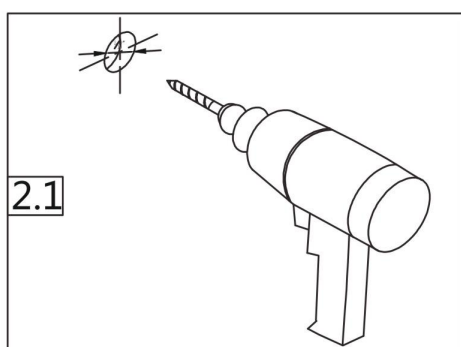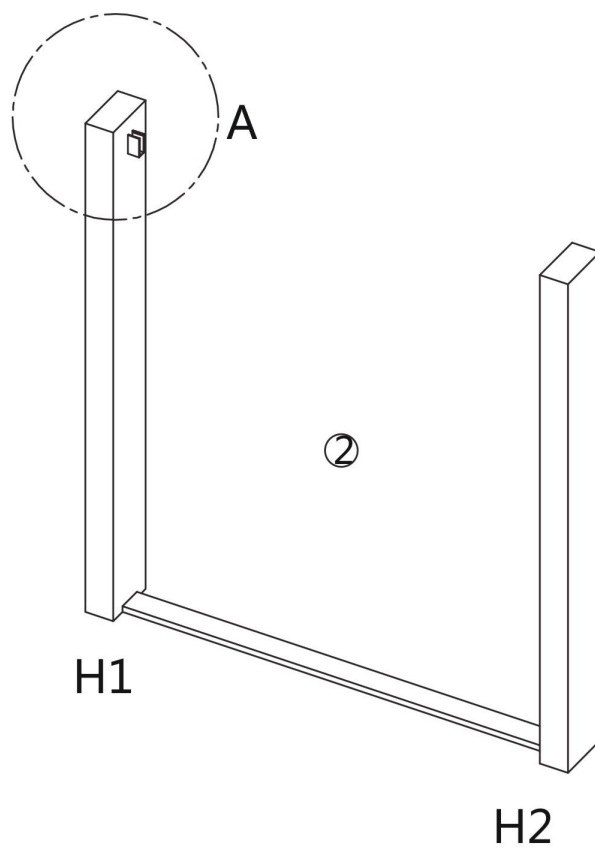



Drill holes on the wall  
After drilling, insert wall anchors.  
Secure the wall bracket on the wall  
by ST4.8\*40 screws

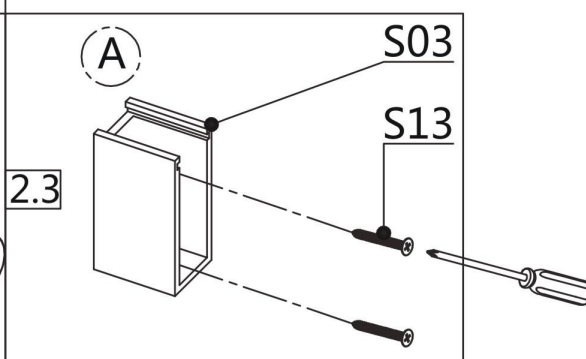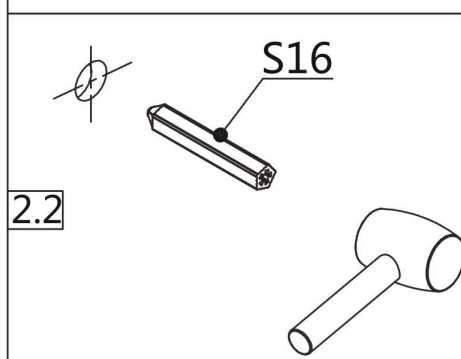

Step 3. Positioning the top rail and the wall bracket.

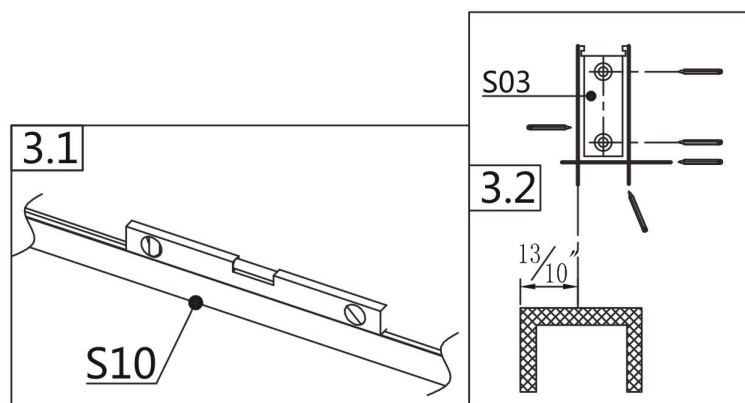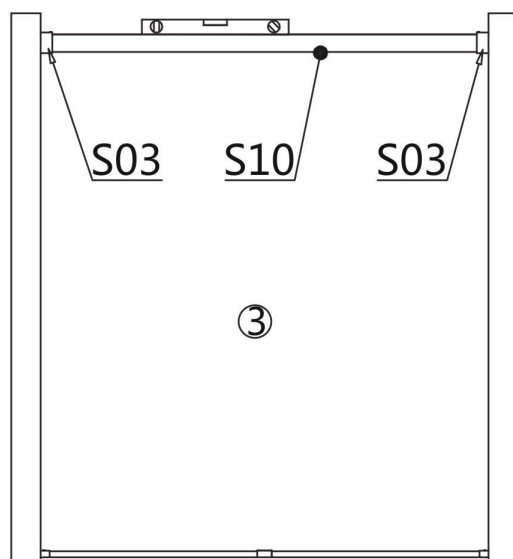
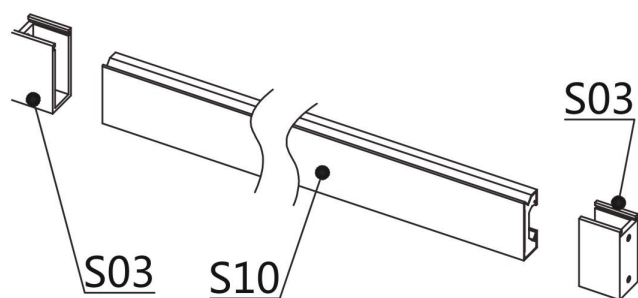


Step 4. Put the the bracket cover on and secure it by screws

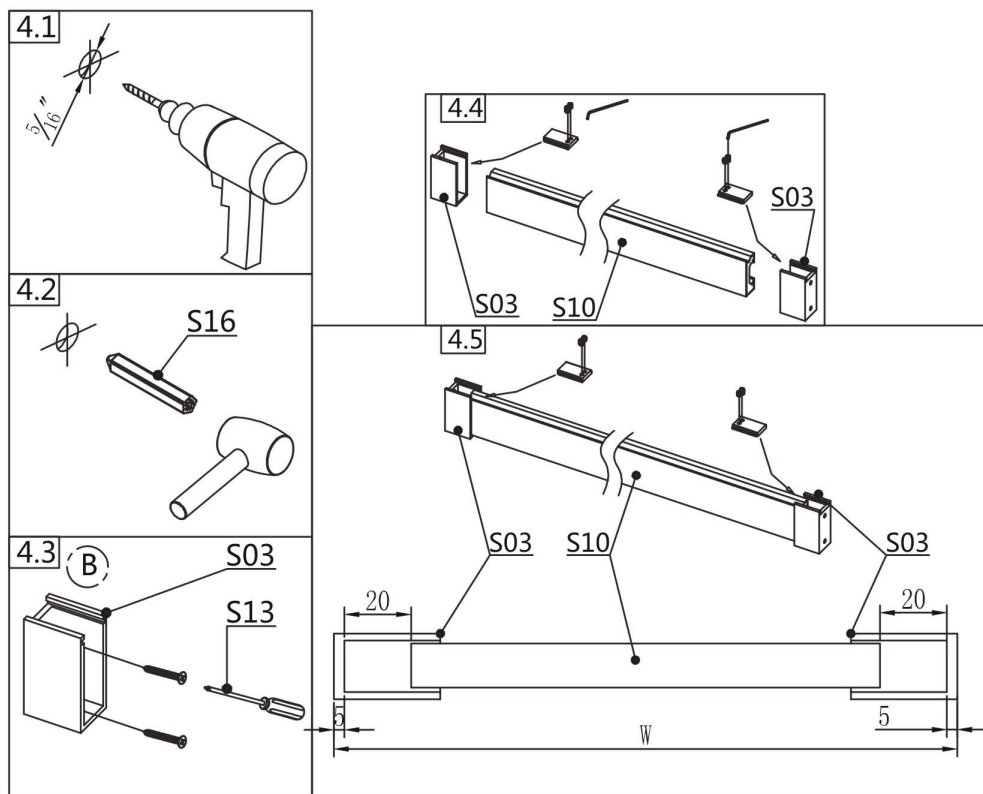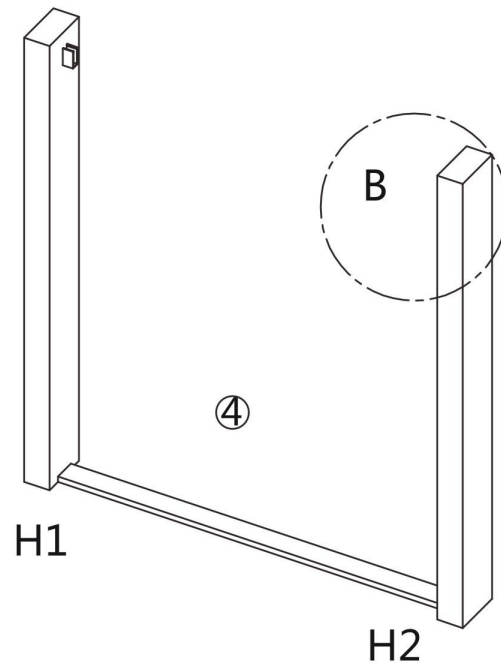






Step 5.

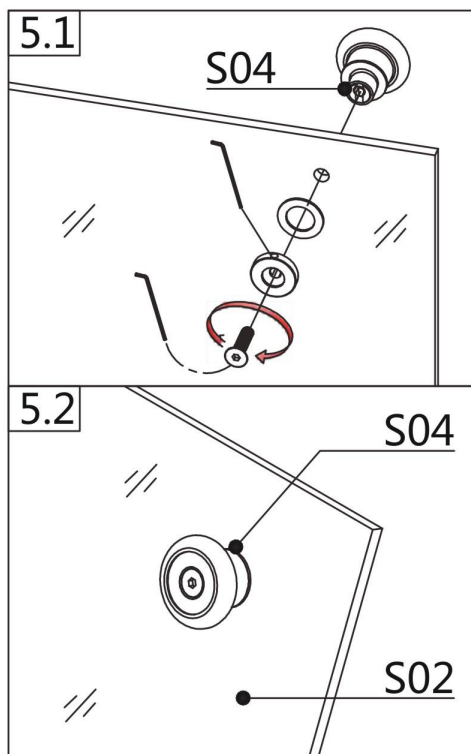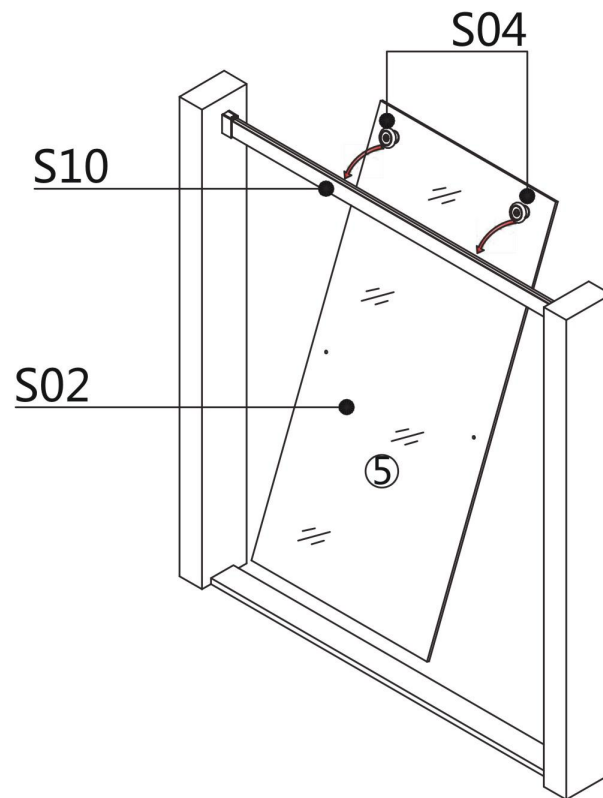



Secure the rollers on the glass  
Put the roller on the rail track

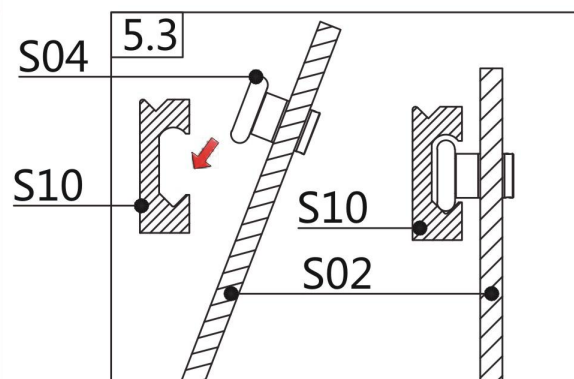




Step 6.

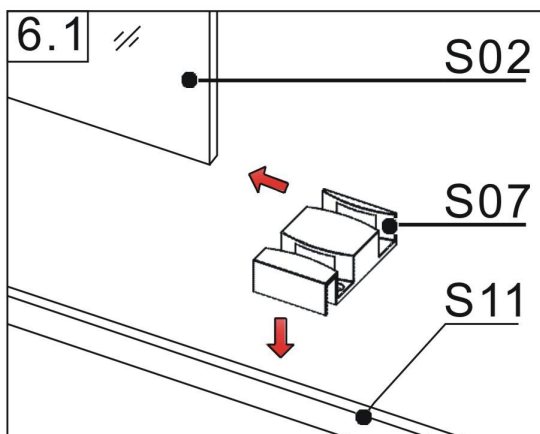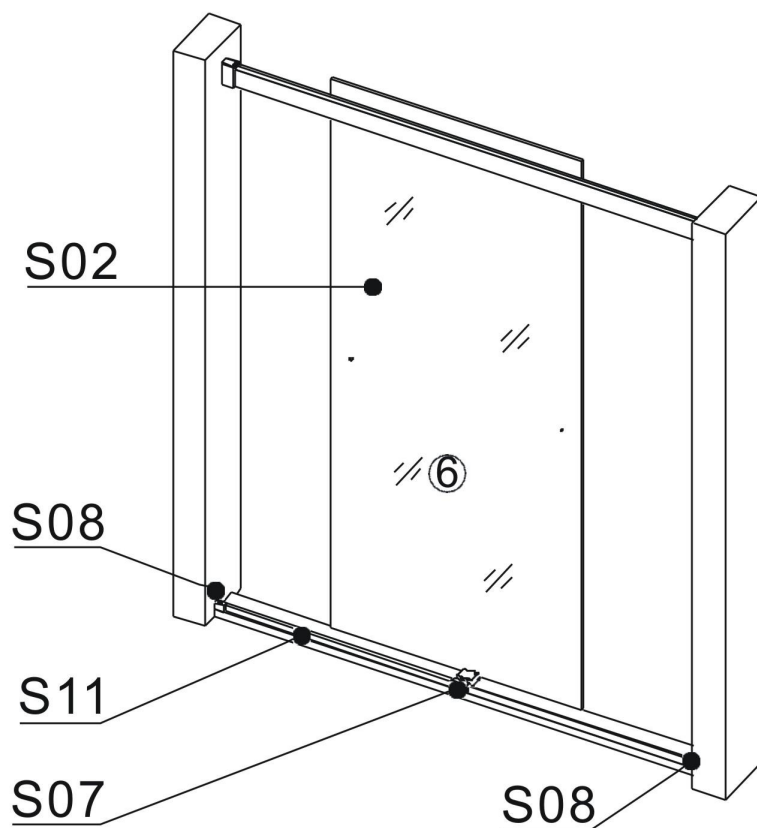



Positioning the ABS guider and aluminum water proof strip

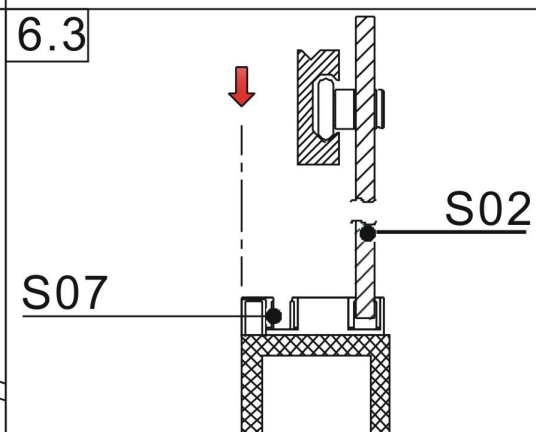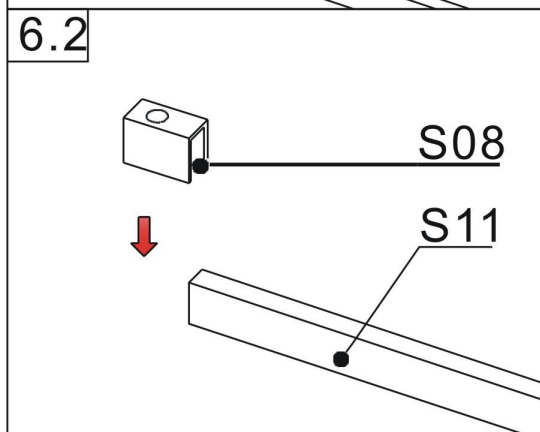



Step 7.

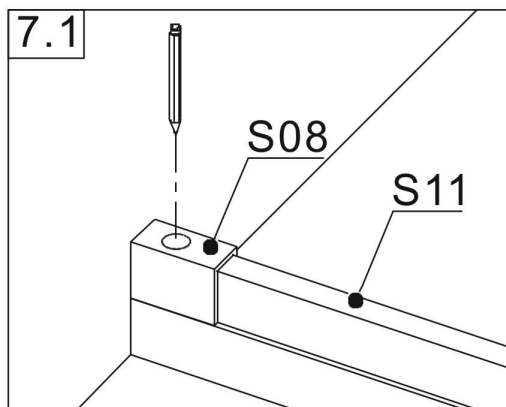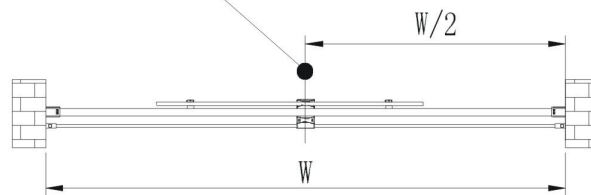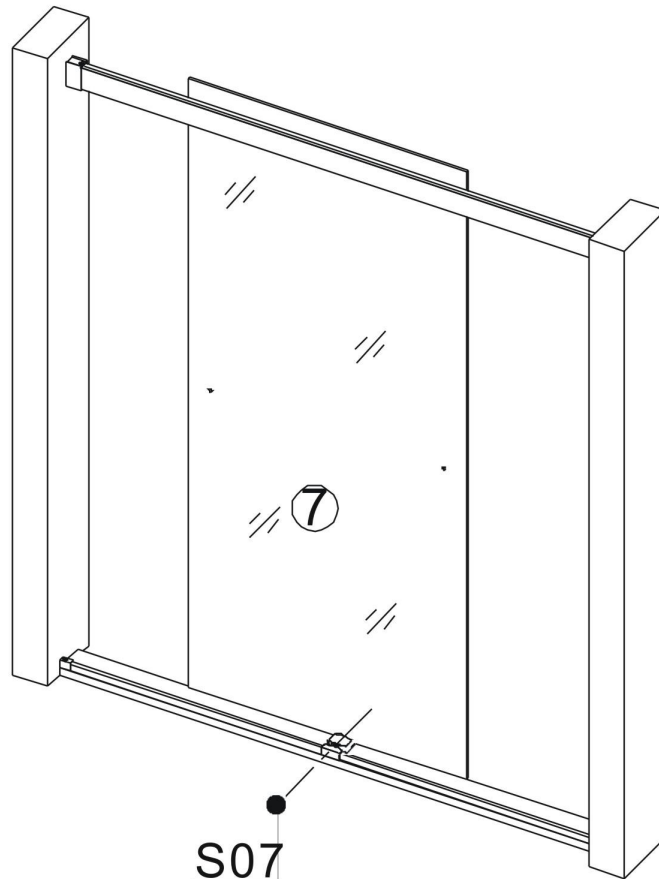


Secure the ABS guider and aluminum water proof strip by screws

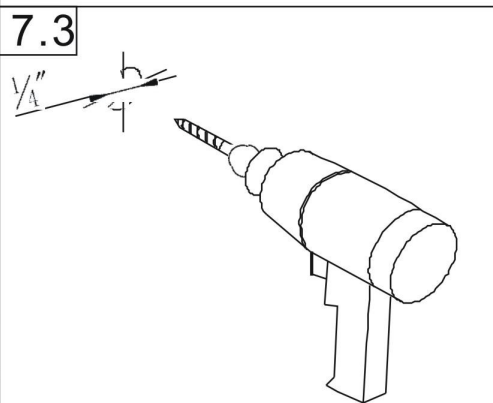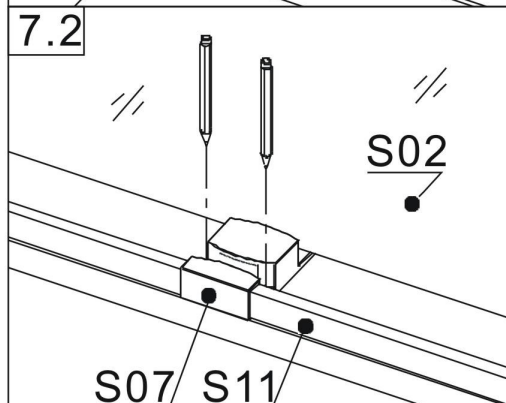


Step 8.

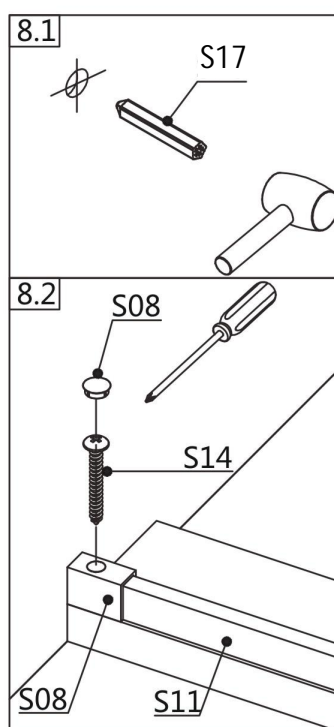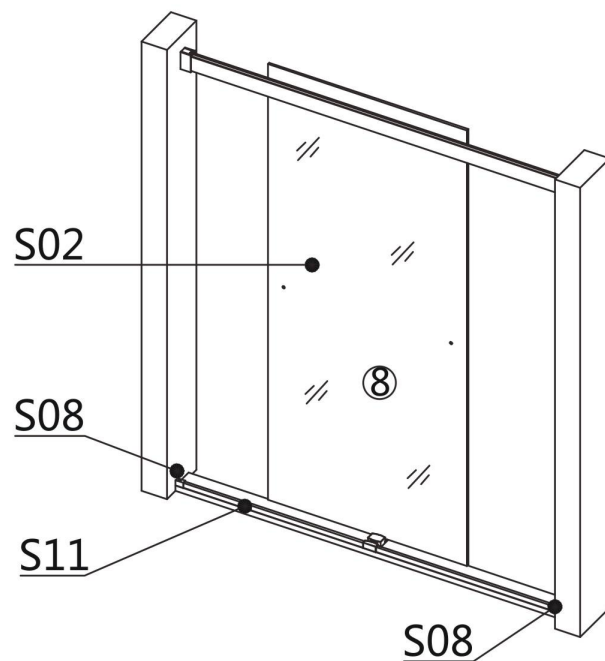



Secure the waterproof strip by ST3.9\*40 screws and guider by ST3.9\*25 screws on the base

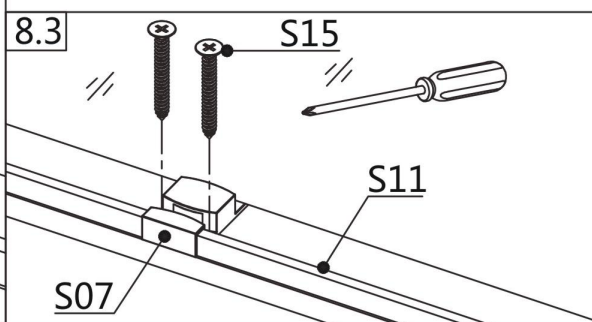


Step 9.

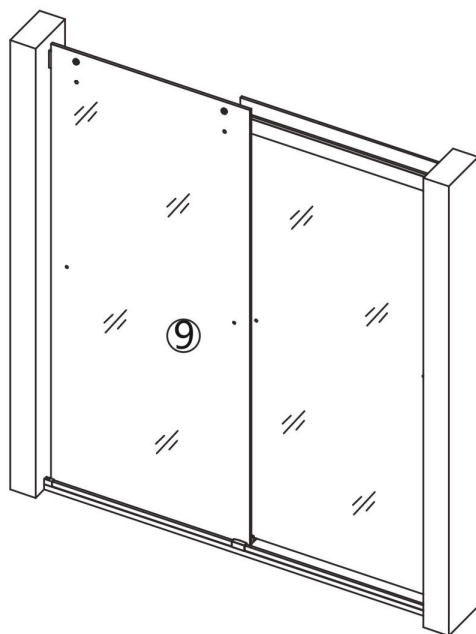


Secure the roller on another panel and put the roller on the top of track

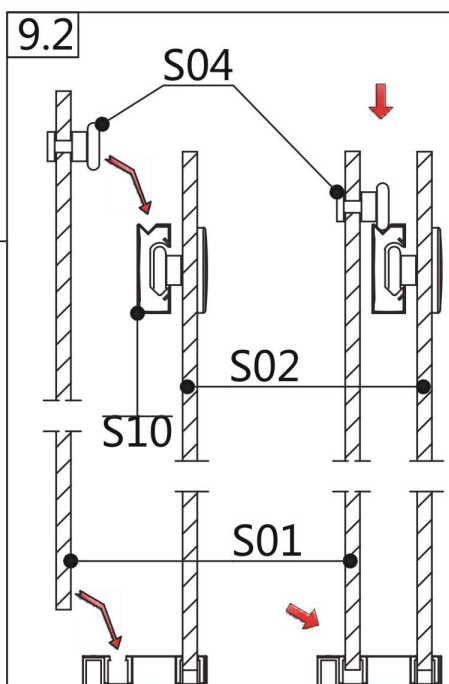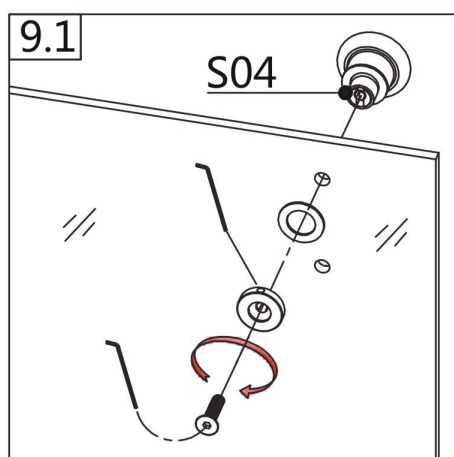

Step 10.

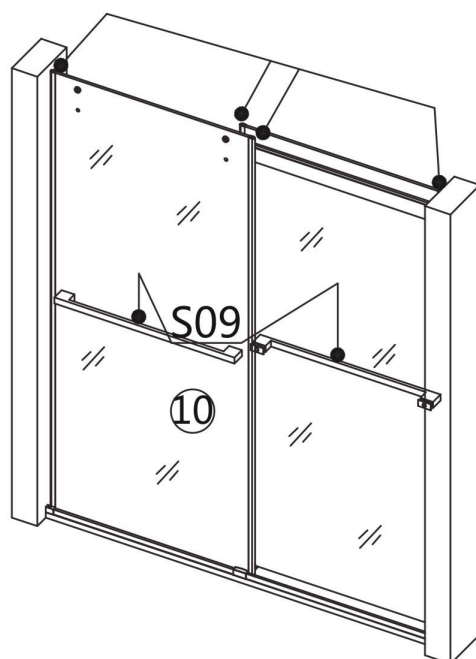


Put the waterproof seal strips on the panel  
Secure the towel bars on the glass

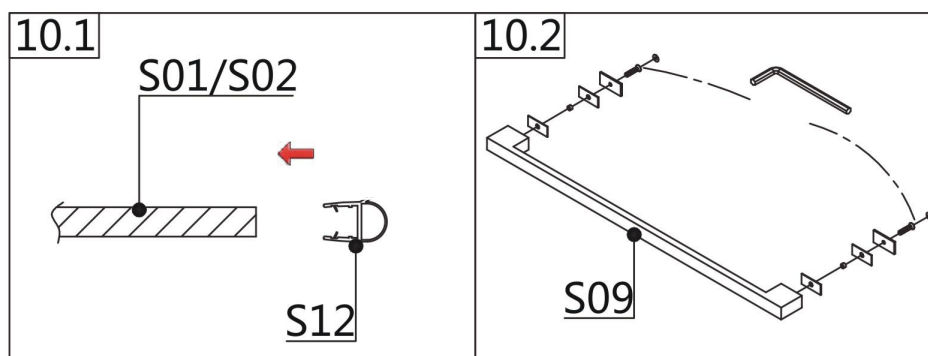


### Step 11.

Rotate the adjust disk to make the door level and make the roller move smoothly.

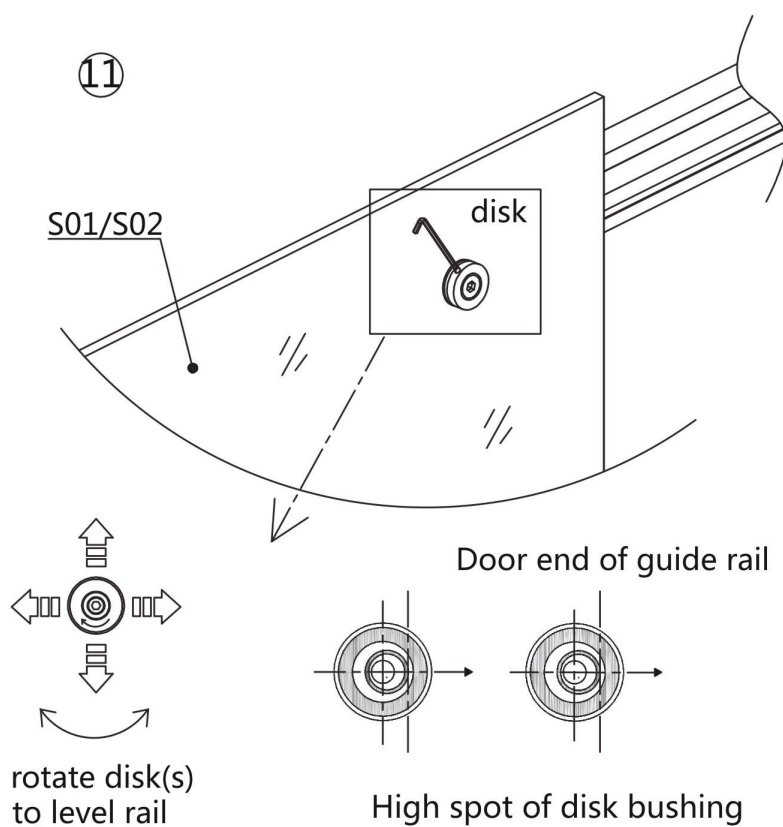

## Step 12.


Secure the stoppers on the panel  
Put the roller caps on.

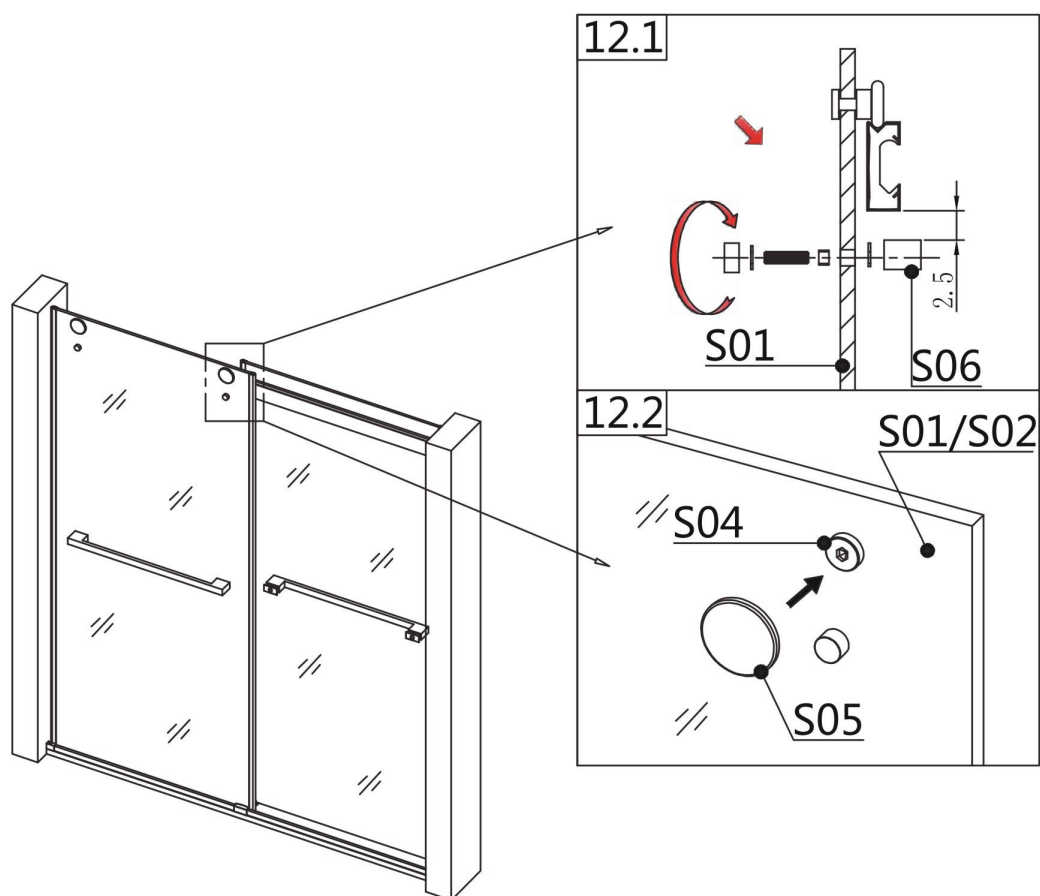



### Step 13.

Seal the frames by silicone gun

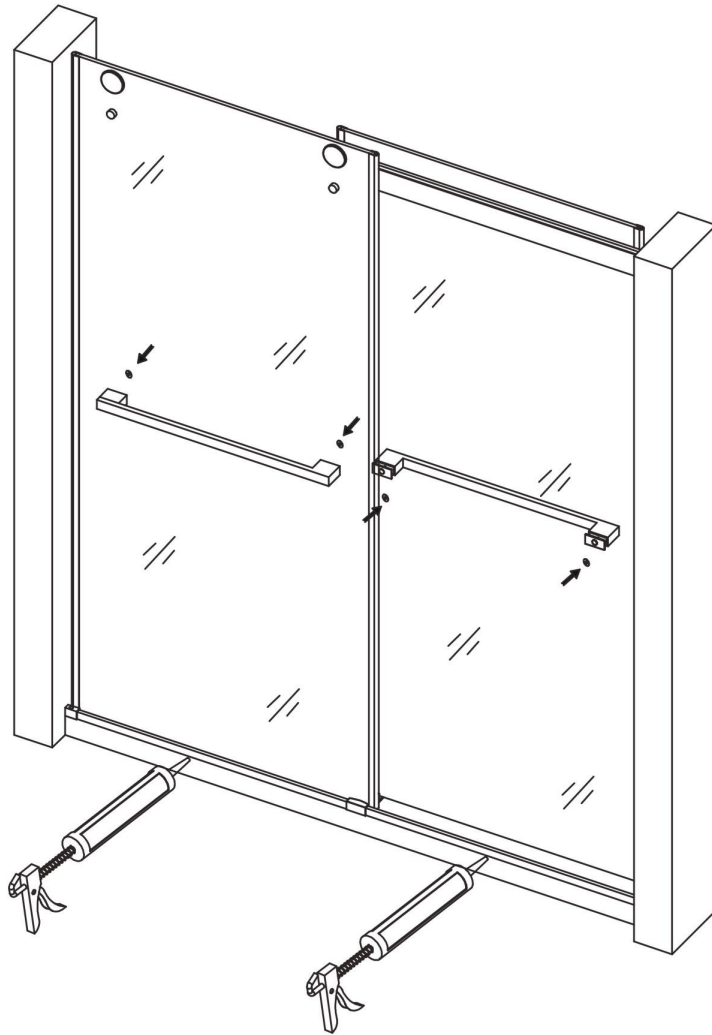

Allow 24 hours for silicone to dry before use.  
Silicone is to be applied on the outside edge only.

THANK YOU FOR YOUR SUPPORT.

We hope you enjoy using the product. If you have any other needs or questions, please feel free to contact us by email [info@exbriteusa.com](mailto:info@exbriteusa.com), and get replies within 48 business hours.