




10'x14' Metal Patio Gazebo

ASSEMBLY MANUAL

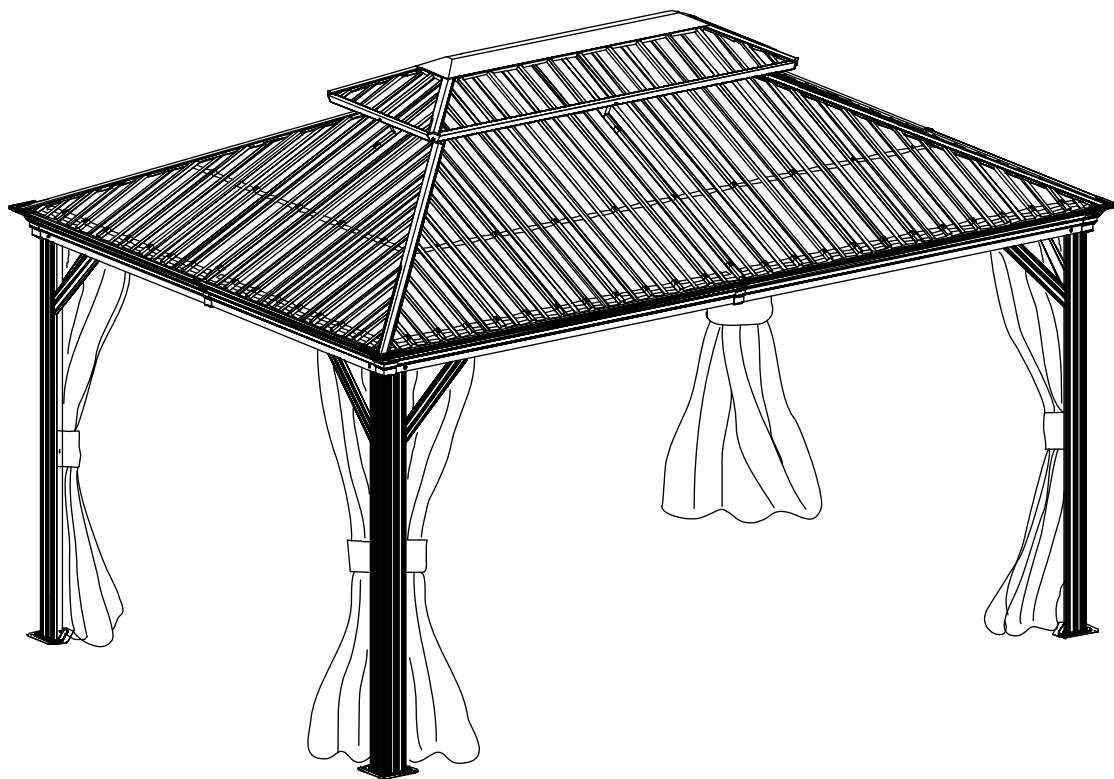

MODEL#: LGMF8225C

Missing part? Damaged? Contact us via email at

service@domioutdoorliving.com

www.domioutdoorliving.com

Pre-assembly



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.

Warning & Attention

-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;



-It would be much easier to assemble the product with three or more people;

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.

▲ Use bolts to secure the frame to the ground to against the strong wind.



IMPORTANT: A gaze may entail to purchase a municipal permit or be subject to specific building codes. It is the consumer's responsibility to inform themselves of any restrictions.

1


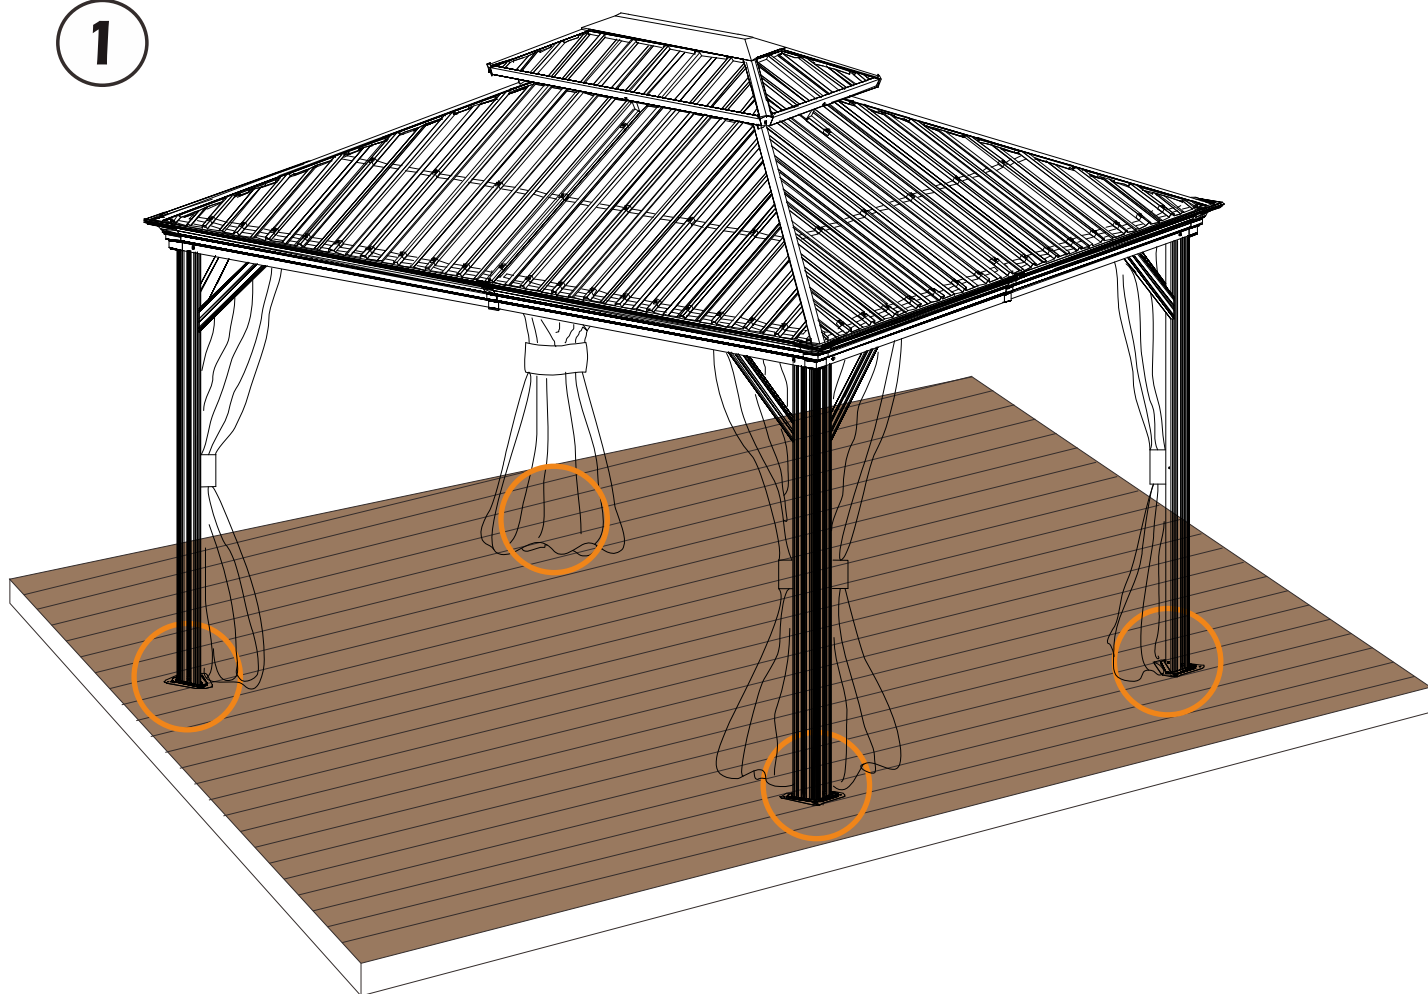


x12

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. x4 in. Structural Wood Screw** to mount the gazebo.



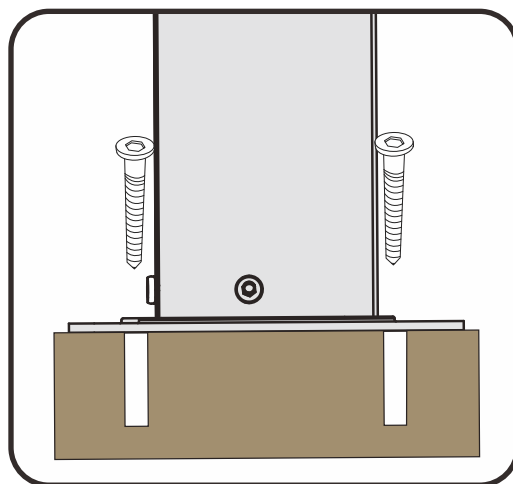
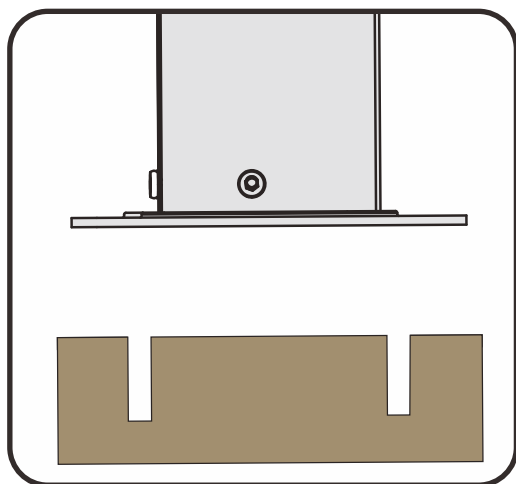


2

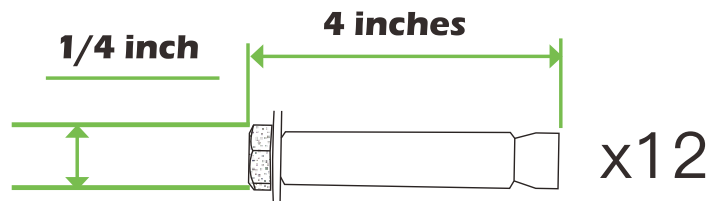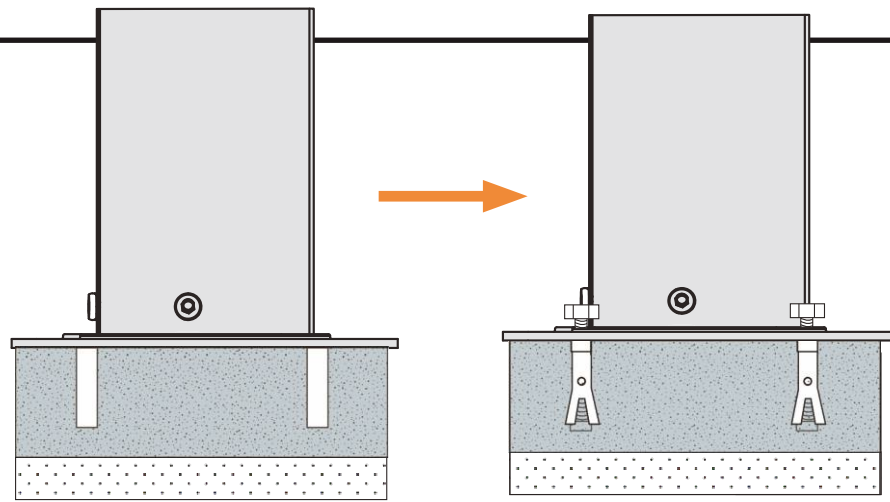


If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo



3















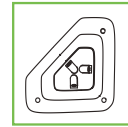
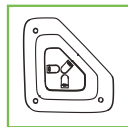
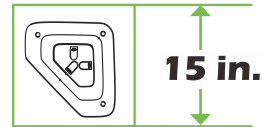
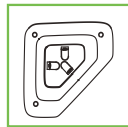




























Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended. use expansion bolts to mount the pergola like ② shows.



IMPORTANT:
Anchor is not recommended

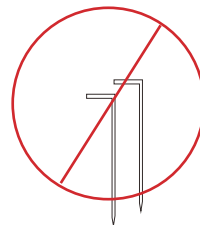

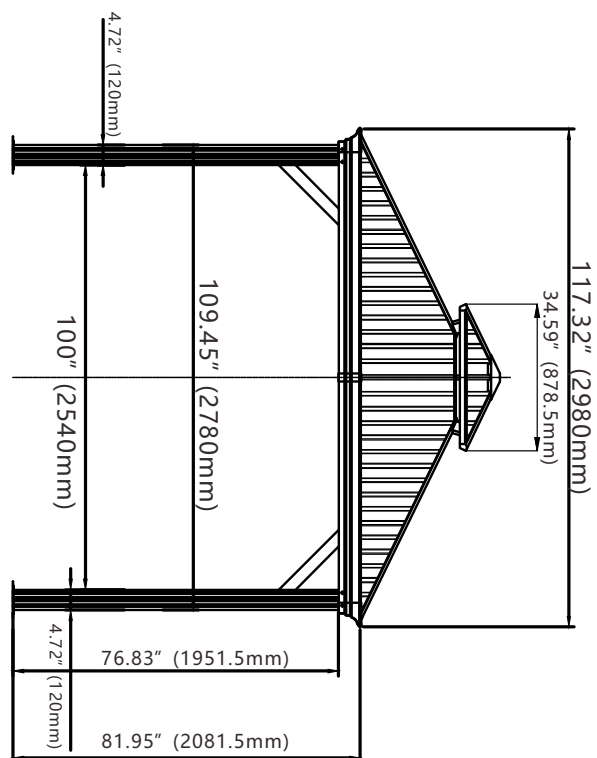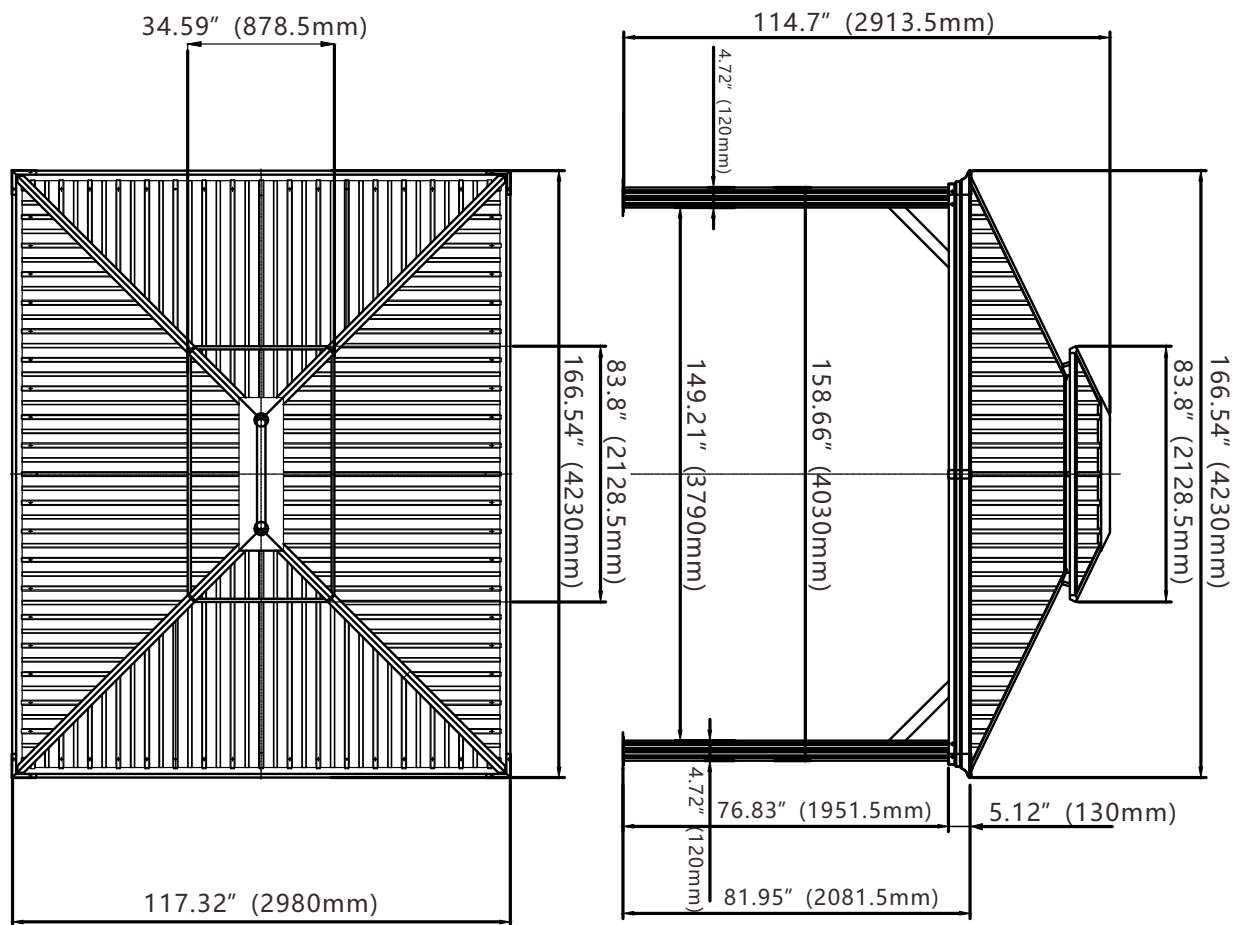

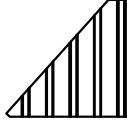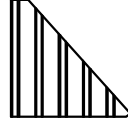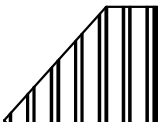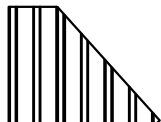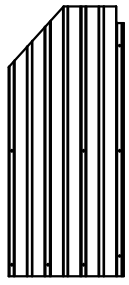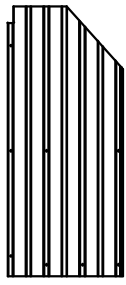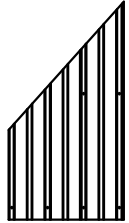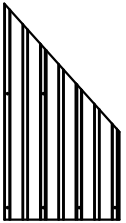 Pole A (x4)	 J1 (x4) Corner Solidifying Bar	 J2 (x4) Corner Solidifying Bar	 Bracket U3 (x4)	
 Beam B (x2)	 Inside Roof Connector K (x1)	 Bracket U4 (x4)		
 Gap Cover B1 (x2)	 Outside Roof Cover K1 (x1)	 V1 (x2)		
 Sidewall Track B2 (x2)	 Base L (x4)			 V2 (x2)
 Beam C (x2)	 Corner Roof Tube Connector M1 (x4)	 V4 (x4)		
 Gap Cover c1 (x2)	 Corner Roof Tube M2 (x4)			
 Sidewall Track c2 (x2)	 Roof Tube N (x4)			
 Beam D (x2)	 Finishing Bar P (x2)			
 Gap Cover D1 (x2)	 Finishing Bar Q (x2)	 V3 (x2)	 V5 (x2)	
 Sidewall Track D2 (x2)	 Small Mesh Q1 (x1)	 W3 (x2)		
 Beam E (x2)	 Plastic Tube Pa (x2)			 W4 (x2)
 Gap Cover E1 (x2)	 Plastic Tube Pb (x2)			
 Sidewall Track E2 (x2)	 Finishing Bar T1 (x2)			
 Union Bar F (x4)	 Corner Cover G (x4)	 Finishing Bar T2 (x2)	 W2 (x2)	
 Joint Cover H (x4)	 Silicon Sealant H2 (x1)	 Solidifying Bar U1 (x4)	 W5 (x2)	
 Joint Cover H1 (x4)	 Solidifying Bar U2 (x4)	 W1 (x2)	 W6 (x2)	

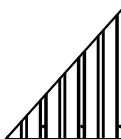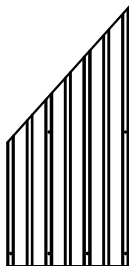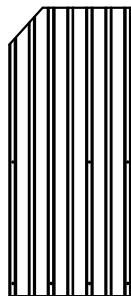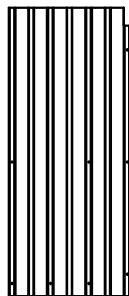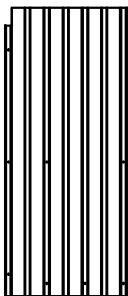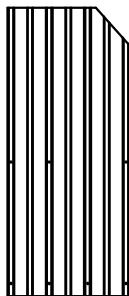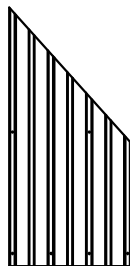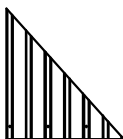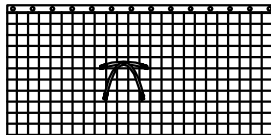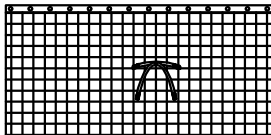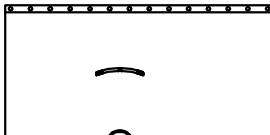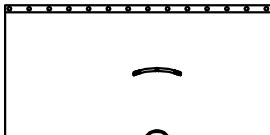

															
X1 (x2)		X2 (x2)		X3 (x2)		X4 (x2)		X5 (x2)		X6 (x2)		X7 (x2)		X8 (x2)	
															
Y1 (x2)		Y2 (x2)		Yb (x4)		Y1a (x2)		Y2a (x2)							
Mosquito Netting		Mosquito Netting		Strap		Solid Sidewall		Solid Sidewall							
															
Z (x56)		Plastic Clips		Plastic Clips		Plastic Clips		Plastic Clips							
Plastic Clips		Plastic Clips		Plastic Clips		Plastic Clips		Plastic Clips							
		M6x16										1#		x200	
		M6x20										2#		x24	
												3#		x16	
		Plastic Hook										4#		x112	
		M6x28										5#		x72	
		M6x45										6#		x8	
		M6x50										7#		x32	
		M5x16										8#		x4	
		ST4.8 x13										9#		x24	
		M6x25										10#		x4	
		M6x12										11#		x12	
		ST6.3*15										12#		x12	
Allen Key				x1				x1 Wrench				x1 Wrench			






A (x4)

Assemble the Poles:


Attach Base #L to
Pole #A with 3 Bolts #1.

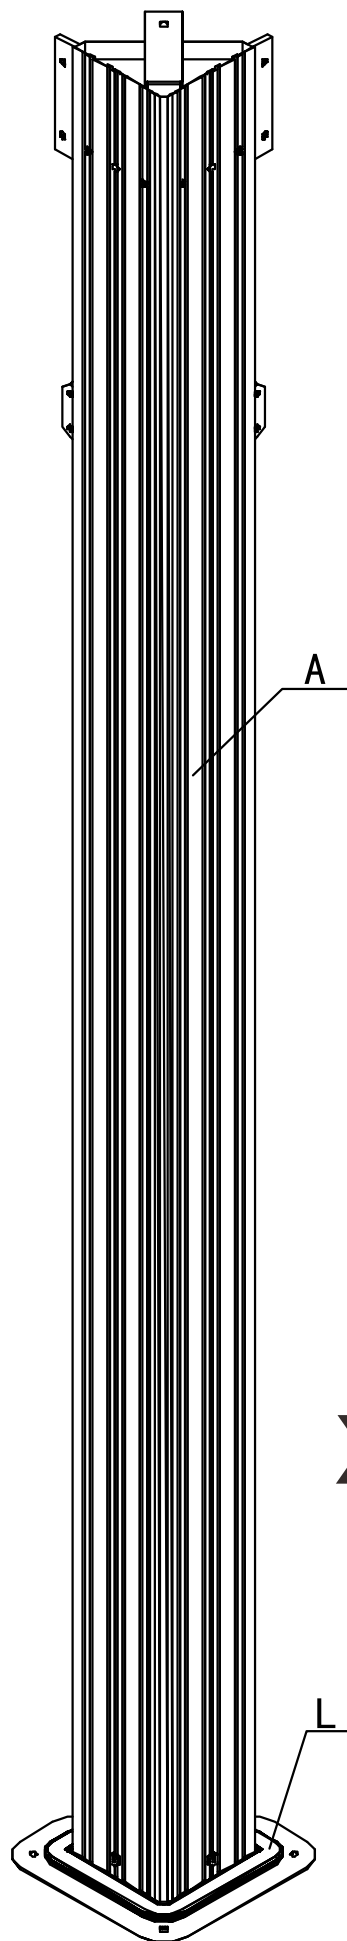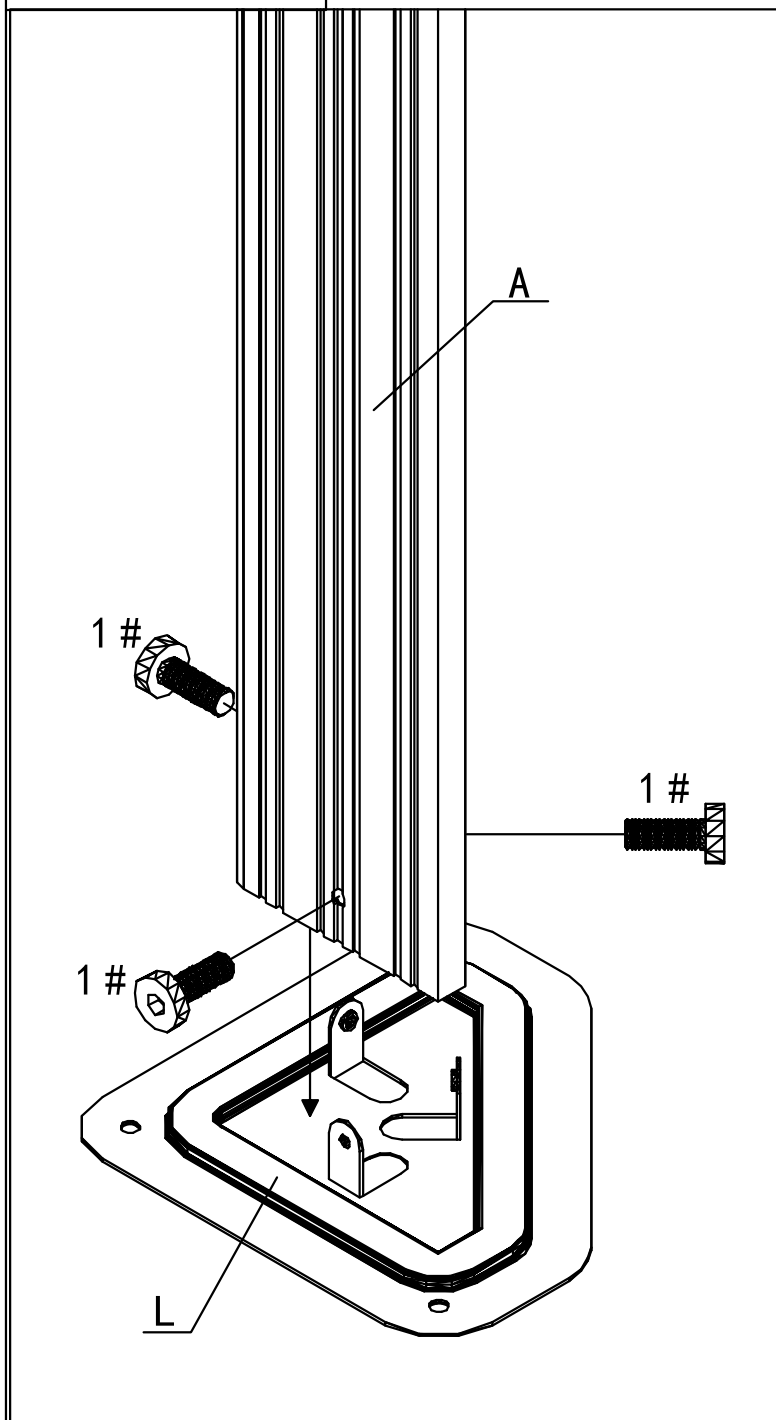

X4

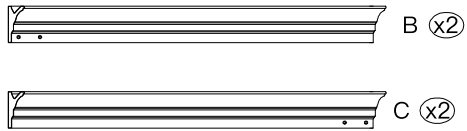


Assemble the Beams:

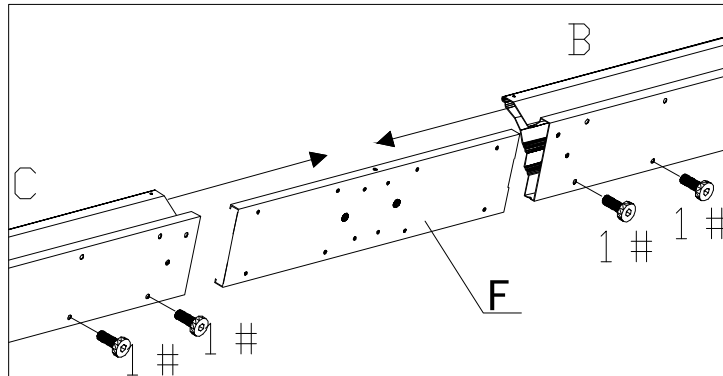




(1) Insert Union Bar #F into Beam #C, and secure with 2 Bolts #1.

(2) Insert the other side of Union Bar #F into Beam #B and secure with 2 Bolts #1.

Repeat the above procedures to assemble the other Beam #C and #B.

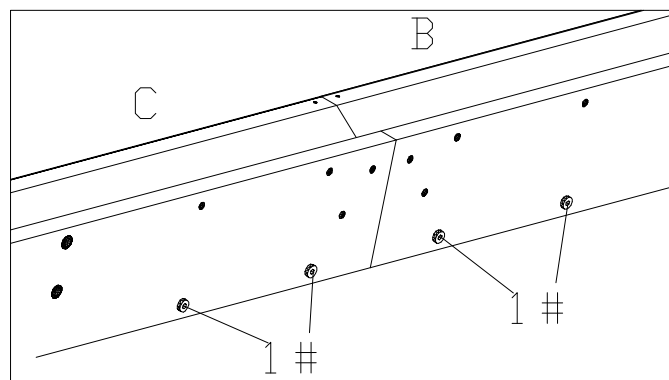


TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant (part #H2) and Joint Cover #H to affix the gap.(see Page5-2)

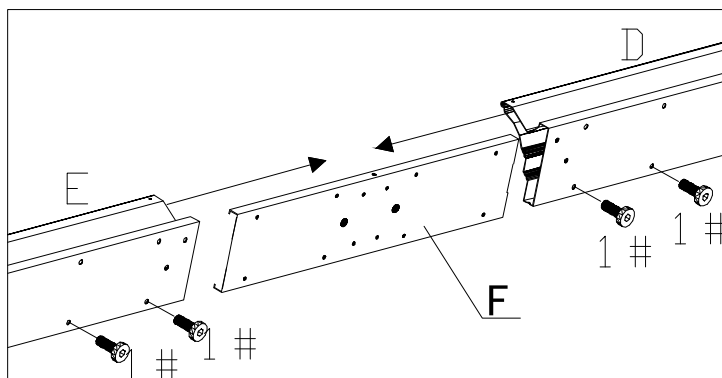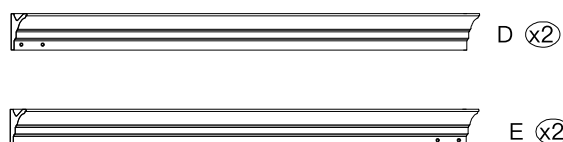

(1) Insert Union Bar #F into Beam #E, and secure with 2 Bolts #1.

(2) Insert the other side of Union Bar #F into Beam #D and secure with 2 Bolts #1.

Repeat the above procedures to assemble the other Beam #E and #D.


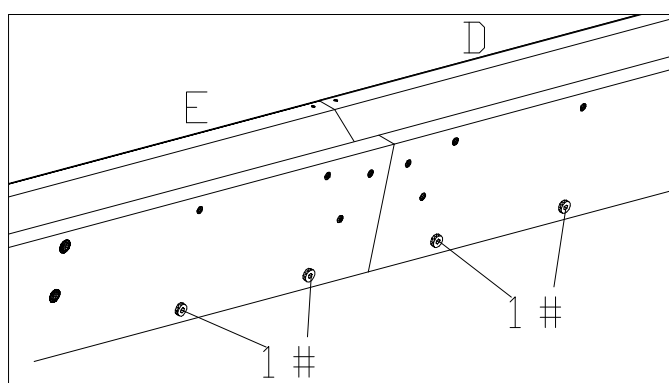


TIPS: It's a normal situation that there's a gap between the 2 beams, please use silicone sealant (part #H2) and Joint Cover #H to affix the gap.(see Page5-2)

B1 (x2)
B2 (x2)





C1 (x2)
C2 (x2)

1#
x36

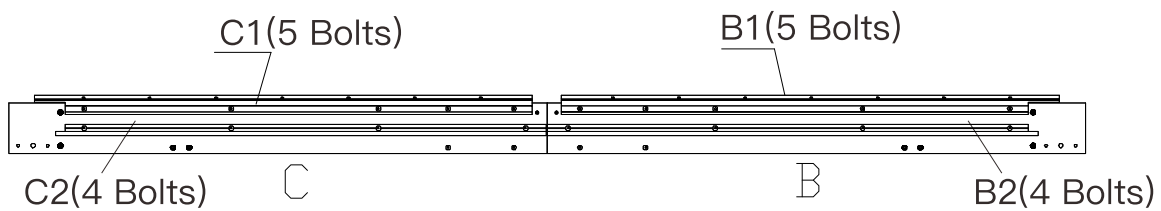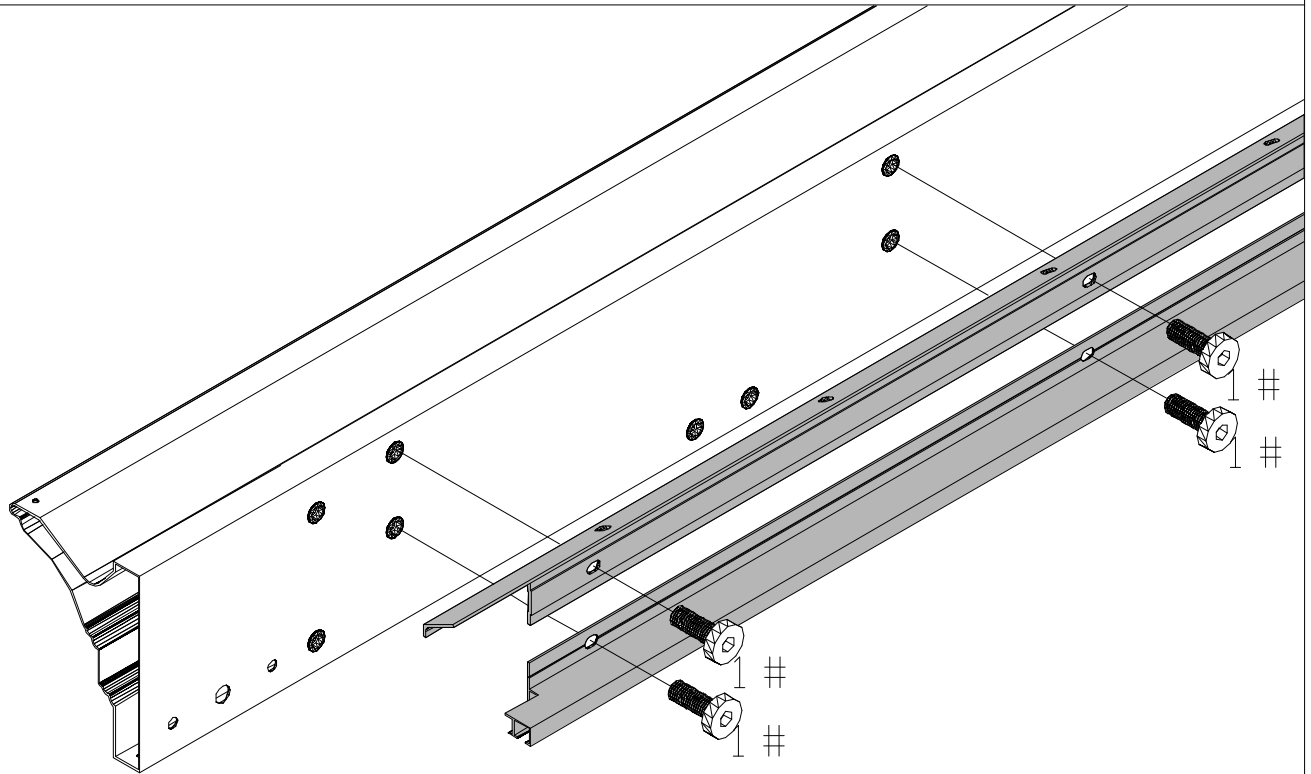

X2

- (1) Use 5 Bolts #1 to secure the Gap Cover #C1 to the Beam #C as shown;
 - (2) Use 4 Bolts #1 to secure the Track #C2 to the Beam #C as shown;
 - (3) Use 5 Bolts #1 to secure the Gap Cover #B1 to the Beam #B as shown;
 - (4) Use 4 Bolts #1 to secure the Track #B2 to the Beam #B as shown.
- Repeat the same steps to assemble the other Gap Covers (#C1, #B1) and Sidewall Tracks (#C2, #B2).**

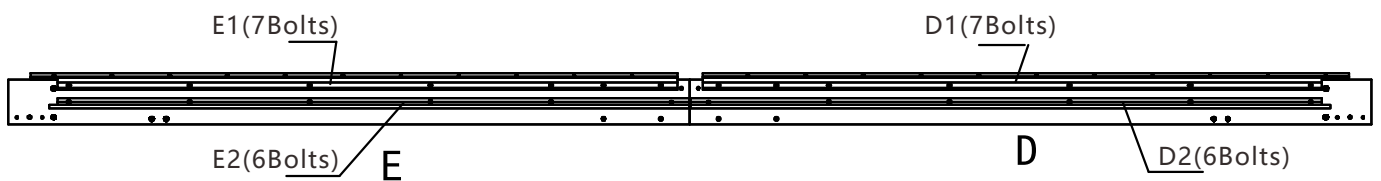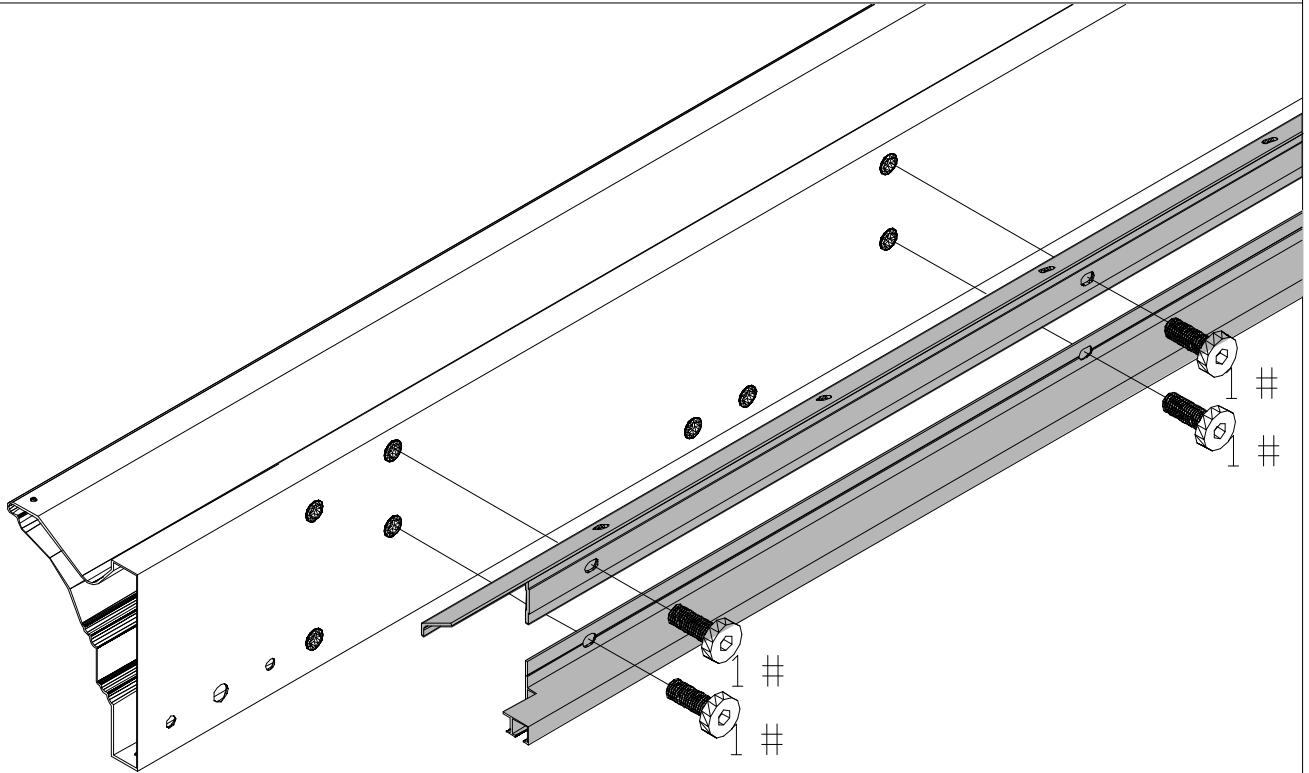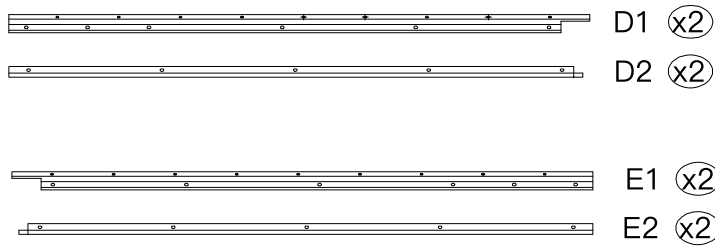

X2

- (1) Use 7 Bolts #1 to secure the Gap Cover #E1 to the Beam #E as shown;
 - (2) Use 6 Bolts #1 to secure the Track #E2 to the Beam #E as shown;
 - (3) Use 7 Bolts #1 to secure the Gap Cover #D1 to the Beam #D as shown;
 - (4) Use 6 Bolts #1 to secure the Track #D2 to the Beam #D as shown.
- Repeat the same steps to assemble the other Gap Covers (#E1, #D1) and Sidewall Tracks (#E2, #D2).**




2#
x16





3#
x16

Assemble the Frame:

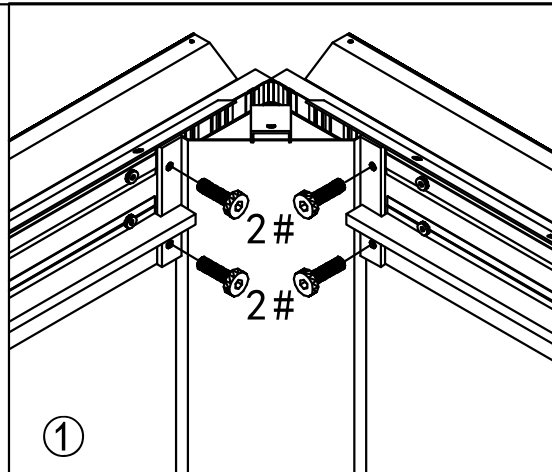

INSIDE VIEW

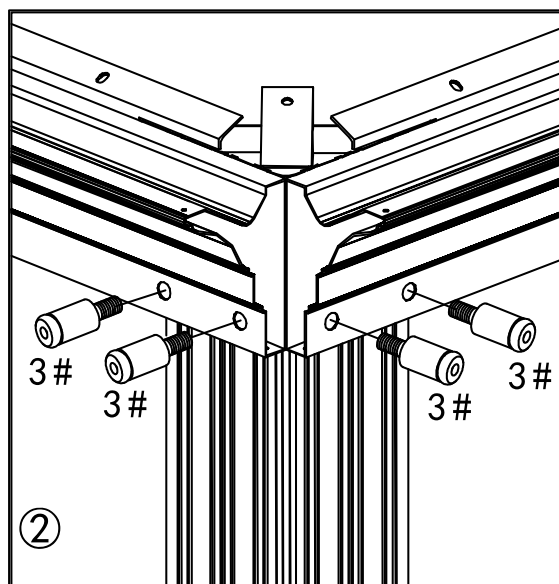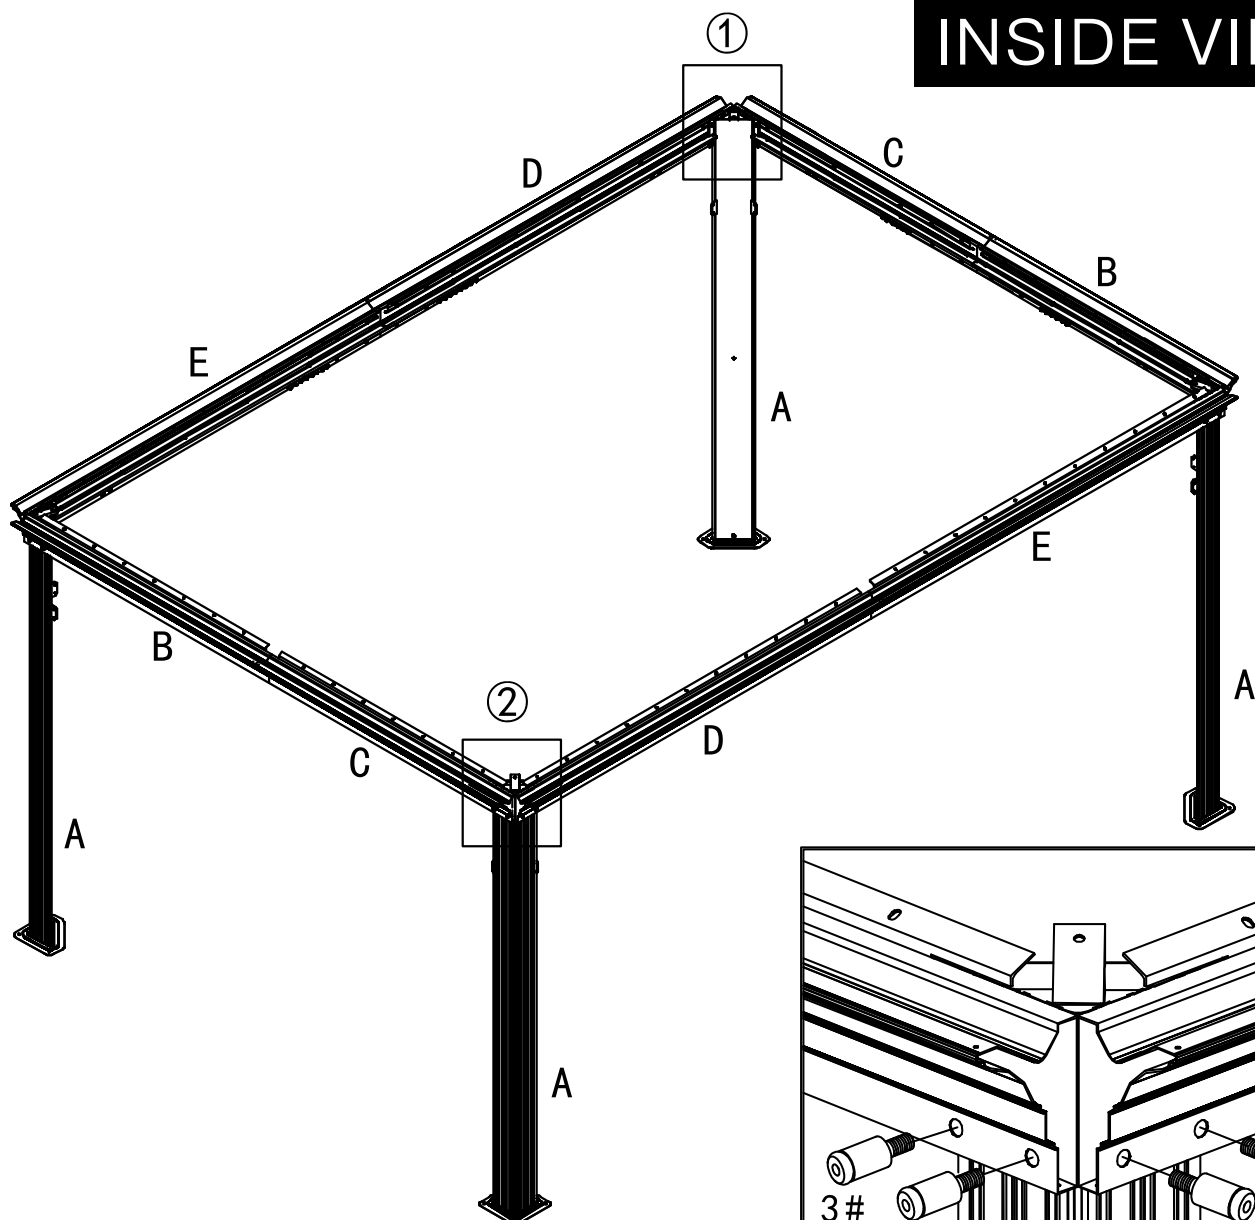


OUTSIDE VIEW

Please don't tighten all bolts.

J1 (x4)


J2 (x4)


1#
x32

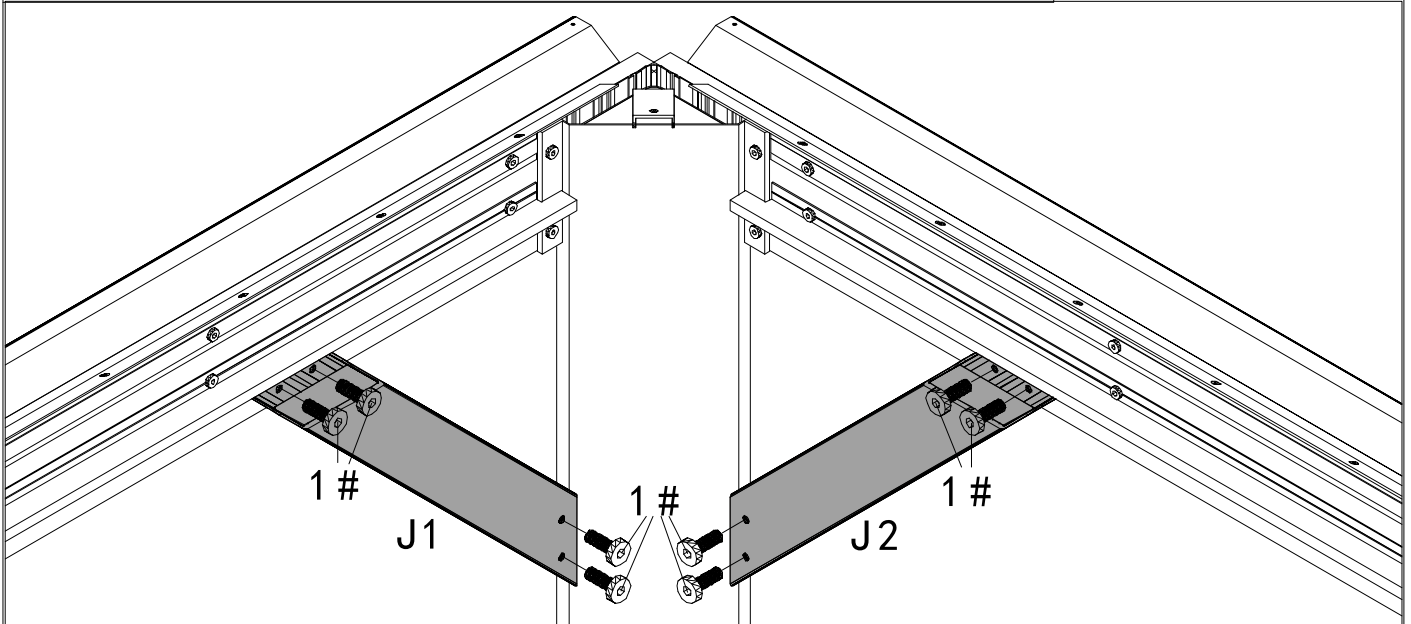



Corner Solidifying
Bar Assembly:

INSIDE VIEW

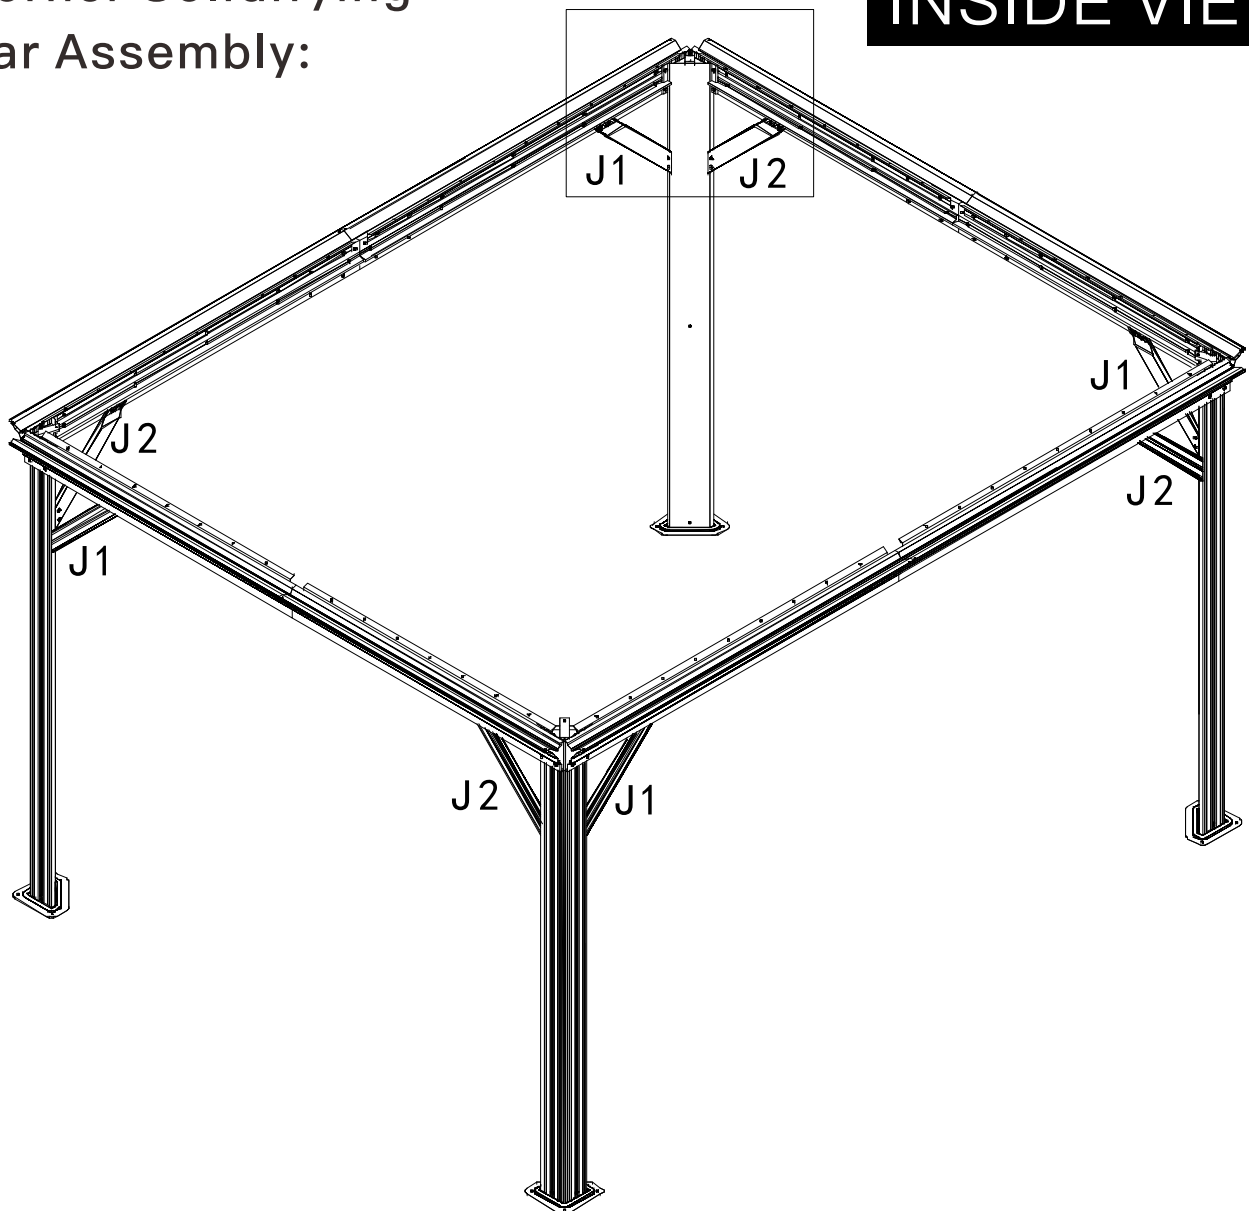



Corner Cover & Joint Cover Assembly:

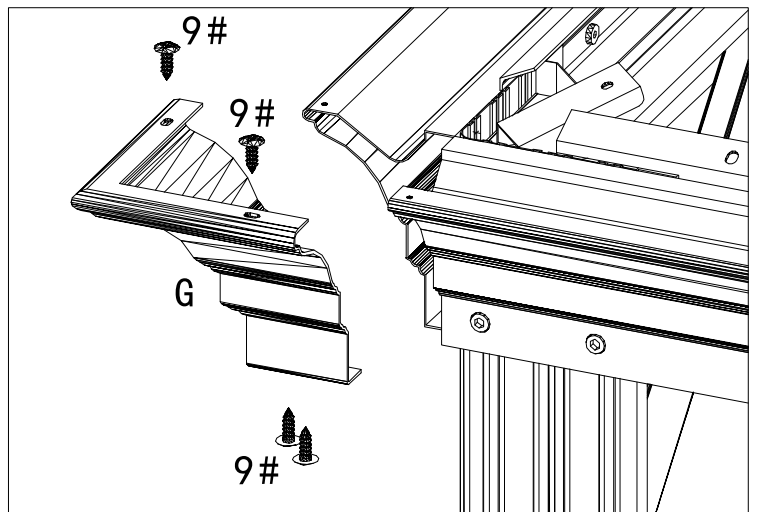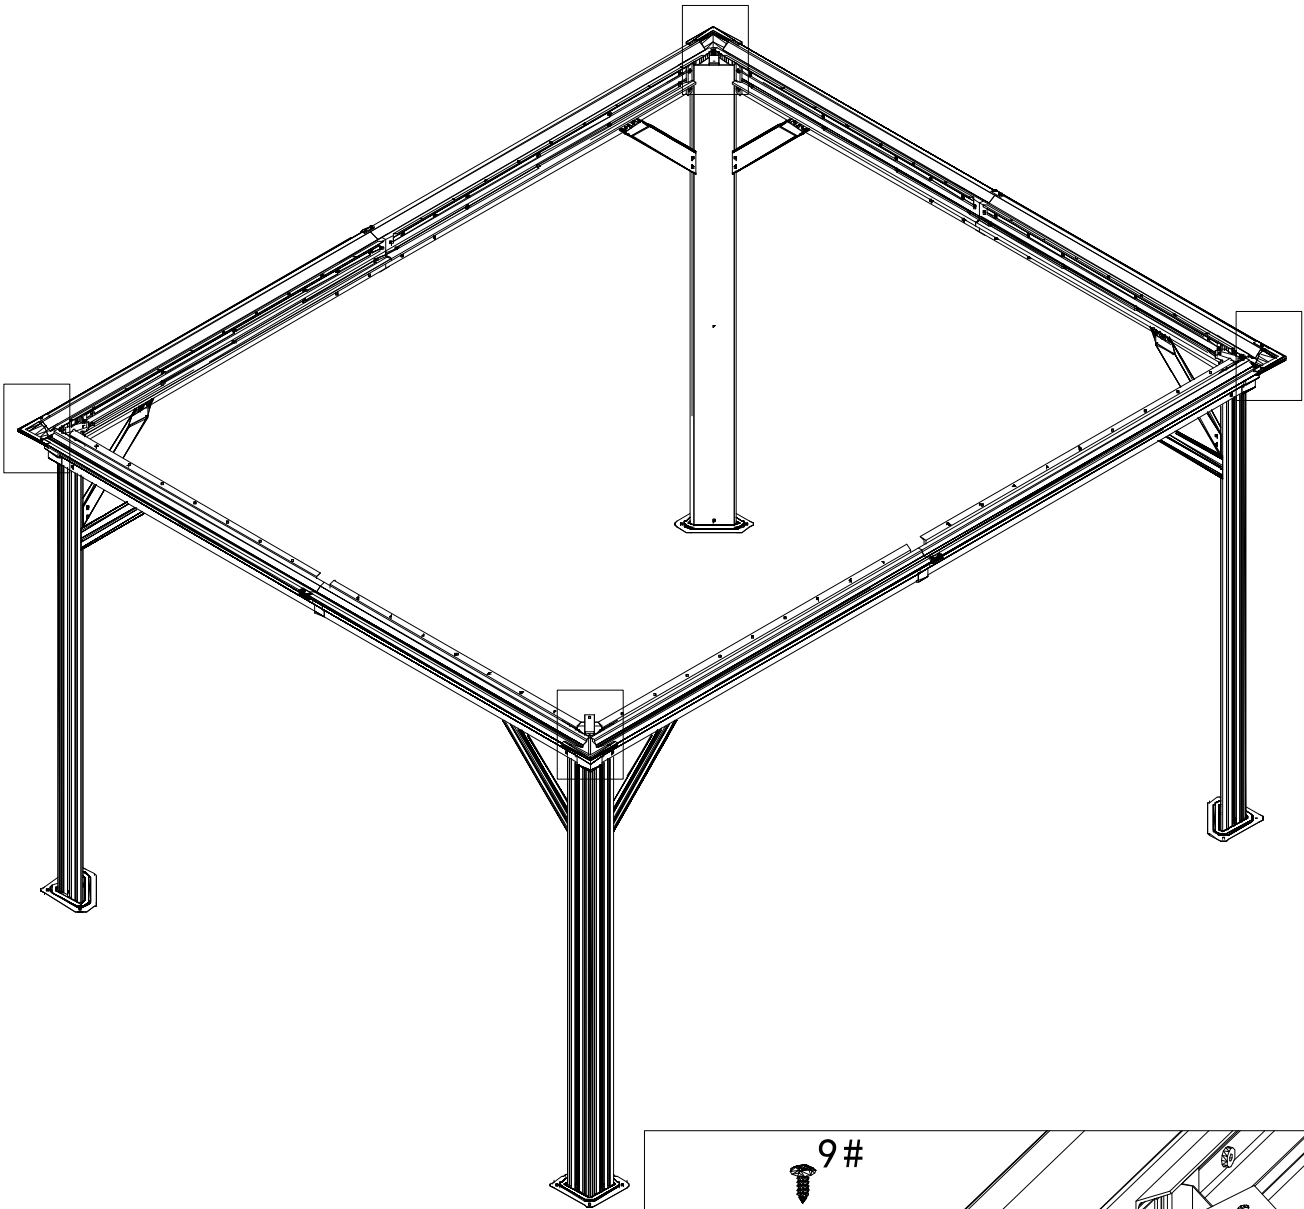




H (x4)







9#
x8




H2 (x1)

Use 5mm silicone sealant(part #H2) and Joint Cover #H to affix the gap.

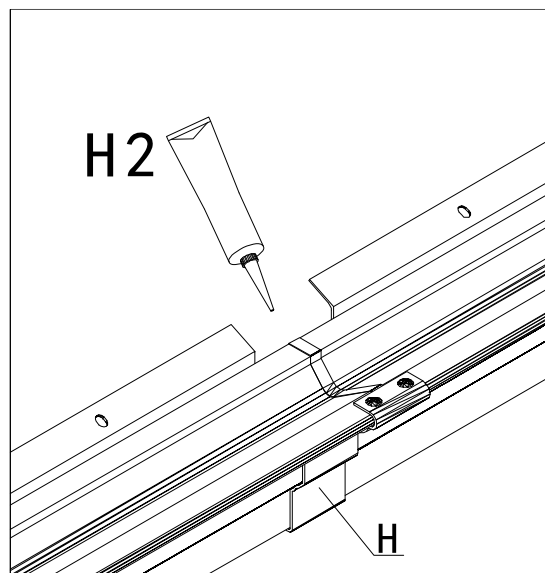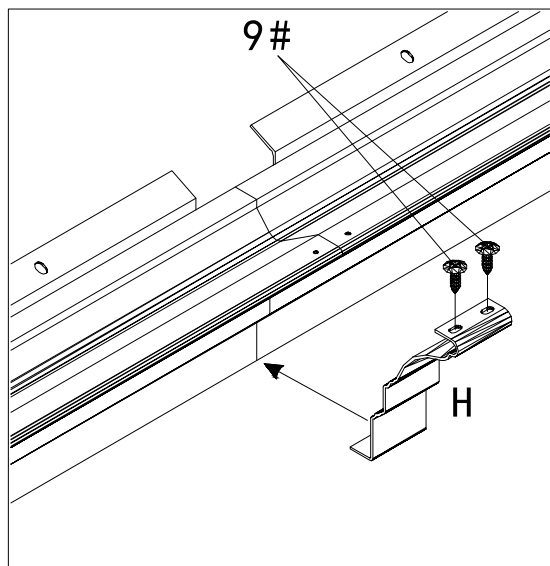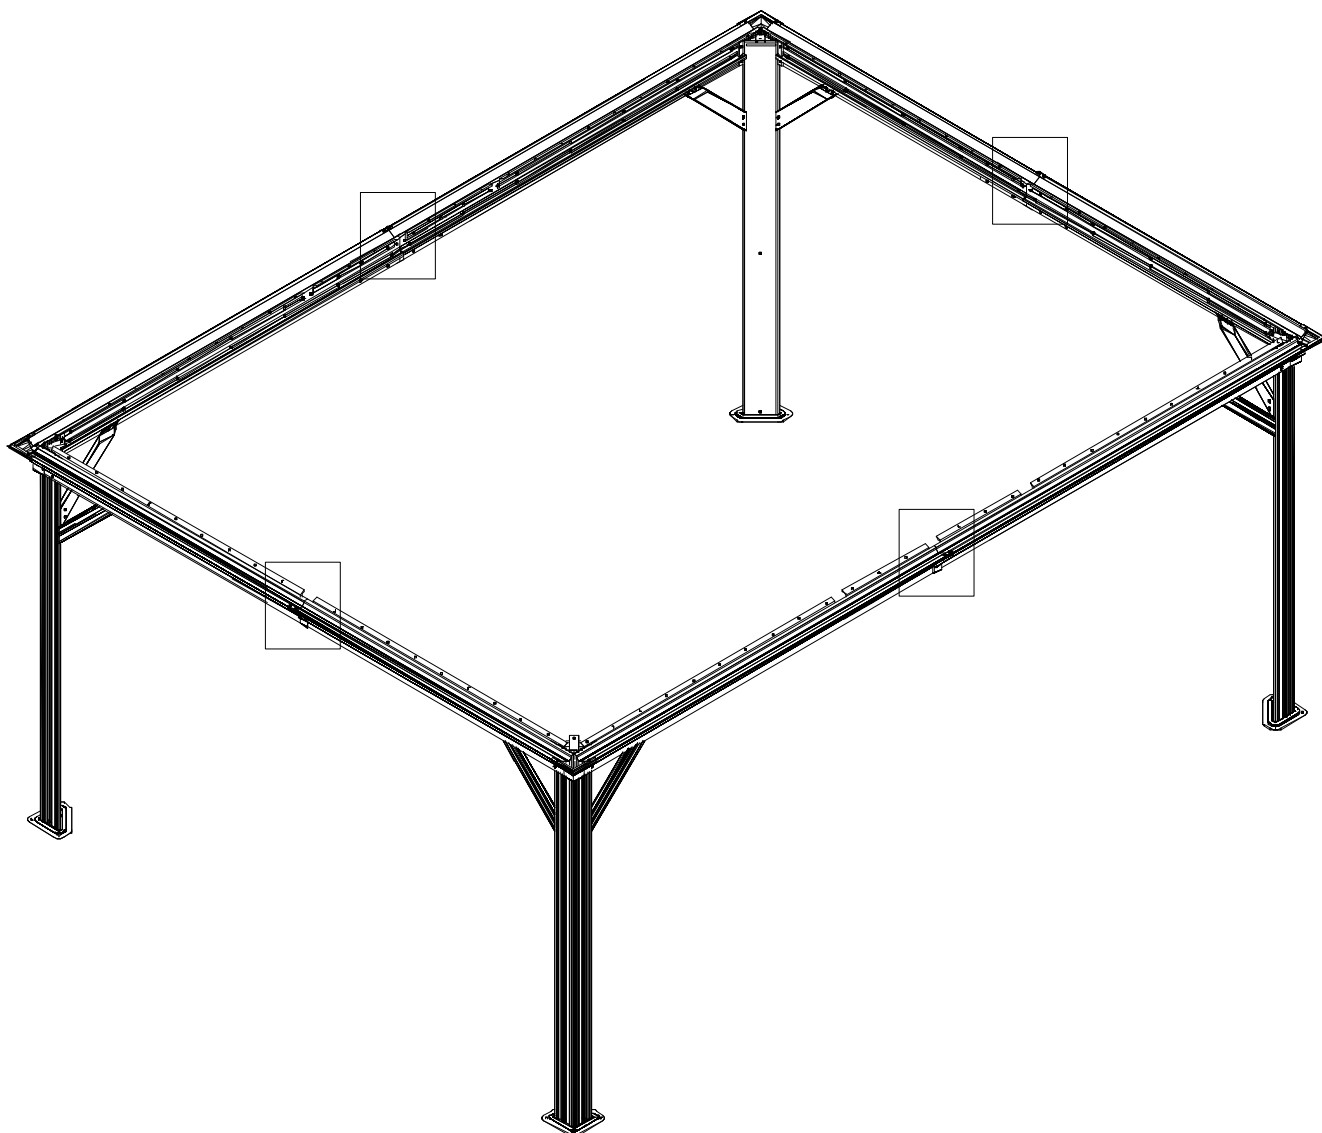



4#
x48






H1 (x2)




8#
x2


(1) Slide the plastic hooks to the double-rail track #C2&B2 (each slot should slide 6 plastic hooks).

(2) Use Bolt #8 to secure the Joint Cover #H & H1 to the beam.

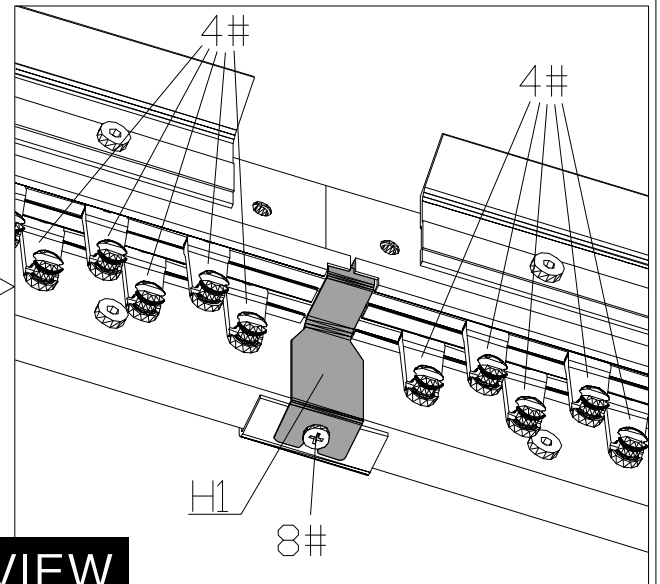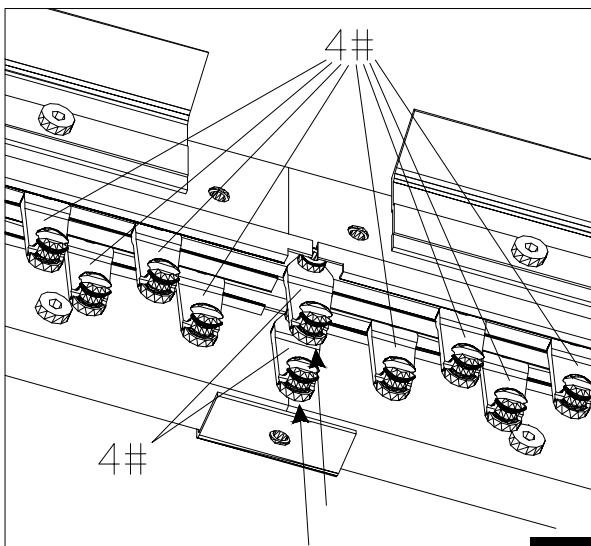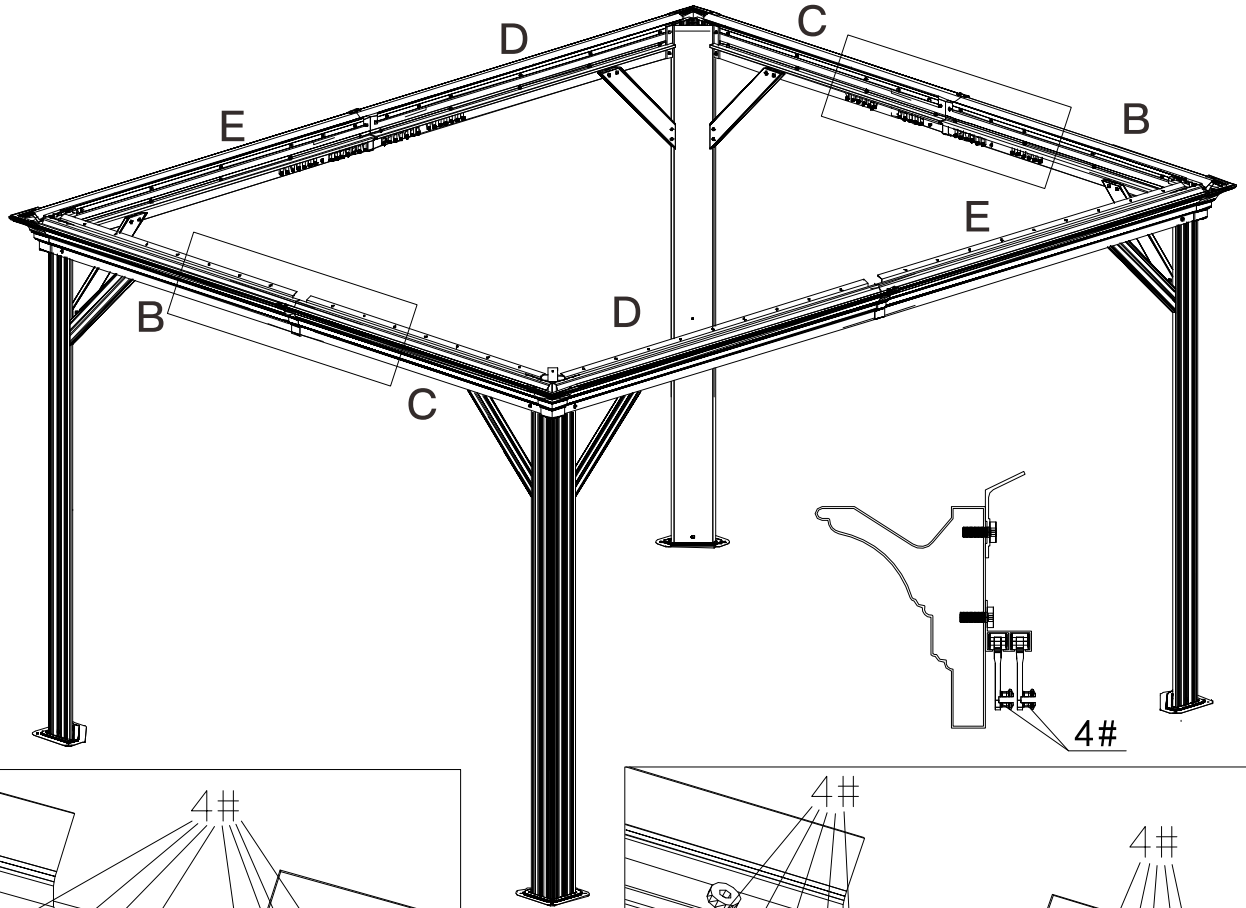

INSIDE VIEW

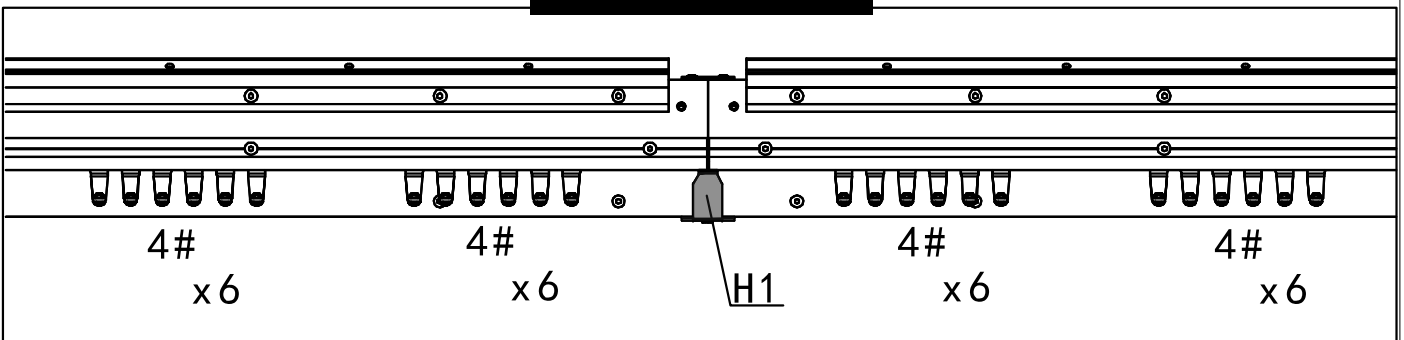



4#
x64







H1 (x2)



8#
x2

(1) Slide the plastic hooks to the double-rail track #E2&D2 (each slot should slide 8 plastic hooks).

(2) Use Bolt #8 to secure the Joint Cover #H & H1 to the beam.

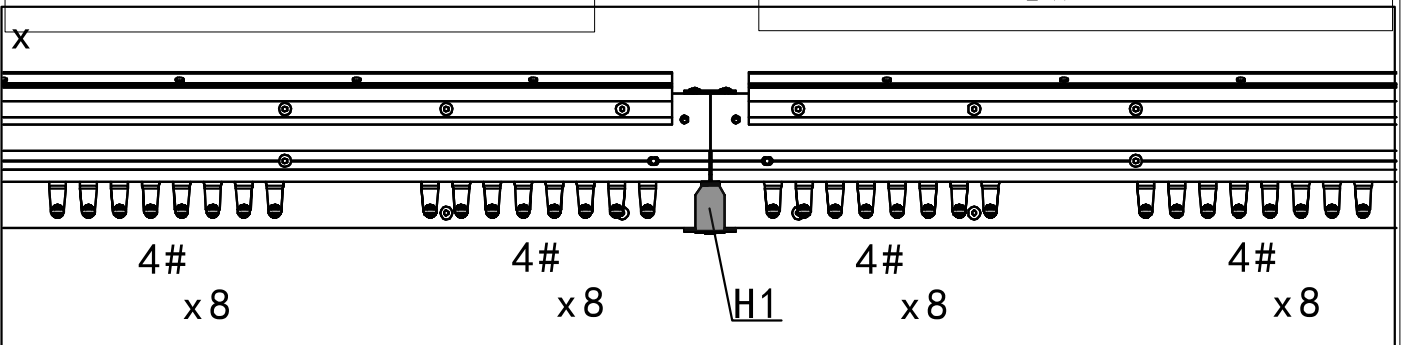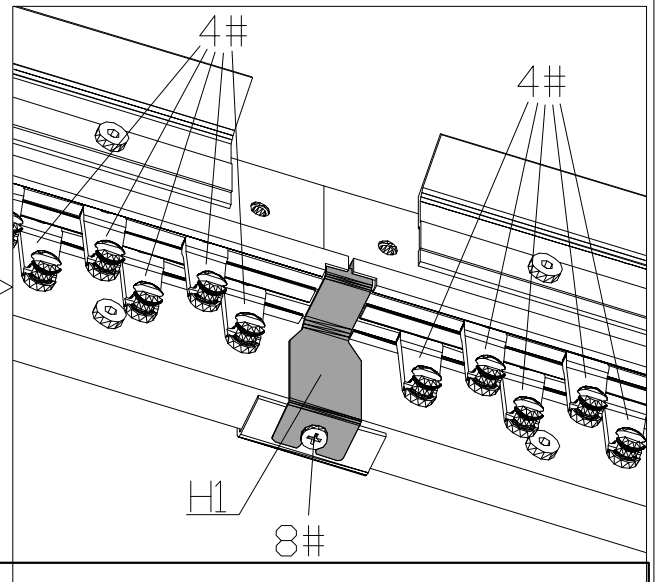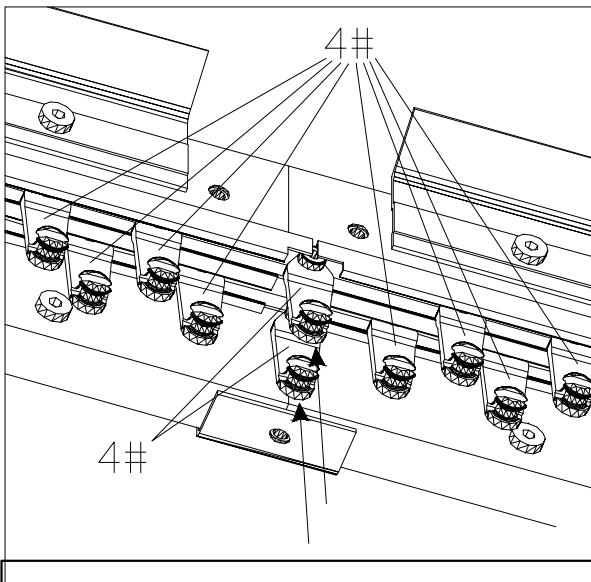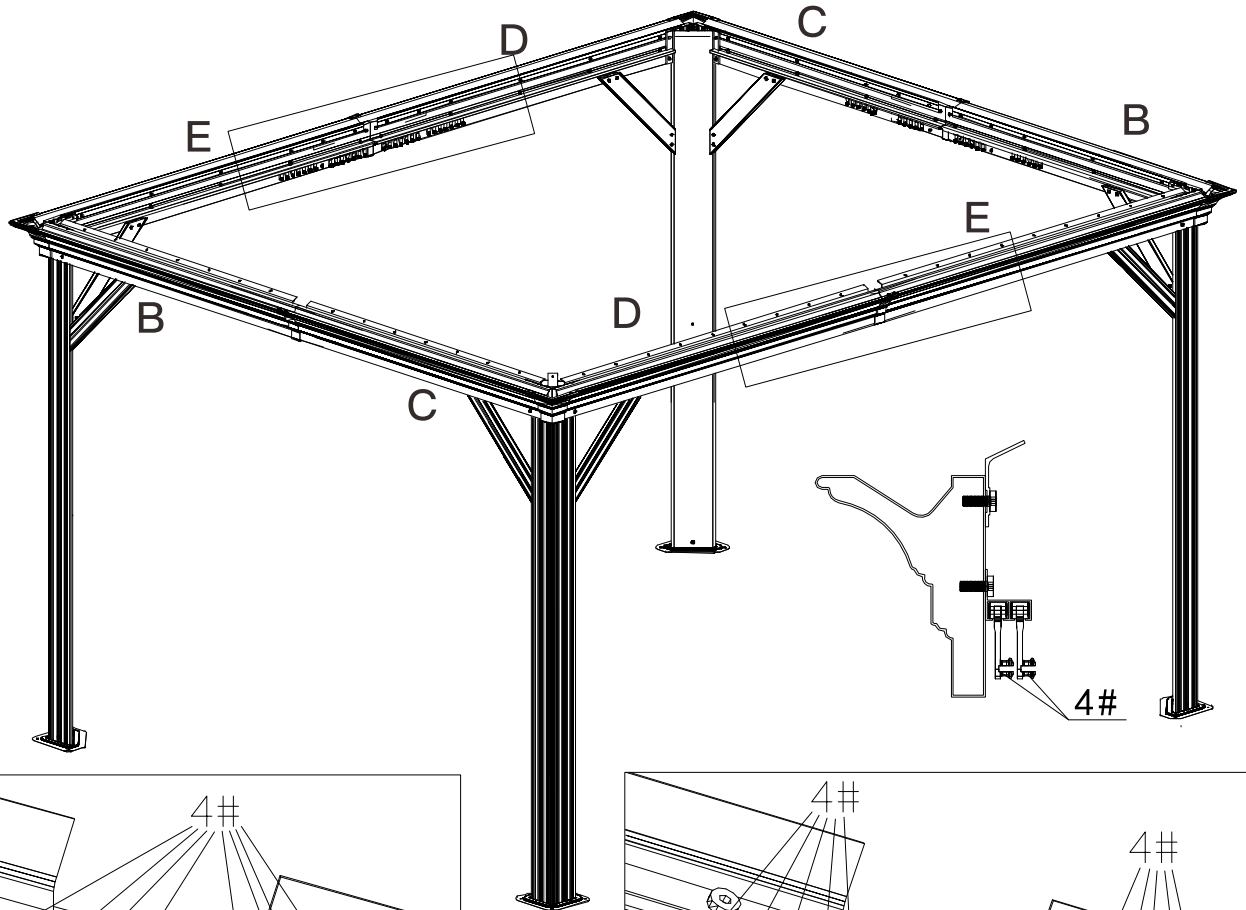




M1 (x4)




M2 (x4)




2#
x8

CORNER ROOF TUBE ASSEMBLY:

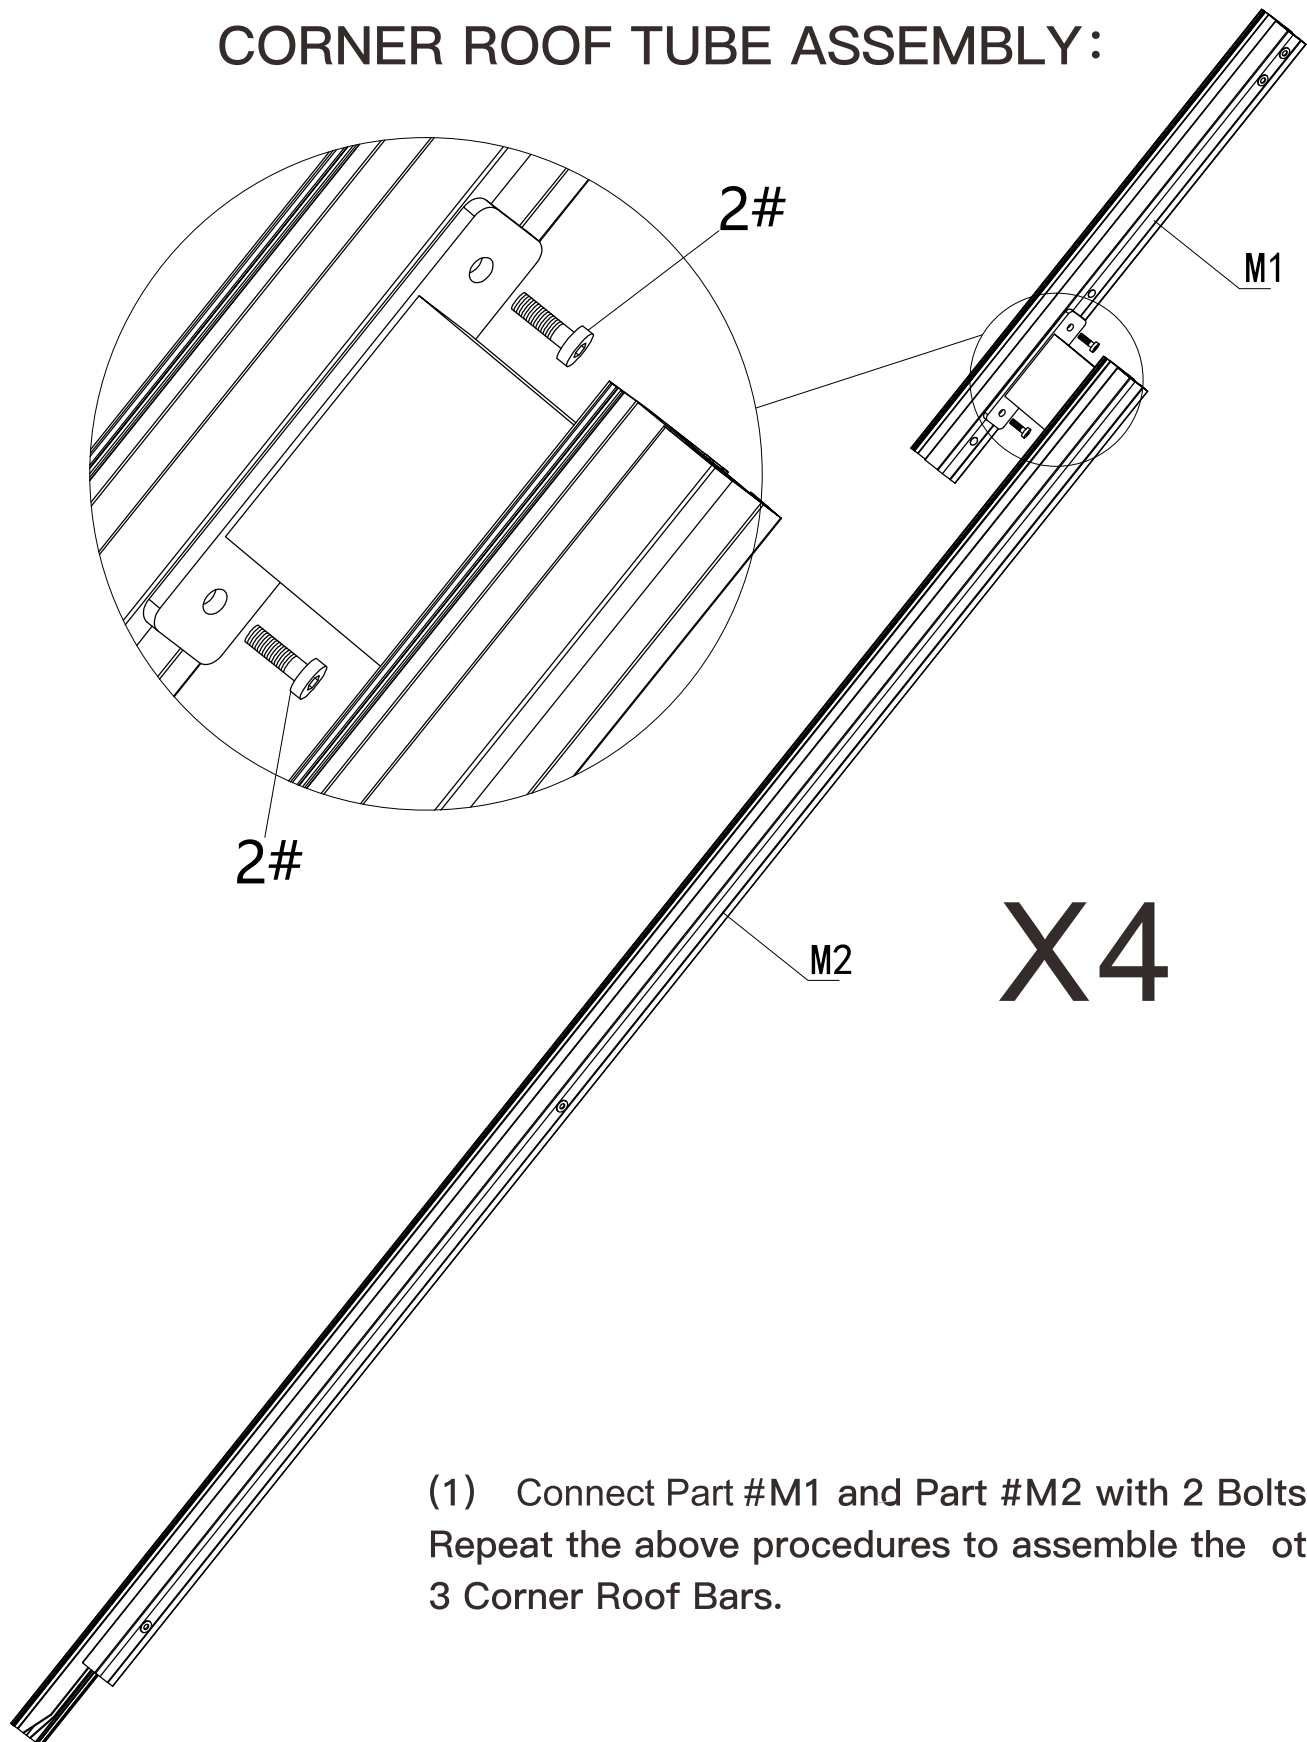


(1) Connect Part #M1 and Part #M2 with 2 Bolts #2. Repeat the above procedures to assemble the other 3 Corner Roof Bars.




K (x1)

CORNER ROOF TUBE AND INSIDE ROOF CONNECTOR ASSEMBLY:

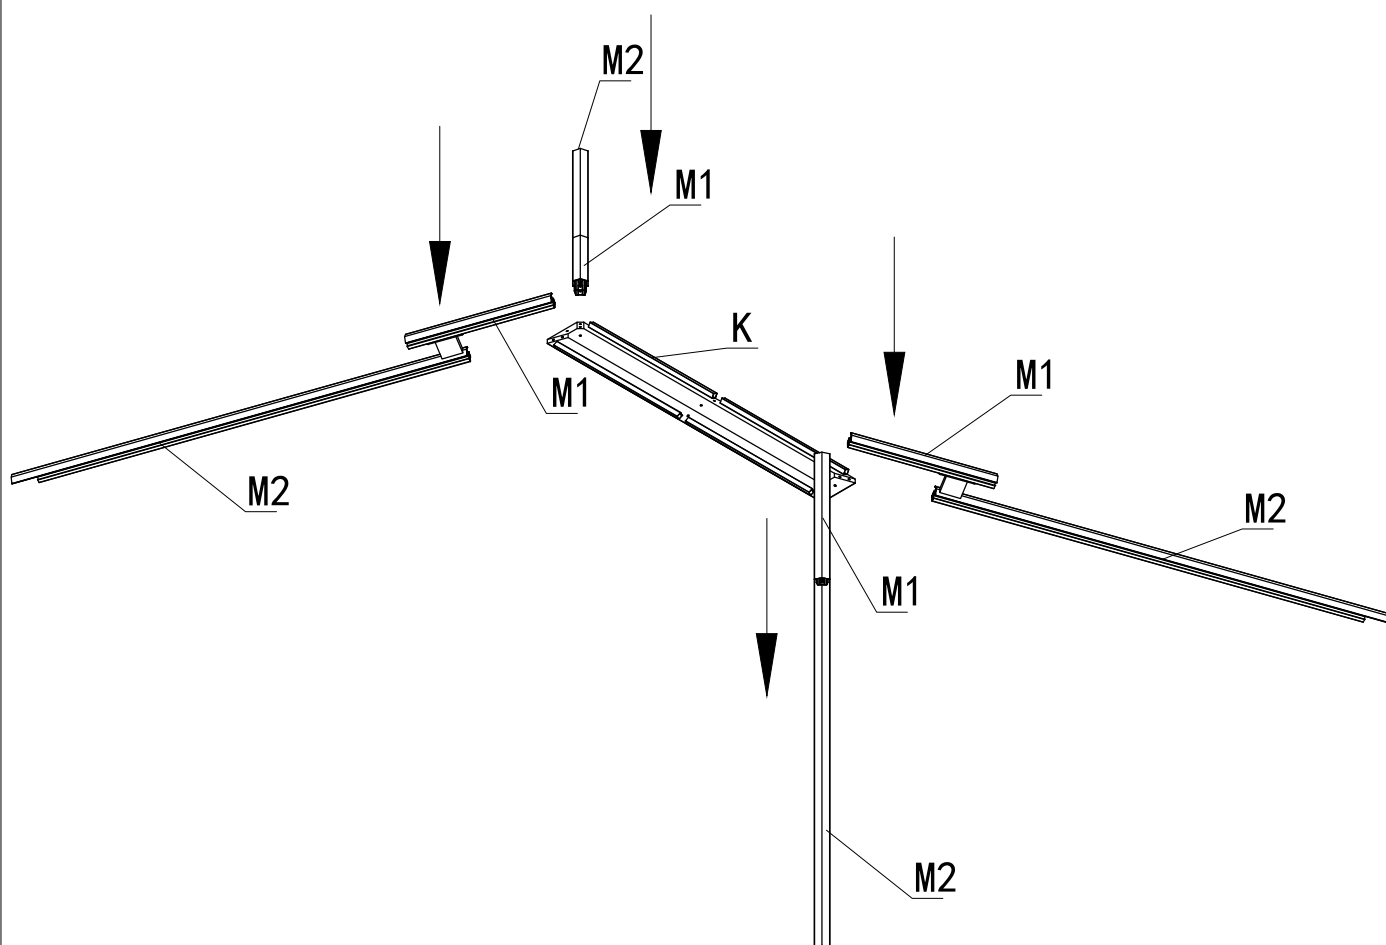


1#
×8

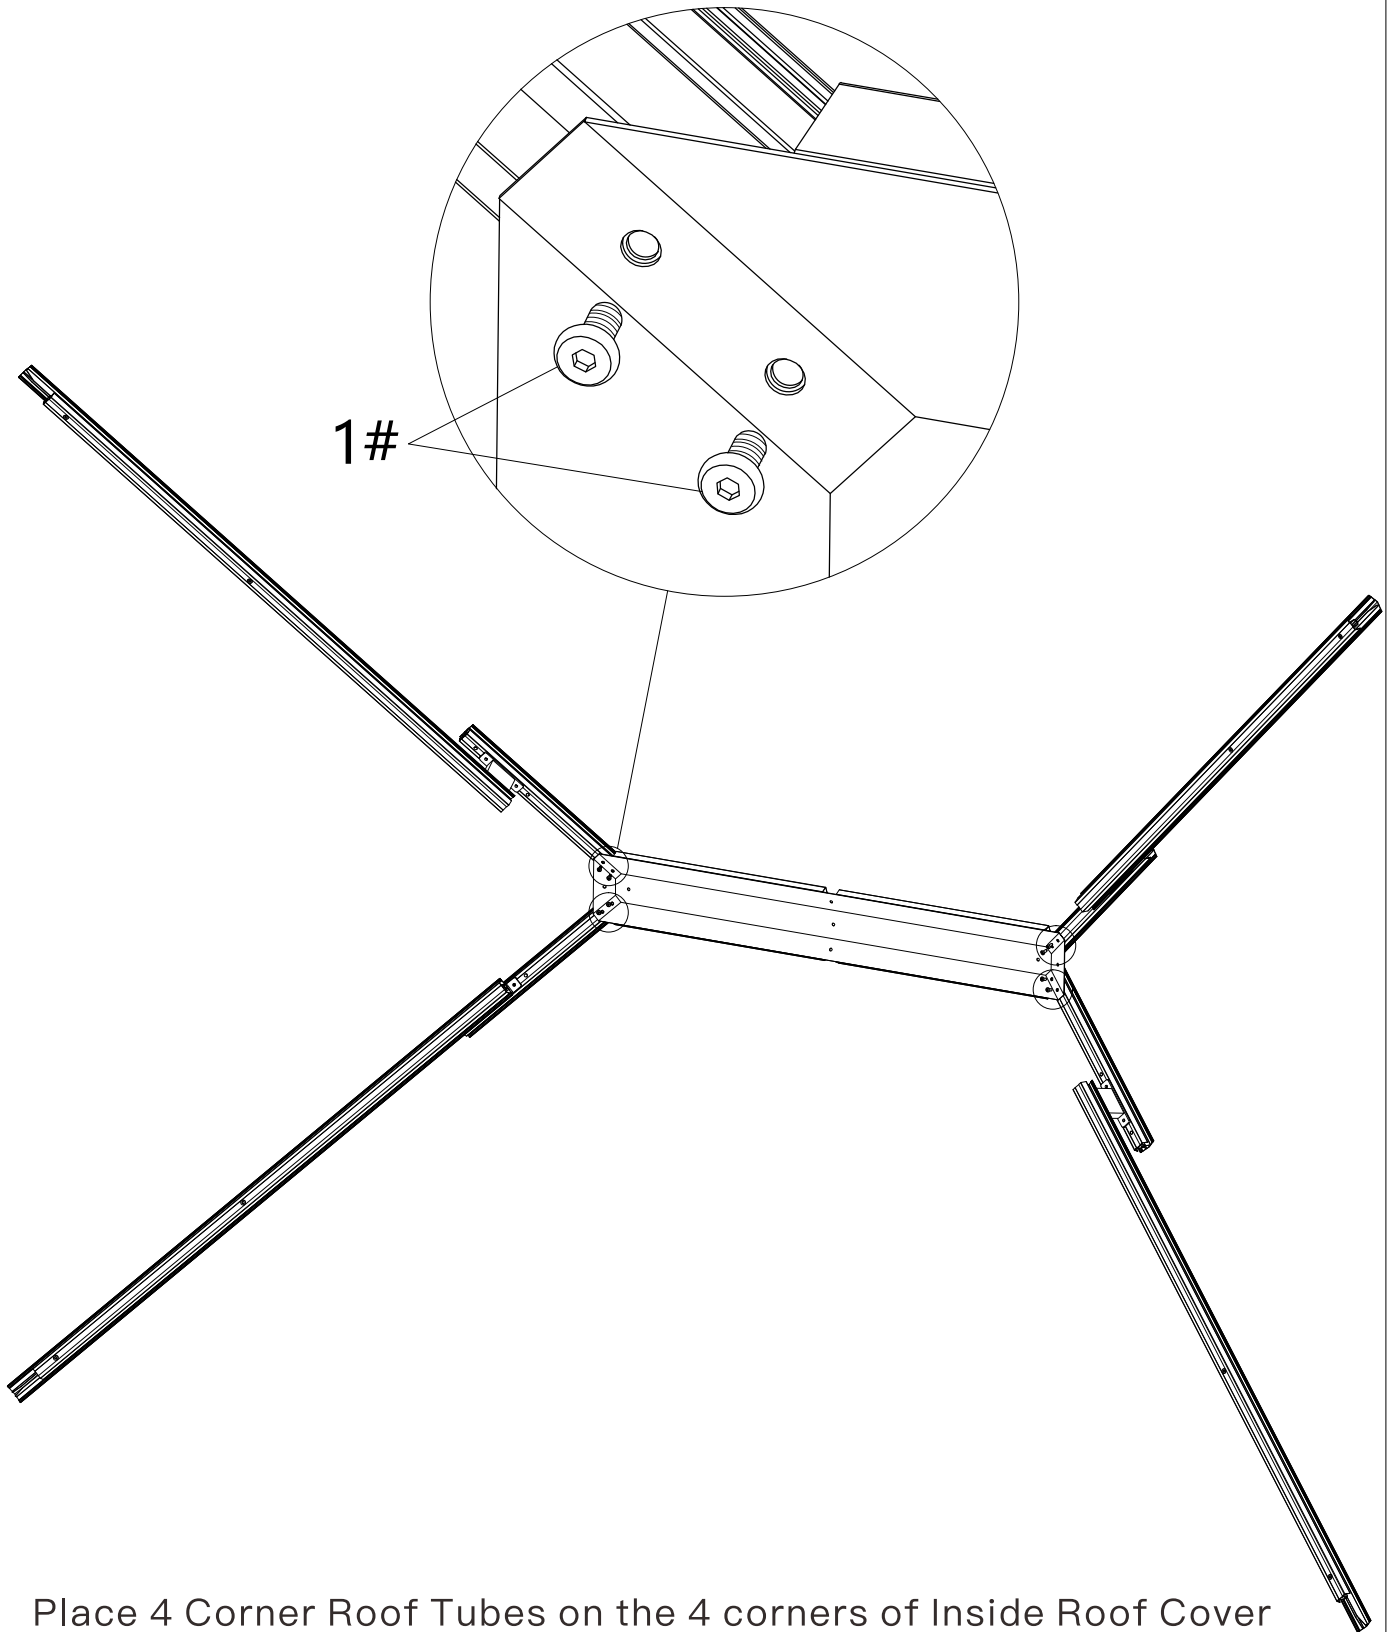


Place 4 Corner Roof Tubes on the 4 corners of Inside Roof Cover #K, secure with 8 Bolts #1 (from bottom to top).

Lift 4 corner roof Tubes and inside roof connector to the top of the frame.(You may need 2 people and 2 ladder).

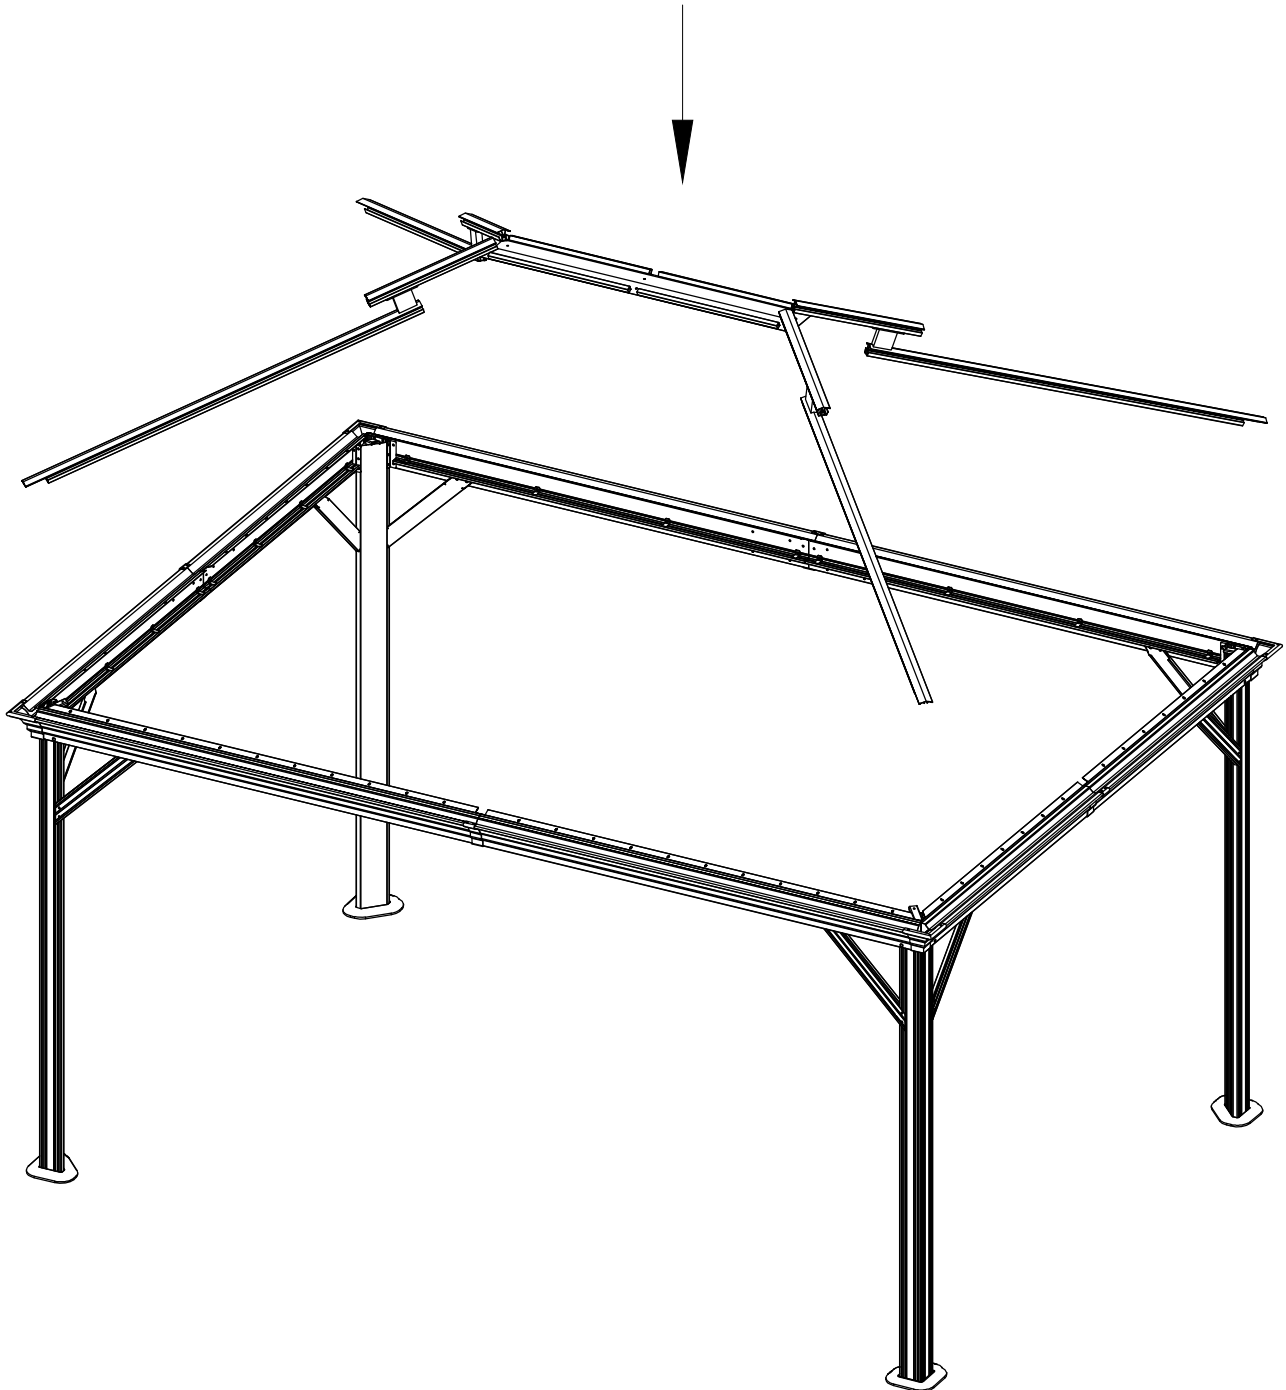


1#
×4

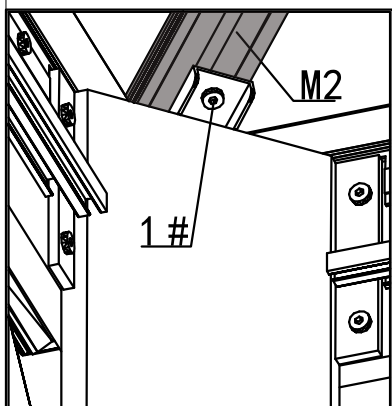

INSIDE VIEW


Place 4 Part #M2 on the Poles; Secure with 4 Bolts #1.

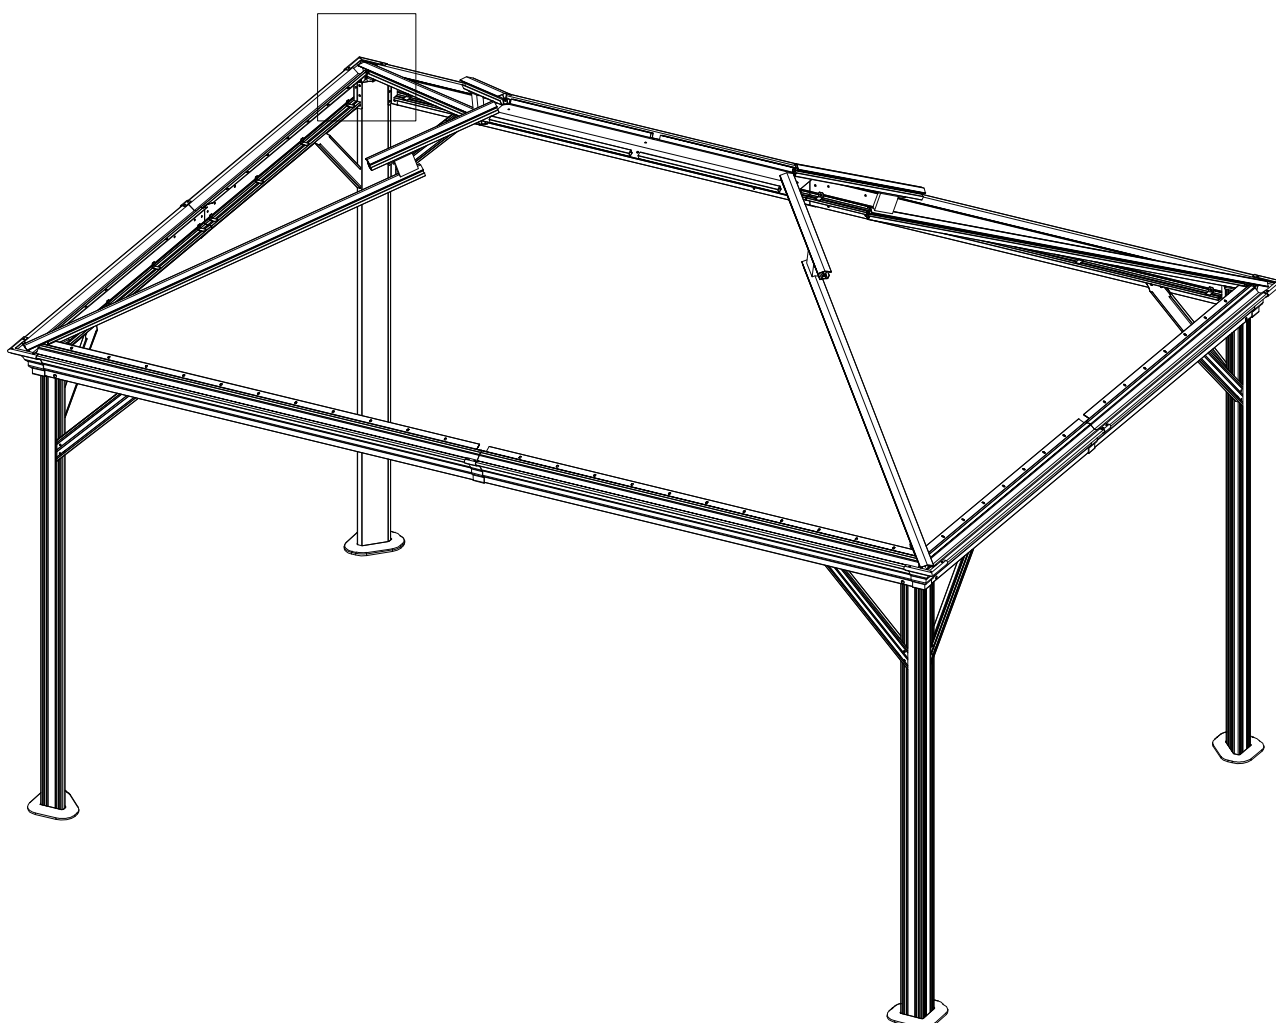


Please have a freestanding ladder ready at the center of the gazebo.



N (x4)

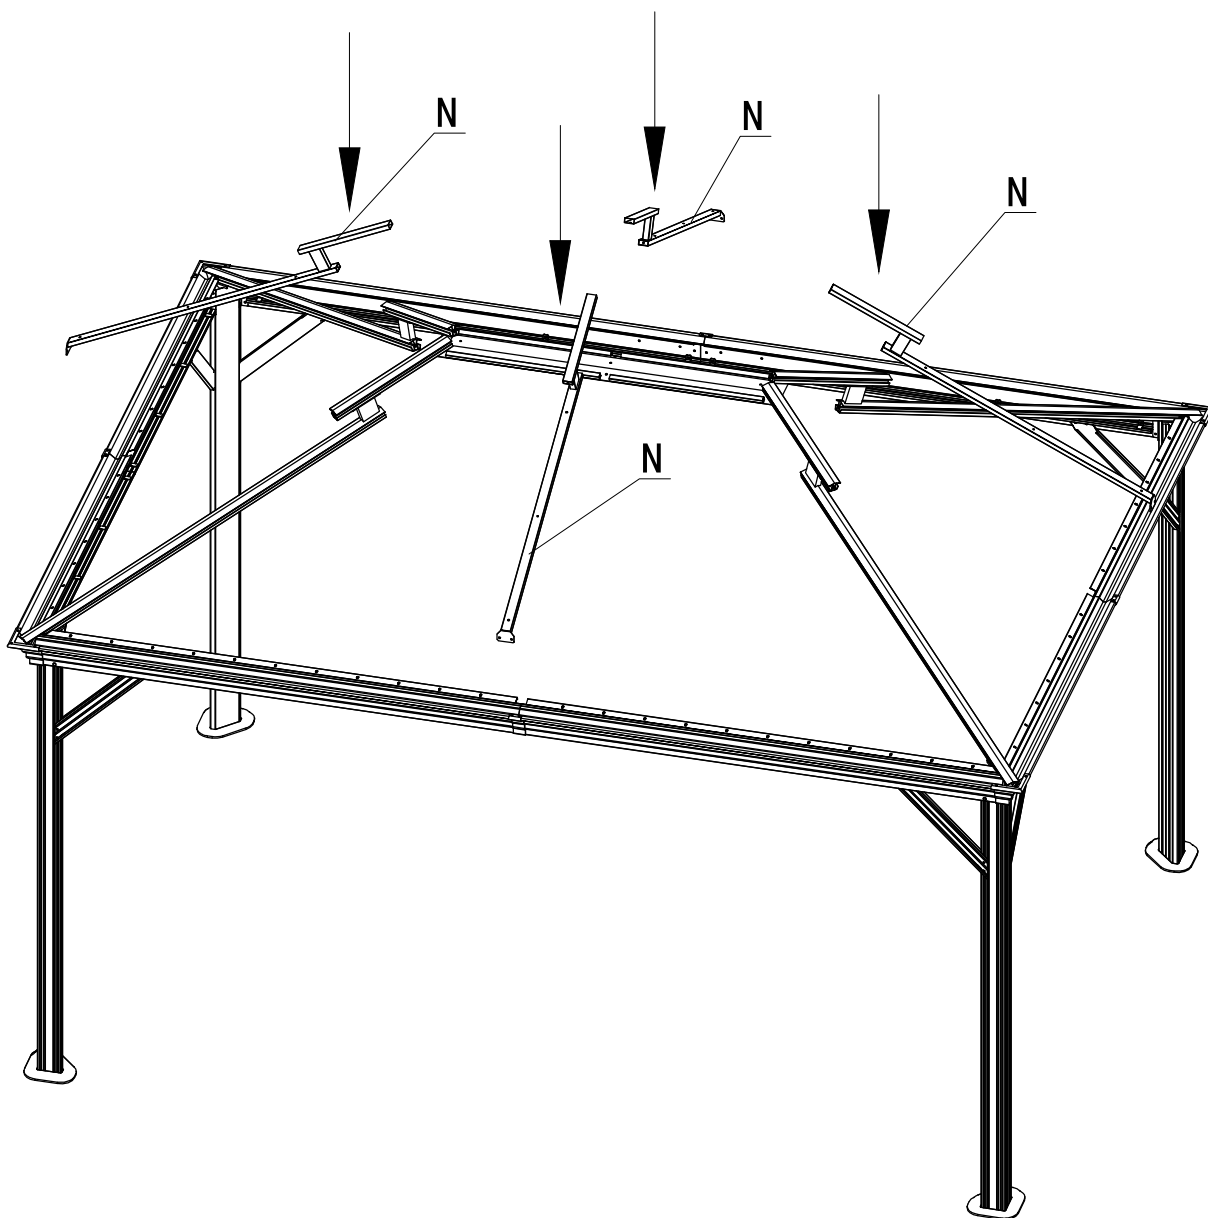




MIDDLE ROOF TUBE ASSEMBLY:


(1) Place Middle Roof Tube #N on Inside Roof Connector ,secure with Bolt #1 (from bottom to top).

(1) Connect Middle Roof Tube #N and the Assembled Beam with 2 Bolts #1.

Repeat the above procedures to assemble the other sides.

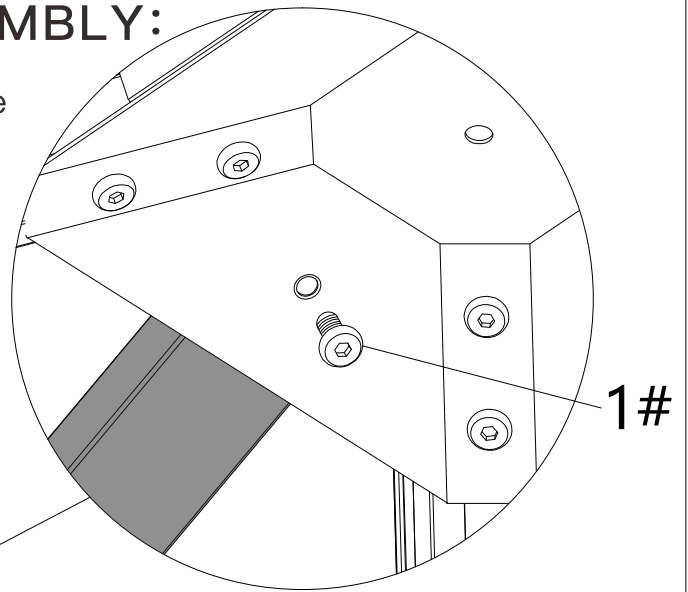


Bottom View

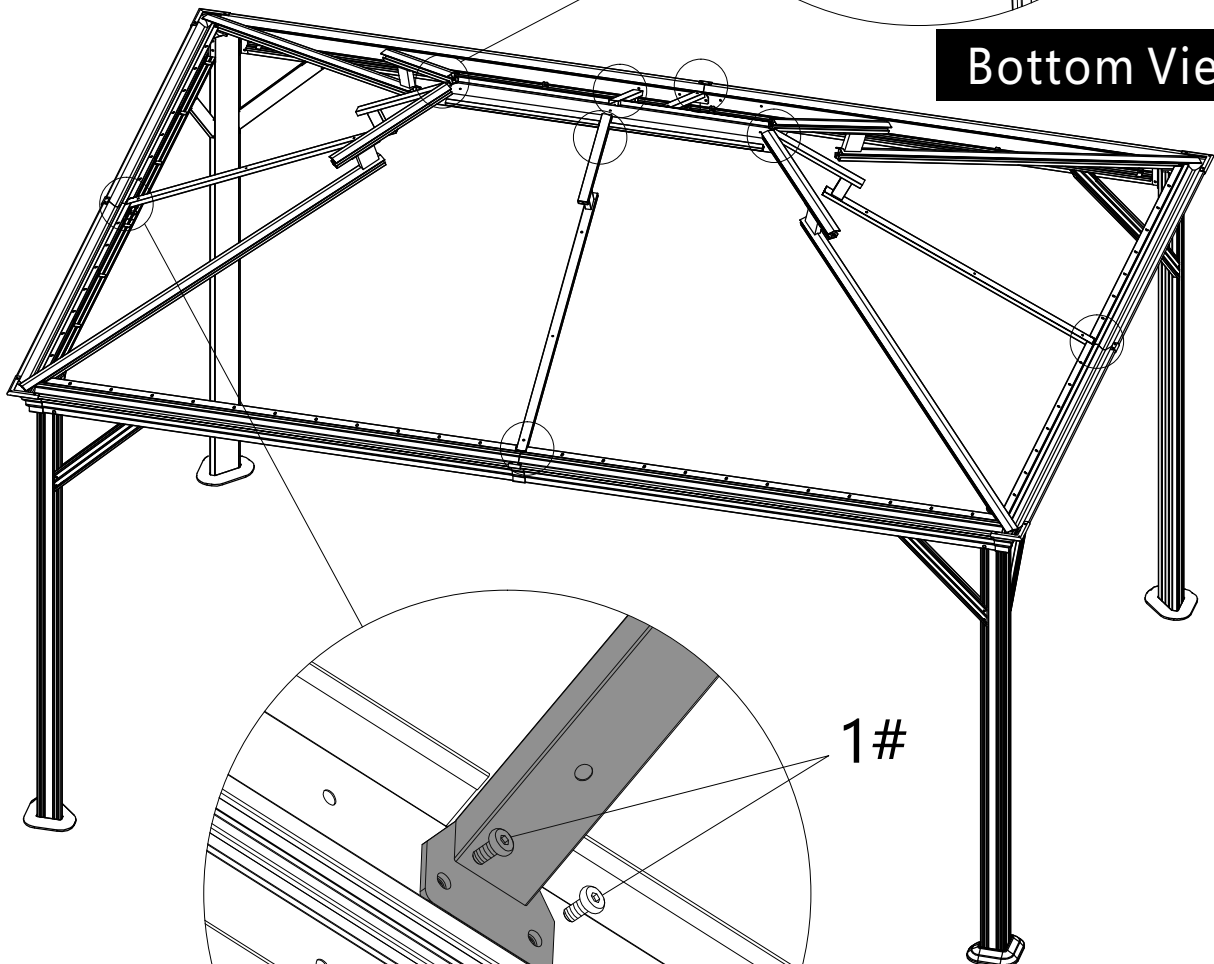


Inside View


Check the the frame as pictures below shows.

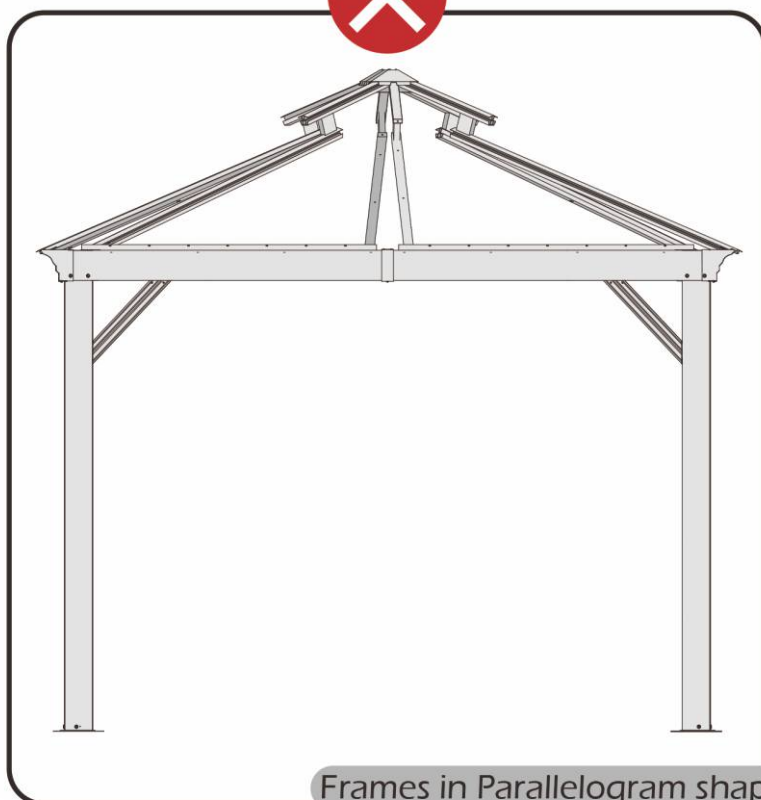


Frames in Parallelogram shape

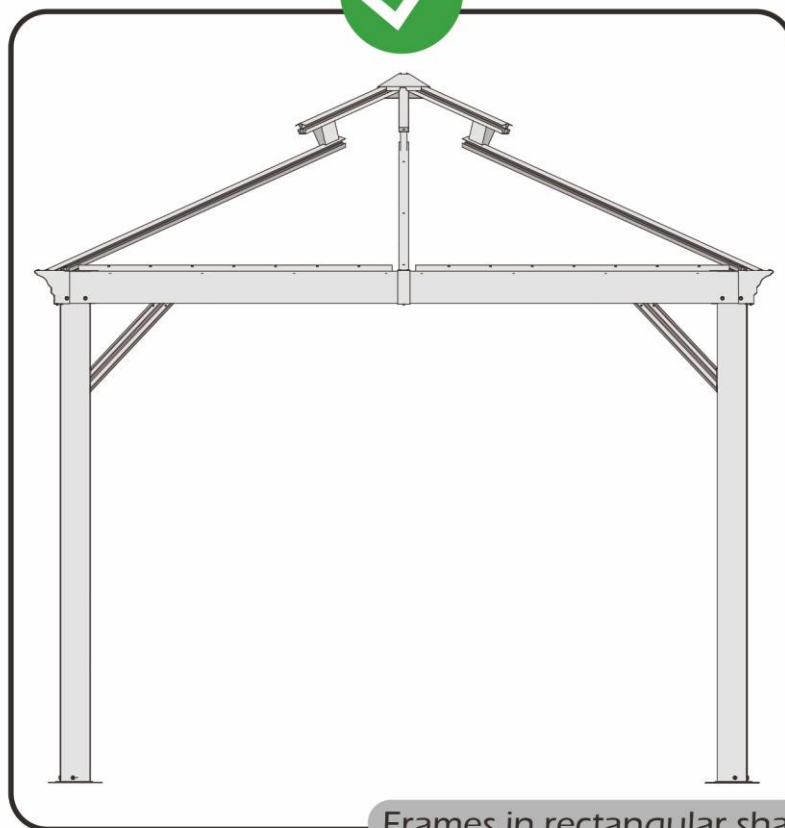


Frames in rectangular shape



Q1 (x1)





Pa (x2)



Pb (x2)

PLASTIC BAR ASSEMBLY :

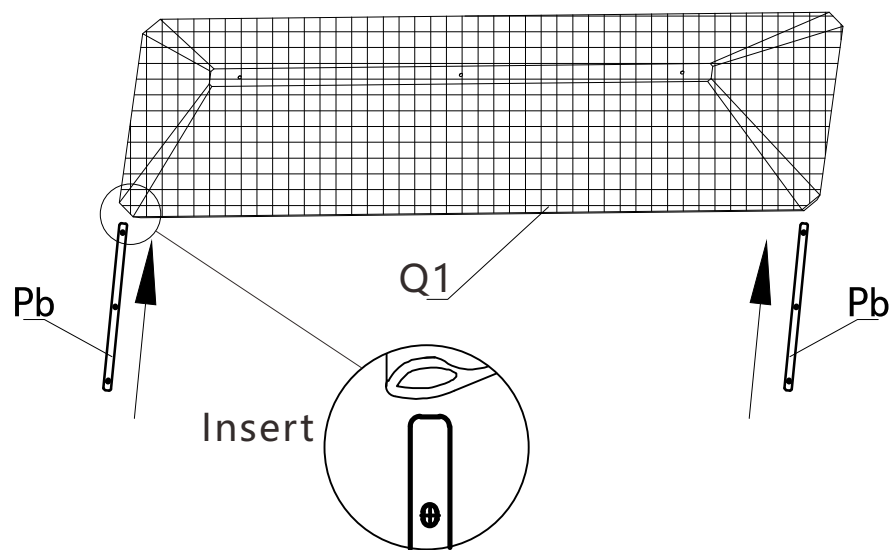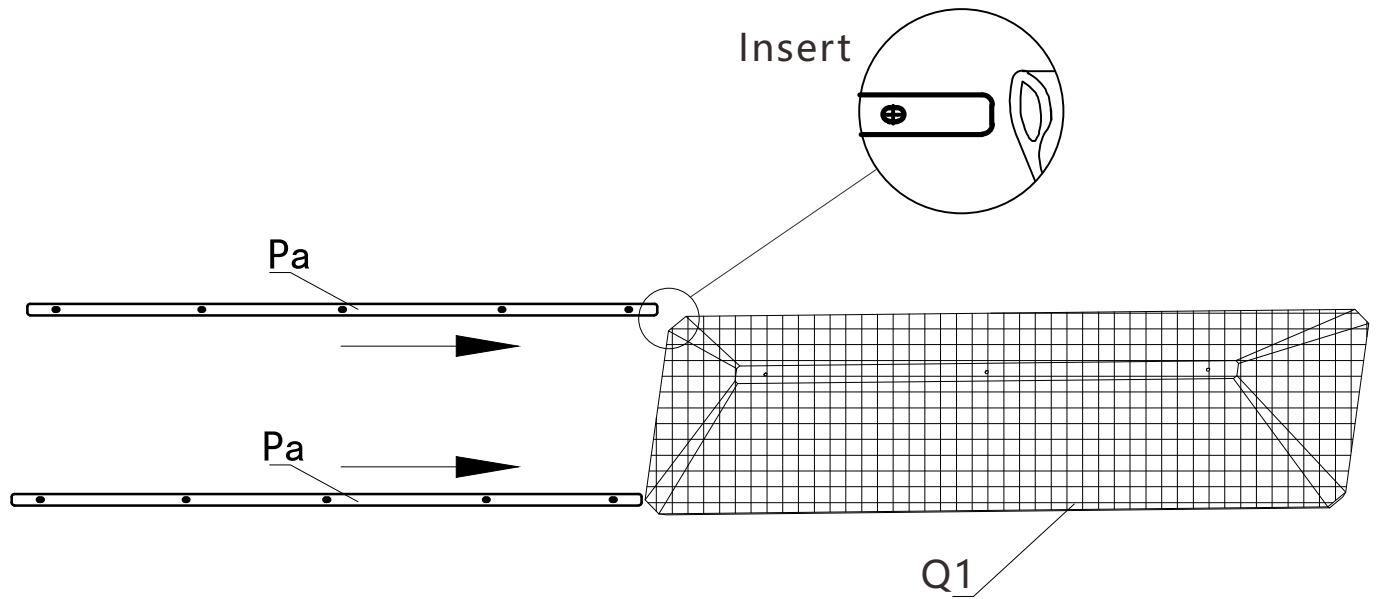




K1 (x1)







R1 (x3)

OUTSIDE ROOF COVER AND MESH ASSEMBLY :

- (1) Place the Outside Roof Cover #K1 on the inside Roof Cover.
- (2) Align the holes, and use 3 Hooks #R1 to secure Mesh #Q1 to the inside Roof Cover (From Bottom to Top).

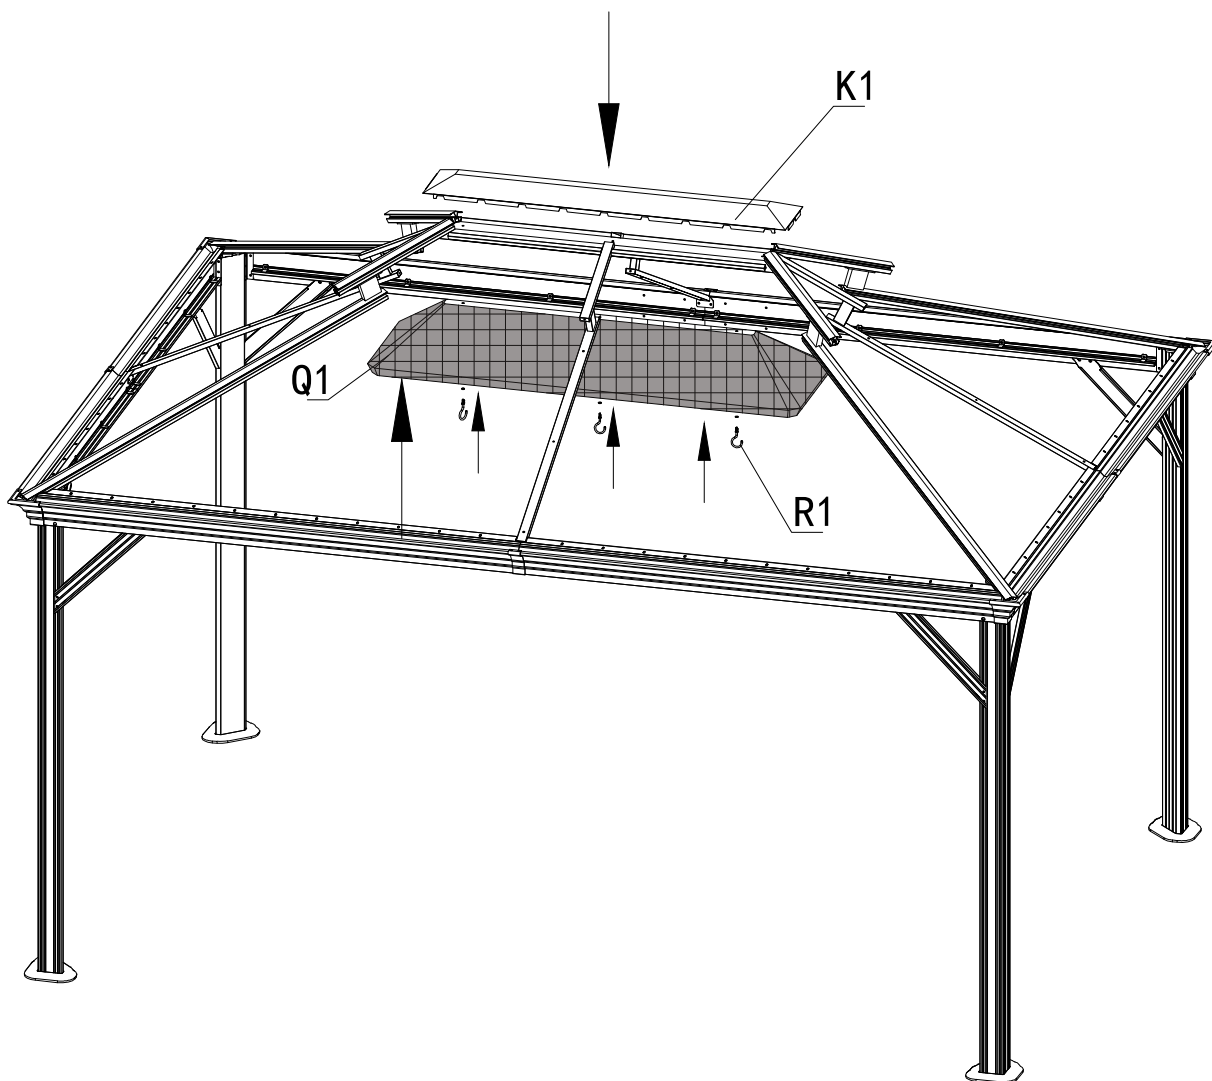


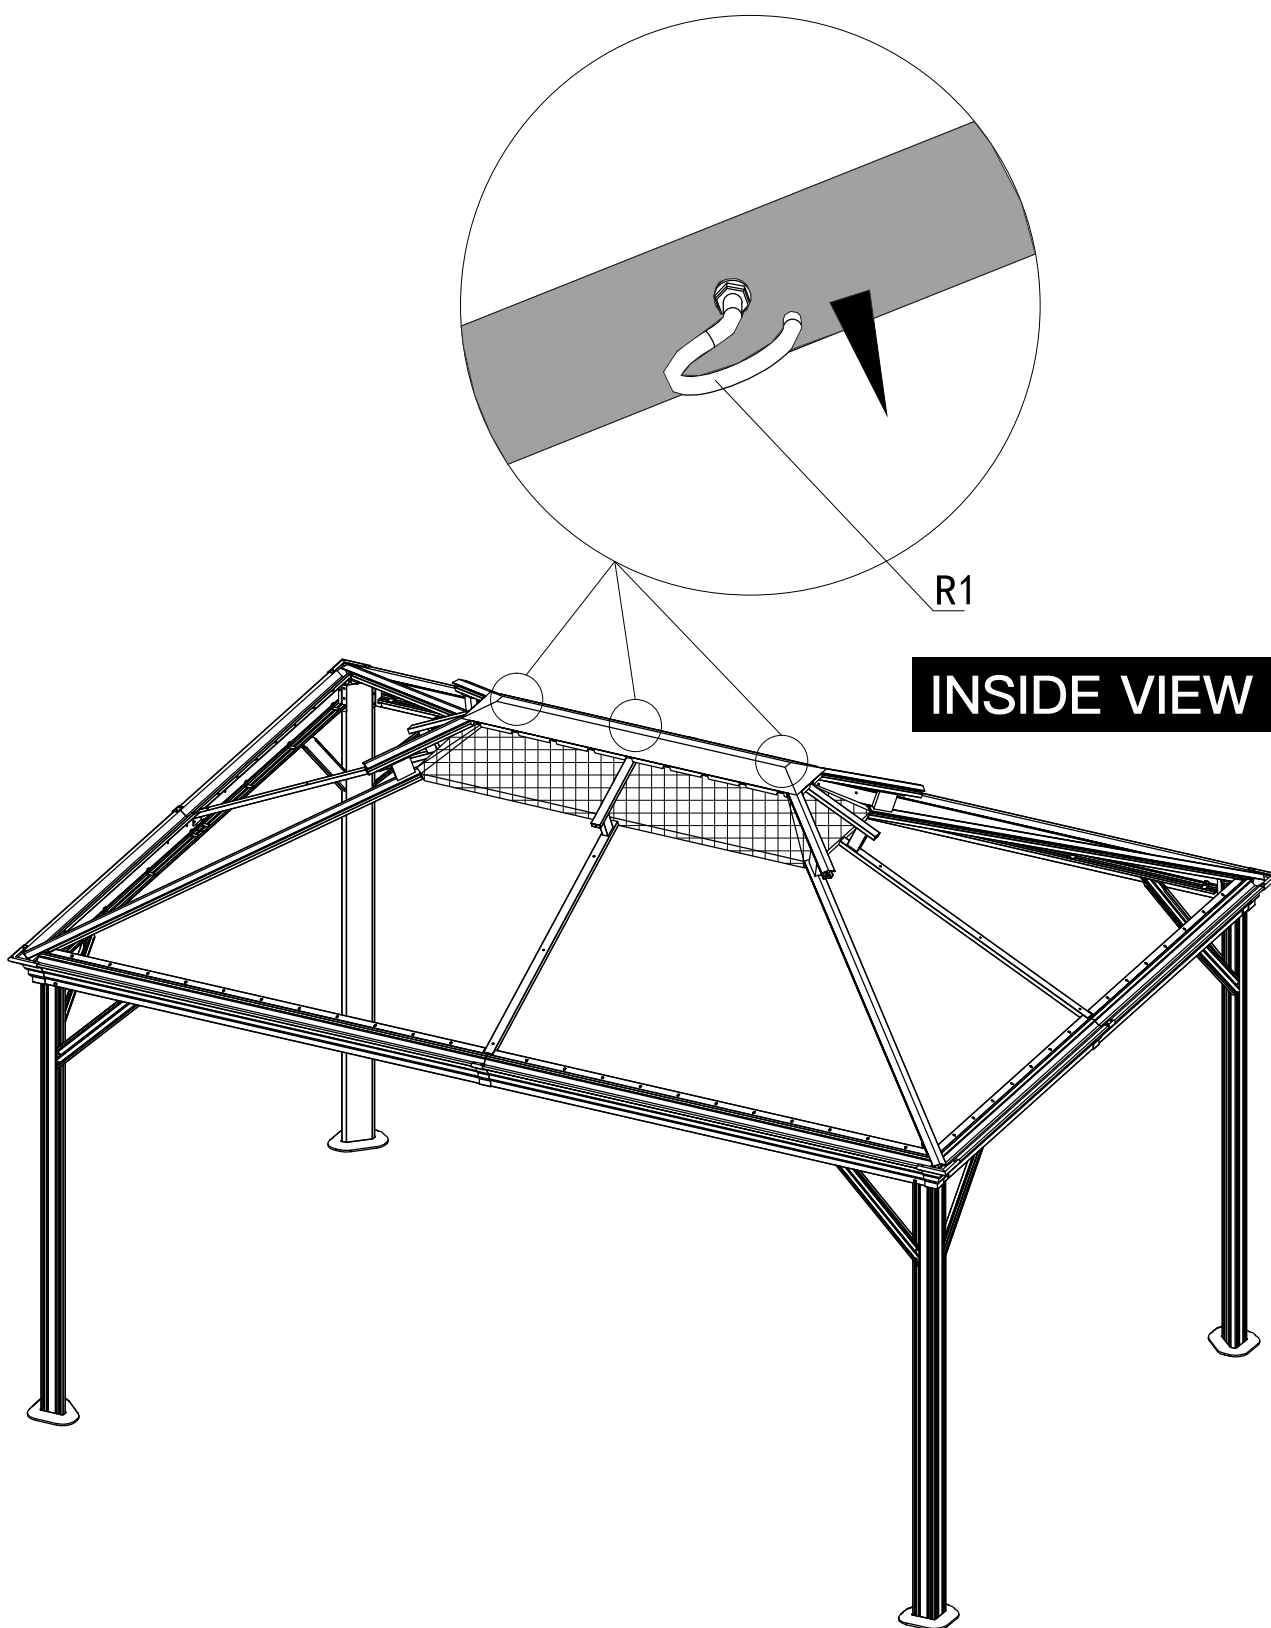

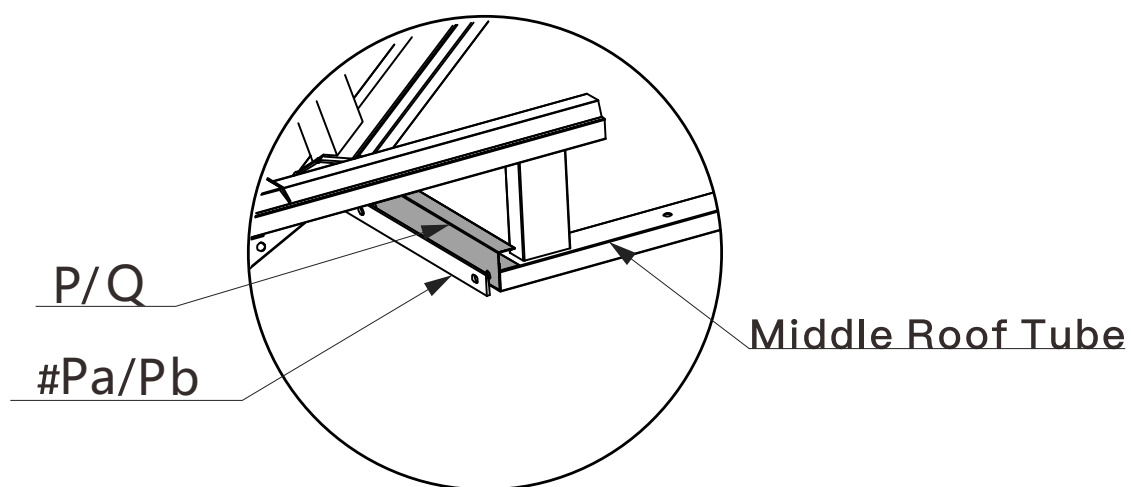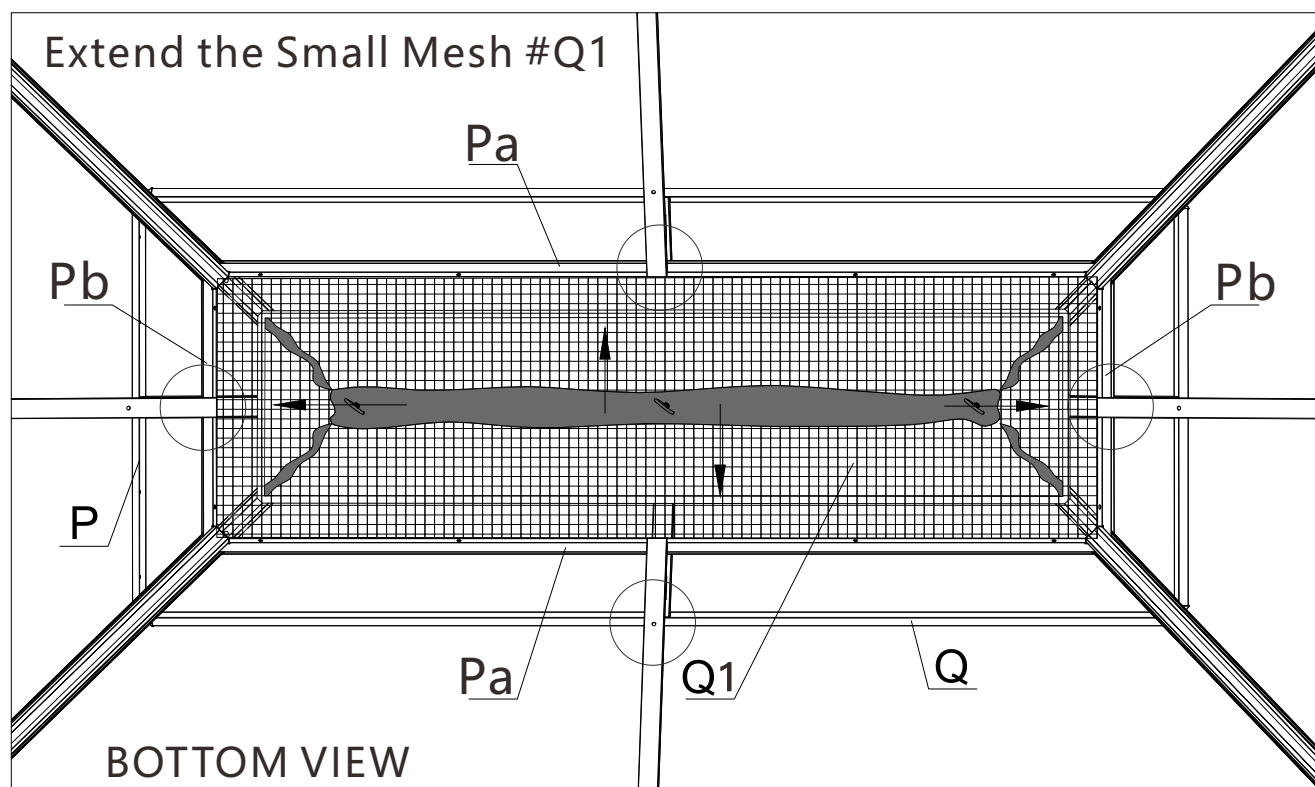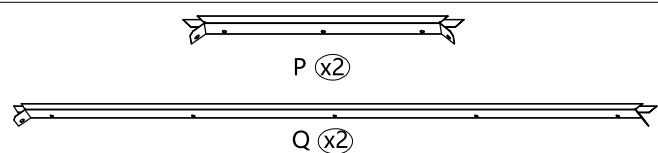




Please do not pull plastic bar out when installing it with # P, Q on the middle roof tube.

12#
x4





11#
x4



BOTTOM VIEW

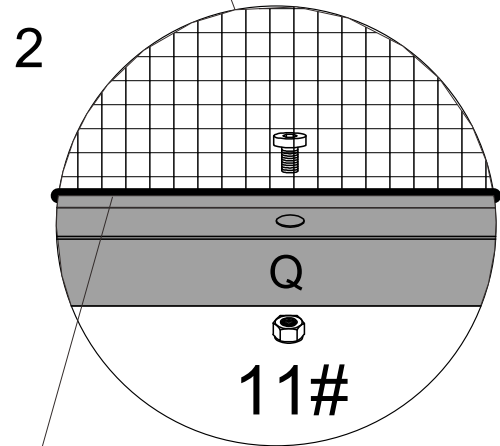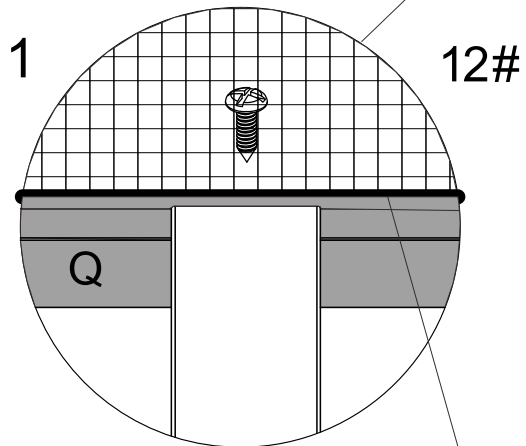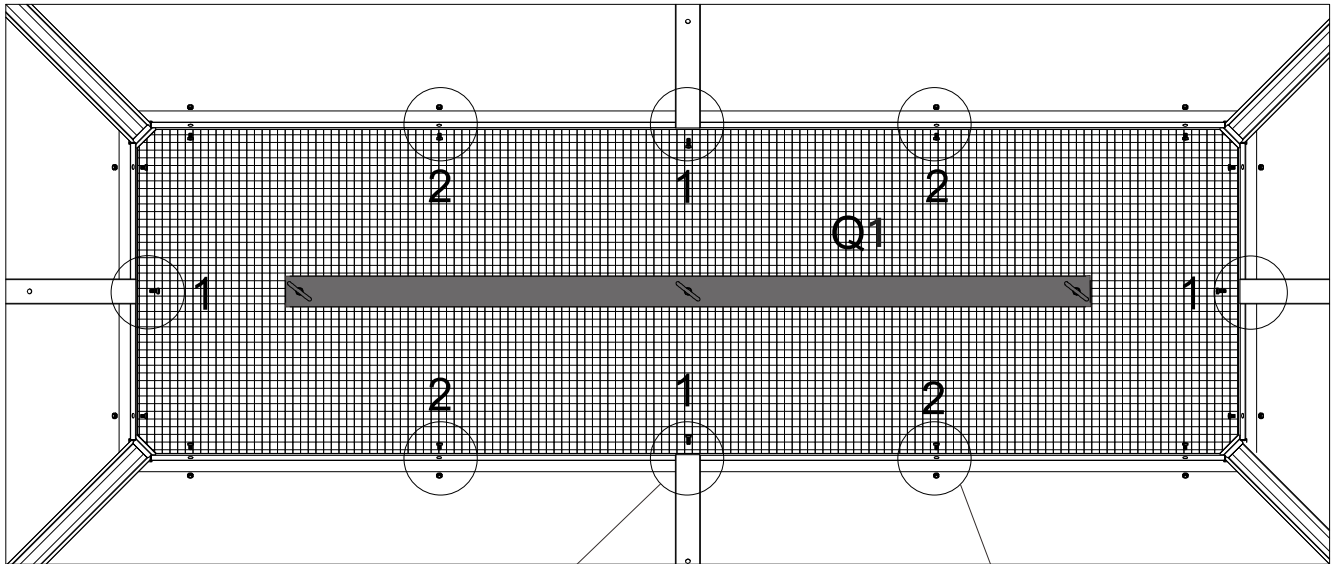

Plastic Bar
in the mesh




FINISHING END #R ASSEMBLY:

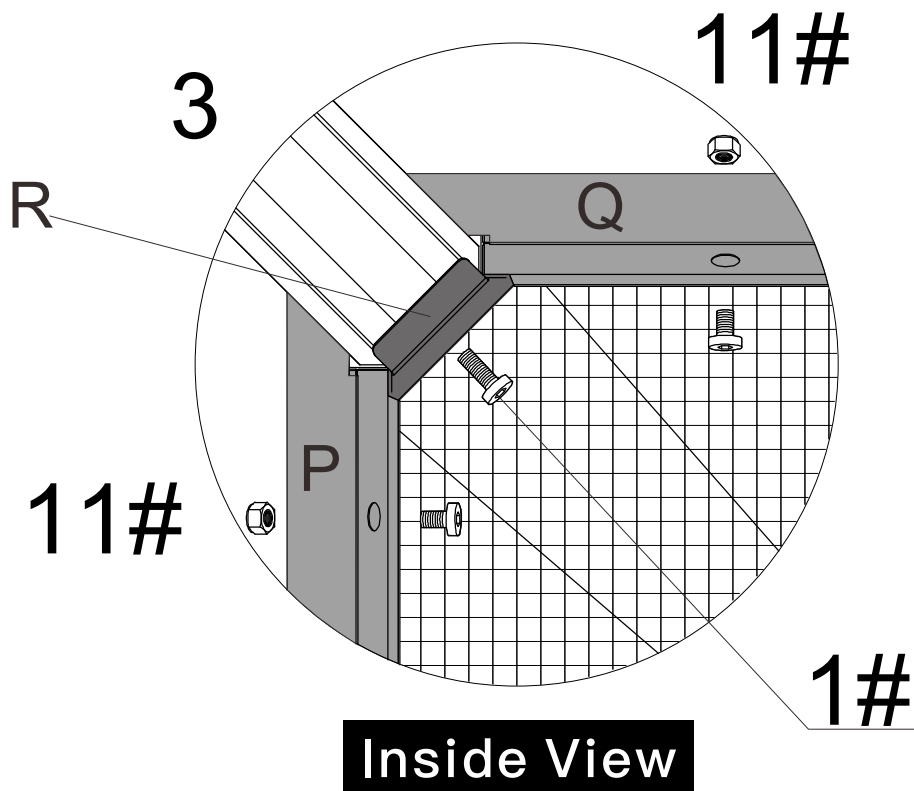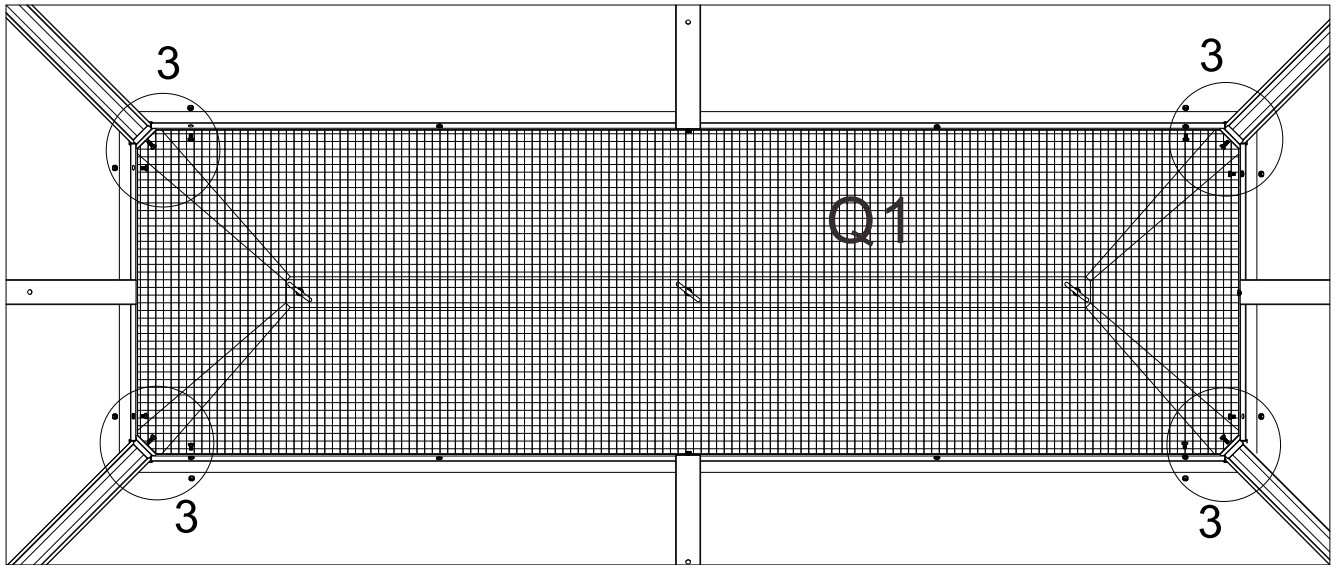


■ Plastic Bar in the mesh









■ # P/Q

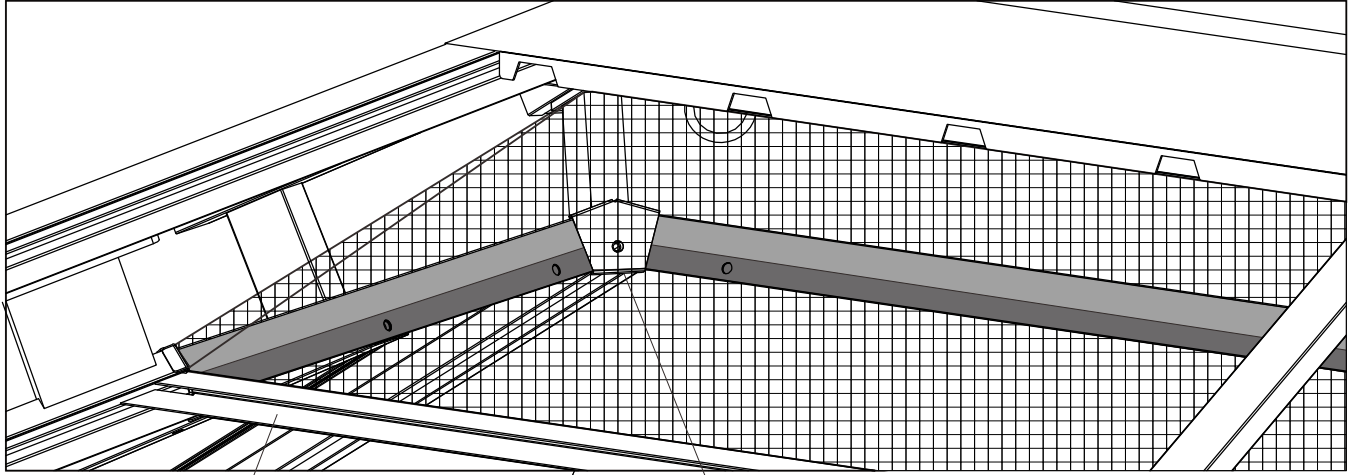







Q

R

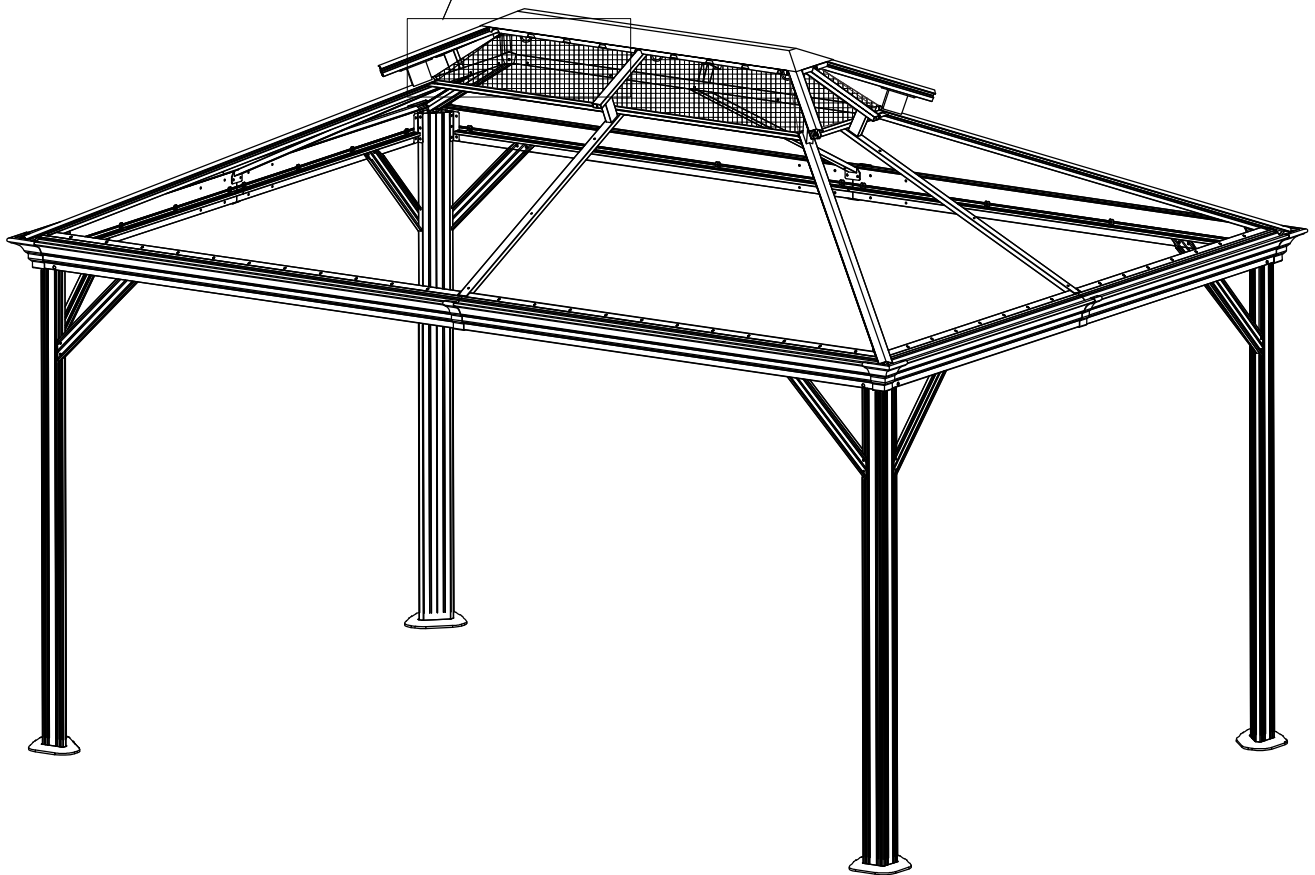


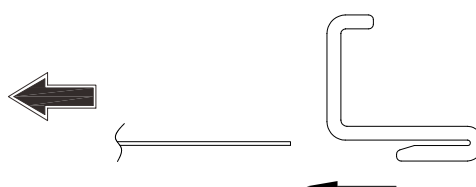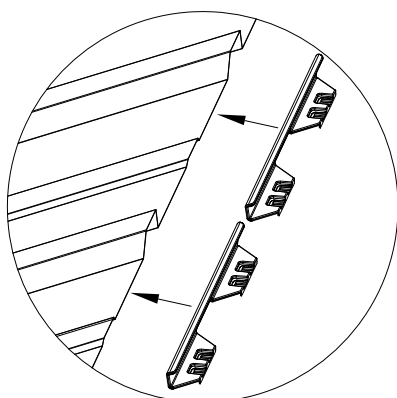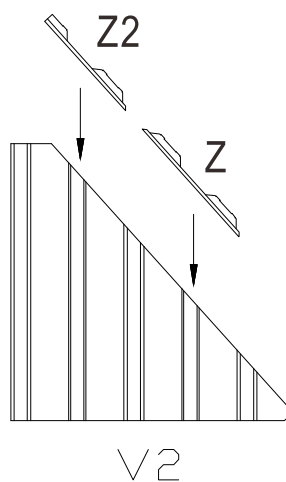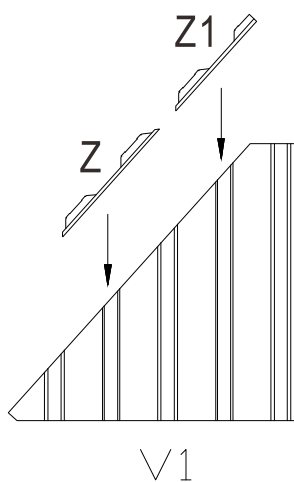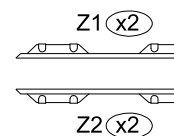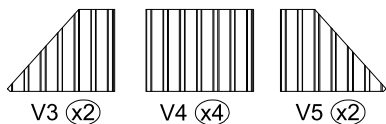



Section View

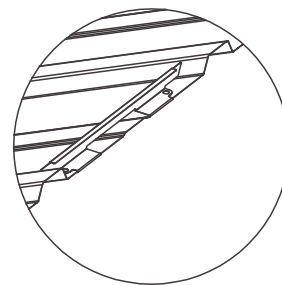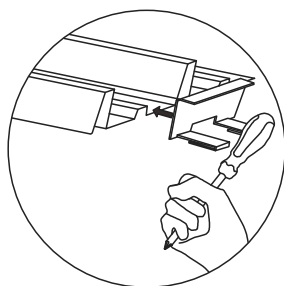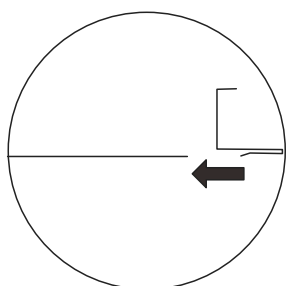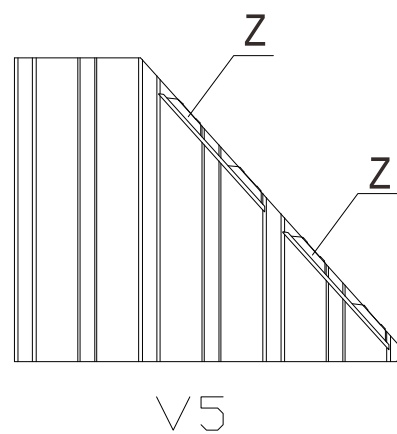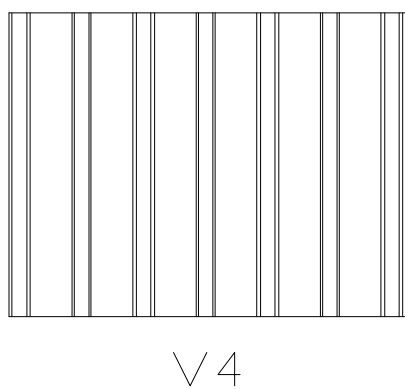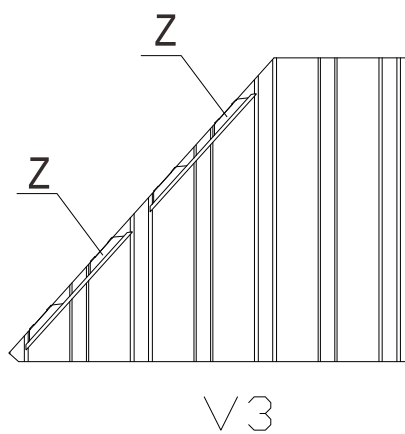


Attach Part #Z, #Z1 & #Z2 by lightly tapping with screwdriver.
Please install Plastic Clips in strict accordance with the instructions.

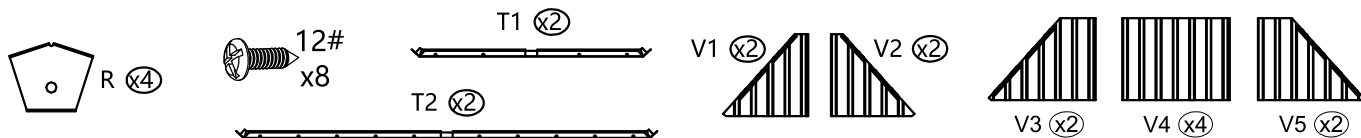


SMALL ROOF PANEL AND FINISHING BAR ASSEMBLY:

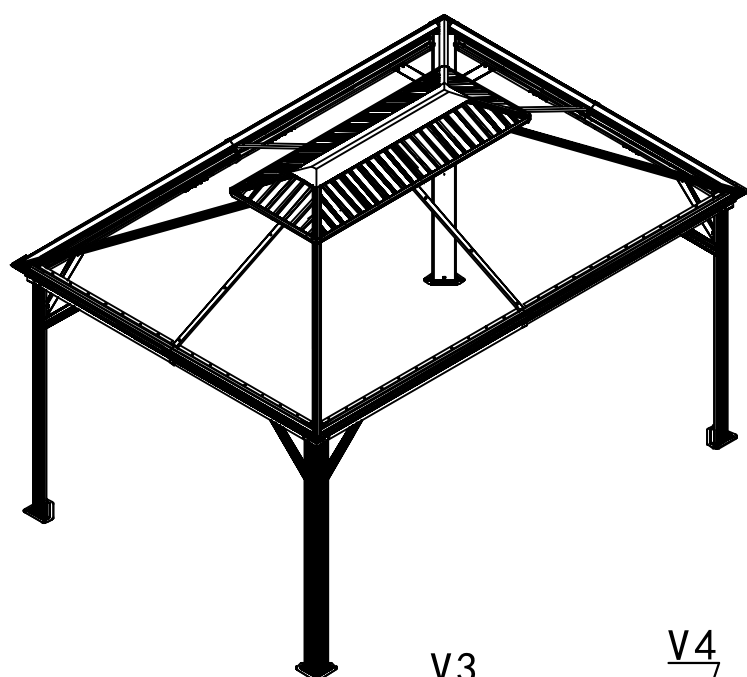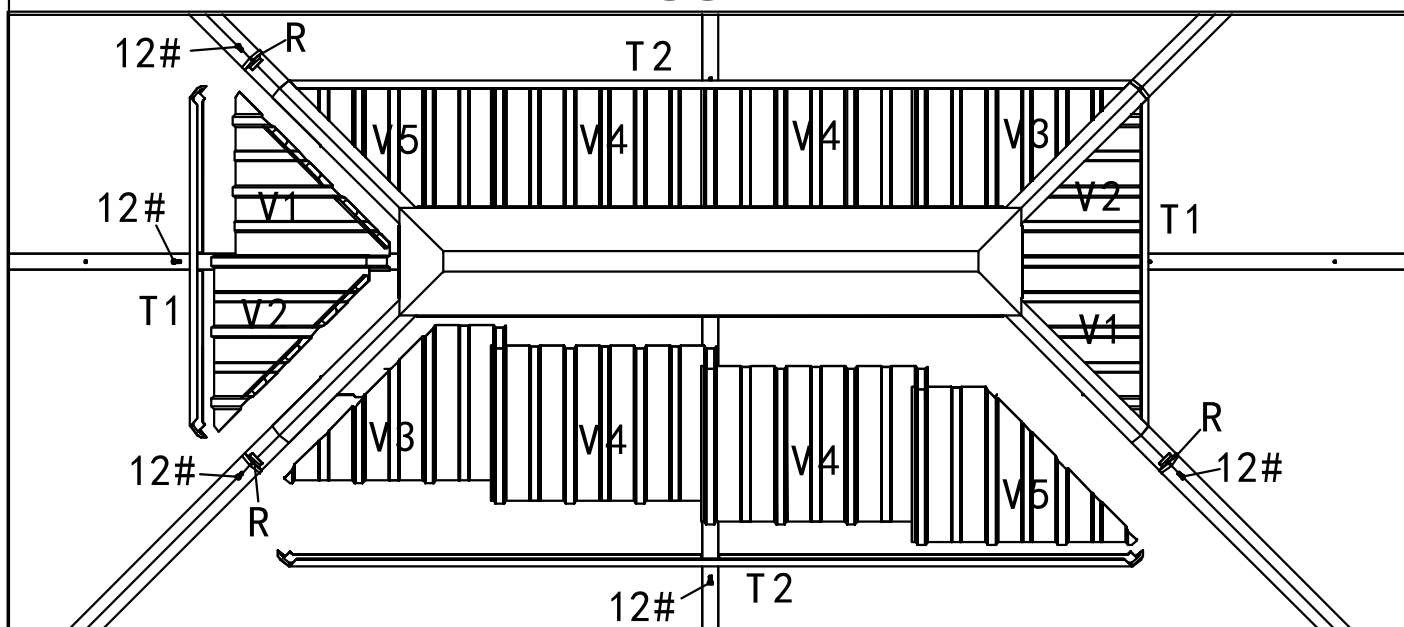


If you can't install #V4, push the Outside Roof Cover up and try to insert them again.

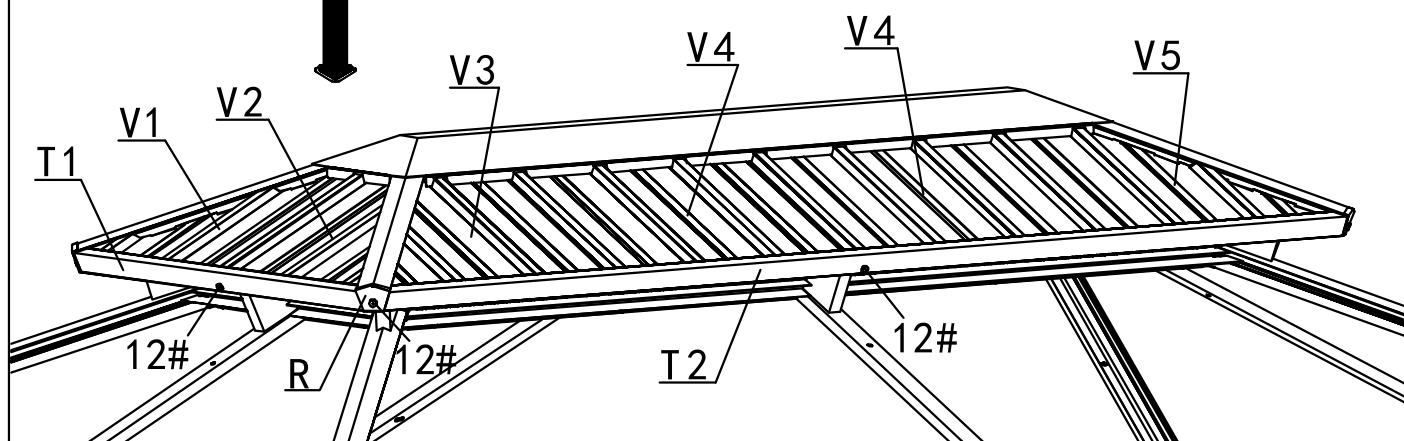





U1 (x4)



U2 (x4)



U3 (x4)




U4 (x4)










1#
x24

SOLIDIFYING BAR ASSEMBLY:

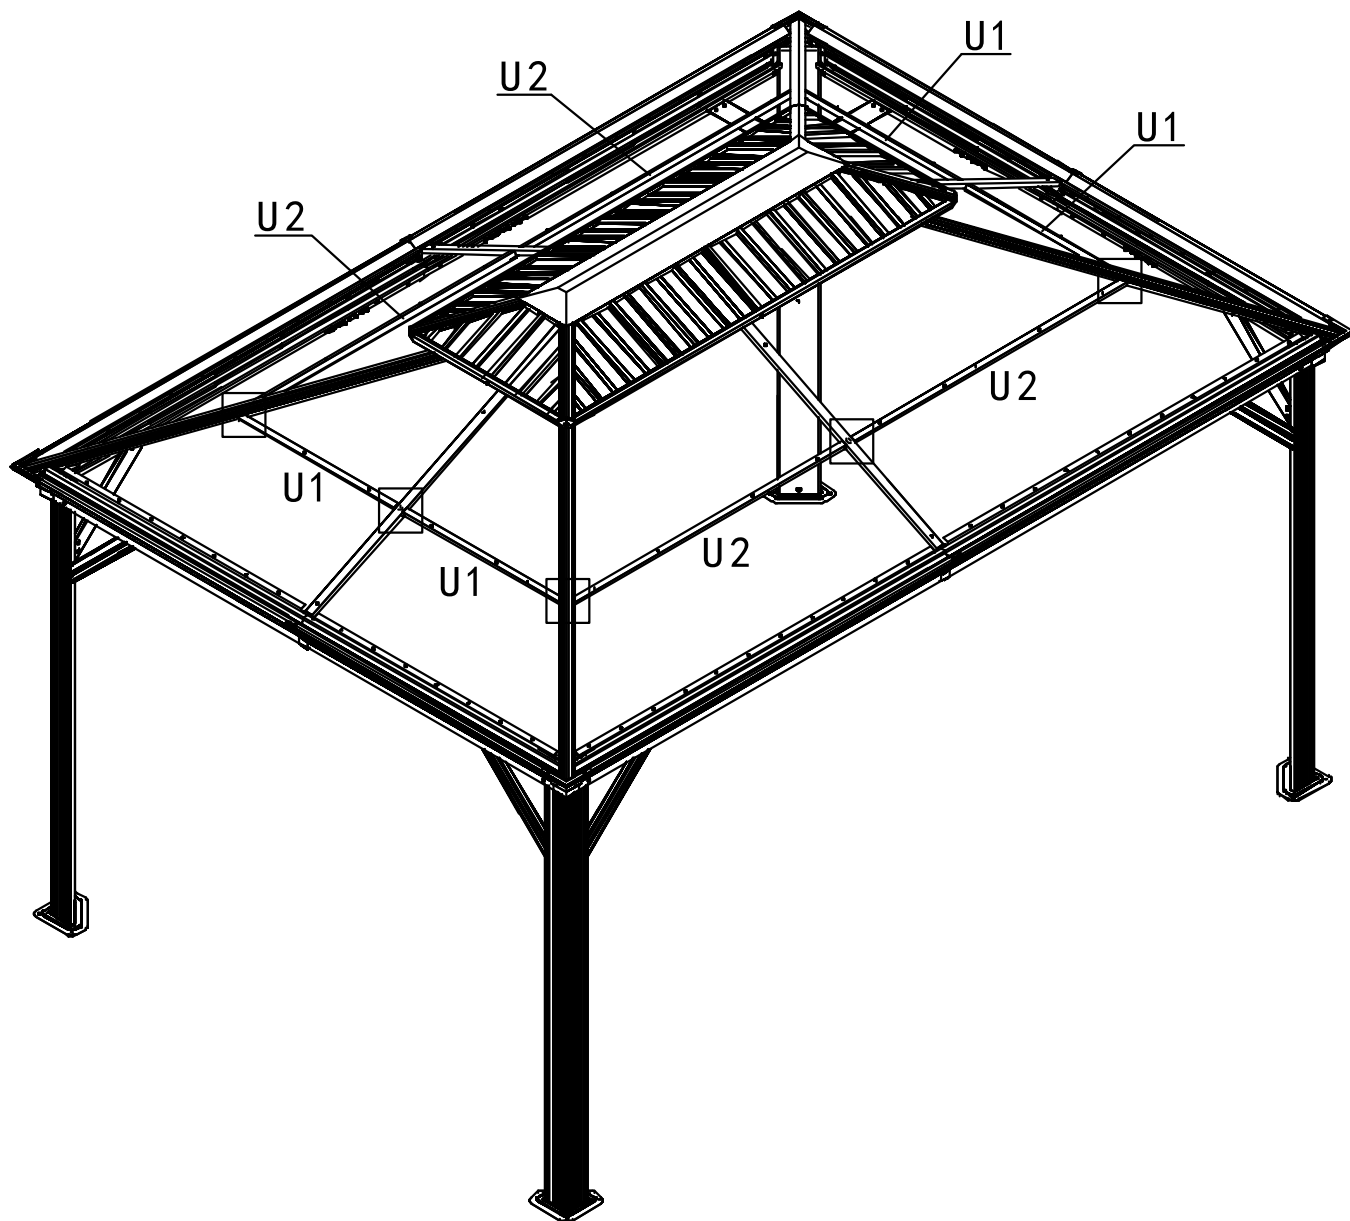


Inside View

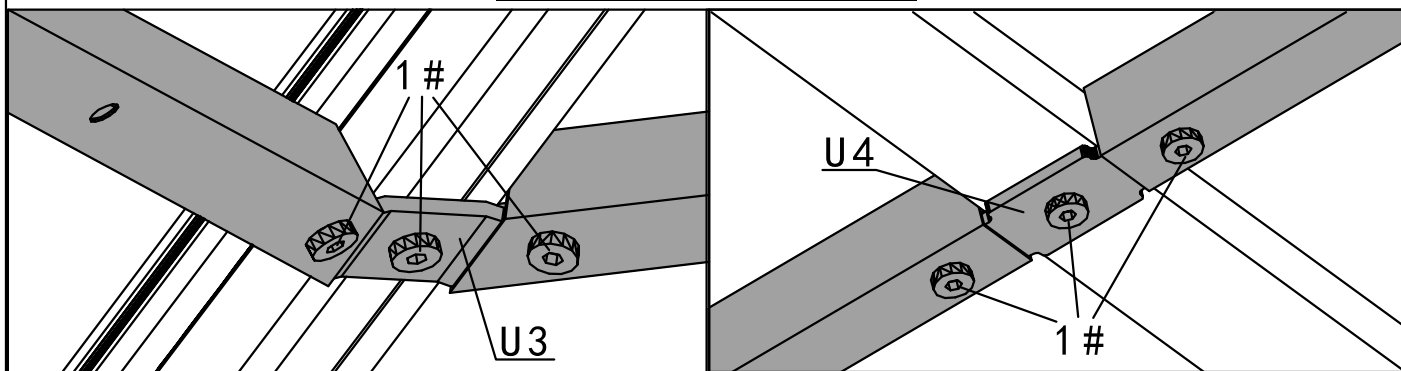


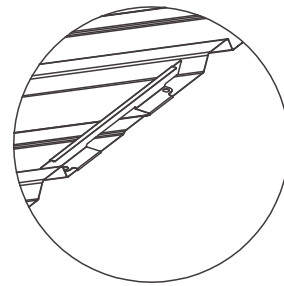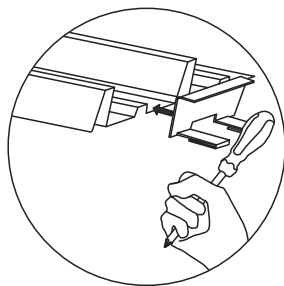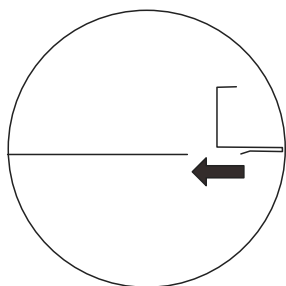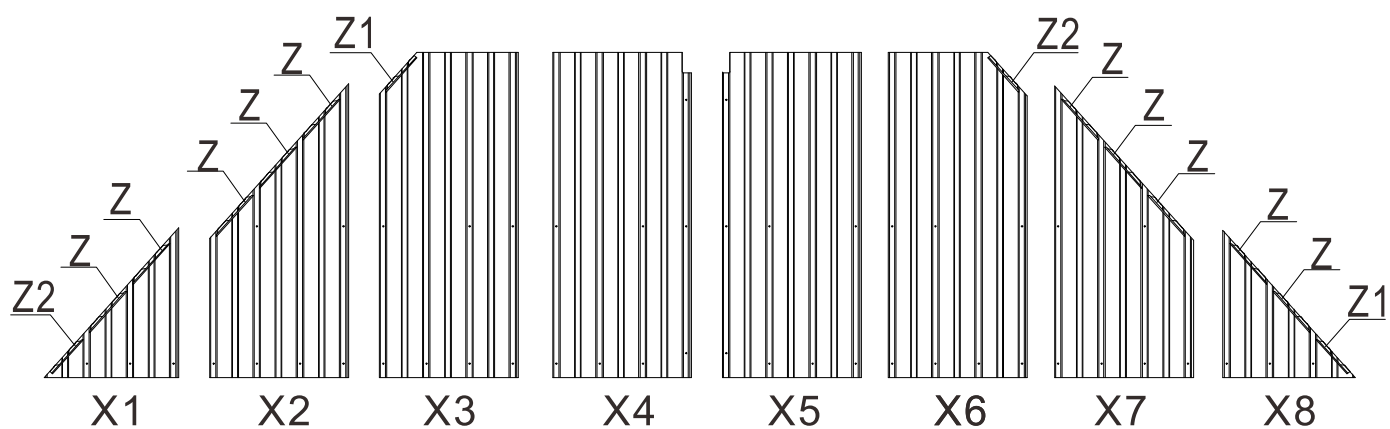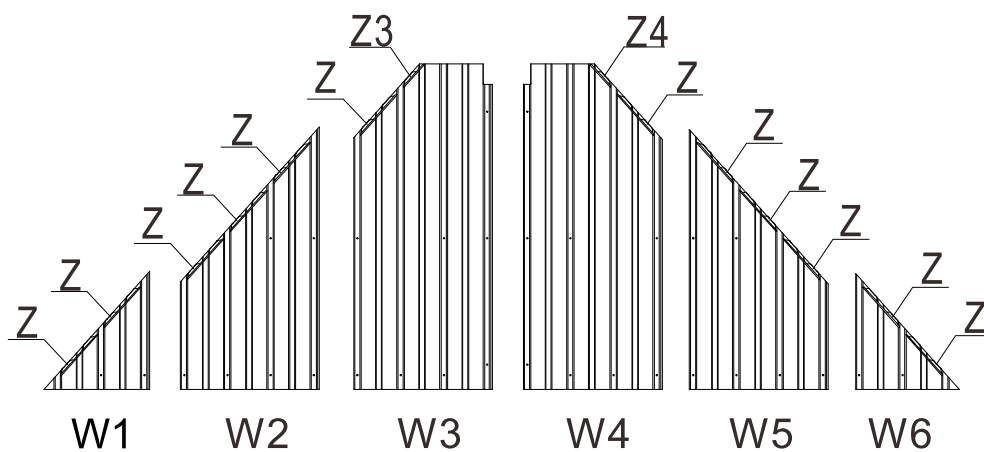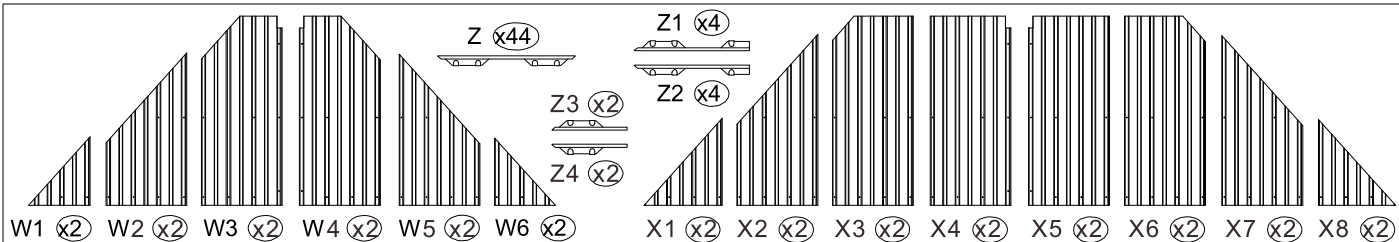

Attach Part #Z, #Z1, #Z2, Z3&Z4 by lightly tapping with screwdriver.

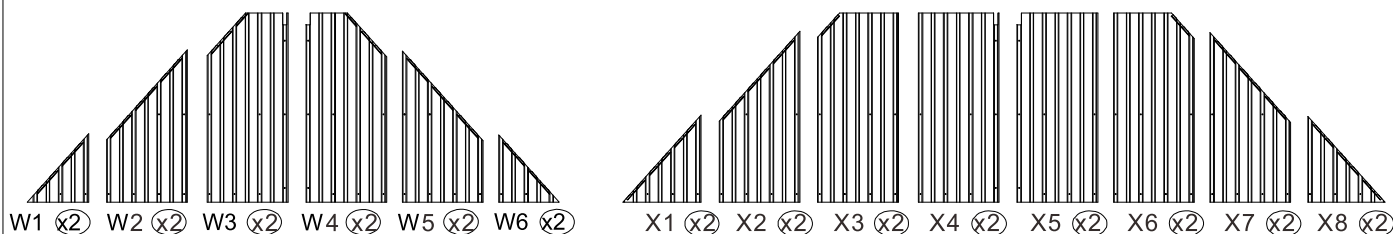

Install the Middle Panels (#X4 ,X5 or #W3,W4) first, then the small panels on the edge.

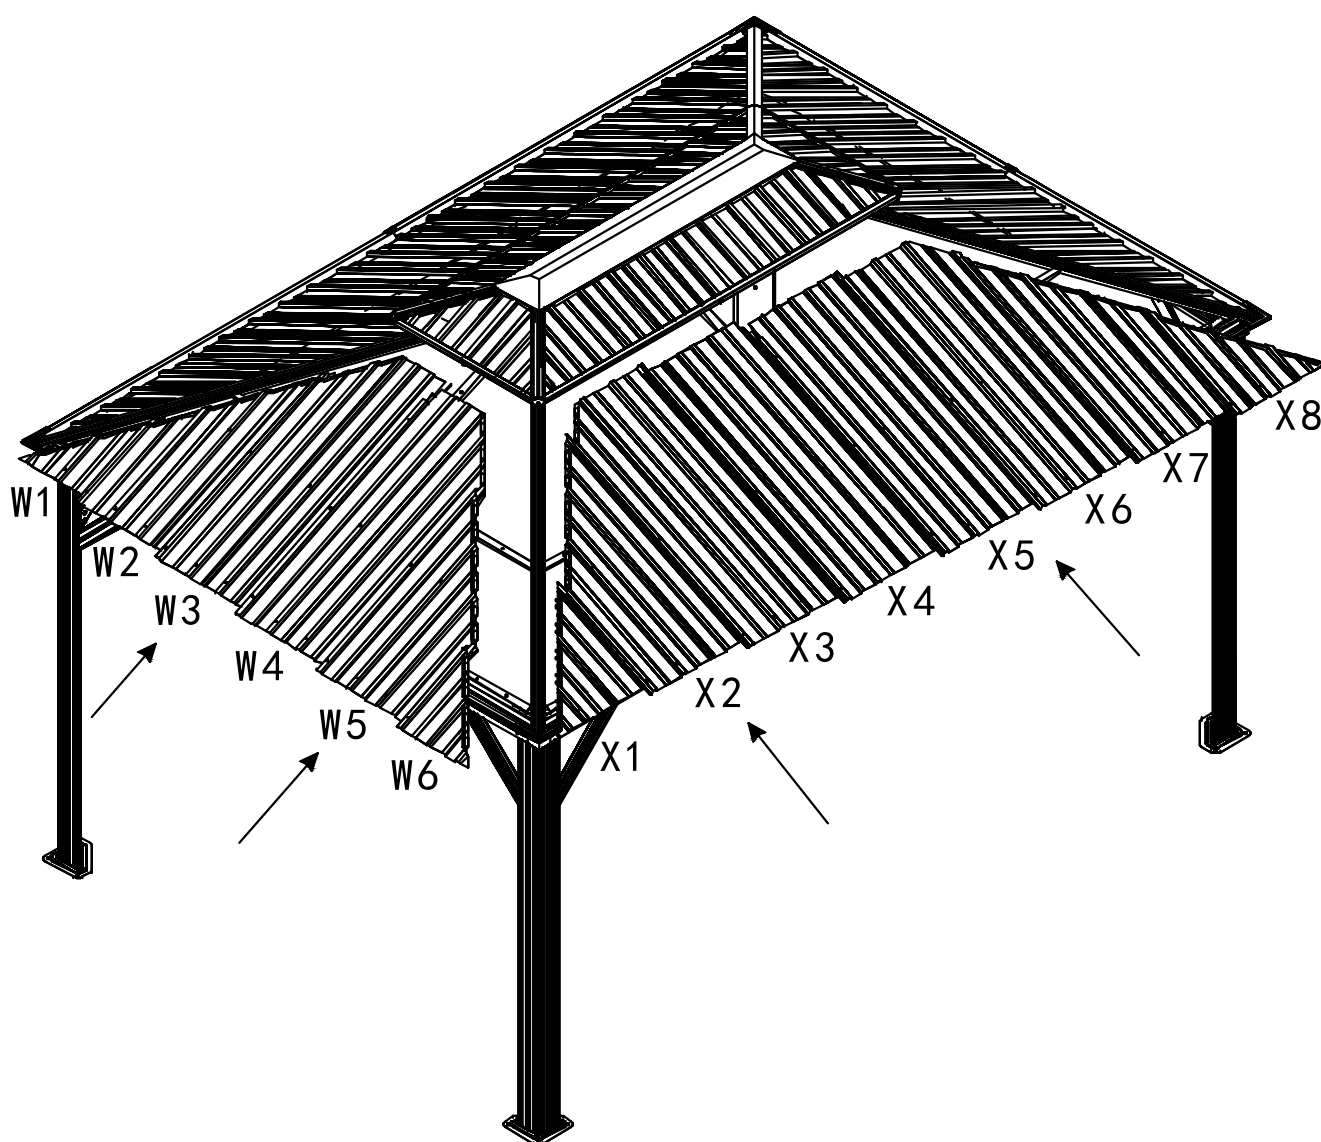

The Rubber Spacer #S should be assembled when installing the roof panels; please see the next page.


□ S x116

5# x72





6# x8

7# x32

10# x4

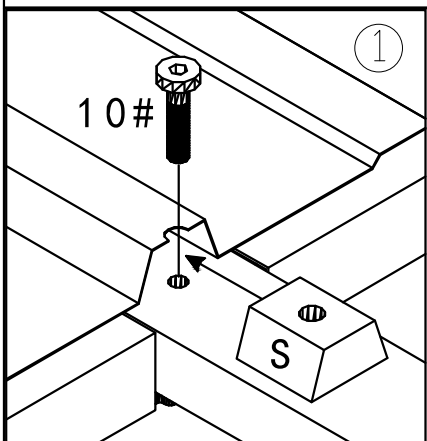


The Black Rubber #S should be inserted between roof panels and solidifying bars or beams, then secure with bolts and nuts.

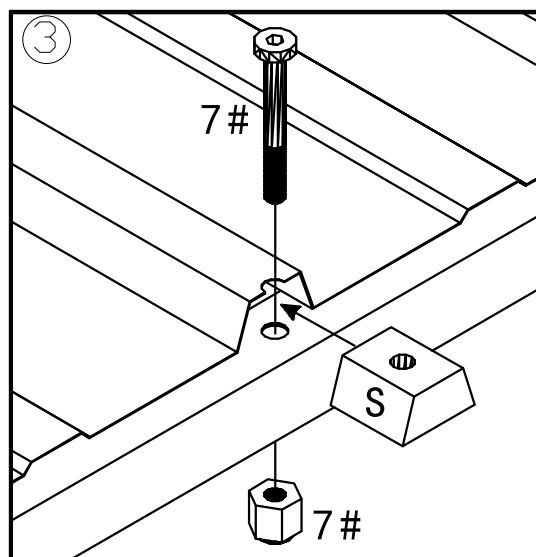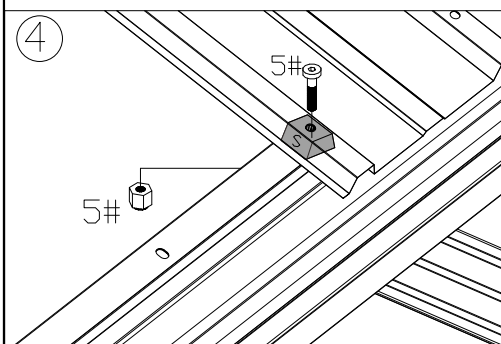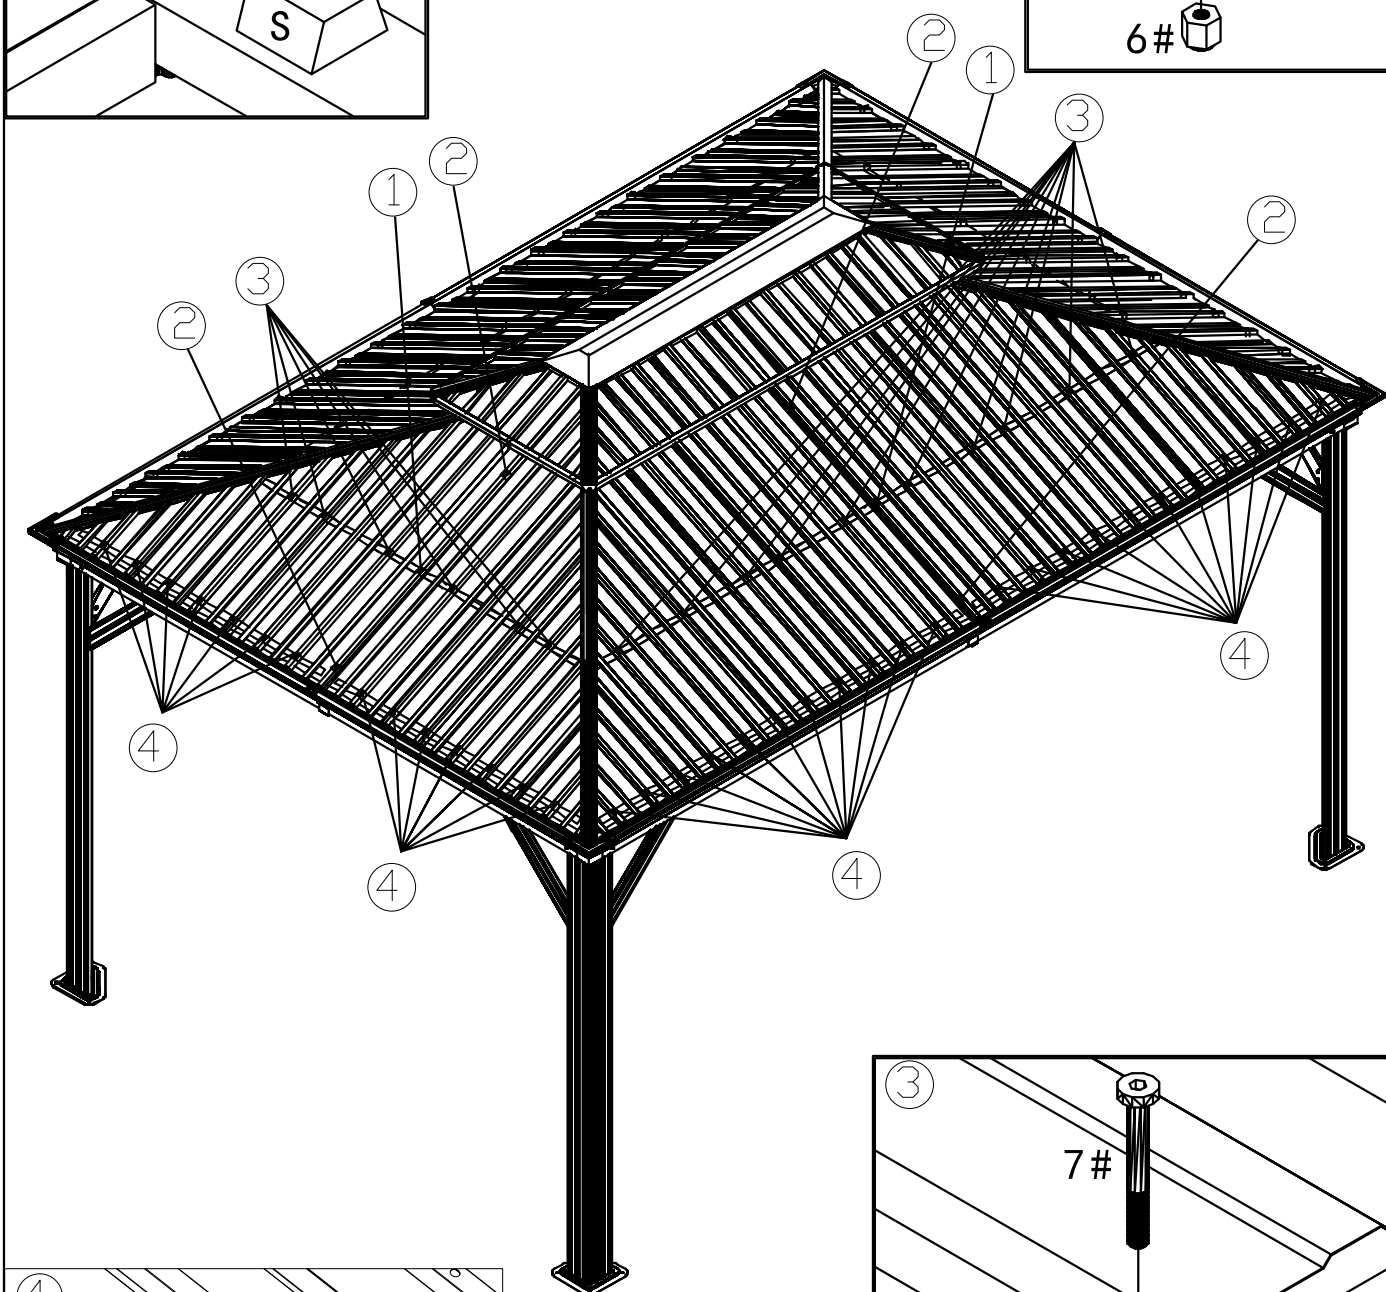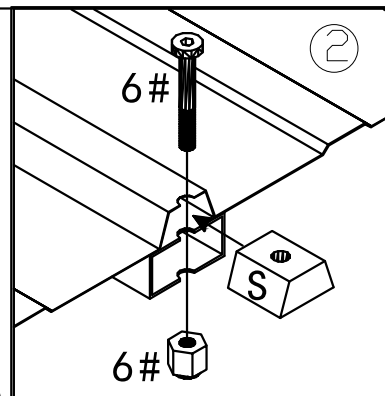


S x4




10#
x4

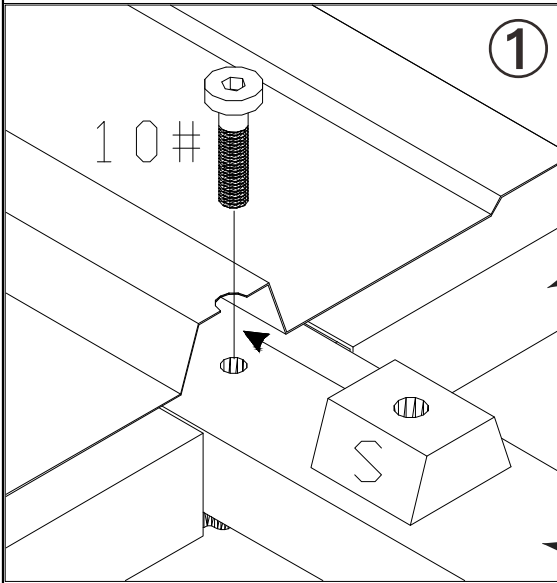

Solidifying Bar


Middle Roof Tube

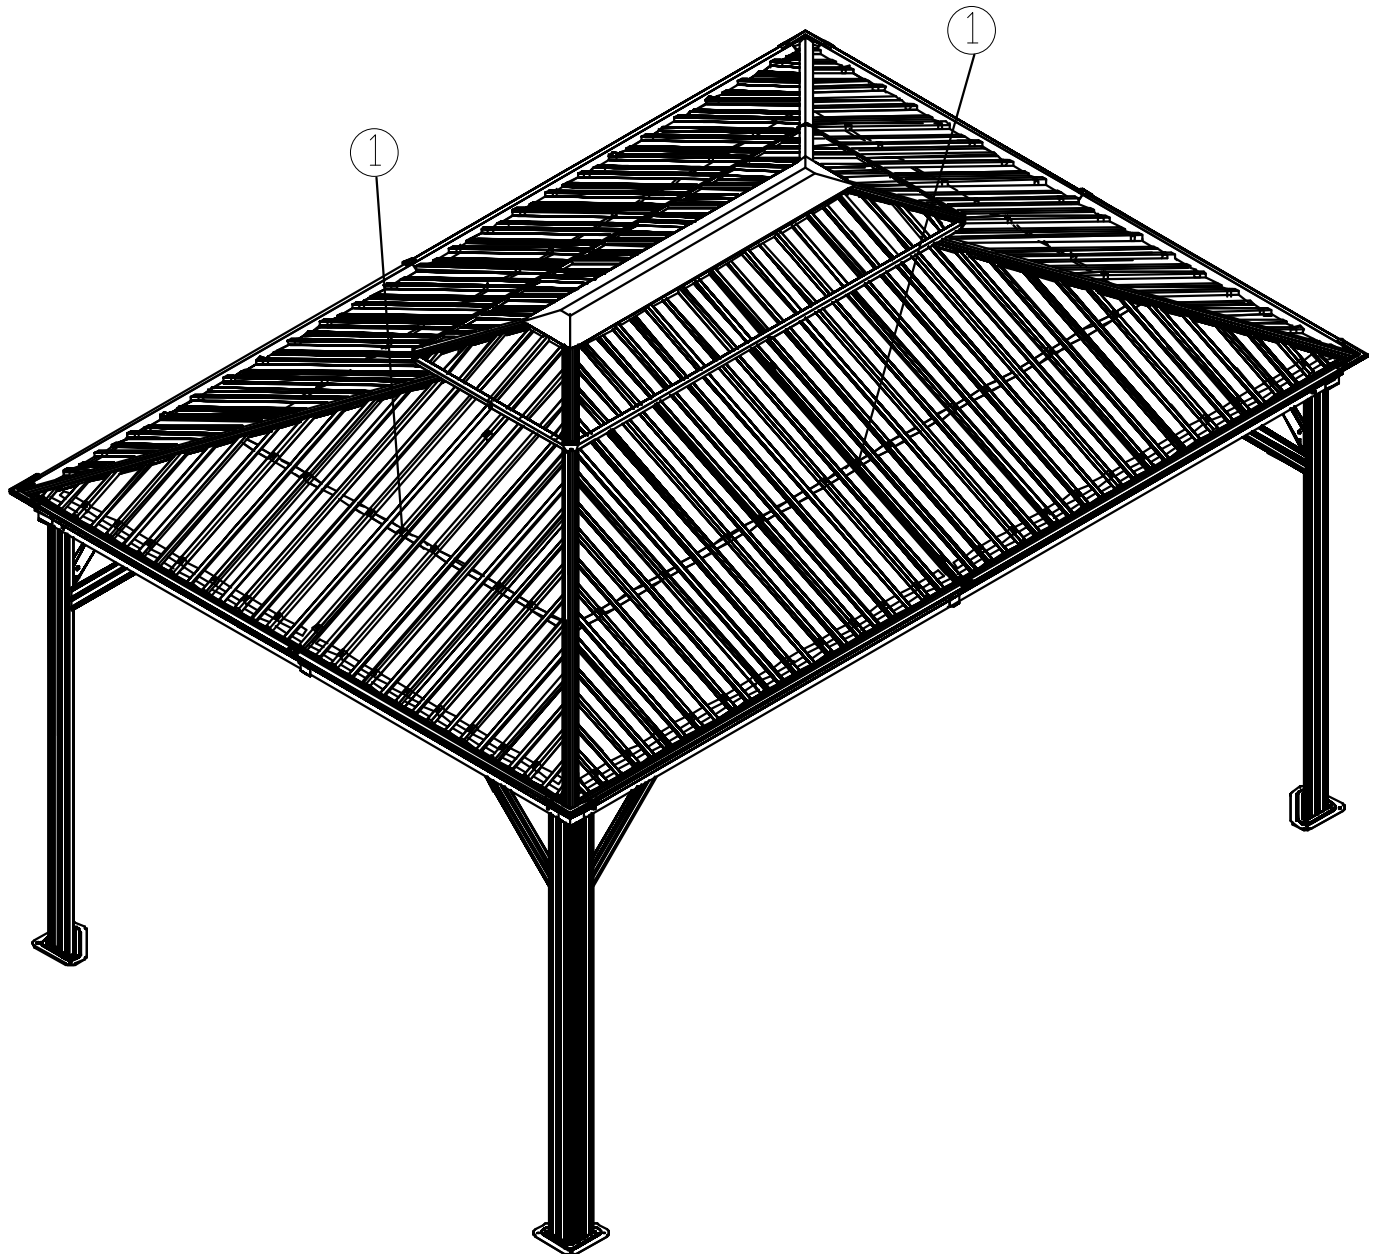

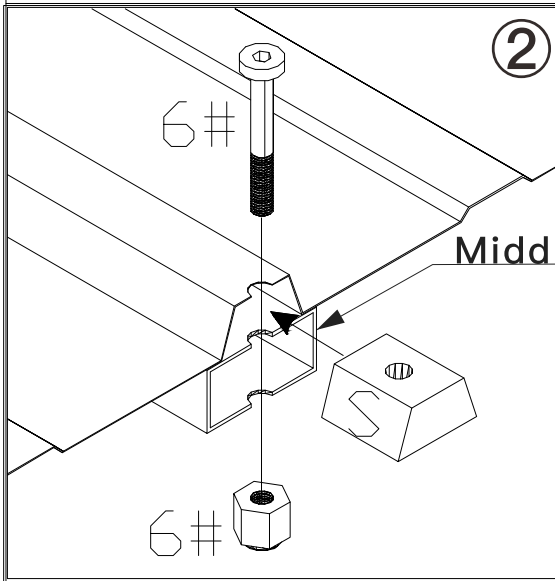




S x32





7#
x32

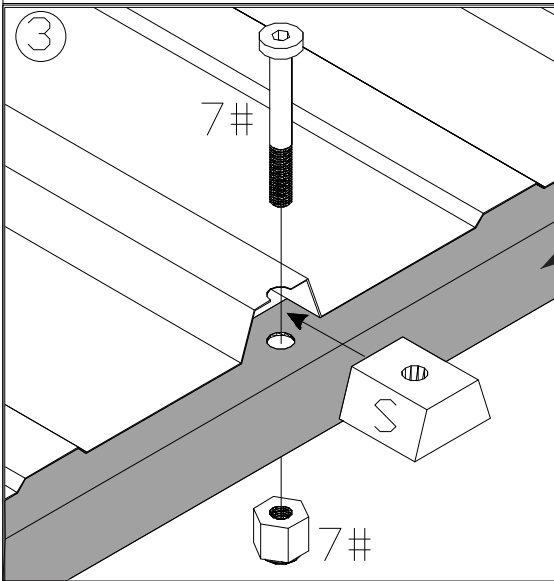





Solidifying Bar



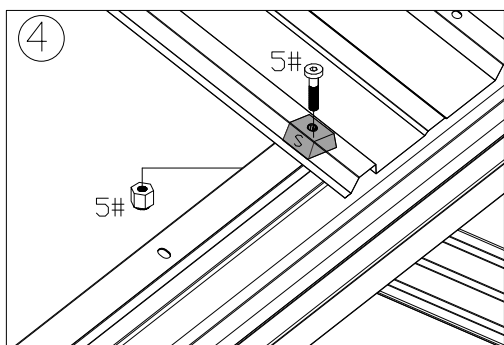



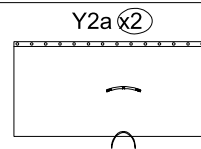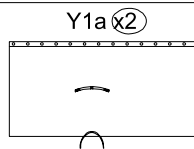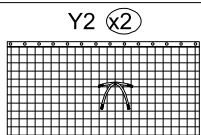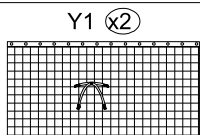

MOSQUITO NETTING AND SOLID SIDEWALL ASSEMBLY:

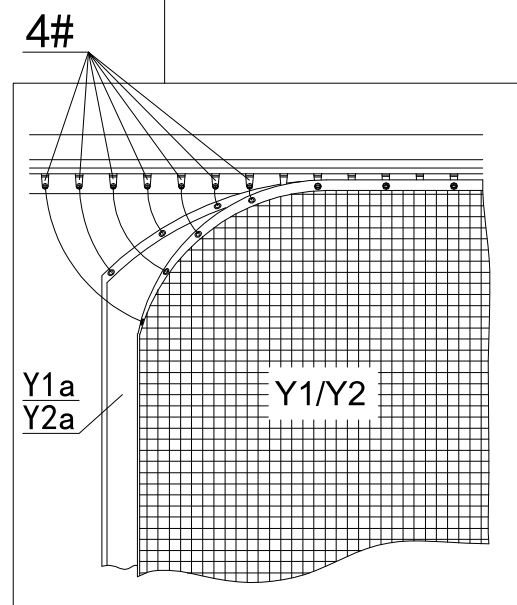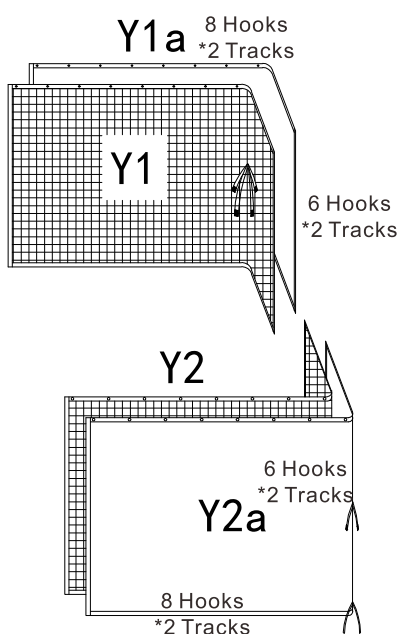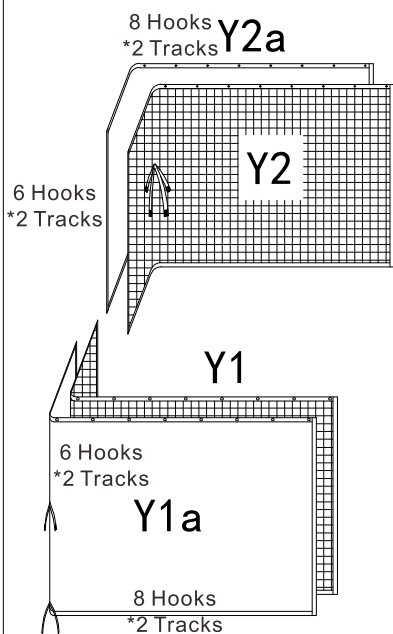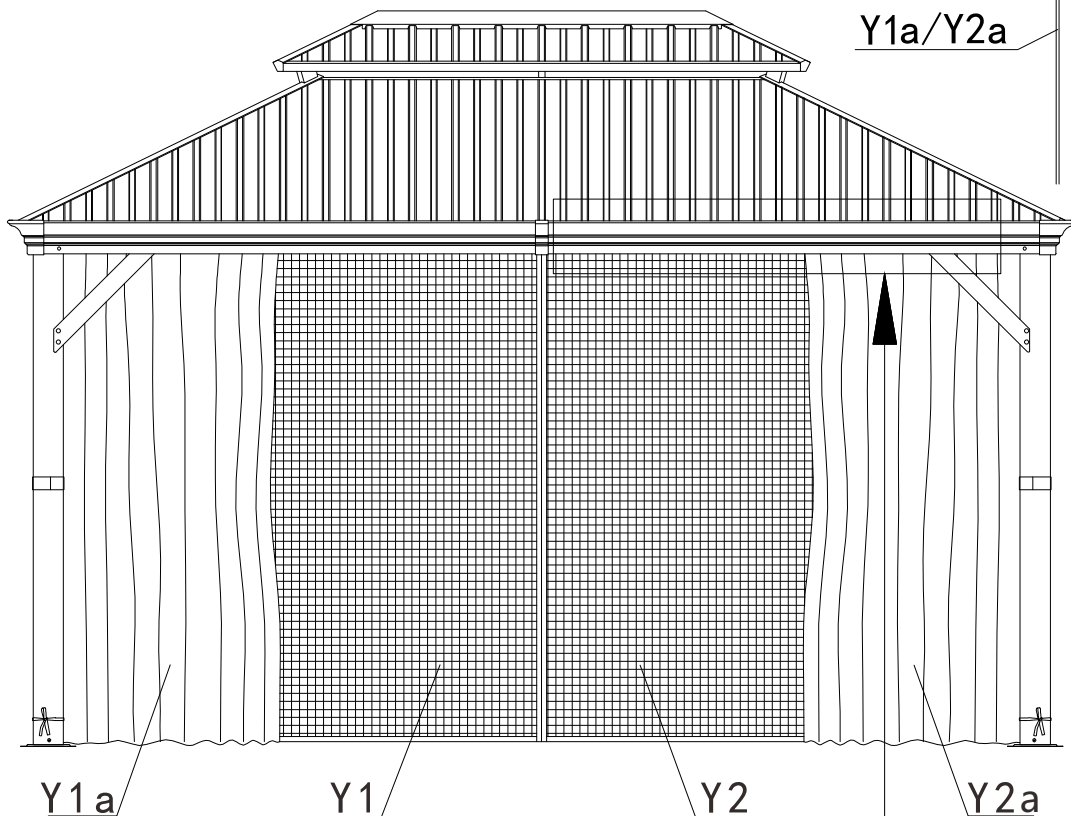

Please open your gazebo curtain when it is incoming over 30 mph wind, and tie with Strap #Yb.

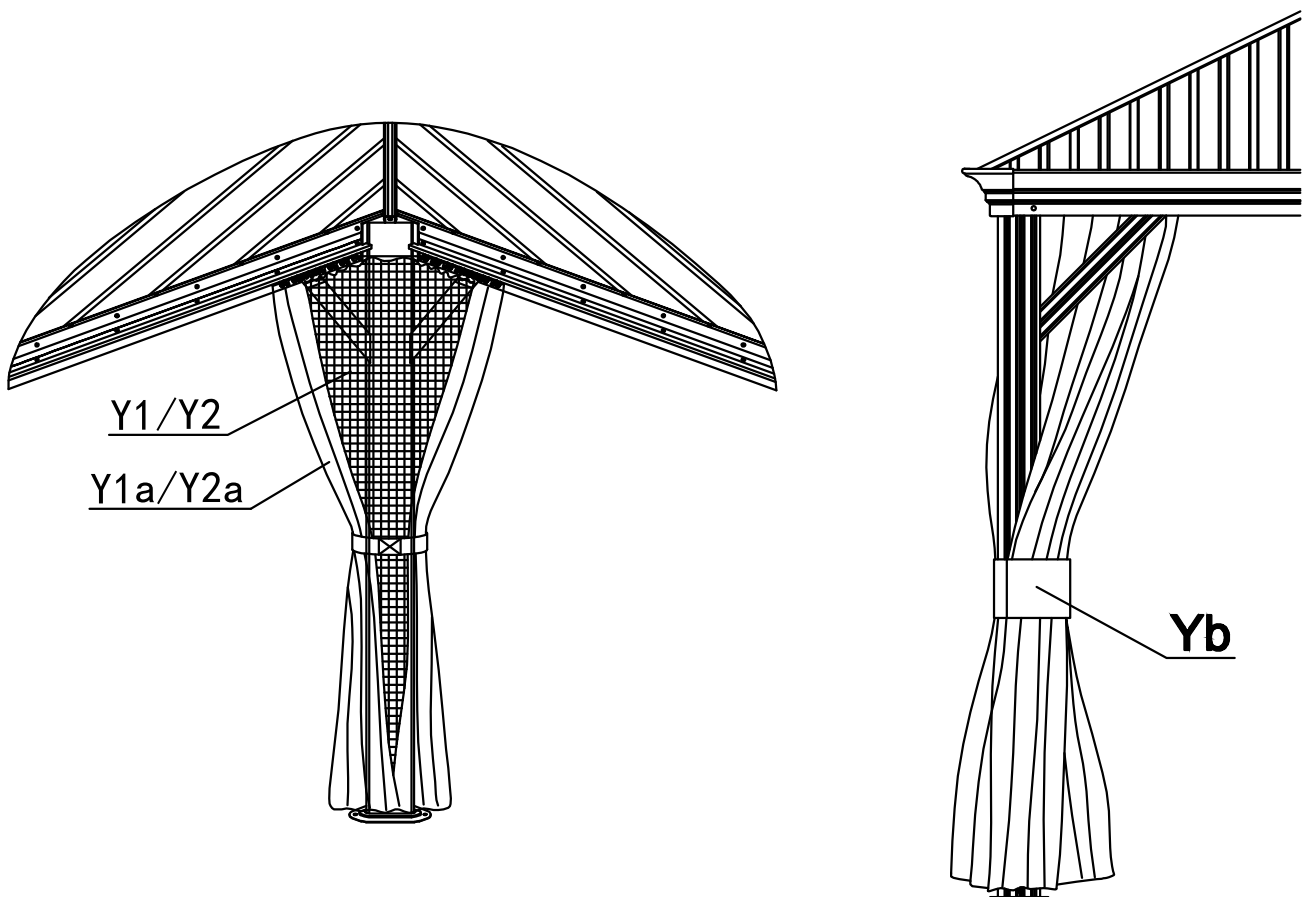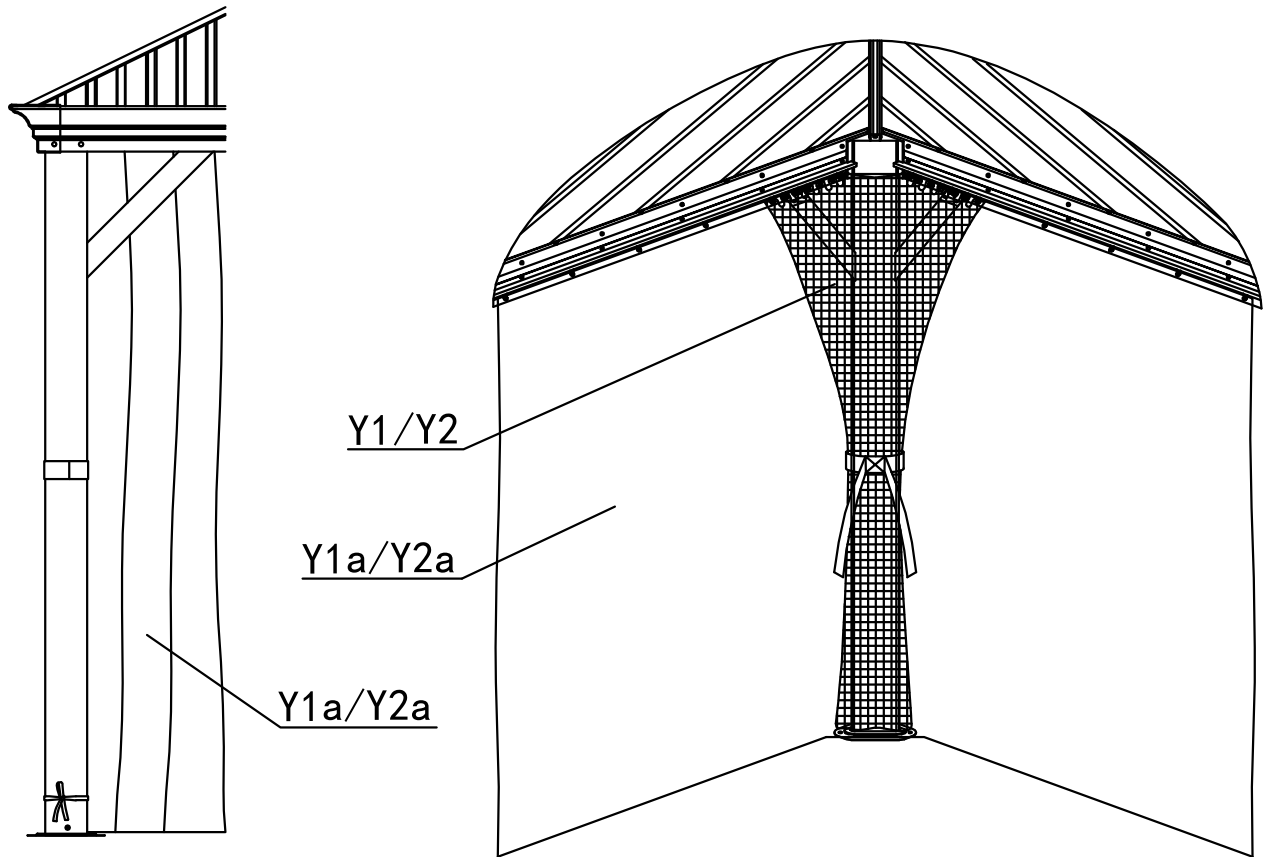



Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So, if you have any questions about our product or assembly, please feel free to contact us. We are here for you.

Support:



After-sales contact email:

service@domioutdoorliving.com

Business cooperation contact email:

marketing@domioutdoorliving.com

Please have your order ID available if you reach out for support.

If you have damaged parts or product, please send us photos for an immediate response.