

**Tools Needed:**  
Implementos  
necesarios:




For warranty info visit  
[mdbuildingproducts.com](http://mdbuildingproducts.com)

Para obtener información sobre la garantía,  
visite [mdbuildingproducts.com](http://mdbuildingproducts.com)

## BOTTOM PIVOT JAMB MOUNT BRACKET

1. Remove door by lifting door up and tilting outward.
2. Remove existing bottom jamb bracket.
3. Install new jamb mount bracket.
4. Re-install door by inserting top pivot pin and guide roller into bracket and track first, then insert bottom pivot pin into bracket.
5. If necessary, adjust vertical and horizontal alignment using bottom pivot pin.

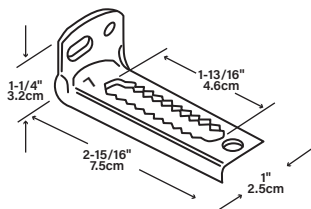

## SOPORTE DE MONTAJE DE LA JAMBA PIVOTANTE INFERIOR

1. Desmonte la puerta alzándola e inclinándola hacia afuera.
2. Retire el soporte de jamba inferior existente.
3. Instale el soporte de montaje de la jamba nuevo.
4. Vuelva a instalar la puerta insertando el pasador pivotante superior y el rodillo guía en el soporte y el primer riel, luego inserte el pasador pivotante inferior en el soporte.
5. Si es necesario, ajuste la alineación vertical y horizontal utilizando el pasador pivotante inferior.



QUESTIONS? | PREGUNTAS?  
800.654.8454  
[MDBUILDINGPRODUCTS.COM](http://MDBUILDINGPRODUCTS.COM)

