

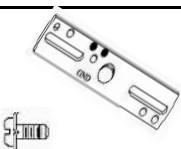
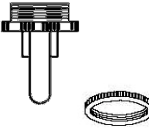



Fixture Name: Echelon 8981-5 BRI / GRM

This fixture assembled PO: _____ Date: _____

Notice: Please review the parts listing and check for all parts before assembling the fixture. If any parts are missing or damaged, please note on this sheet and contact the place of purchase to arrange for replacement parts.


PARTS LIST		Company Name: _____ Co. Account #: _____ to be filled out by retailer	
Canopy 1ea 130*H22mm		Hex nut 1ea 1/2"*H3mm	
Chain 1ea 3.8mm*L72"		Wire Connector 2ea A3 Orange	
Chain connector 2ea 5*H58.5mm		Mounting Screw 2ea 8/32"*H1"	
Mounting Strap w/ ground screw 1ea 100*22*H4mm /1ea 8/32"*H10mm		Canopy Loop and Canopy loop collar 1ea 1/2"*H46mm	
Crystal draping A7 x 5pcs		Crystal drop: B2 x 15pcs	
		Crystal drops B5 x 5pcs	
		Crystal drop: C3 x 5pcs	
			
			
Part Needed _____		Quantity _____	
Part Needed _____		Quantity _____	
Reason why _____		(missing, scratched, broken glass, bent, bad finish)	
Comments _____			

FIXTURE ASSEMBLY INSTRUCTIONS

Read and review installation instruction sheet before assembling the fixture.

1. Feed the fixture wires through the long Threaded rod (F) and pull the wires until taut.
2. Slide the tube (E), tube lid (D), cup (C), long Threaded rod (F), Top cap (B), Top loop (A) down to housing of fixture.
3. Screw Threaded rod (F) all the way into the coupler (L) at housing of fixture. Screw Top loop (A) into Top cap (B).

NOTE: THE SHADE ASSEMBLY CAN BE DAMAGED BY ROUGH HANDLING. USE CARE WHEN ASSEMBLING.

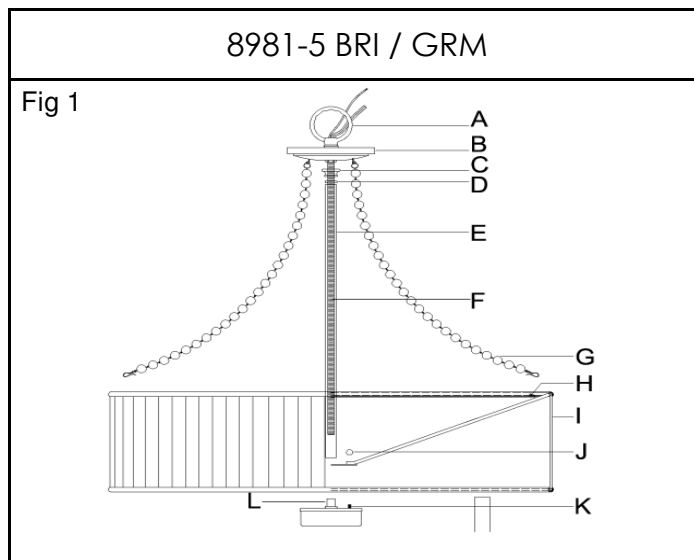

PARTS & ASSEMBLY SHEET

Fixture Name: Echelon 8981-5 BRI / GRM

* NOTE: The Finial can be scratched or broken if the full weight of the fixture is placed on it. To avoid damage attach the Bottom Assembly parts after hanging the fixture.

4. Slide the center support of the Fabric shade(I) over center tube to the housing, it is open on one side for ease of assembly. Secure in place by tightening Cap nut (J) to Frame (K) with frame of shade between them (I).

5. Attach 3 crystal draping chain (G) to hook (H) of shade.

6. By measuring determine correct number of links needed for proper hanging height. Use a pair of pliers to open one link of the Chain (A2) then remove the excess Chain (A2) and discard it.

7. Use one chain connector(A12) to attach one end of the chain to the Top loop (A) and close the chain connector.

8. Feed the fixture wires through the Chain (every three links) and pull the wires until taut.

9. Slip Canopy loop collar (A11) over the chain, then do the same with the canopy .

10. When ready to complete the installation Use the other chain connector and attach the other end of the chain to the canopy loop (A10) and close the chain connector.

11. Make sure the weight of the chandelier is supported by the chain-not the electrical wire.

* You may now install the fixture.

Note: Complete these remaining steps after the fixture is hung.

12. Secure threaded nipple (P) to bushing (M) of housing and screw Hex nut (N) on to secure.

13. Place Bottom cap (O) over the Threaded nipple (P).

14. Screw Finial (Q) to threaded nipple (P).

15. Install the light bulbs in accordance with the fixture's specifications.

(DO NOT EXCEED MAXIMUM WATTAGERATING)

Fig 2

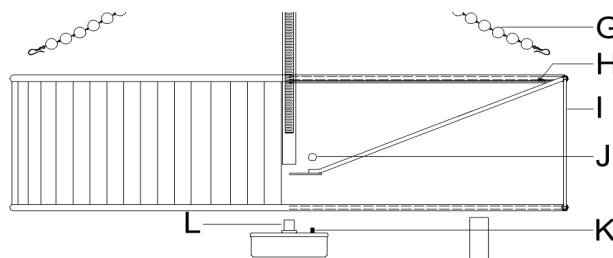


Fig 3


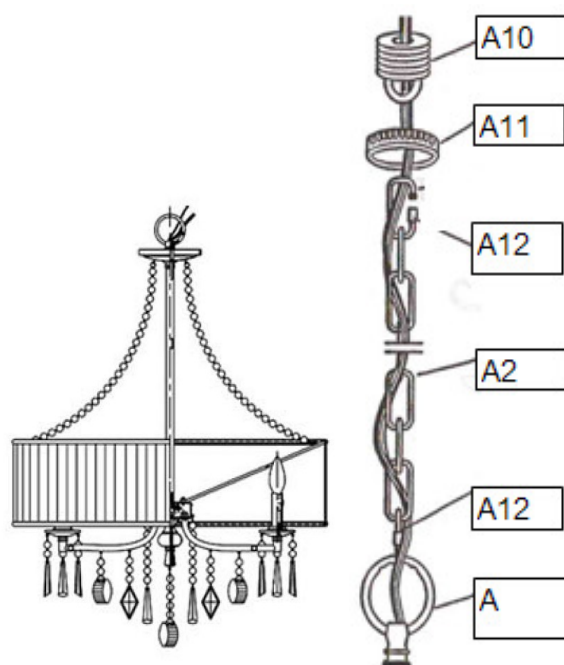


Fig 4

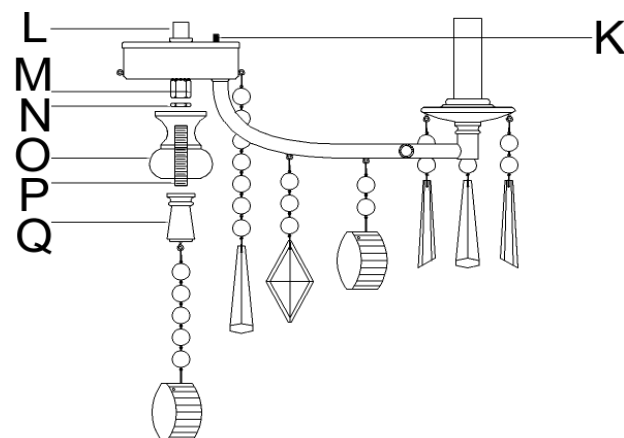


For Customer Service, contact the place of purchase to arrange for replacement parts.

WARNING ! SHUT OFF POWER AT FUSE OR CIRCUIT BREAKER.

HANGING THE FIXTURE (Fig.1)

1. Carefully remove the new fixture from the carton and the yellow bag that holds all parts. Check that all parts are included as shown in the illustration and parts list.
2. Shut off the power at the circuit breaker and remove old fixture from ceiling, including the old mounting strap.
3. Thread Nipple(A-8) into Canopy loop (A-11) until snug. Thread Hex nut (A-6) and Washer (A-5) on next.
4. Thread other end of the Nipple (A-8) with Canopy loop attached into Mounting strap (A-4) about 4 complete turns.
5. Tighten the Washer (A-5) and Hex Nut (A-6) until snug to the Mounting strap(A-4).
6. Take this mounting strap assembly and mount to ceiling junction box with Mounting Screws (A-7). Tighten screws securely with screw driver.
7. Unscrew the Canopy loop collar(A-10) from the Canopy loop. Take the canopy and pass over the Canopy loop. approximately one half of the canopy loop exterior threads should be exposed. Adjust until desired height is reached. *the Canopy loop collar should fit snugly on the Canopy loop after the canopy is installed. Remove Canopy and Canopy loop collar.
8. Assemble the fixture and have an assistant or secure support hold the weight of the fixture while you complete the wiring connections.
9. Thread the fixture wires and ground wire of the assembled fixture through the canopy loop and nipple and into the outlet box.


Fig. 1

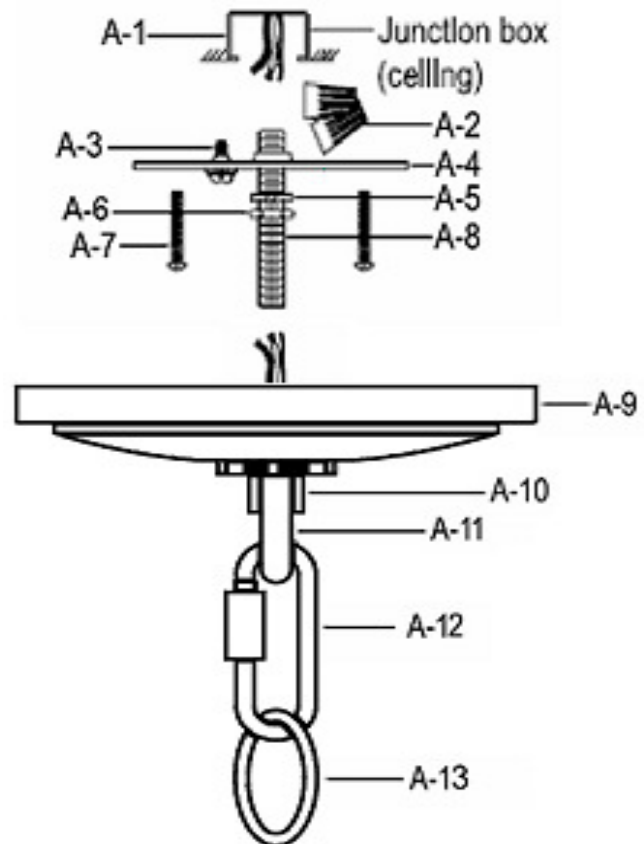

CONNECTING THE WIRES (Fig 2)

10. Attach the power supply wires to the fixture lead wires by connecting BLACK to BLACK (or SMOOTH) and WHITE to WHITE (or RIBBED).
 11. Attach the GROUND wire(GREEN or COPPER) from the Junction Box and the fixture Ground wire to the green Ground Screw on the Mounting Bracket (A-4) or connect both wires together using the correct size of wire connectors.
- NOTE: Twist the wires together in the same direction you twist the wire connector onto the wires.
12. Tuck these wire connections neatly into the Junction Box.

Fig. 2

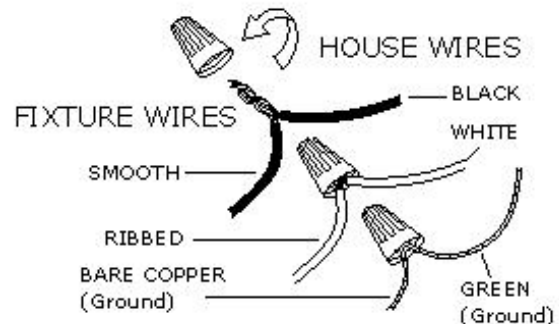


FINISHING THE INSTALLATION


13. Raise Canopy (A9) to the ceiling and secure in place by tightening the Canopy loop collar(A11) onto the Canopy Loop(10)
14. Install the light bulbs and shade as per the fixture assembly sheet.

**YOUR INSTALLATION IS NOW COMPLETE.
RETURN POWER TO THE JUNCTION BOX AND
TEST THE FIXTURE.**


CRYSTAL INSTRUCTION

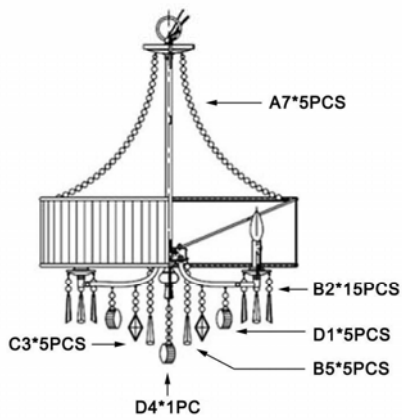


8981/5

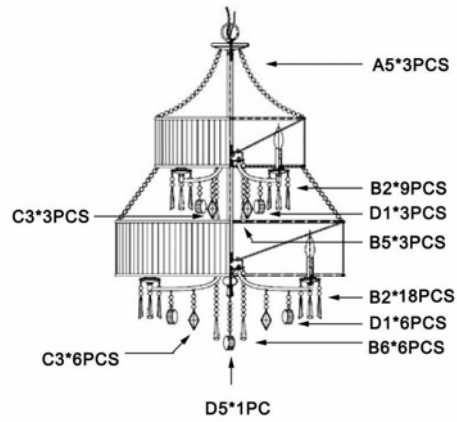


8981/9

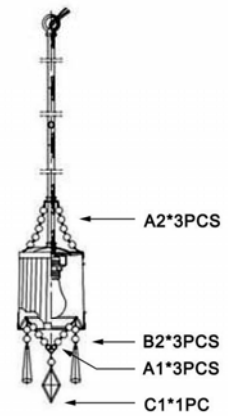


8981/M1L

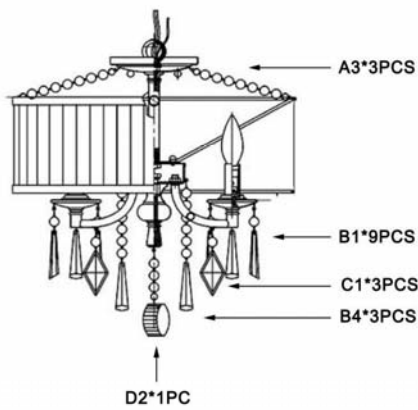


8981/SF

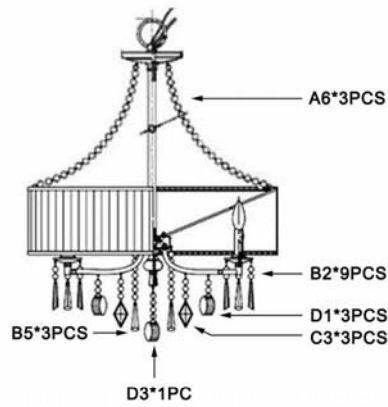


8981/3P

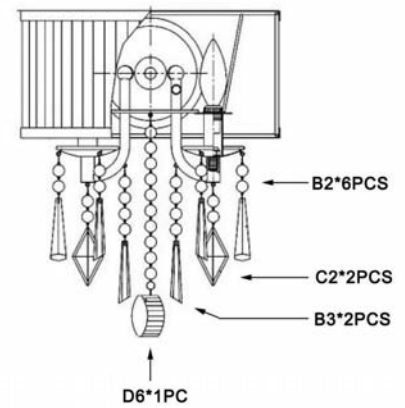


8981/WSC

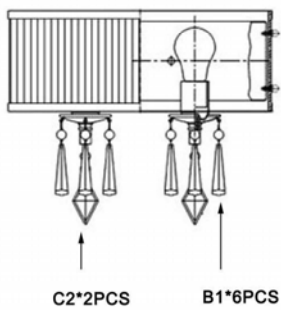


8981/BA2

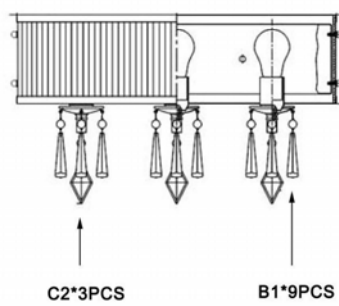

8981/BA3

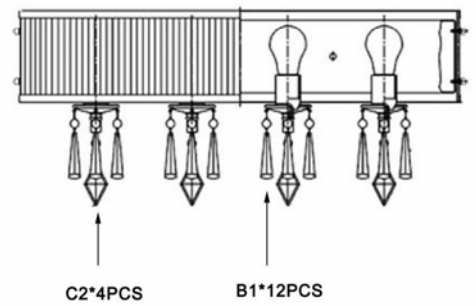

8981/BA4

A-Crystal drop							Crystal number and size
A1  K508*3pcs	A2  K508*5pcs	A3  K508*7pcs	A4  K508*11pcs	A5  K508*17pcs	A6  K508*19pcs	A7  K508*25pcs	    K508 K521 K525 K526

B-Crystal drop					
B1  K508*1pc+K521*1pc	B2  K508*2pcs+K521*1pc	B3  K508*4pcs+K521*1pc	B4  K508*6pcs+K521*1pc	B5  K508*7pcs+K521*1pc	B6  K508*9pcs+K521*1pc

C-Crystal drop		
C1  K508*1pc+K525*1pc	C2  K508*2pcs+K525*1pc	C3  K508*3pcs+K525*1pc

D-Crystal drop					
D1  K508*2pcs+K526*1pc	D2  K508*3pcs+K526*1pc	D3  K508*4pcs+K526*1pc	D4  K508*5pcs+K526*1pc	D5  K508*6pcs+K526*1pc	D6  K508*10pcs+K526*1pc