



This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




Before installing the faucet, please be sure to remove sundries and sludge from the water pipe to prevent sundries from blocking the faucet.

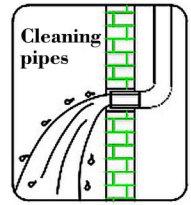

1. According to the basic size of the embedded box, use a special tool to open the main hole on the solid wall. The depth of the hole is shown in the figure. It should be considered that the distance between the surface of the wall after the final treatment and the bottom of the hole is between 2.55" and 2.95".


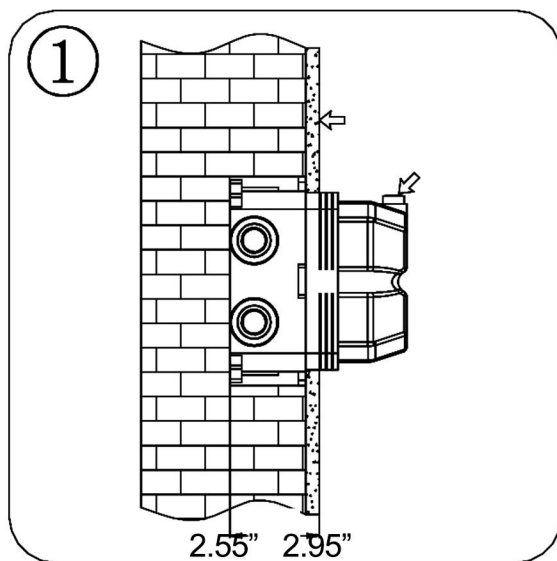


2. Reference reserved size 7.48*5.31"

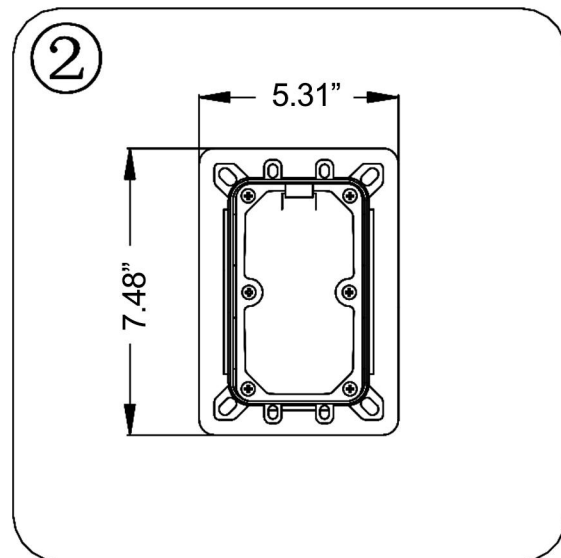


4. Open the water source to test whether the right and left water inlet pipes are tightly connected without leakage, and adjust the inlet pipes after the test is completed. The flow switch is in the open state to test whether the upper mixed outlet pipe is tightly connected without leakage, at the same time, the water retention function is fixed on the solid wall with self-tapping screws according to the embedded box.


3. As shown in the figure, the inlet and outlet pipes should be embedded well, pay attention to the up and down, left and right directions on the embedded box.

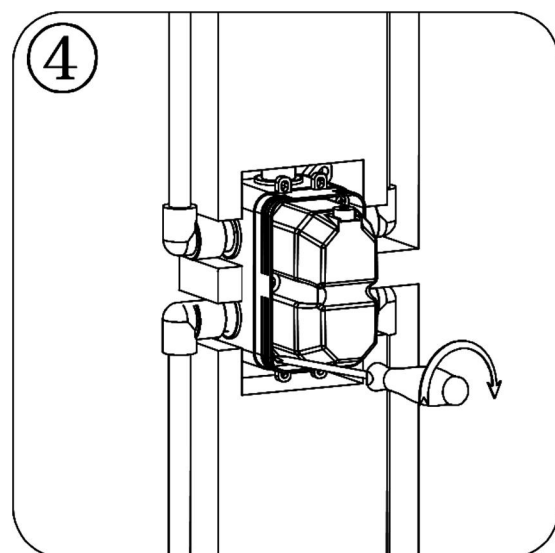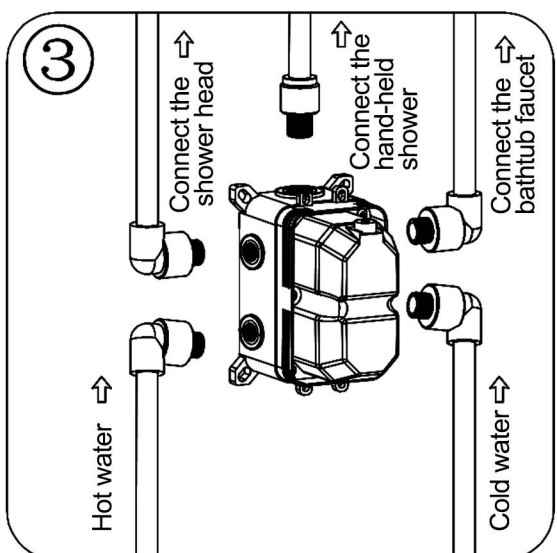


5. As shown in the figure,after the installation of the embedded box,it is necessary to make sure that the mercury is in the center of the level. If it is tilted, it will affect the installation effect of the panel.

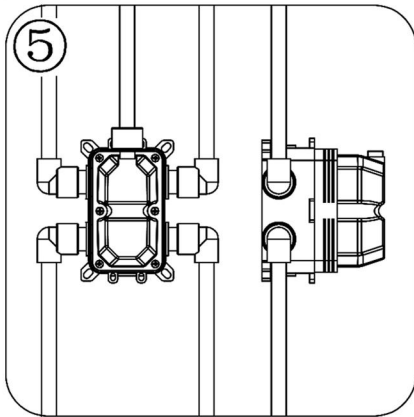


7. As shown in the figure,the leakage embedded box shall be removed,and the subsequent installation of control valve can be carried out after the wall room is laid.

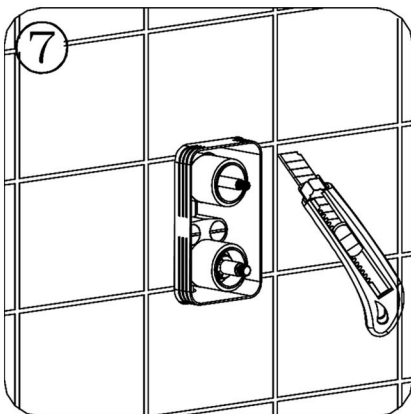


8. The notch of the upper hand wheel shall be inserted straight to the bottom, and the screw and hand wheel button shall be tightened; The lower hand wheel button is facing up, and the whole hand wheel is pressed to the end. When you hear the sound, you can finish it.

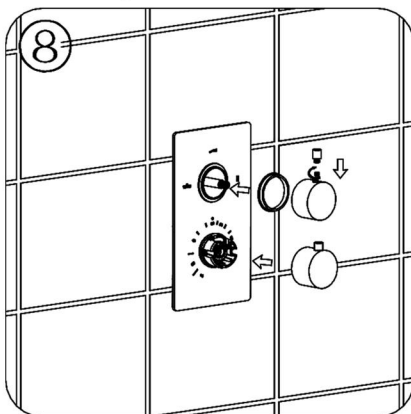


6. Once again,make sure that the pipe connection is correct and there is no leakage in the water test.After the other embedded components of the shower are installed,the embedded box and the pipeline are sealed and fixed with fillers.At this point, the installation of the solid wall embedded box is completed, and the installation cover of the level meter is removed.

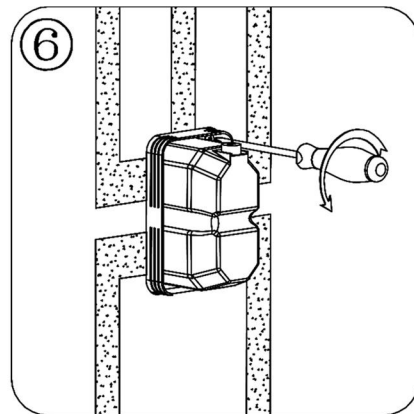

9. Install shower arm and shower head.
Install lower outlet pipe.
(wrap the PTFE tape on the thread).

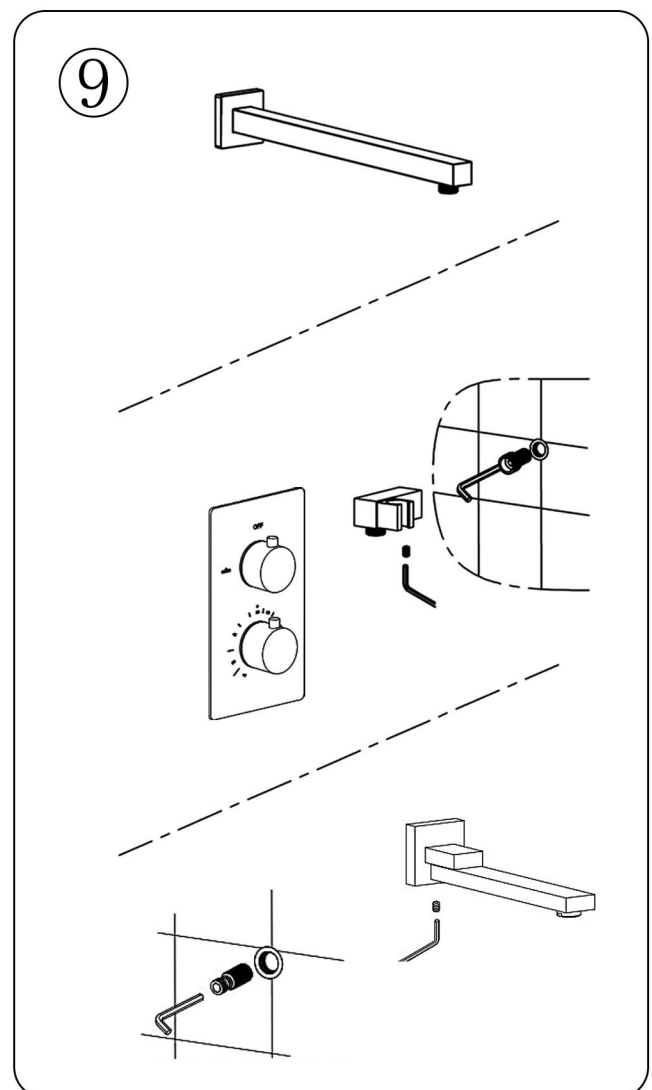

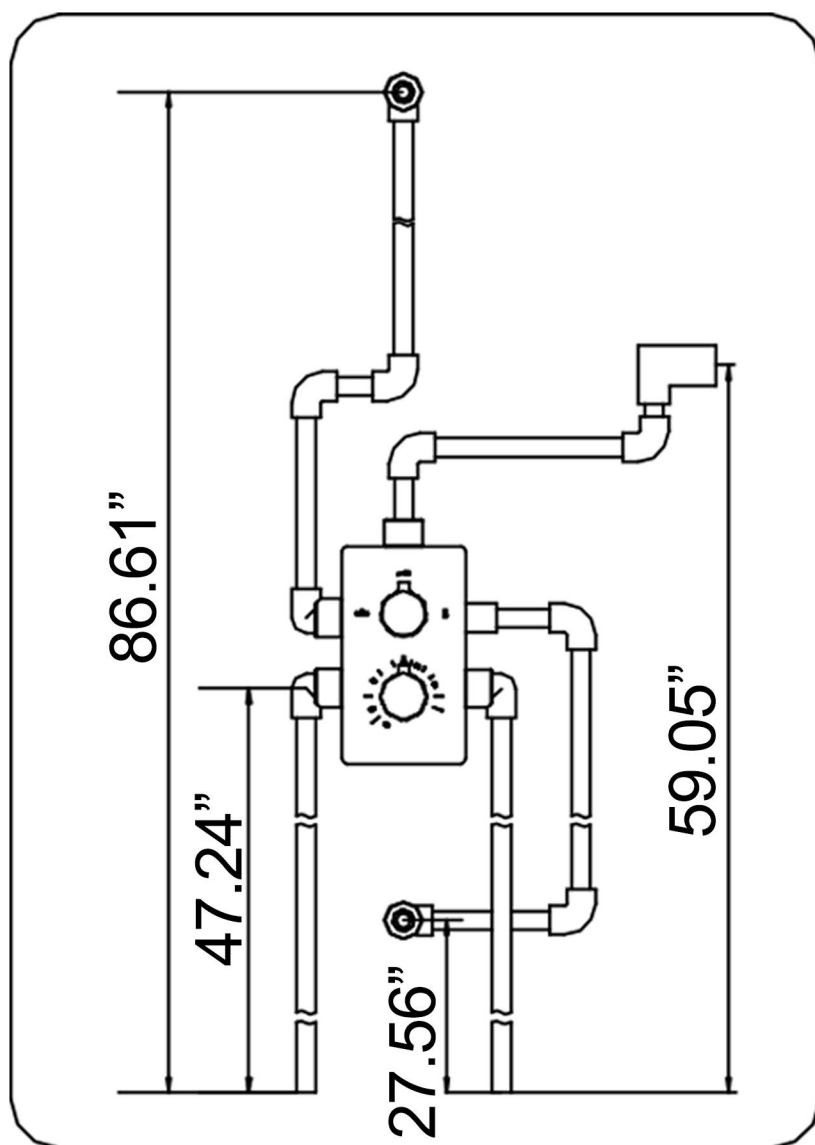

CLEANING CARE

In order to keep the appearance of faucet clean, bright and good performance, please take care of the faucet as follows;

1. Rinse with water only and dry with soft cotton cloth;
2. Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;
3. Do not use abrasive detergent, polish, emery cloth, paper towel or scraper, etc.;
4. Do not use acid cleaner, or cleaner and soap with insoluble gran etc.;
5. In the process of use, mud may accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.

