


nang art securely with two wide nead halls or screws.

Be sure the screws are level, then hang the art so that the scres are under the frame.

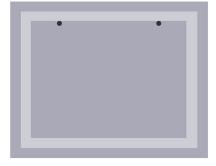

front view

The frame will sit on top of the screws.



side view

hardware free hanging