




Design House is a registered
brand of DHI Corp.

Mequon, WI 53092
1-800-558-8700

HAND HELD BIDET SPRAYER

- Models ○ 588913-SS Stainless Steel
○ 583906 Matte Black

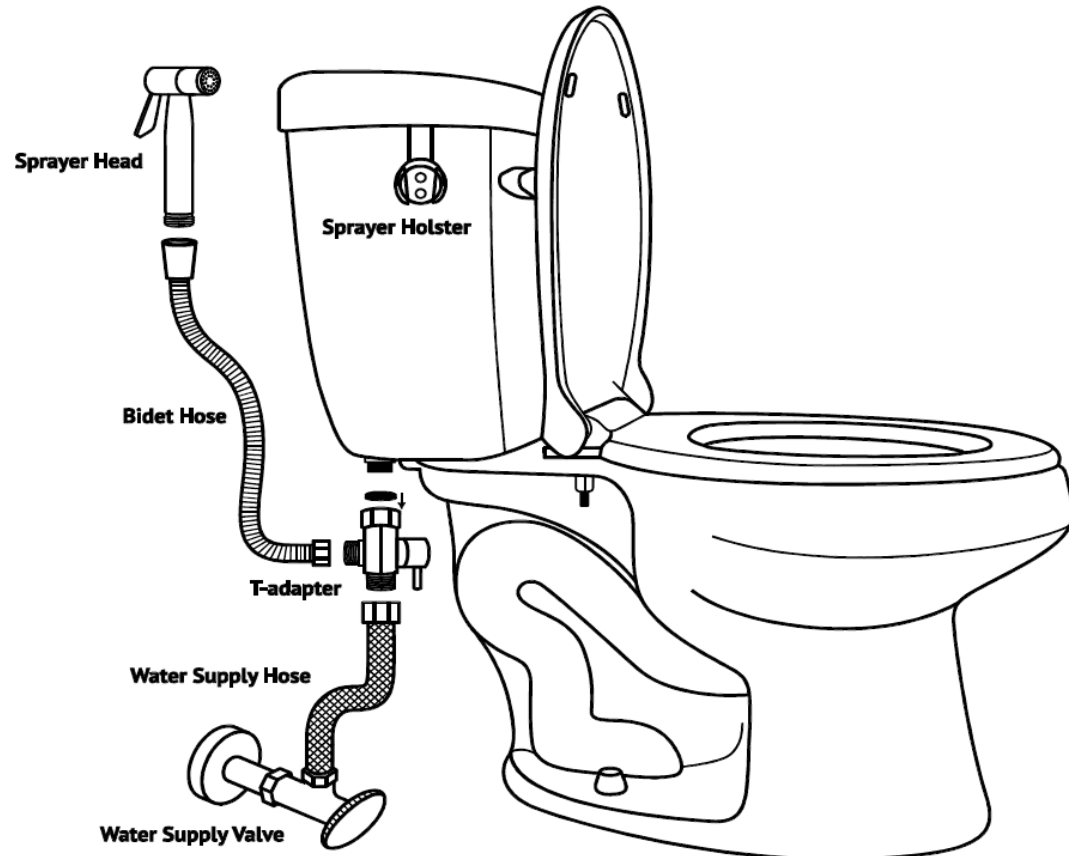

INSTALLATION

1. Turn off the toilet tank water supply and flush the toilet to empty the tank.
2. Place a towel or bucket underneath the toilet tank connection to catch any water that may spill out from the toilet tank.
3. Disconnect the toilet tank water supply hose from the toilet tank connection.
4. Connect the top connection of the t-adapter to the toilet tank. Make sure the black rubber washer is securely inserted before connecting.
Tip: Do not use excessive force while tightening the connection. Hand tighten then, if needed, use a wrench to gently tighten one quarter or a half-turn more.
Tip: Optionally, you can wrap plumber's tape around the threads of the t-adapter and toilet tank fill valve to create a better seal and prevent leaking.
5. Connect the toilet tank hose to the bottom connection of the t-adapter.
6. Connect the other end of the bidet hose to the threads at the bottom of the bidet sprayer head. Make sure the black rubber washer is securely inserted (as shown in the picture) before connecting.
7. Turn the handle on the t-adapter to open the valve and allow water flow to the bidet.
8. Turn on the toilet tank water supply.
9. Mount the bidet holster on the toilet tank.

Congratulations! You have completed the installation. If you have any questions, feel free to contact us at customer@designhouse.com.