

# SMARTCORE®

100% waterproof · kidproof · petproof


## Molding Profiles

Each piece of coordinating Smartcore® molding is 94" long and composed of a waterproof core wrapped in vinyl. The molding can be cut to desired length using a fine-toothed finishing saw blade.

When installing, we recommend using Loctite PL 3X Premium Construction Adhesive (or equivalent). Scuff the underside of the part to receive adhesive with sandpaper and apply in "S" pattern. Use weight to apply pressure until fully cured (usually

48 hours). An alternative method is to use double-sided molding tape such as Hilway Direct Molding Tape. If you choose to use nails (not recommended), carefully pre-drill pilot holes for the nails.


### T-MOLDING

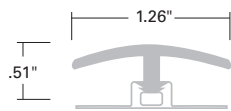

This t-shaped transition piece covers the narrow gap in a doorway between two adjacent floors that are on the same level.

Cut T-molding and Track to same desired length. Secure Track to floor with glue, molding tape or nails and press or tap T-molding into Track to desired depth using rubber mallet.


### REDUCER

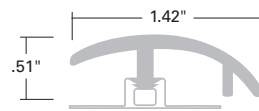

This is used to transition from a higher-profile (or thickness) floor to a lower-profile floor.

Cut Reducer and Track to same desired length. Secure Track to floor with glue, molding tape or nails and press or tap Reducer into Track to desired depth using rubber mallet.


### STAIR CAP

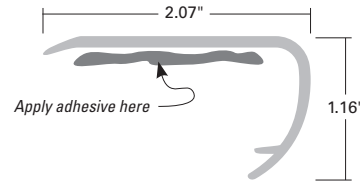

Used when installing Smartcore® on stairs, providing the finishing touch to the front stair edge.

Measure and cut to fit. Affix molding using adhesive, being sure to follow adhesive manufacturer's instructions completely.


### BABY THRESHOLD

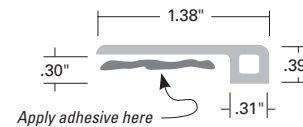

Used to transition from hard surface floors to floors of a different height level or thickness.

Measure and cut to fit. Affix molding using adhesive, being sure to follow adhesive manufacturer's instructions completely.

### QUARTER ROUND

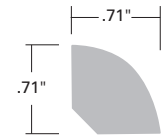

Used to create finishing touch between floor and baseboards.

Measure and cut to fit. Affix molding using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

Product Item #	Description	T-Mold Stock/SOE Item #	T-Mold Model #	Reducer Stock/SOE Item #	Reducer Model #	Stair Cap Stock/SOE Item #	Stair Cap Model #	Threshold SOS Item #	Threshold Model #	Qtr Rd SOS Item #	Qtr Rd Model #
534153	Rustic Hickory	774410	TM50SLV501B	774409	R50SLV501B	774408	SC50SLV501B	787922	TH50SLV501B	787912	QR50SLV501B
534154	Stillwater Oak	774413	TM50SLV502B	774412	R50SLV502B	774411	SC50SLV502B	787923	TH50SLV502B	787913	QR50SLV502B
534155	Canberra Acacia	774416	TM50SLV503B	774415	R50SLV503B	774414	SC50SLV503B	787924	TH50SLV503B	787914	QR50SLV503B
538133	Cottage Oak	874714	TM50SLV505B	874716	R50SLV505B	874715	SC50SLV505B	787926	TH50SLV505B	787916	QR50SLV505B
712184	Tahitian Walnut	1053461	TM50SLV506B	1053463	R50SLV506B	1053462	SC50SLV506B	787927	TH50SLV506B	787917	QR50SLV506B
1035197	Tawny Oak	1053464	TM50SLV508	1053466	R50SLV508	1053465	SC50SLV508	855993	TH50SLV508	856017	QR50SLV508
1035198	Brazilian Ipe	1053467	TM50SLV509	1053469	R50SLV509	1053468	SC50SLV509	855994	TH50SLV509	856018	QR50SLV509