



Installation Instruction

Step 1.

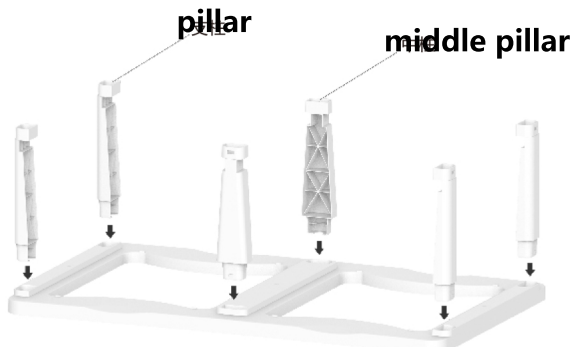


Insert the pillar into the left and right slots of the laminate, then insert the middle pillar into the middle slot of the laminate and press it firmly

Step 2.

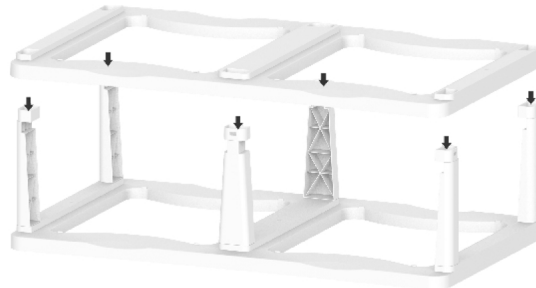


Align the layer board with the lower pillar and insert it into the middle pillar, and tighten it

Step 3.

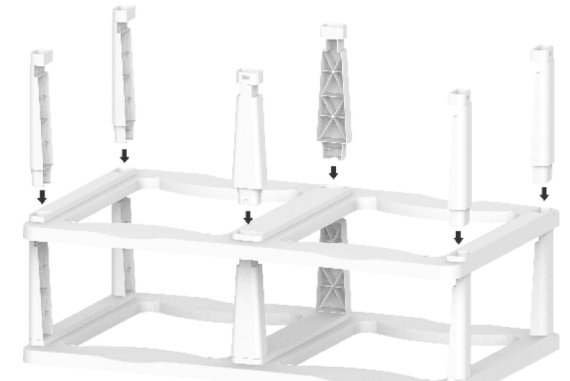


Insert the pillar into the left and right slots of the laminated board, then insert the middle pillar into the middle slot of the laminated board and press it firmly

Step 4.

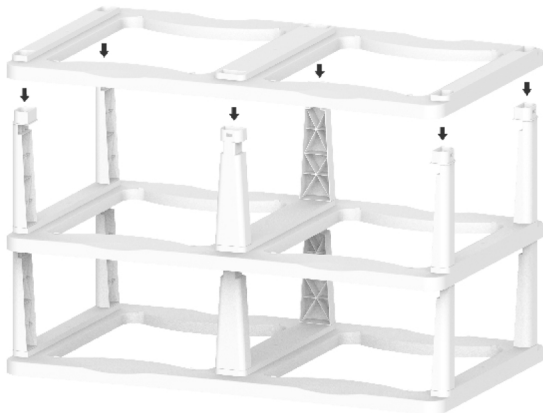


Align the layer board with the lower pillar and insert it into the middle pillar, and tighten it. Repeat steps 3 and 4 to install to the top layer

Step 5.

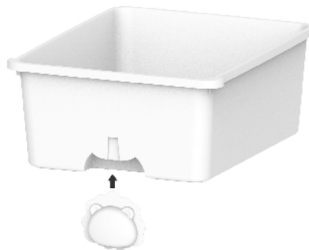

Insert the cartoon handle into the drawer

Step 6.

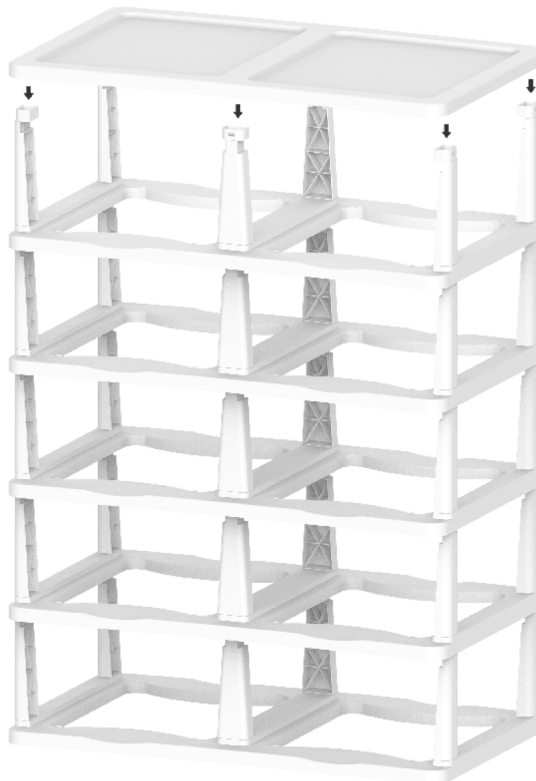

Align the top cover with the lower pillar and insert it, then fasten it.

Step 7.



Finally, insert the drawers into the cabinet one by one and complete the installation.