
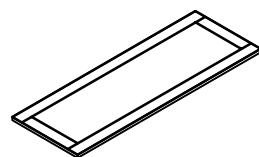



# Assembly Instructions

## Style: WF199317


If you have any questions, please feel free to contact us.  
Email: [service@qualfurn.net](mailto:service@qualfurn.net)

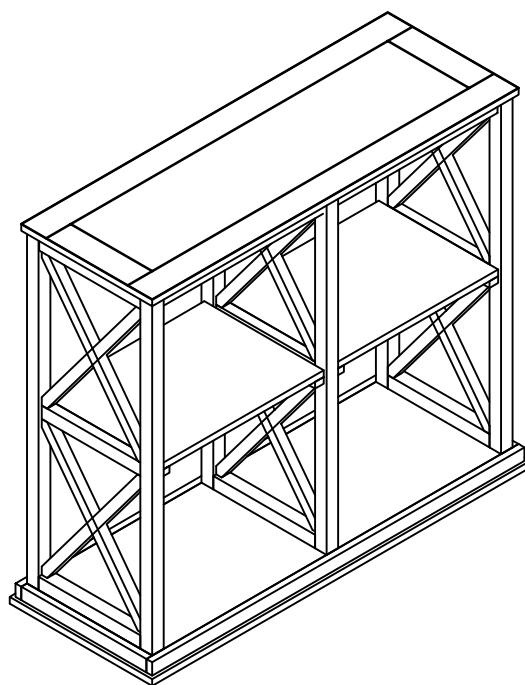


(A) : 1PC

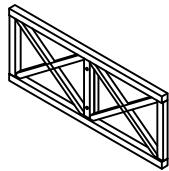


(B) : 1PC

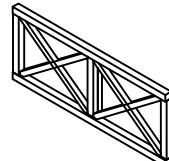

(C) : 2PCS

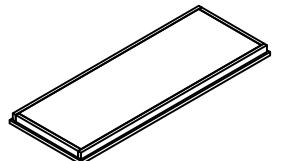

(D) : 1PC



(E) : 2PCS



(F) M6\*40 mm: 20PCS




(G) M6\*16 : 20PCS




(H) : 1PC


STEP 1

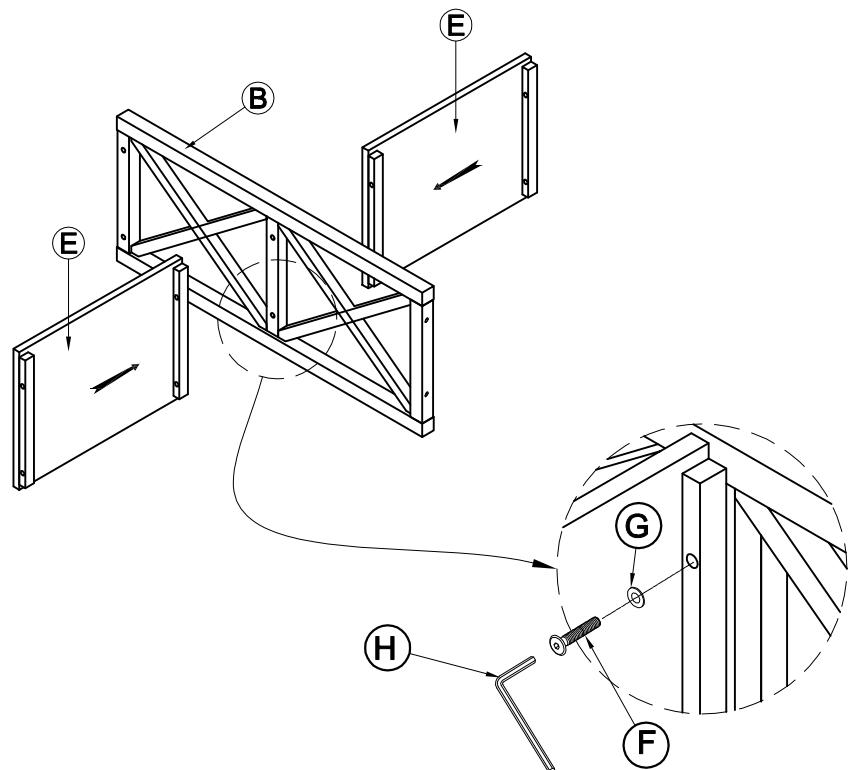

STEP 2

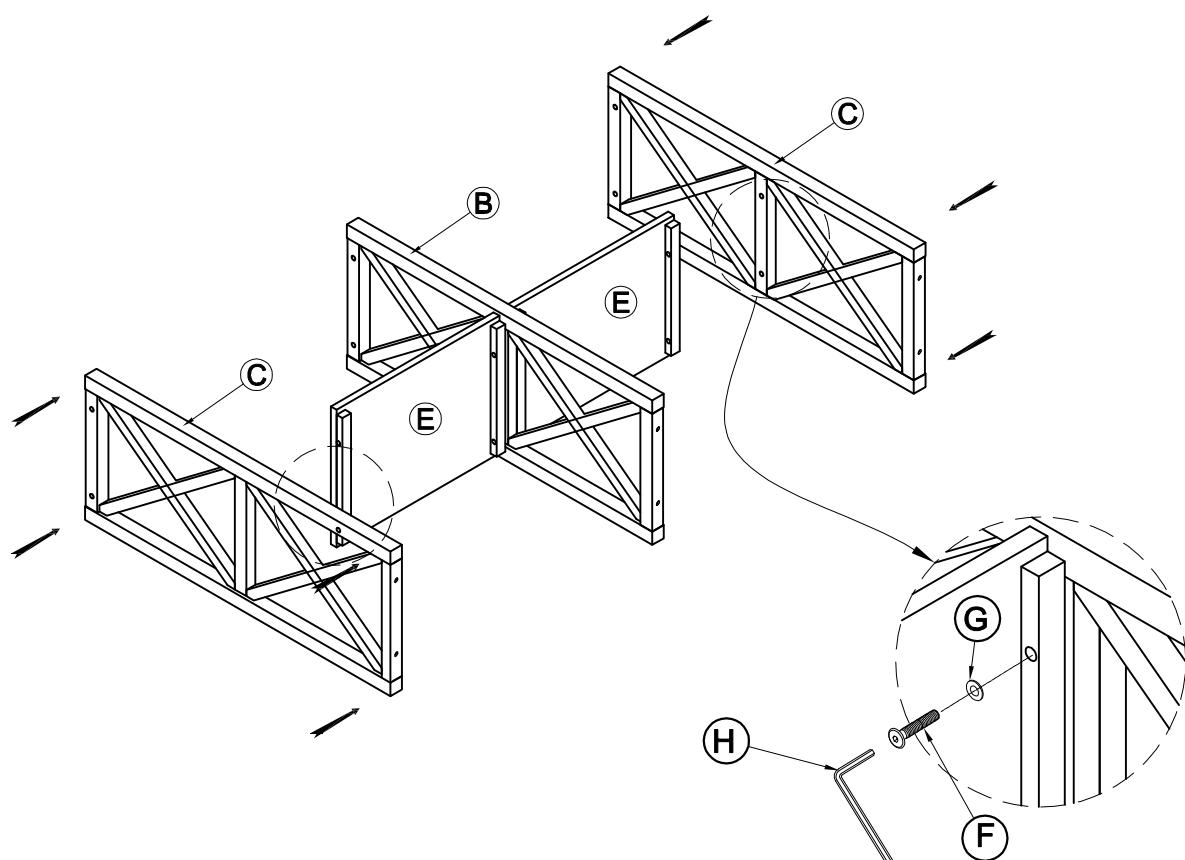

STEP 3

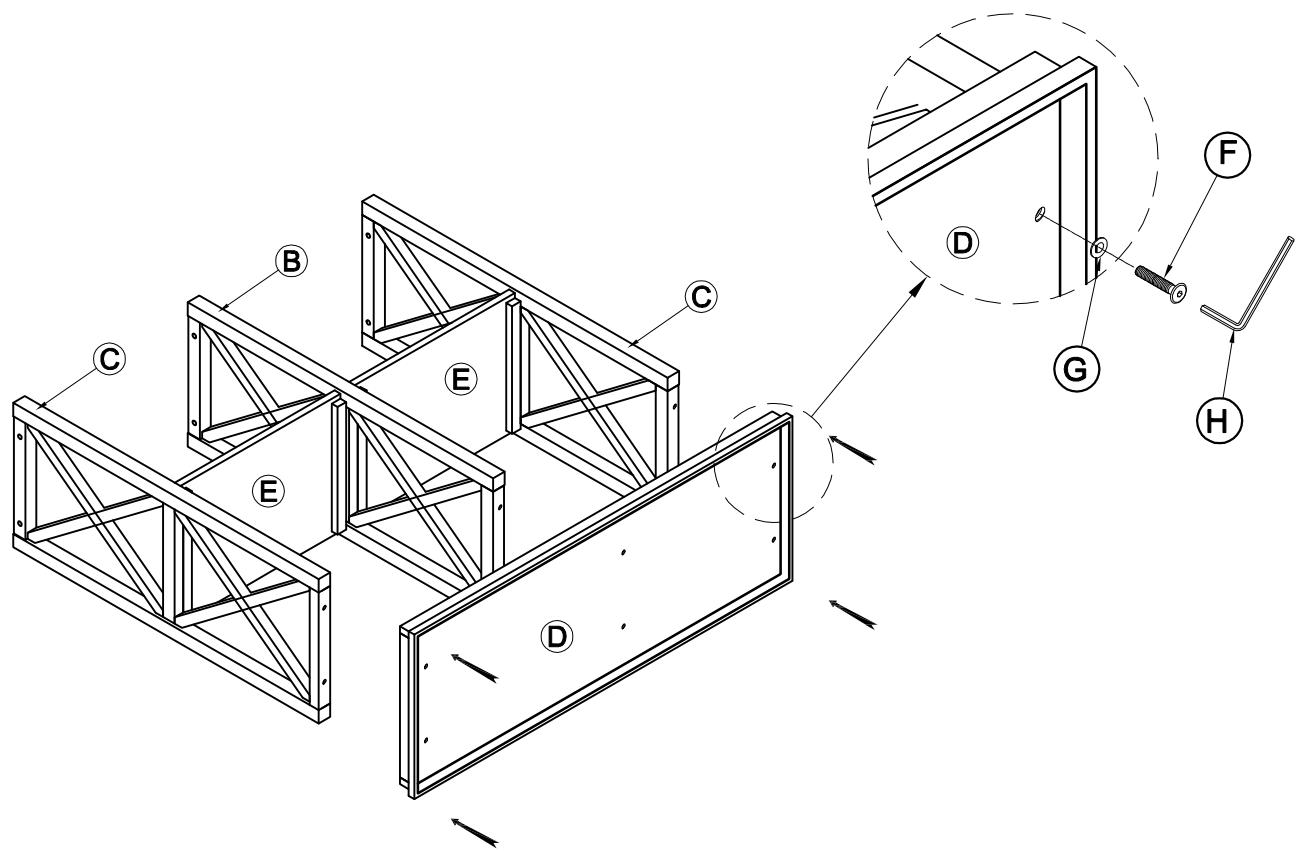

STEP 4

