


Out-of-Plumb: ▶▶

Your walls are Out-of-Plumb if the side walls of the shower enclosure are not vertically level and lean or bow in any direction.

Plumb vs Out-of-Plumb: ▶▶

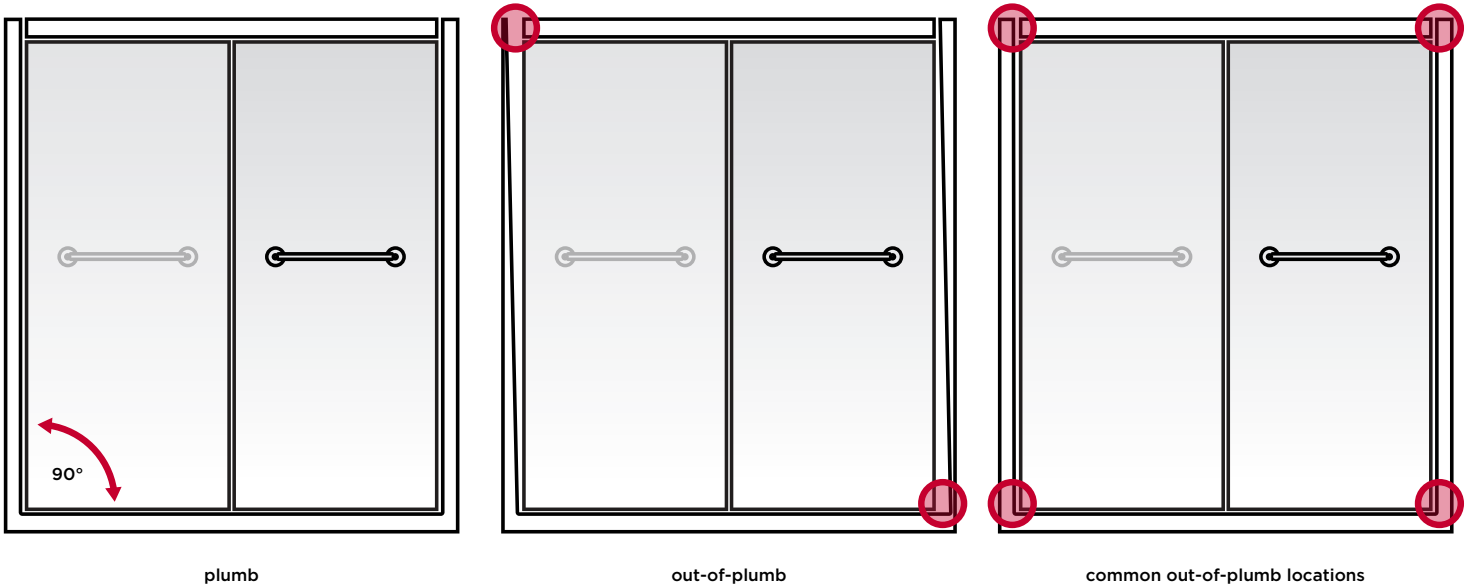

Most **Delta Shower Doors** are designed to accommodate out-of-plumb conditions up to 3/8". If needed, utilize the adjustment holes for proper door height and alignment. Always follow the safety guidelines, and for more detailed instructions, refer to installation guide or contact our Delta Shower Doors Customer Care with questions 800-964-4850.

