
MATRIX

# **TRIM & MOLDING PROFILES**

Matrix trims and moldings are designed to coordinate with your Matrix floor.

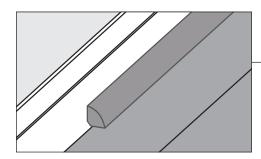


## QUARTER ROUND

Used to accent the transition from the baseboards to floor surface.

#### INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Quarter Round** using glue, molding tape or nails. When using adhesive, be sure to follow manufacturer's instructions completely.

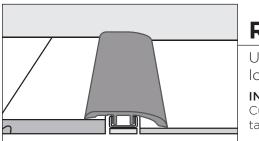


### REDUCER

Used to transition from a hard surface floor (Matrix) to a floor with a lower height (ceramic tile, low pile carpet).

#### INSTALLATION INSTRUCTIONS:

Cut **Reducer** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **Reducer** into track to desired depth using rubber mallet.

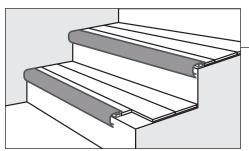


### STAIRNOSE

Used to provide the finishing touch to the front stair edge when installing Matrix on stairs.

#### INSTALLATION INSTRUCTIONS:

Measure and cut to fit. Affix **Stairnose** using adhesive, being sure to follow adhesive manufacturer's instructions completely.

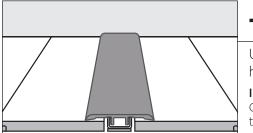

### T-MOLDING

Used in doorways to join two adjacent floors that are close to the same height.

#### INSTALLATION INSTRUCTIONS:

Cut **T-Molding** and track to same desired length. Secure track to floor with glue, molding tape or nails and press or tap **T-Molding** into track to desired depth using rubber mallet.

### **TRIM INSTRUCTIONS & DETAILS**

