



PART	DESCRIPTION	QTY	PART	DESCRIPTION	QTY
Α	Sink	X1	L	Right Back Panel	X1
В	Left Side Board	X1	М	Left Upper Drawer Side Panel	X1
С	Right Side Board	X1	N	Right Upper Drawer Side Panel	X1
D	Middle Panel	X1	0	Upper Drawer Back Panel	X1
E	Bottom Panel	X1	Р	Drawer Bottom Panel	X2
F	Front Upper Rail	X1	Q	Drawer Front Panel	X1
G	Back Upper Rail	X1	R	Drawer Front Panel	X1
Н	Back Lower Rail	X1	S	Left Lower Drawer Side Panel	X1
I	Adjustable Shelf	X1	Т	Right Lower Drawer Side Panel	X1
J	Door Panel	X1	U	Lower Drawer Back Panel	X1
K	Left Back Panel	X1			

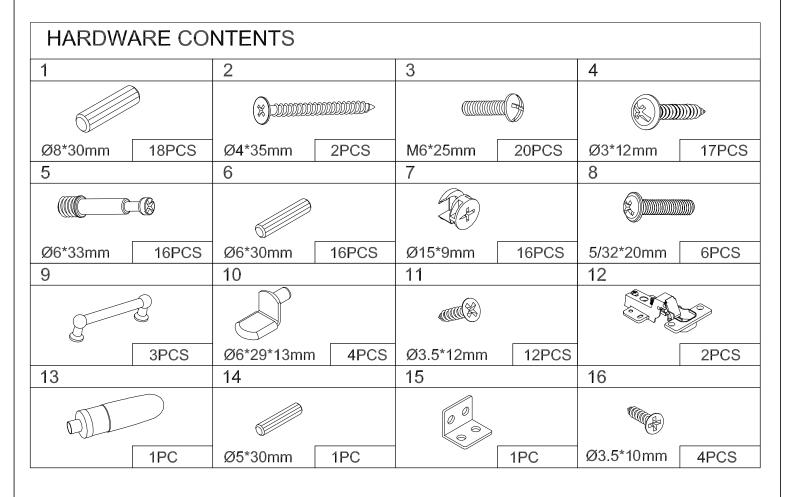

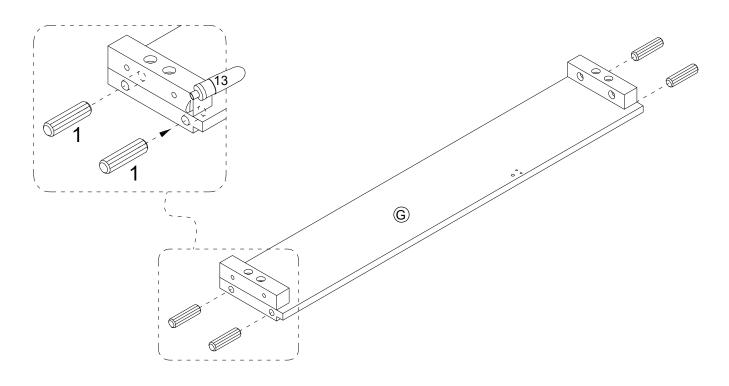


Glue the wood dowels 1 into the inner holes on the back upper rail G.

NOTE: It is very important to use a small amount of glue 13 on ends of dowels and wipe away excess glue immediately.

1	4pcs
13	1pc

STEP2

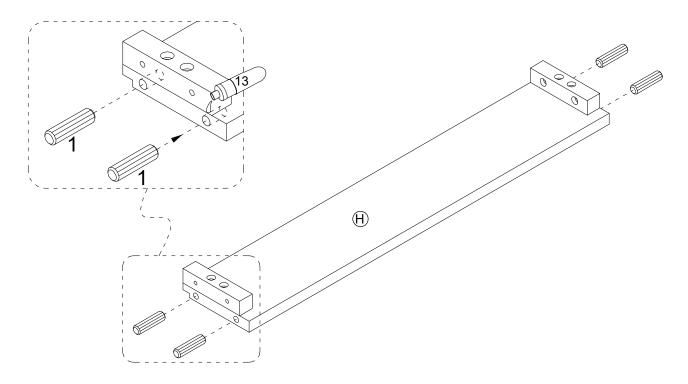


Glue the wood dowels 1 into the inner holes on the back lower rail H.

NOTE: It is very important to use a small amount of glue 13 on ends of dowels and wipe away excess glue immediately.

P	age	4	of	1	6
	\sim				

1	4pcs
13	1рс

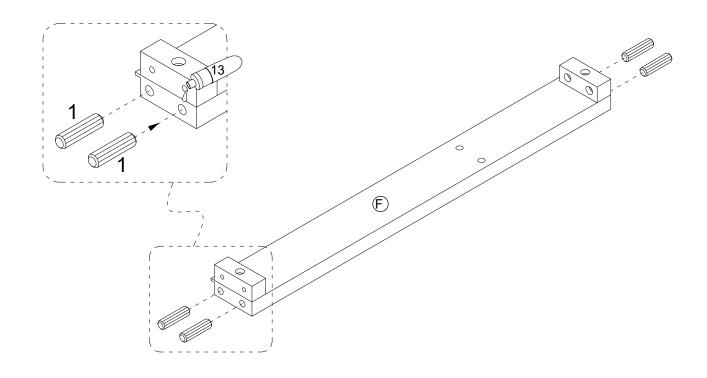


Glue the wood dowels 1 into the inner holes on the front upper rail F.

NOTE: It is very important to use a small amount of glue 13 on ends of dowels and wipe away excess glue immediately.

1	4pcs
13	1pc


STEP4

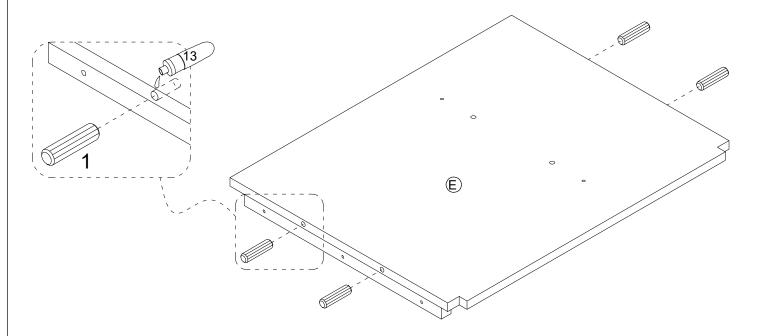



Glue the wood dowels 1 into the inner holes on the bottom panel E.

NOTE: It is very important to use a small amount of glue 13 on ends of dowels and wipe away excess glue immediately.


1	4pcs
13	1рс

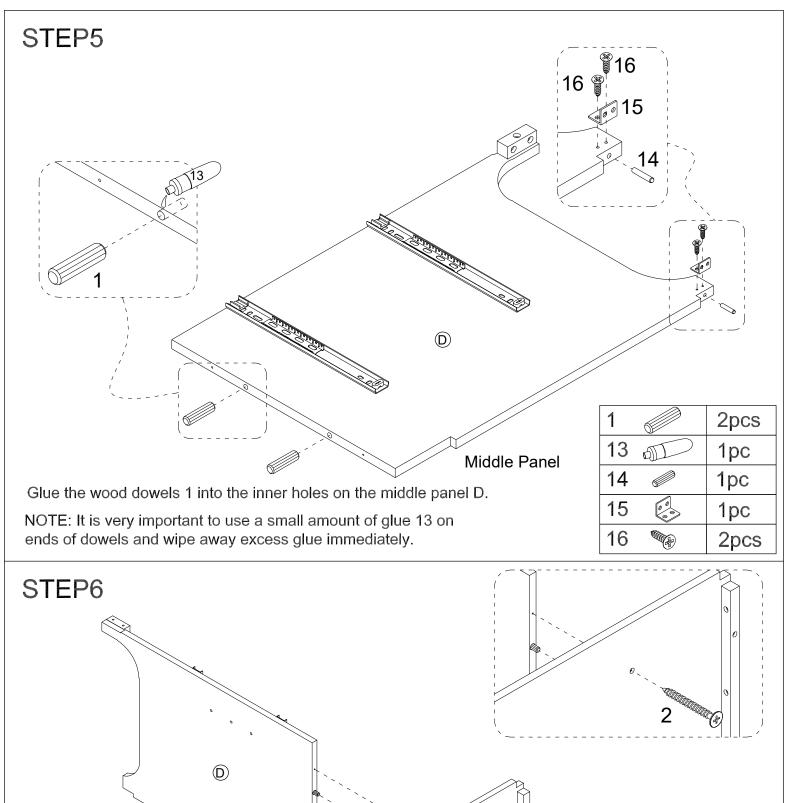


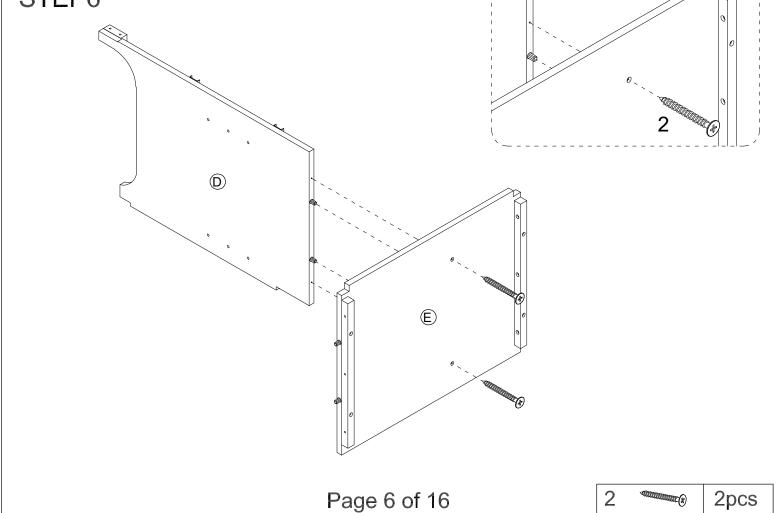

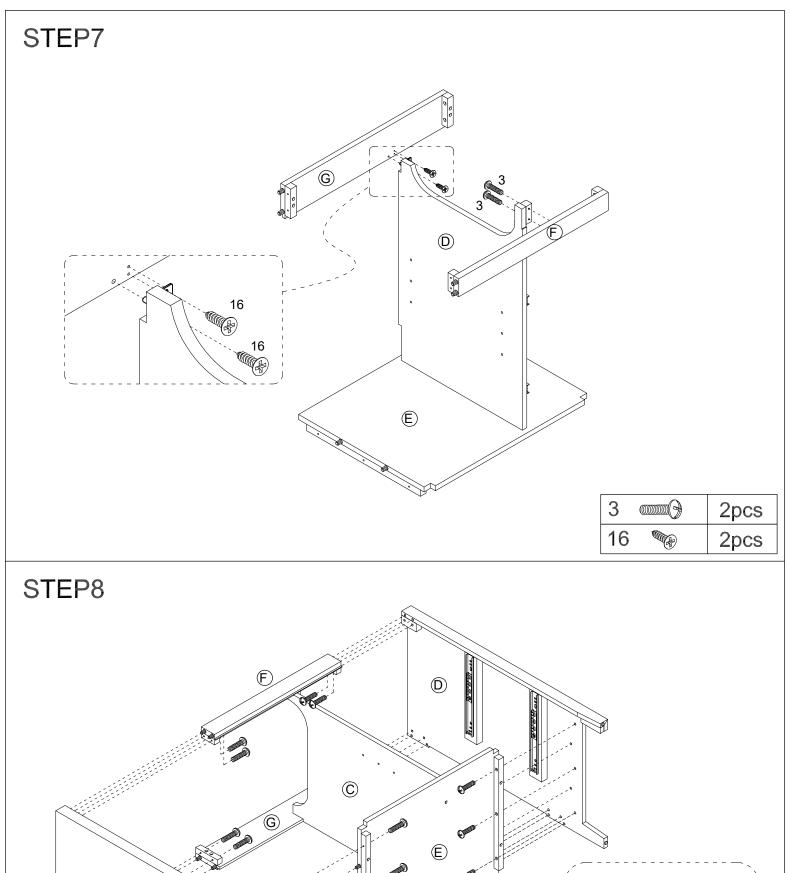


B

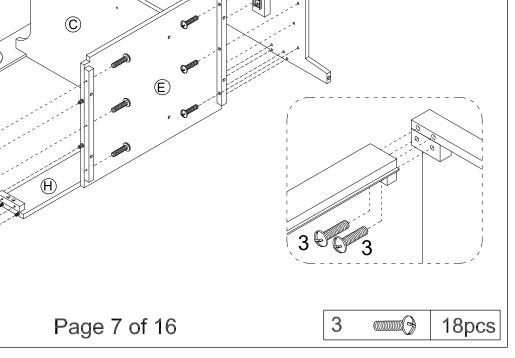

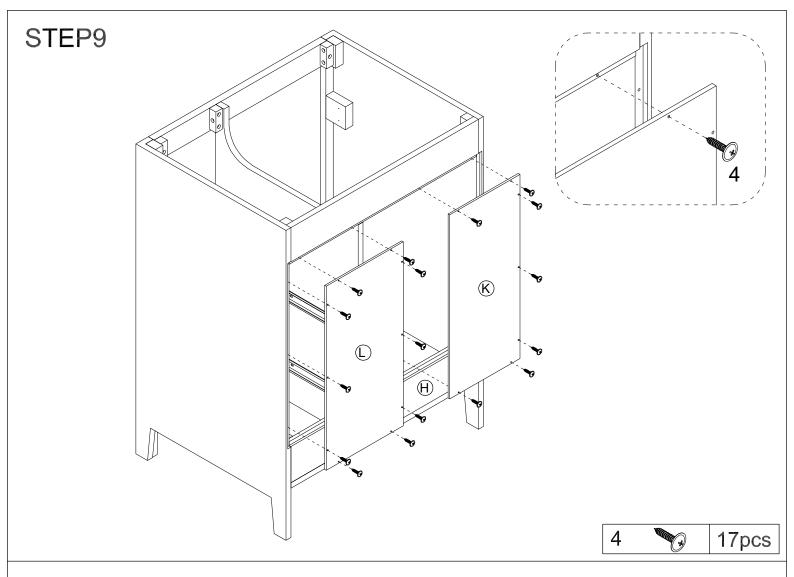



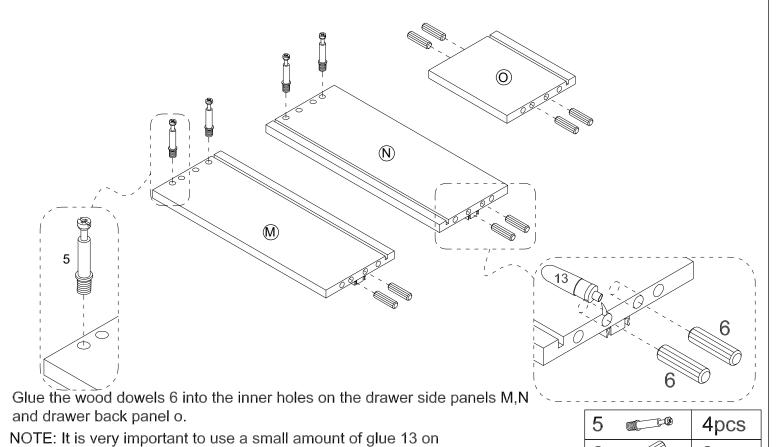

Page 8 of 16

ends of dowels and wipe away excess glue immediately.

6


13

8pcs


1pc


STEP11 **6** <u>N</u> 0 \bigcirc 7 4pcs STEP12




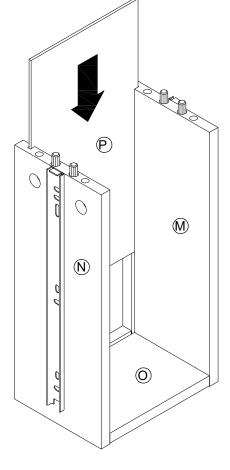


Page 9 of 16

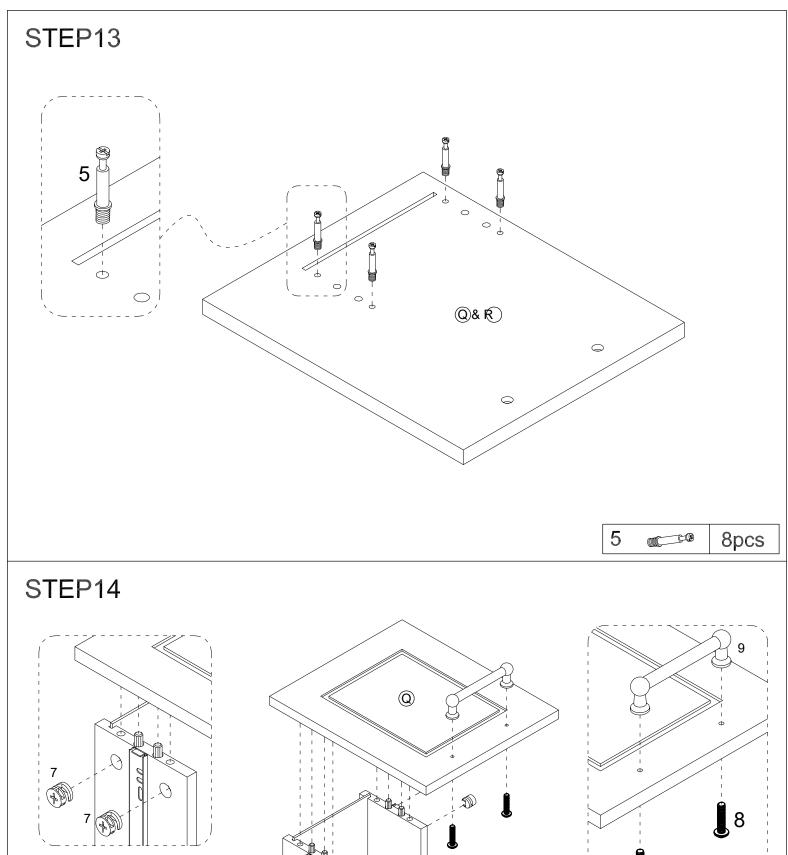

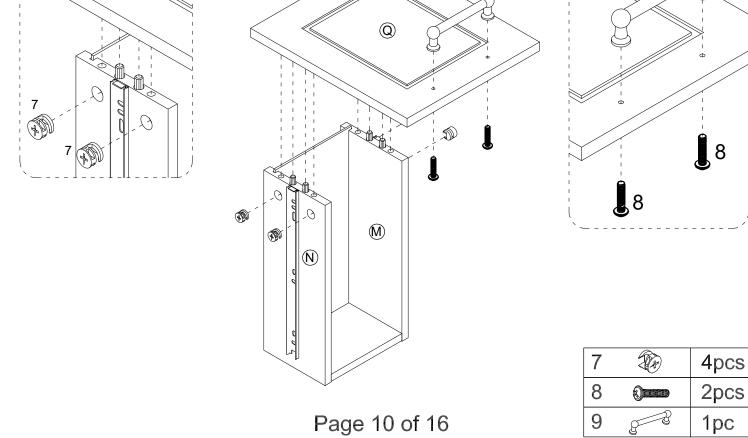

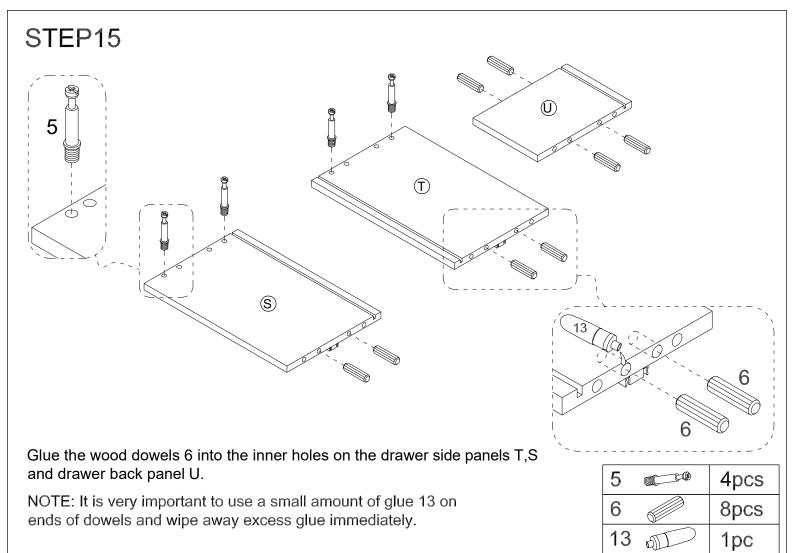

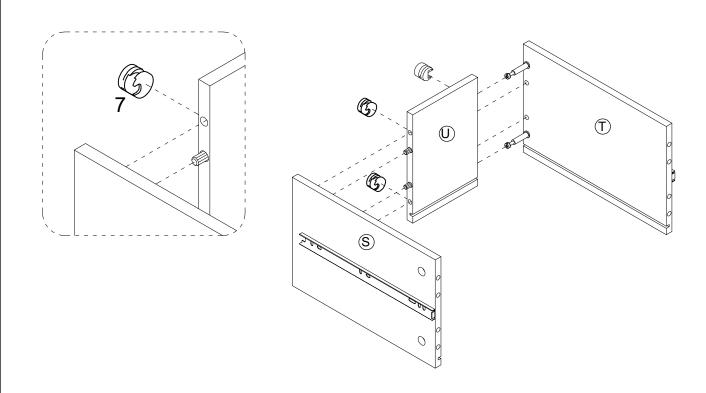

STEP17 0 **(T)** \odot **(** STEP18 \mathbb{R} 8 8 **(T)** \odot 7 4pcs


Page 12 of 16

8


9

2pcs


1рс

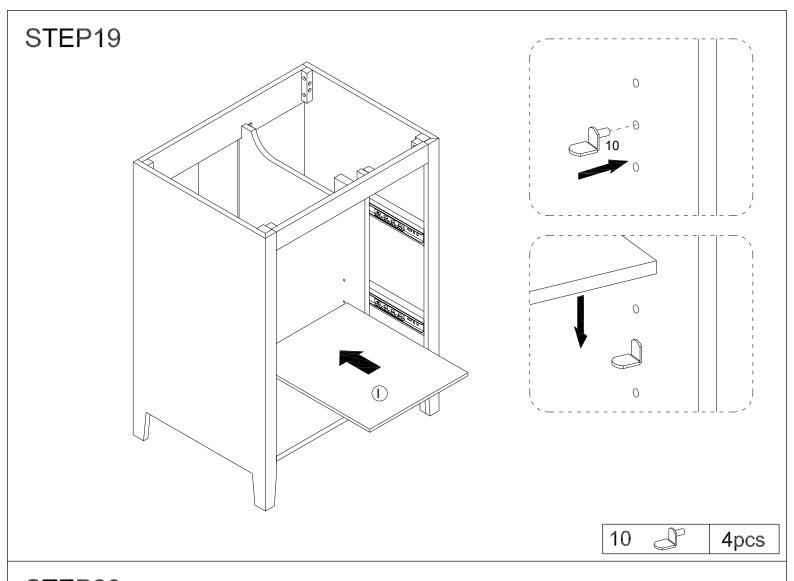




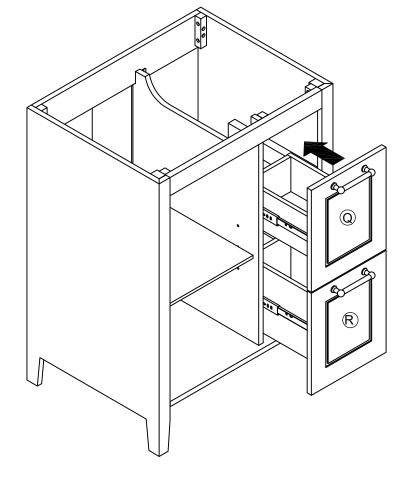

Page 13 of 16

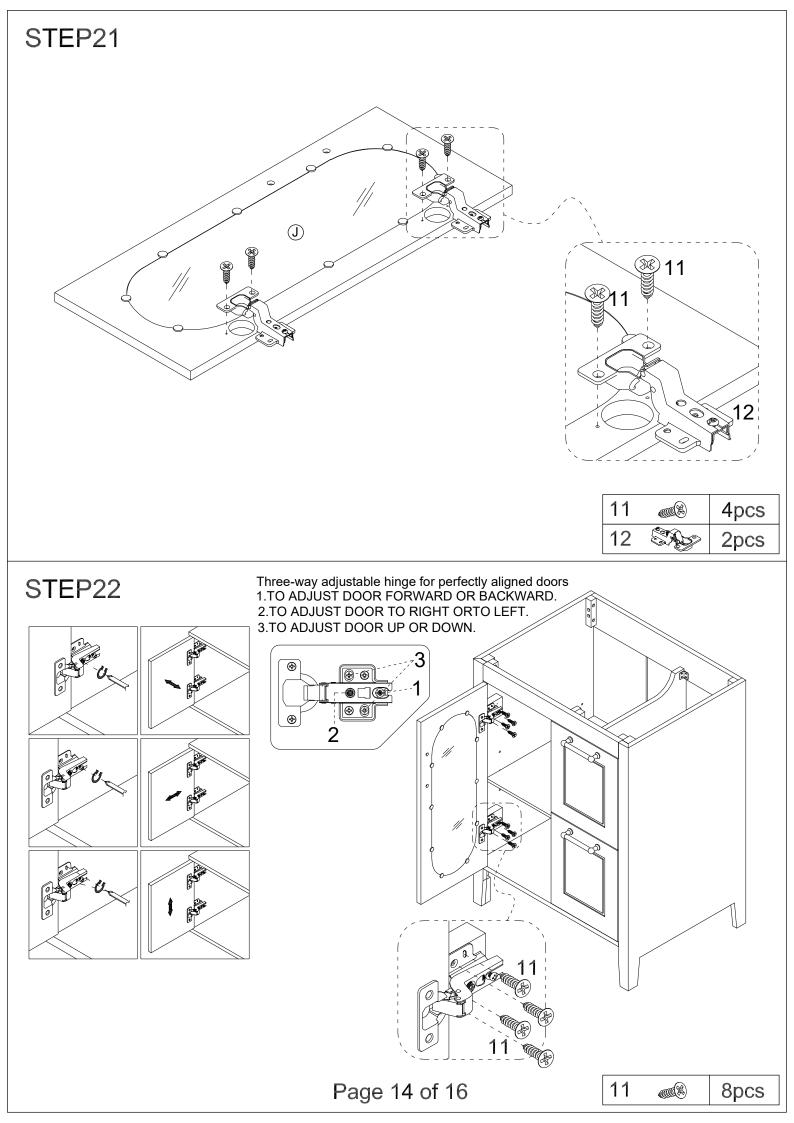


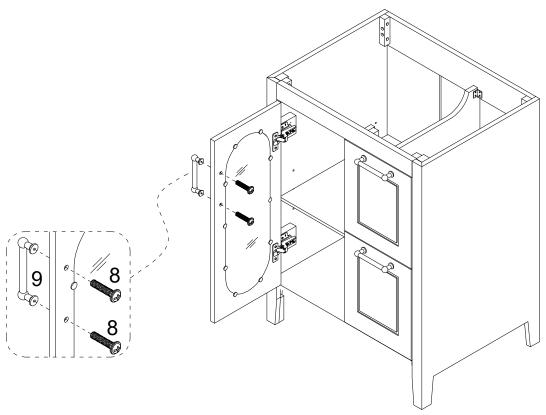


Page 14 of 16

8	O	2pcs
9	g g	1рс

STEP24

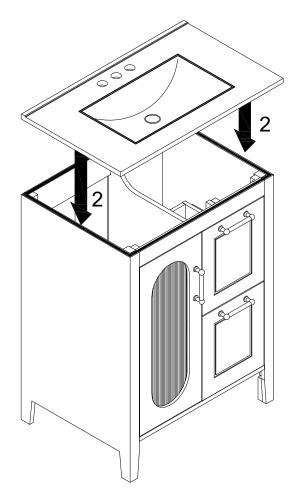

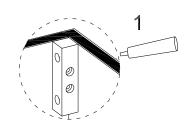

To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

Page 15 of 16

