

#### VERTICAL FILE CABINET ASSEMBLY INSTRUCTIONS

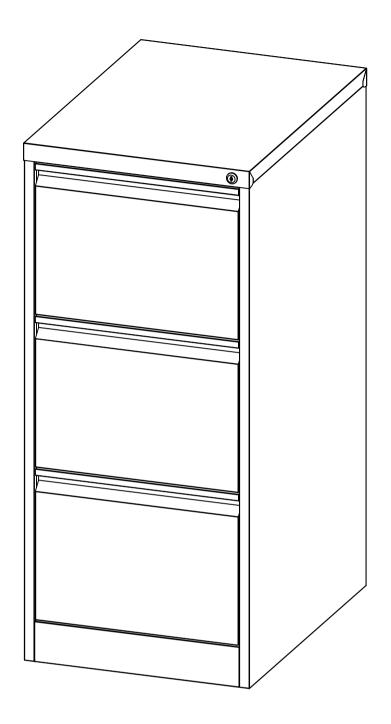


NOTE: The assembling task can be performed by one person but availability of a second person will make the task simpler.

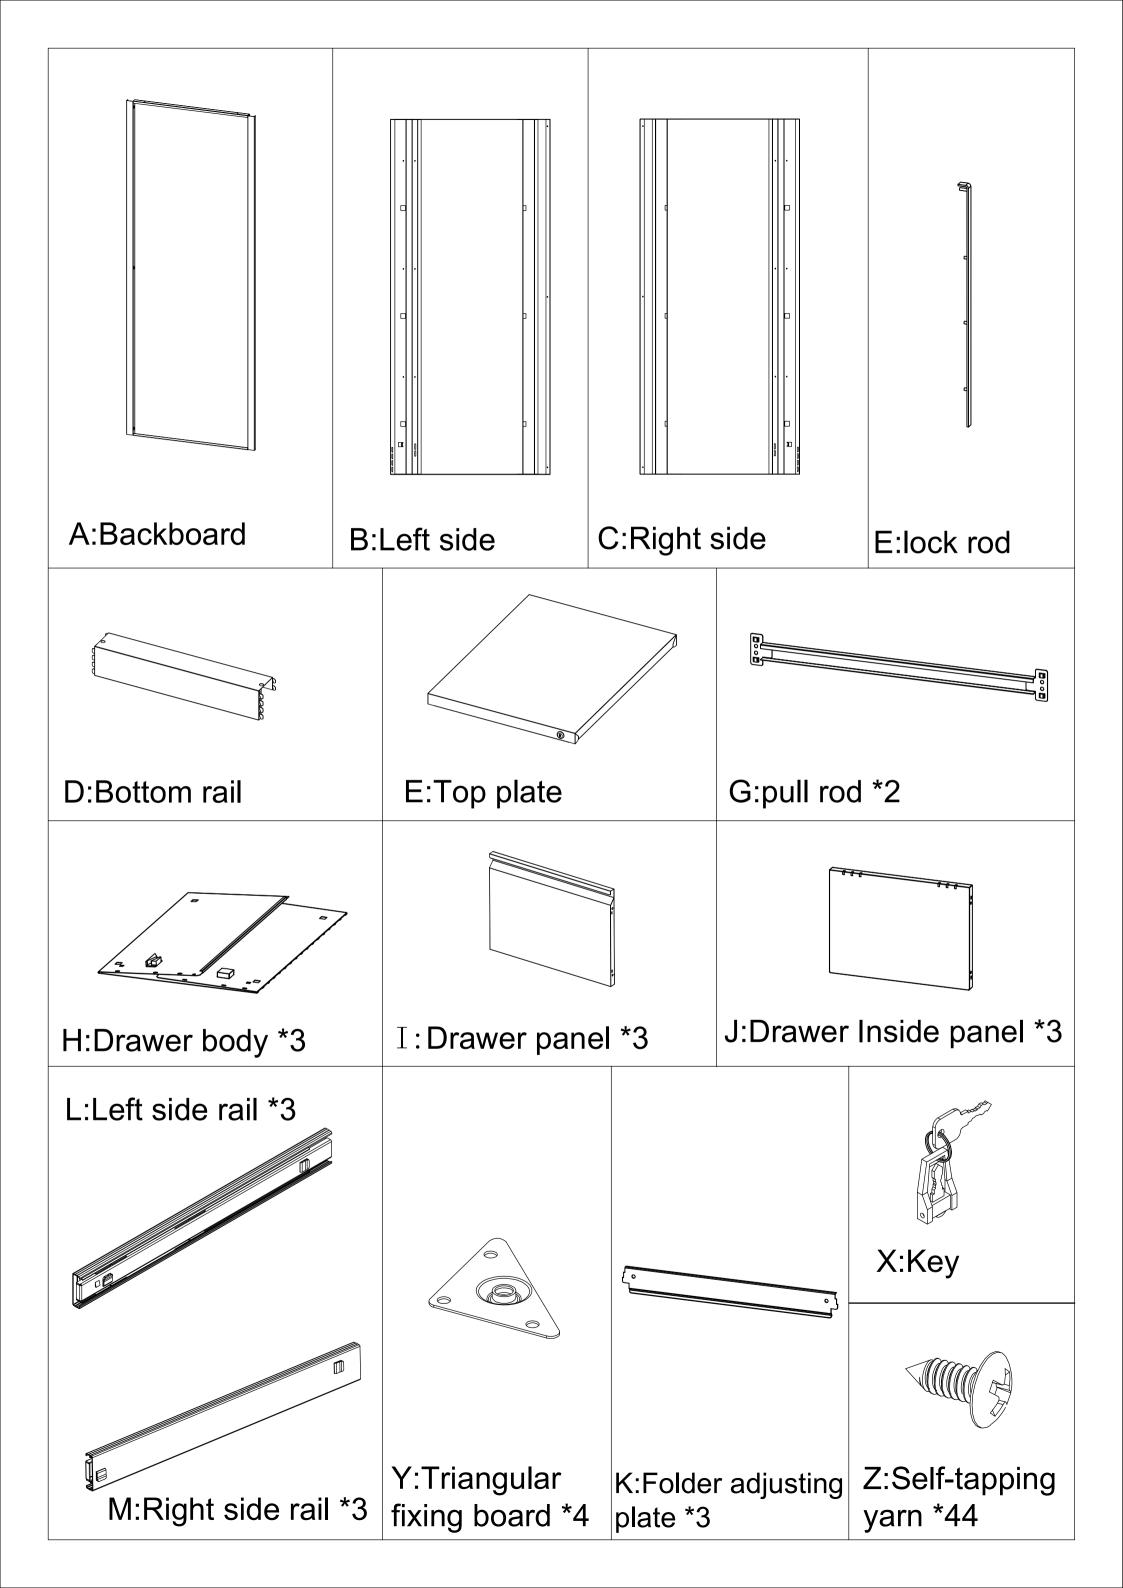


Please scan the QR code to check the assemble video




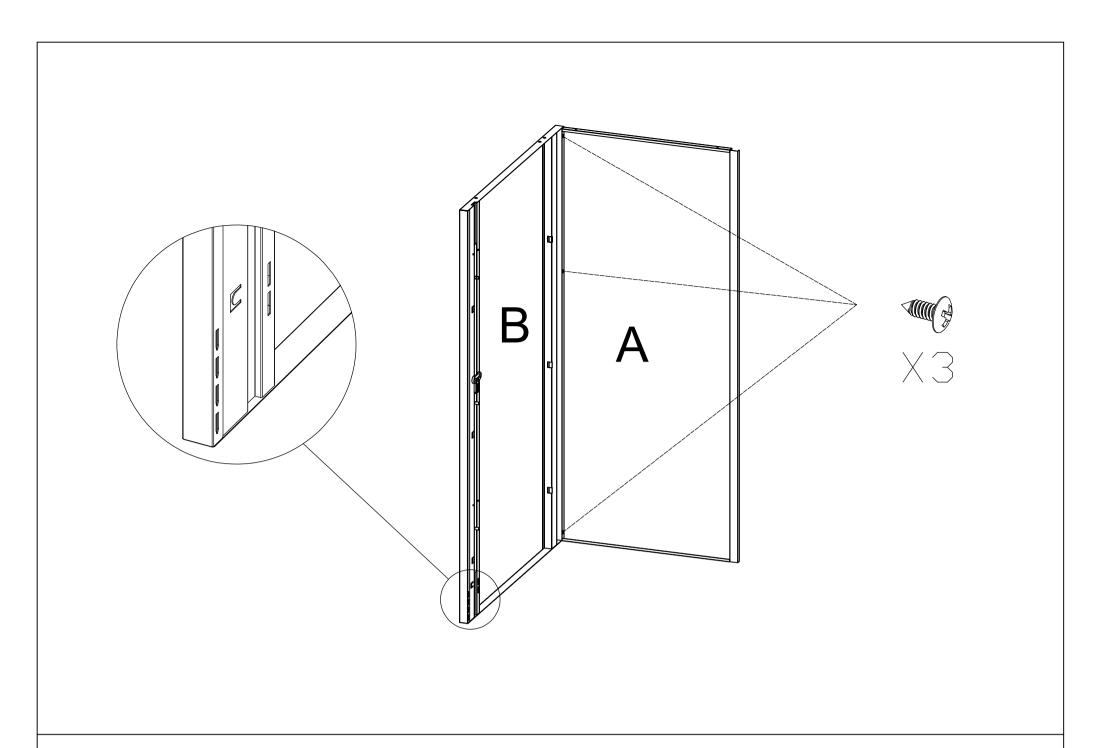


### 1. Assemble A and B, secure with screw Z

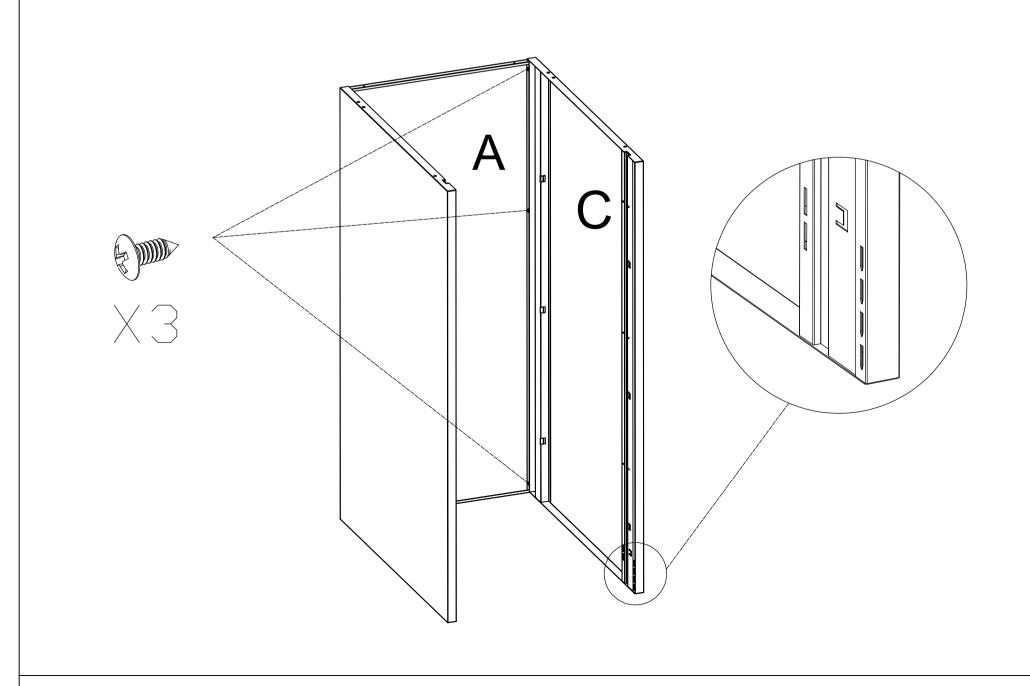


2. Assemble A and C, secure with screw Z

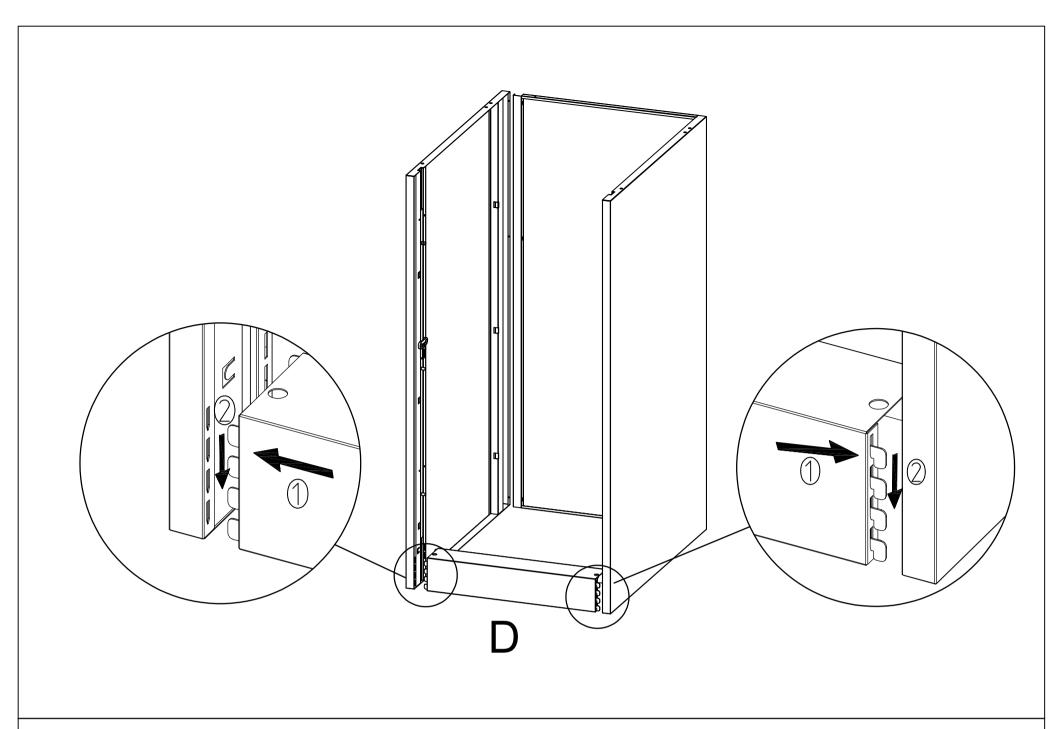


### 3. Install D

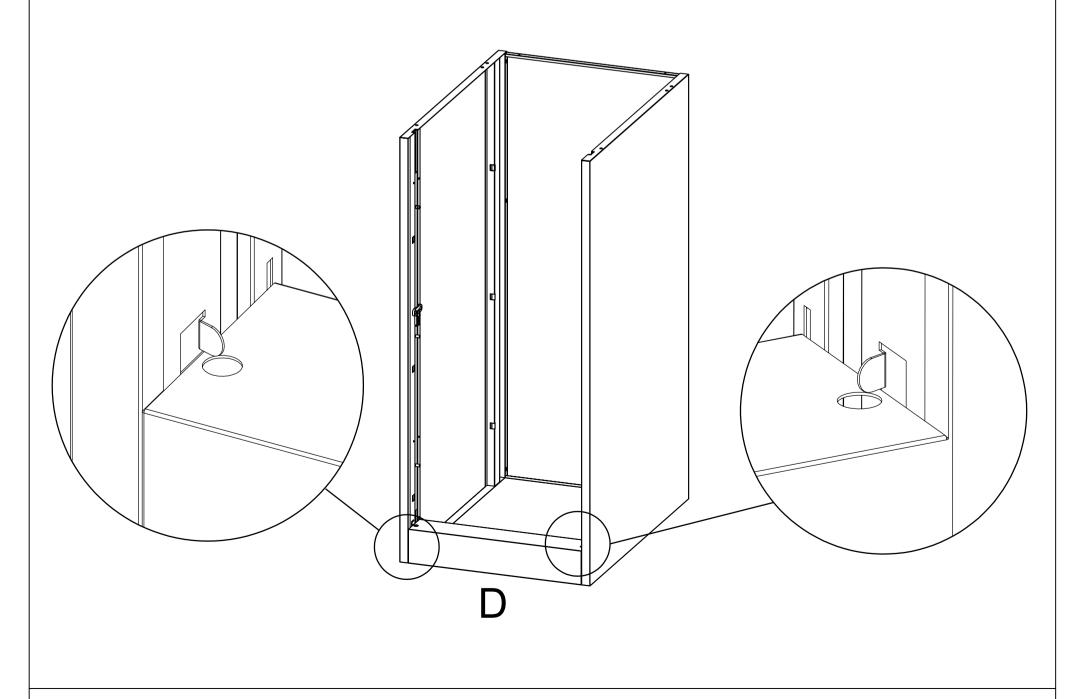


# 4. Open baffle

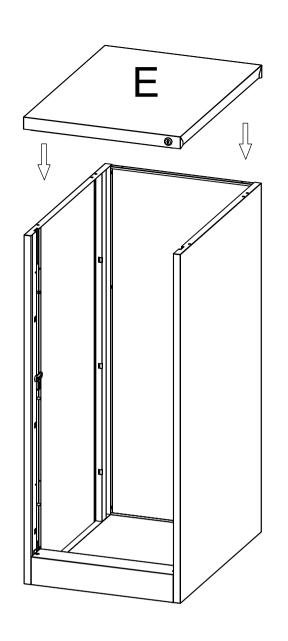


### 5. Install E

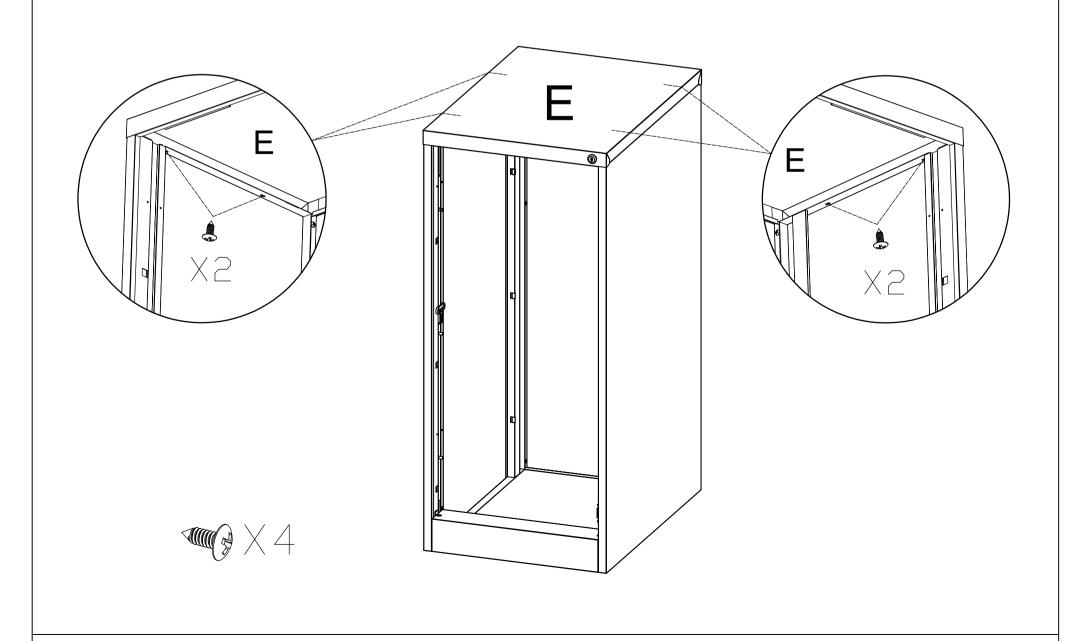


### 6. Secure with screw Z

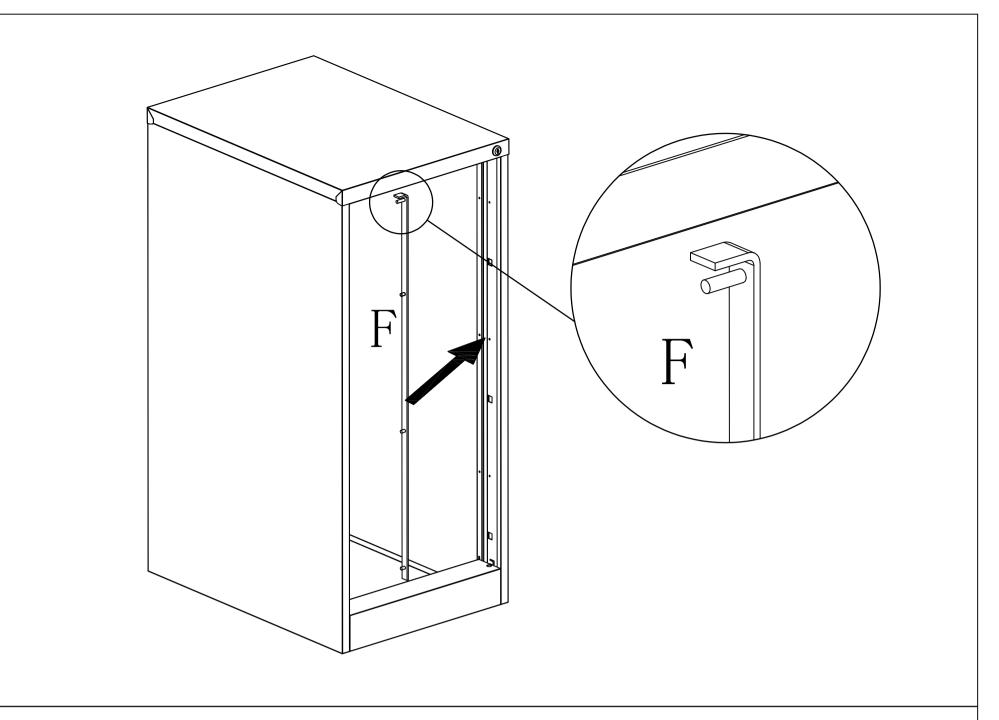


### 7. Install F

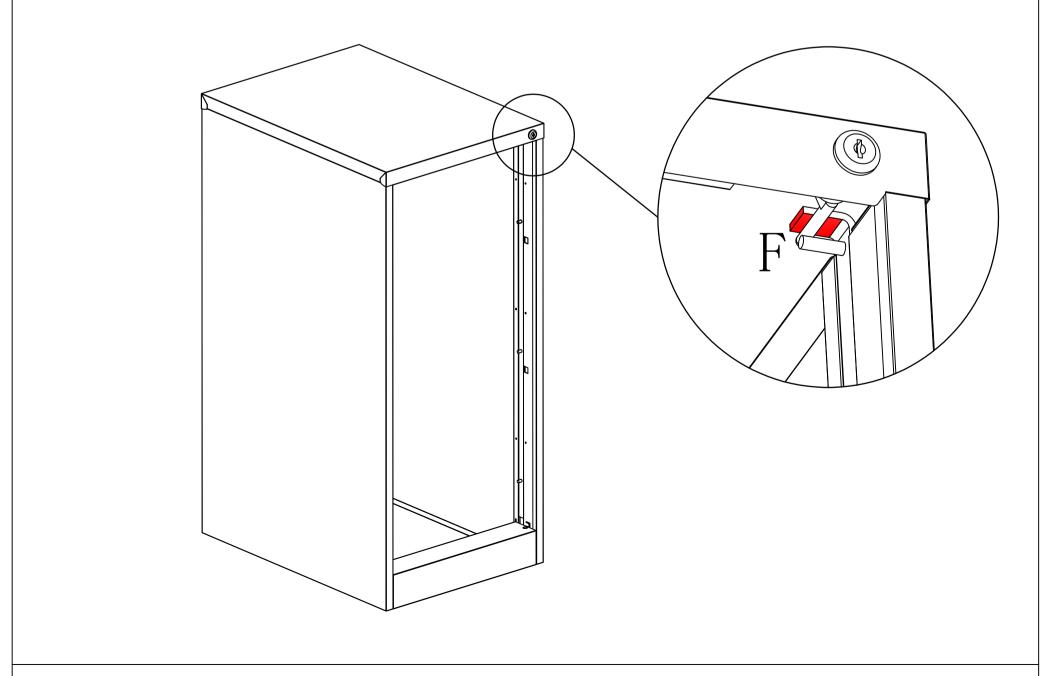


### 8. F Hook the lock

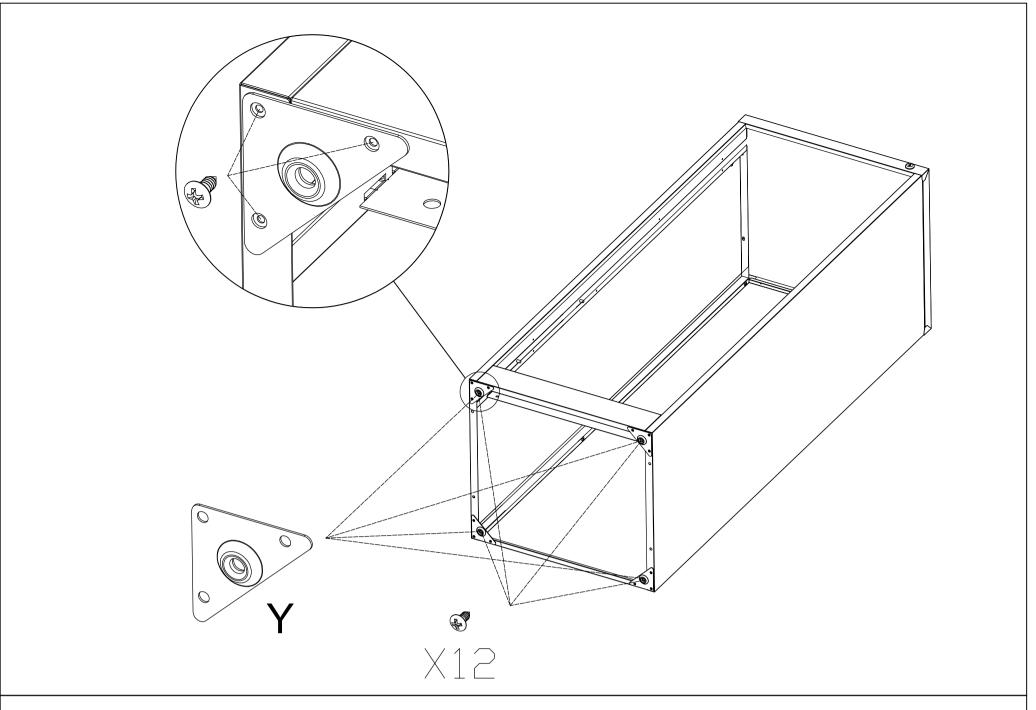


### 9. Install Y, secure with screw Z

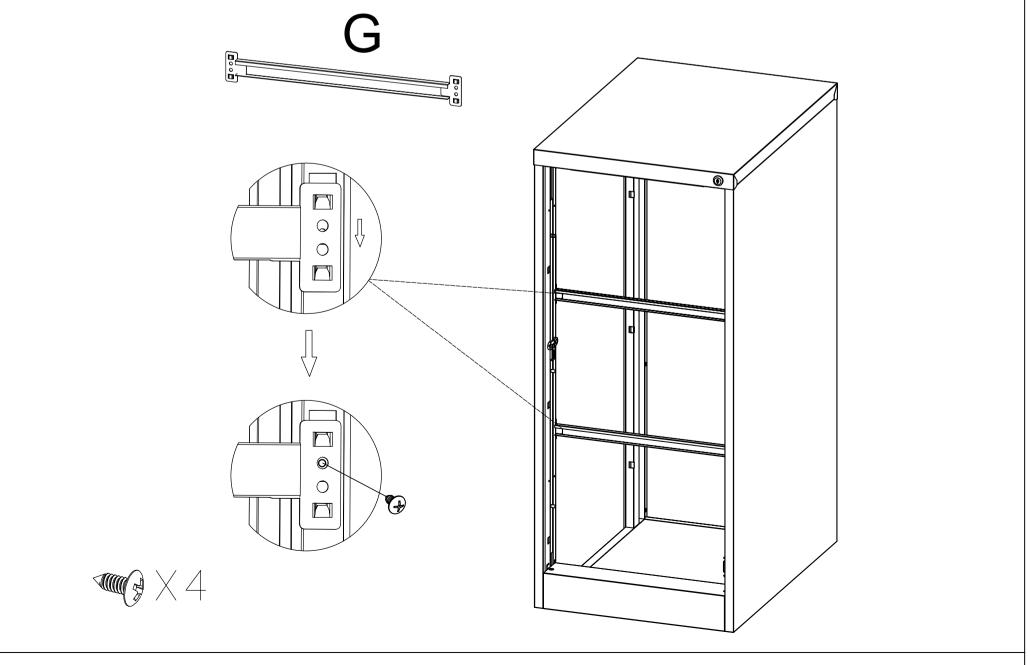


10. Install G, secure with screw Z

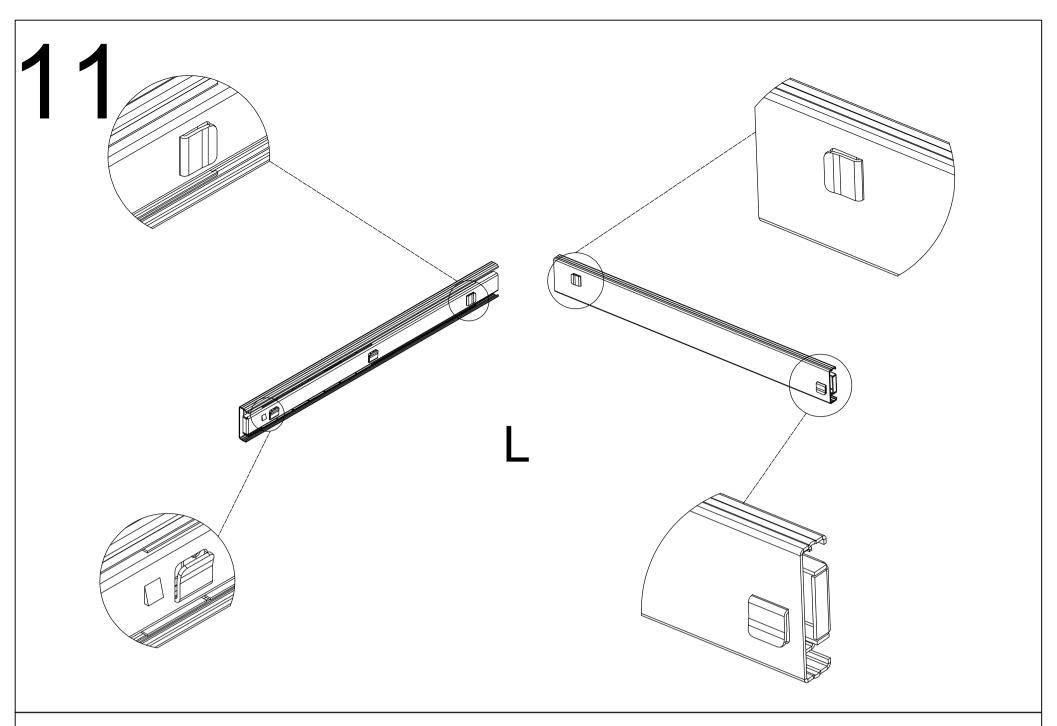


### 11. Left side rail L

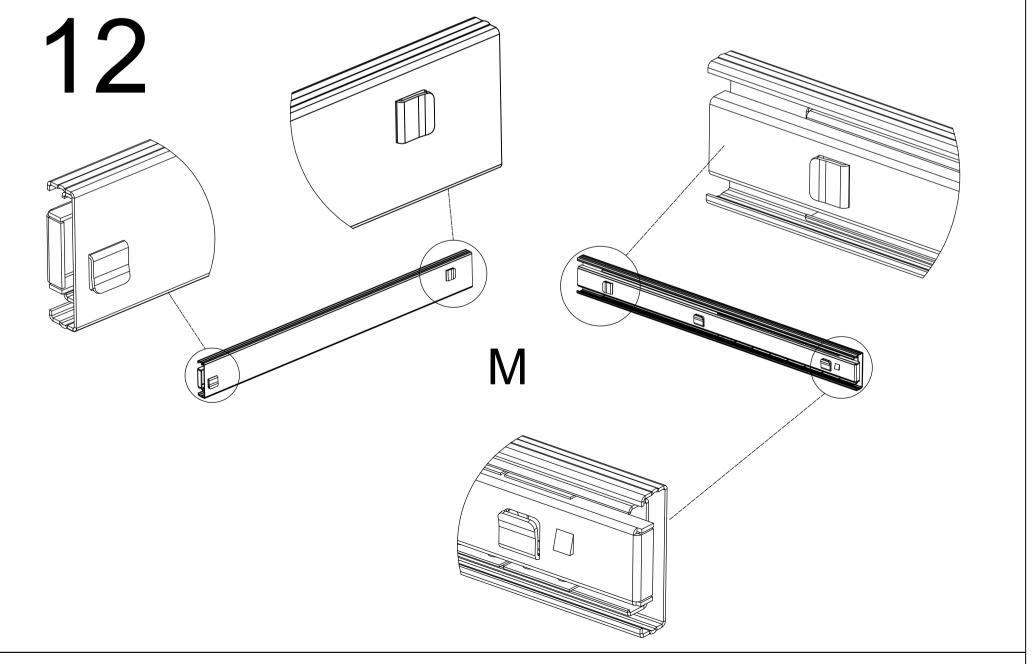


## 12. Right side rail M

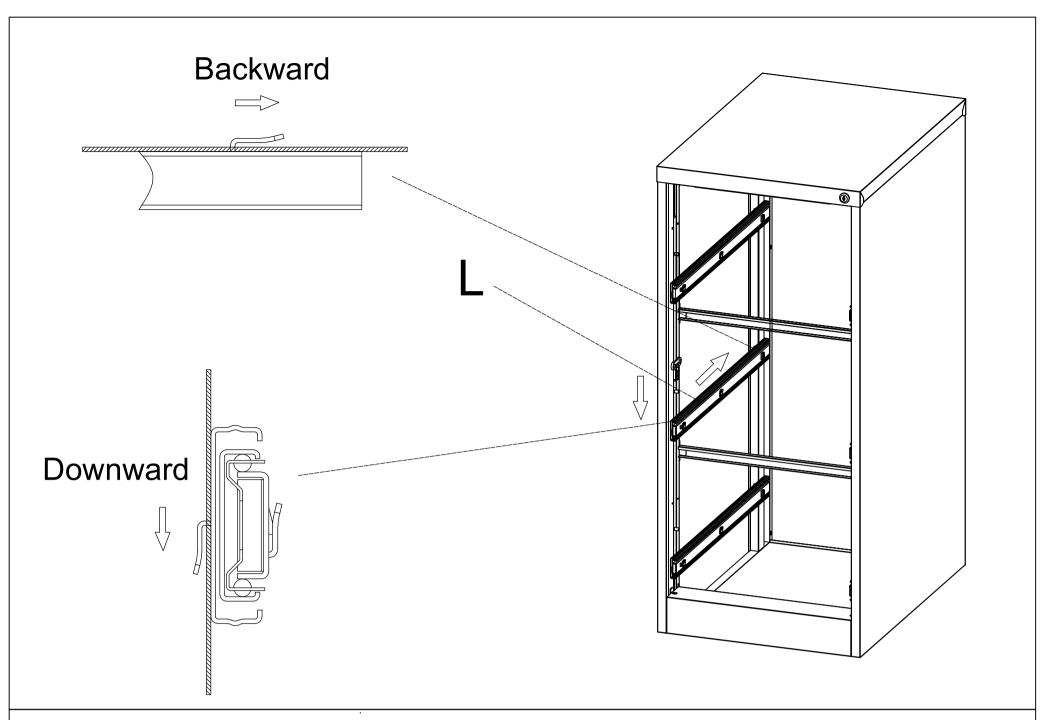


### 13. Install L

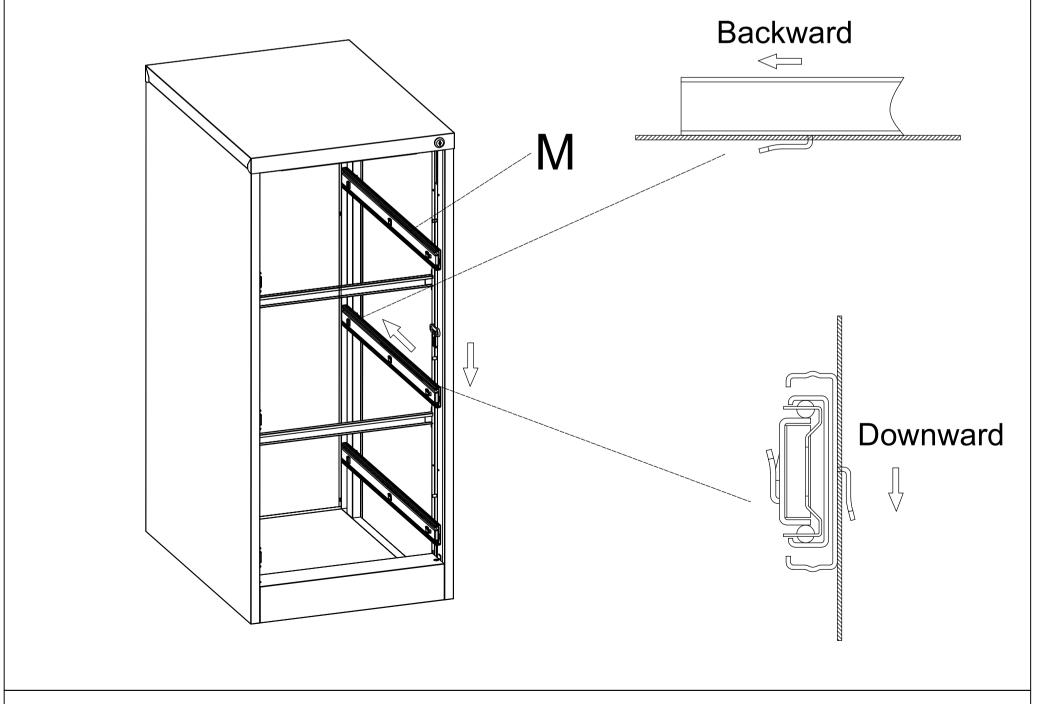


### 14. Install M

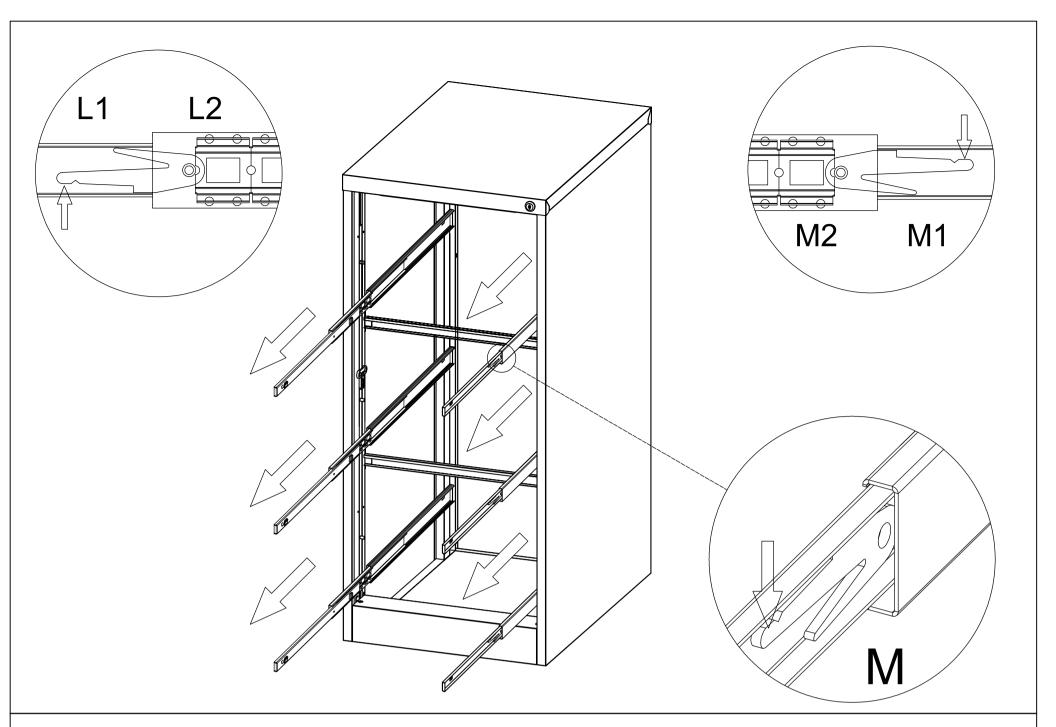


15. Divide the slide rail into L1(M1) and L2(M2)

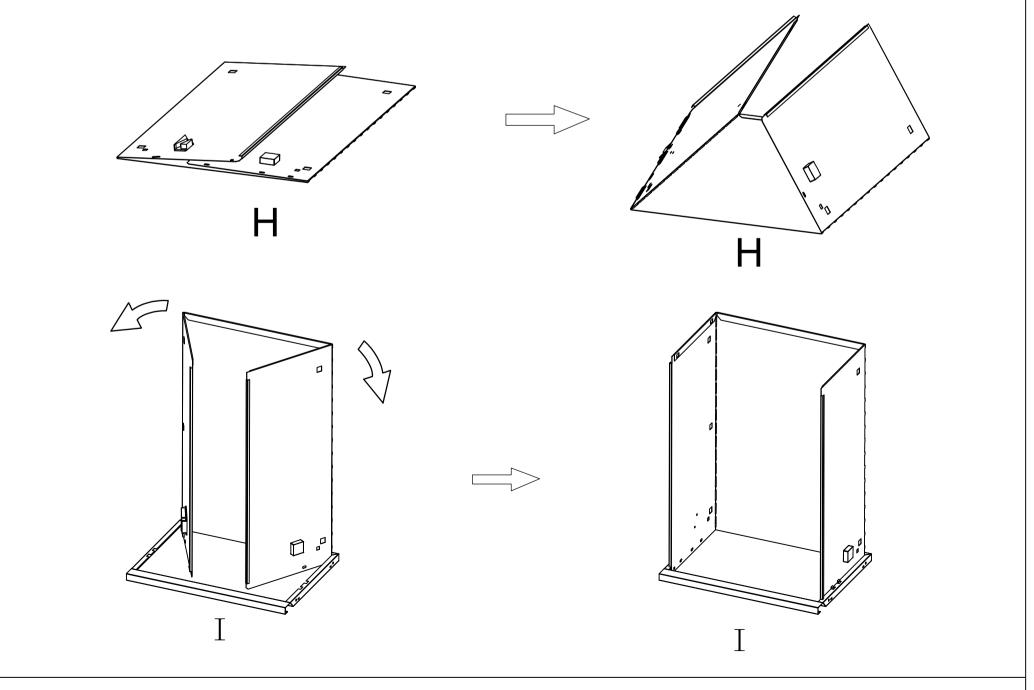


16. Assemble H and I,

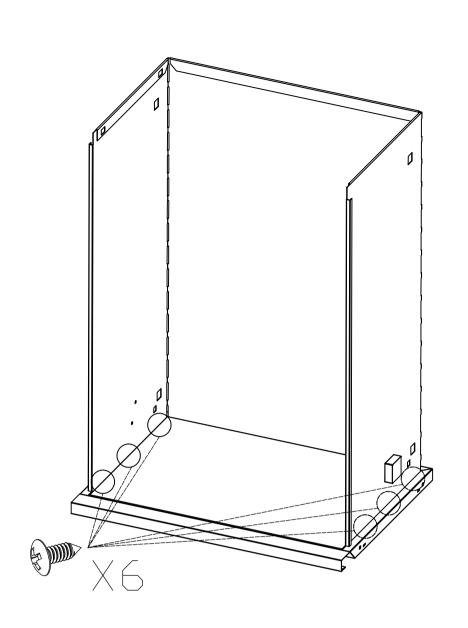


### 17. Secure with screw Z

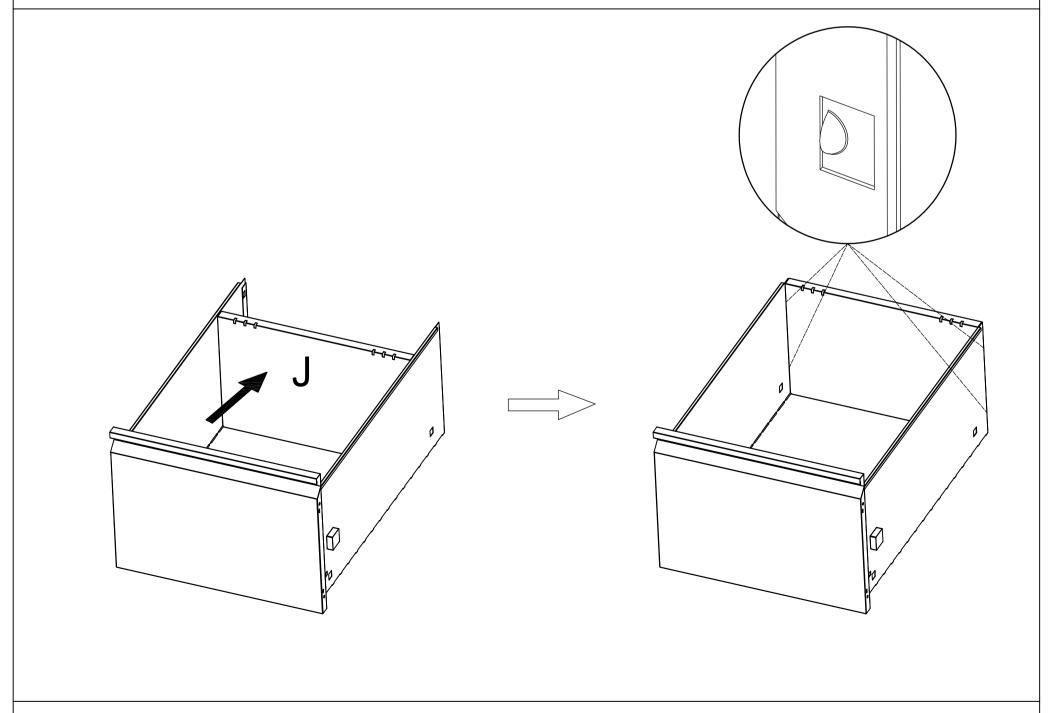


## 18. Install J

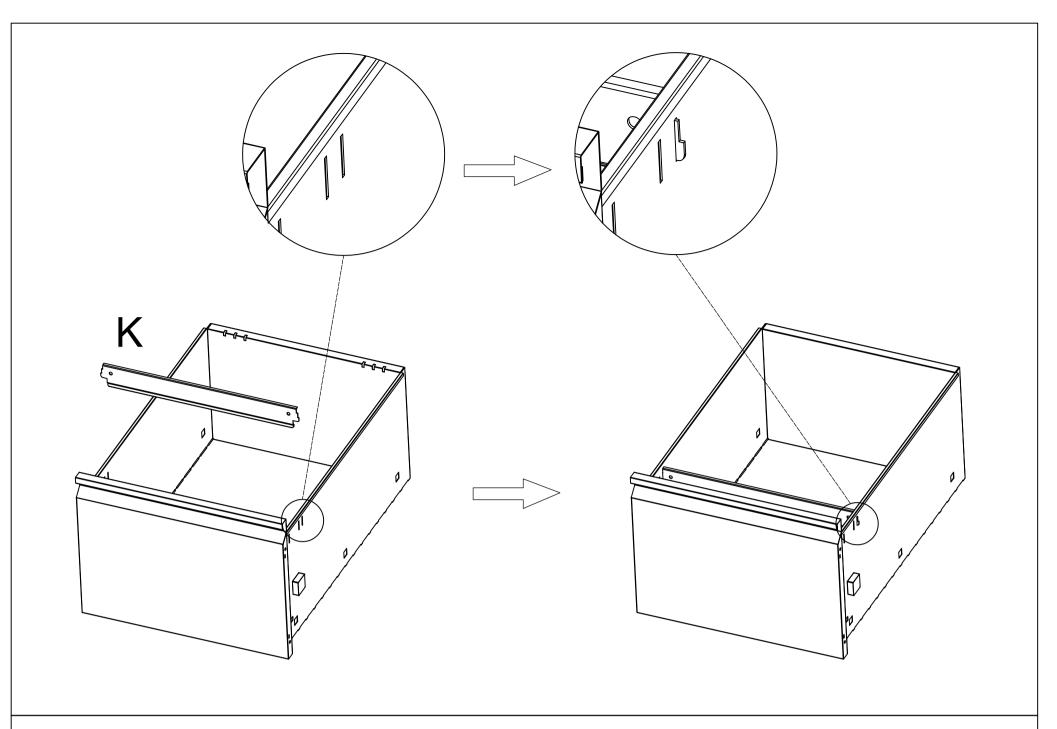


### 19. Install K

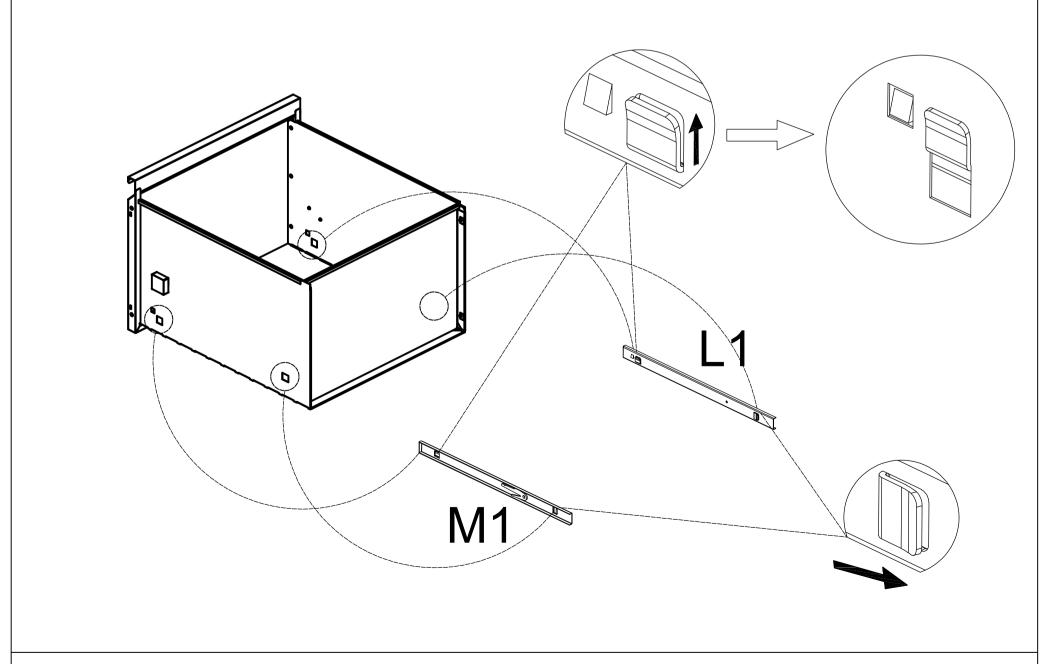

### 20. Install L1 and M1

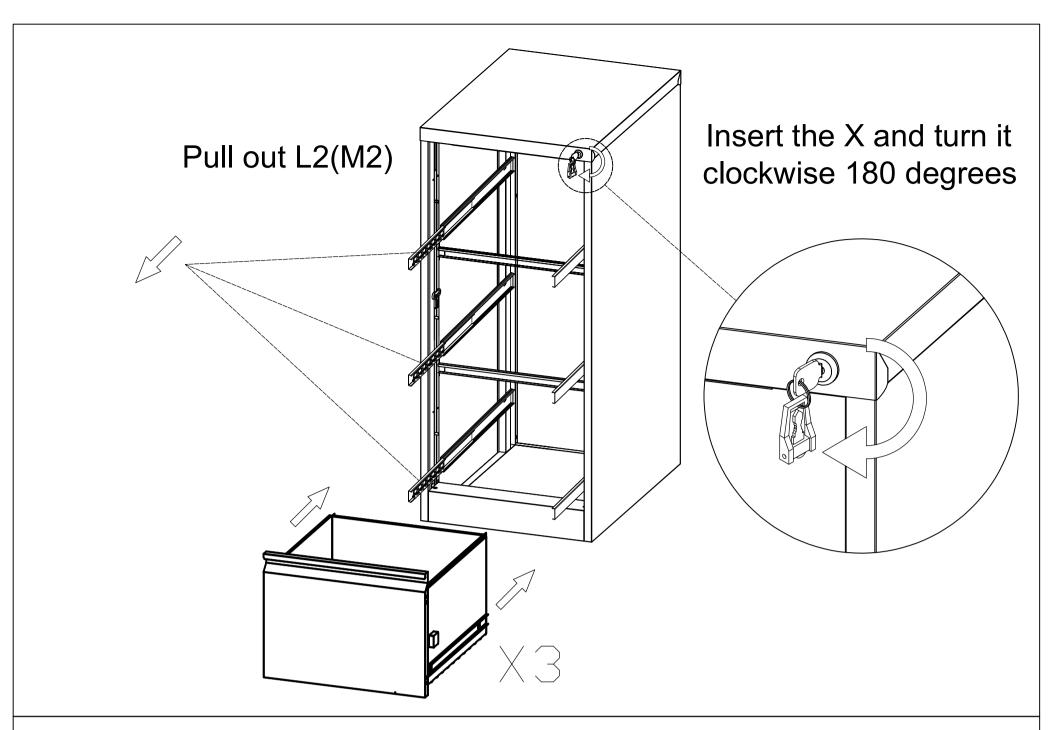

#### 21. Install drawer

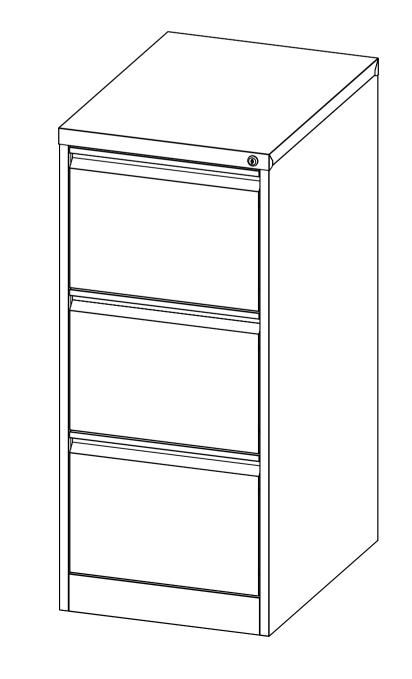

# 22. Assembly completed