UNDER PENALTY OF LAW THIS TAG NOT TO BE REMOVED EXCEPT BY THE CONSUMER

ALL NEW MATERIAL CONSISTING OF

93% POLYURETHANE FOAM PAD
7% RESINTREATED POLYESTER
FIBER BATTING

REGISTRY NO. UT7062(IN)

CERTIFICATION IS MADE BY THE
MANUFACTURER THAT MATERIALS IN THE
ARTICLE ARE DESCRIBED IN ACCORDANCE
WITH LAW.

MADE FOR:

GIGACLOUD TECHNOLOGY(USA)INC 4388 SHIRLEY AVENUE EL MONTE, CA 91731

MADE IN VIETNAM

NOTICE

THIS ARTICLE MEETS THE
FLAMMABILITY REQUIREMENTS OF CALIFORNIA
BUREAU OF
HOUSEHOLD GOODS AND SERVICES TECHNICAL
BULLETIN 117-2013. CARE SHOULD BE
EXERCISED NEAR OPEN FLAME OR WITH
BURNING CIGARETTES.

THE UPHOLSTERY MATERIALS IN THIS PRODUCT:

____ CONTAIN ADDED FLAME RETARDANT

CHEMICAILS

X CONTAIN NO ADDED FLAME RETARDANT
CHEMICALS

THE STATE OF CALIFORNIA HAS

UPDATE THE FLAM MABILITY STANDARD AND

DETERMINED THAT THE FIRE SAFETY

REQUIREMENTS FOR THIS

PRODUCT CAN BE MET WITHOUT ADDING FLAME

RETARDANT CHEMICALS. THE STATE HAS

IDENTIFIED MANY FLAME RETARDANT

CHEMICALS AS BEING KNOWN TO, OR STRONGLY


SUSPECTED OF, ADVERSELY IMPACTING HUMAN

HEALTH OR DEVELOPMENT.

Complies with U.S. CPSC requirements for upholstered furniture flammbility.


ASSEMBLY INSTRUCTIONS

ITEM NO.WF295246

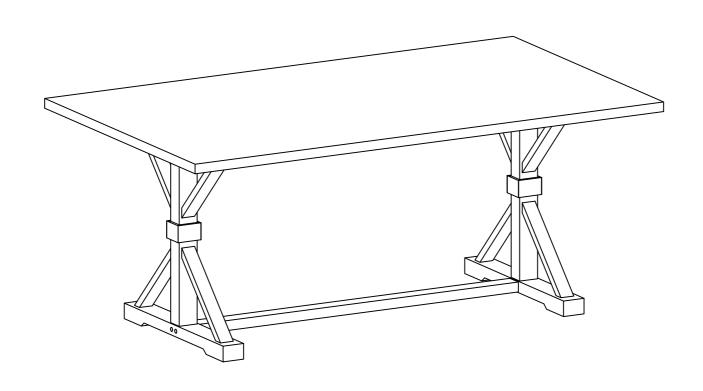


IMPORTANT NOTE:


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- **③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE TABLE IS FULLY SET-UP.**

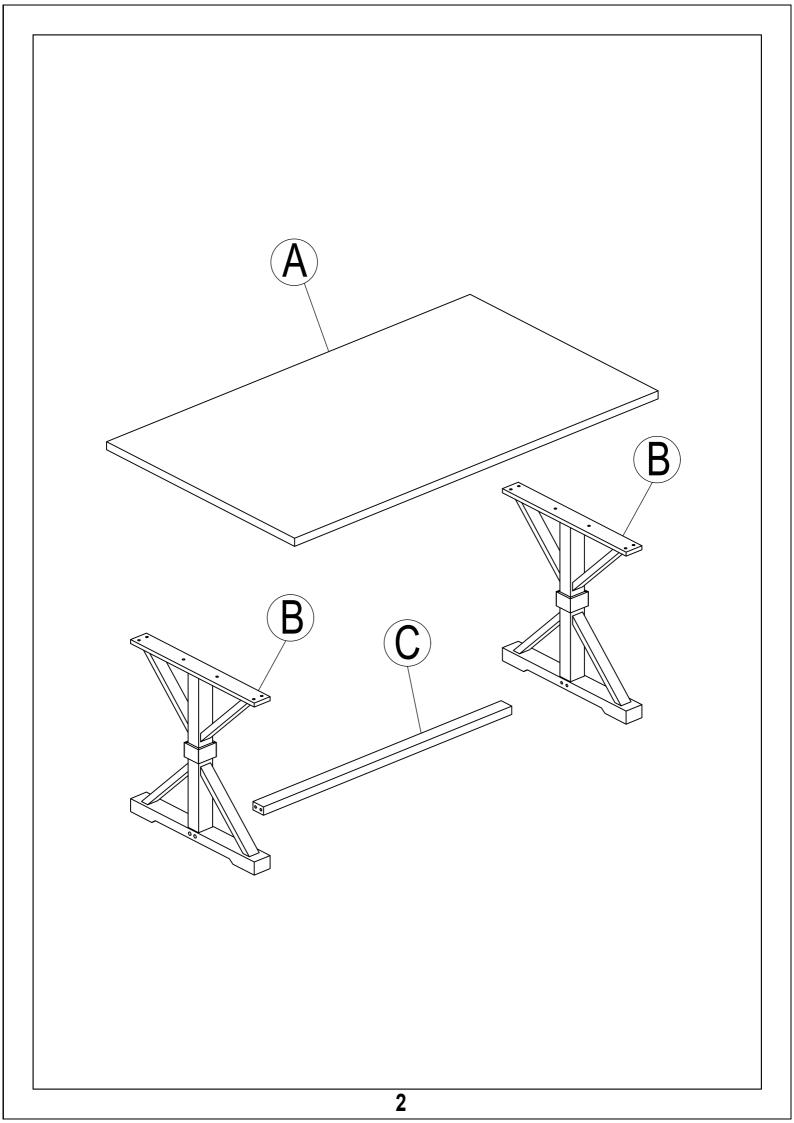

Part List


Hardware List

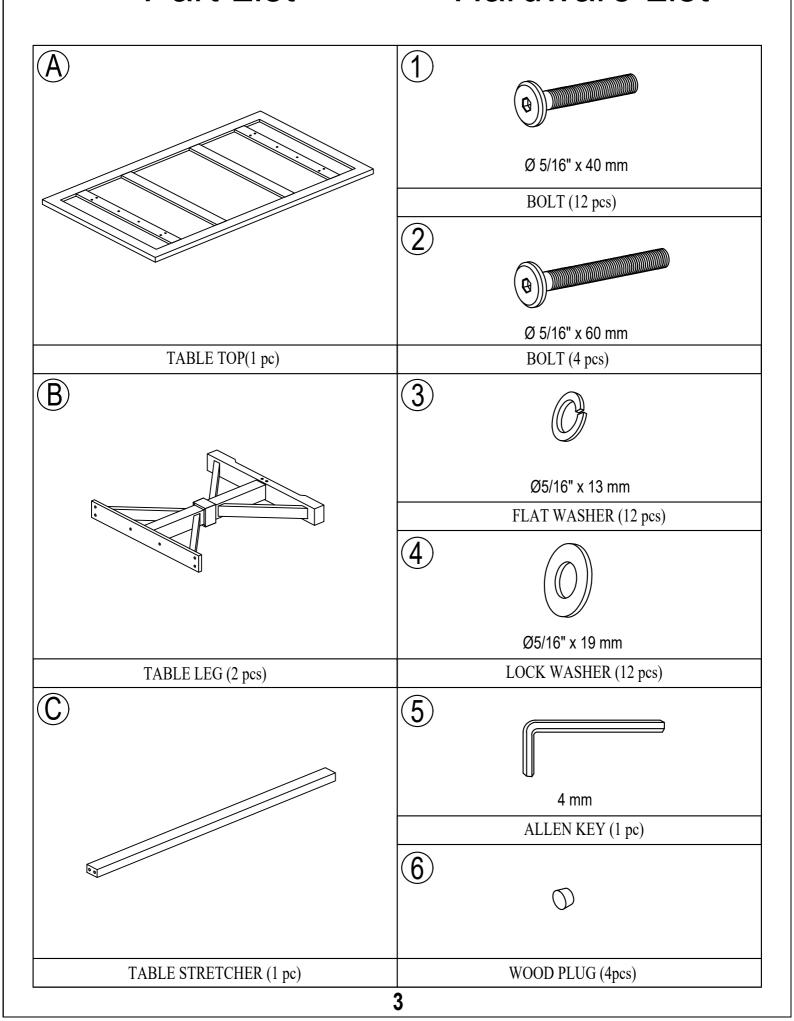

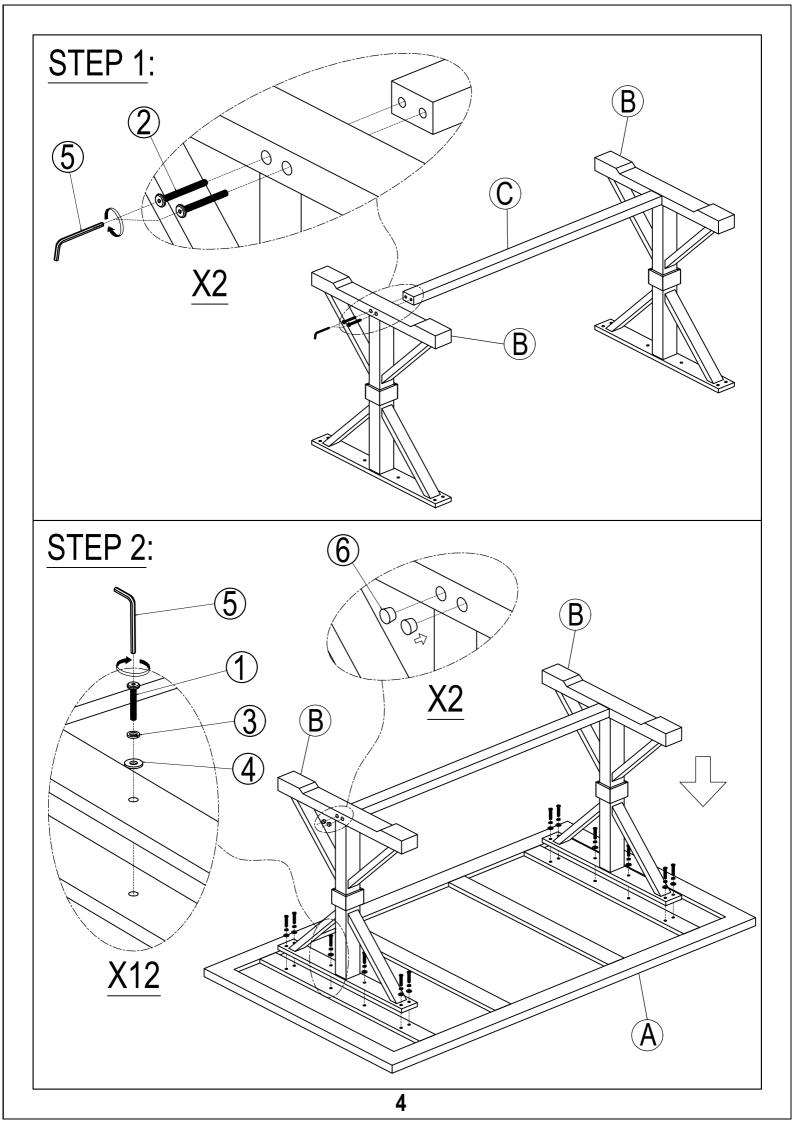


ASSEMBLY INSTRUCTIONS

ITEM NO.WF295247

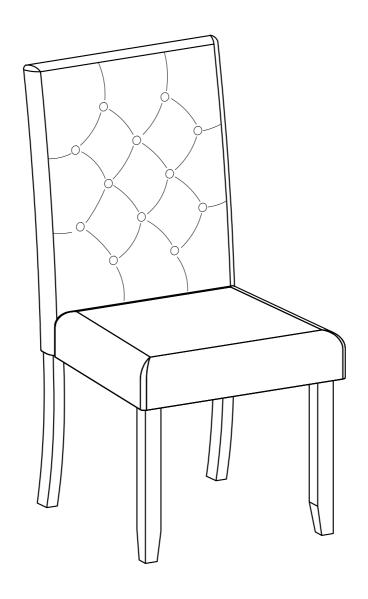


IMPORTANT NOTE:


- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

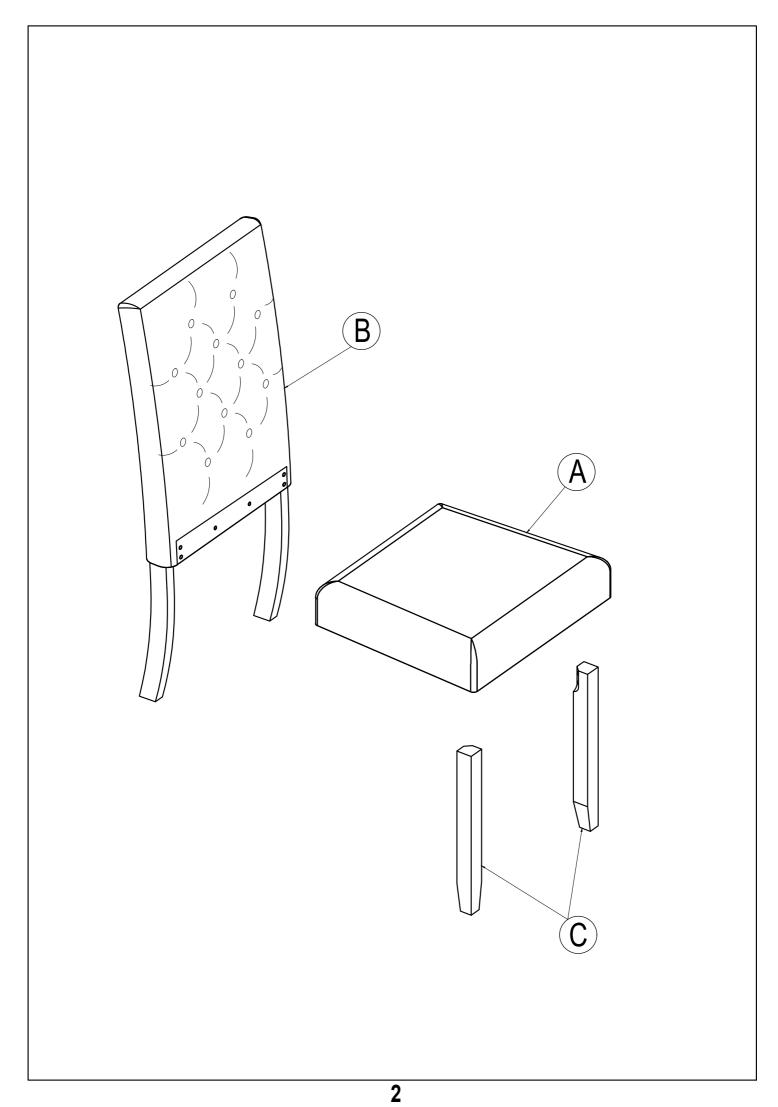


Part List

Hardware List

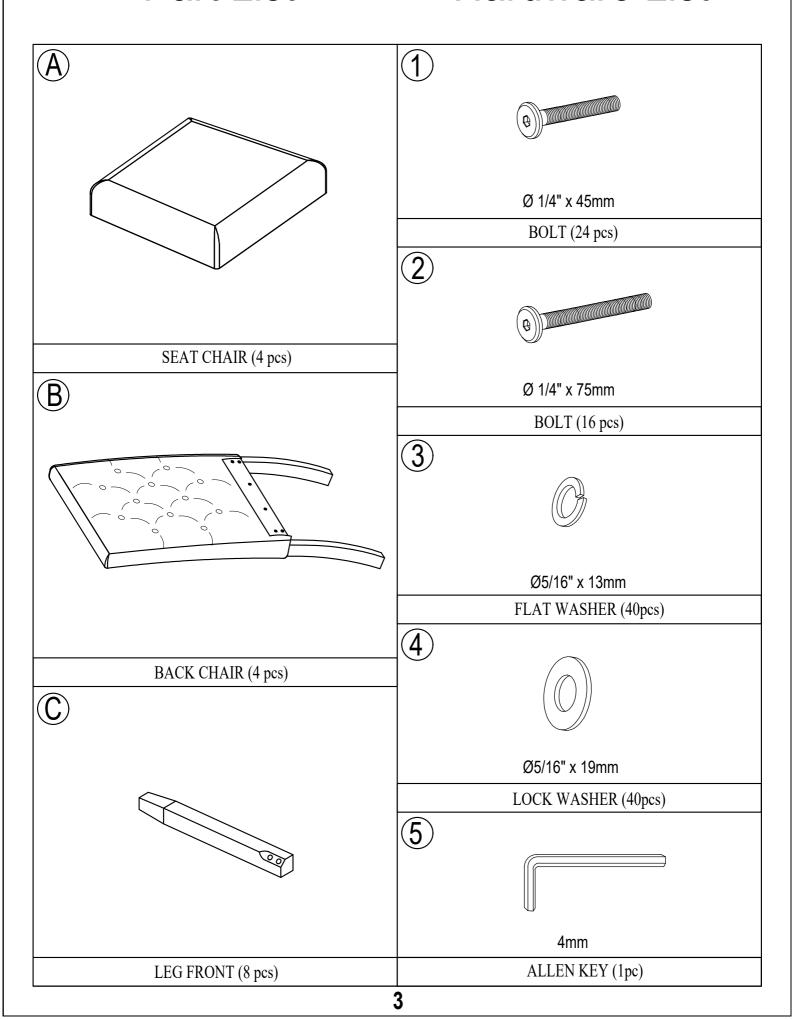


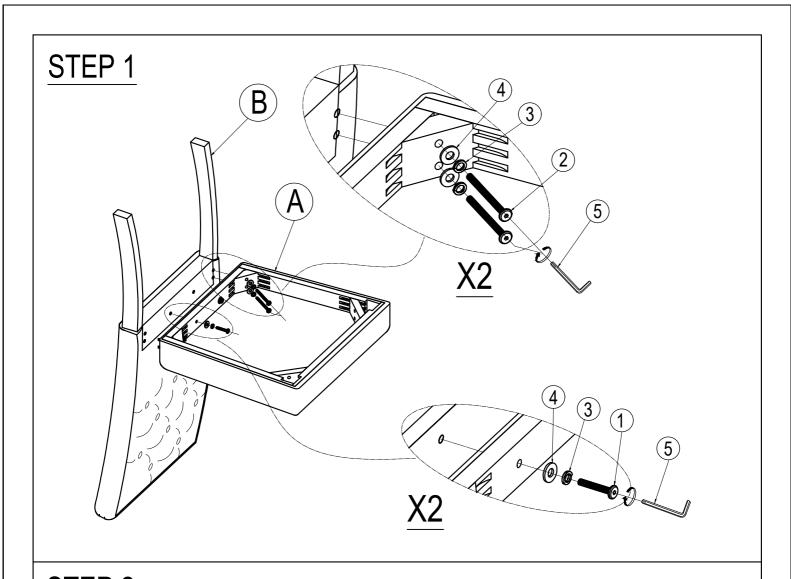

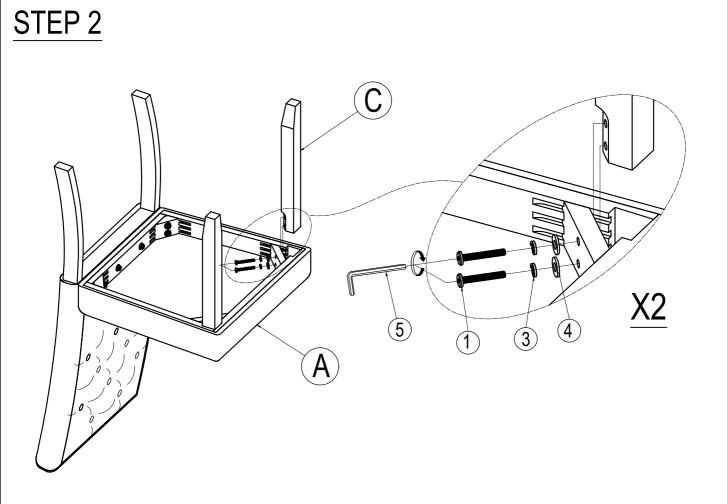


ASSEMBLY INSTRUCTIONS

ITEM NO.WF295248

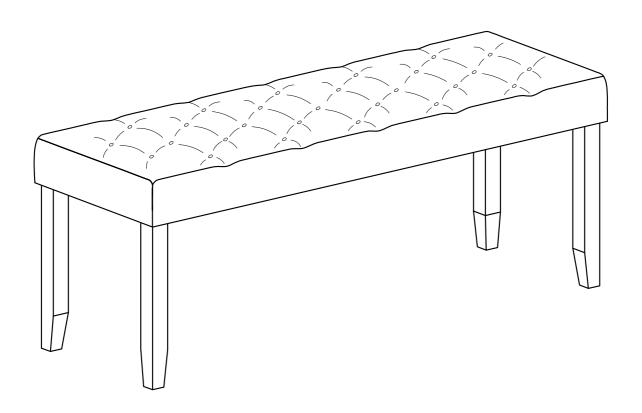

IMPORTANT NOTE:

- ① PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE BENCH IS FULLY SET-UP.

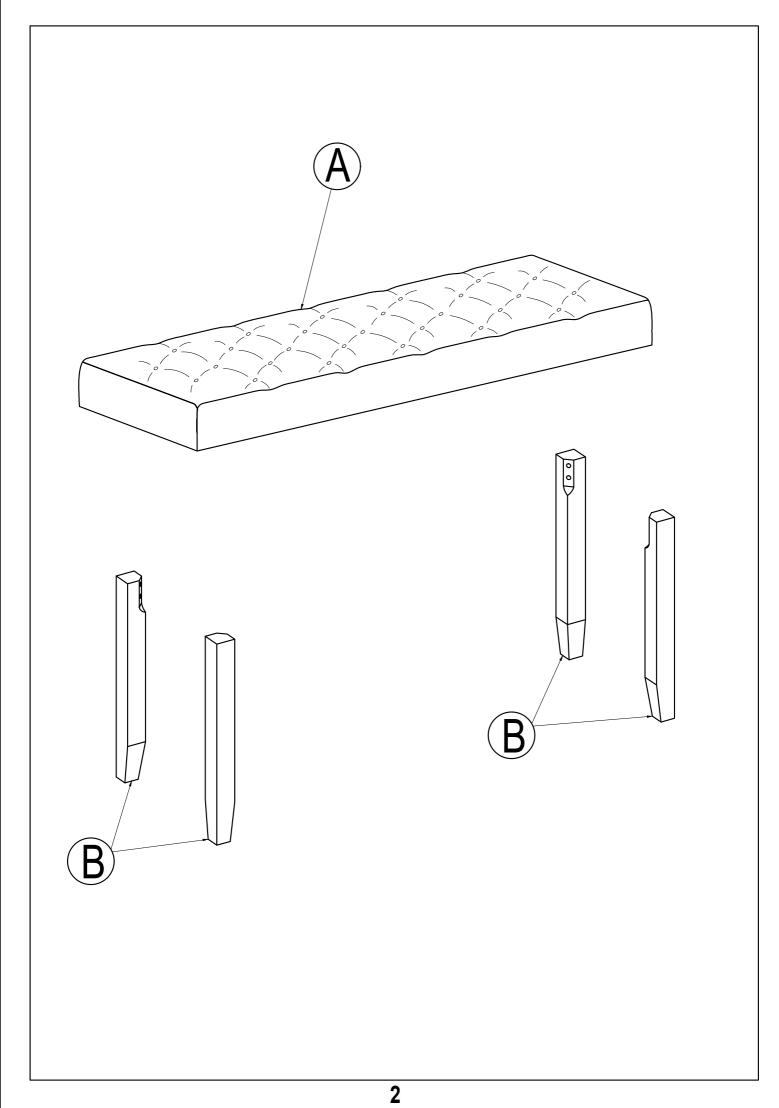

Part List

Hardware List

