



4-Pack





Post & Frame
Installation System


5½" WPC Horizontal Fencing Slats

5½" x 72" x ¾" | Flat Edge | Charcoal Finish | 4 Pack (SL556C-4P)

- Wood-Plastic Composite (WPC) with sanded-wood texture on both sides
- No painting, sealing, or maintenance required
- UV-resistant material prevents fading
- Will not rot, crack, splinter, or peel
- Can be cut to shorter lengths
- FSC-Certified, 100% recyclable
- 10-Year Warranty*



Sanded-Wood Texture
Charcoal Finish

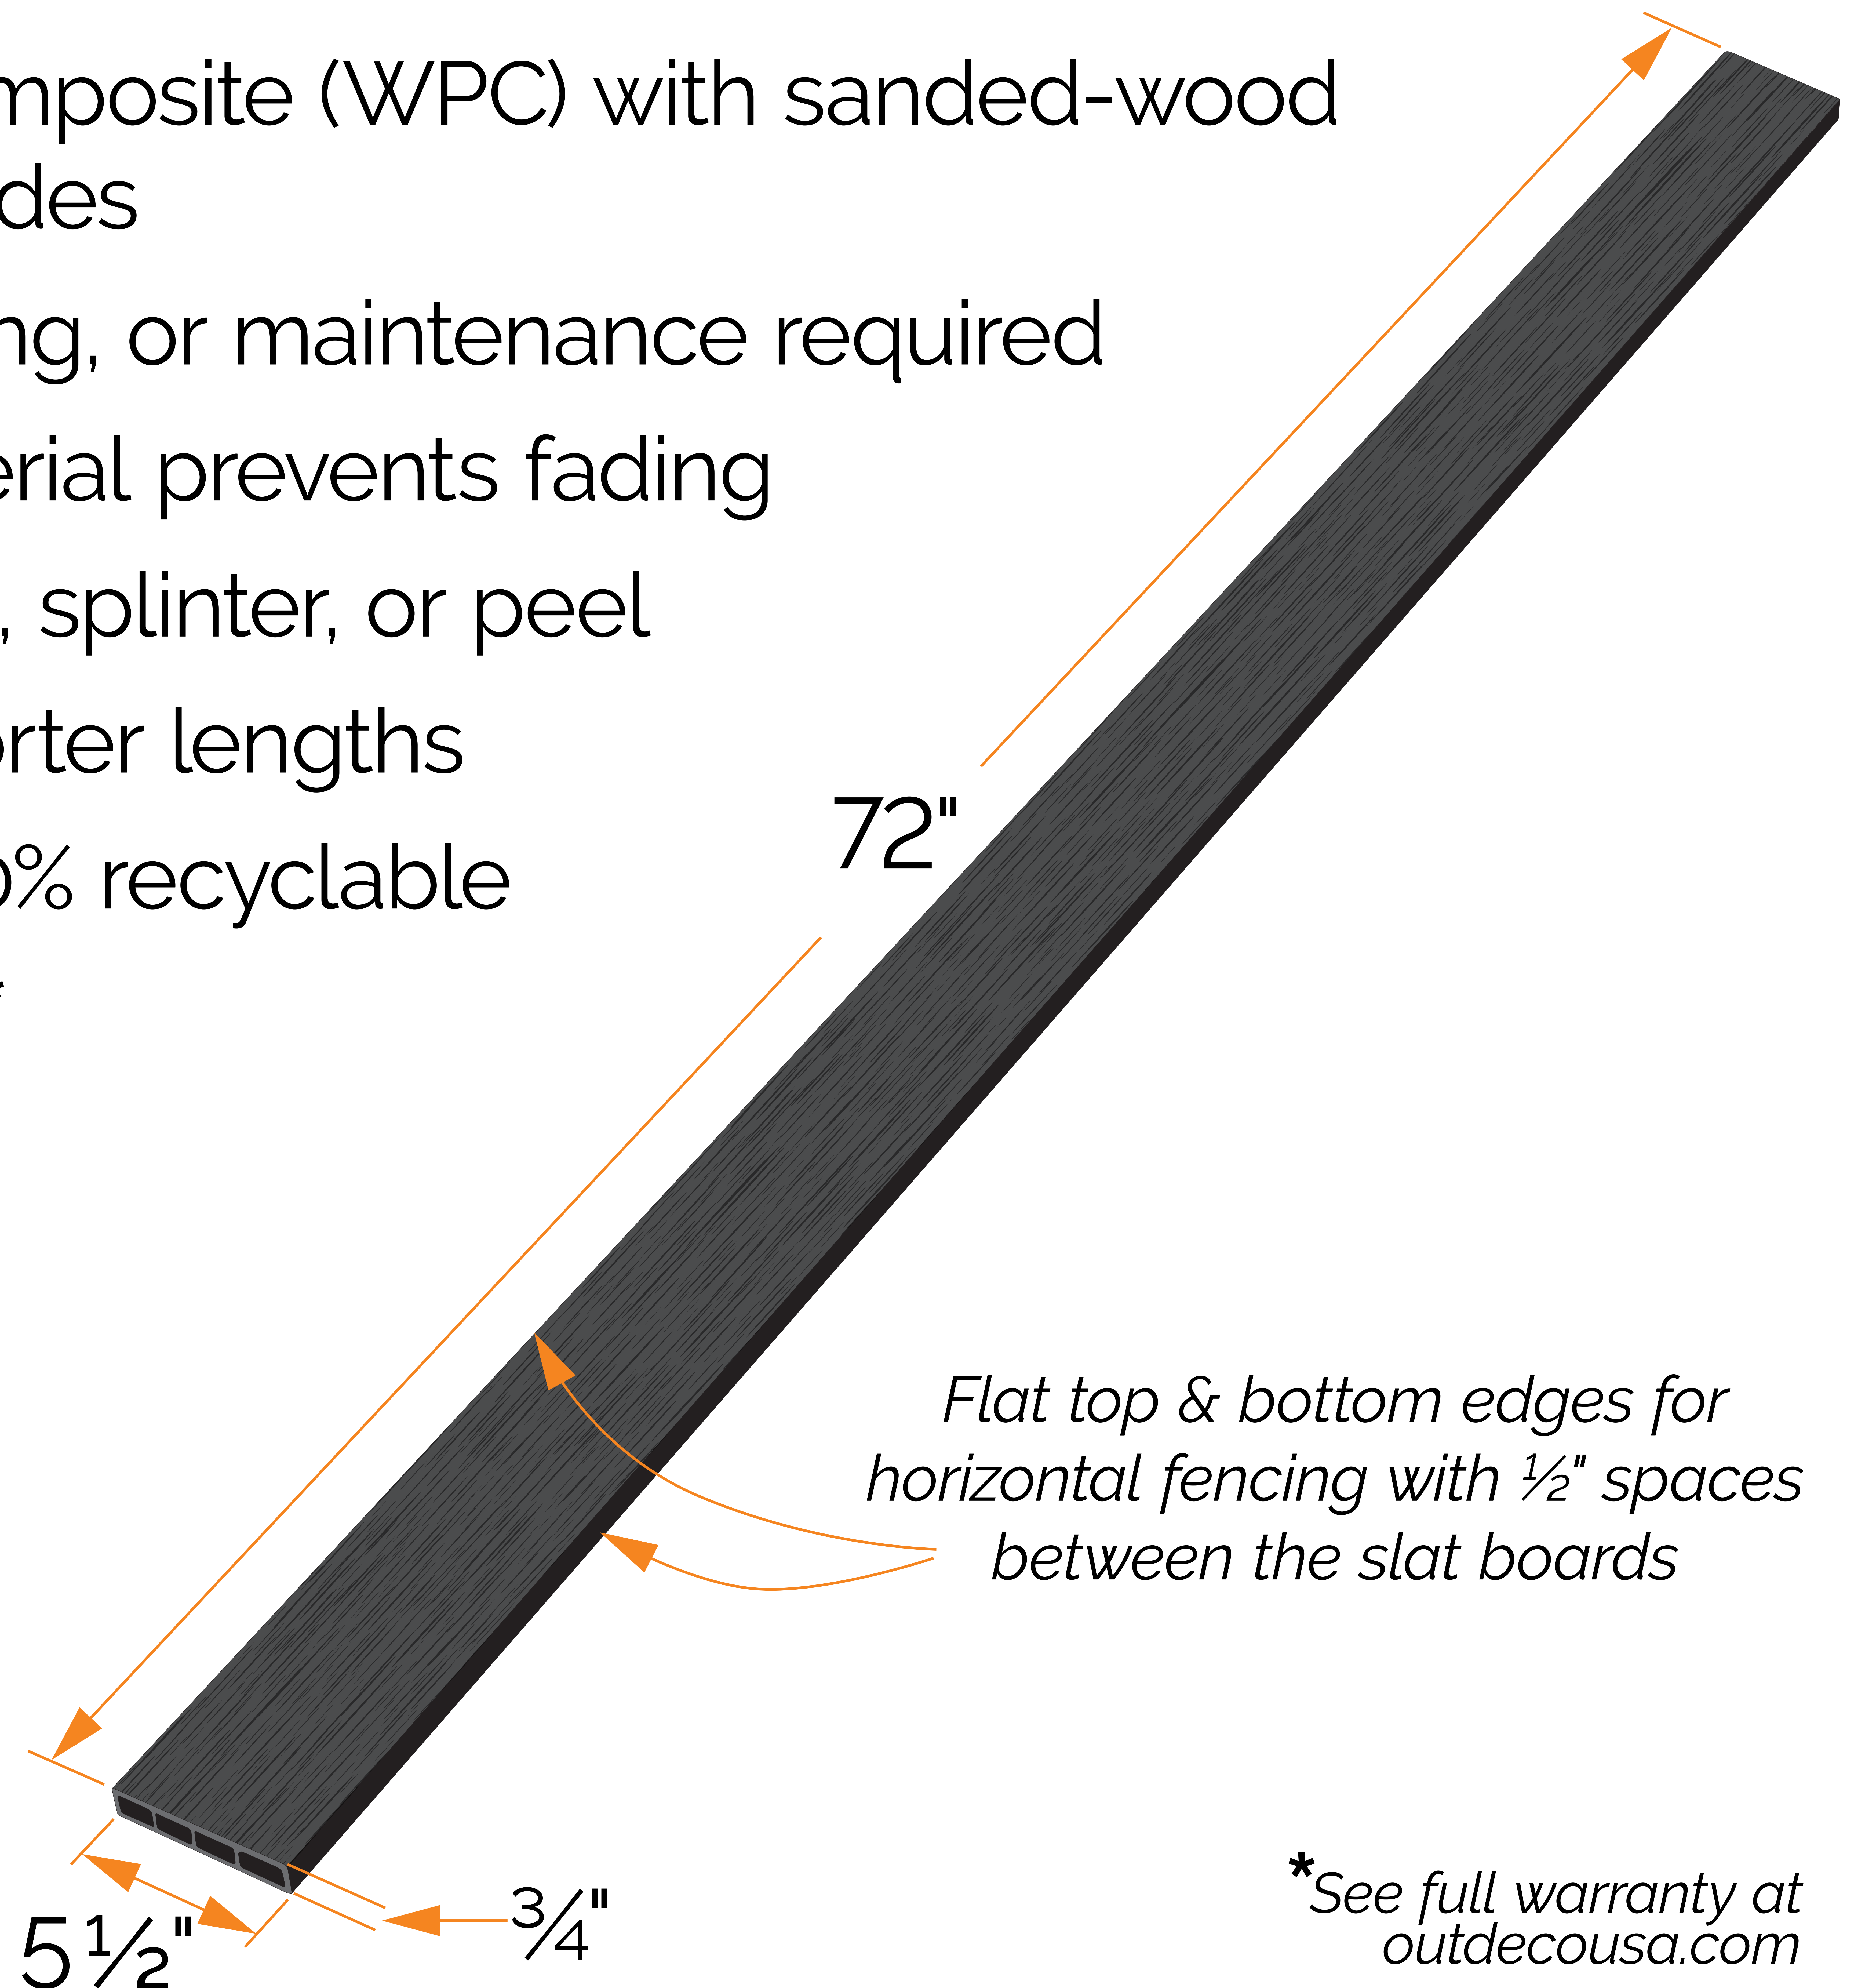


*See full warranty at outdecousa.com






Post & Frame Installation System

6-Foot Fence Configuration Examples

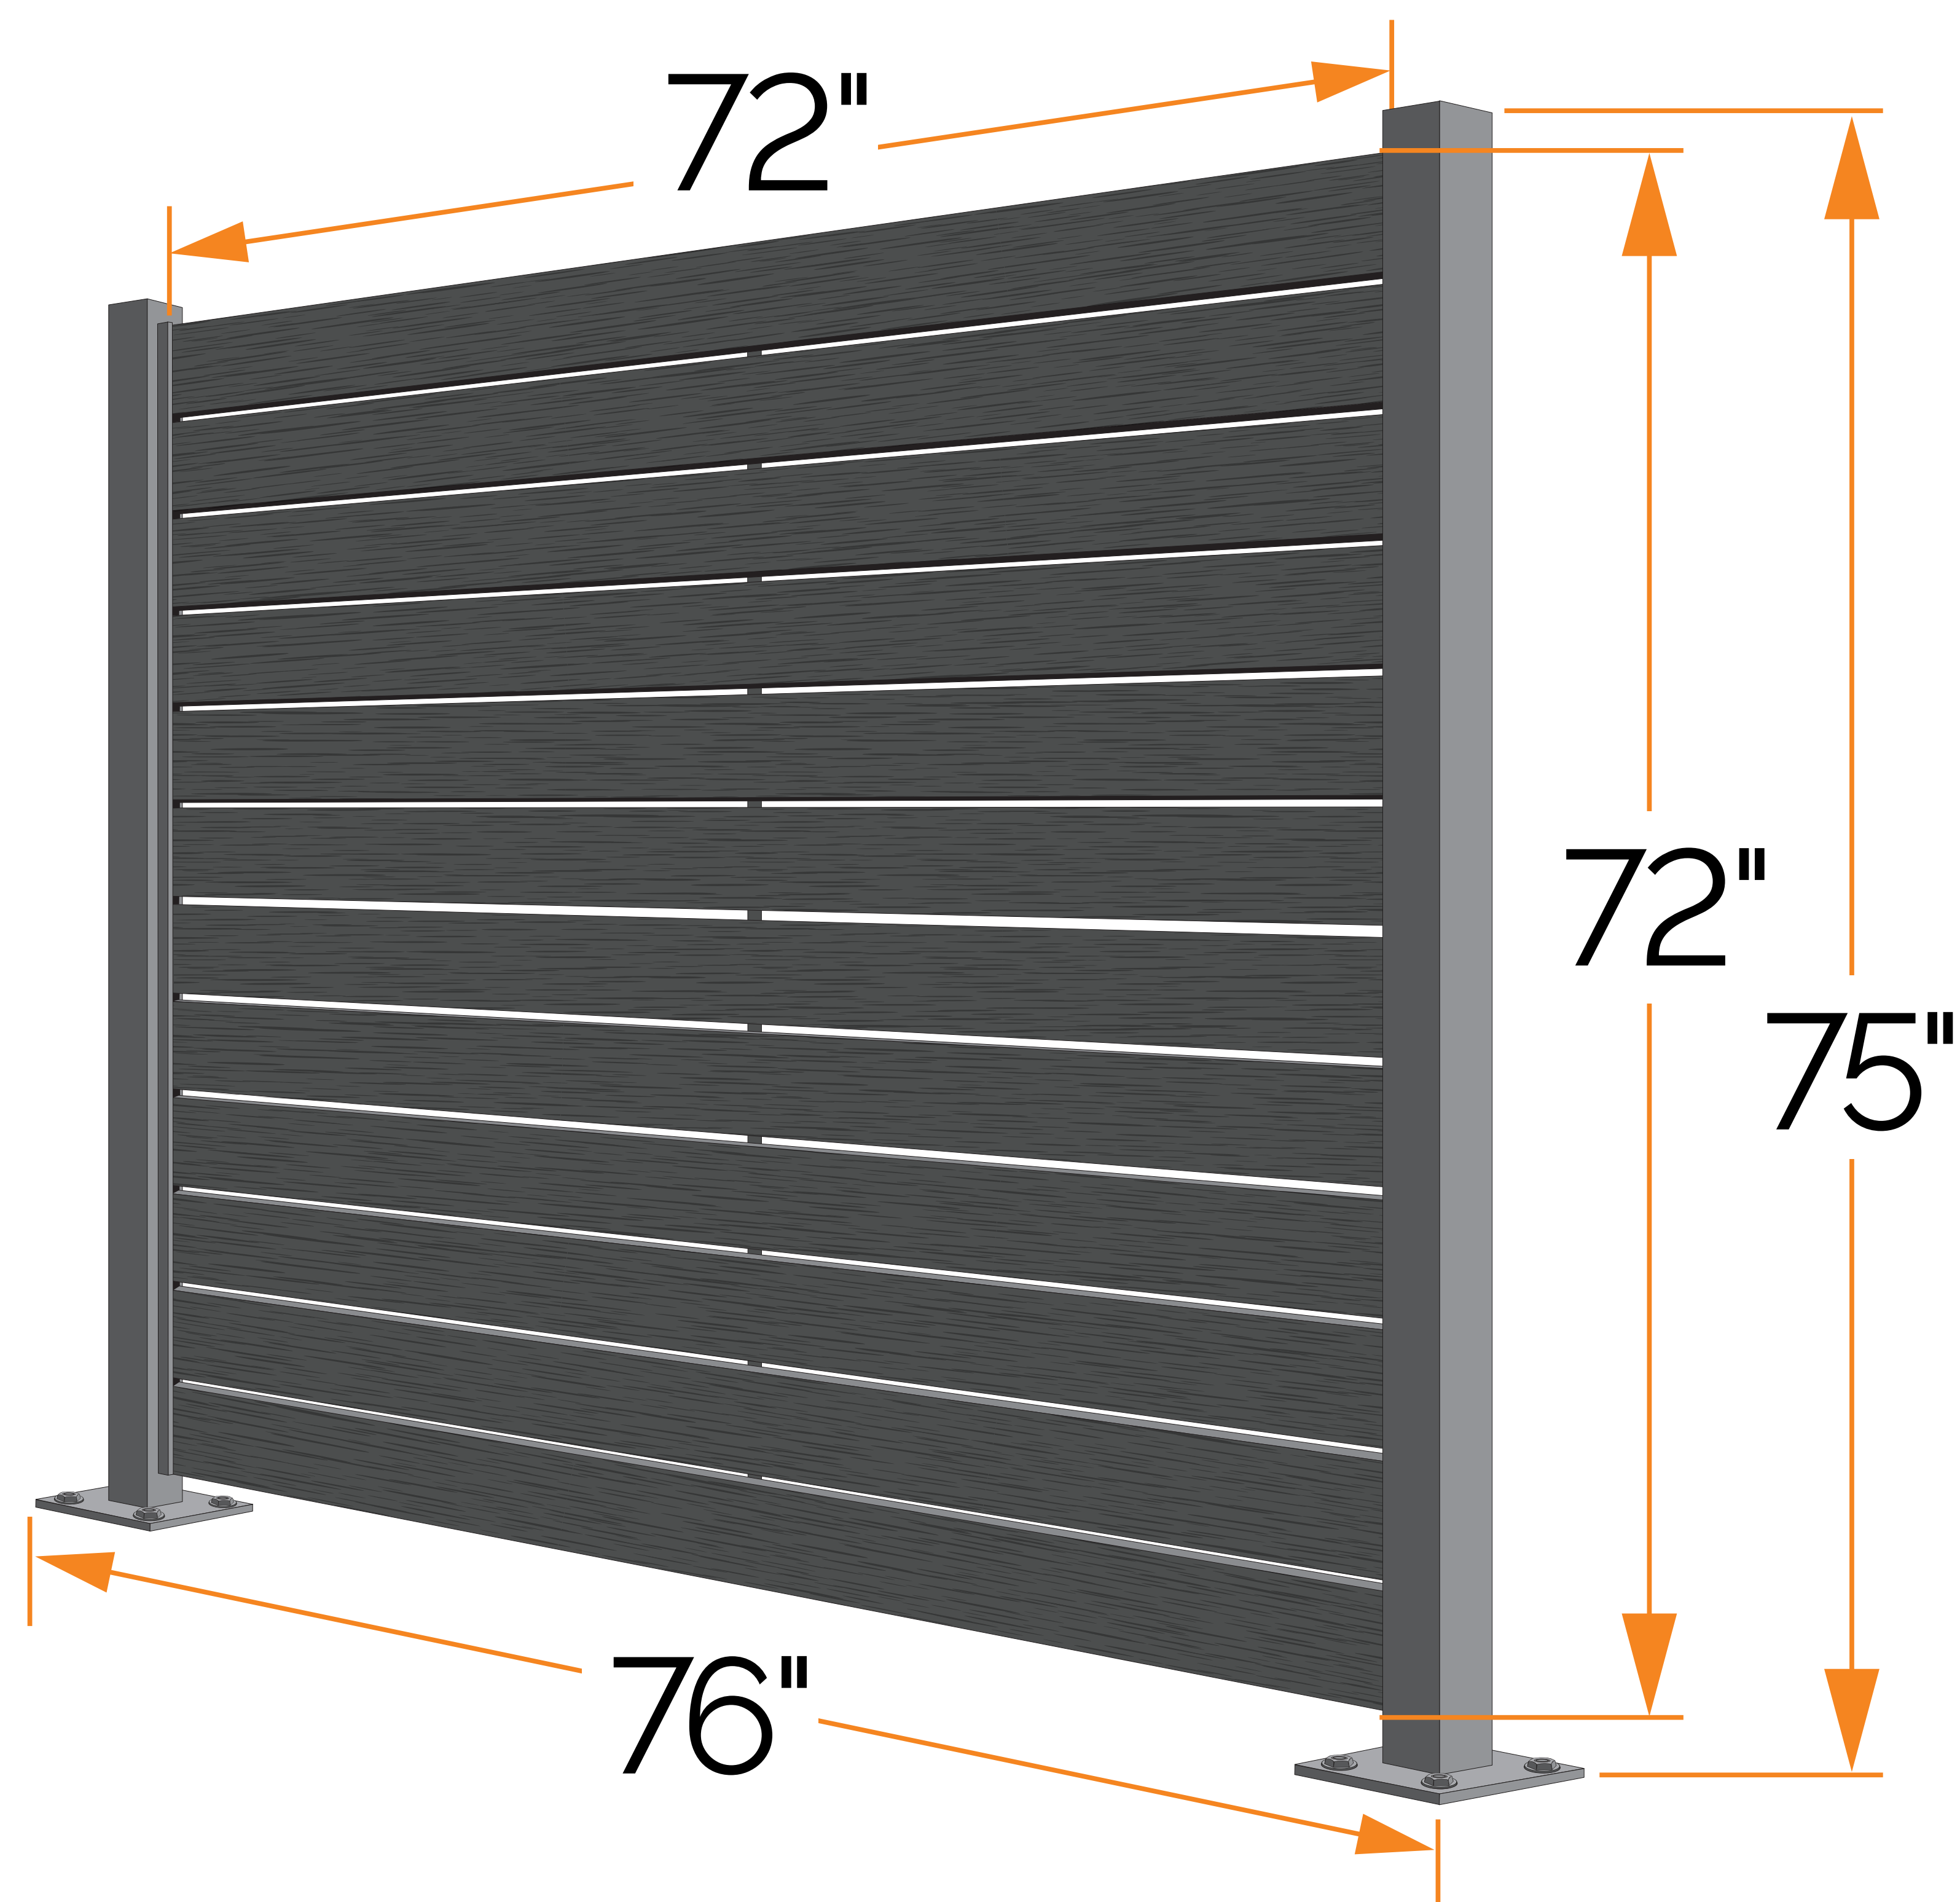


12 – 5½" Slats + 22 Spacers
1 – 72" Horizontal Fence Kit (ODSL6)
on 2 – 75" Posts (ODP75)

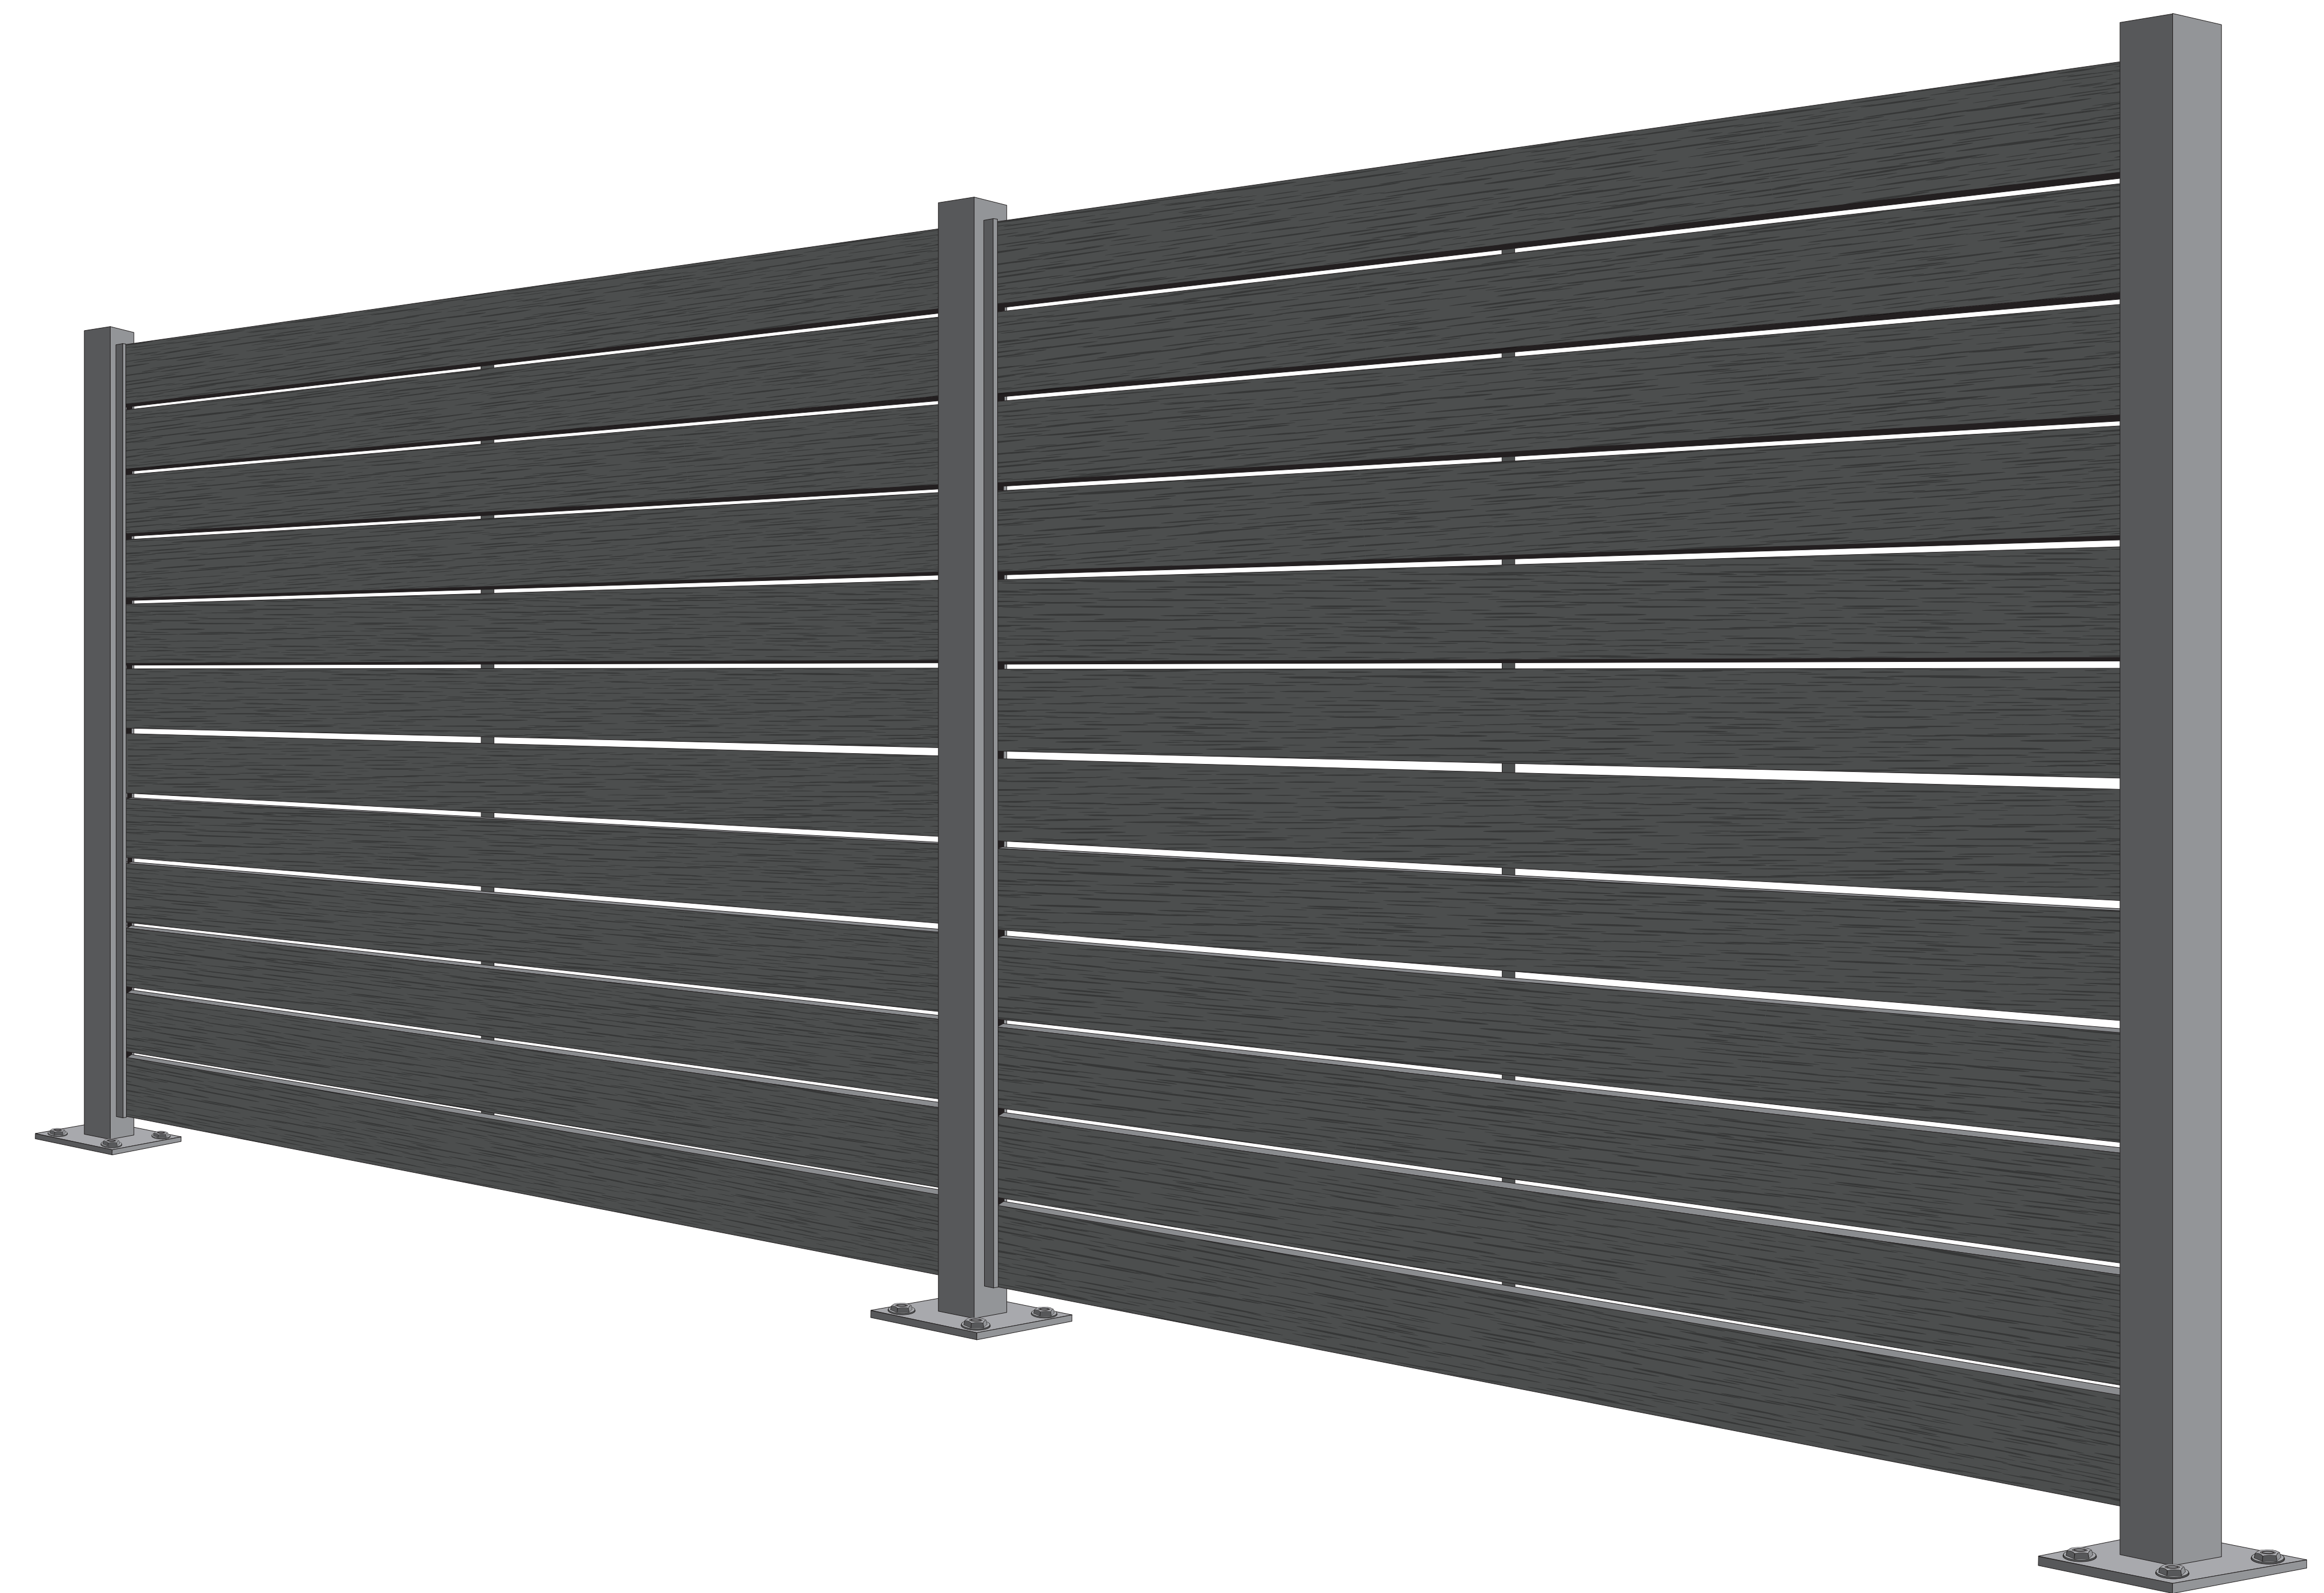

24 – 5½" Slats + 44 Spacers*
2 – 72" Horizontal Fence Kits (ODSL6)
on 3 – 75" Posts (ODP75)



**8 – 5½" Slats + 6 – 3½" Slats
+ 26 Spacers***
1 – 72" Horizontal Fence Kit (ODSL6)
on 2 – 75" Posts (ODP75)

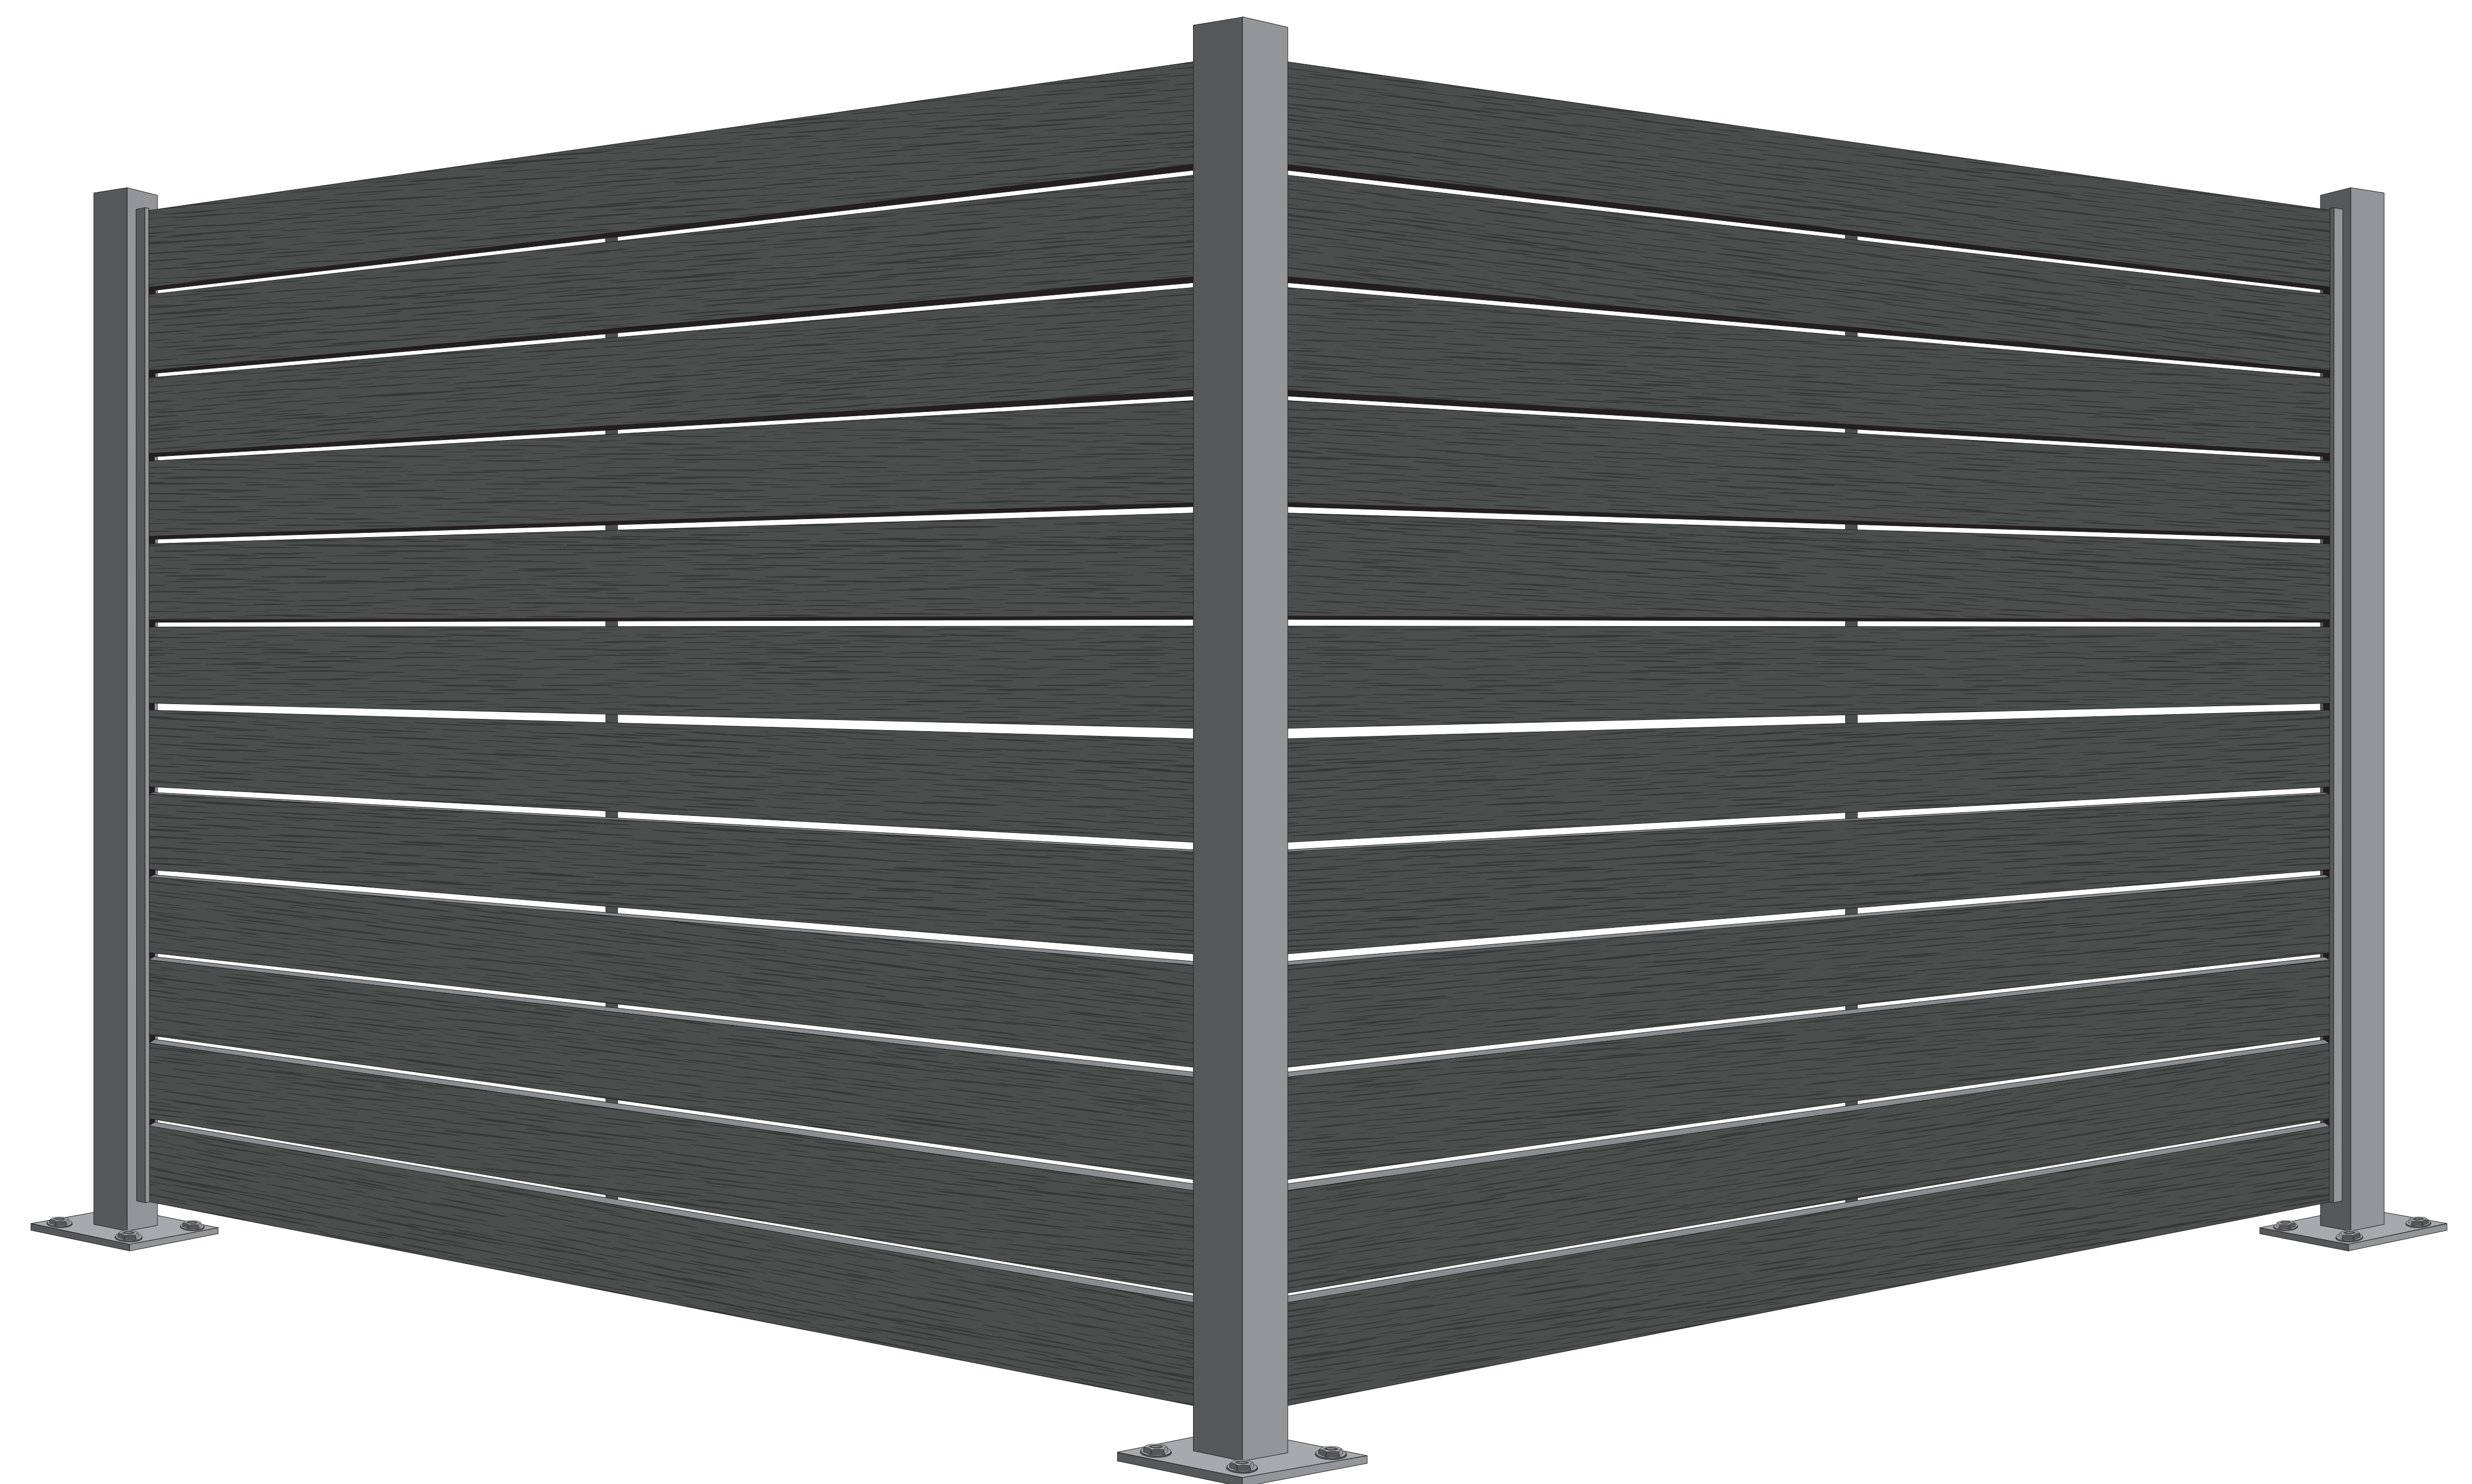

24 – 5½" Slats + 44 Spacers*
2 – 72" Horizontal Fence Kits (ODSL6)
on 3 – 75" Posts (ODP75)

* Configuration requires additional Slat Spacers.
72" Kits contain 24 Spacers. 24-packs sold separately.



Post & Frame Installation System

How It Works


Basic Installation Steps

5½" WPC Fence Slats on 72" Horizontal Fence Kits* and 75" Posts*

1. Bolt down 1st Post.
2. Loosely screw Slat Channels into pre-drilled Posts. Adjust Channels to Slat thickness and tighten screws.
3. Slide first Slat into Channels. Secure with Slat Locking Screws. Add a Slat Spacer.
4. Bolt down 2nd Post. Add remaining Slats and Spacers.
5. Secure with Slat Locking Screws and Brace Strap.


*See detailed instructions included with
OUTDECO Horizontal (Slat) Fence Kits.**

**Sold separately. All hardware is
included with Slat Fence Kits and Posts.
Illustrations not to scale.*

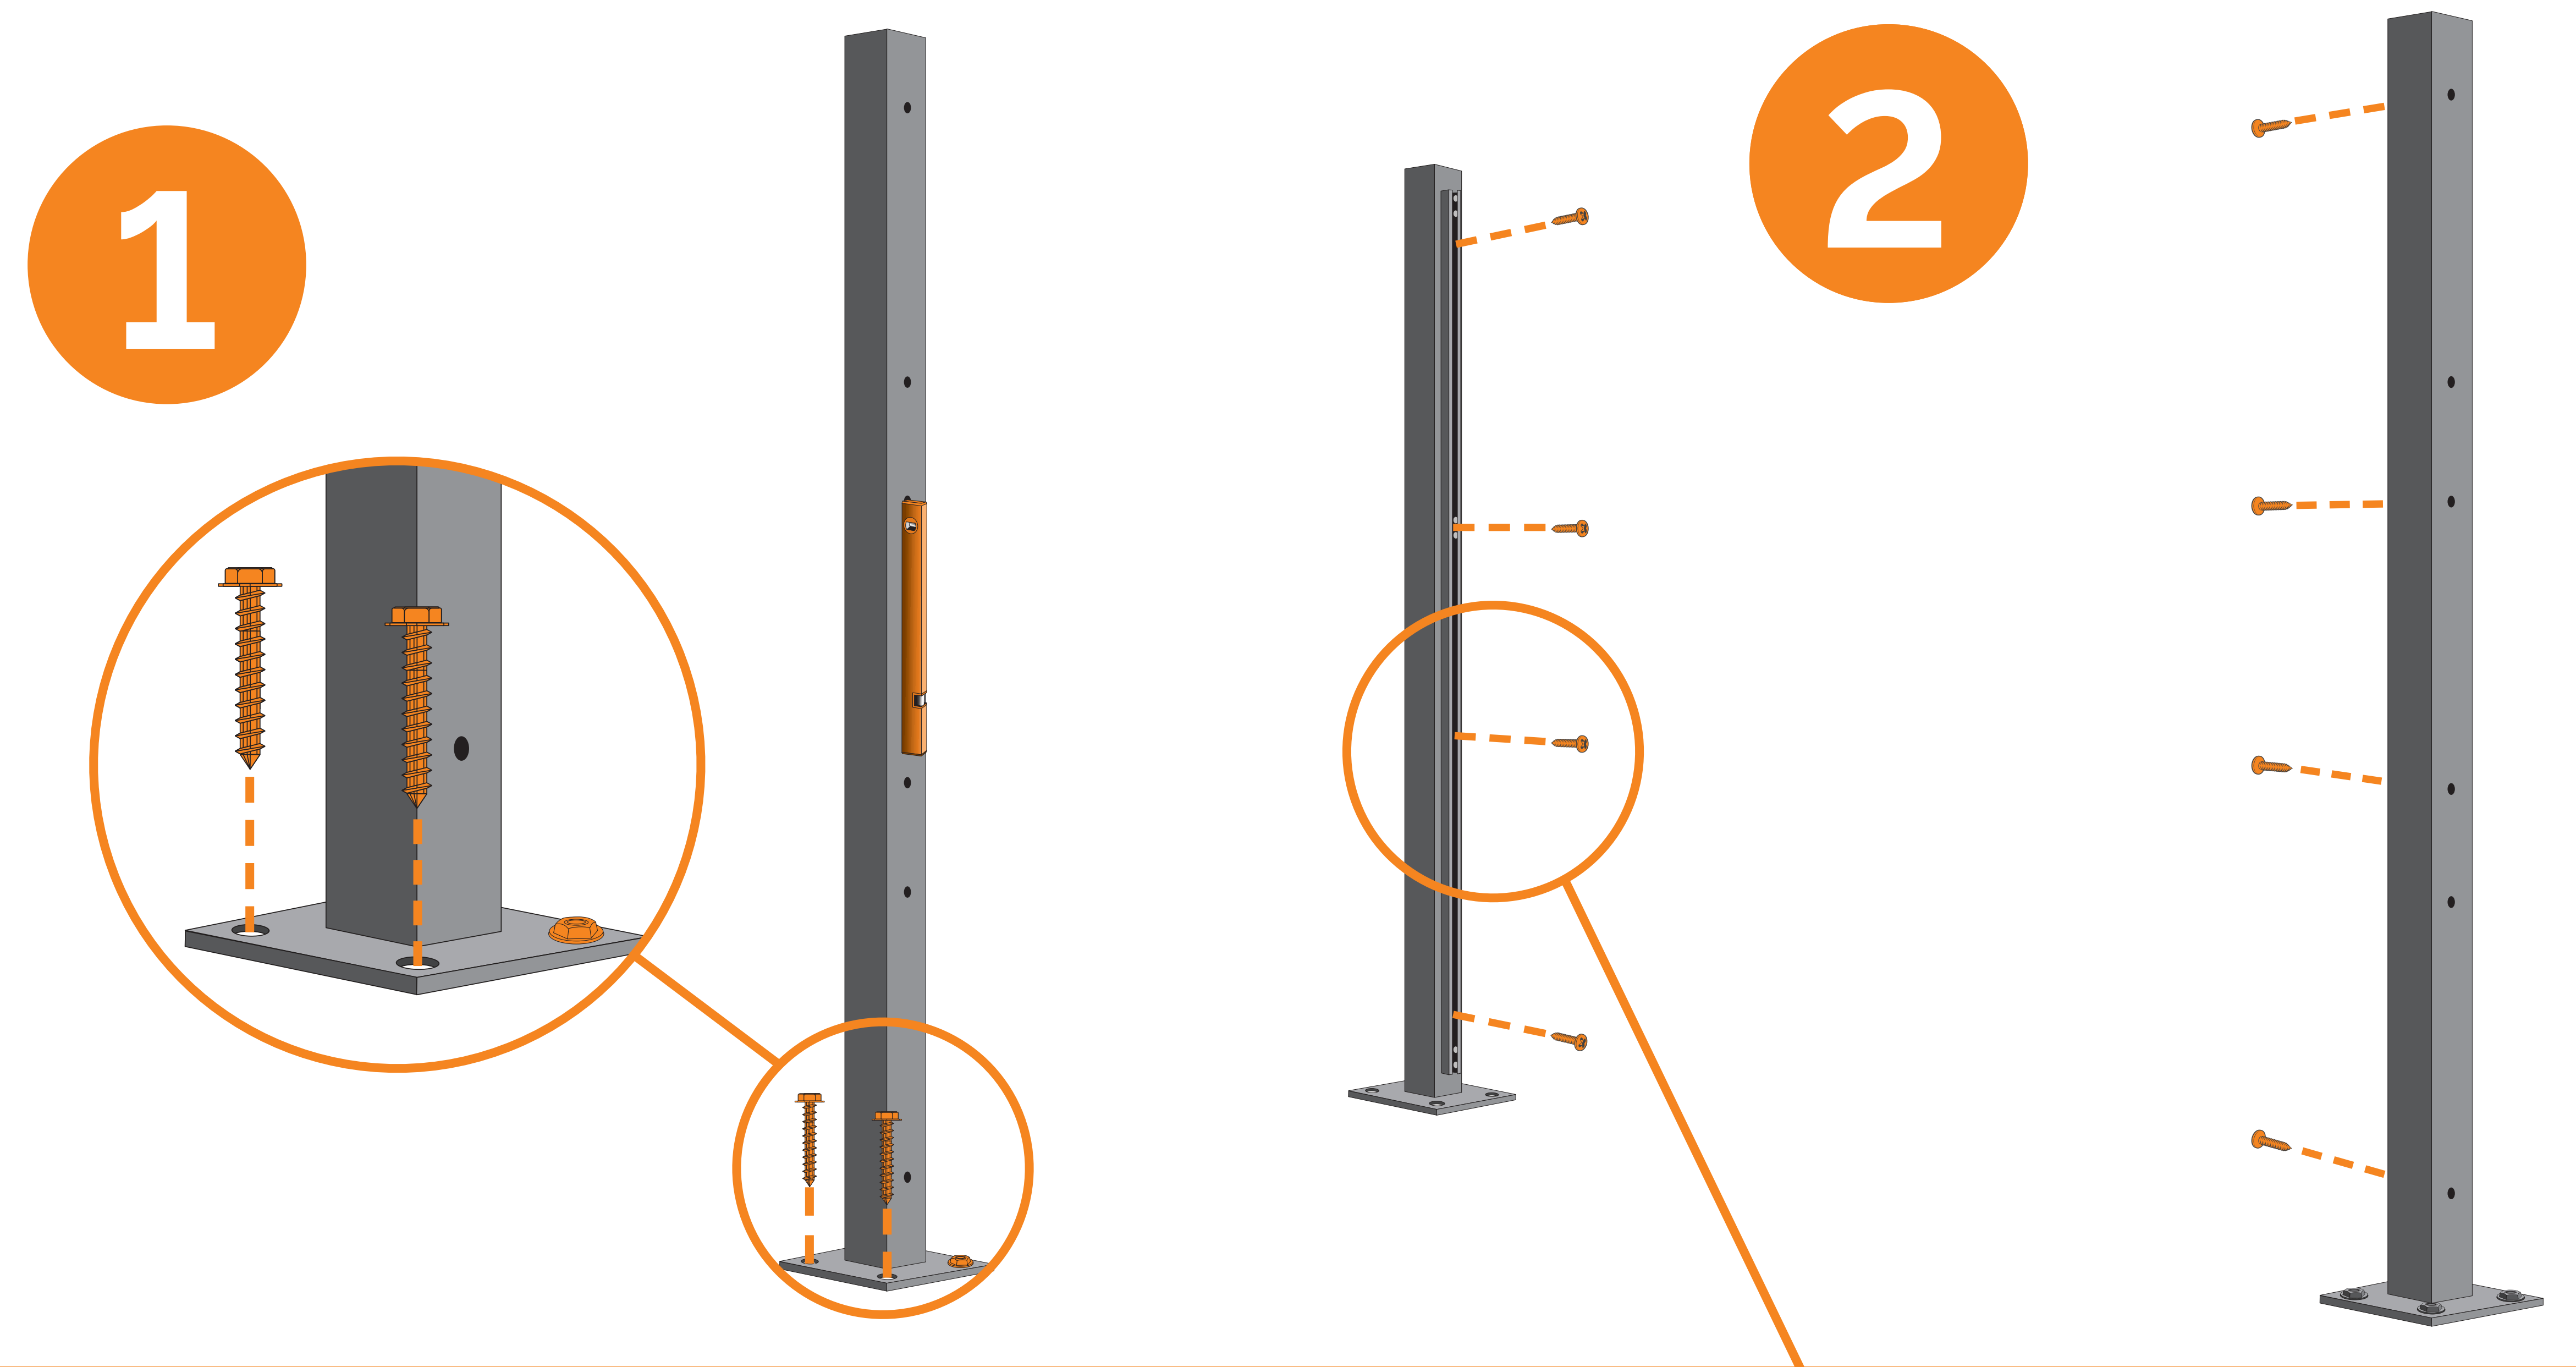


Channels adjust to fit Slats ½" to 1" thick.




Position
Channels

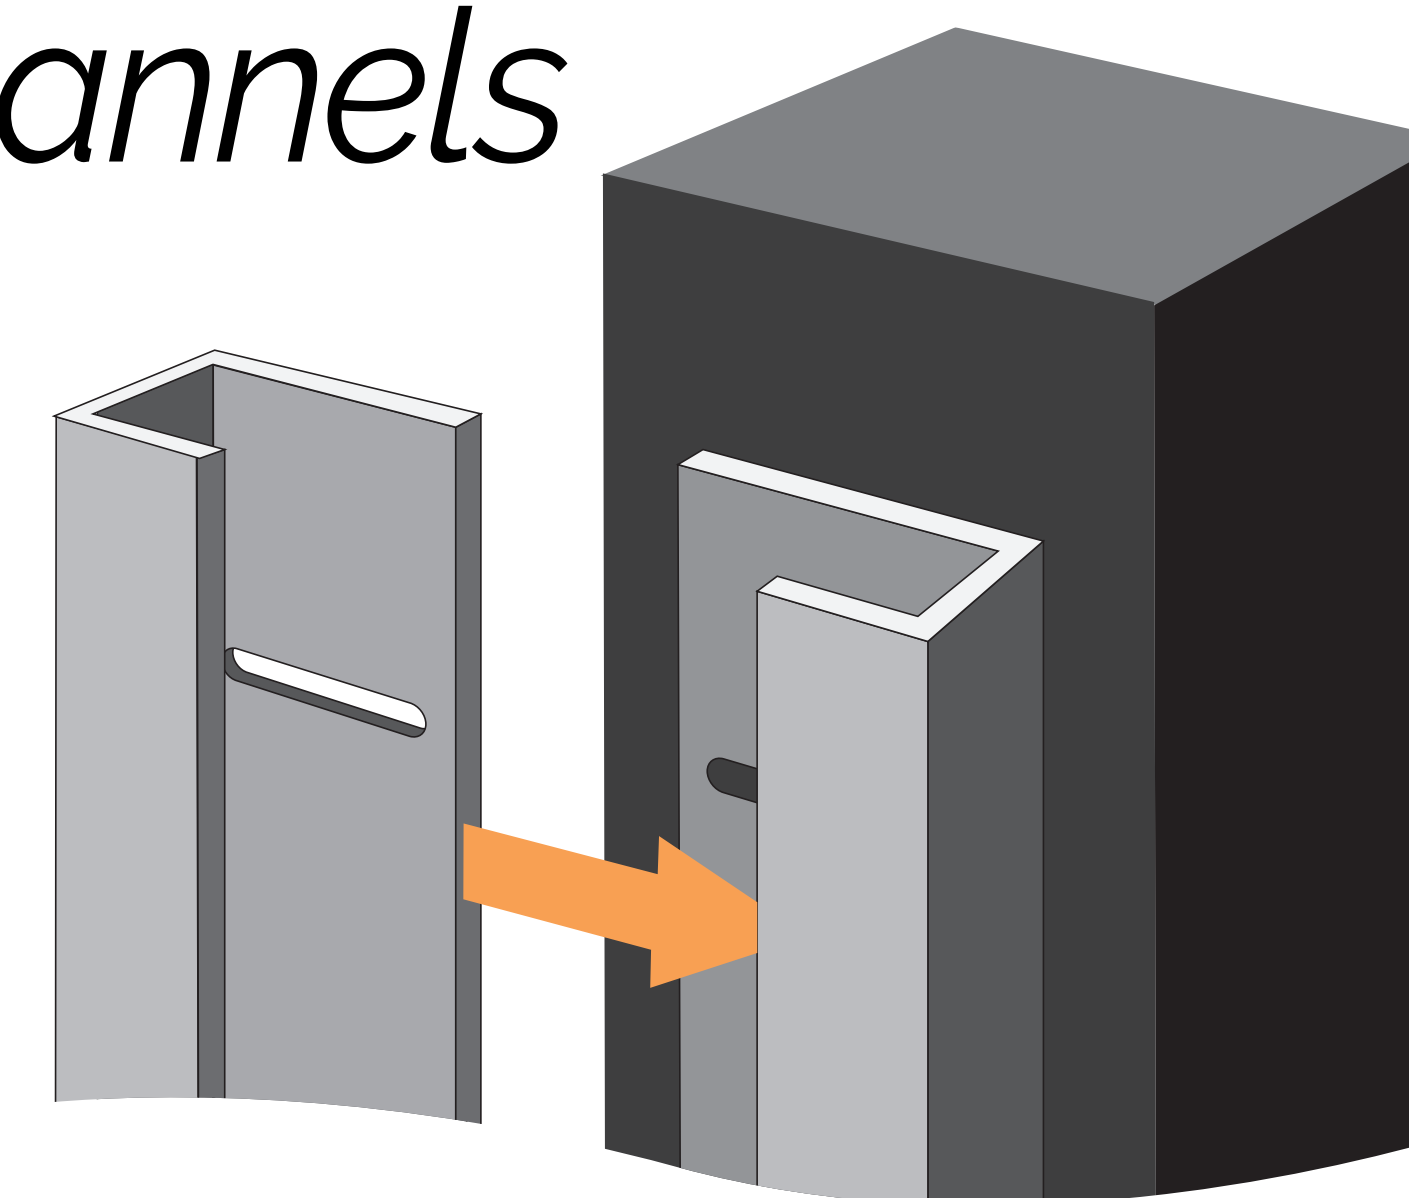

Fit Channels
to Slat

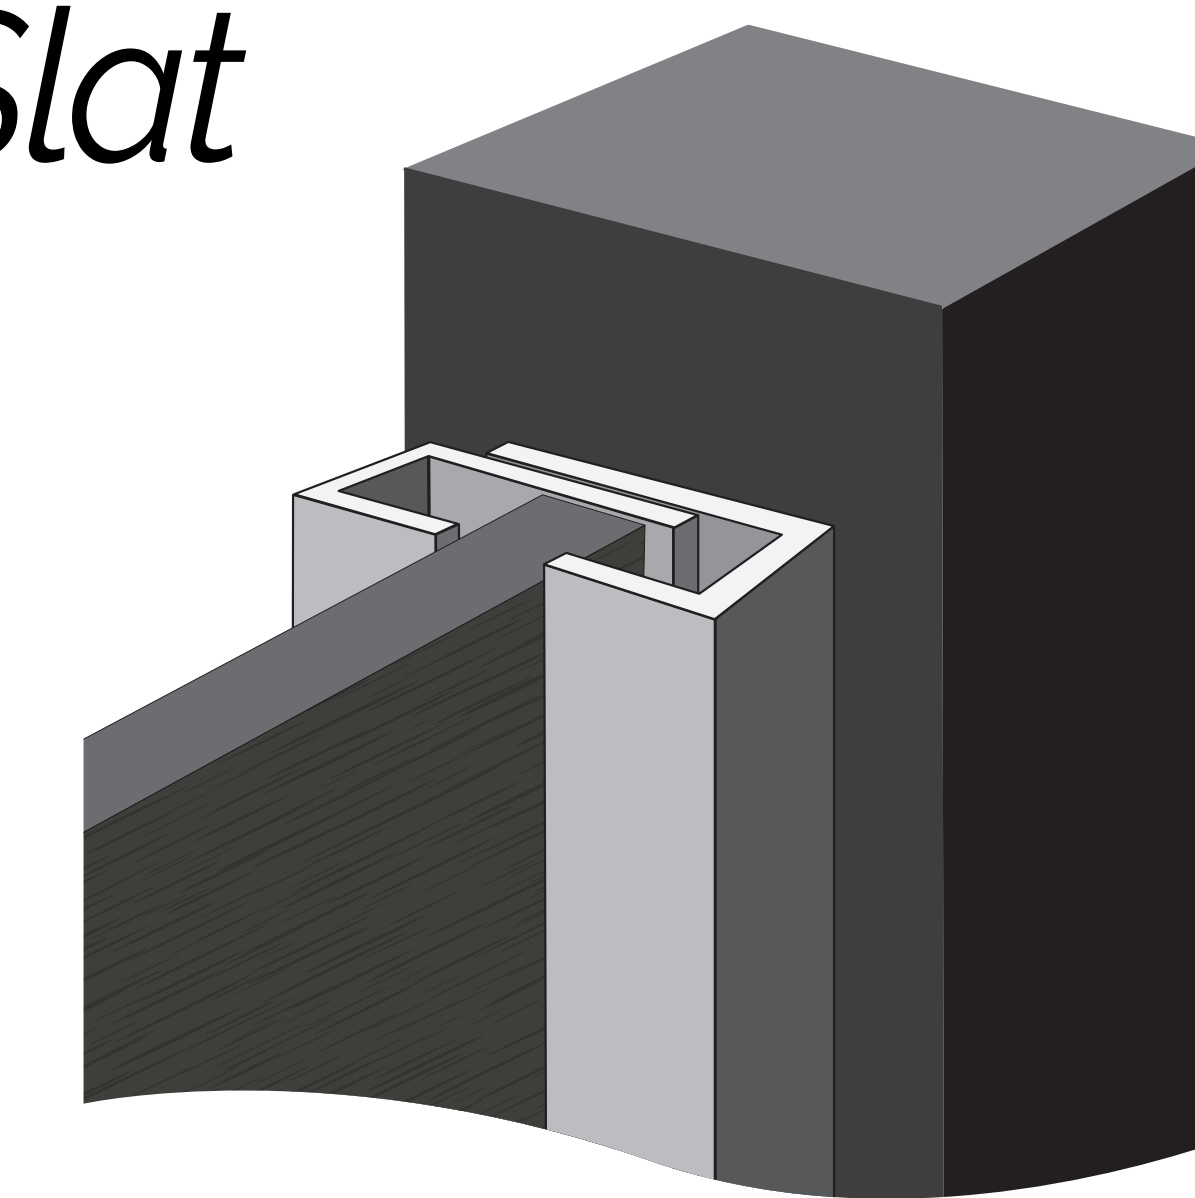

Screw in Channels

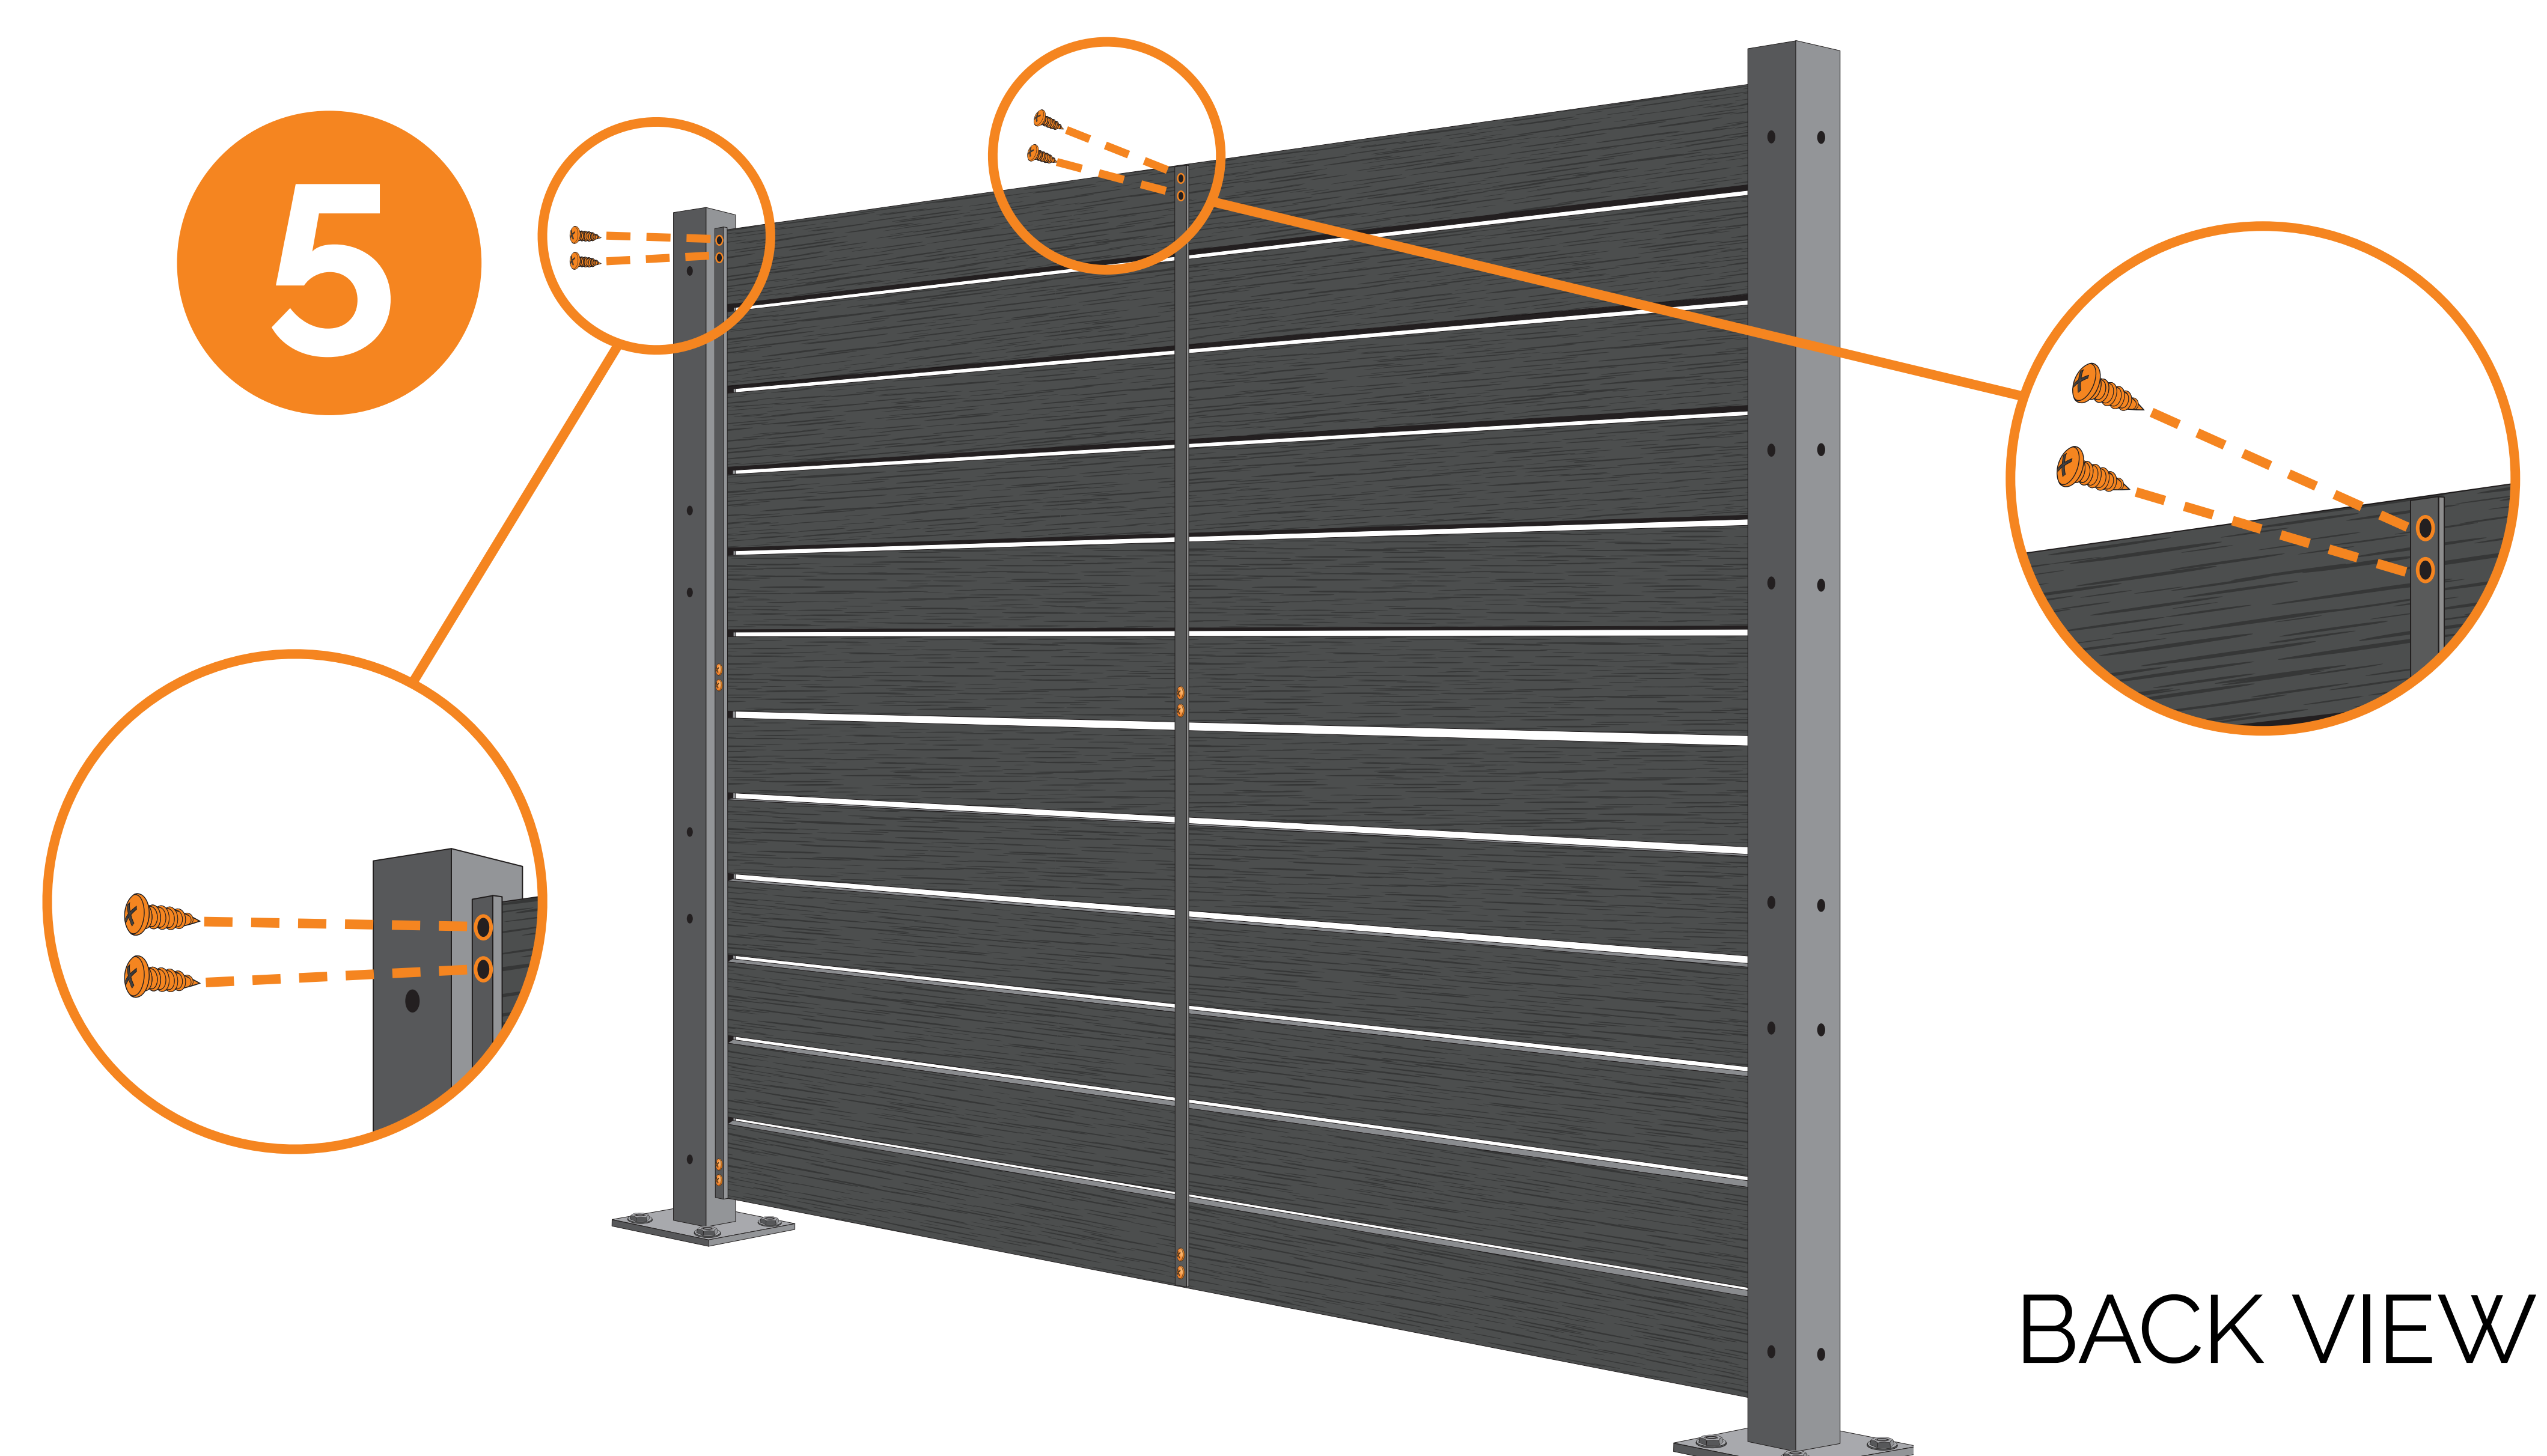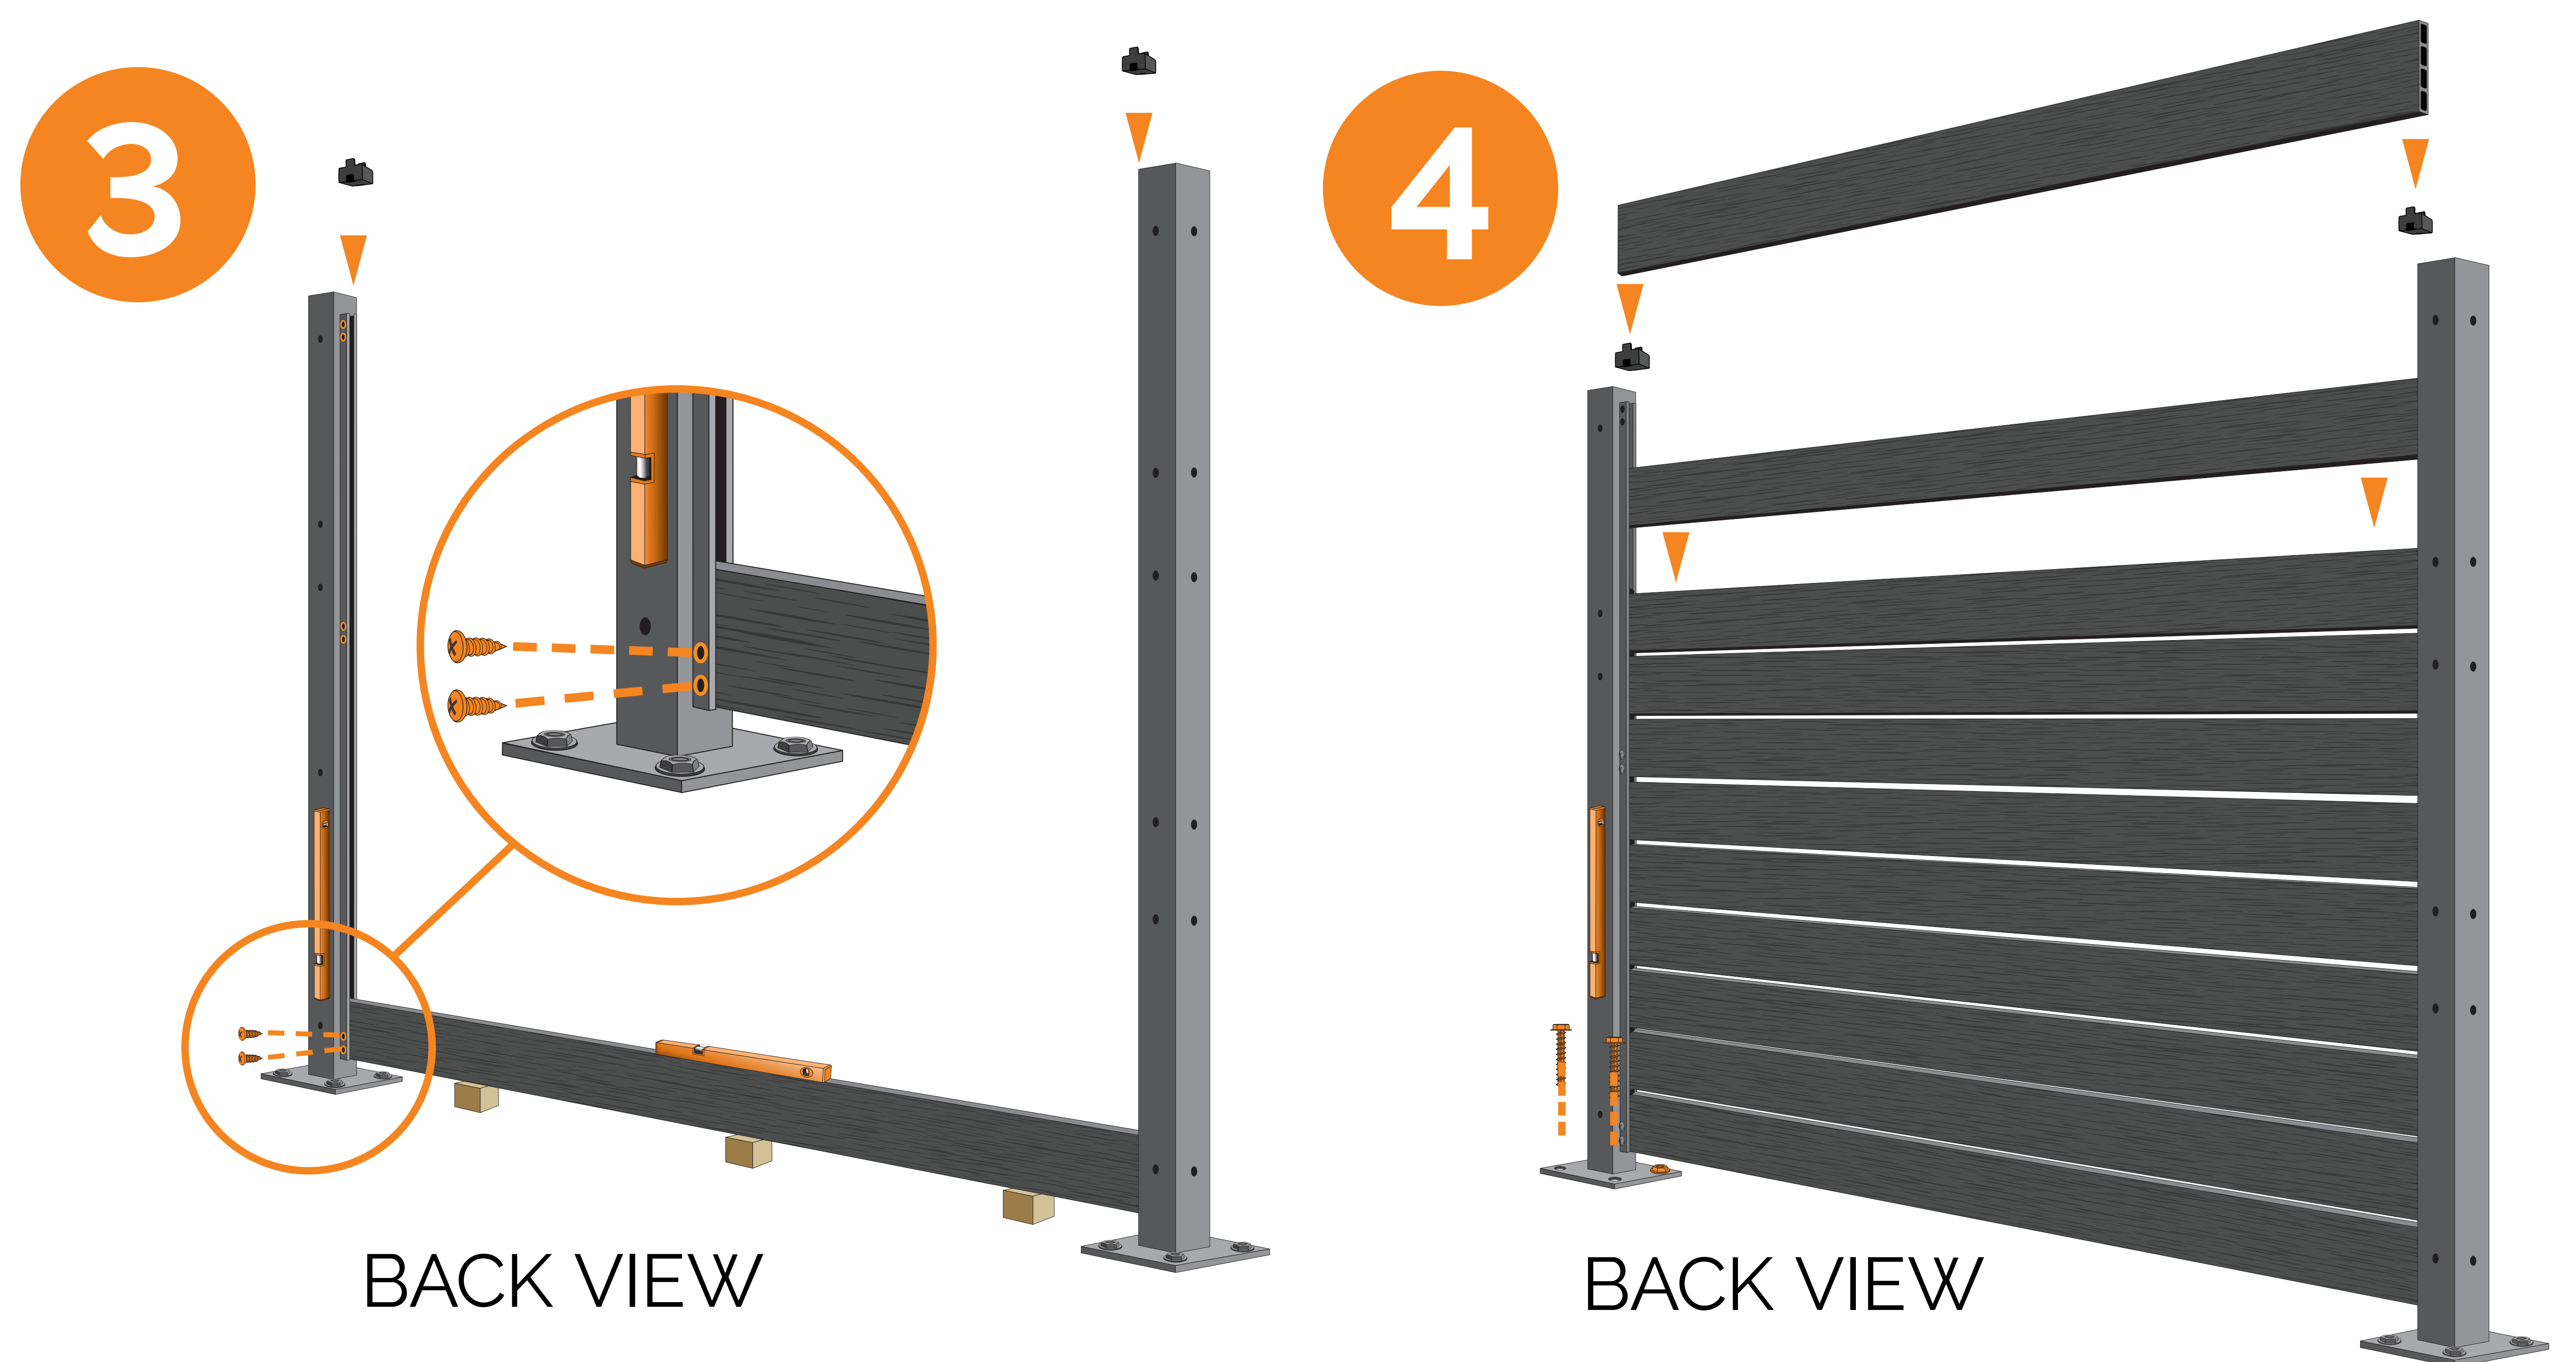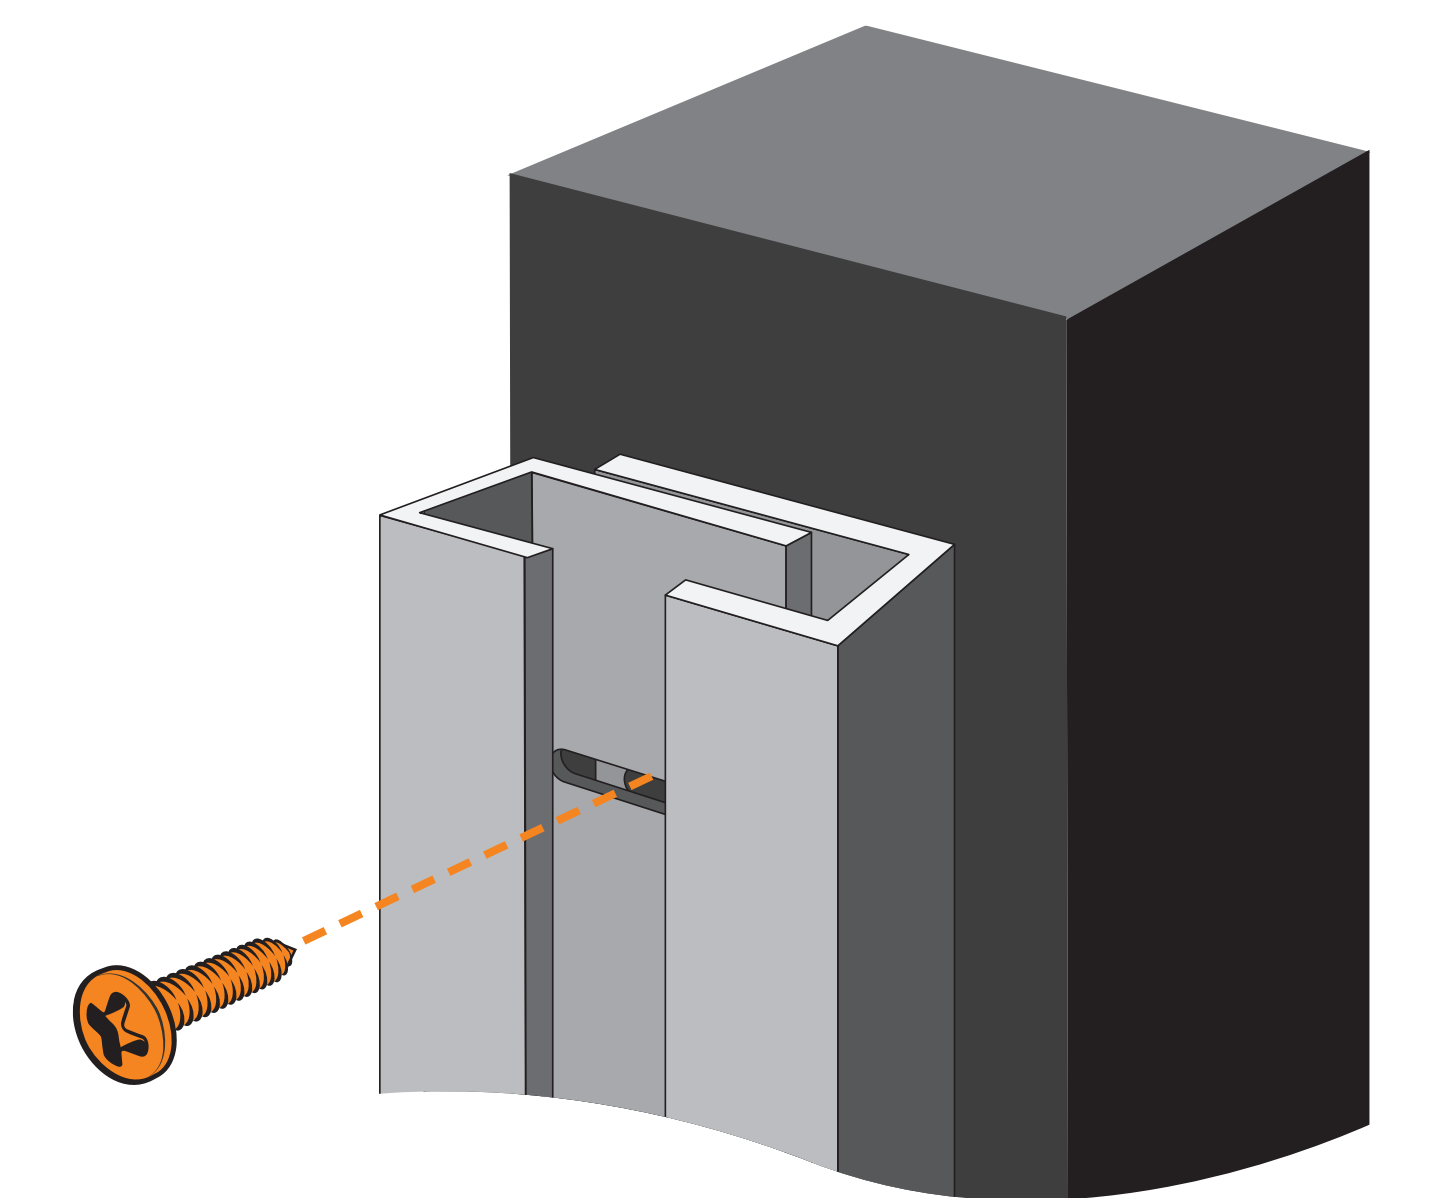


12 – 5½" Slats + 22 Slat Spacers






Post & Frame Installation System


4-Foot Fence Configuration Examples

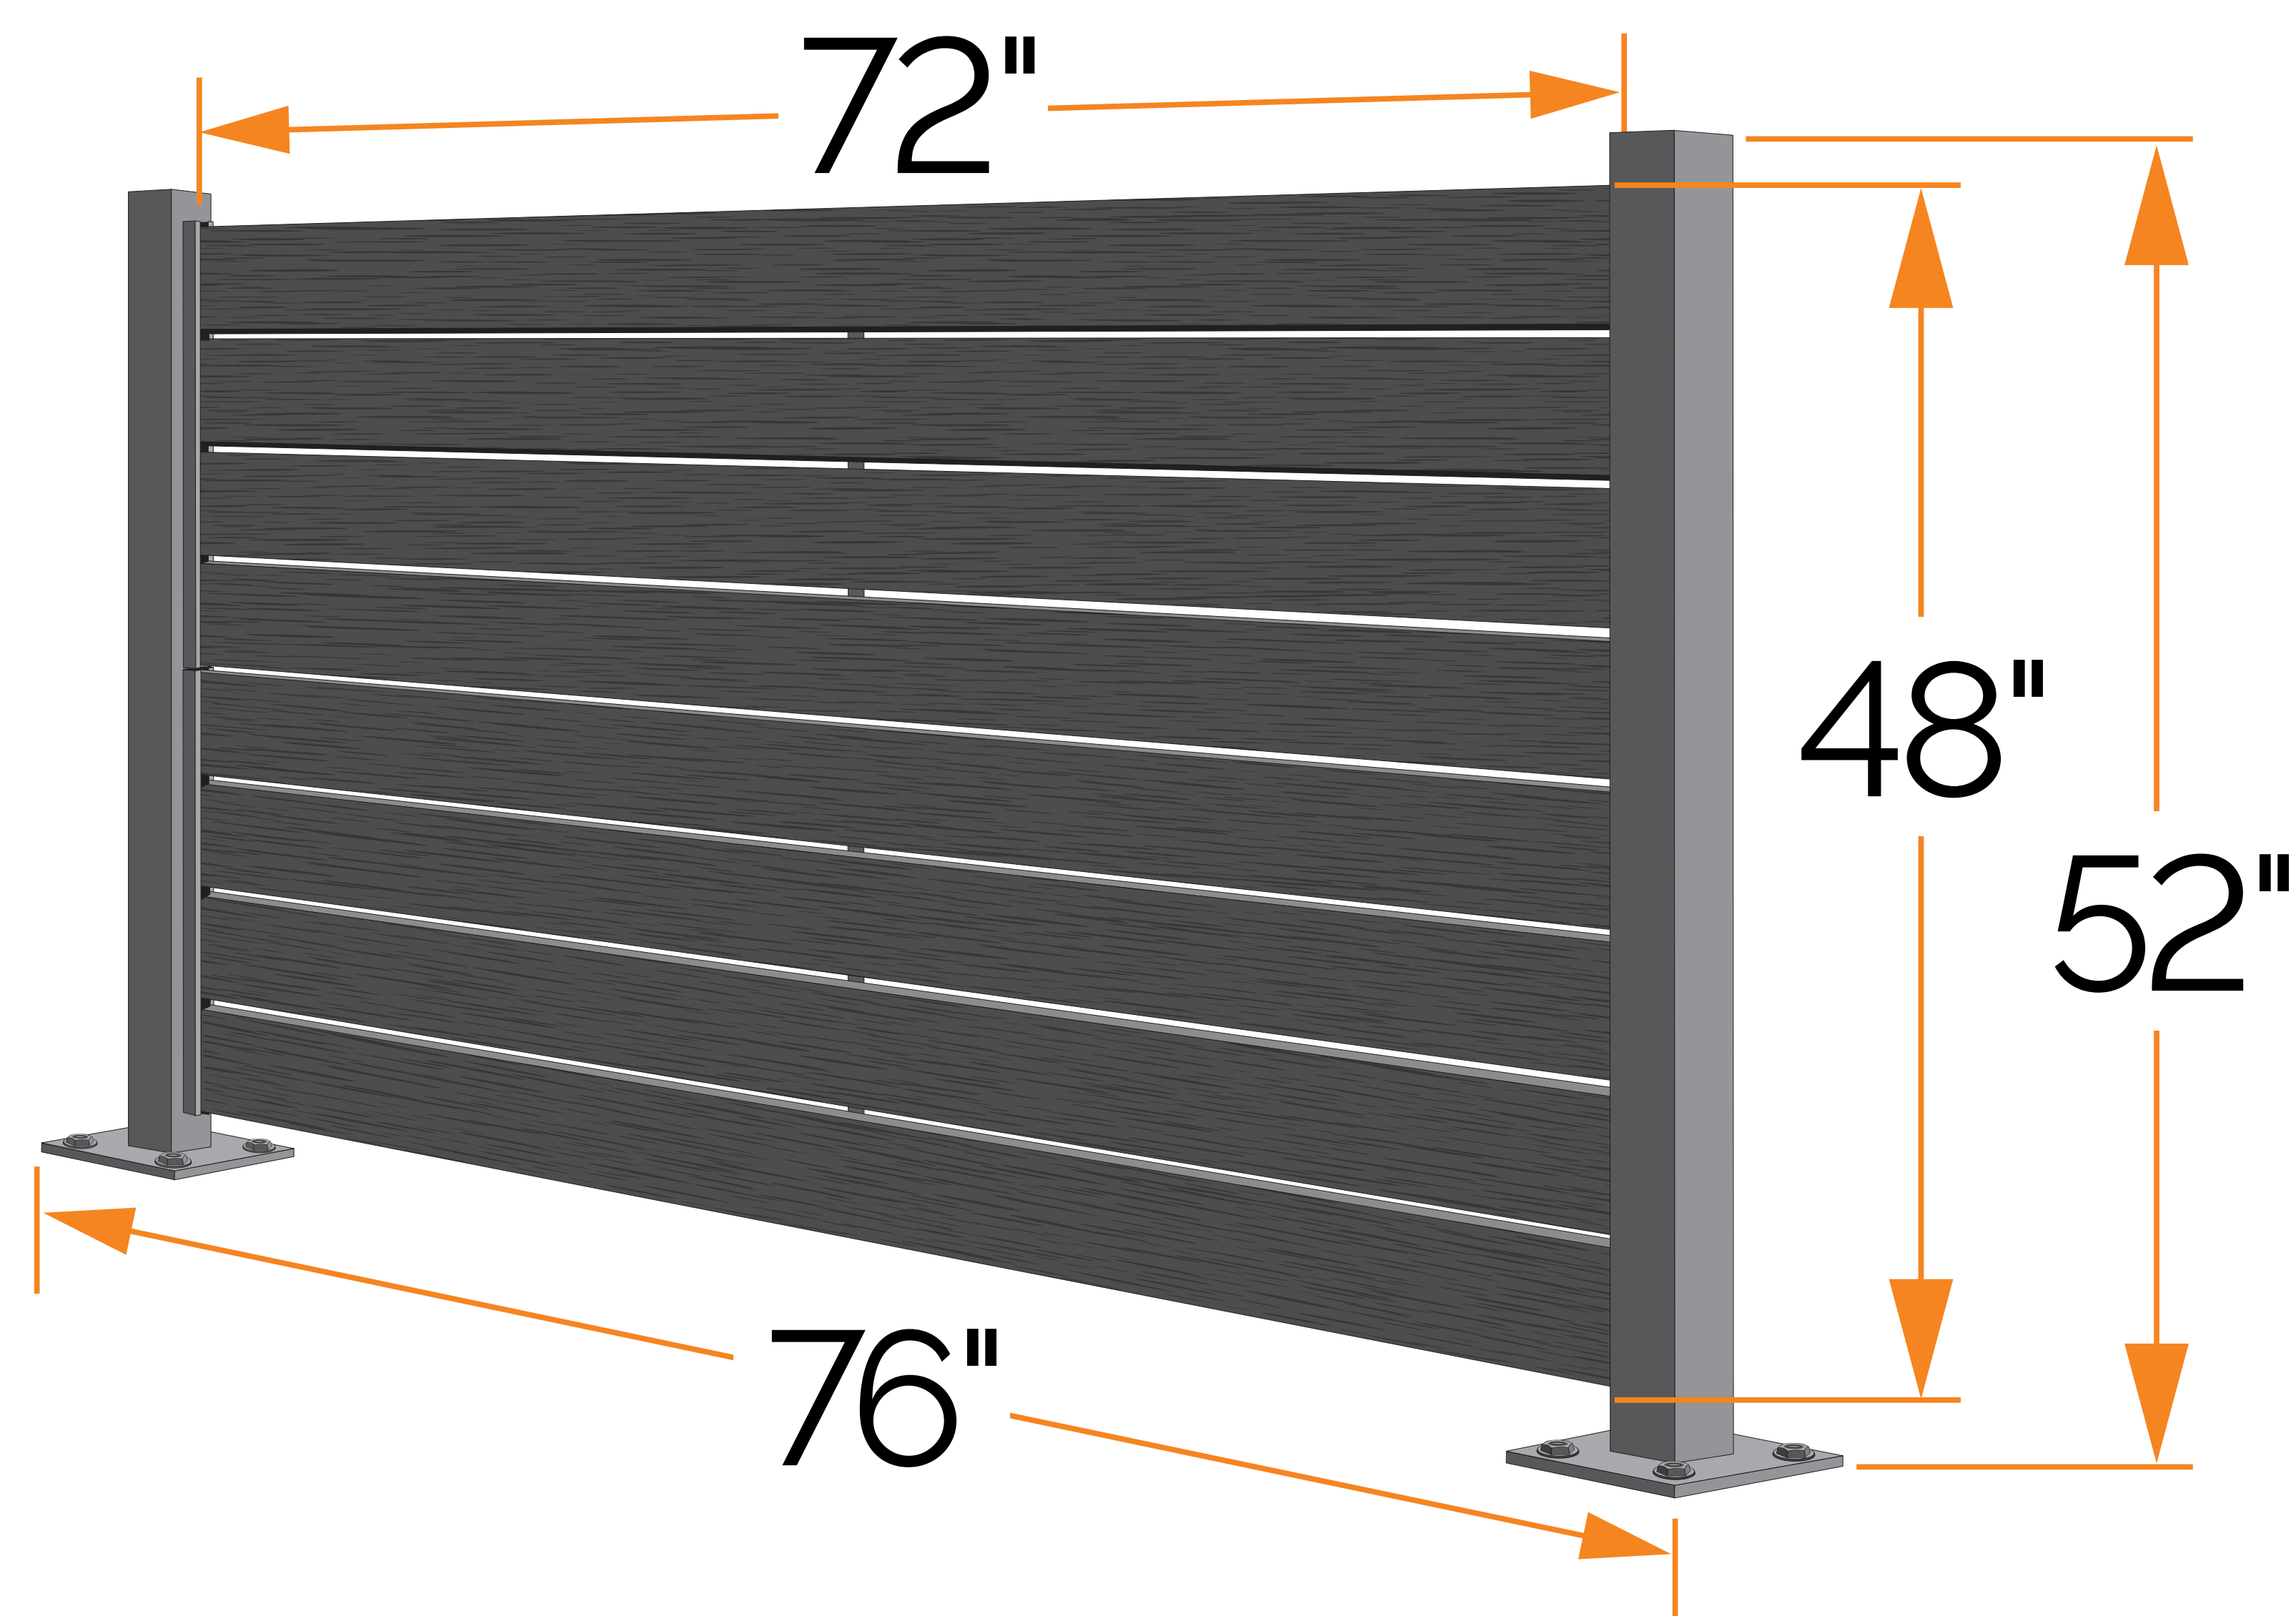


8 – 5½" Slats + 14 Spacers
2 – 24" Horizontal Fence Kits (ODSL2)
on **2** – 52" Posts (ODP55)

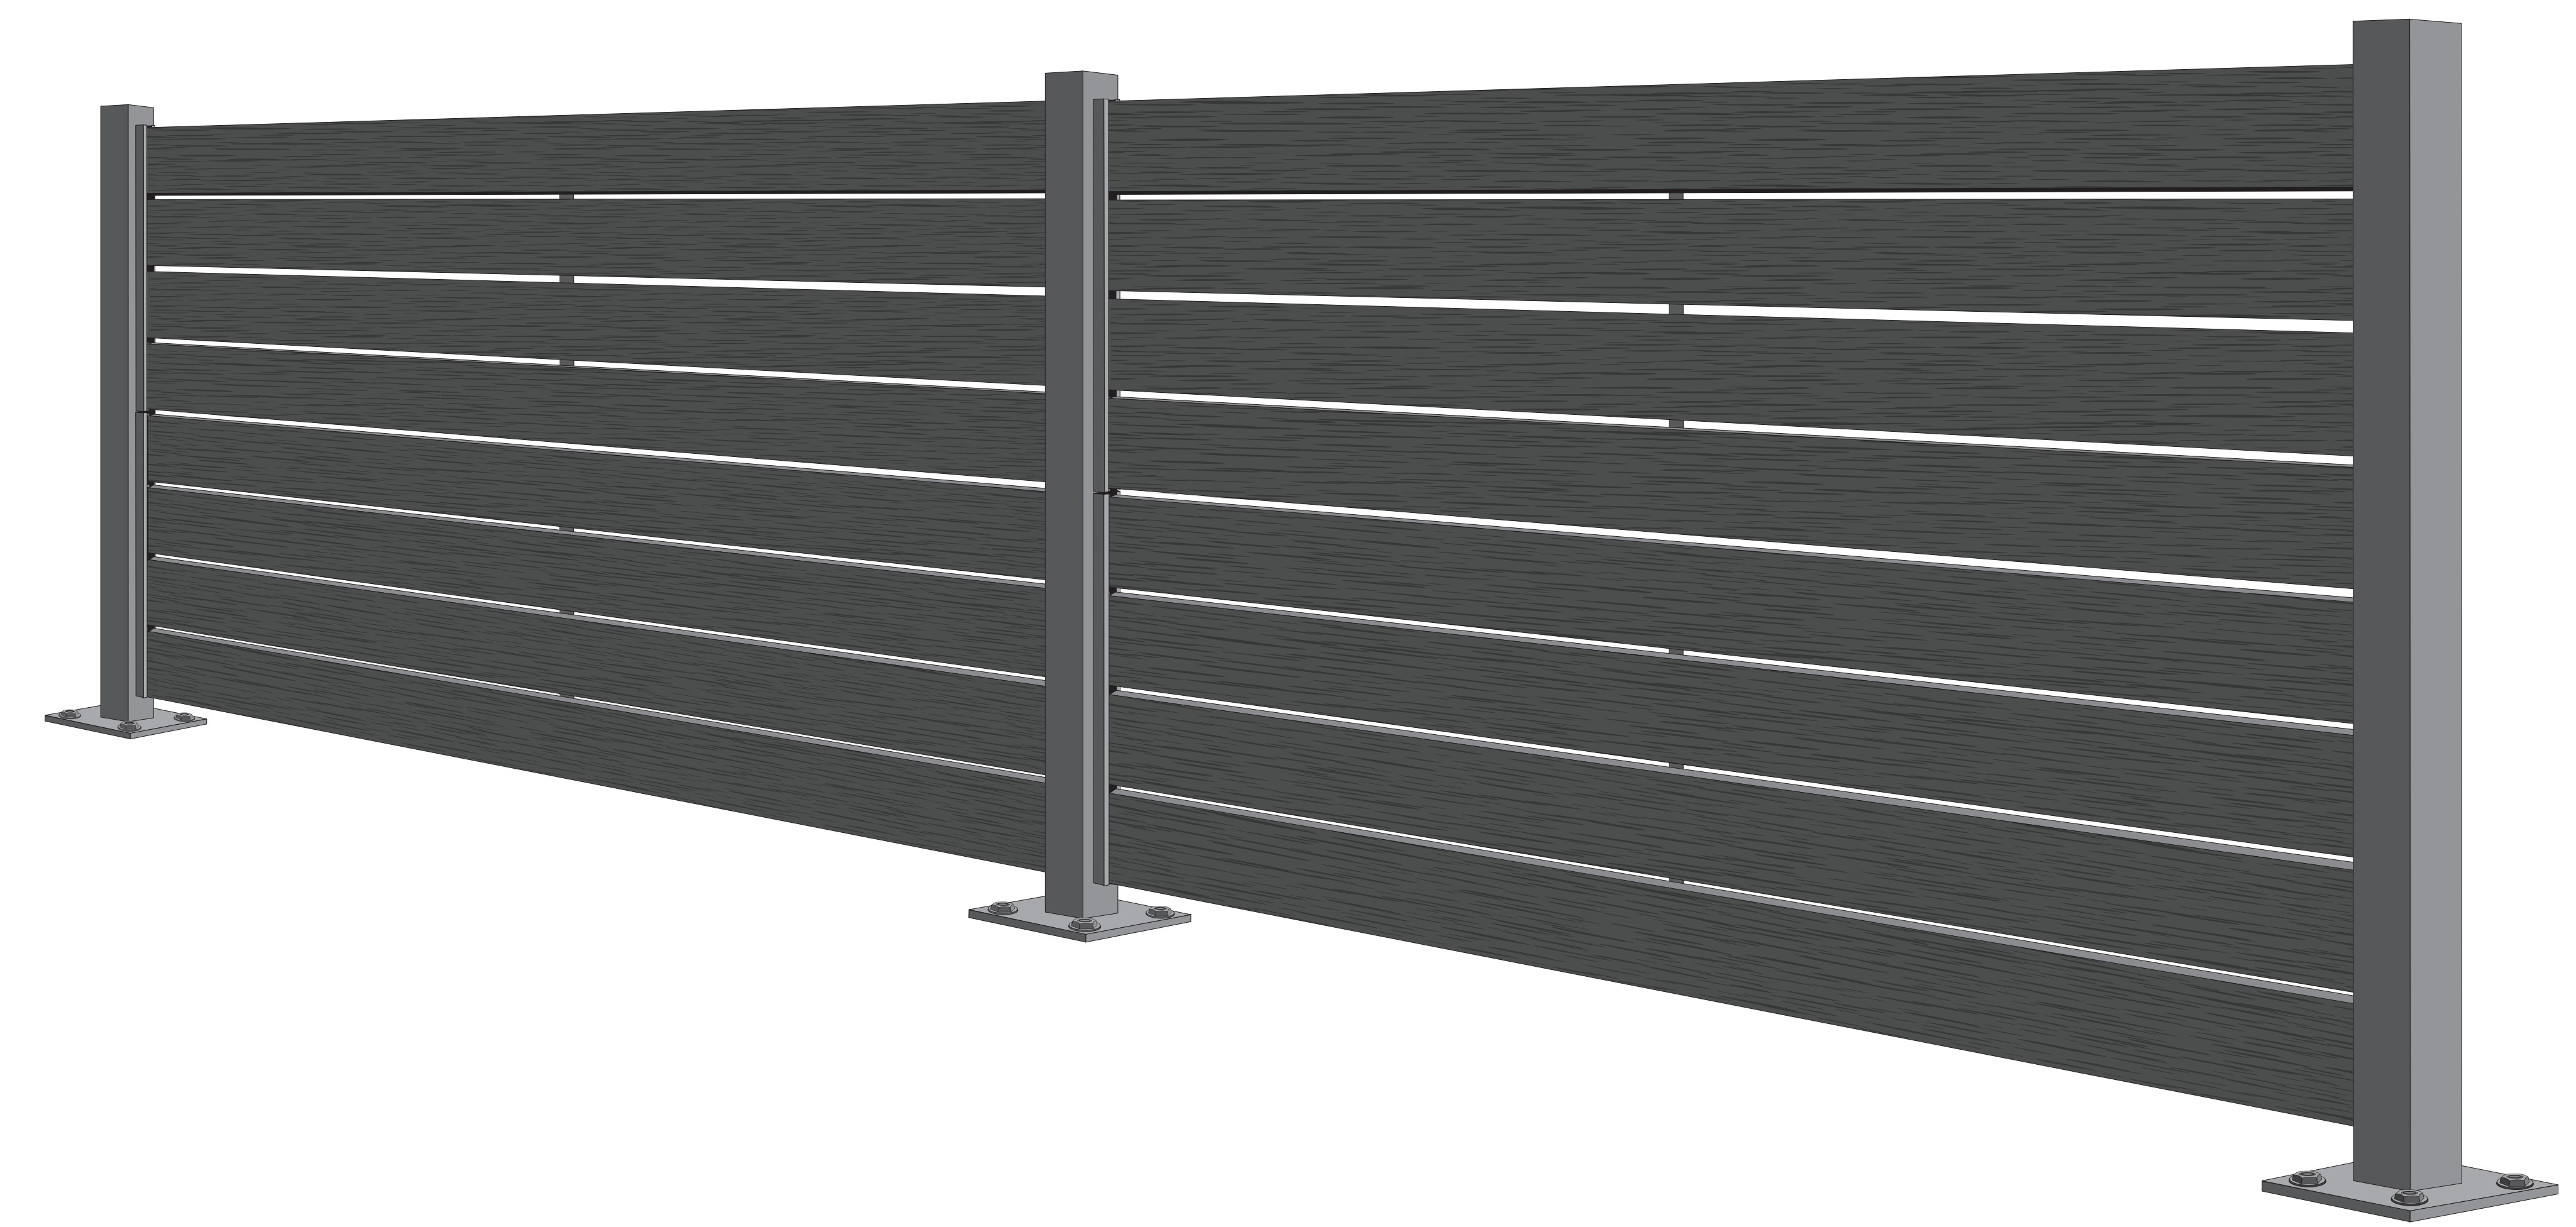

16 – 5½" Slats + 28 Spacers*
4 – 24" Horizontal Fence Kits (ODSL2)
on **3** – 52" Posts (ODP55)

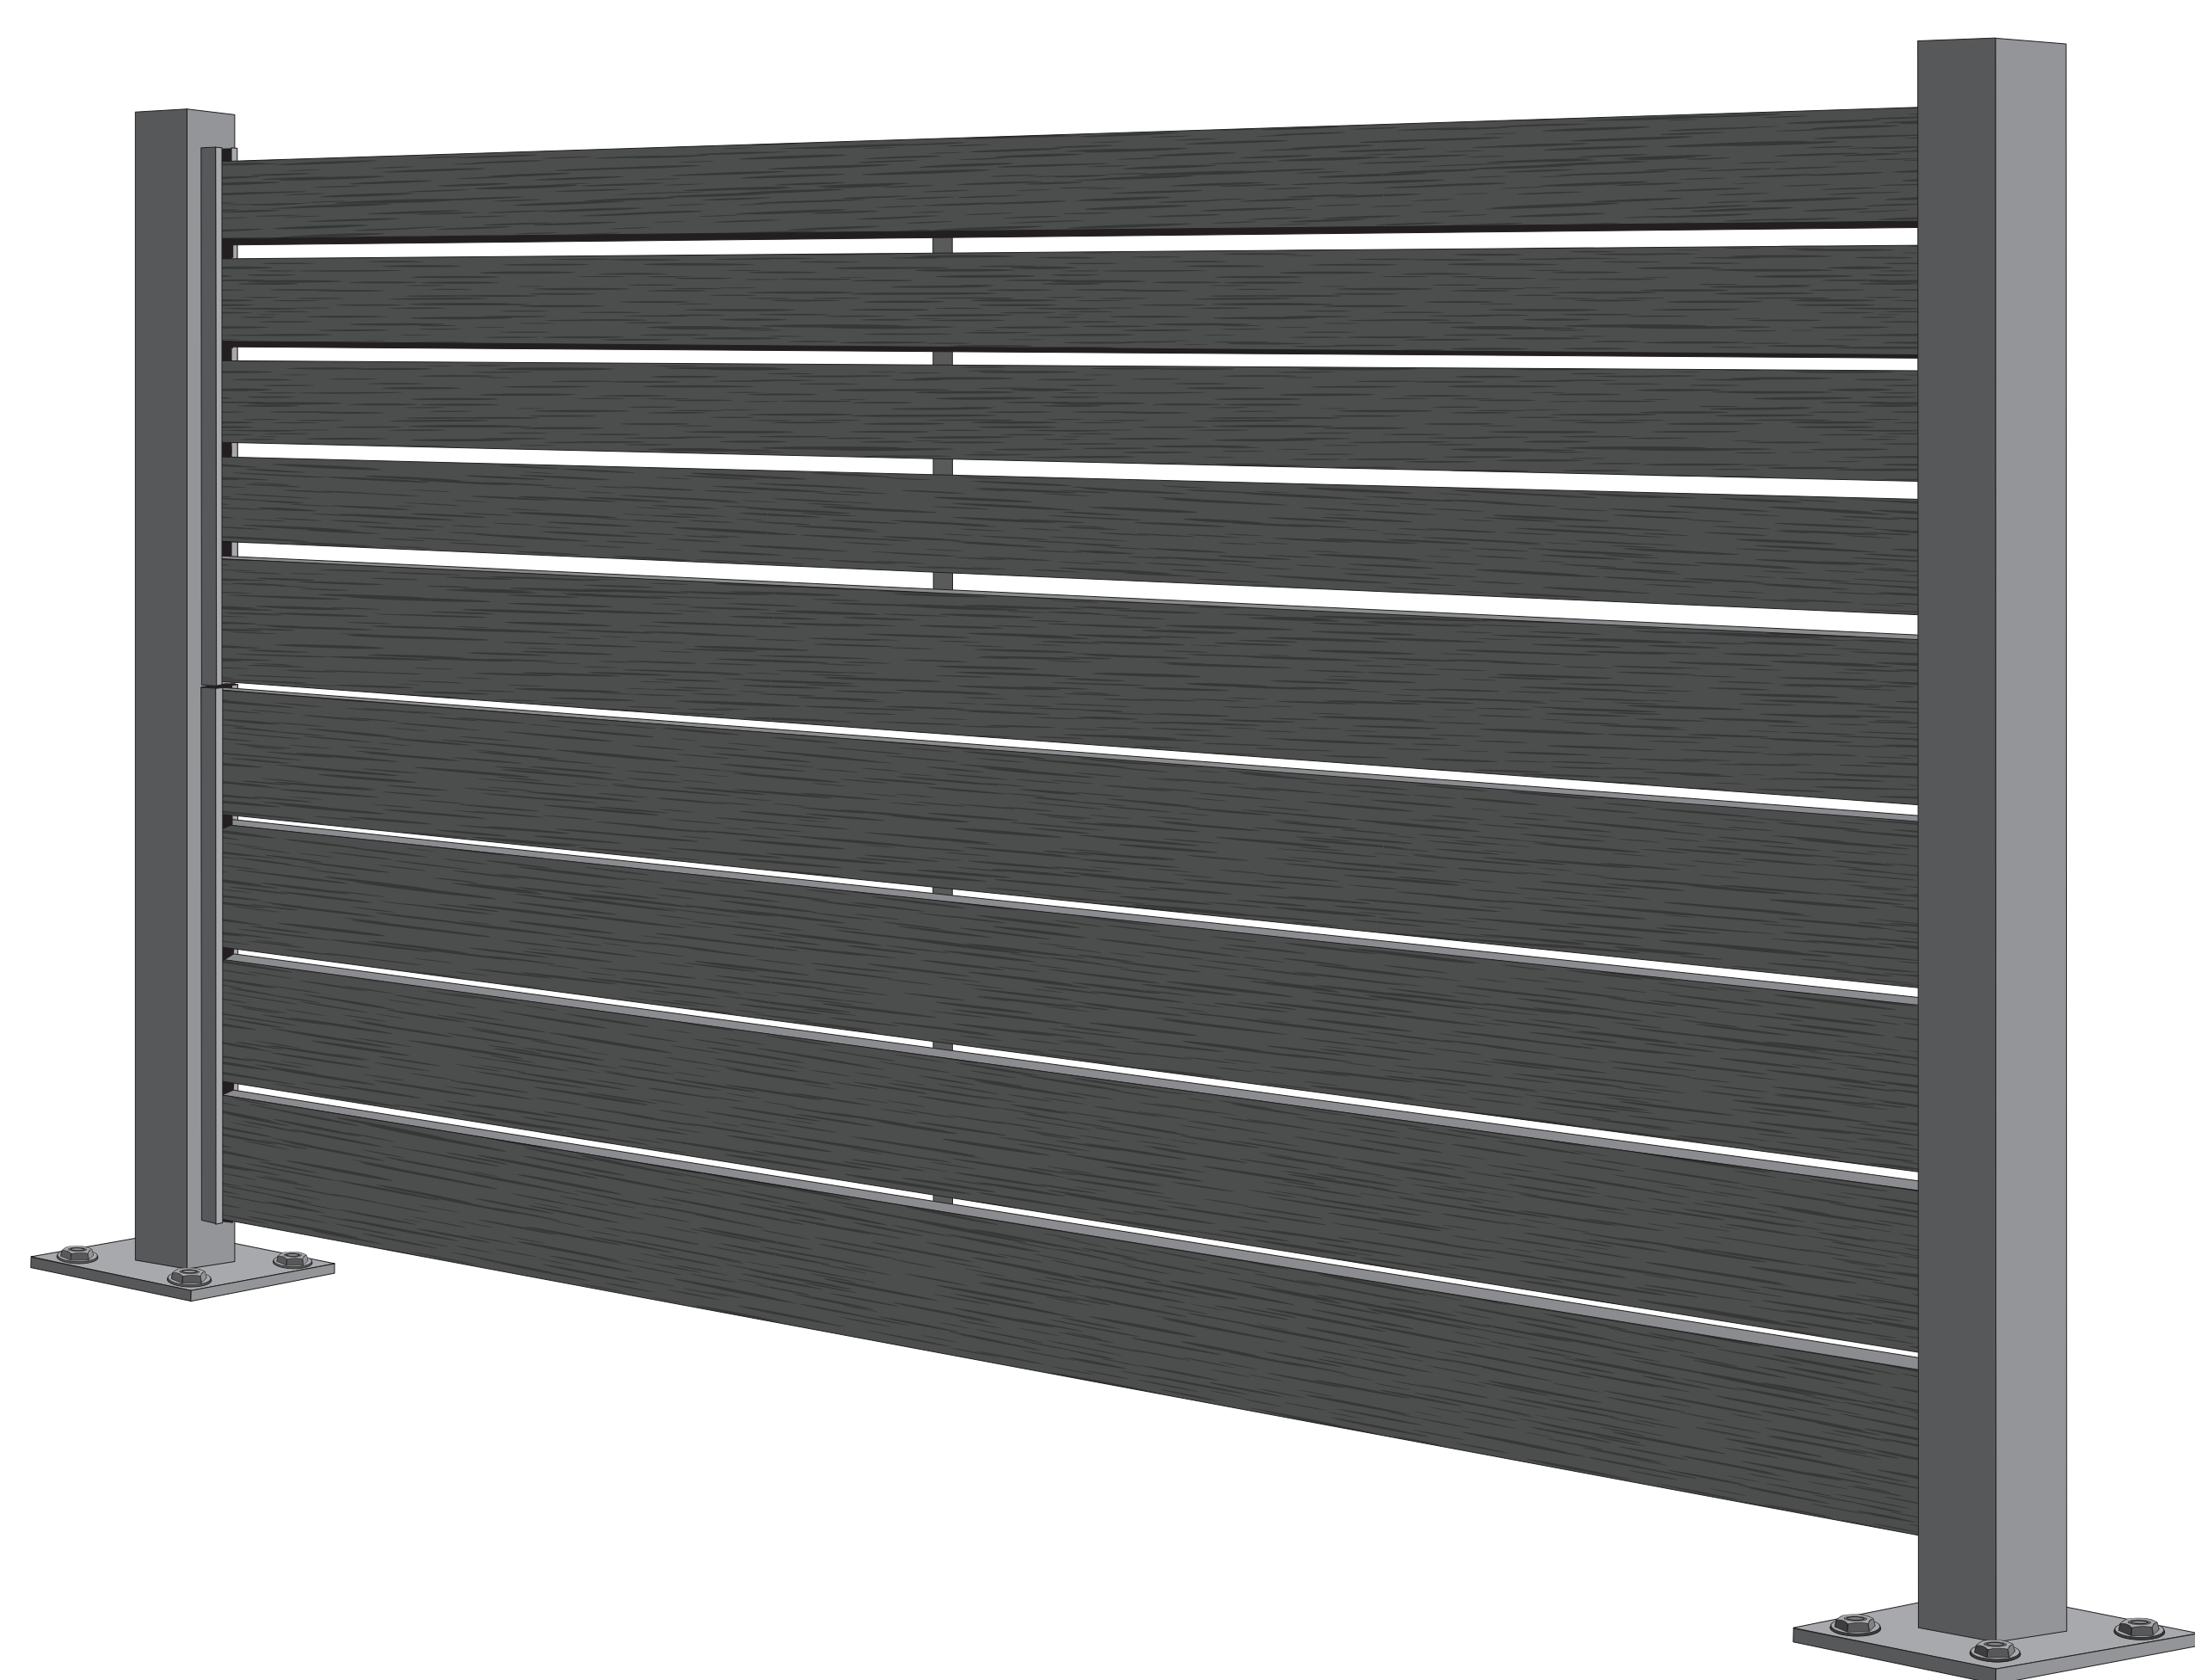

5 – 5½" Slats + 4 – 3½" Slats
+ 16 Spacers
2 – 24" Horizontal Fence Kits (ODSL2)
on **2** – 52" Posts (ODP55)

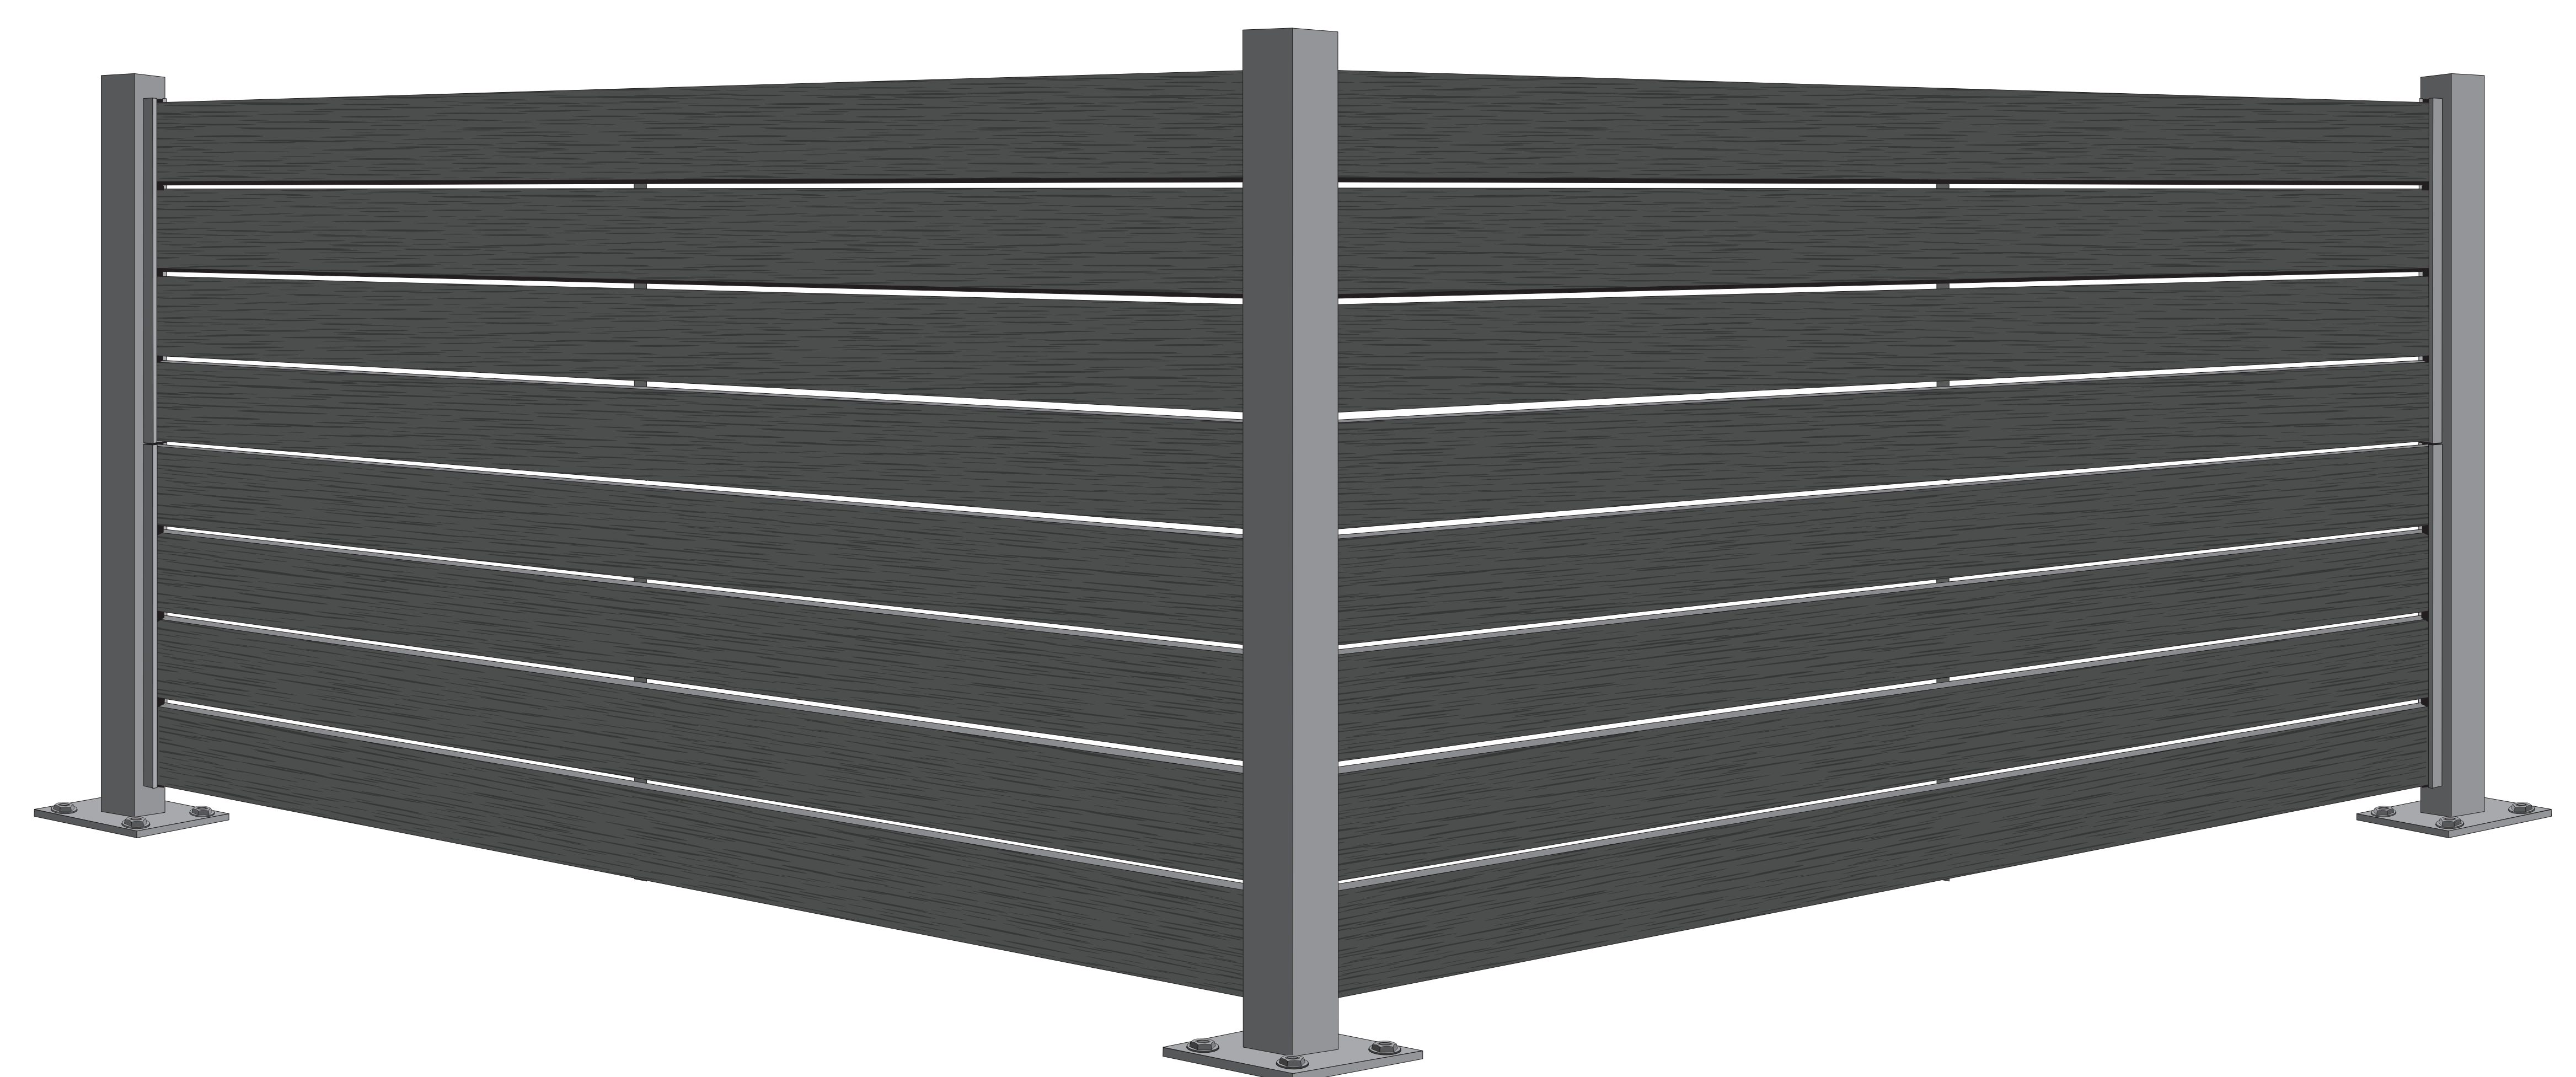

16 – 5½" Slats + 28 Spacers*
4 – 24" Horizontal Fence Kits (ODSL2)
on **3** – 52" Posts (ODP55)

* Configuration requires additional Slat Spacers. 24" Kits contain 8 Spacers. 24-packs sold separately (ODSP24).



Post & Frame Installation System

How It Works


Basic Installation Steps

5½" WPC Fence Slats on 24" Horizontal Fence Kits* and 52" Posts*

1. Bolt down 1st Post.
2. Loosely screw **lower** Slat Channels into pre-drilled Posts. Adjust Channels to Slat thickness. Tighten screws.
3. Slide first Slat into Channels. Secure with Slat Locking Screws.
4. Bolt down 2nd Post. Add a Slat Spacer and 5 more Slats with Spacers. Secure with Slat Locking Screws
5. Attach **upper** Slat Channels to Posts as in Step 2. Add Slats and Spacers.
6. Secure with Slat Locking Screws and Brace Strap.


*See detailed instructions included with OUTDECO Horizontal (Slat) Fence Kits.**

**Sold separately. All hardware is included with Slat Fence Kits and Posts. Illustrations not to scale.*

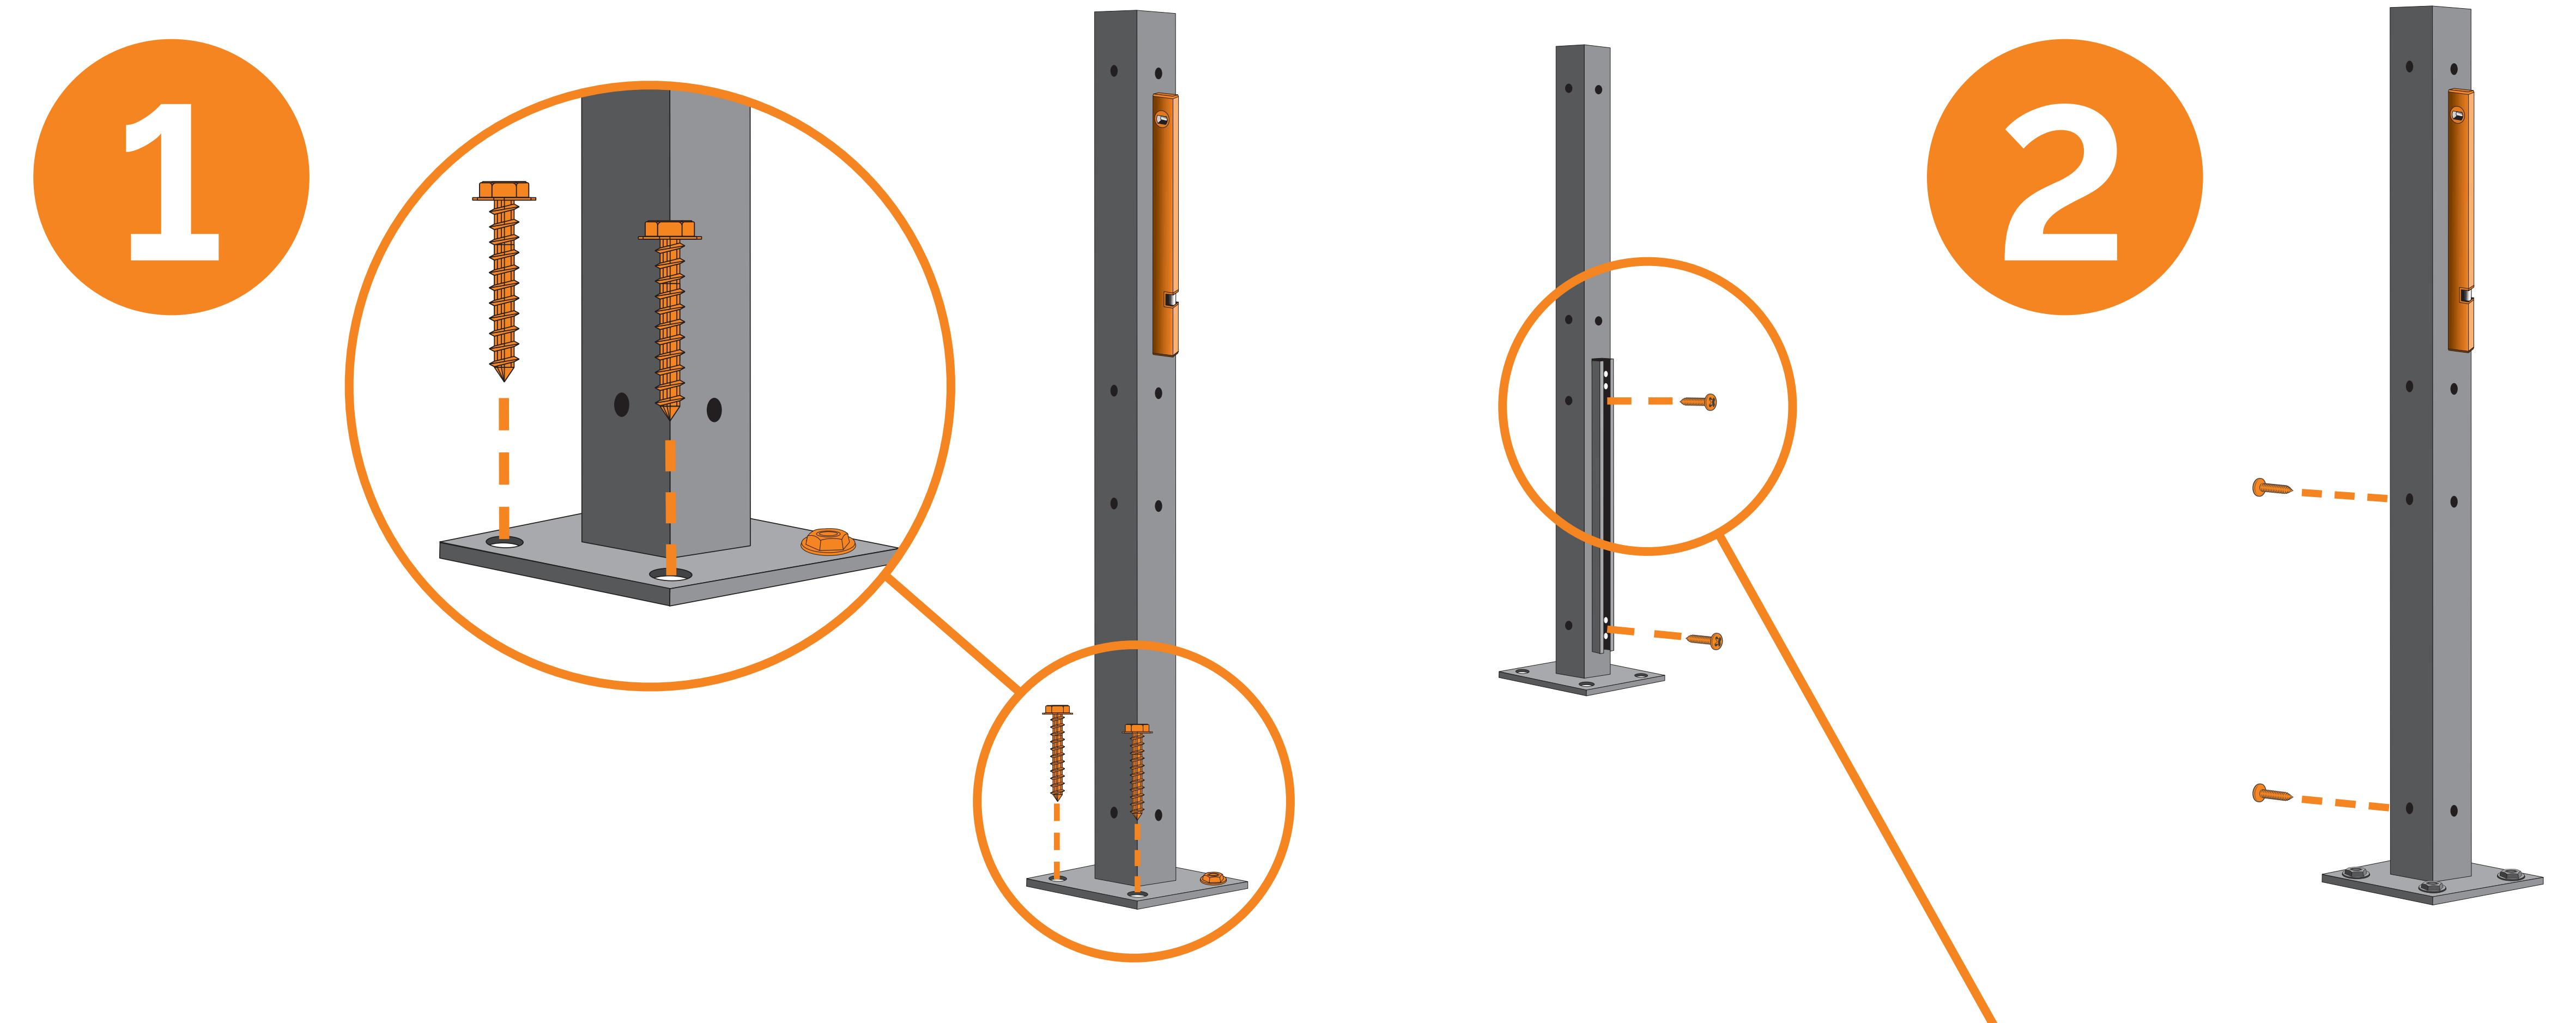


Channels adjust to fit Slats ½" to 1" thick.


Position Channels

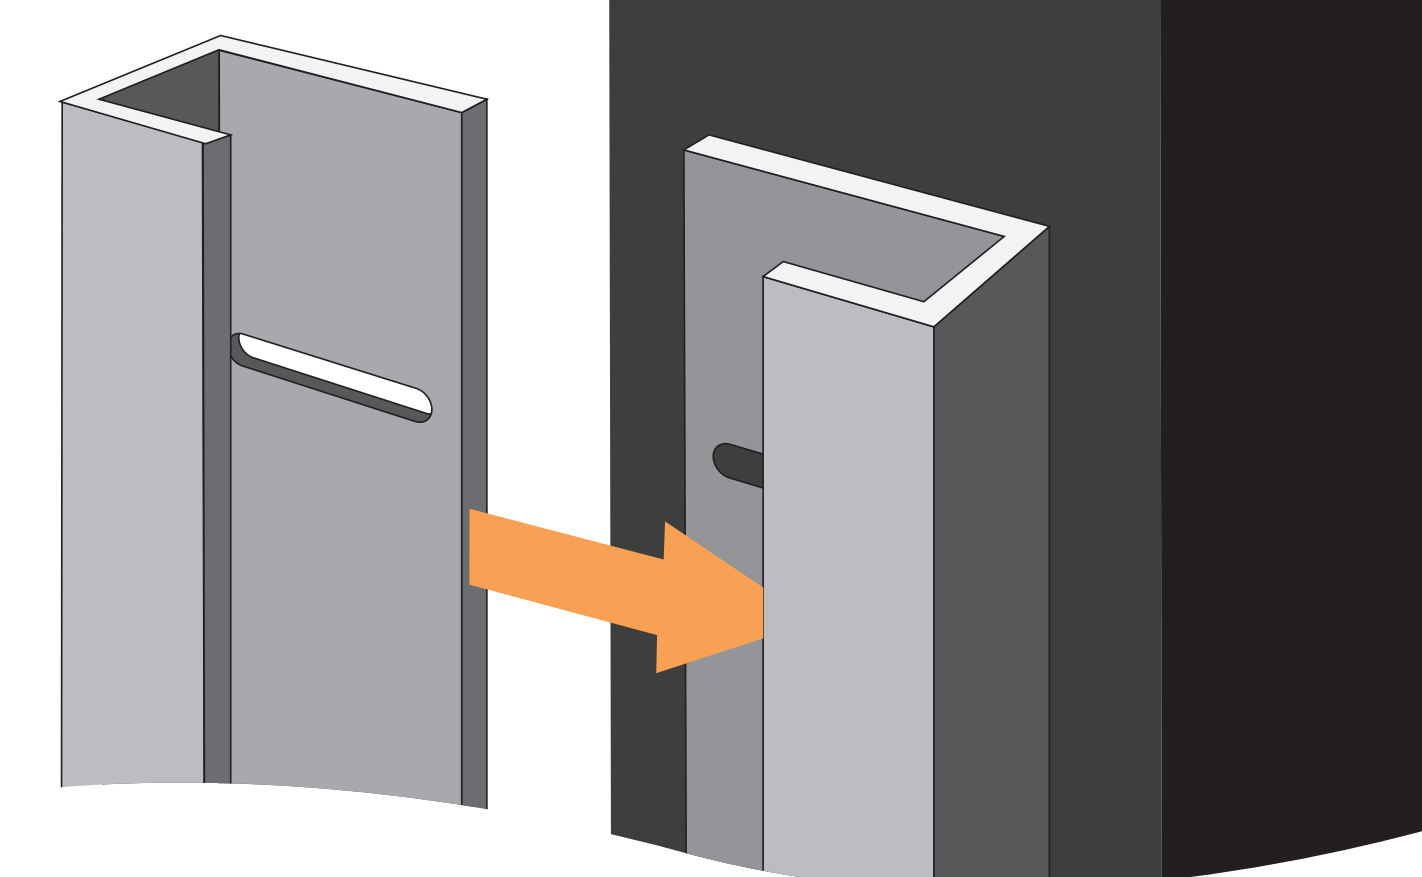


Fit Channels to Slat

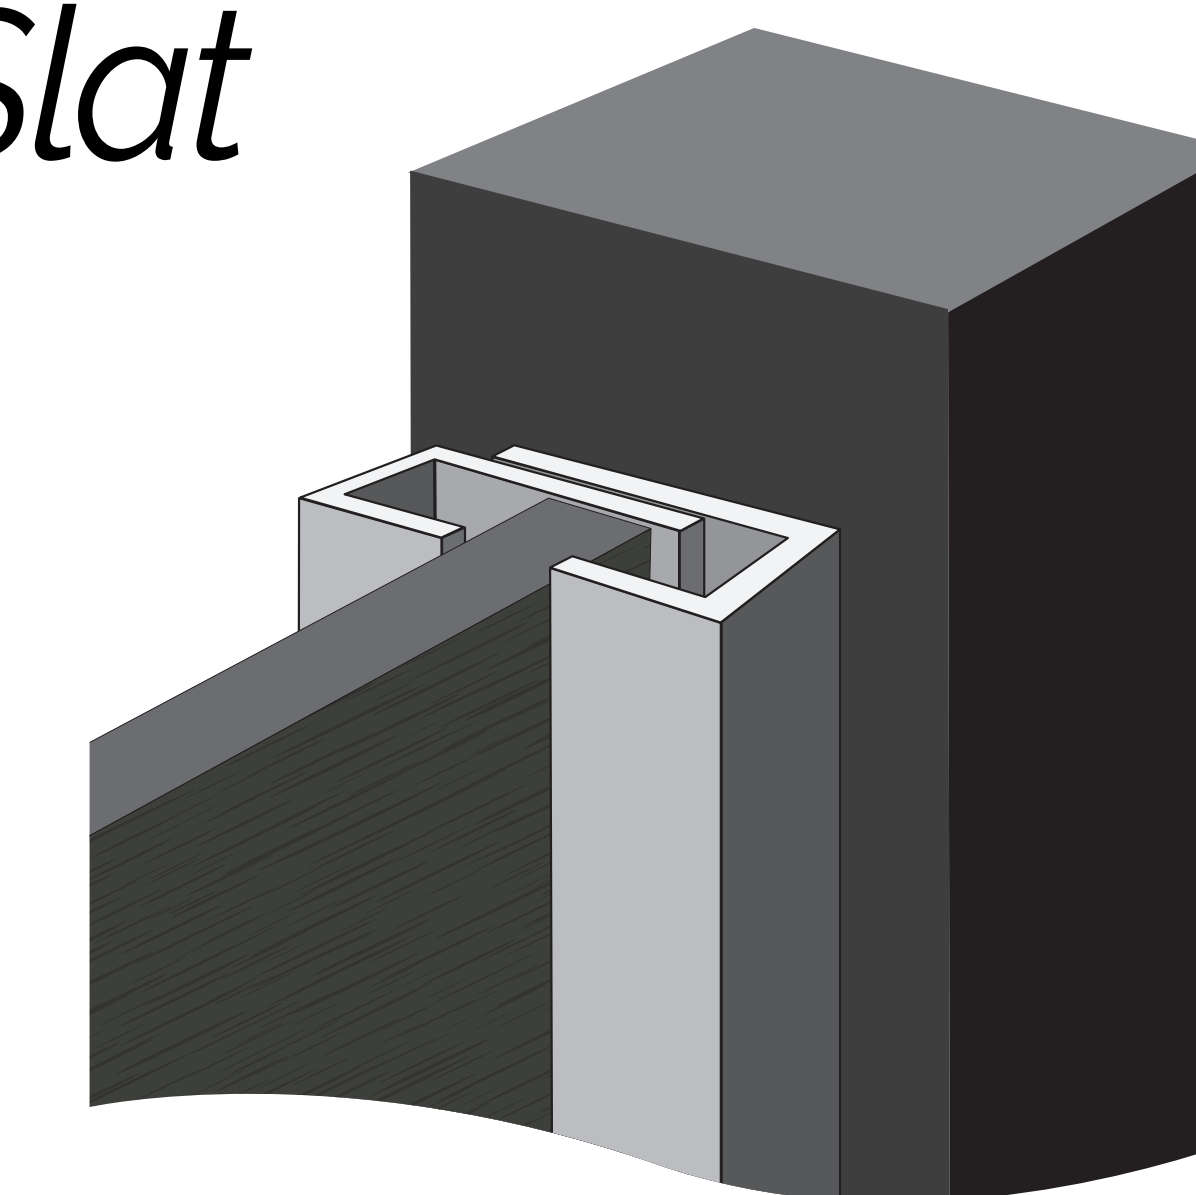

Screw in Channels

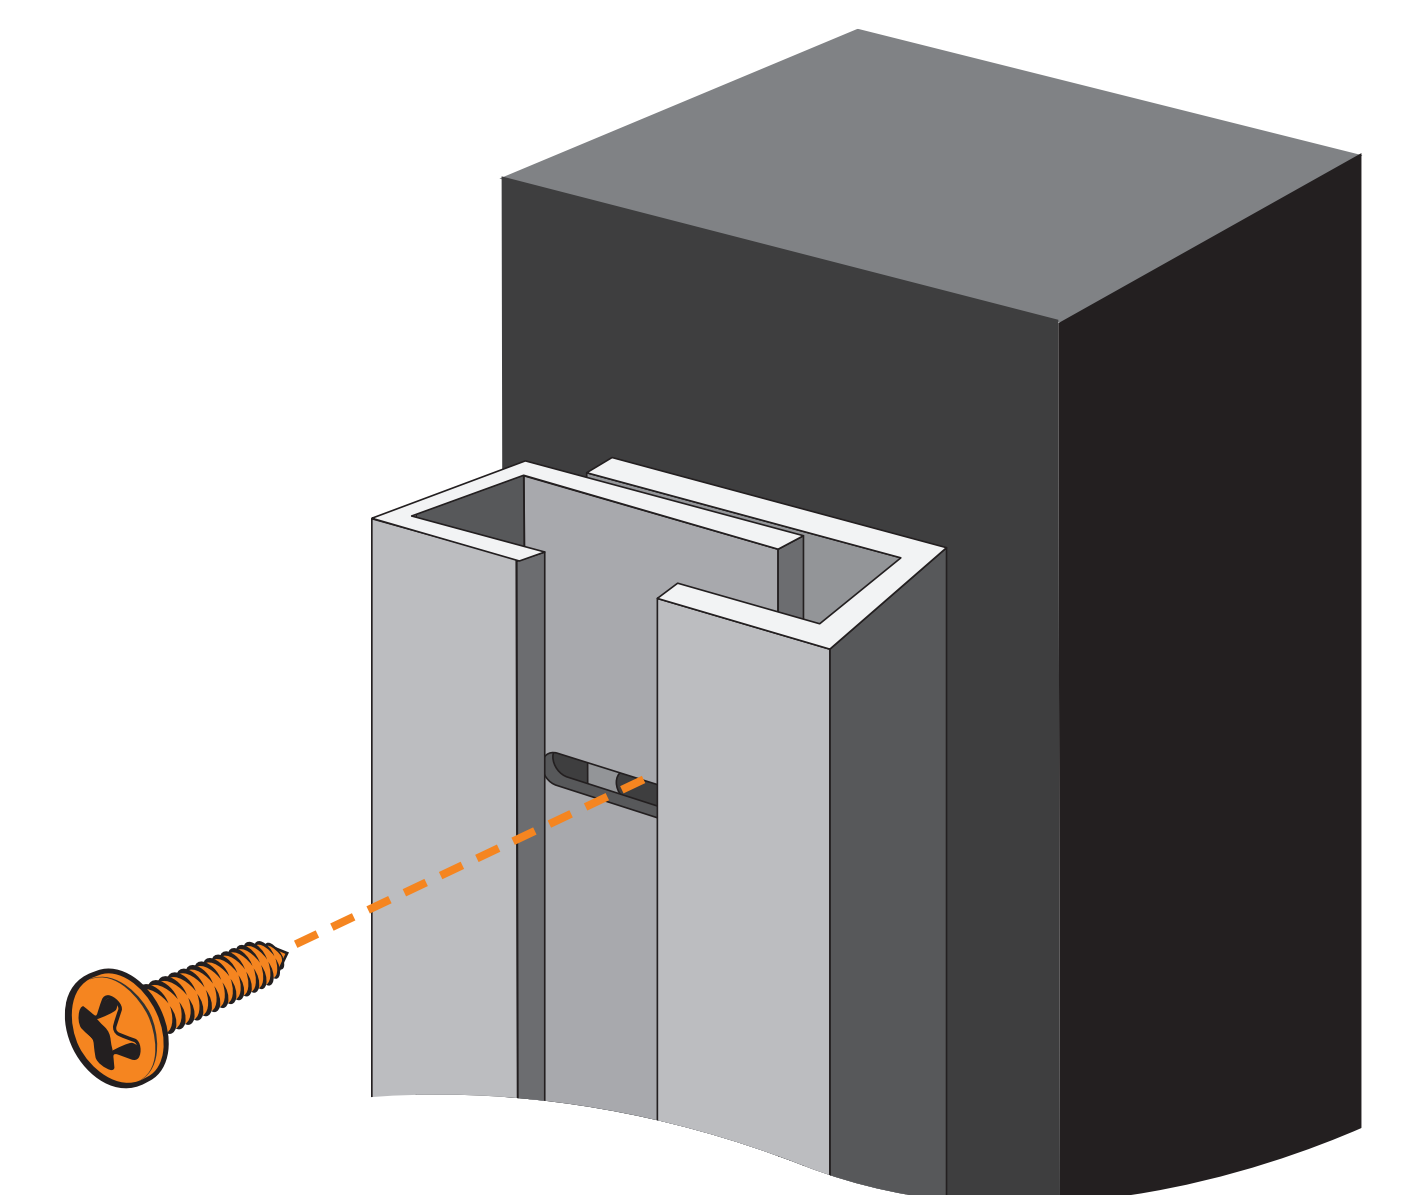

3

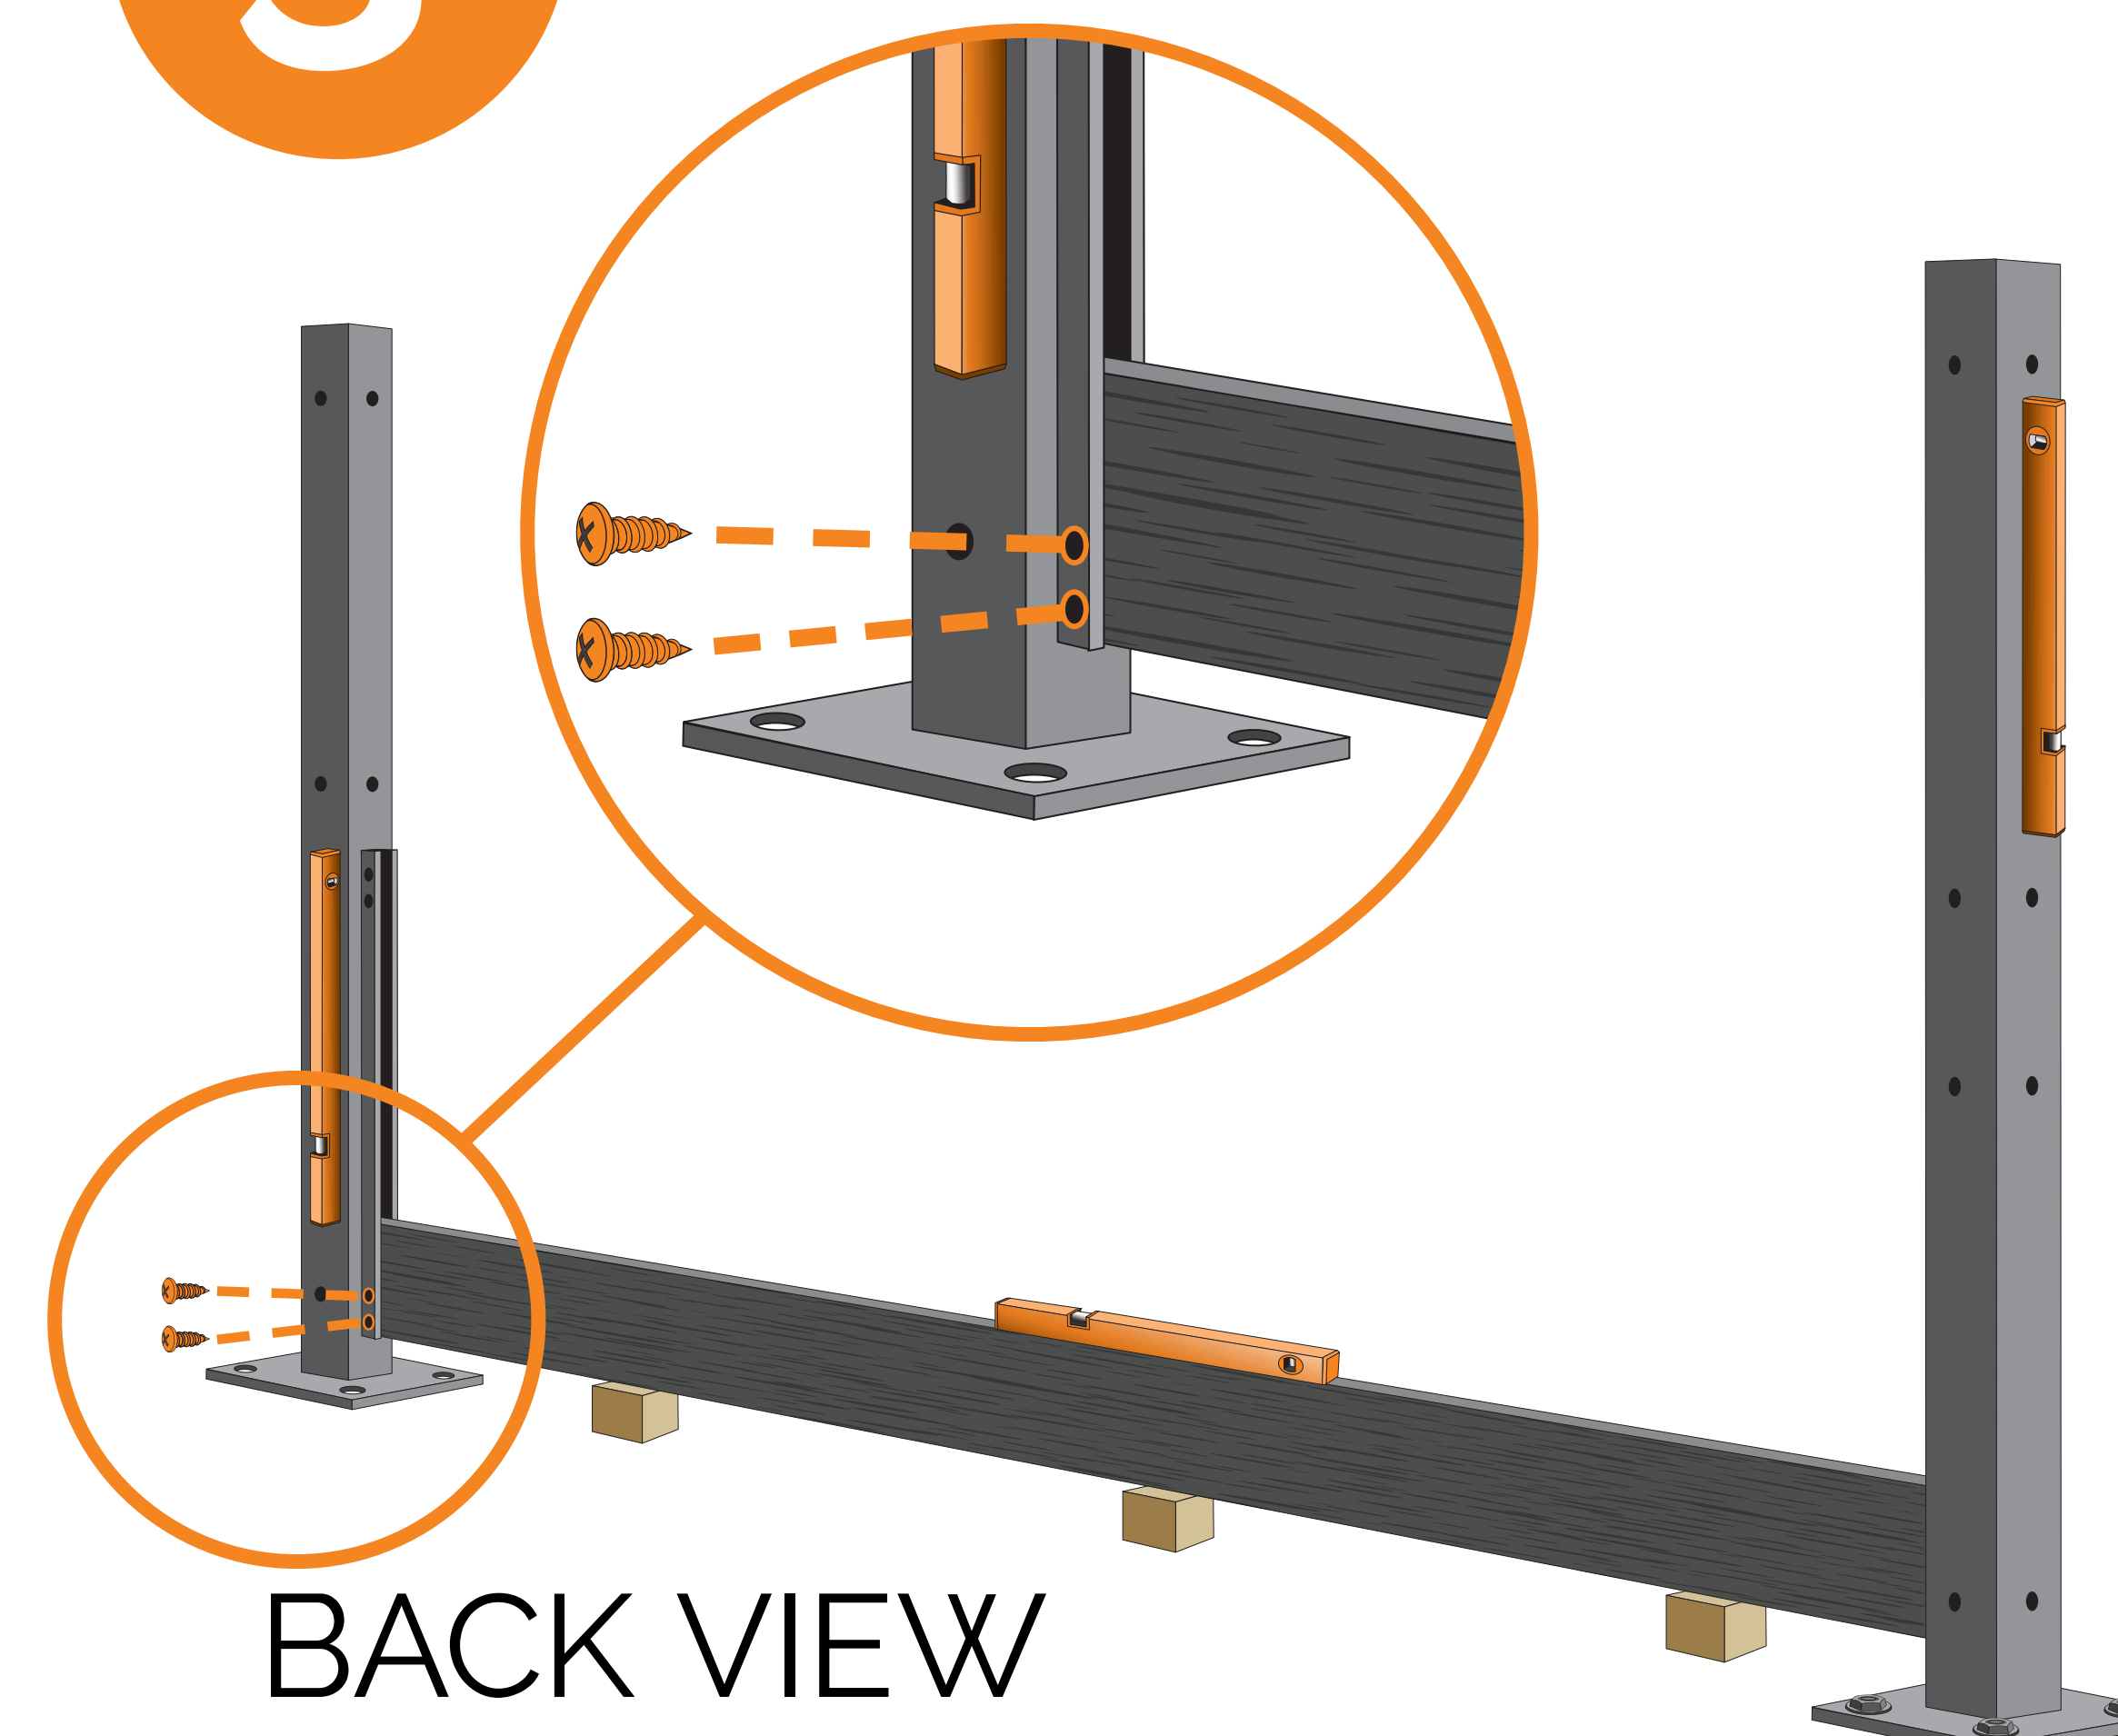


BACK VIEW

4




BACK VIEW

5

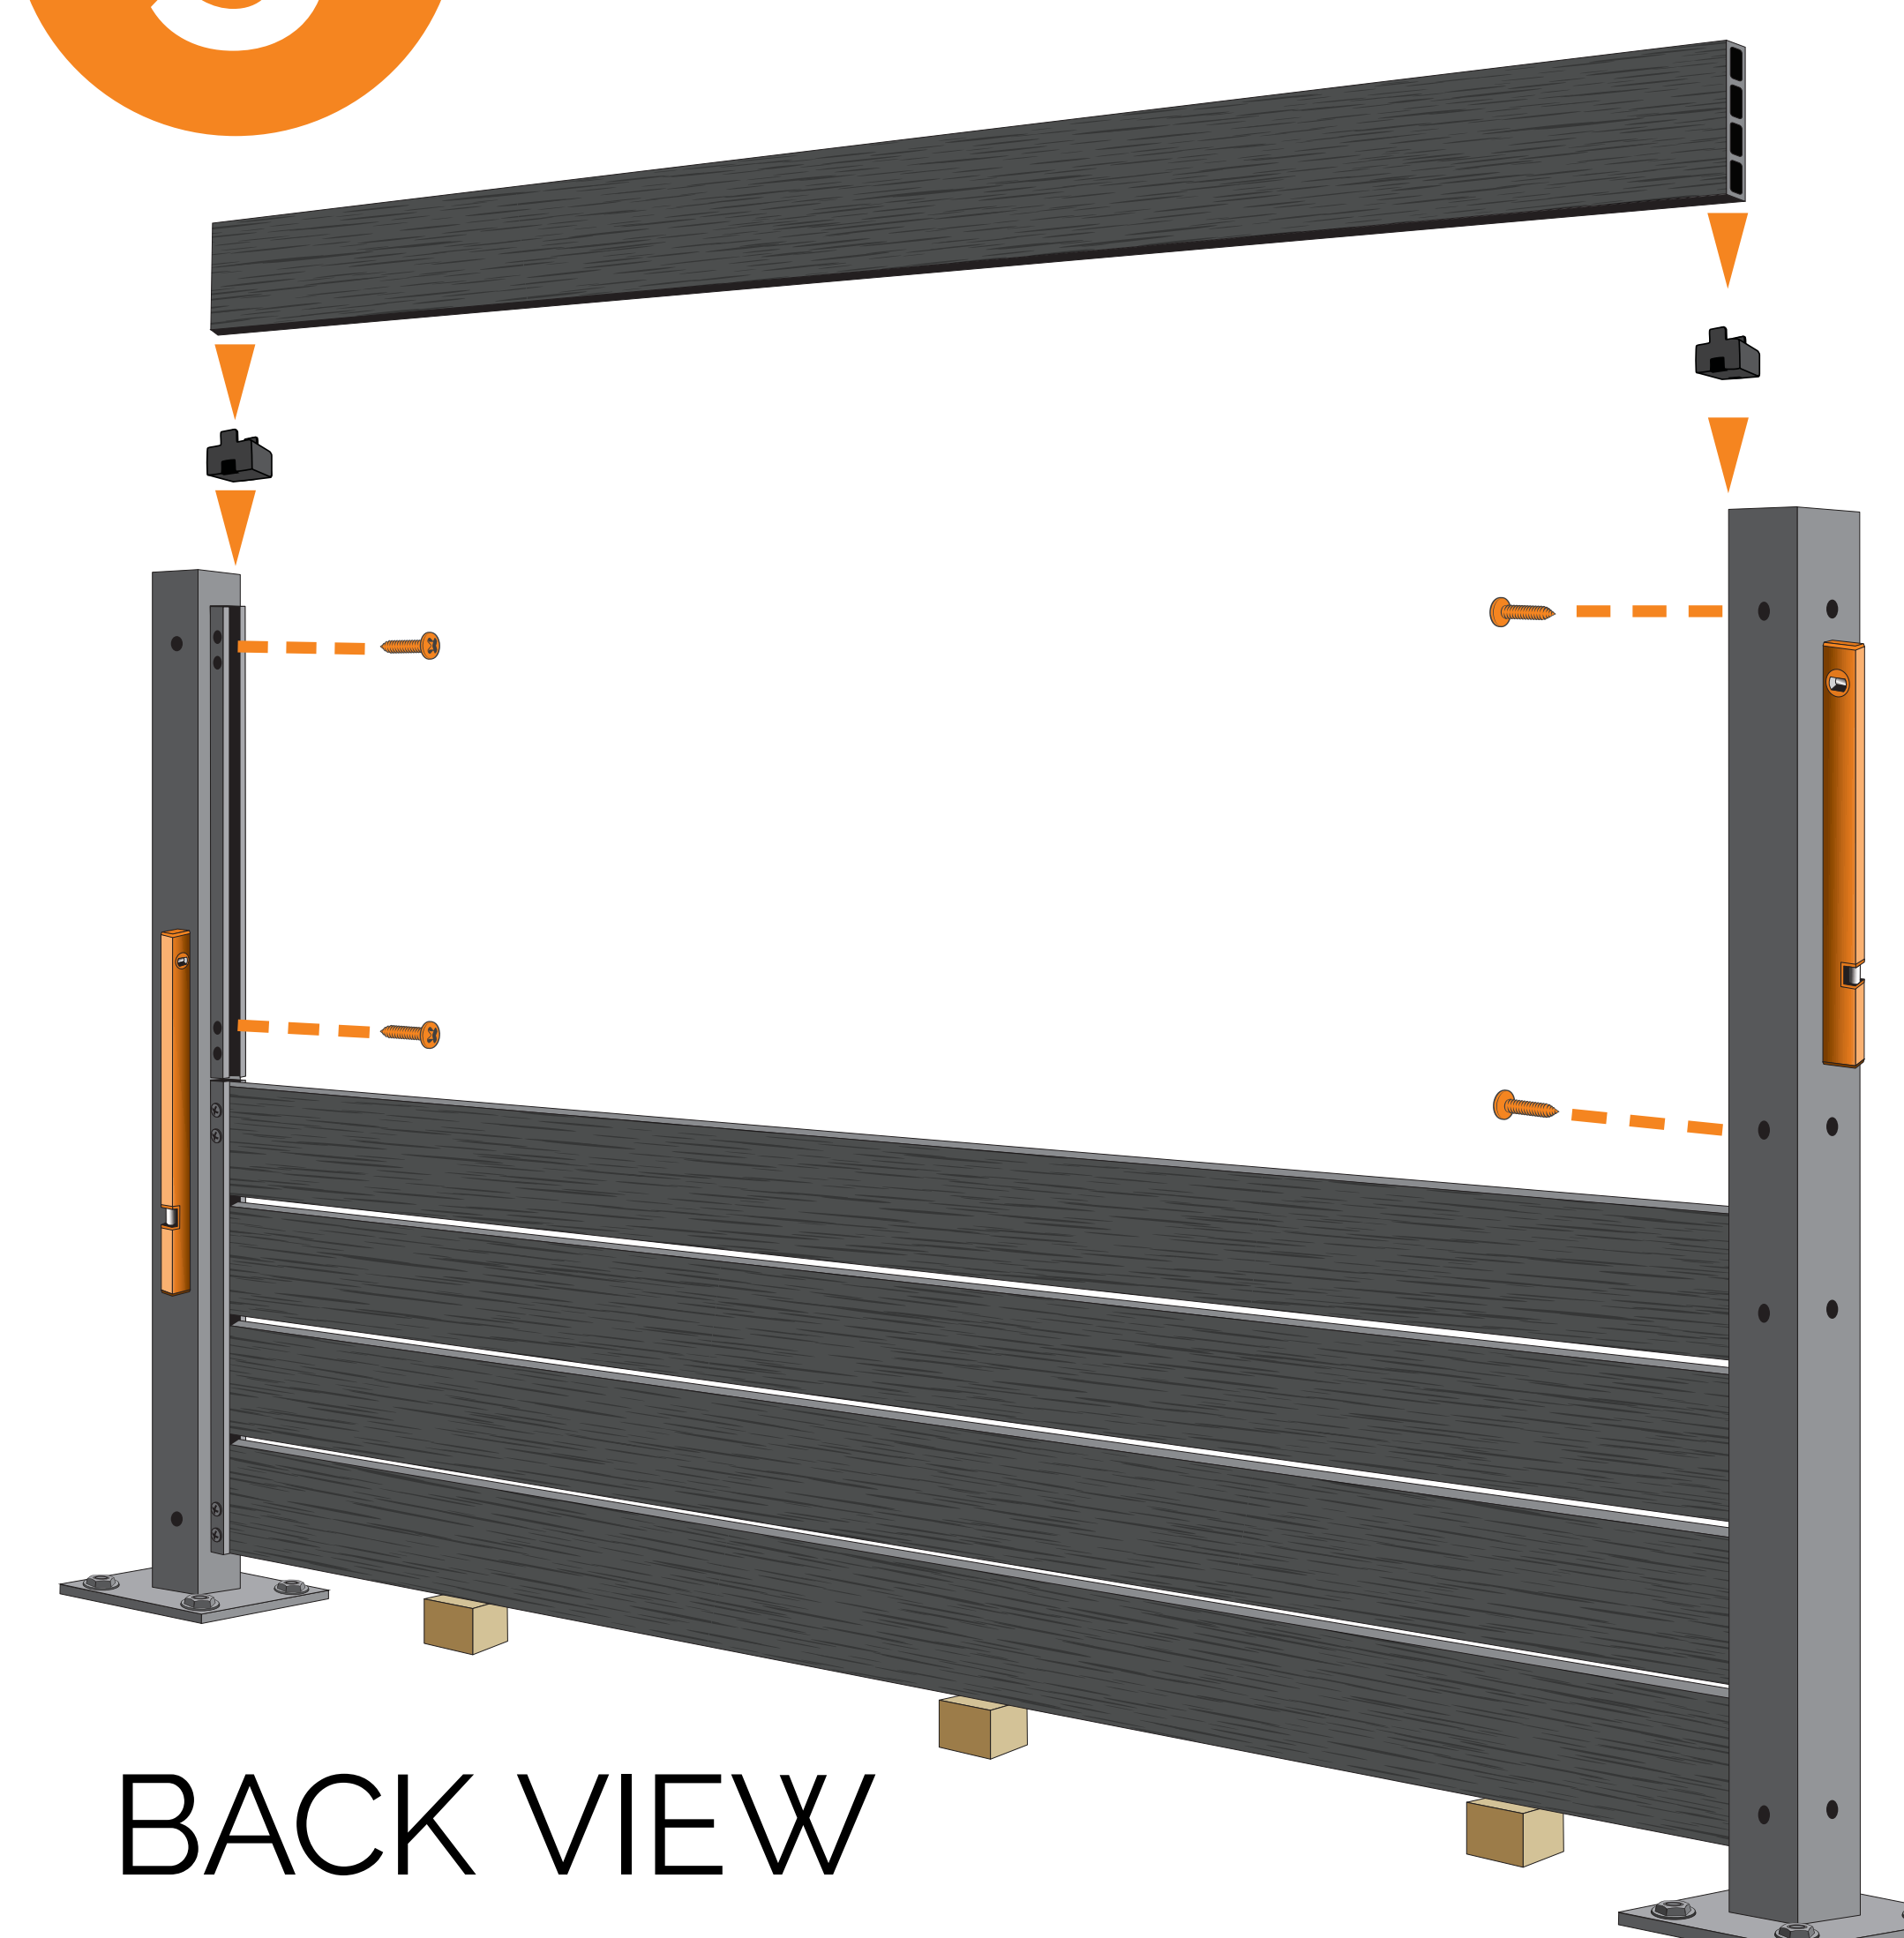

BACK VIEW

6

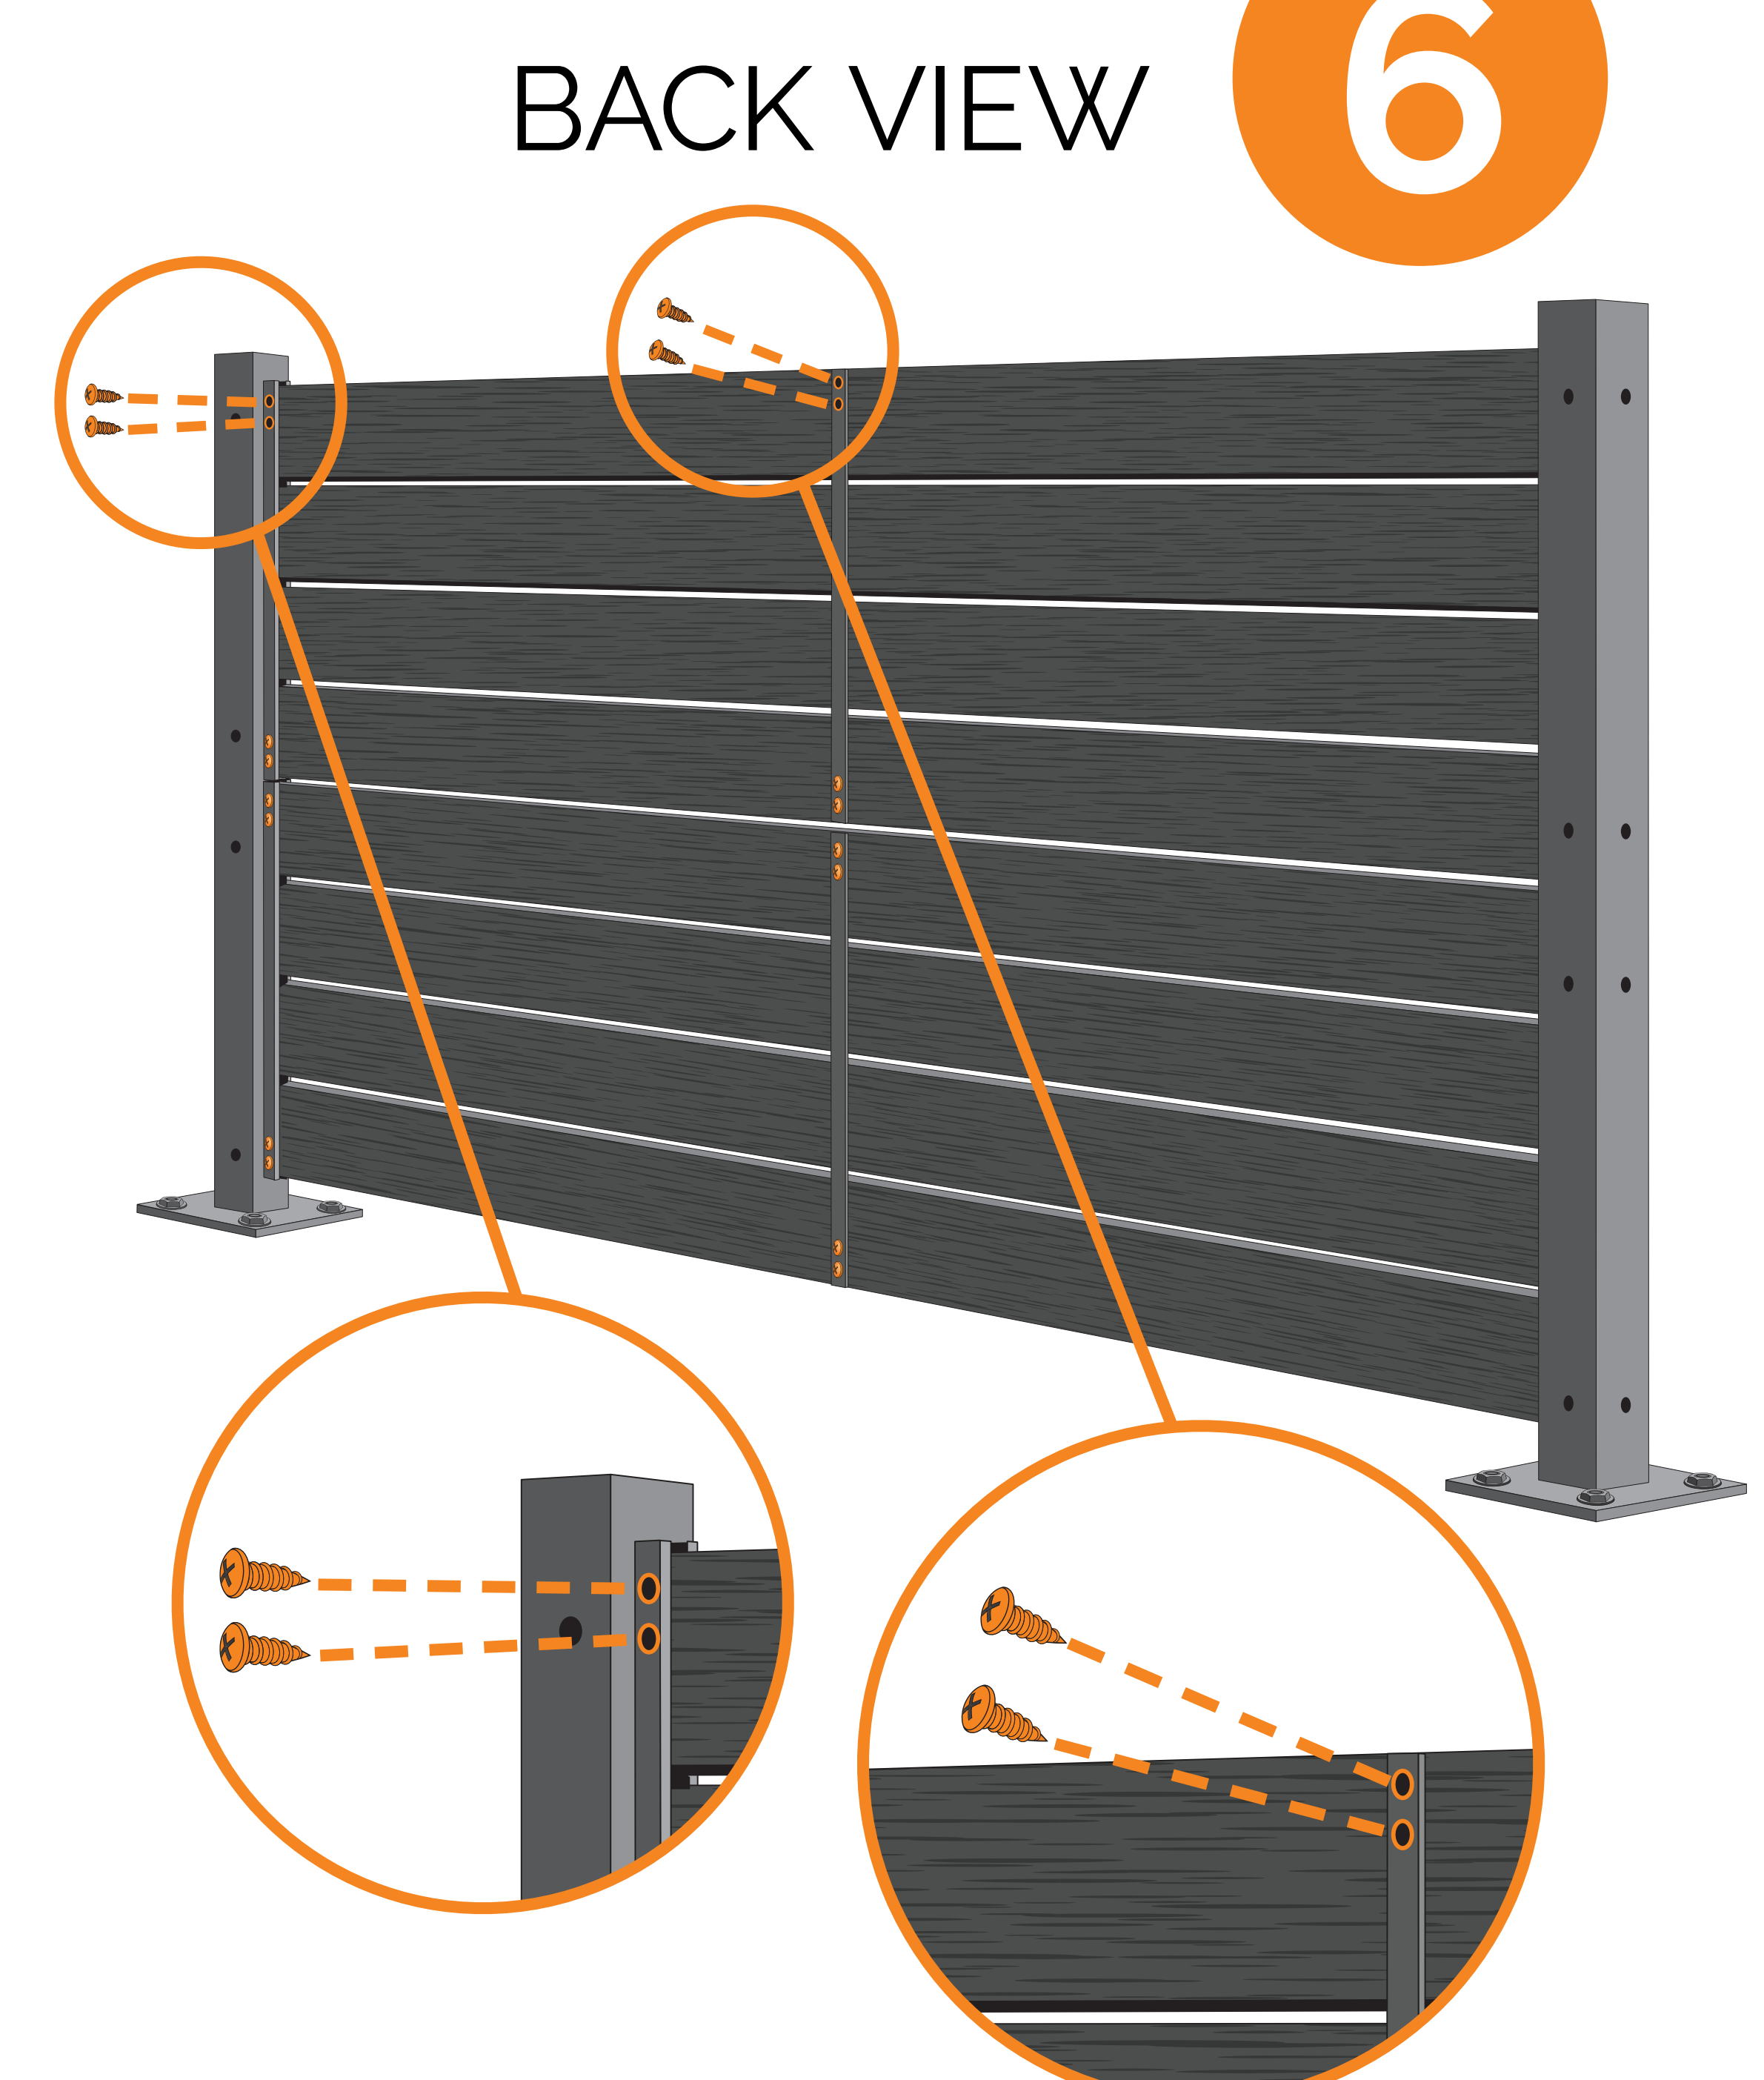

BACK VIEW

8 – 5½" Slats + 14 Slat Spacers





Post & Frame Installation System

See all OUTDECO brand
products, patterns, and
sizes at outdecousa.com


Related Products*

5 1/2" Flat-Edge Slats




Espresso, 4-Pack
(SL556E-4P)

3 1/2" Flat-Edge Slats

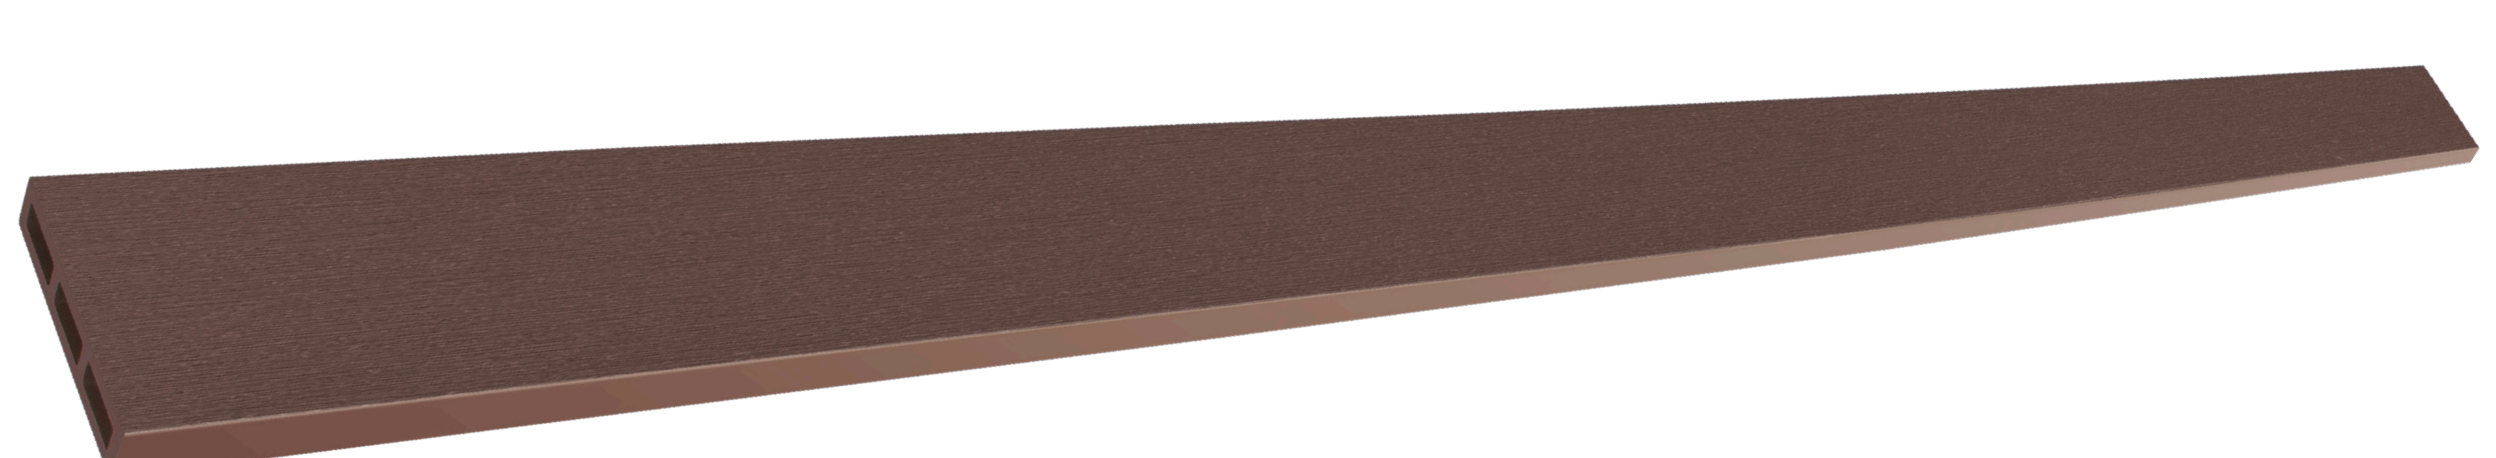

Espresso, 4-Pack
(SL356E-4P)

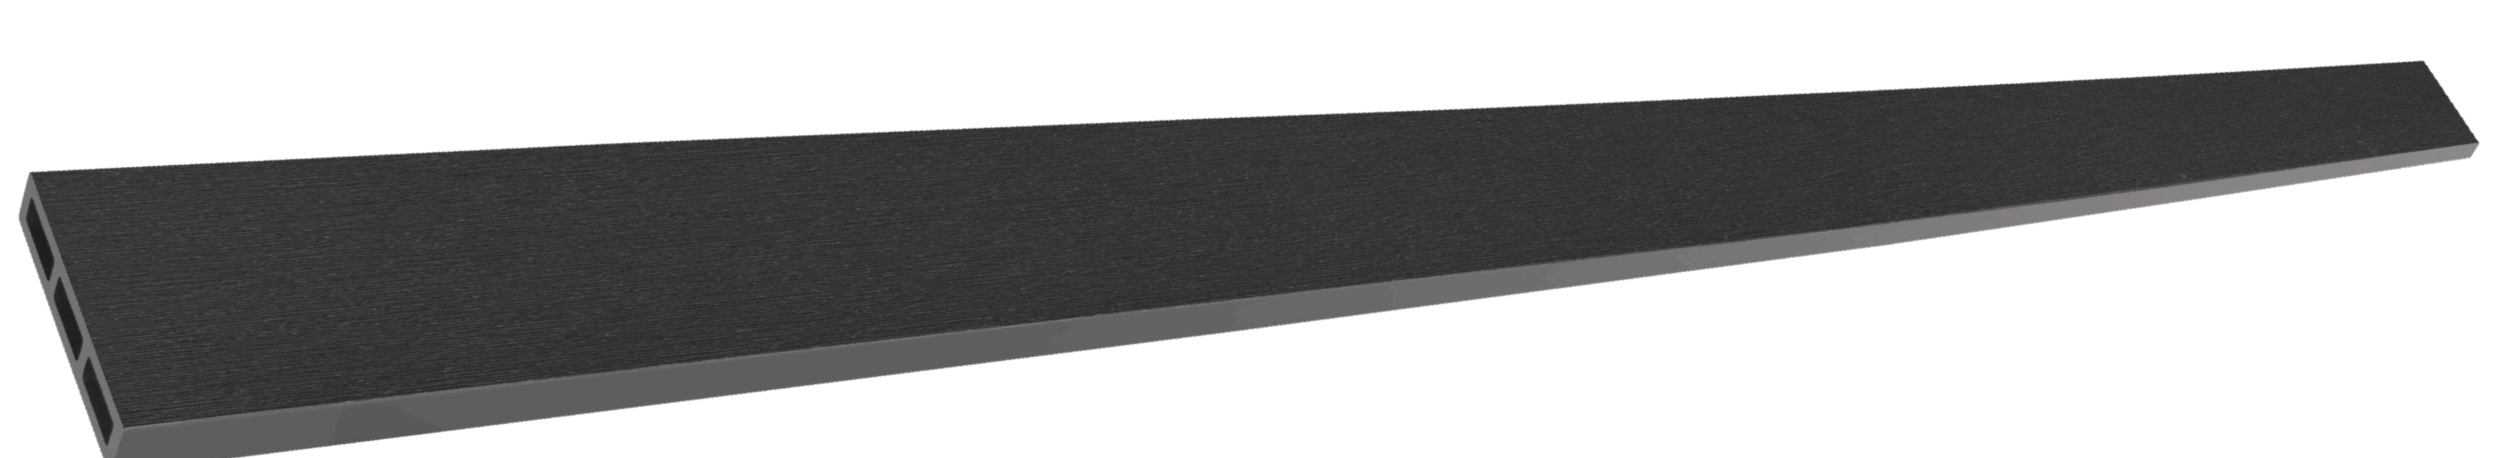

Charcoal, 4-Pack
(SL356C-4P)

5 1/2" Tongue & Groove Slats



Espresso, 1-Pack
(SLTG596E-4P)



Charcoal, 1-Pack
(SLTG596C-4P)

5 1/2" Grooved Topper Slats



Espresso, 1-Pack
(SLTOP6E)



Charcoal, 1-Pack
(SLTOP6C)


Posts

- Pre-drilled post holes align with channel slots for direct mounting with no measuring.

A. 52" Surface-Mount Post (ODP55)


B. 75" Surface-Mount Post (ODP75)

C. 96" In-Ground Post (ODP96)

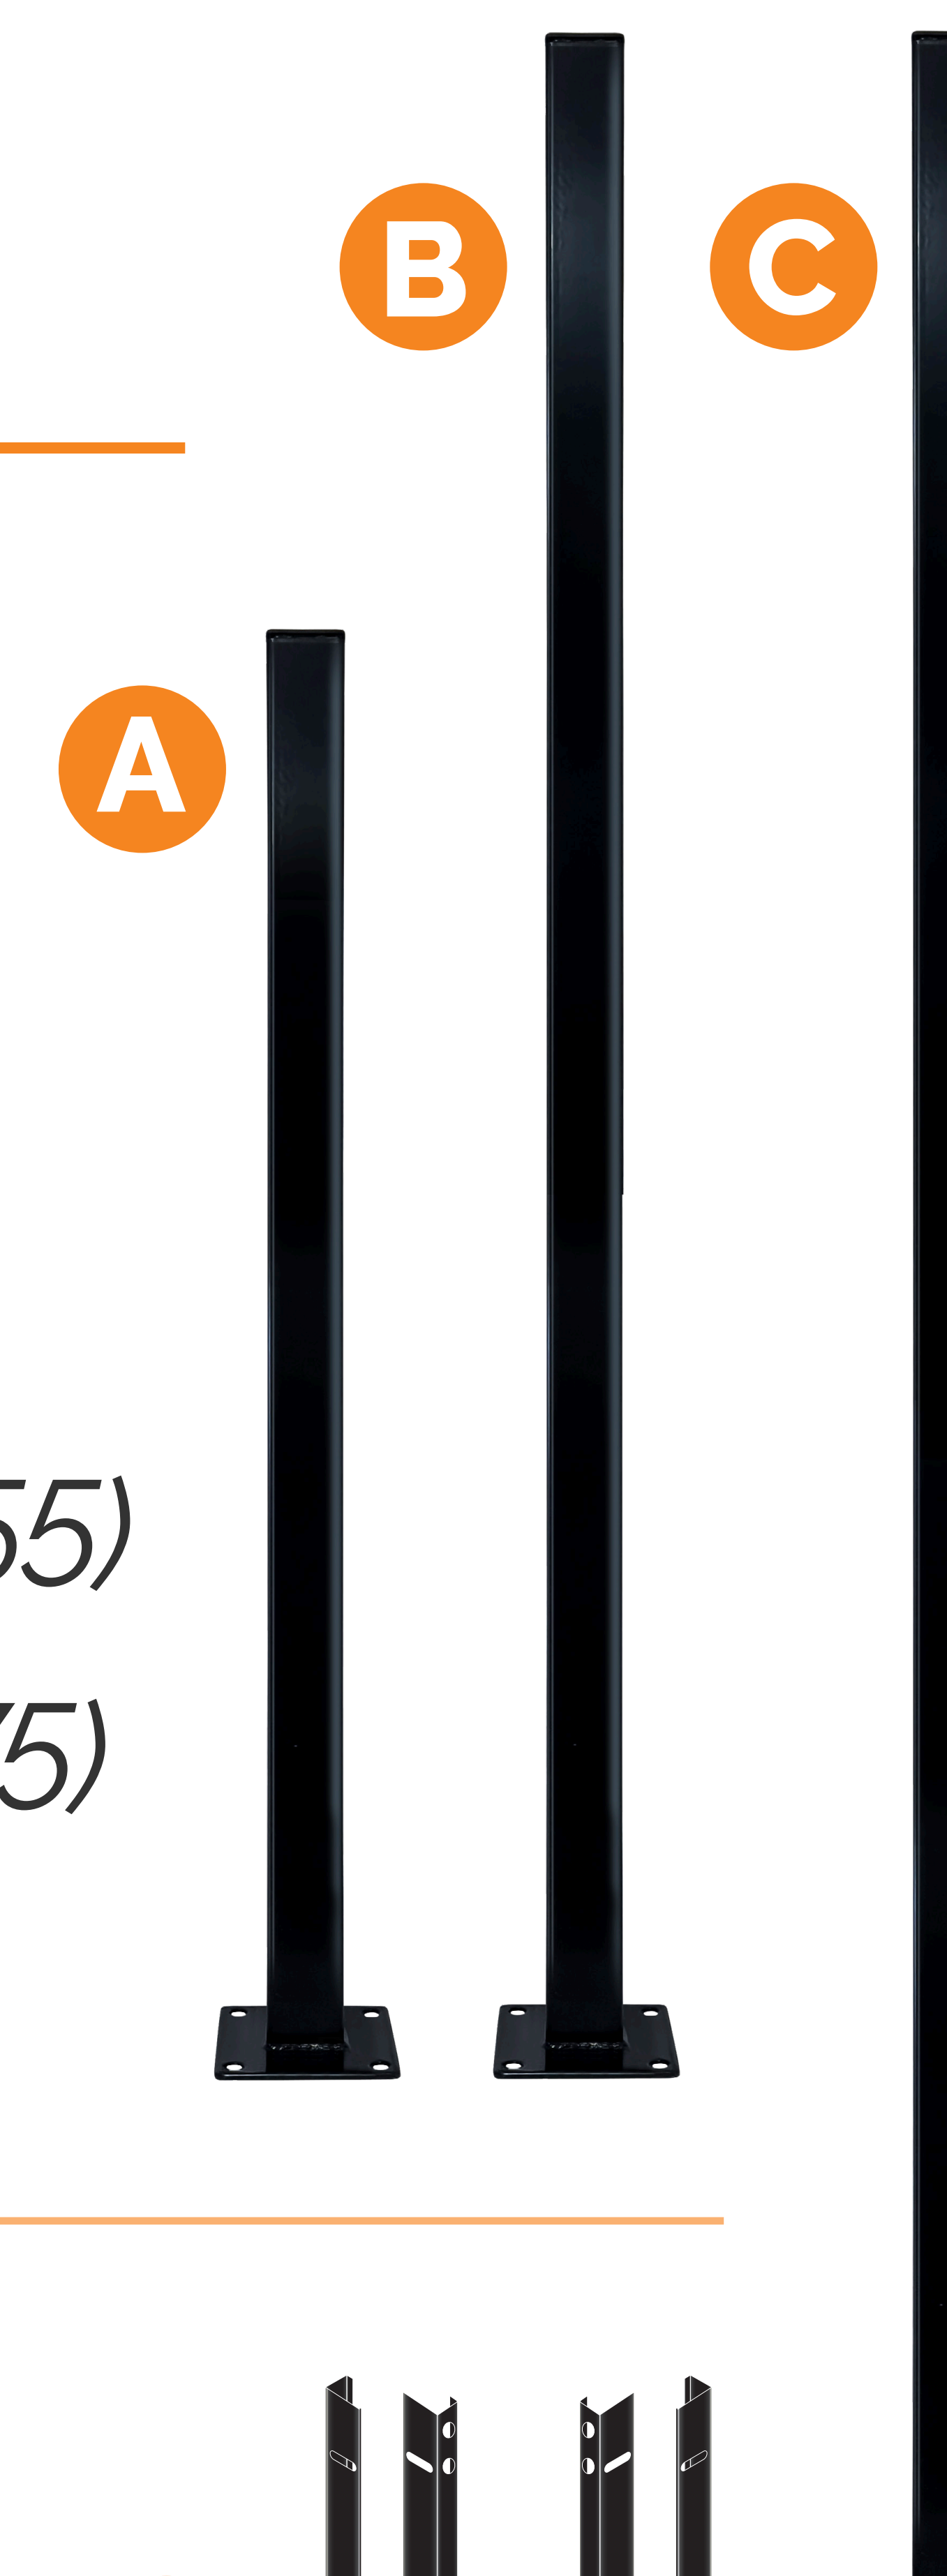

Horizontal Fence Slat Kits

- Channels for total slat heights of 72" and 24"
- Attach to pre-drilled posts and adjust for slats 1/2" to 1" thick.
- Slat Spacers for 1/2" spacing without measuring (*included*).

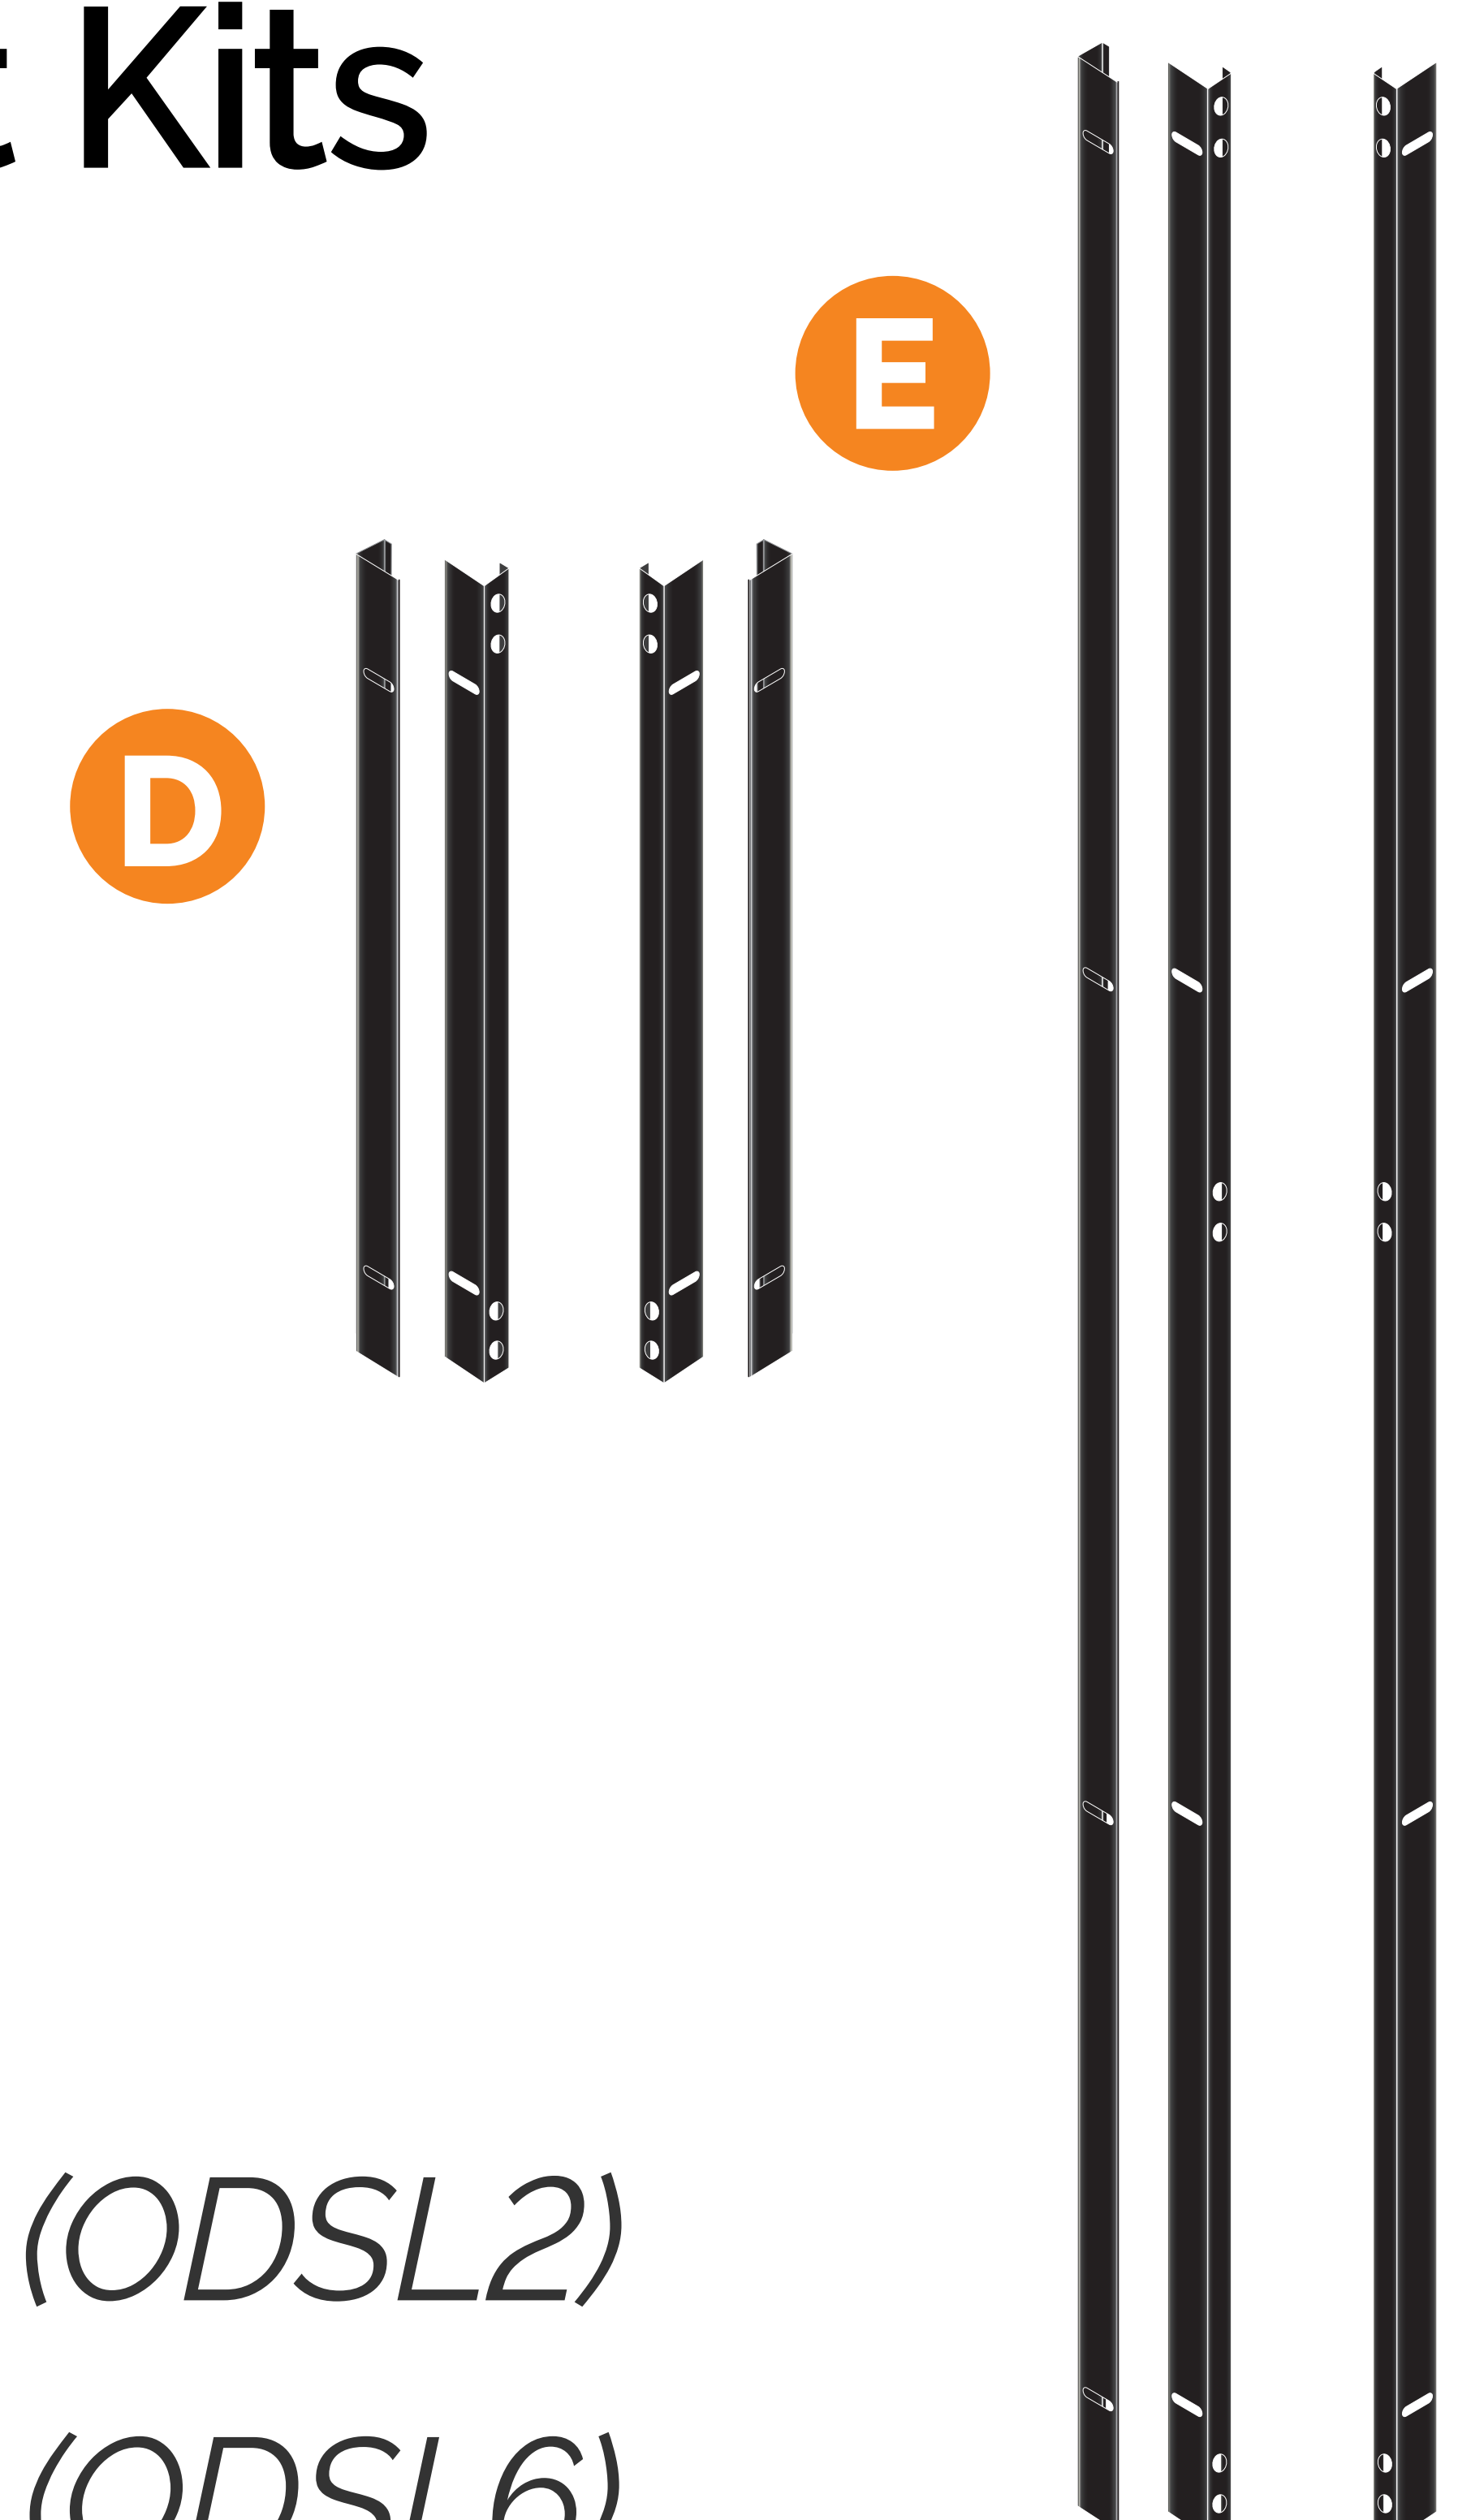

D. 24" Slat Kit Channels (ODSL2)

E. 72" Slat Kit Channels (ODSL6)

Slat Spacers

- Additional Spacers available for increasing spacing in 1/2" increments.



*Sold separately. All hardware is included with Slat Fence Kits and Posts.