


# ASSEMBLY INSTRUCTION

If you have any questions, please feel free to contact us.  
Email: [lowesteam@aminalife.com](mailto:lowesteam@aminalife.com)

## RATTAN SKY BED

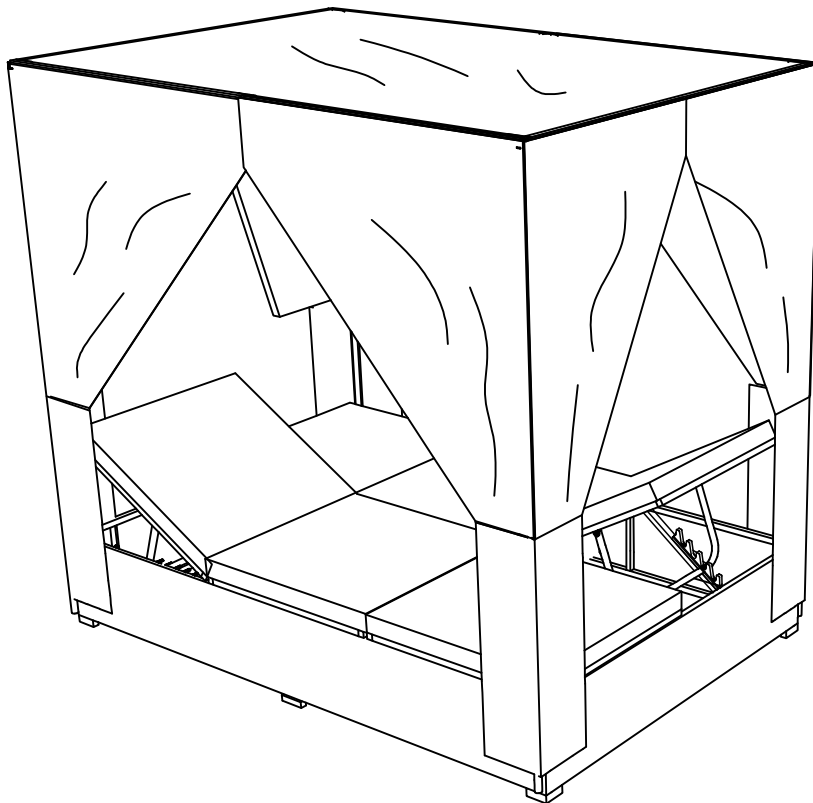


**WF320532**

**WF320533**




















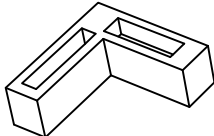


**Notice:**

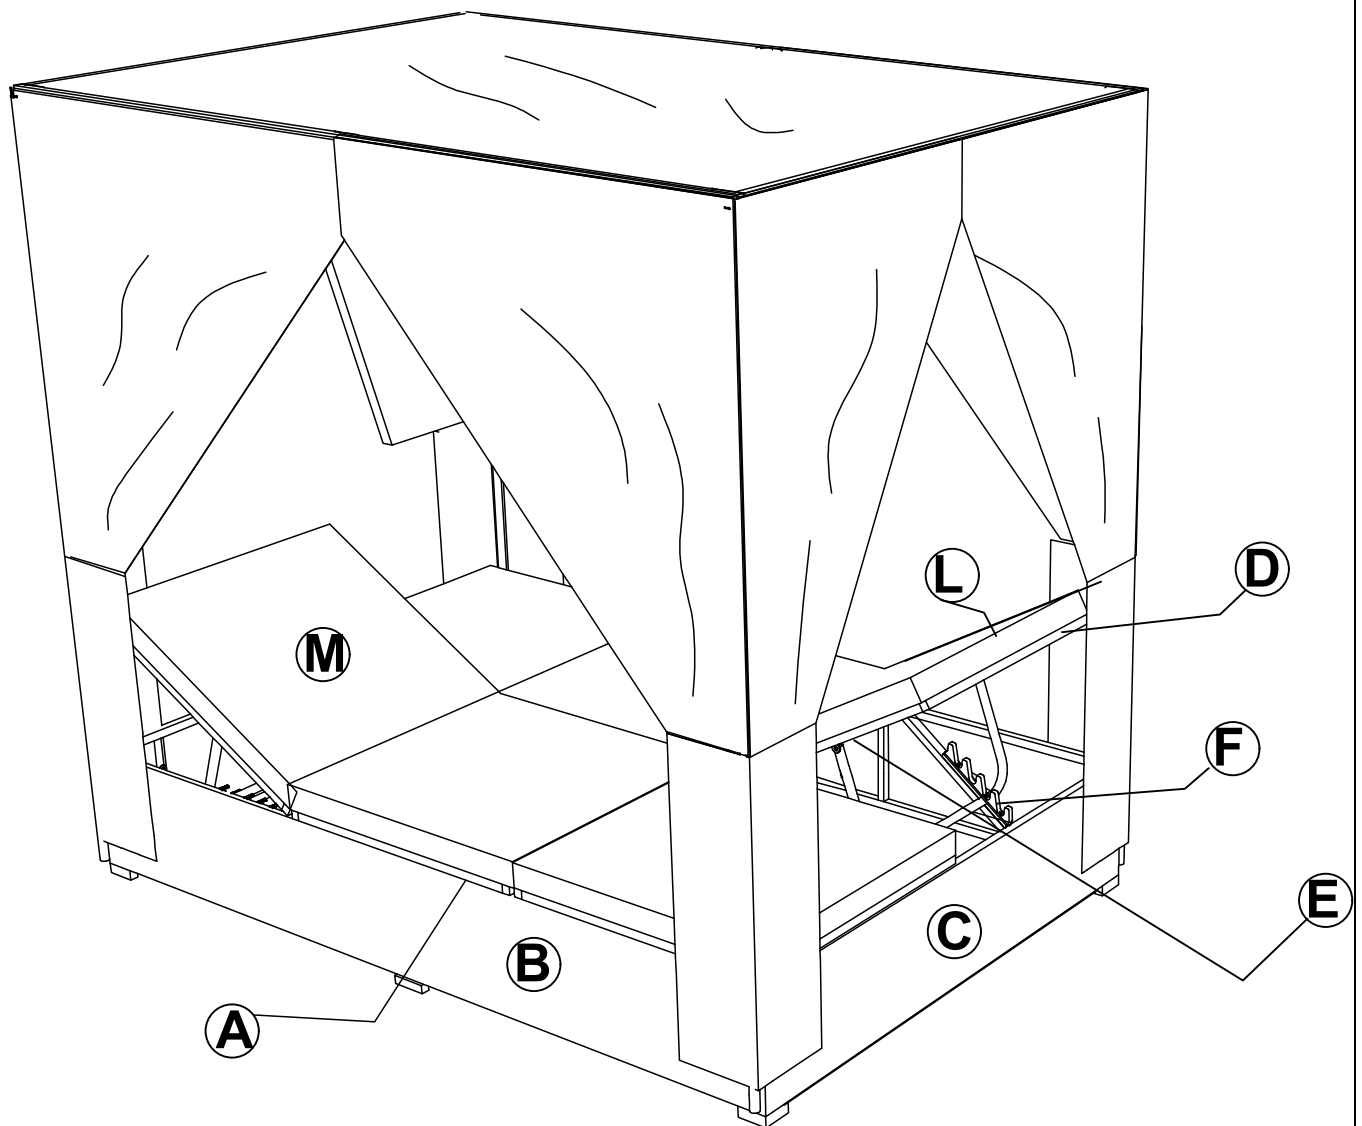1. 50% Tighten before fixing all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note : If one or some screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

# Deployed View

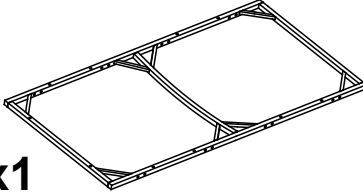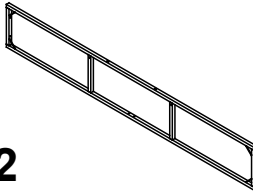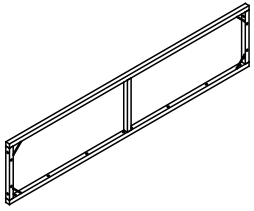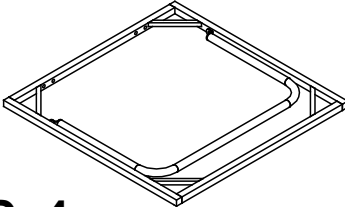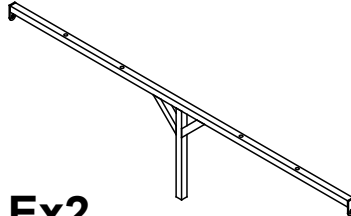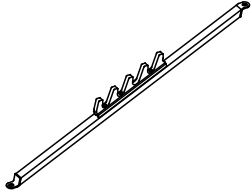

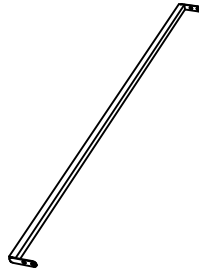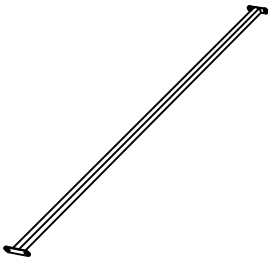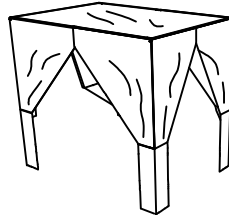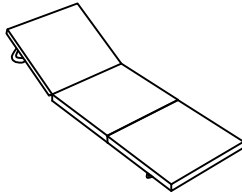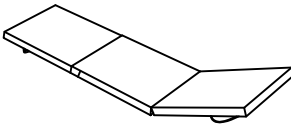
# PART LIST


 <b>Ax1</b>	 <b>Bx2</b>	 <b>Cx2</b>	
 <b>Dx4</b>	 <b>Ex2</b>	 <b>Fx8</b>	
 <b>Gx4</b>	 <b>Hx2</b>	 <b>Ix2</b>	
 <b>Jx1</b>	 <b>Kx1</b>	 <b>Lx1</b>	
 <b>Mx1</b>	<b>1</b>  <b>Bolt 6x40</b> 28 pcs (extra + 2)	<b>2</b>  <b>Bolt 6x30</b> 16 pcs (extra + 2)	<b>3</b>  <b>Bolt 6x20</b> 32 pcs (extra + 3)
<b>4</b>  <b>Bolt 6x15 (thin ear)</b> 32 pcs (extra + 3)	<b>5</b>  <b>Washer 6x16x1</b> 60 pcs (extra +3)	<b>6</b>  <b>Hinge</b> 8 pcs	<b>7</b>  <b>Square bass</b> 4 pcs
<b>8</b>  <b>Straight bass</b> 4 pcs	<b>9</b>  <b>Allen key</b> 2 pcs	<b>Page3</b>	

## CARTON CONTENT :

### WF320532:

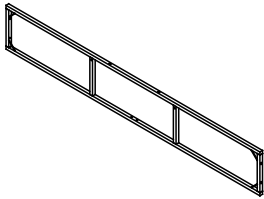

**Bx2**

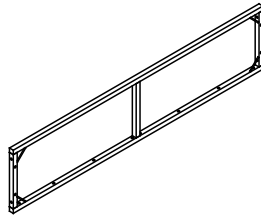


**Cx2**




**Gx4**




**Hx2**

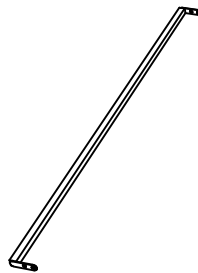


**Ix2**

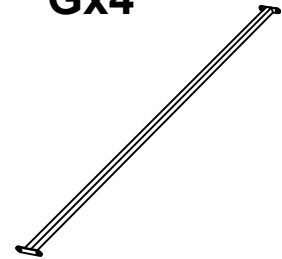

**Jx1**

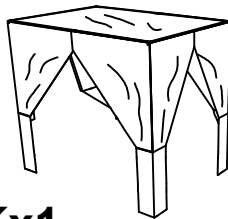


**Kx1**




**Hardware**


### WF320533 :

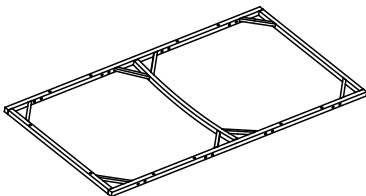


**Ax1**

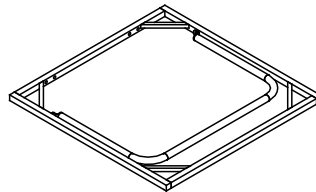


**Dx4**

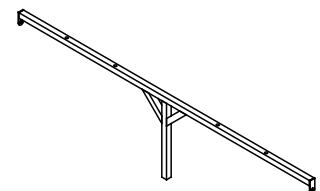


**Ex2**

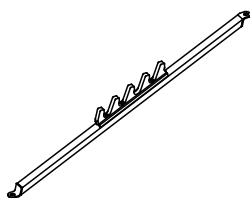

**Fx8**

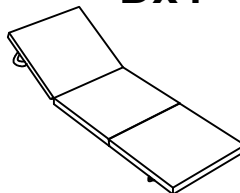


**Lx1**

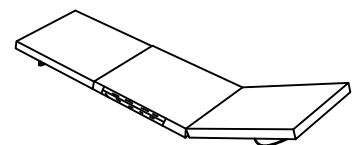


**Mx1**

## Step 1

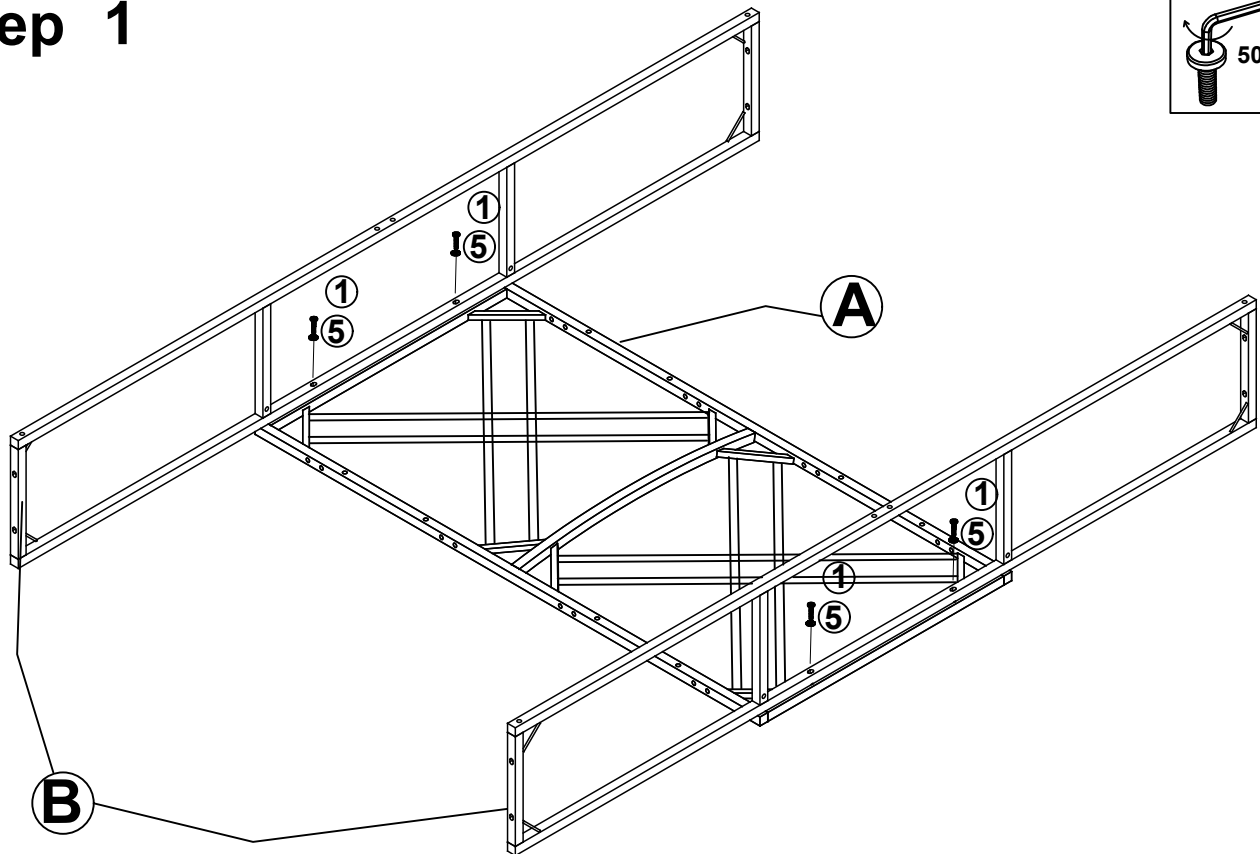


①x4 ⑤x4

## Step 2

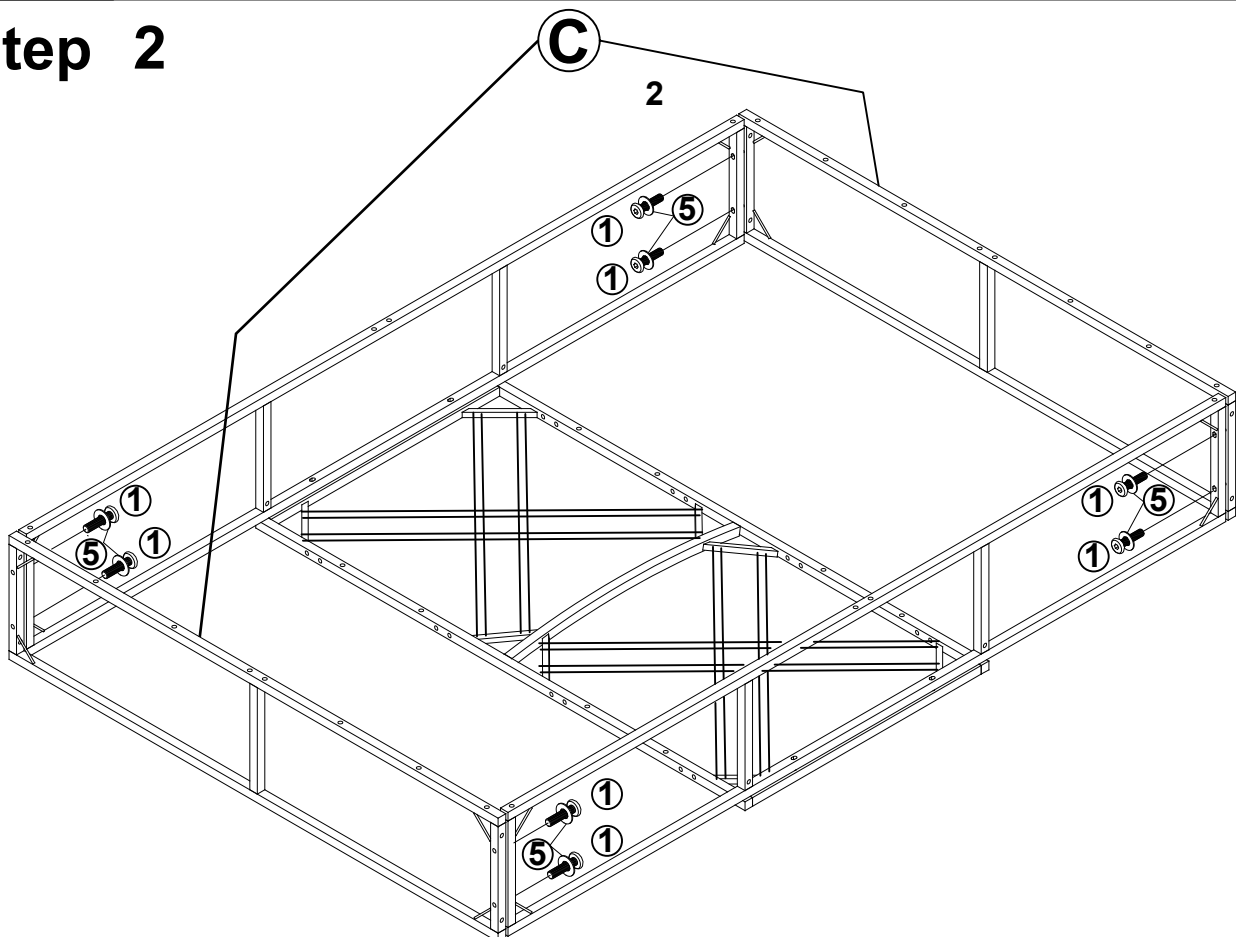


①x8 ⑤x8

## Step 3

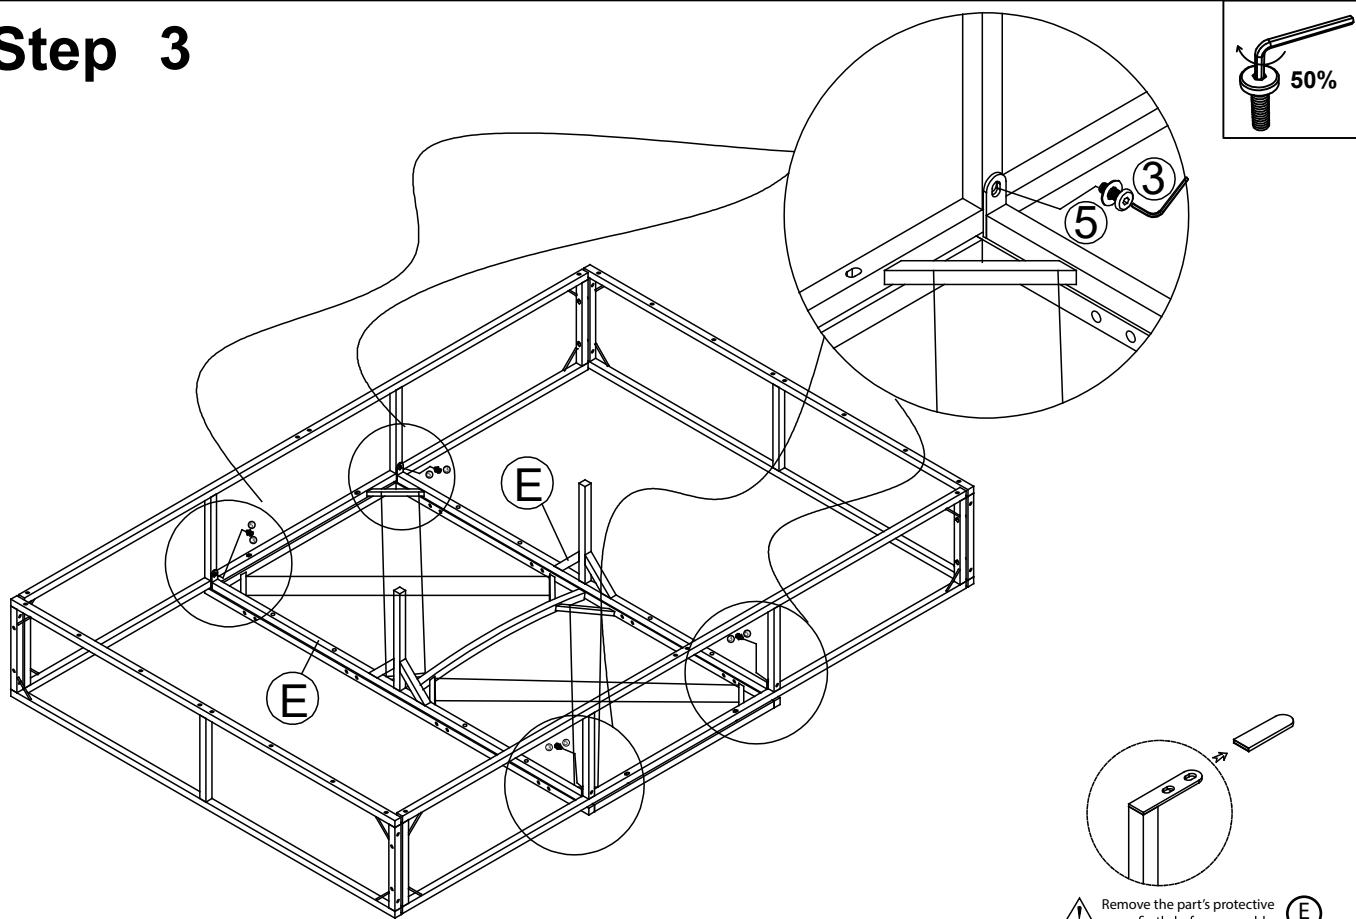


③x4 ⑤x4

## Step 4

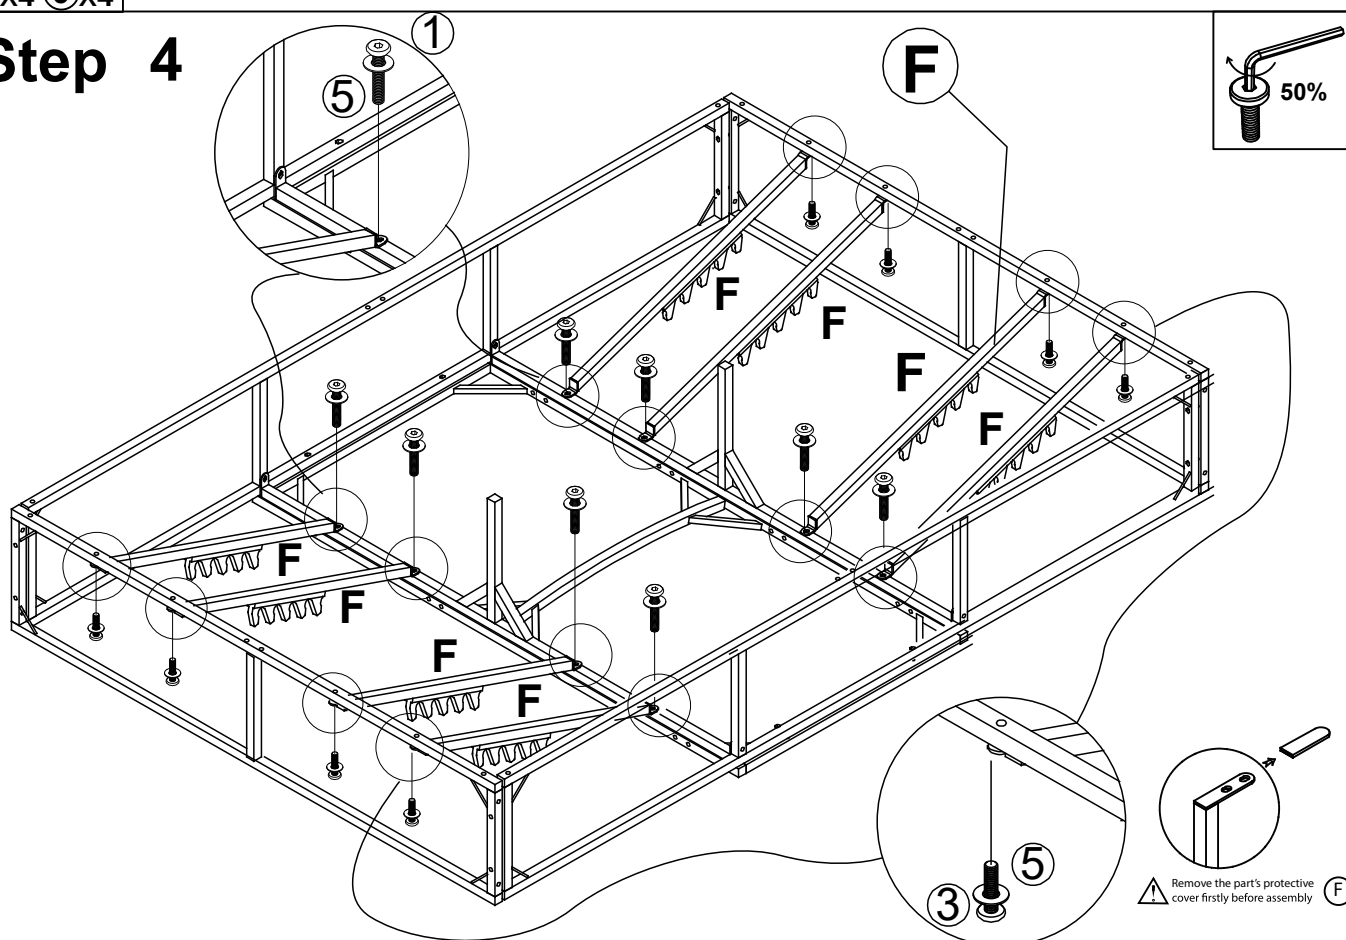


**①x8 ③x8 ⑤x16**


## Step 5

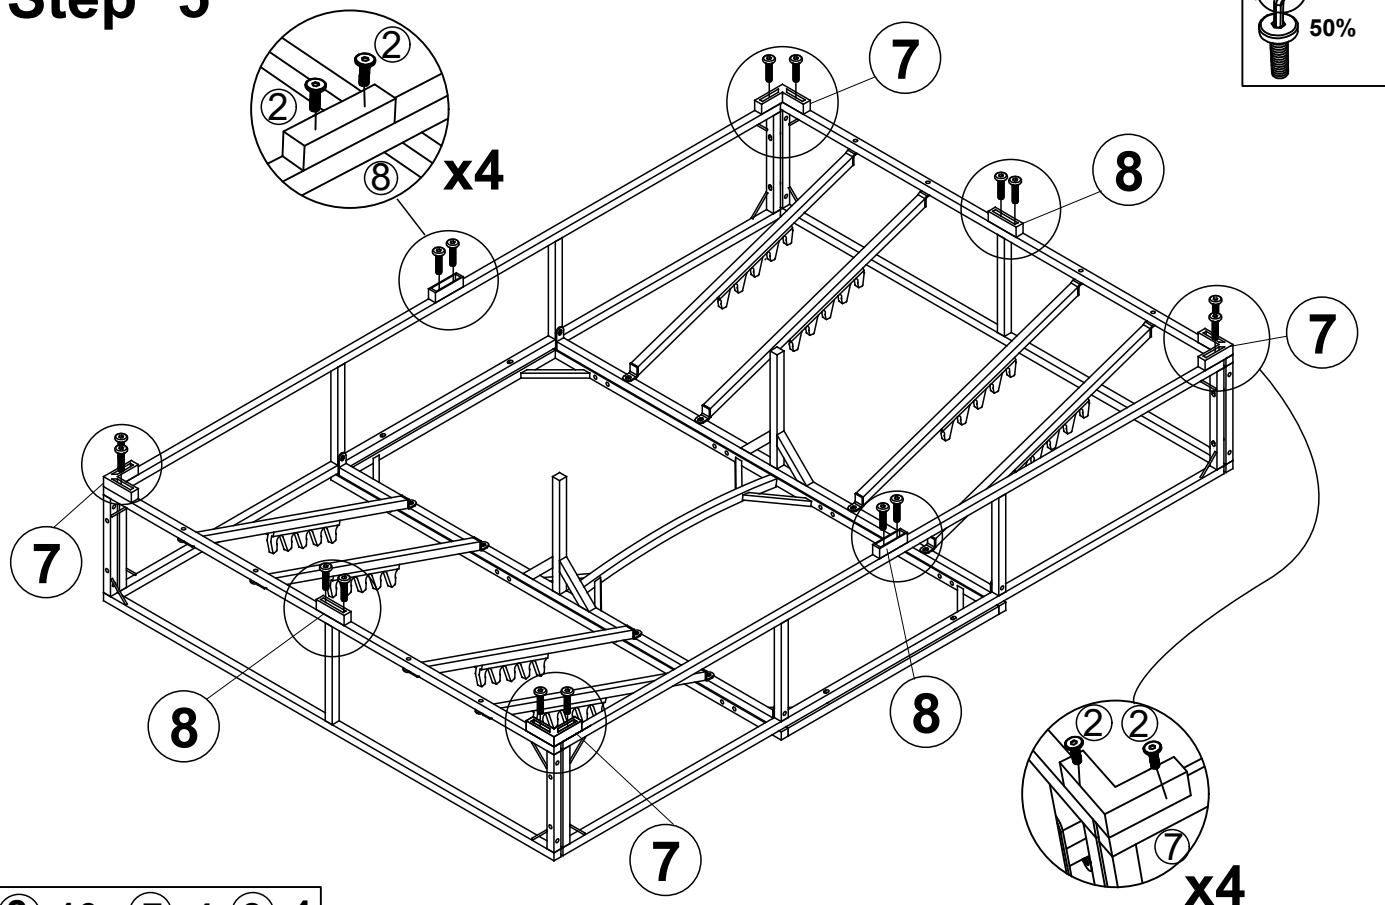


## Step 6

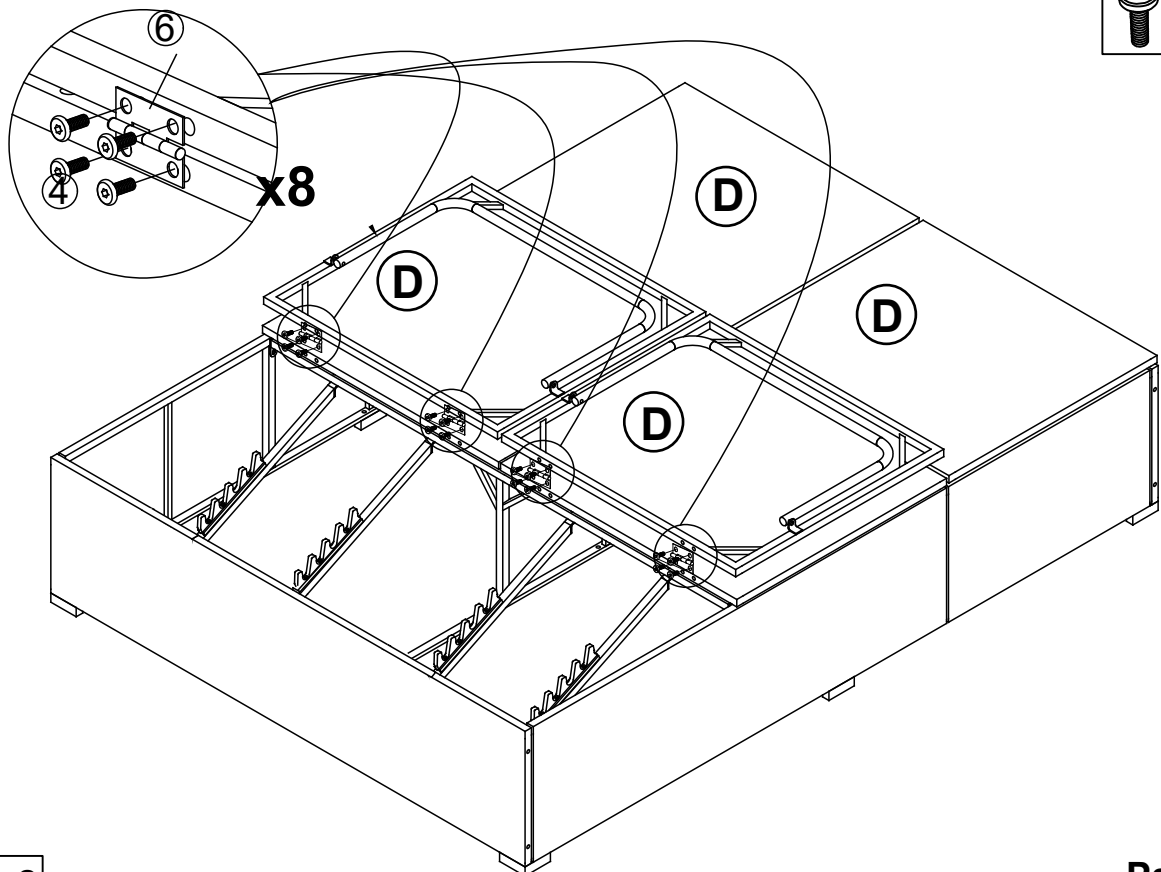

## Step 7

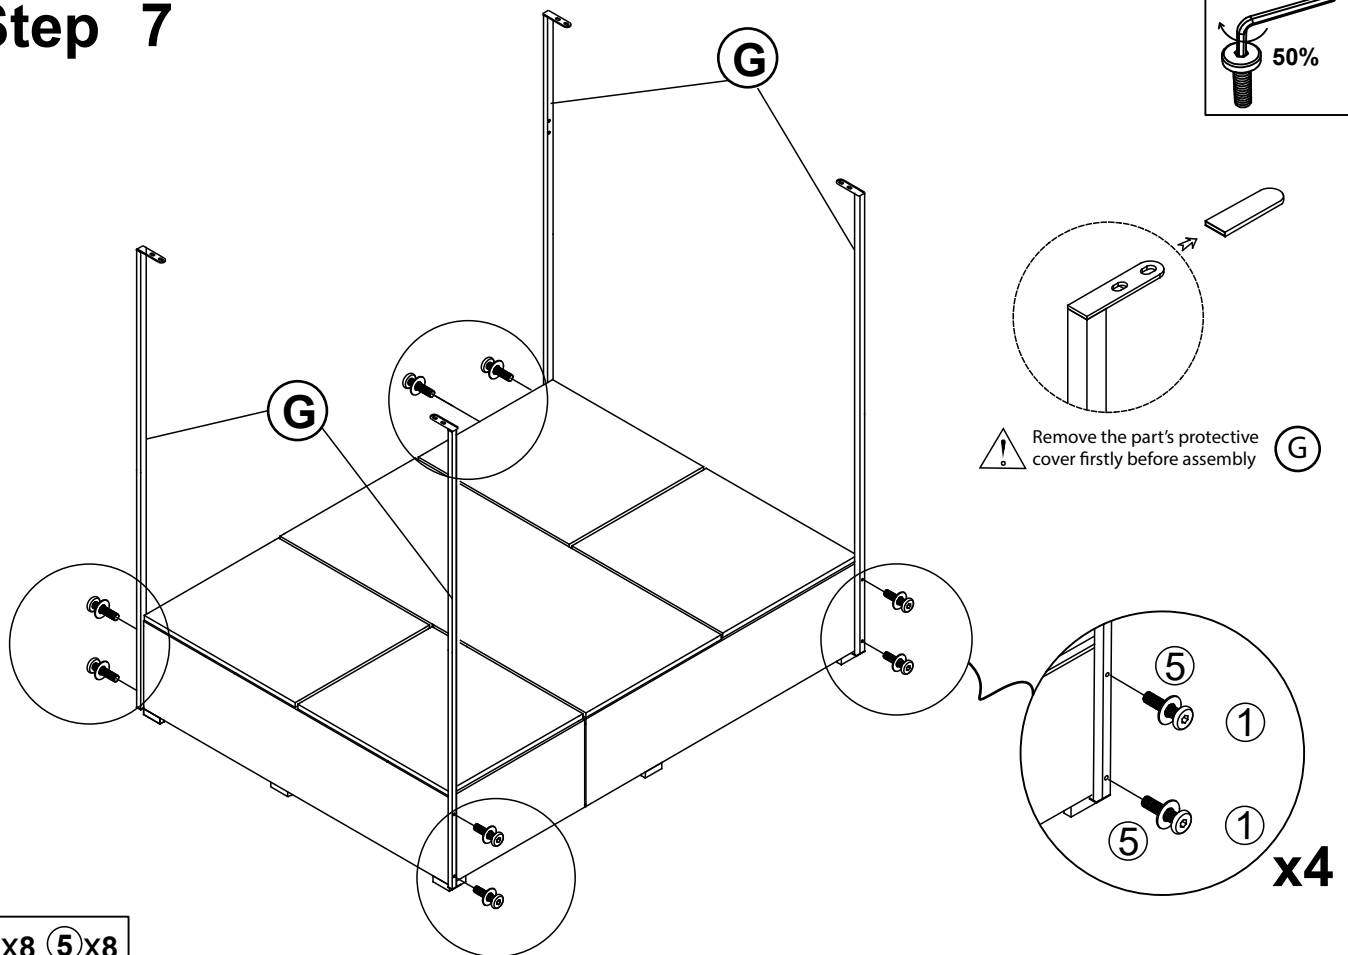


## Step 8

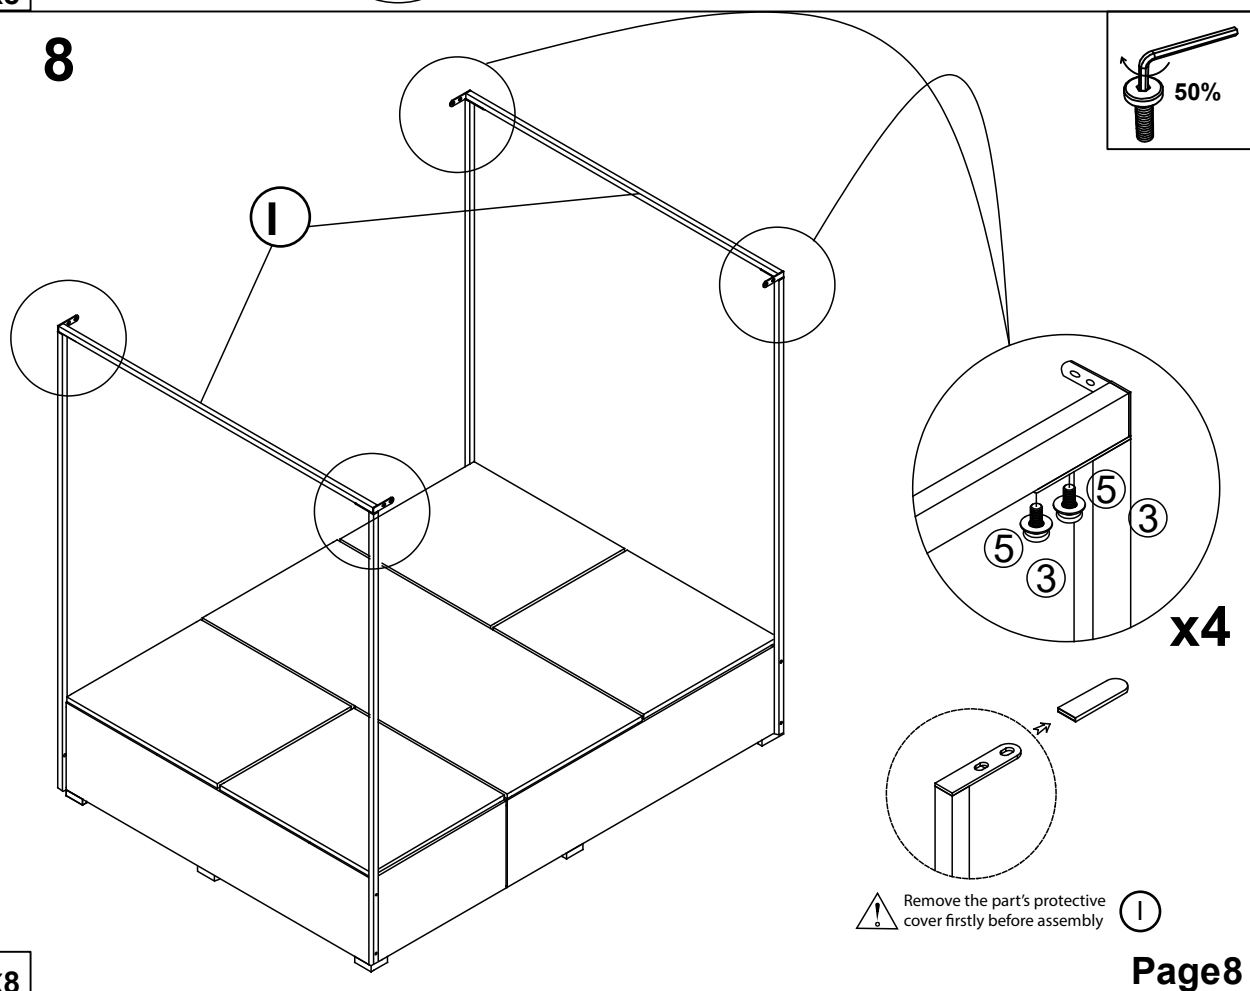




## Step 9

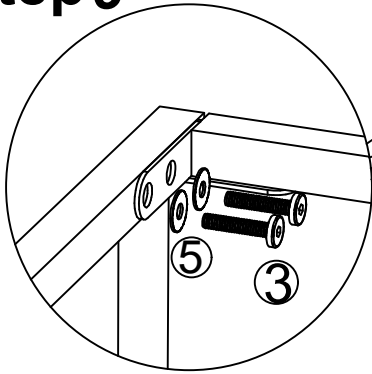


**x4**

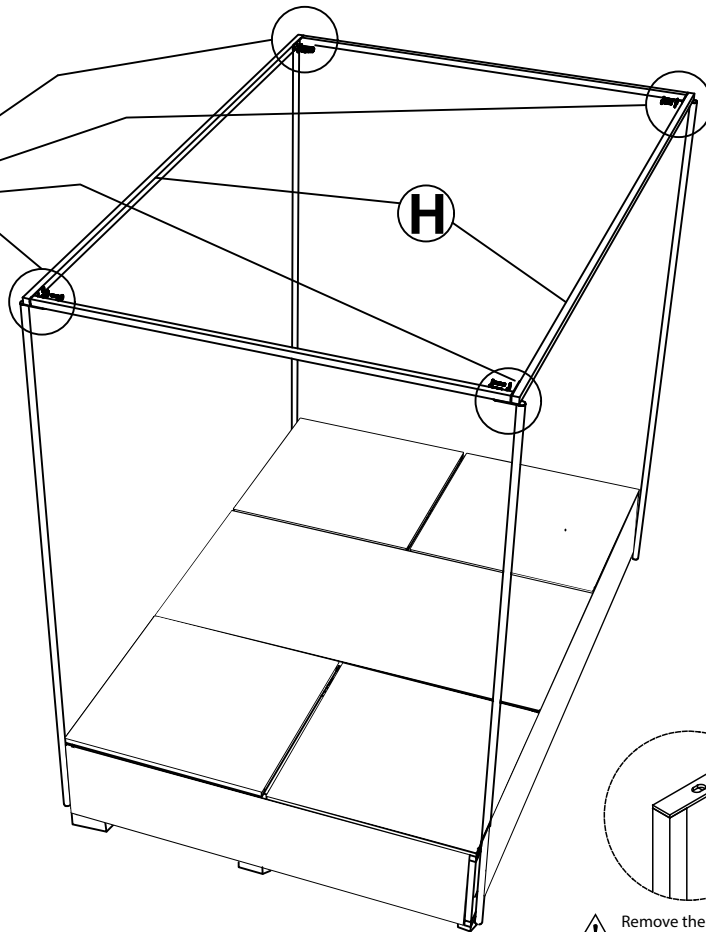


③x8 ⑤x8

⚠ Remove the part's protective cover firstly before assembly (H)

## Step 10

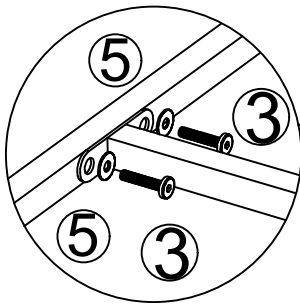

**x2**

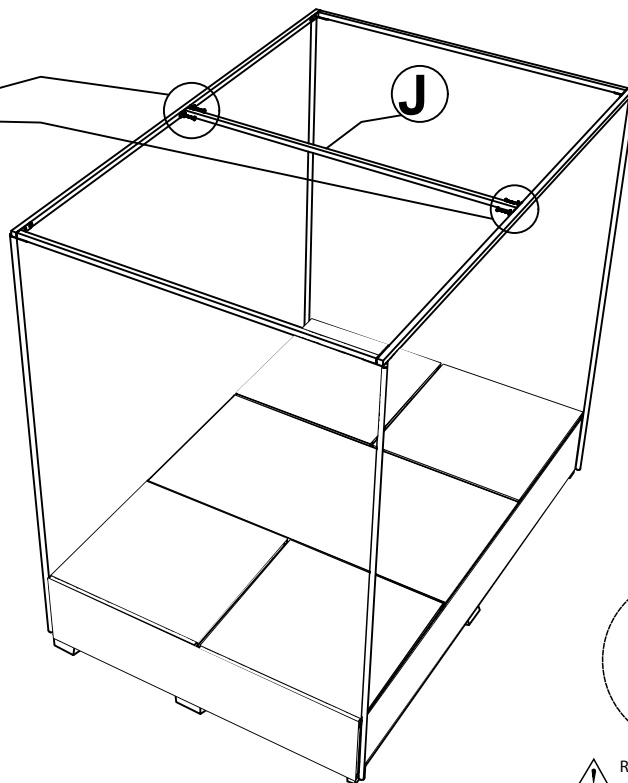

⚠ Remove the part's protective cover firstly before assembly (J)

③x4 ⑤x4

## Step 11

