


1

Align swing guard on door and jamb, drill pilot holes, then secure with 7 screws included.

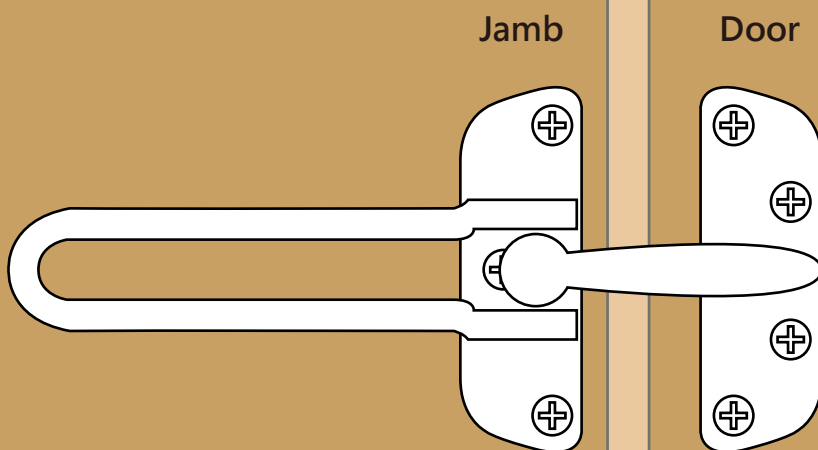

2

Try swing guard with door opening /closing, and re-position swing guard as needed.

