
ASSEMBLY INSTRUCTION Item: N715P290093 SIDEBOARD

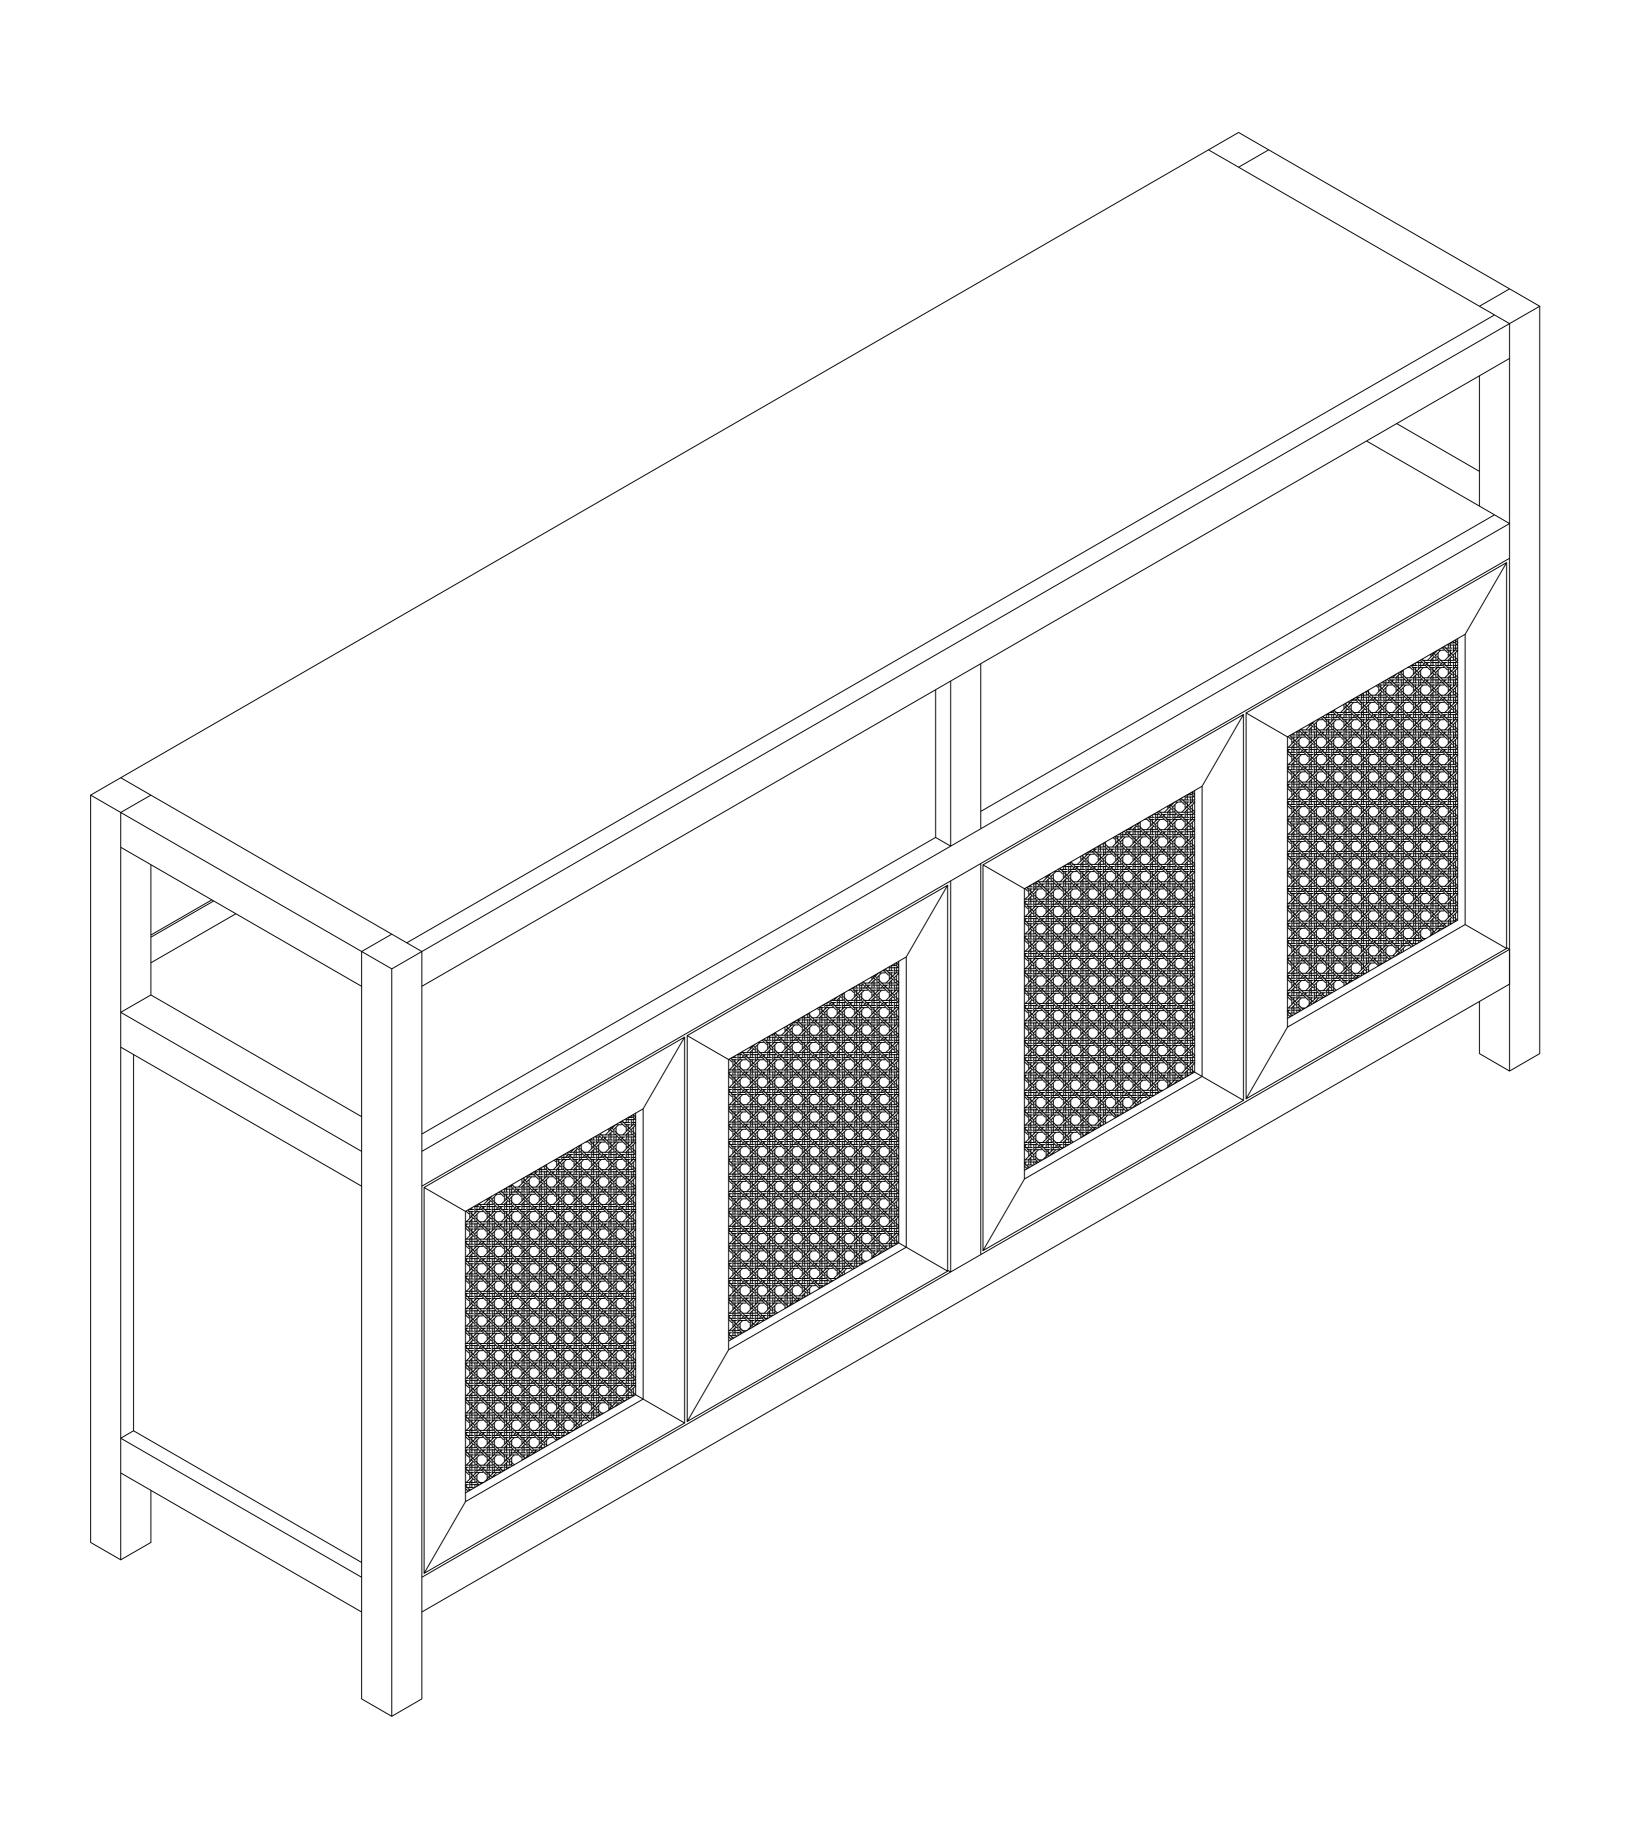

Important - Please read these instructions fully before starting assembly

- Check you have all the components and tools listed on the following pages.
- Remove all fittings from the plastic bags and separate them into their groups.
- Keep children and animals away from the work area, small parts could choke if swallowed.
- Make sure you have enough space to layout the parts before starting.

- During assembly do not stand or put weight on the product, this could cause damage.
- Assemble the item as close to its final position (in the same room) as possible.
- Assemble on a soft level surface to avoid damaging the unit or your floor.
- Parts of the assembly will be easier with 2 people.



To reduce the likelihood of damaging your product please ensure that

your power drill is set on low torque setting.

Care and maintenance

- Only clean using a damp cloth and mild detergent, do not use bleach or abrasive cleaners.
- From time to time check that there are no loose screws on this dunit.
 - This product should not be discarded with household waste. Take to your local authority waste disposal centre.

Handy Hints

- Assemble all parts and bolts loosely during assembly, only once the product is complete should you fully tighten the bolts
- Regularly check and ensure that all bolts and fittings are tightened properly.

WARNING

In order to help prevent overturning - please follow these instructions

To help prevent product toppling over please follow the below steps:-

Use the anti tip strap or wall fixing method provided (if applicable)

Do not allow children to climb or hang on the furniture

Do not open more than one drawer at a time


Do not place heavy items in the top drawers

Do not place heavy items on top of the furniture, unless the furniture has been designed for this purpose

Please note that only the anti tip strap is provided.

You will need to provide wall plugs and screws applicable for your wall type

Tools required

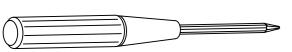



Philips screwdriver (medium & large)


Ruler - Use this ruler to help correctly identify the screws

0 5 10 15 20 25 30 35 40 45 50 55 60 65 70 75 80 85 90 95 100 105 110 115 120 125 130 135 140 145 150 155 160 165 170

The screws length is measured from the head to the point (16mm screw shown).

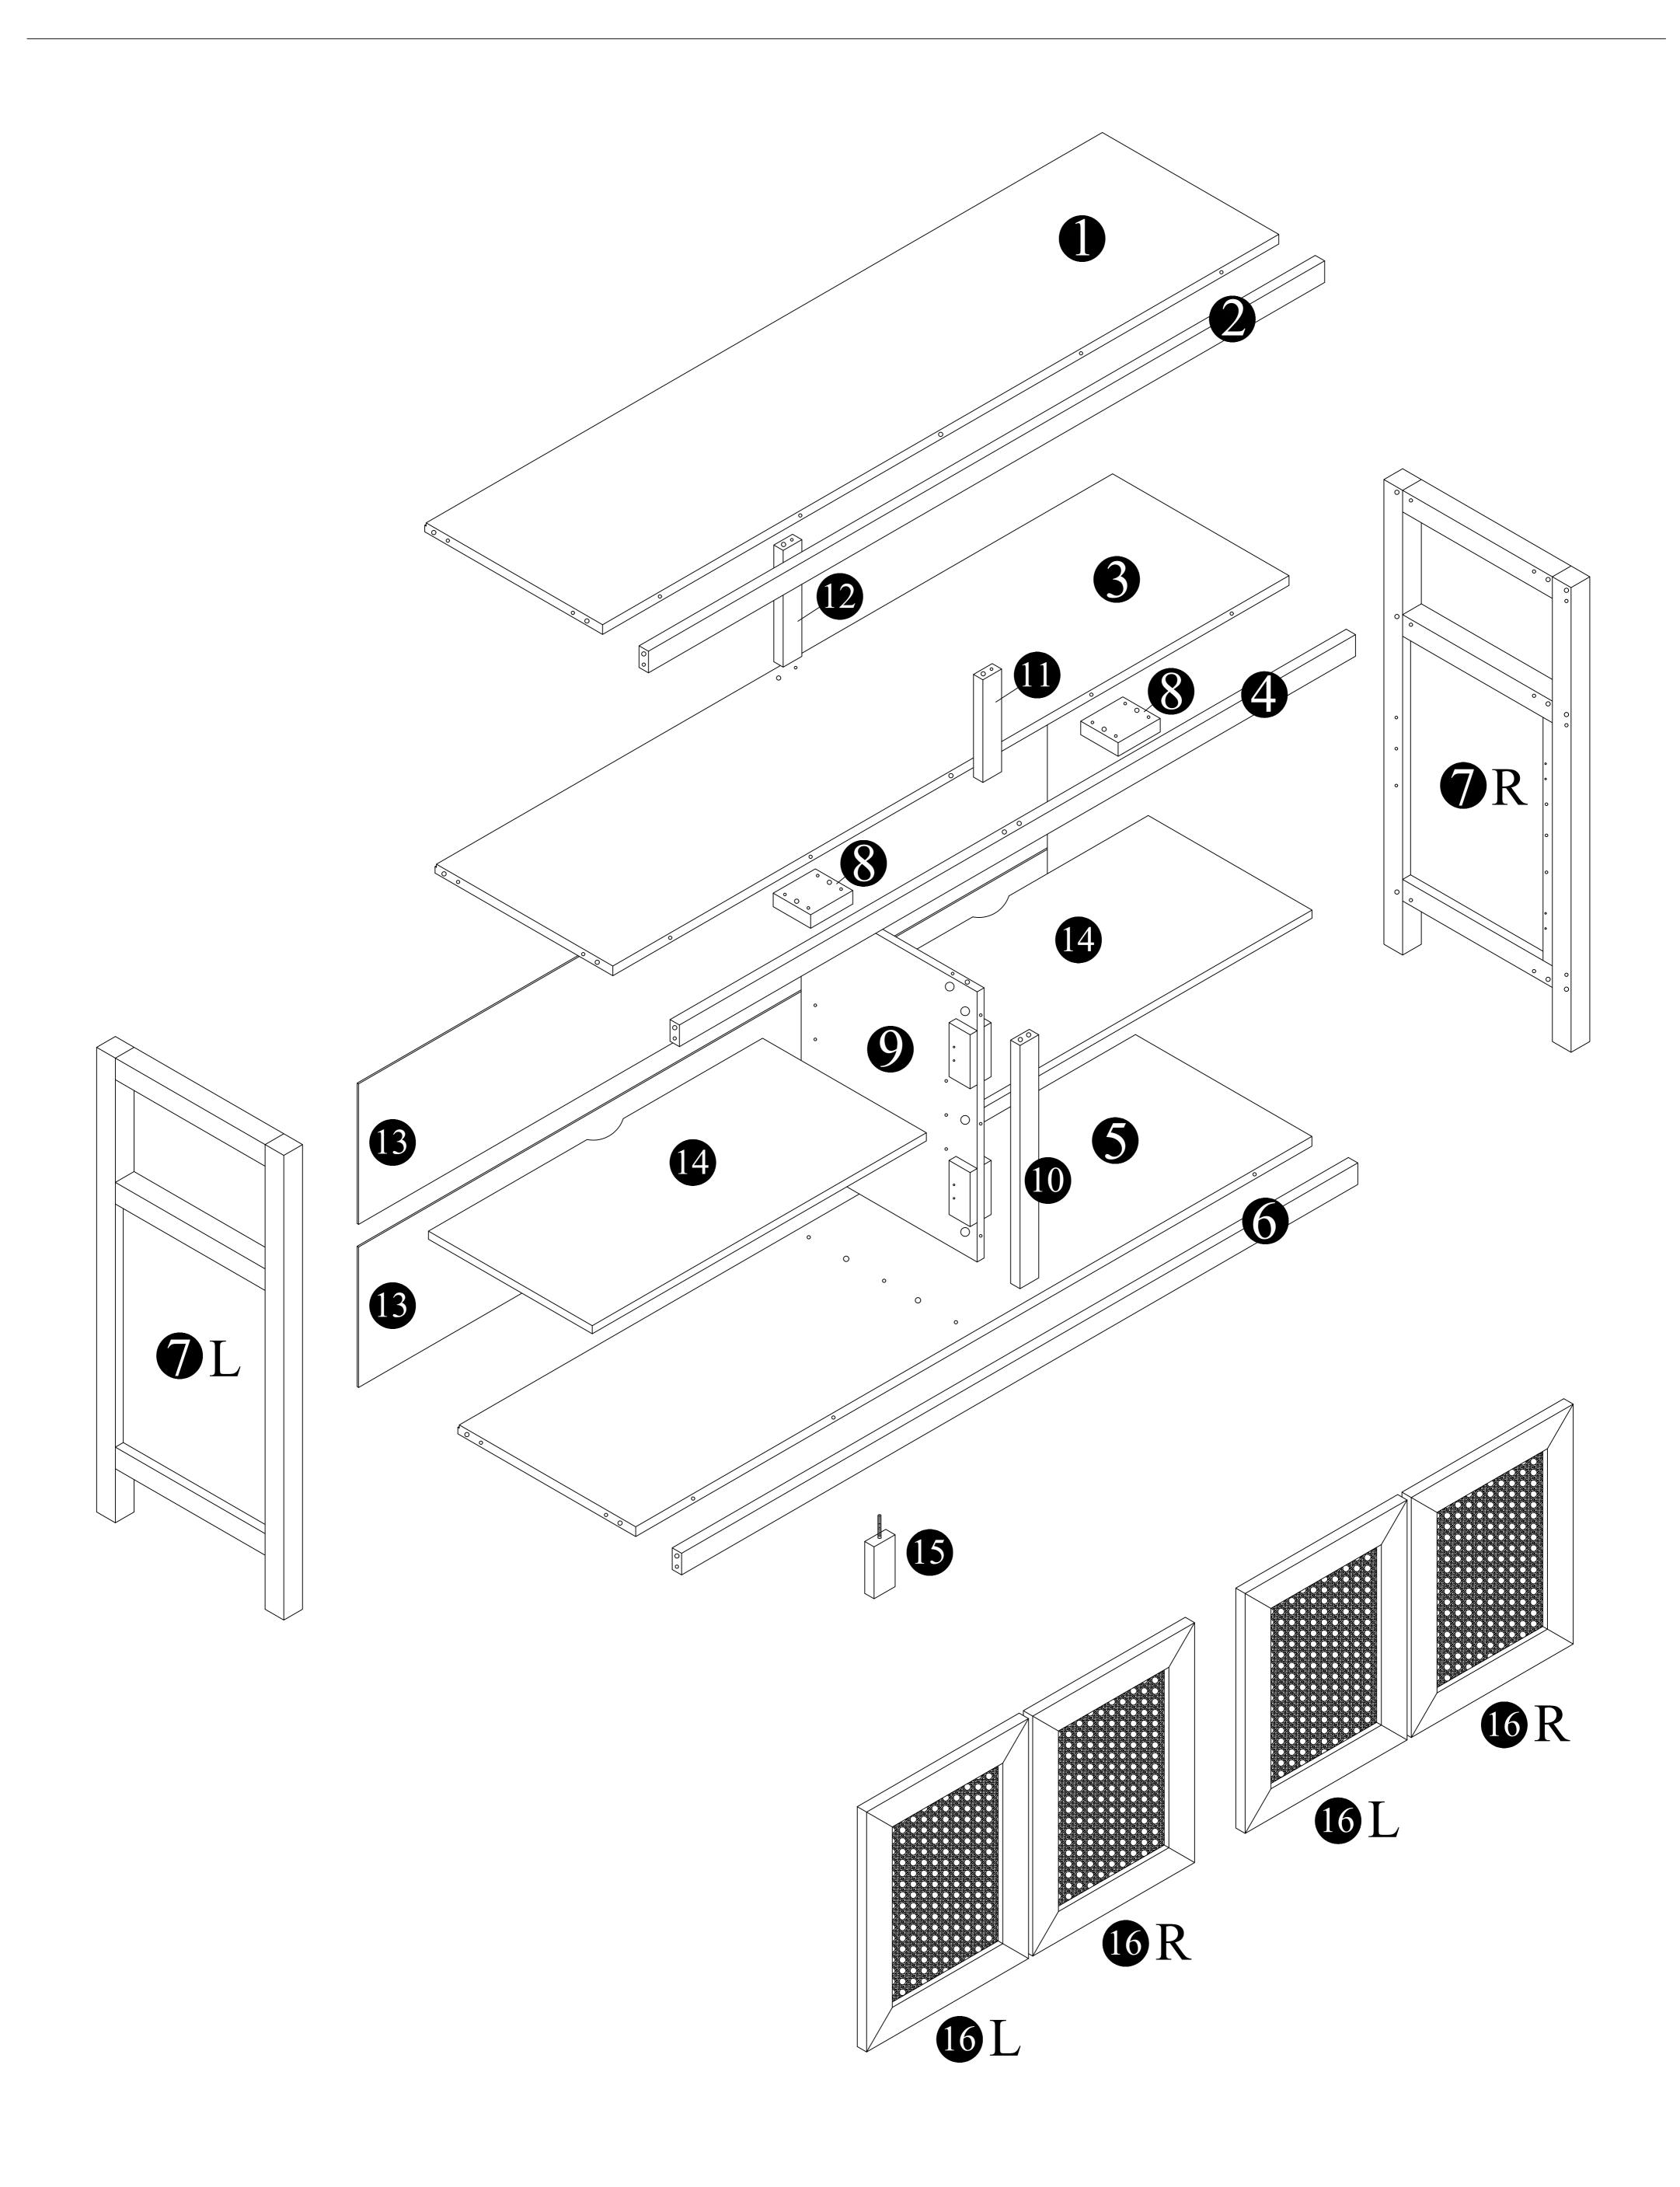


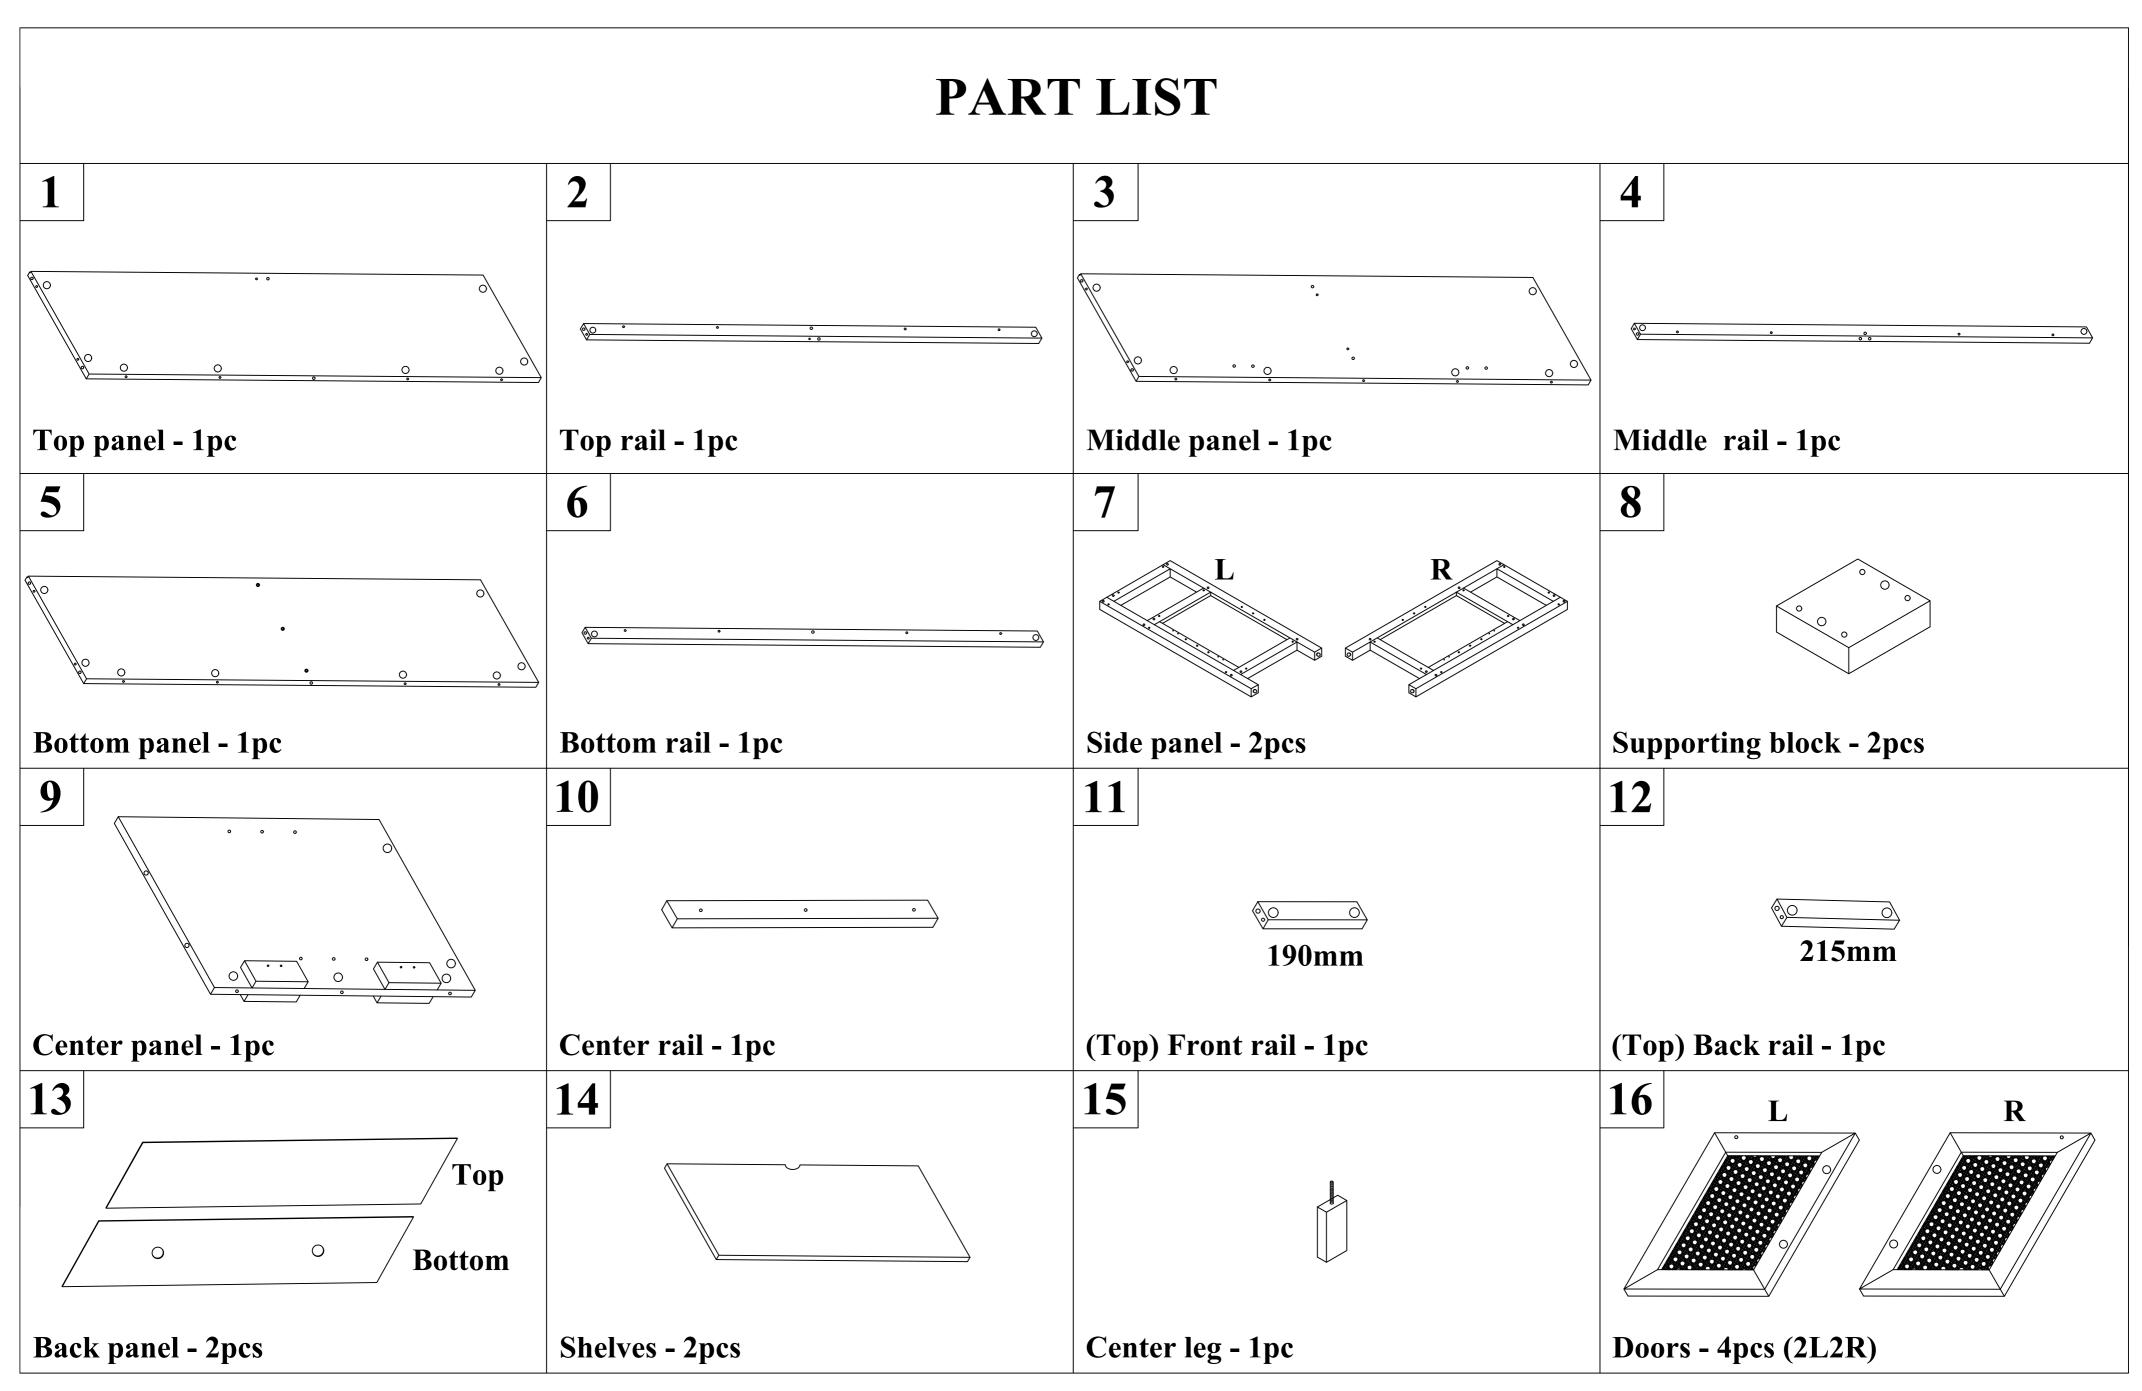

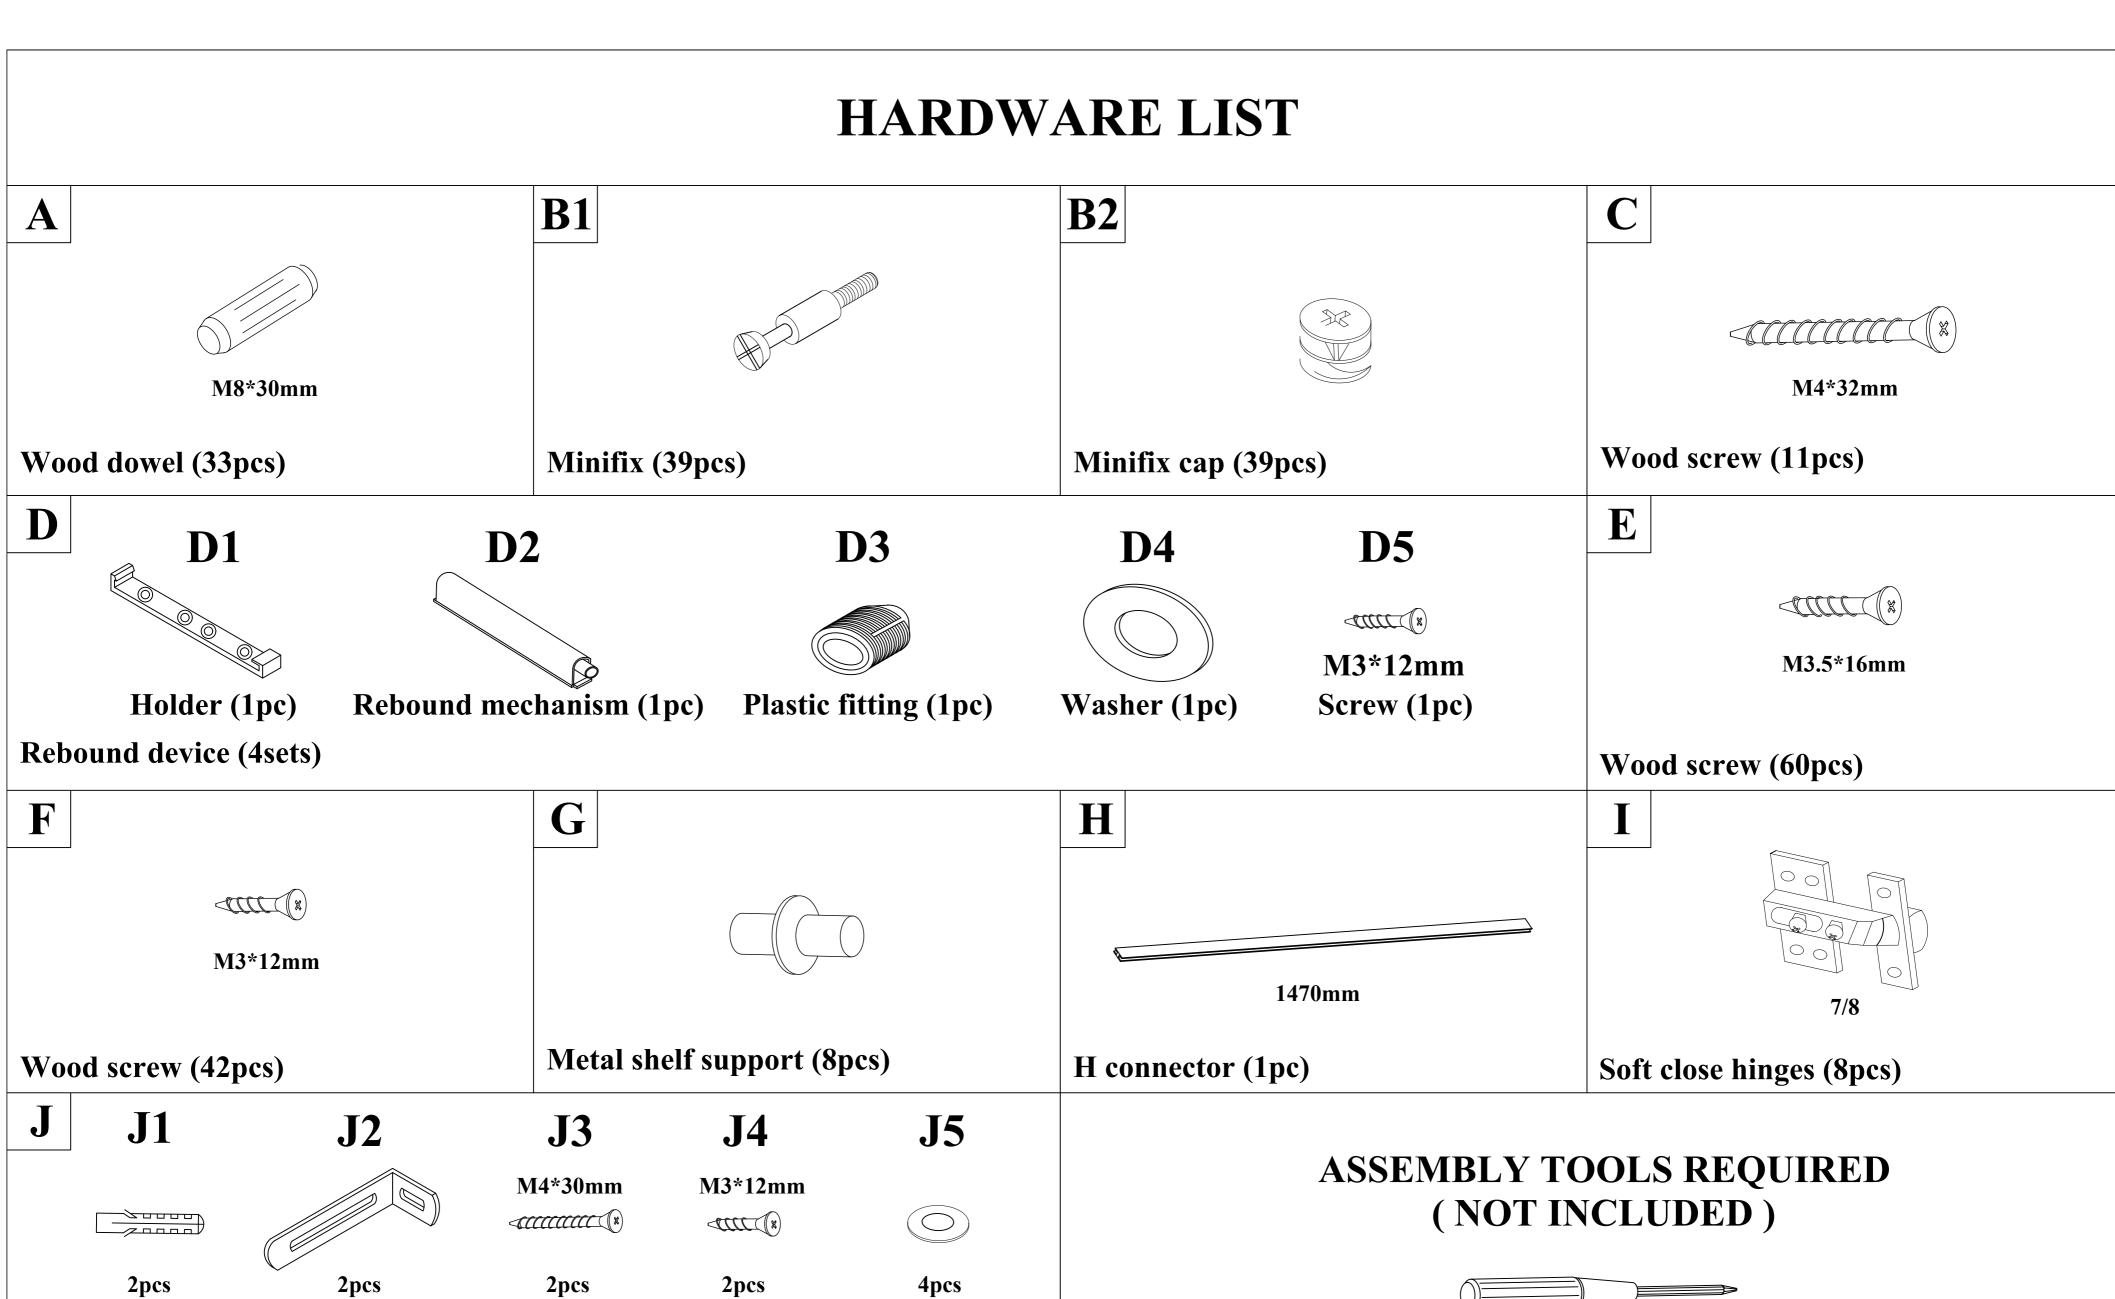


PAGE 4 OF 15 MADE IN MALAYSIA


Anti tipping kit

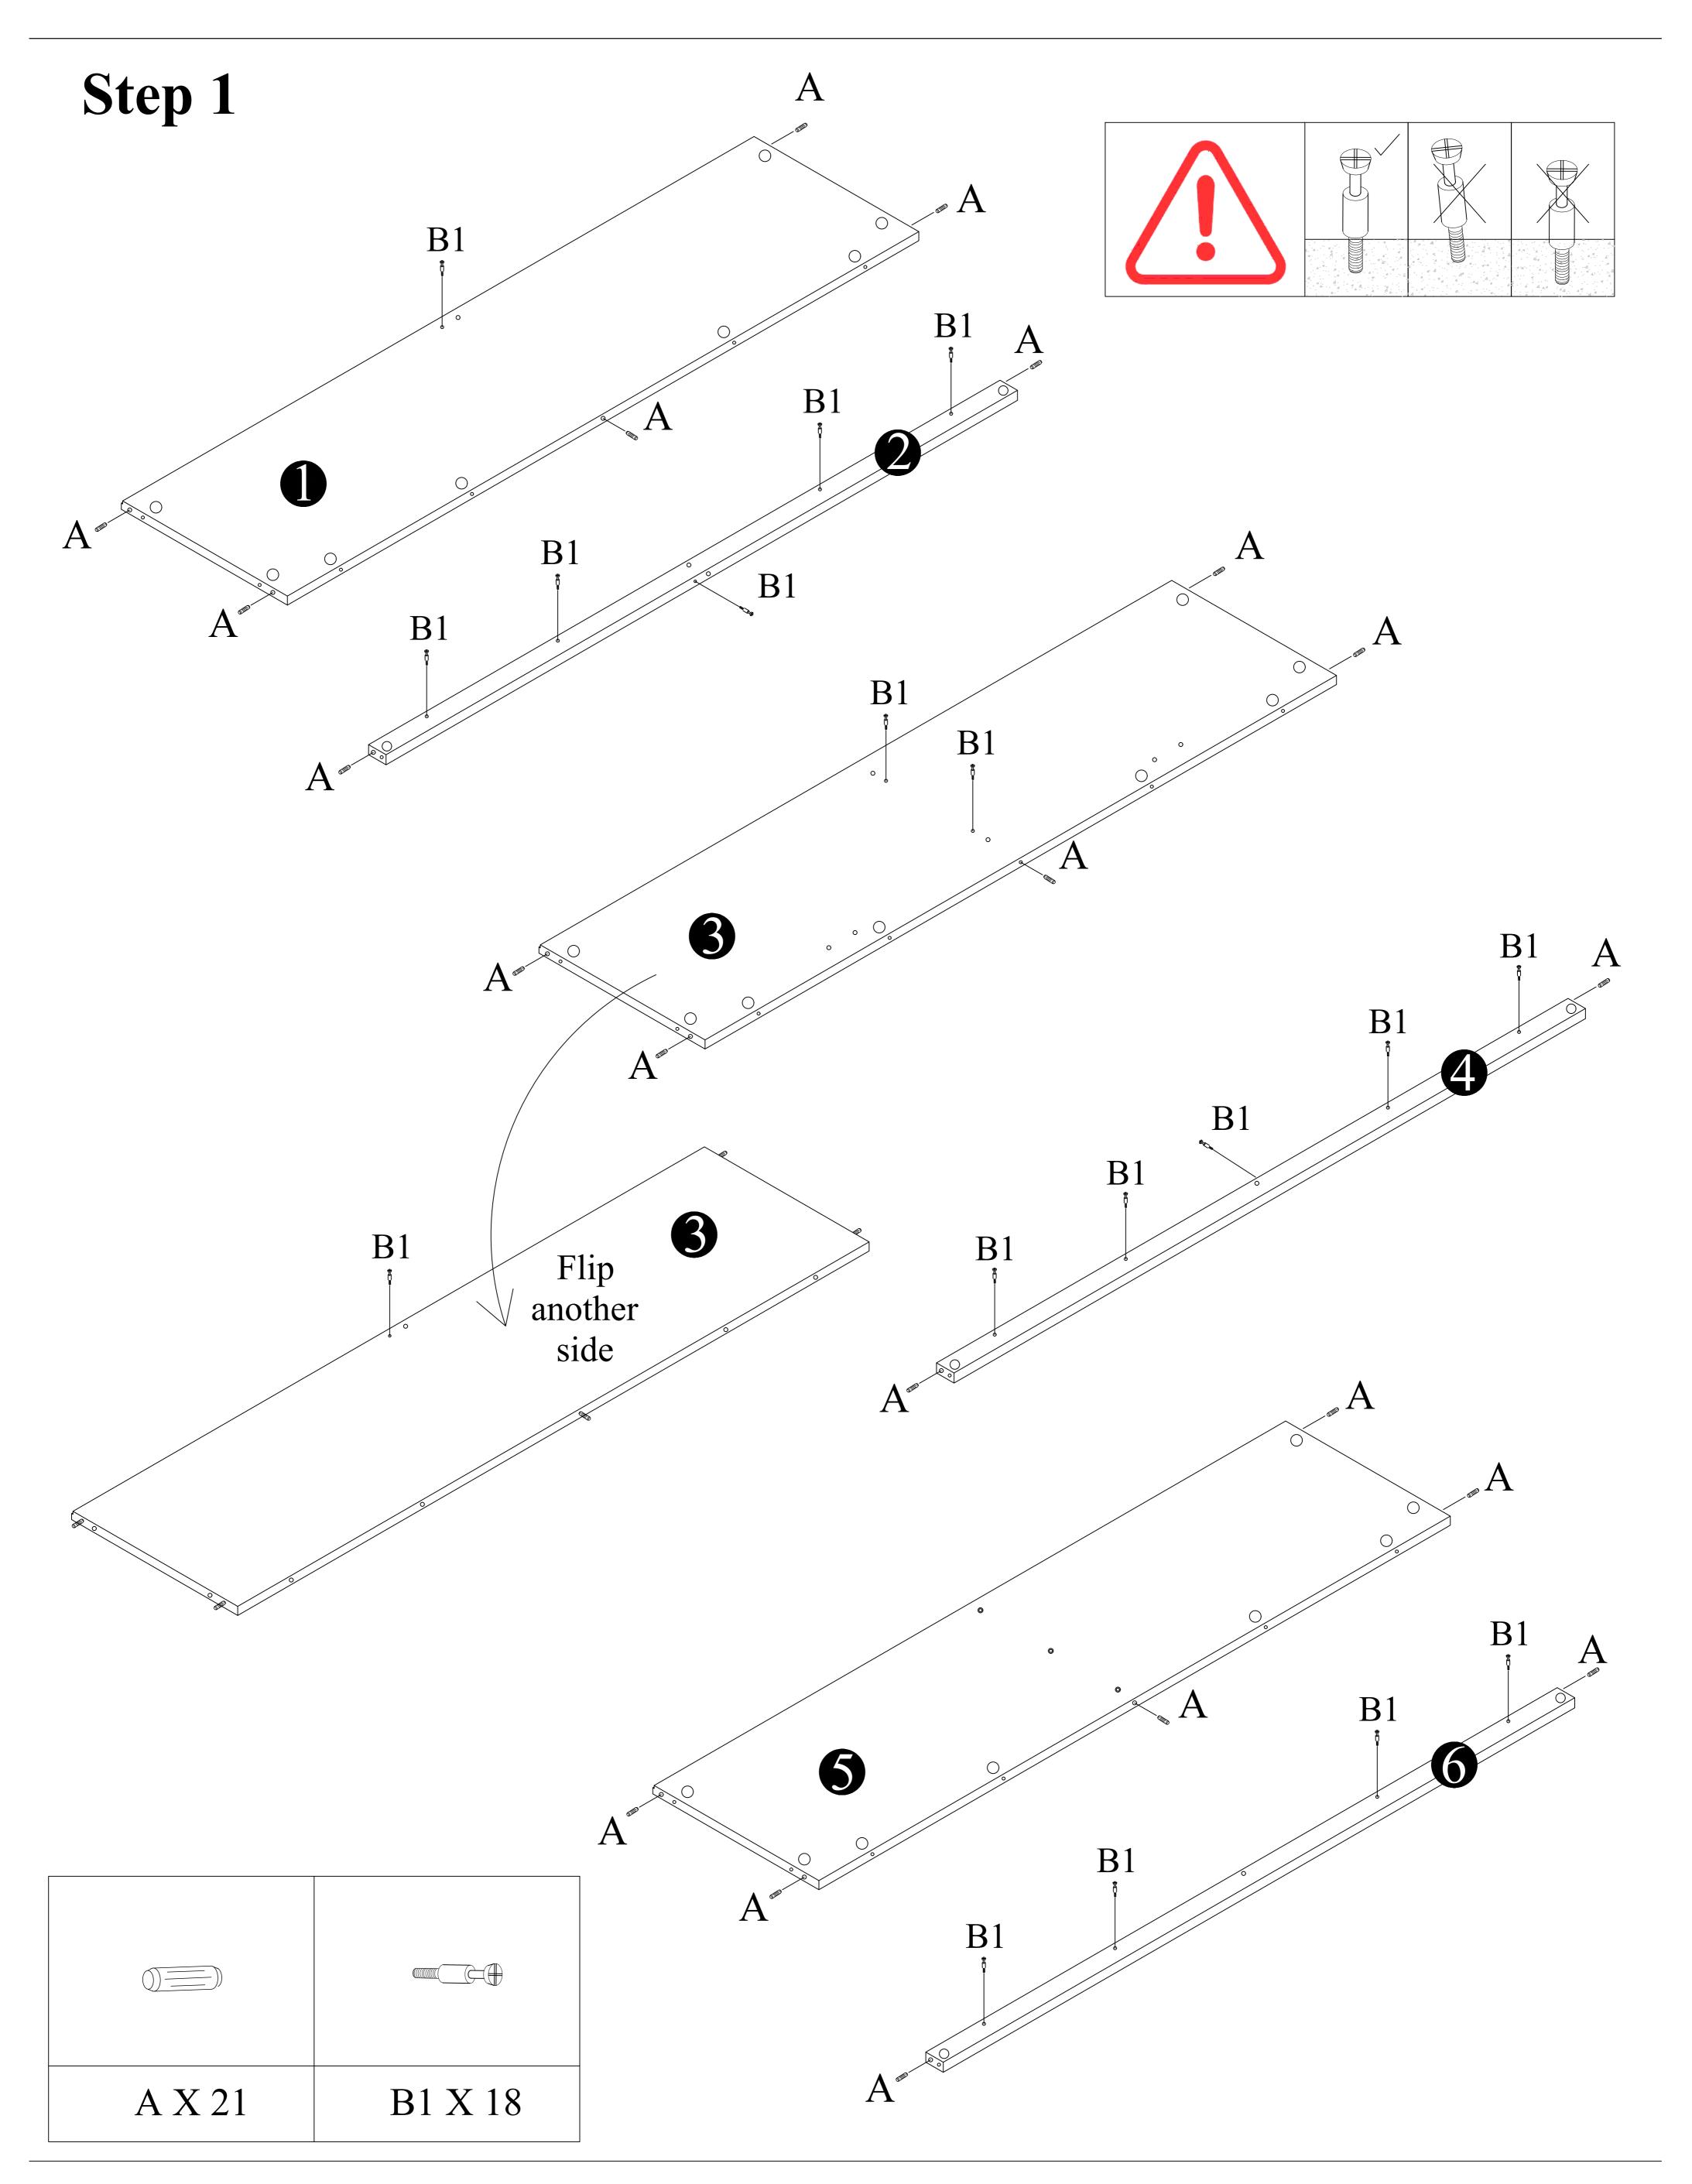


Step 2

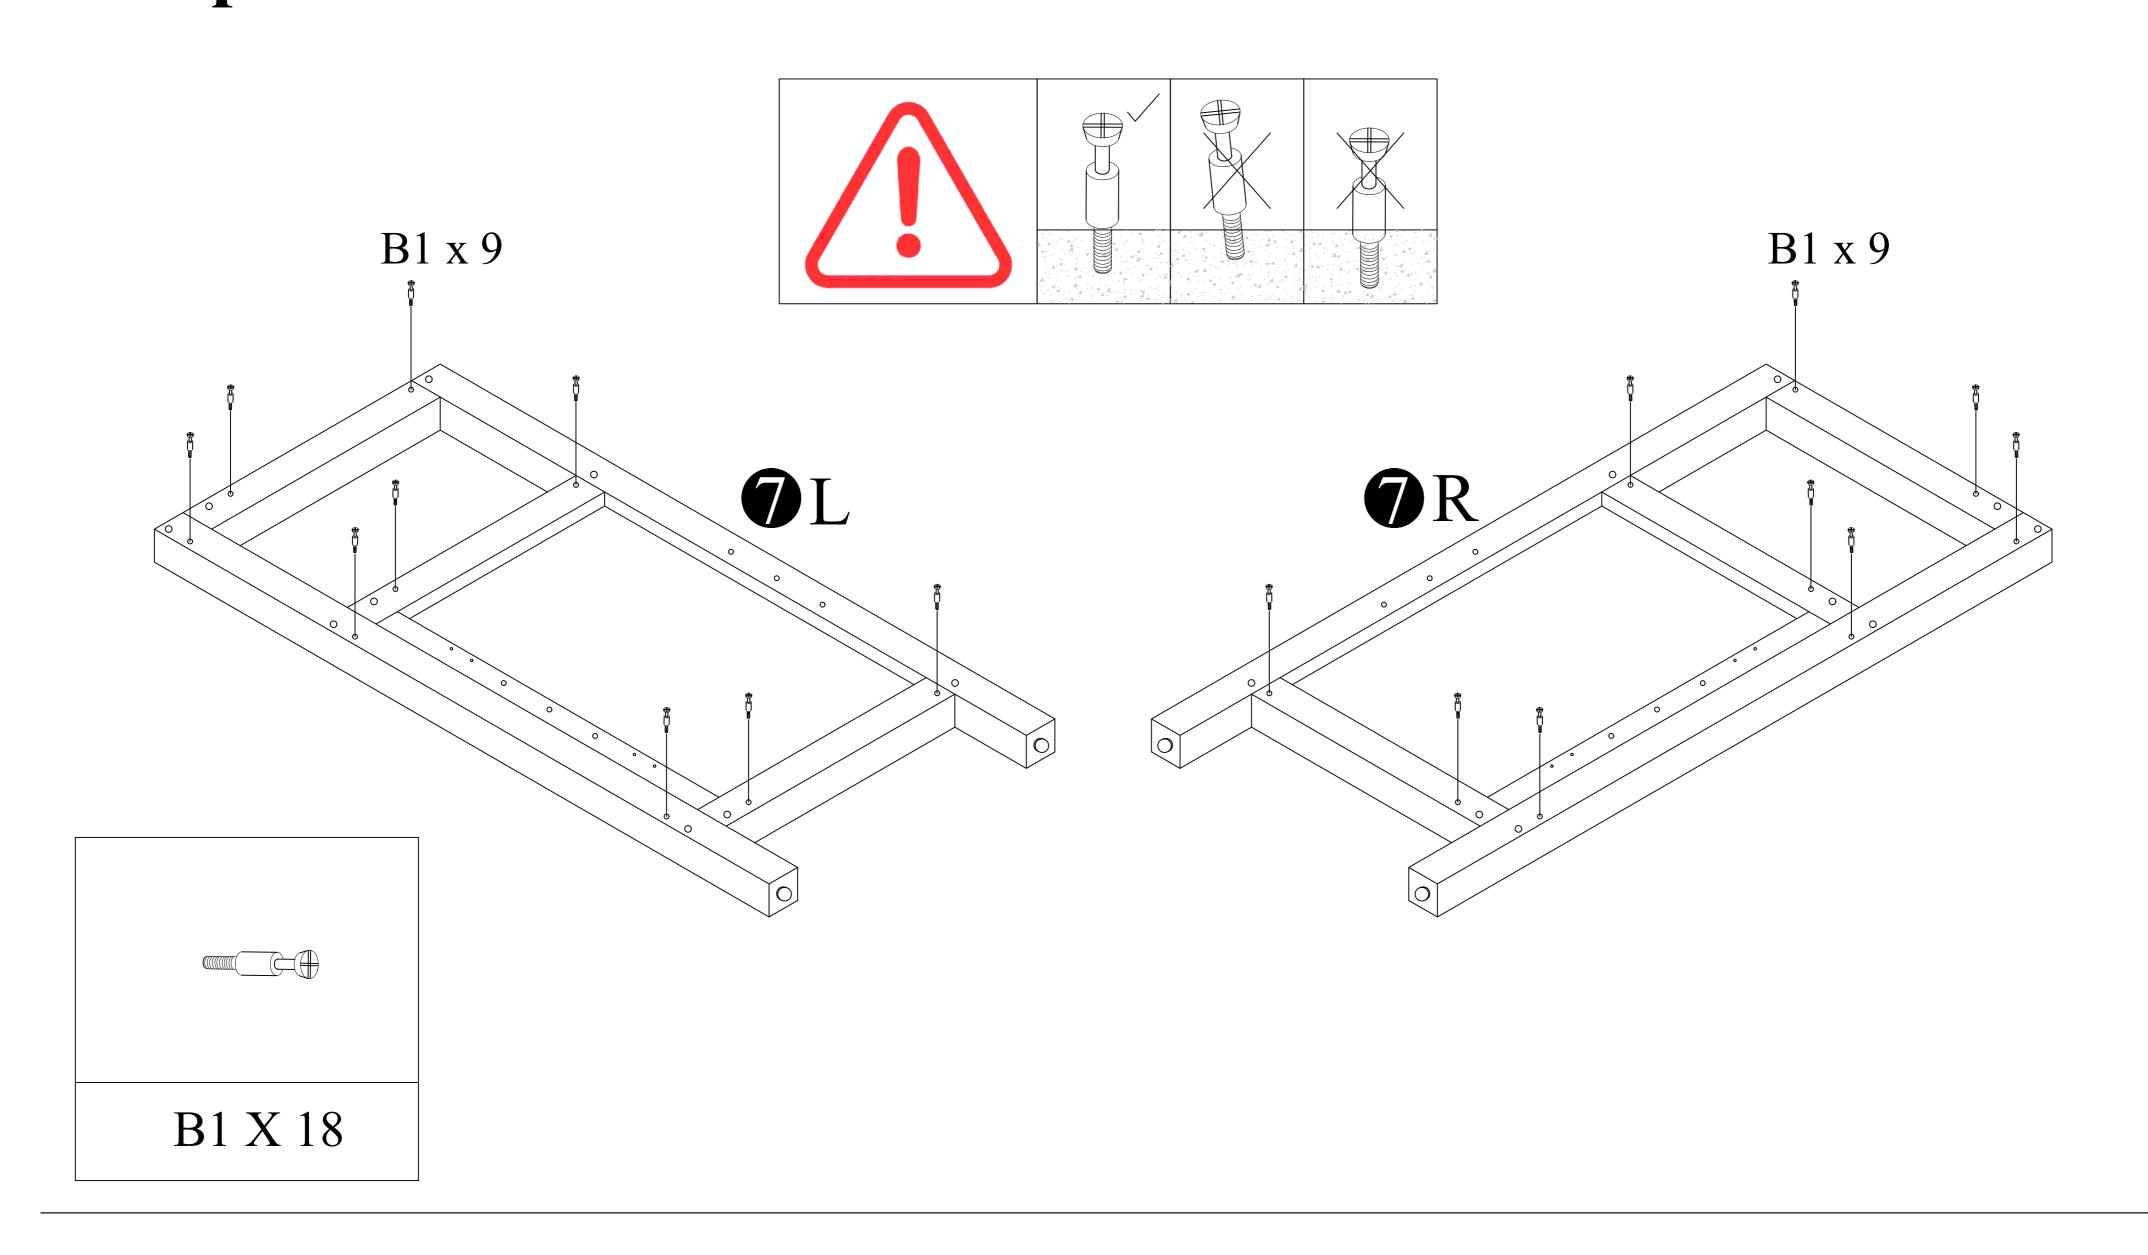


Step 3

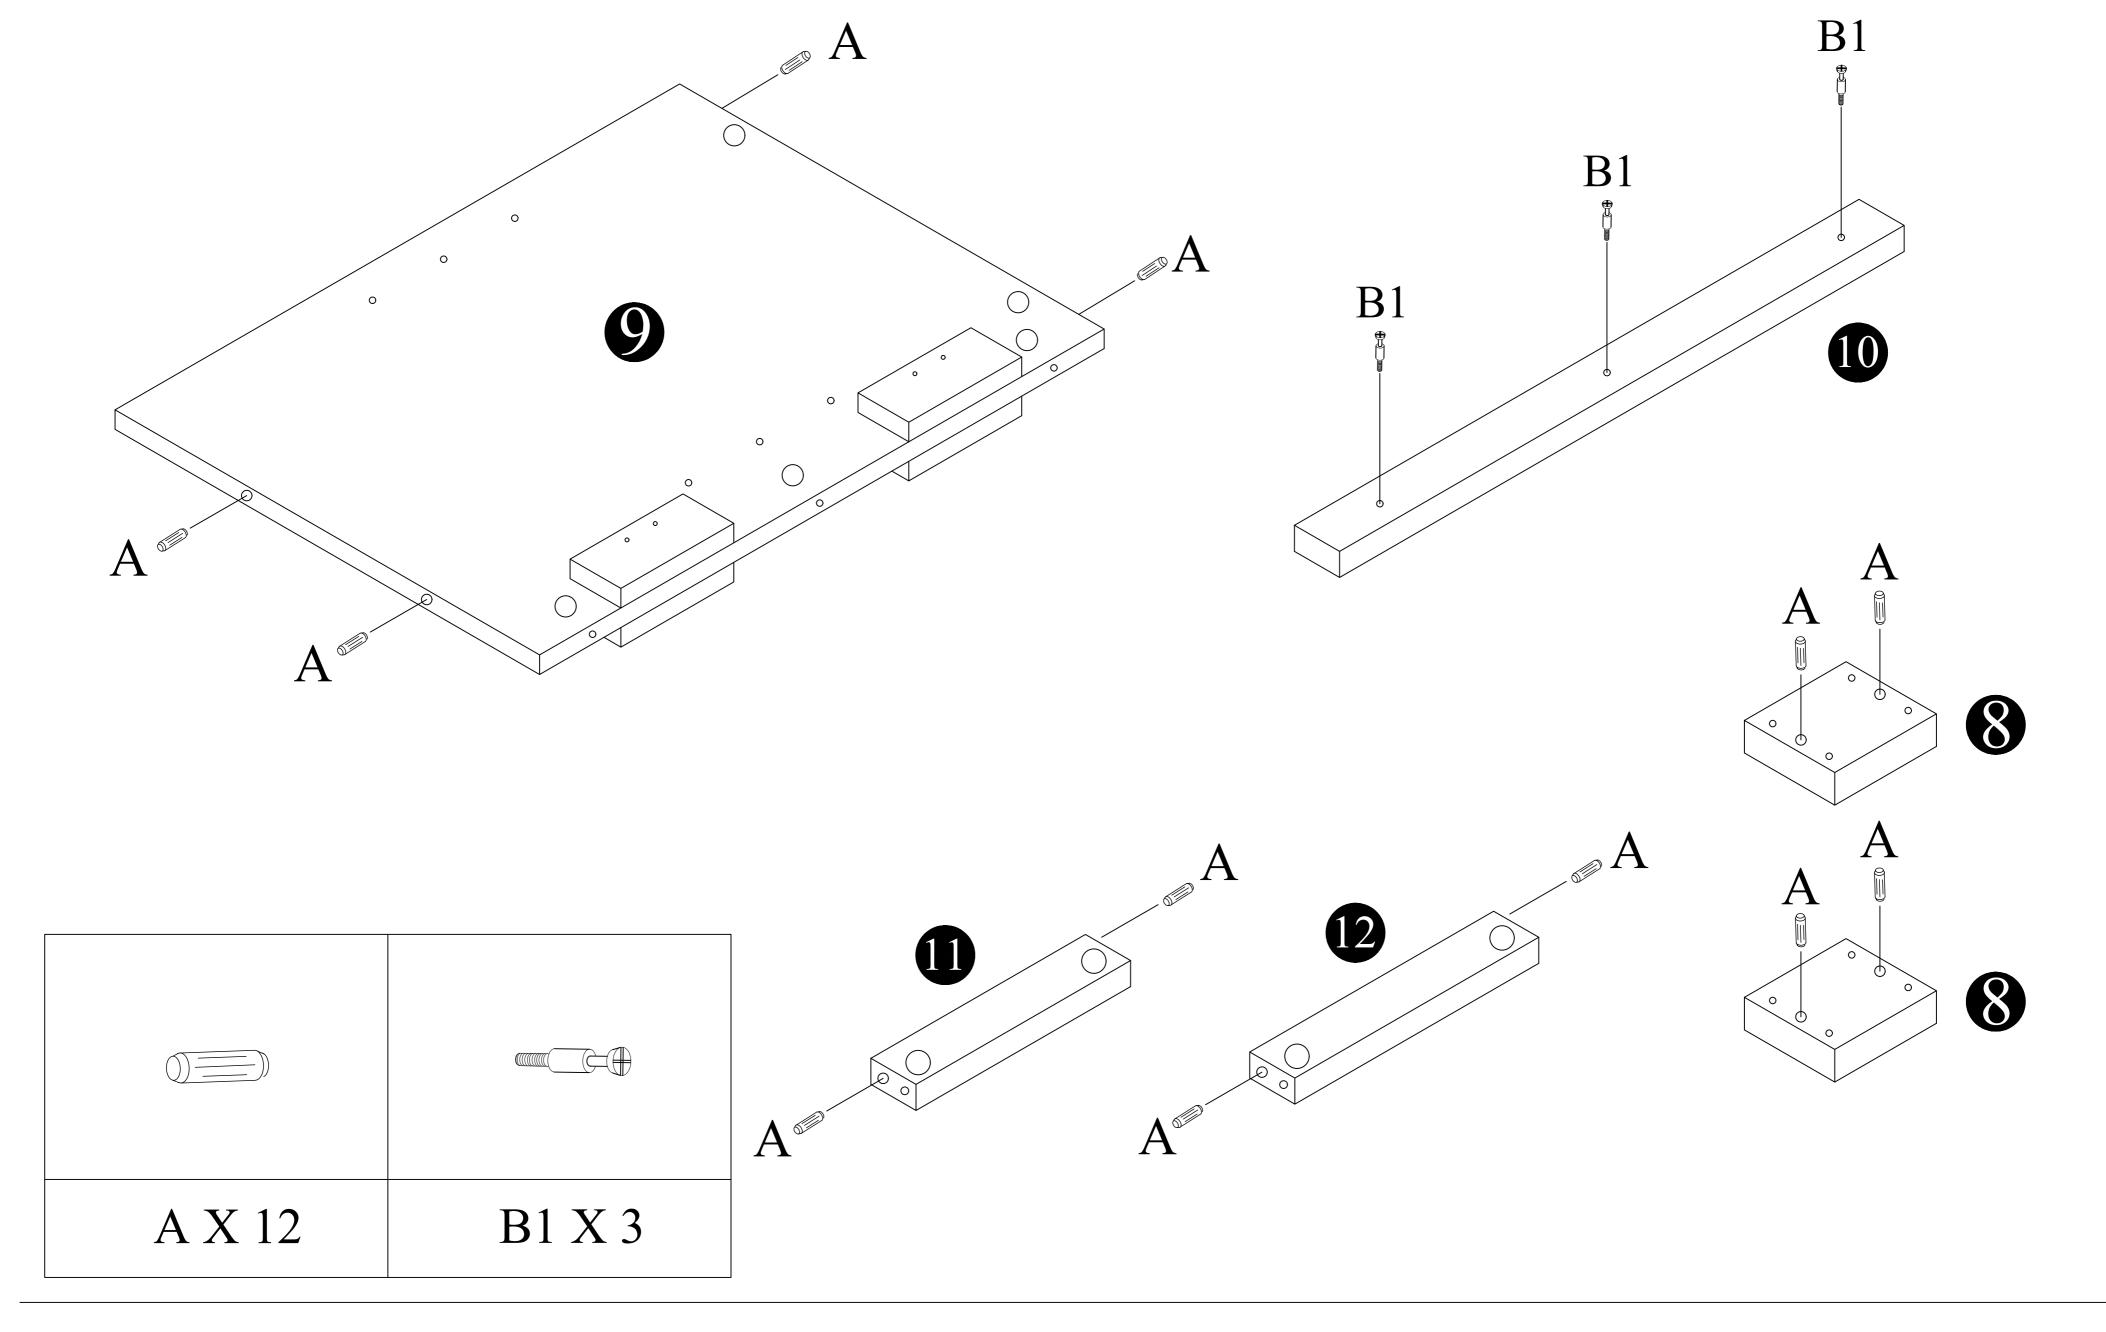

Step 4

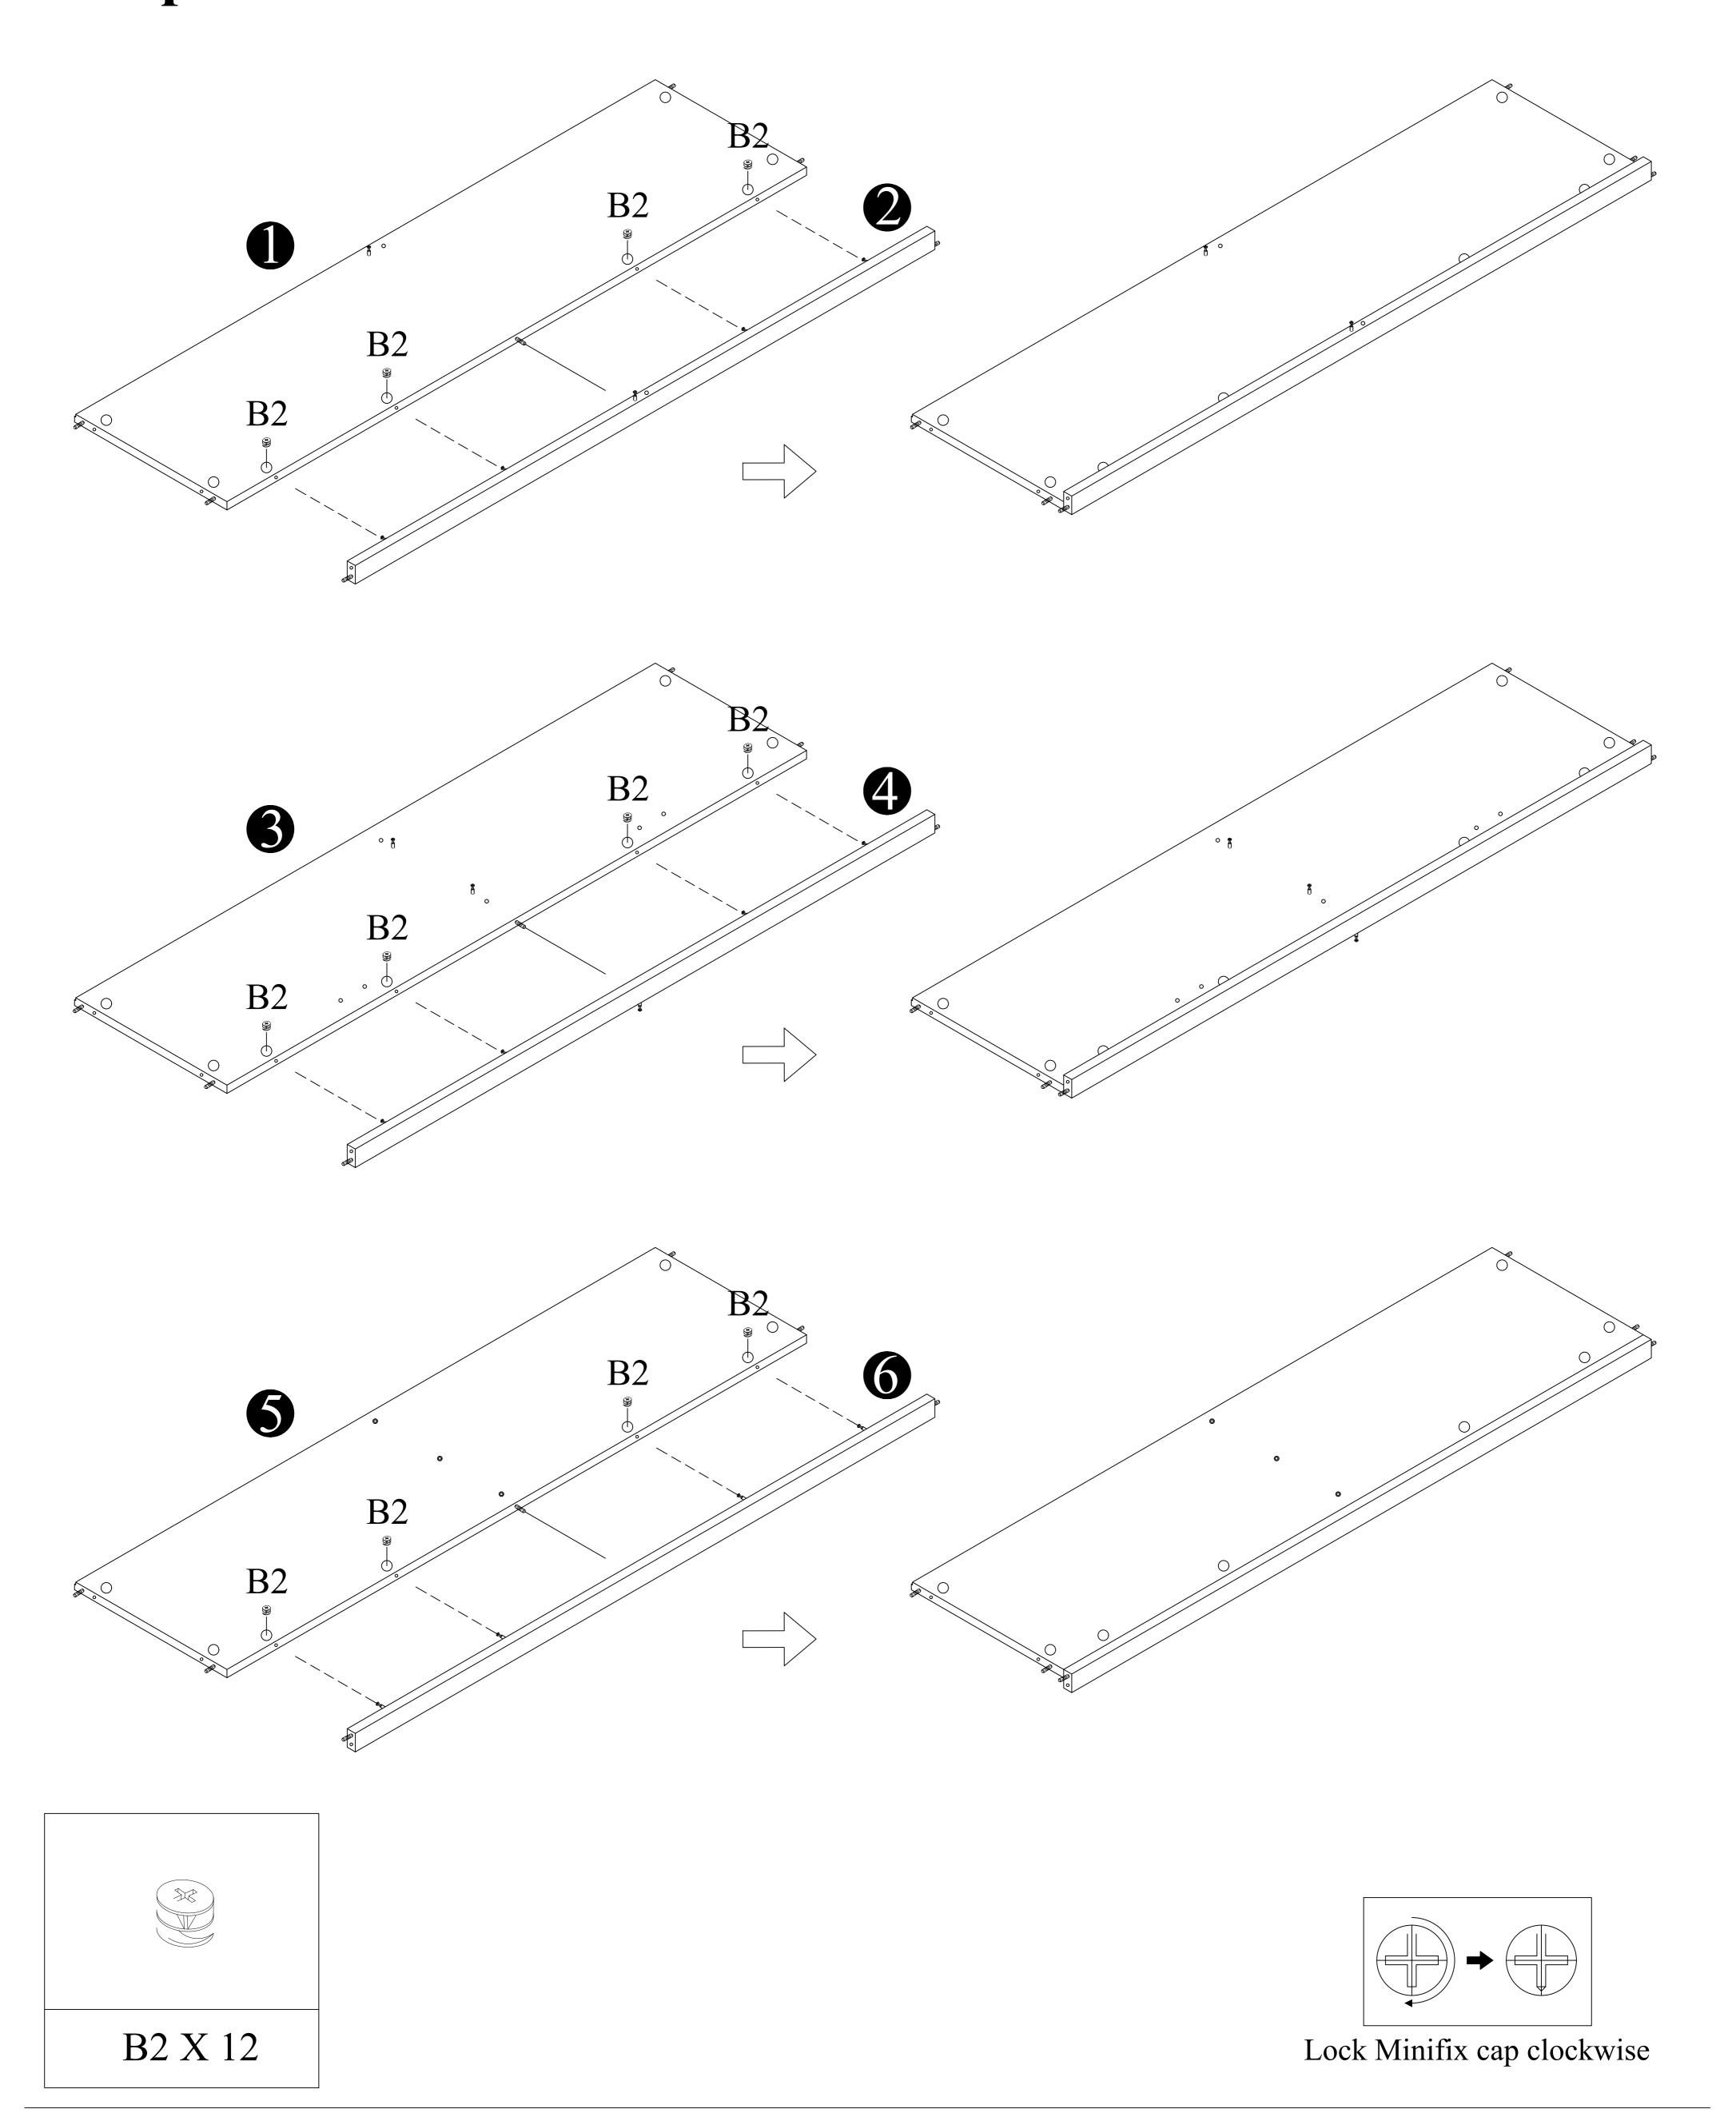


Step 5 Push rebound device installation, please make sure all steps illustrated are strictly followed to avoid malfunction of hardware in daily use. Make sure D2 is working before installation.

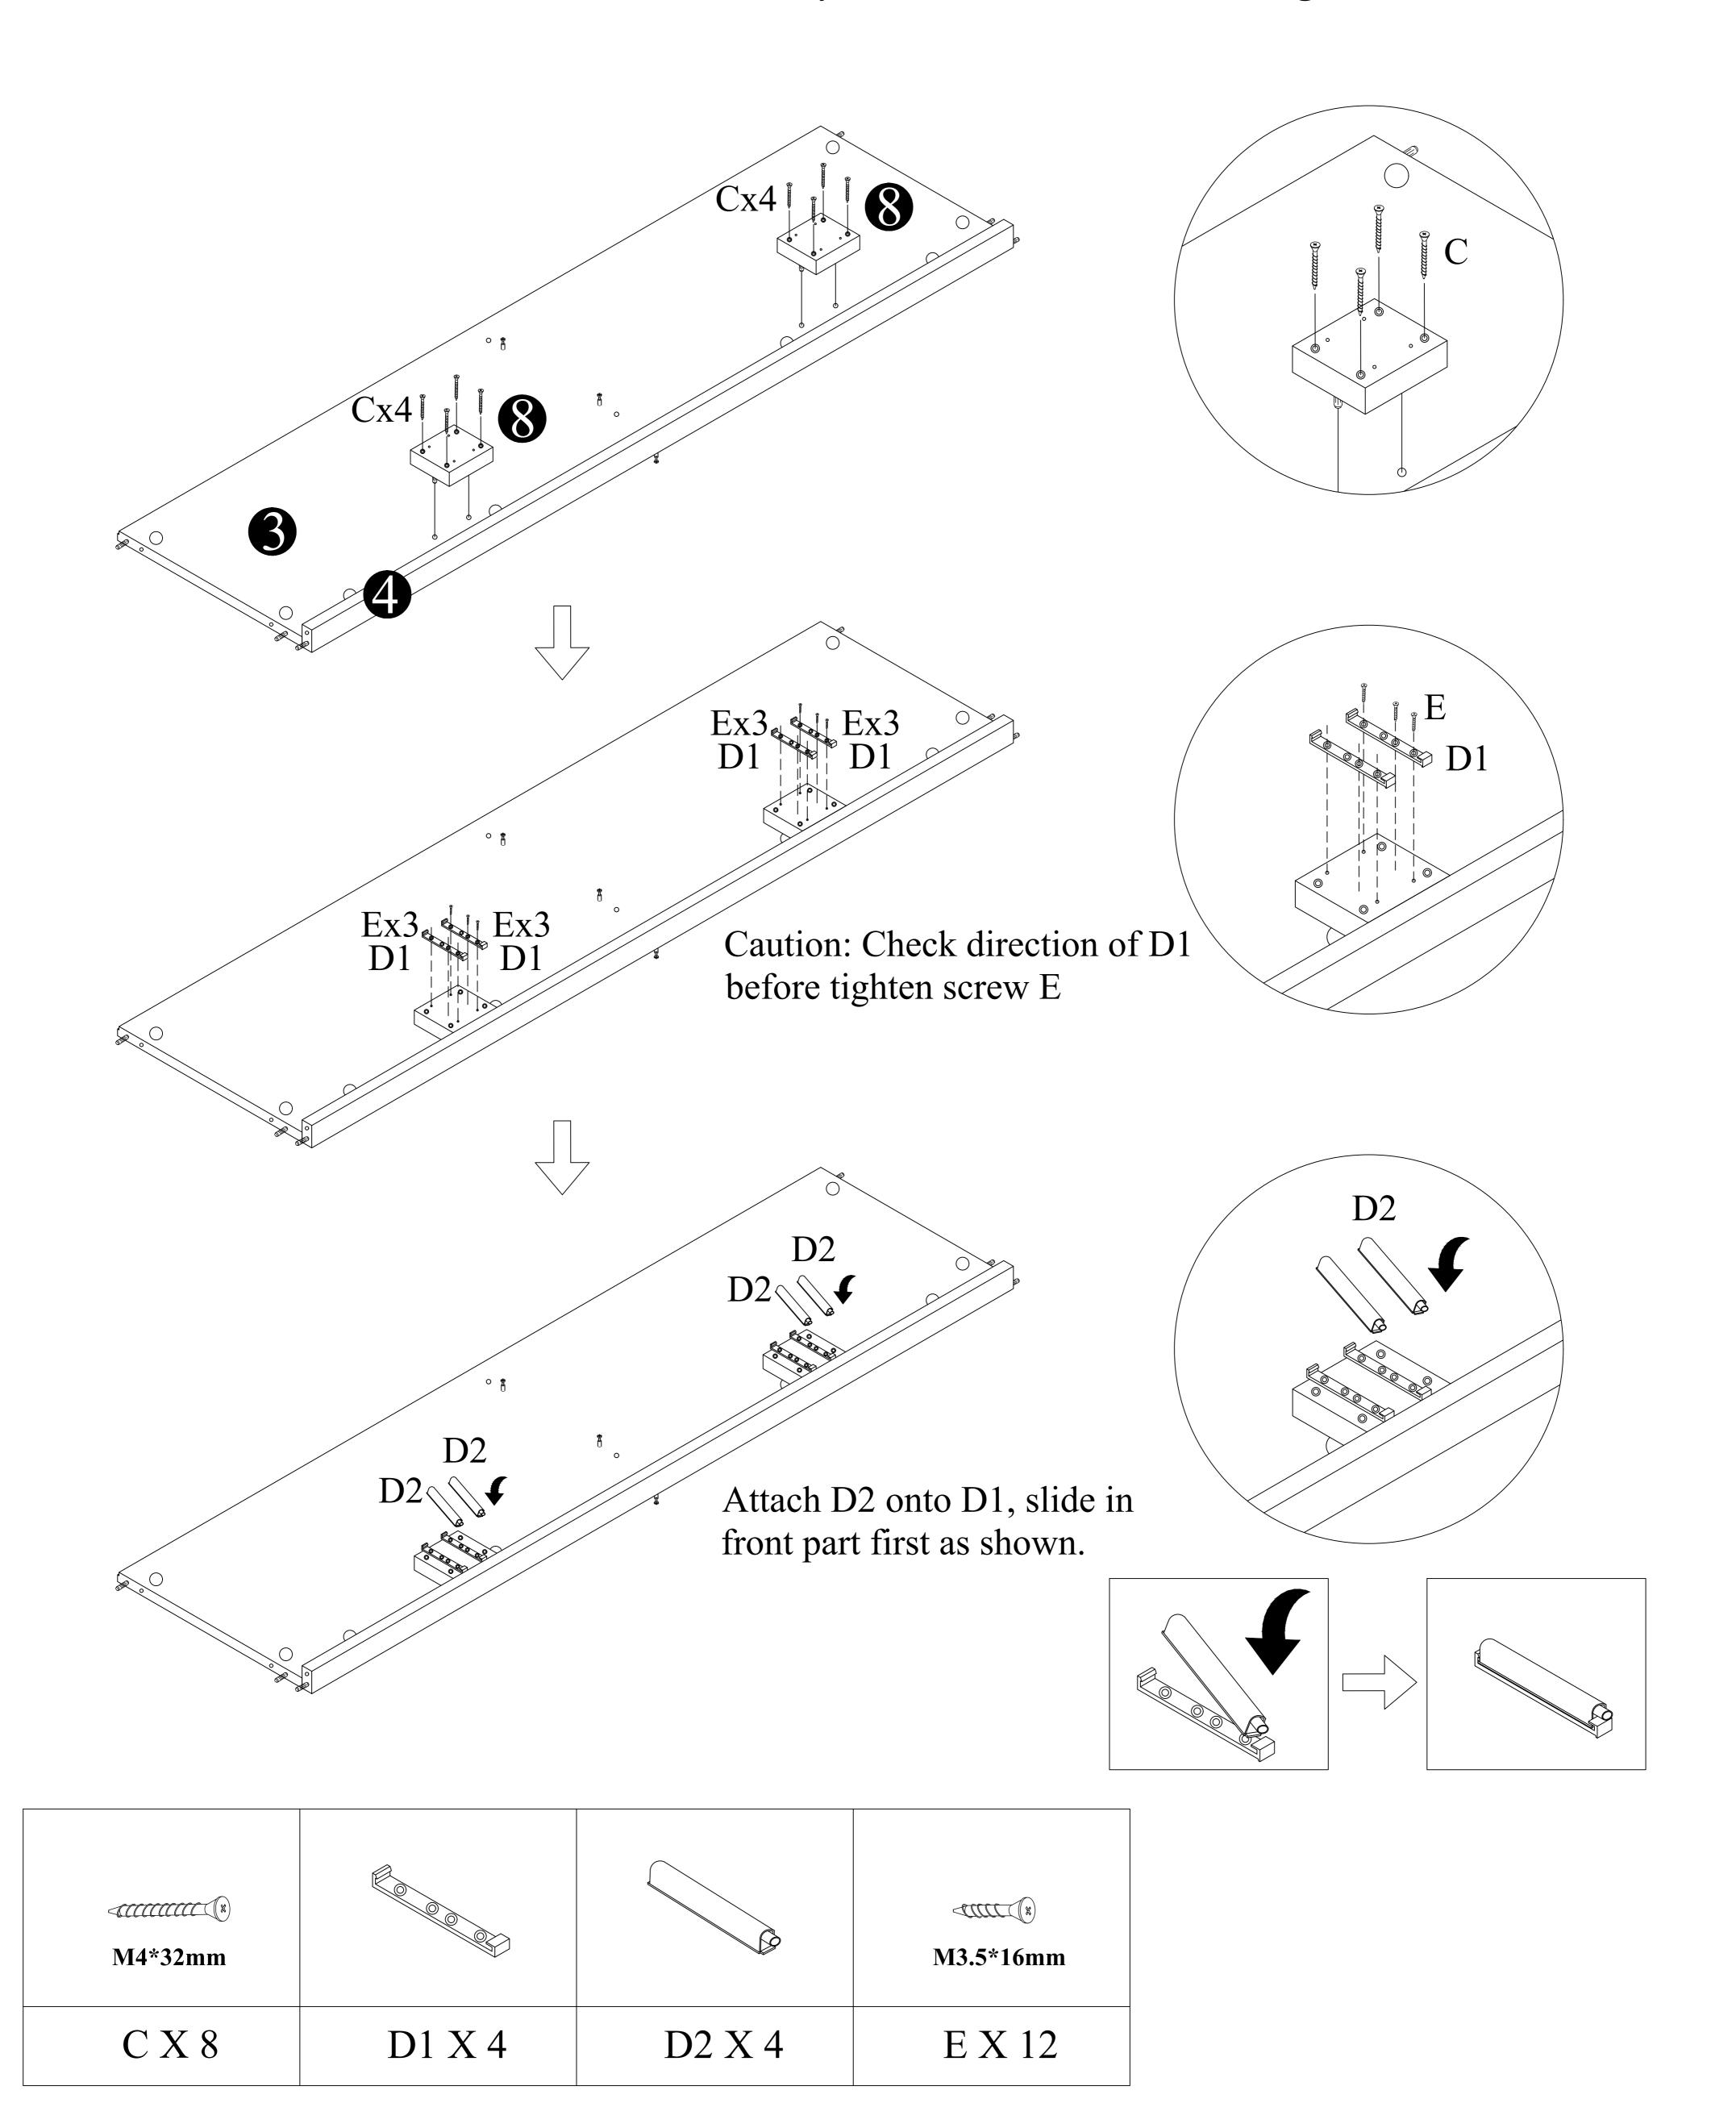


PAGE 8 OF 15 MADE IN MALAYSIA


Step 6

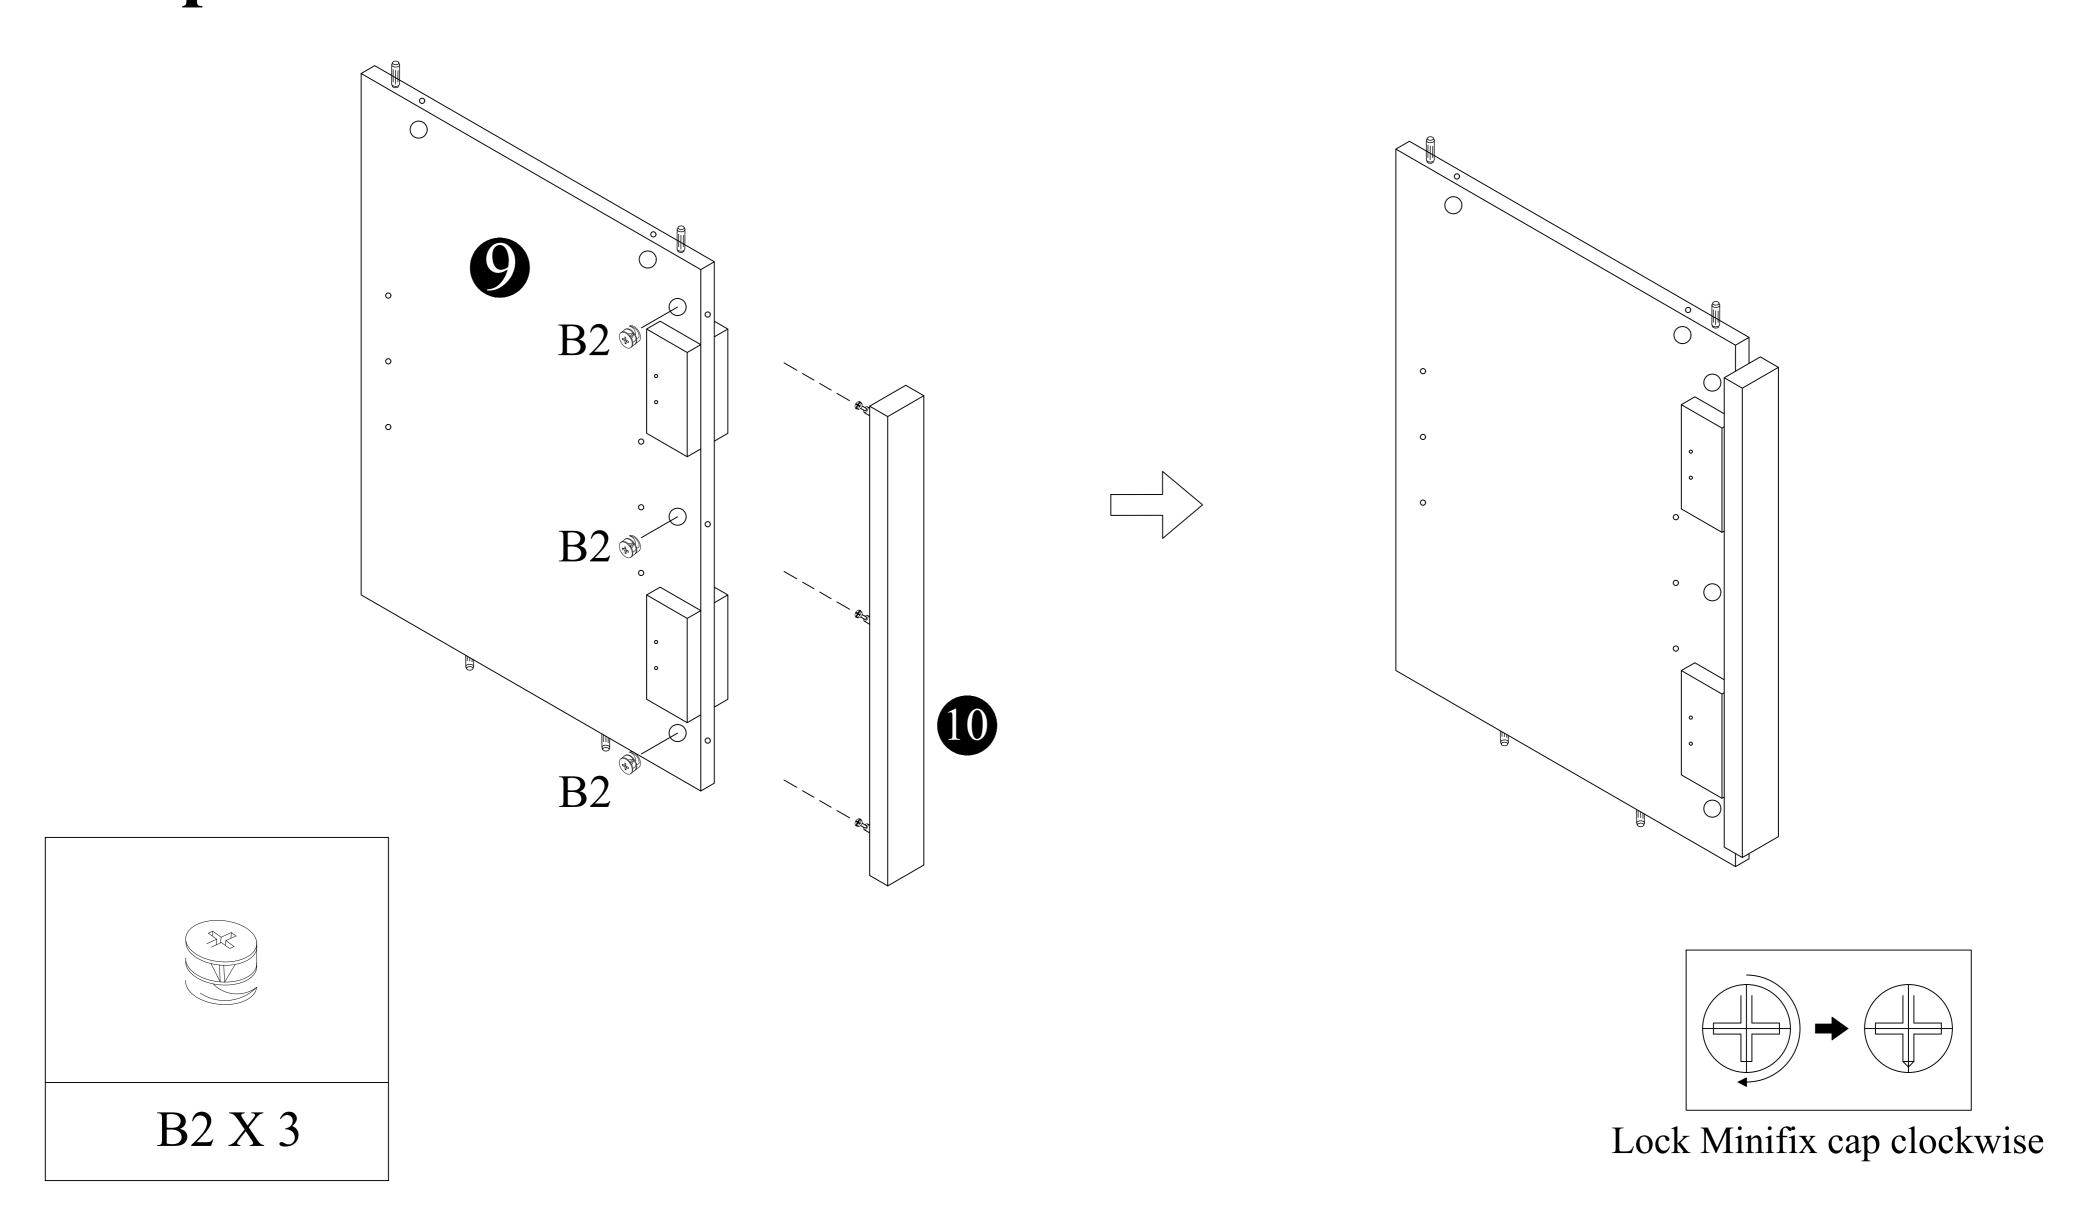




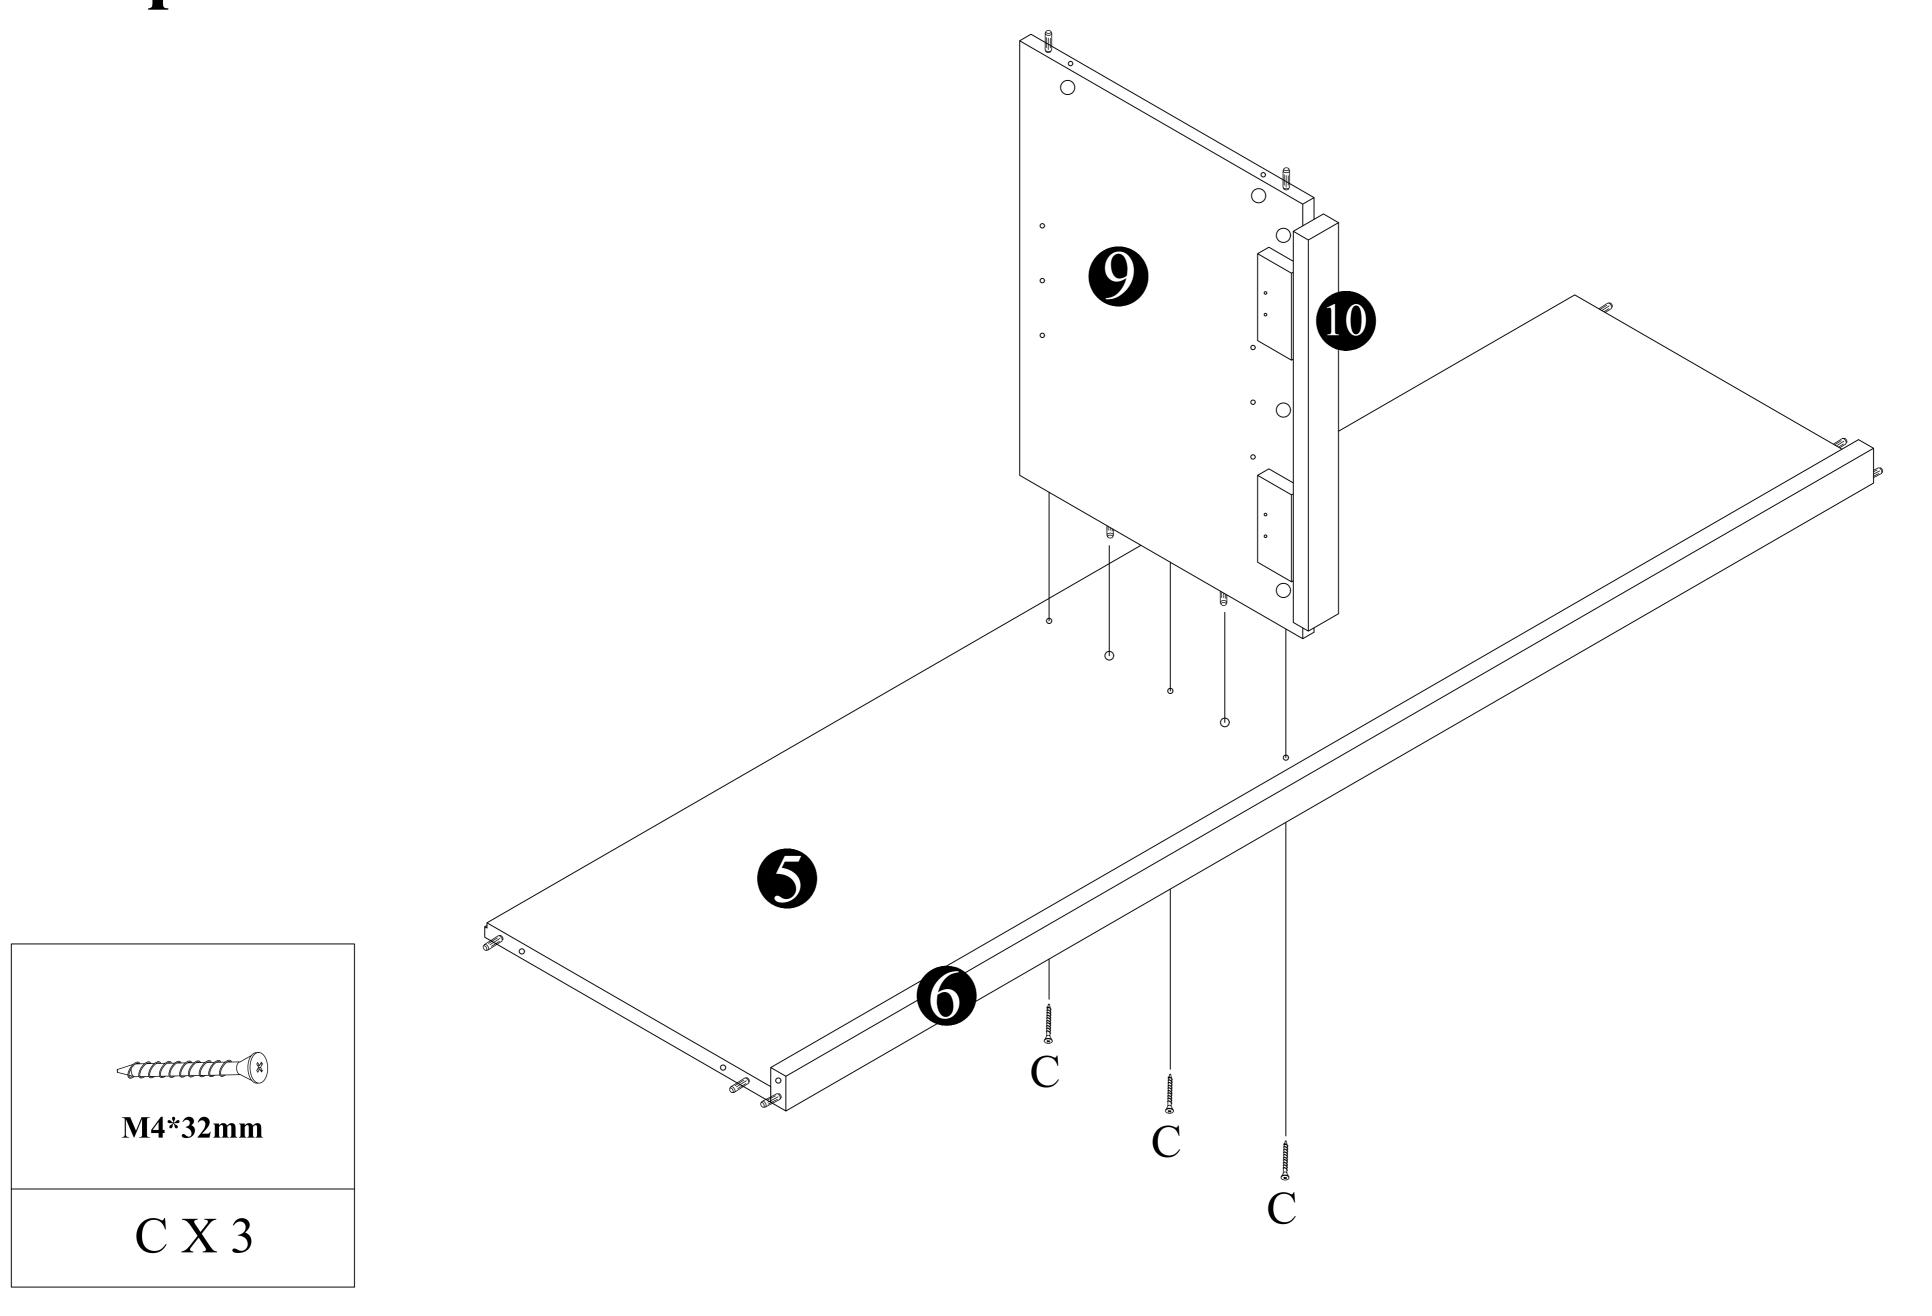


Step 8

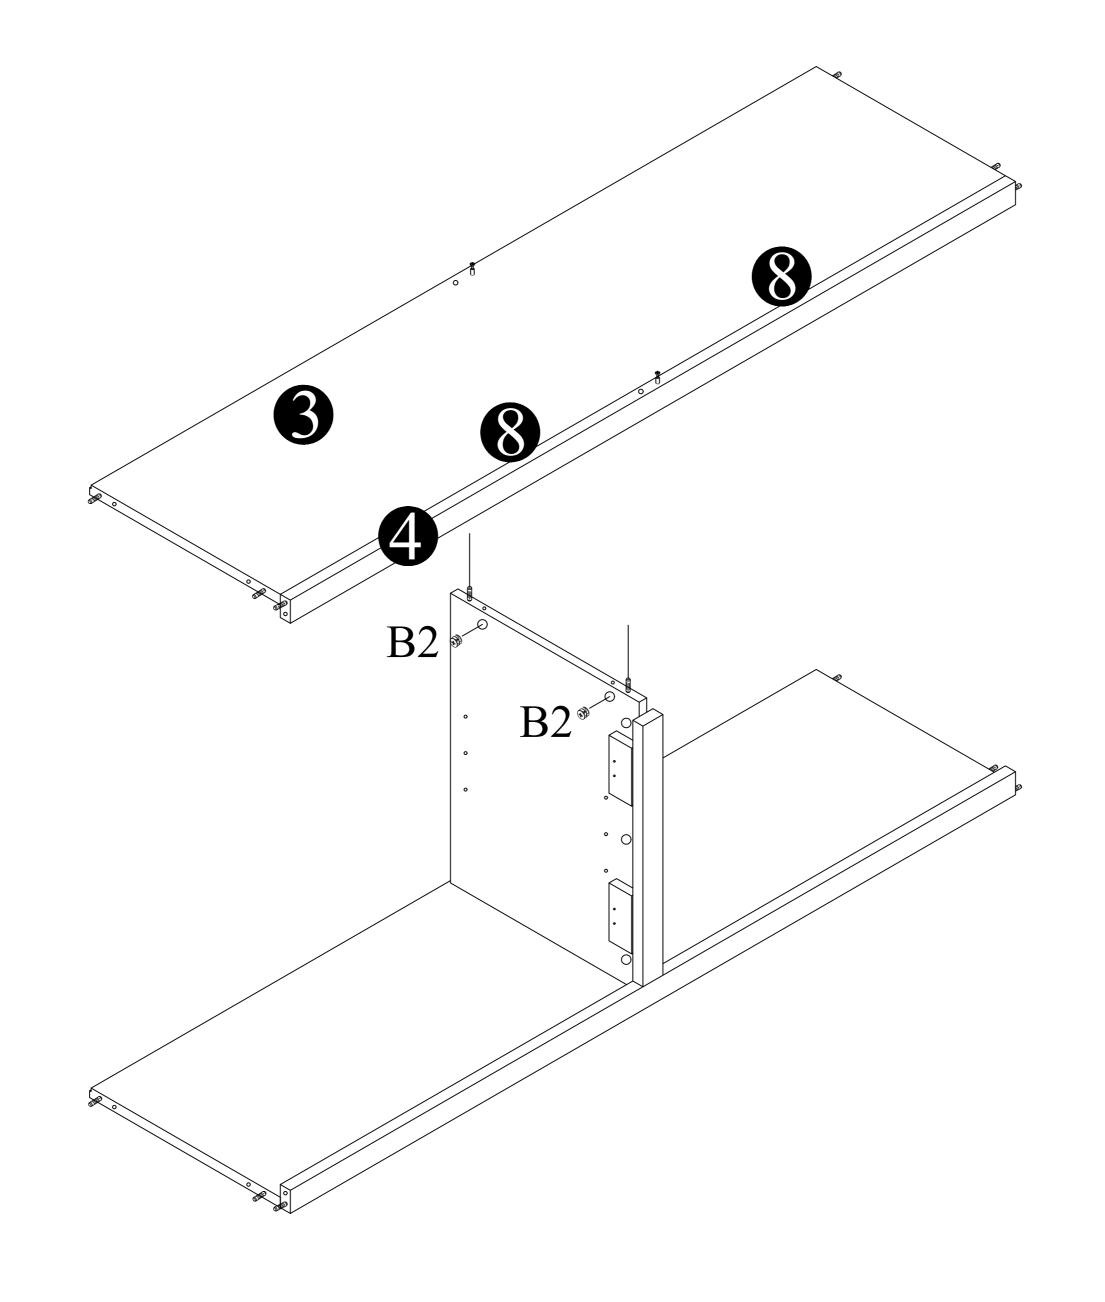


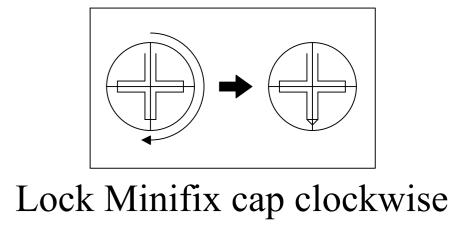


Step 9

B2 X 2

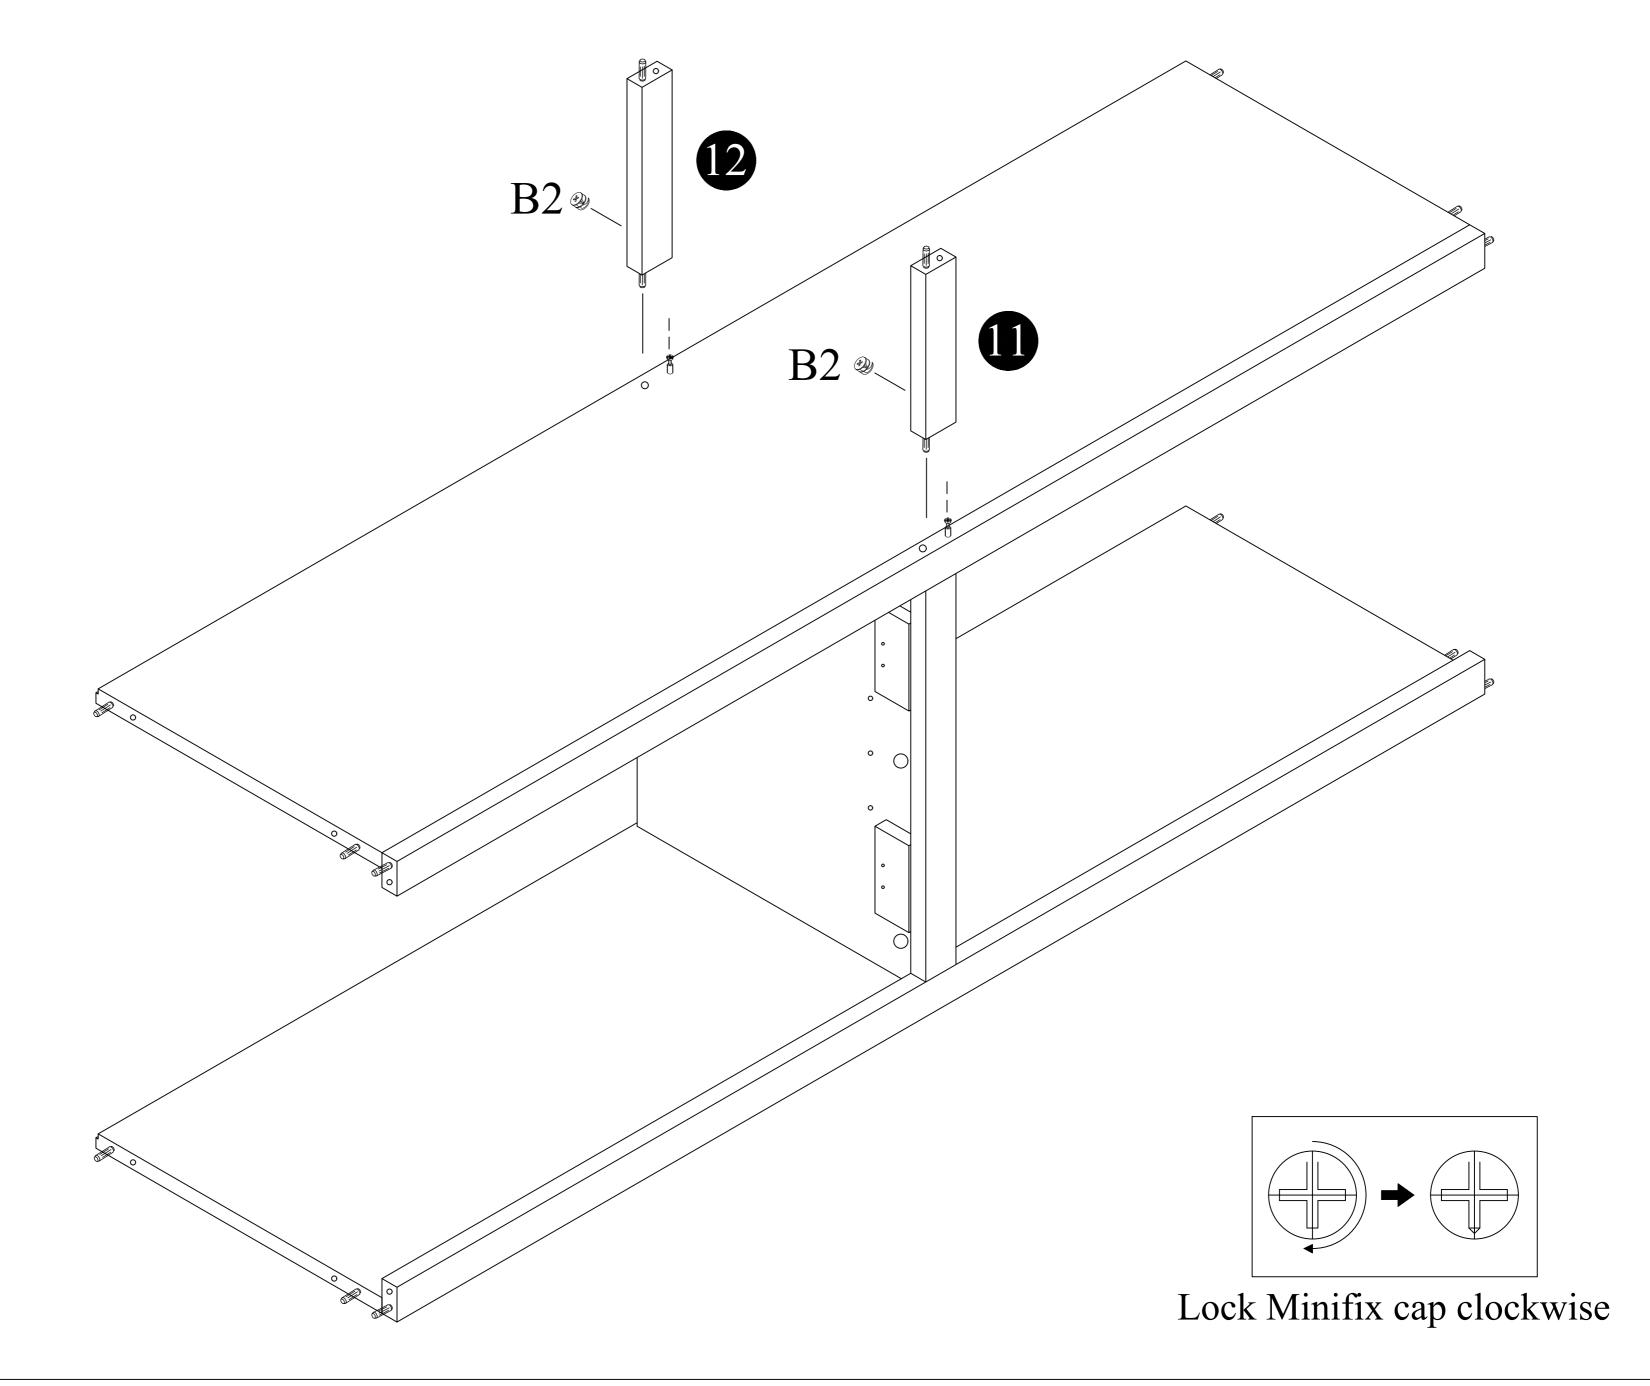

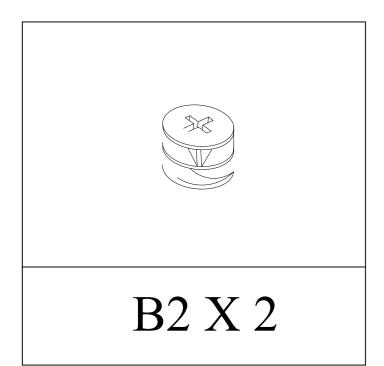


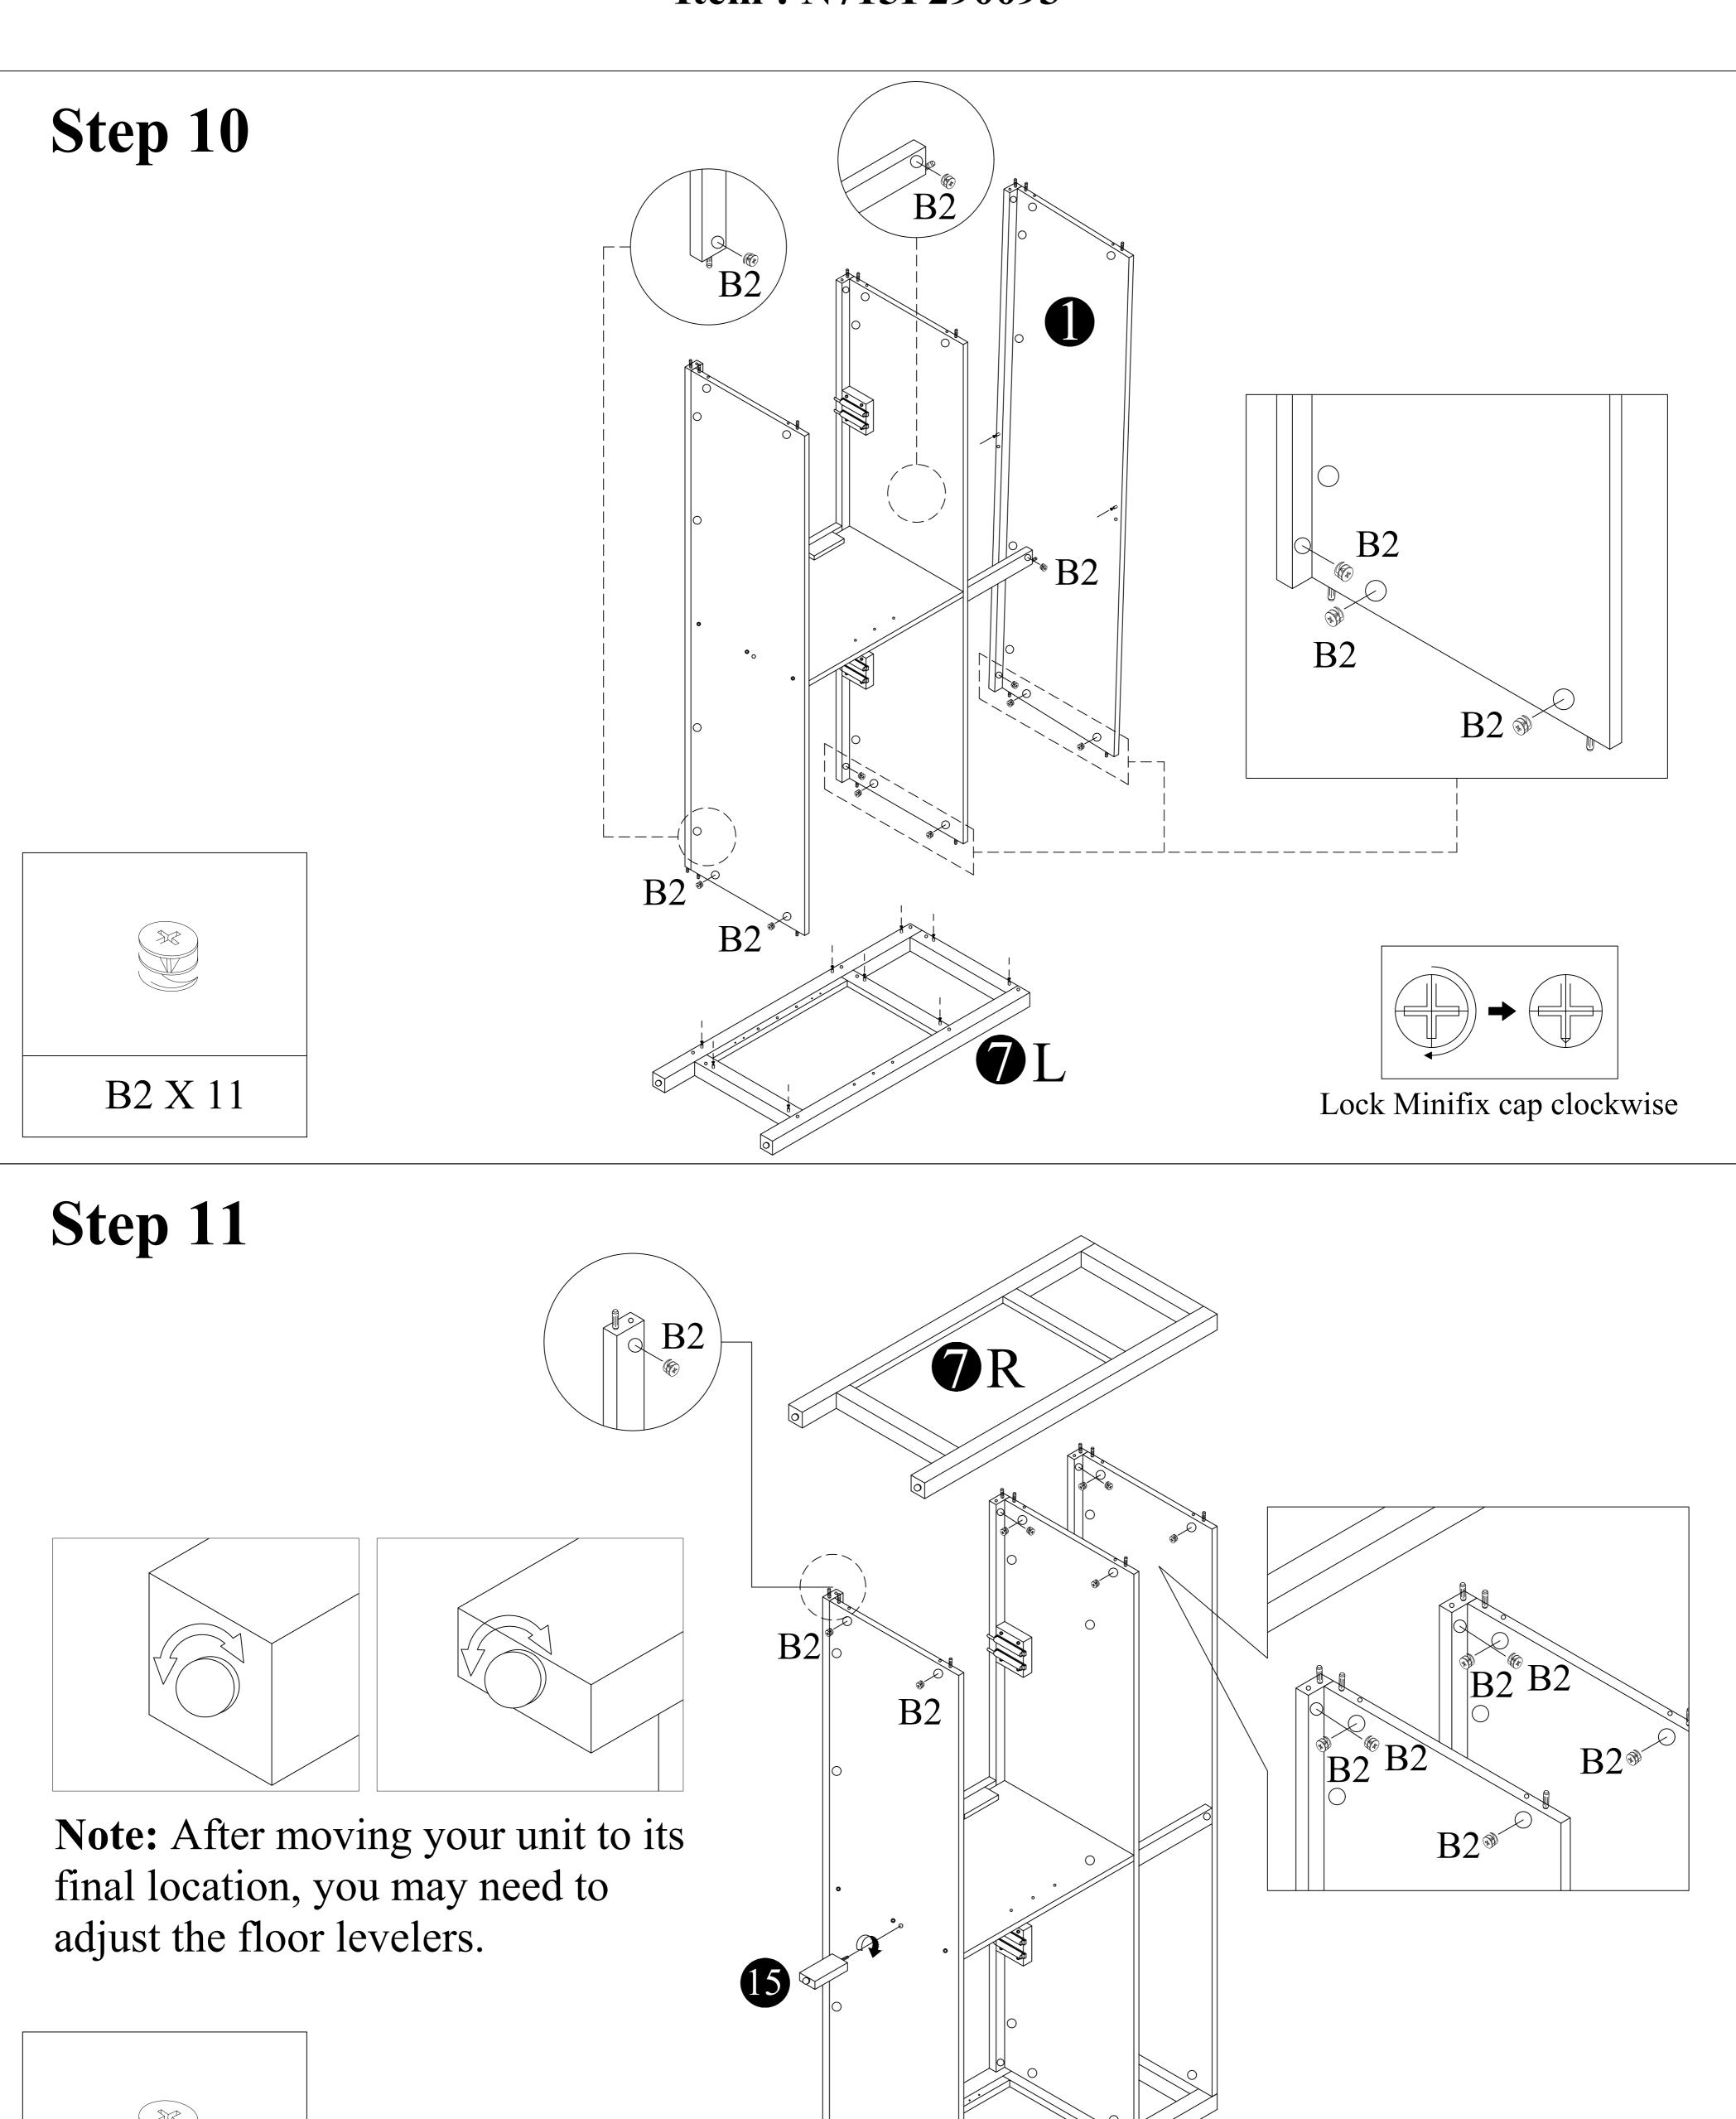


Lock Minifix cap clockwise

B2 X 9


Step 12

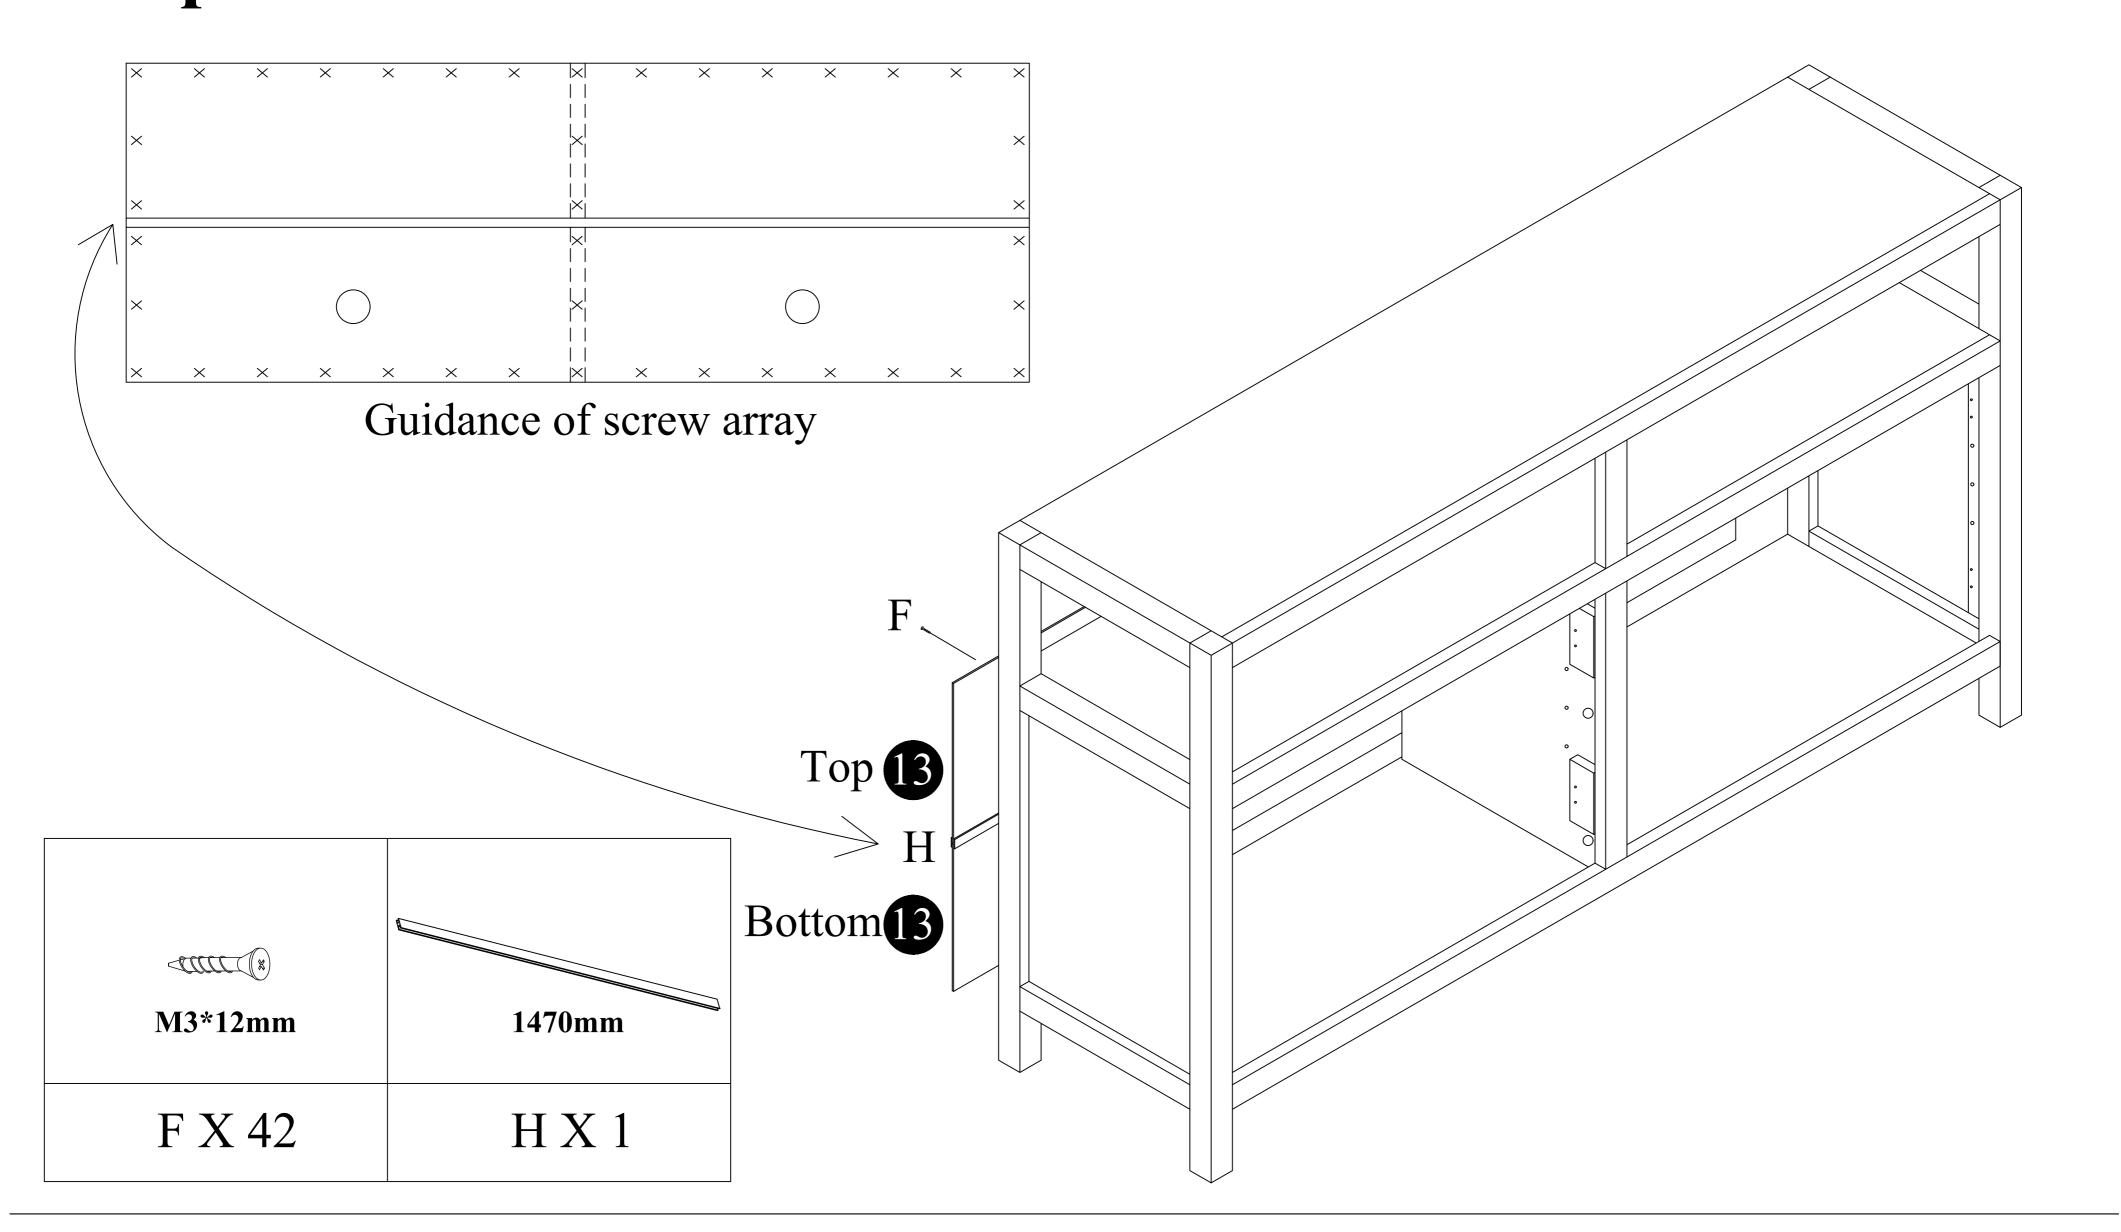

Step 13

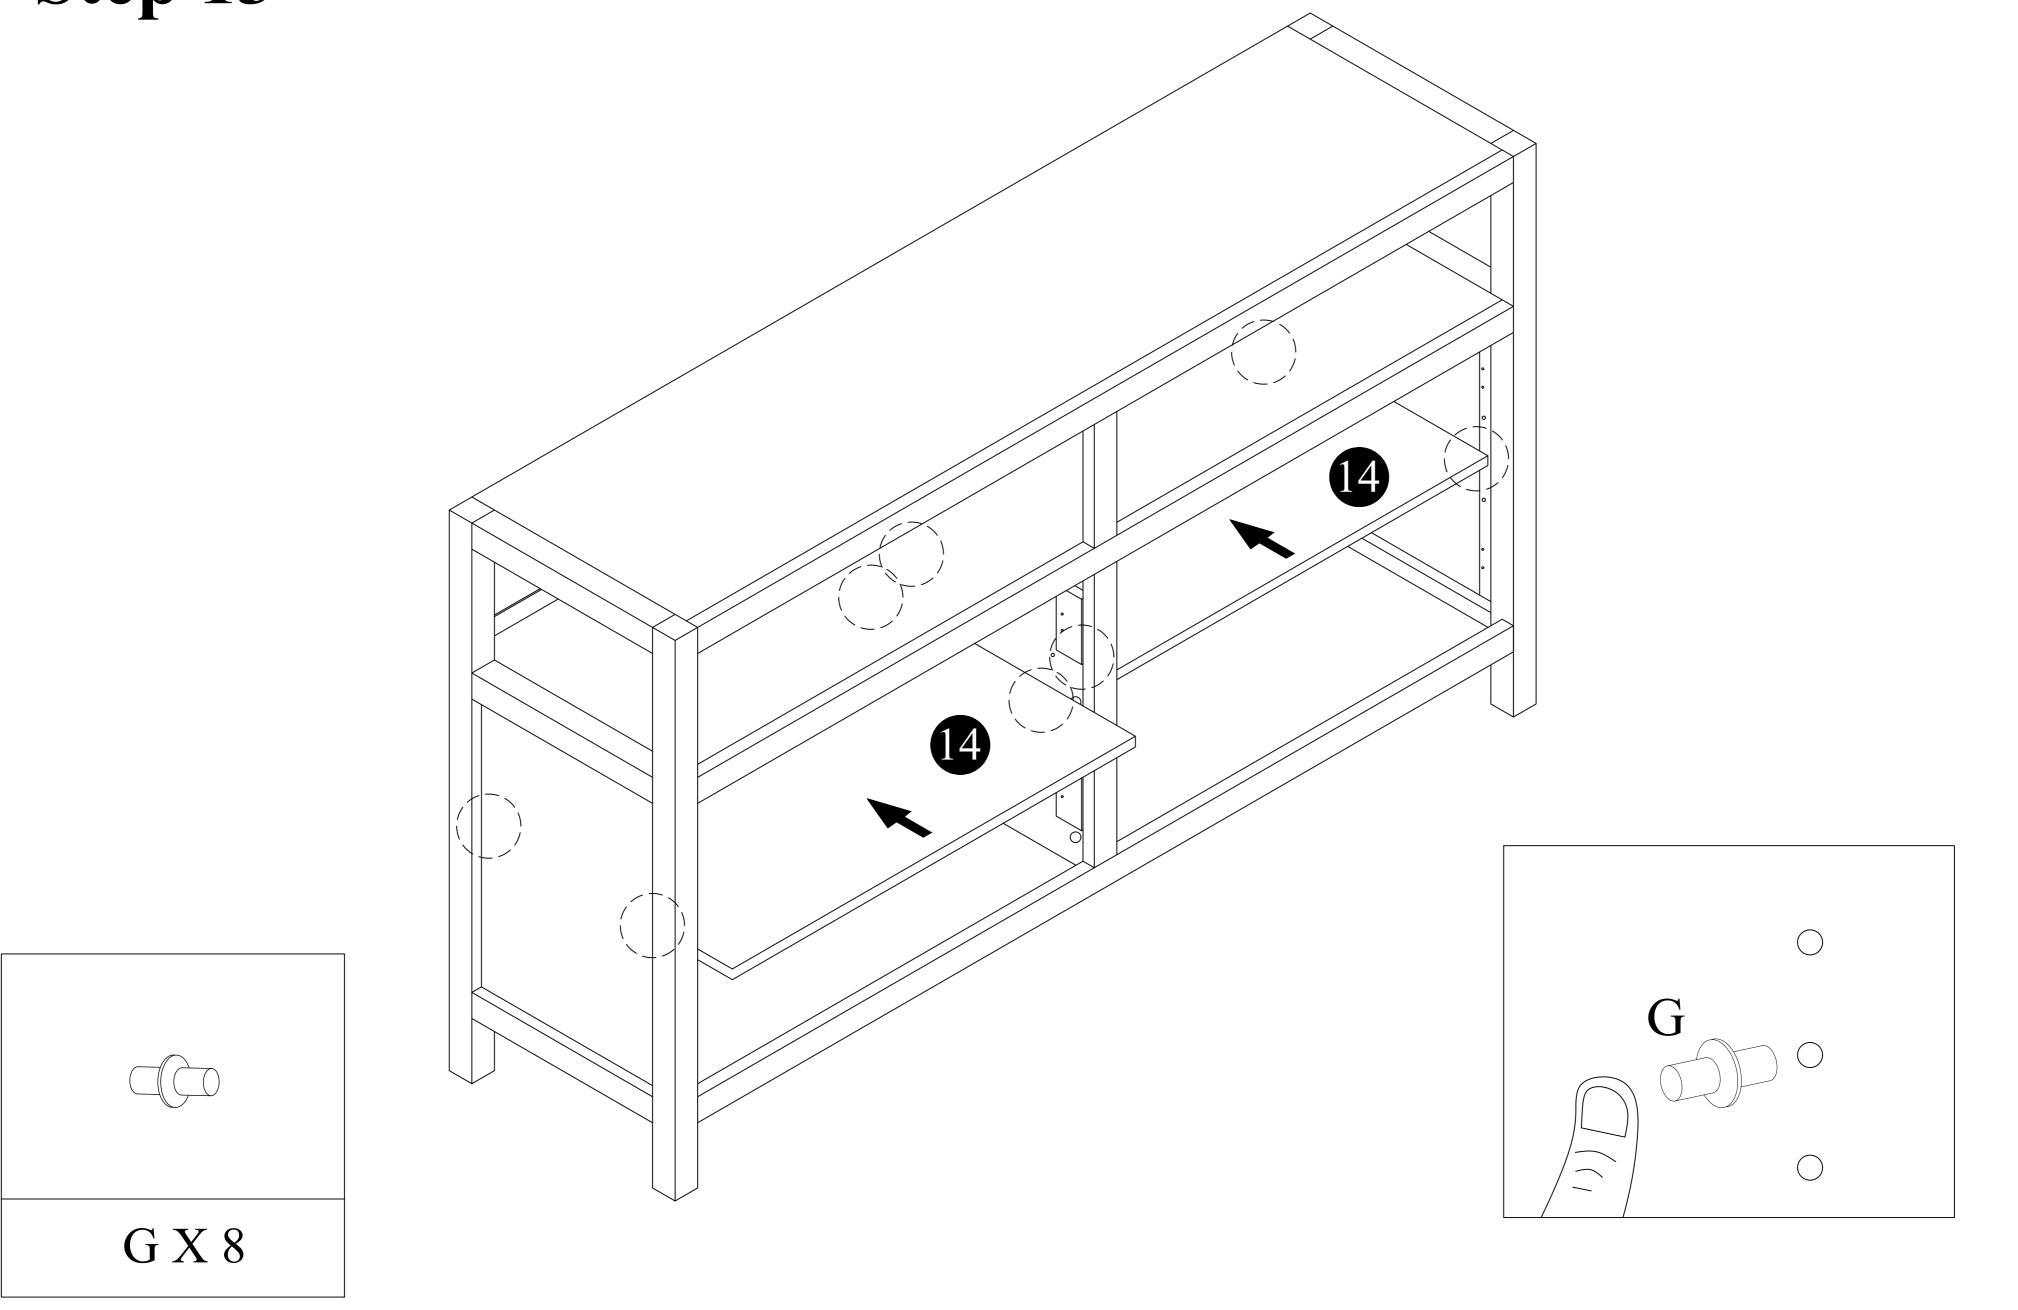



Step 14

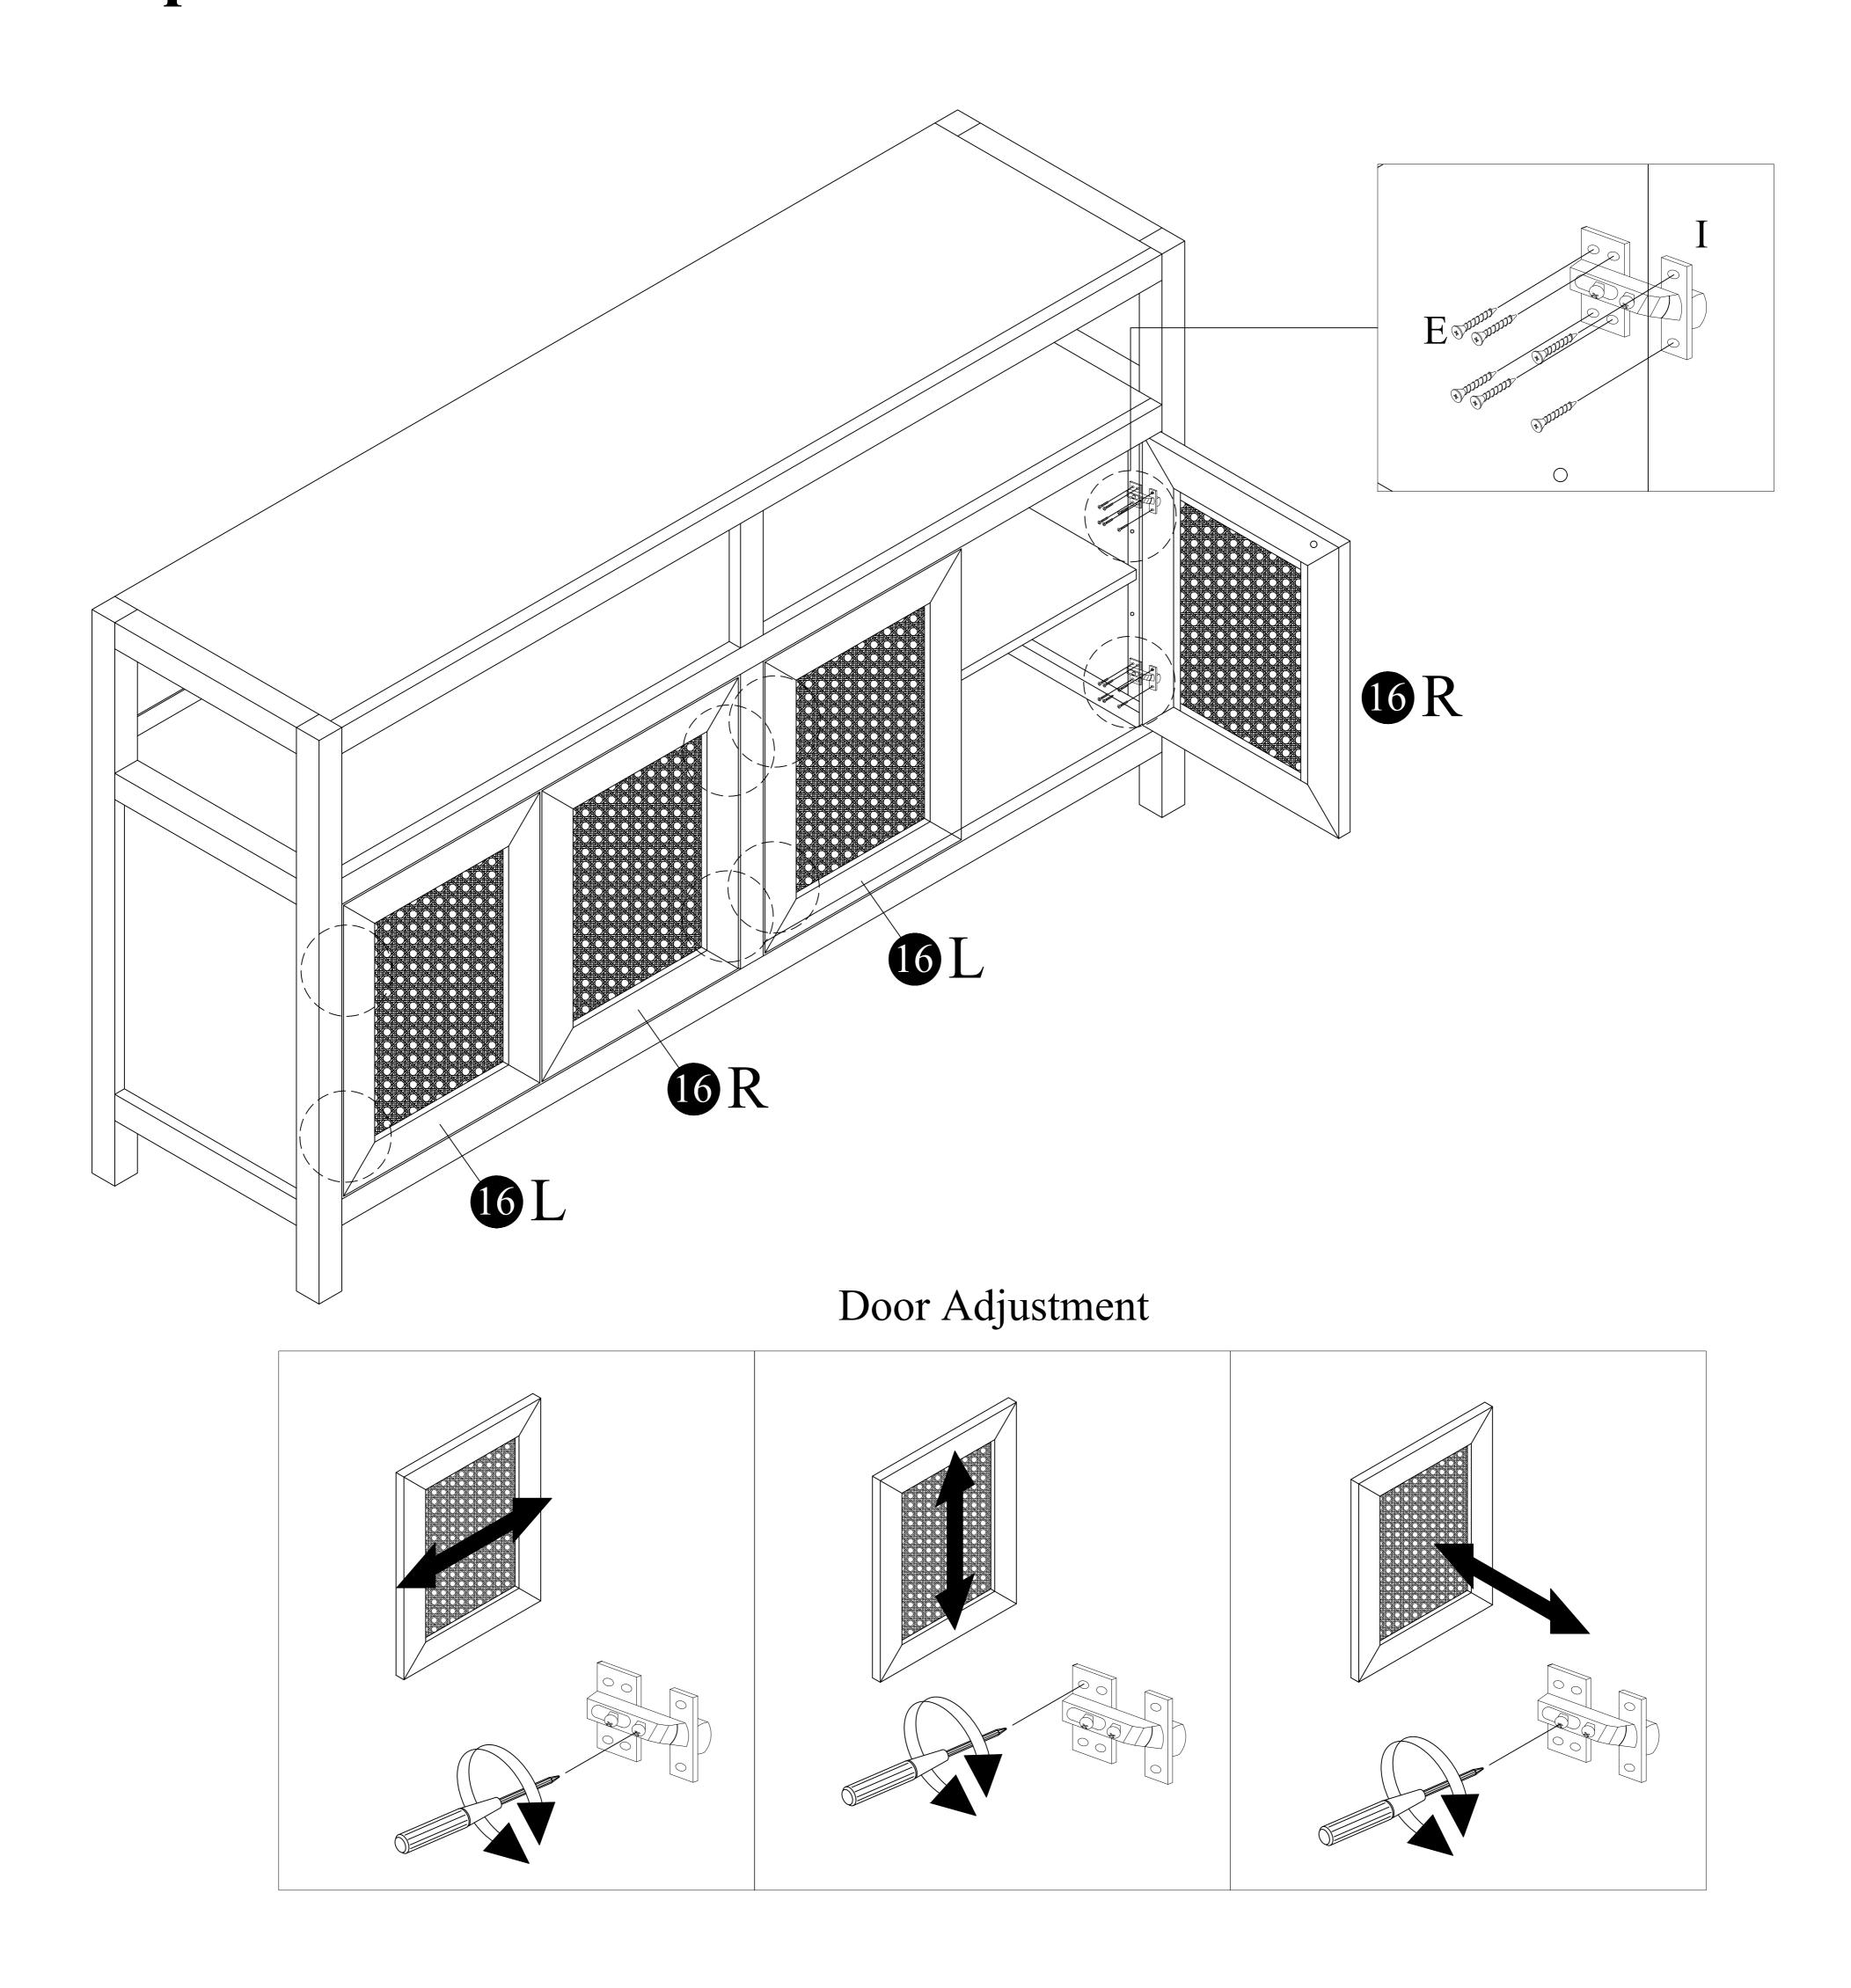

	M3.5*16mm
I X 8	E X 48

PAGE 13 OF 15 MADE IN MALAYSIA

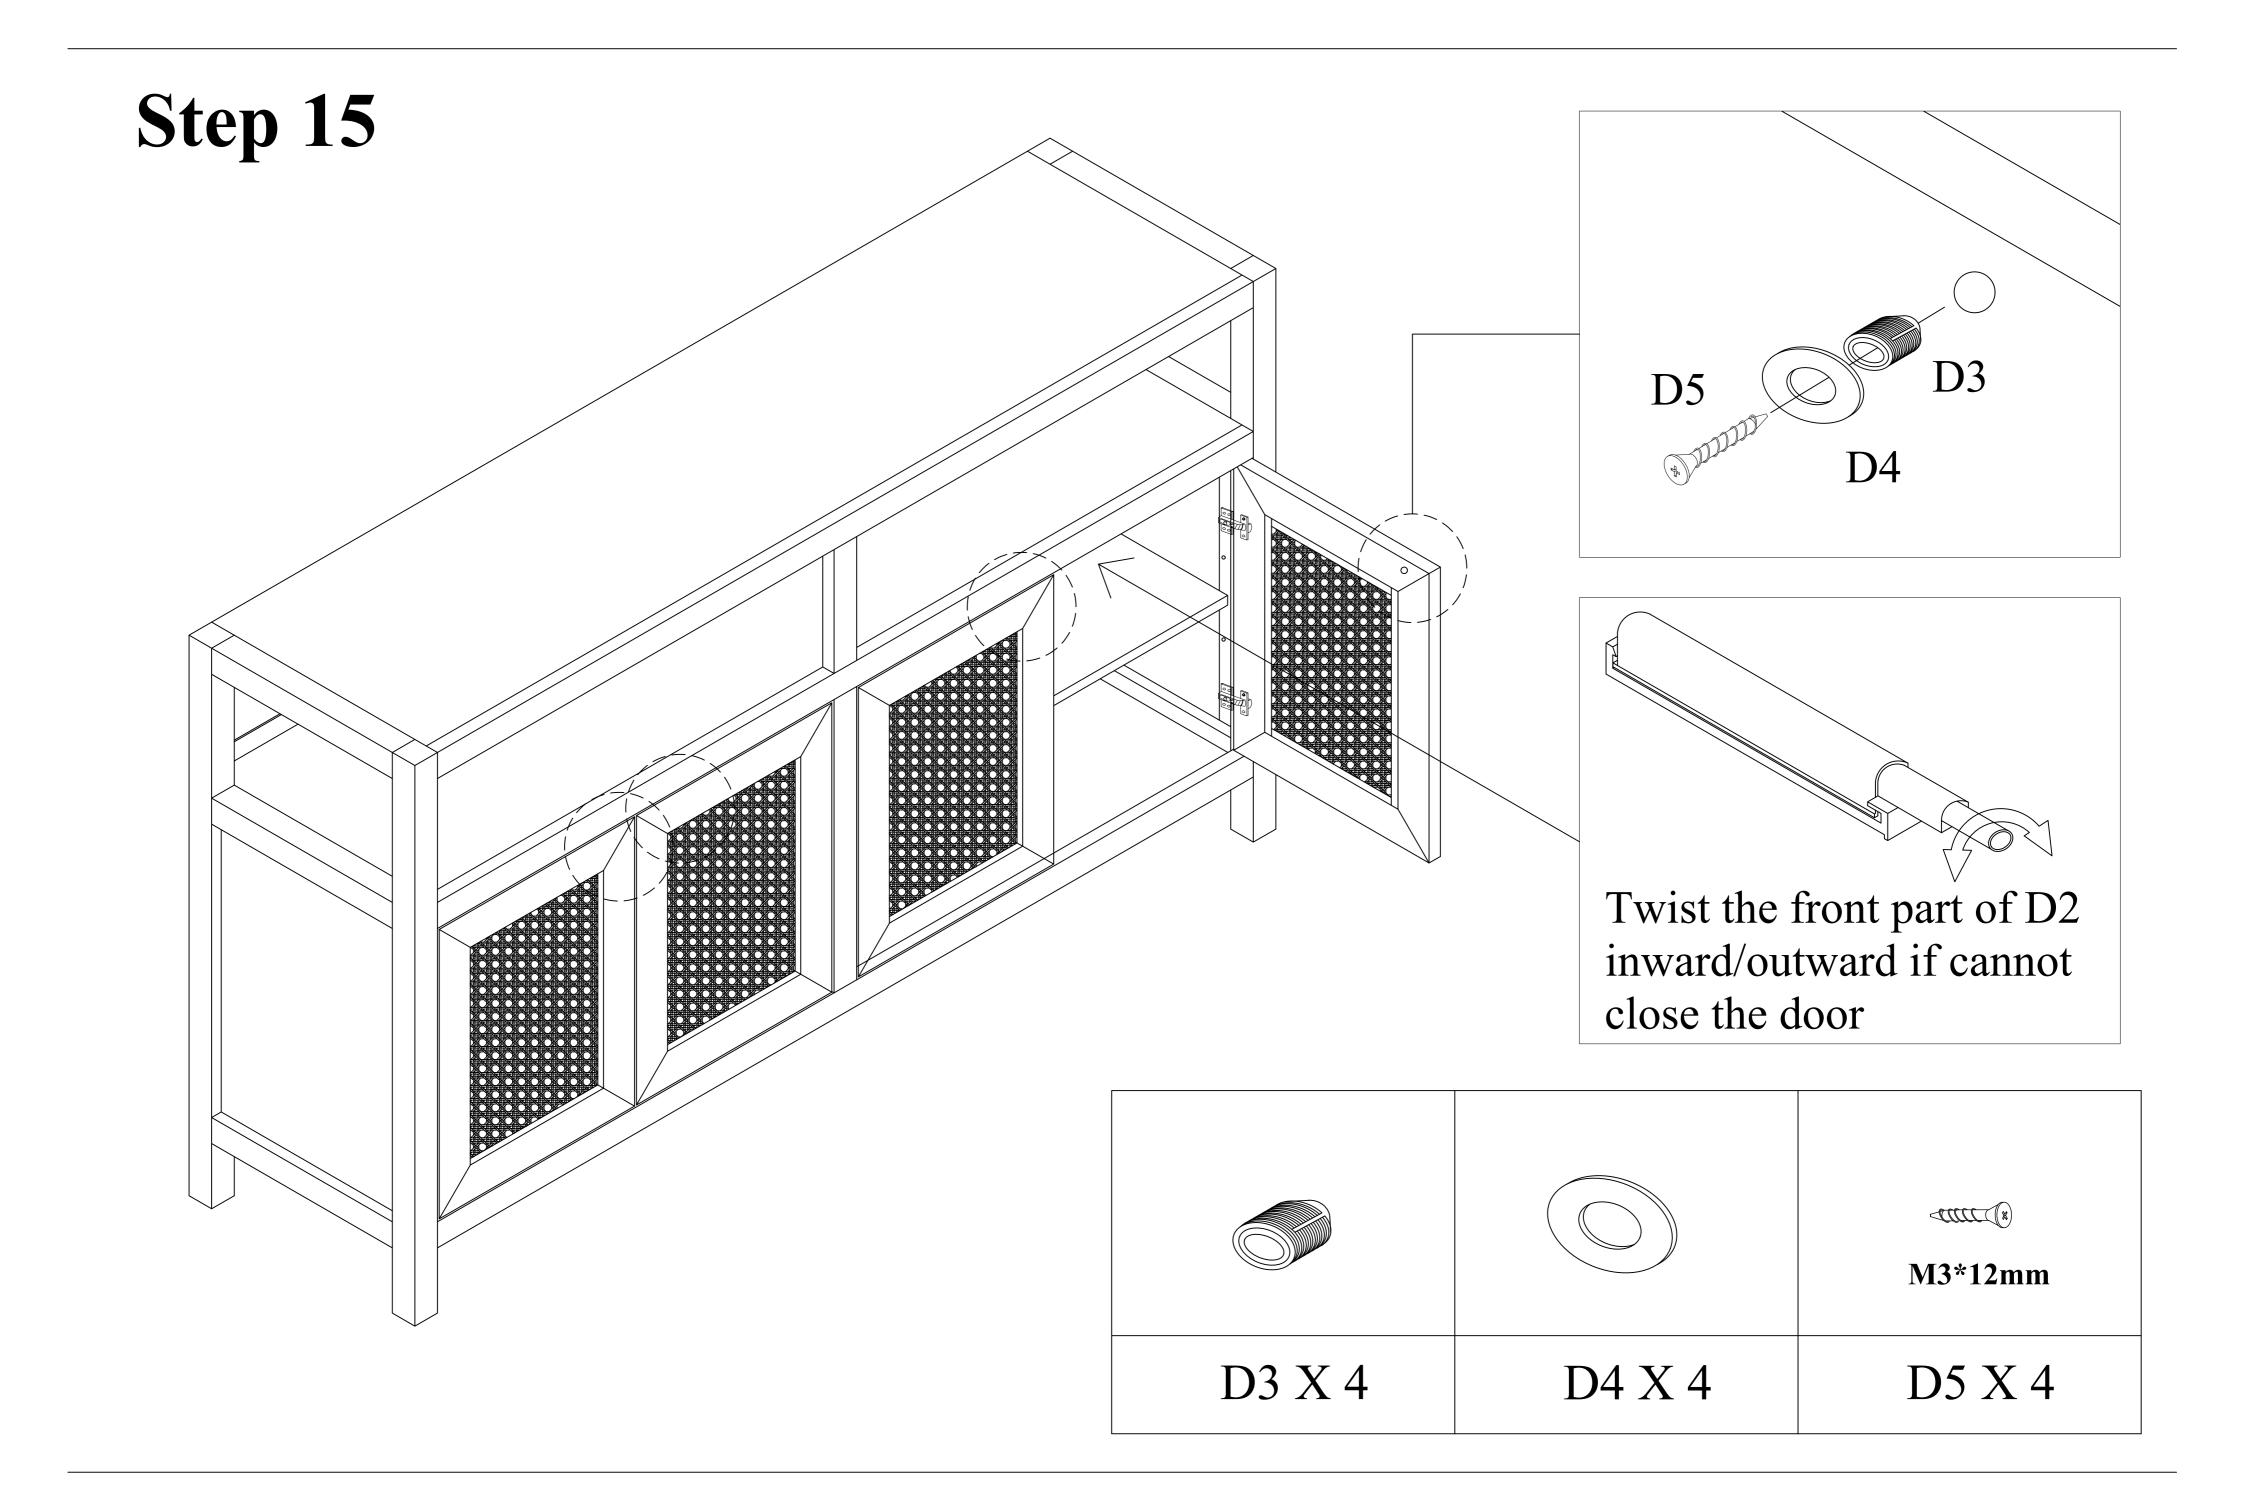

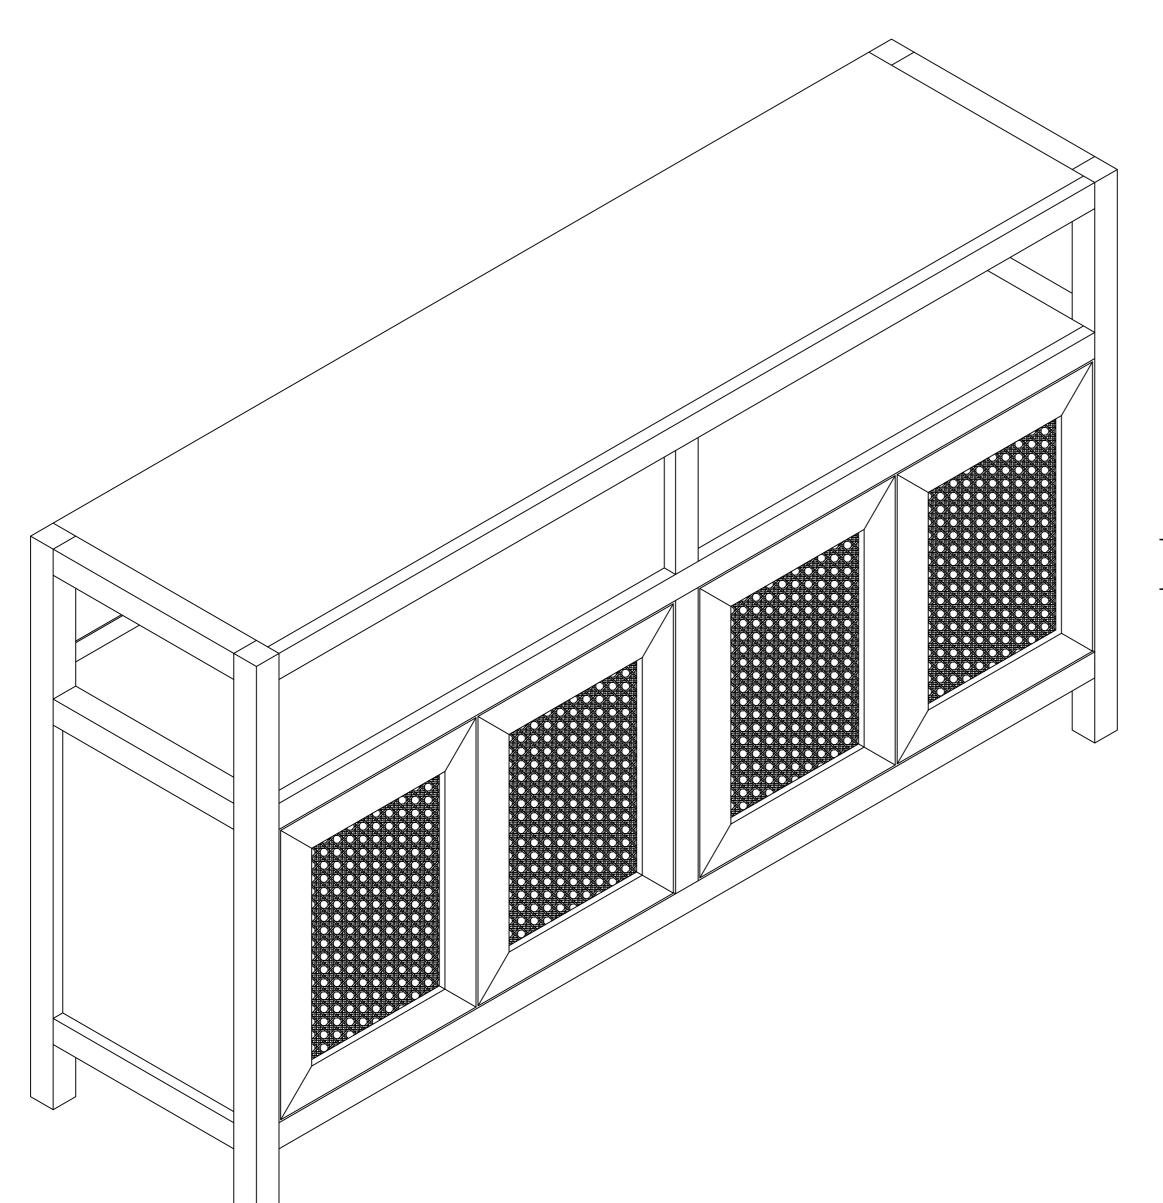


Assembly is complete.


Please refer next page for anti-tipping kit installation.

PAGE 14 OF 15 MADE IN MALAYSIA


ANCHORING CABINET

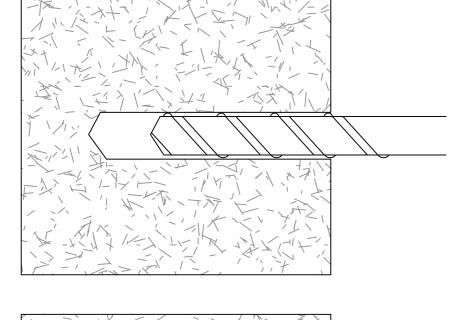


1. Use electric drill to drill a hole on the wall, the diameter and depth need to keep same with wall plug (J1) provided (4*30mm)

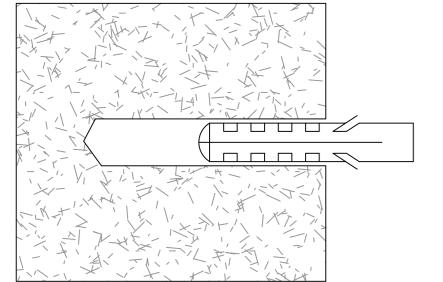

2. Use a rubber hammer to knock wall plug (J1) into the wall

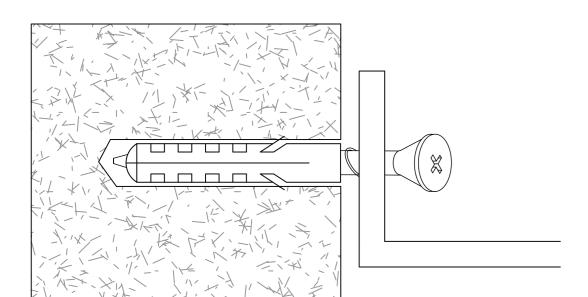

3. Insert the longer screw (J3) through washer (J5) & L bracket (J2) provided as shown below. Attach screw & washer (J4,J5) onto cabinet's sides to hold it.

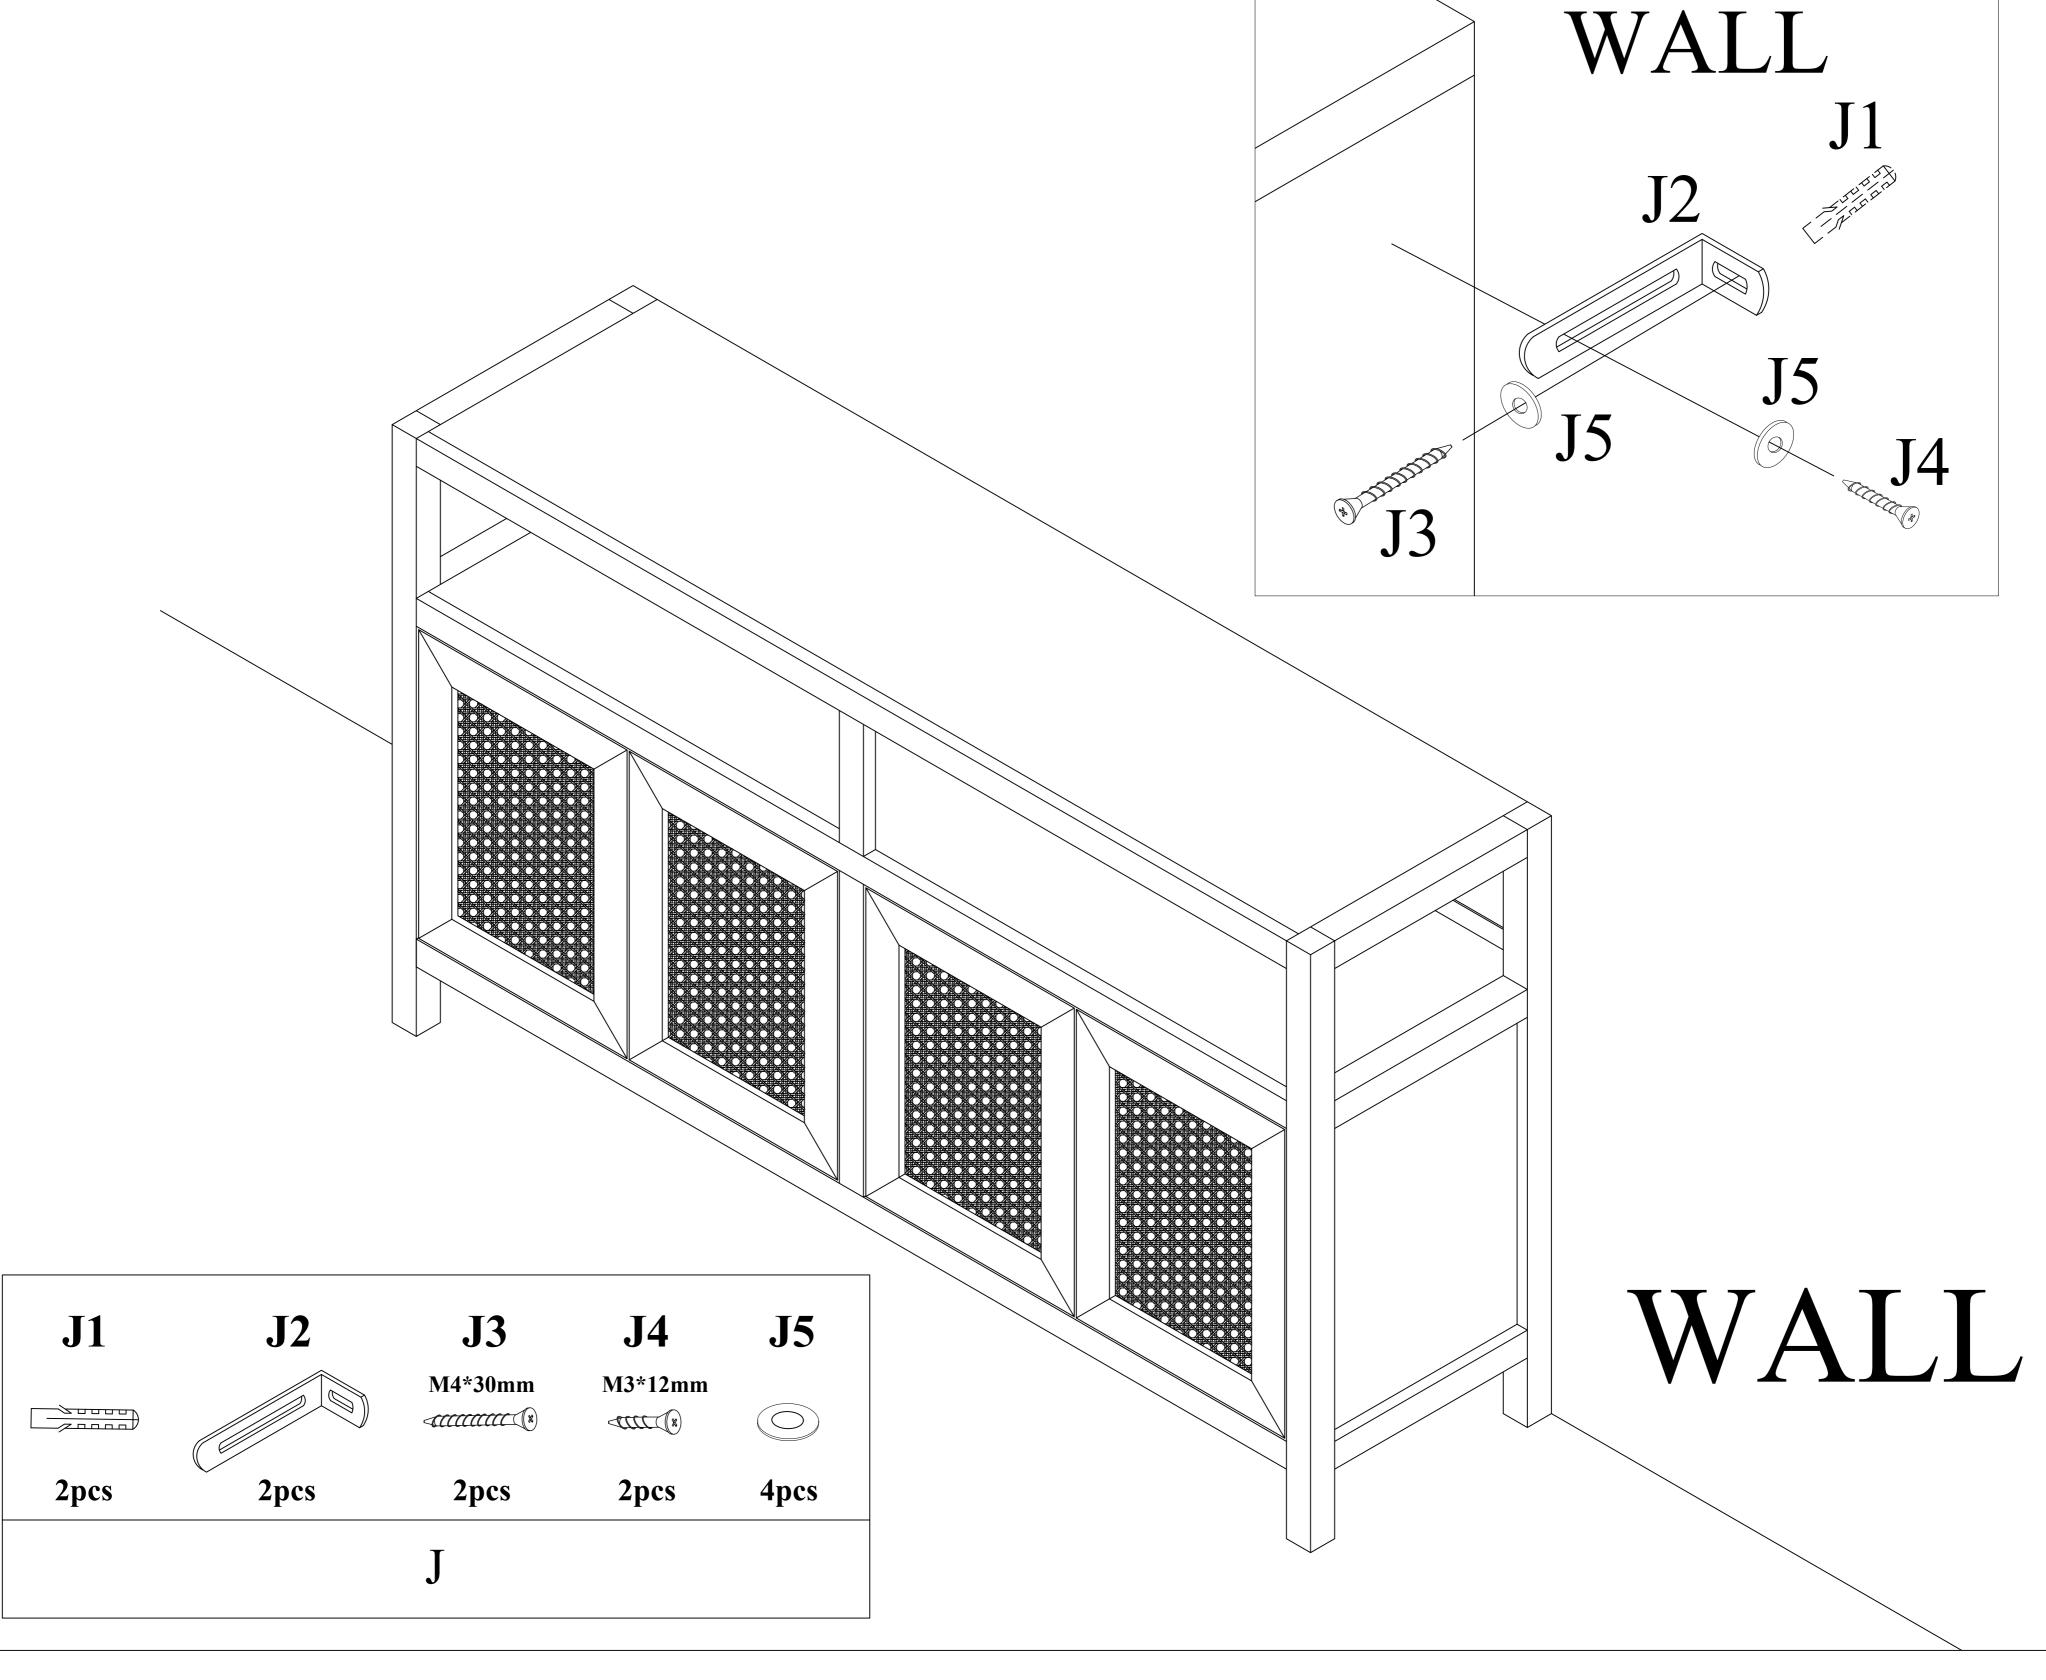

PAGE 15 OF 15