









1 Unpack

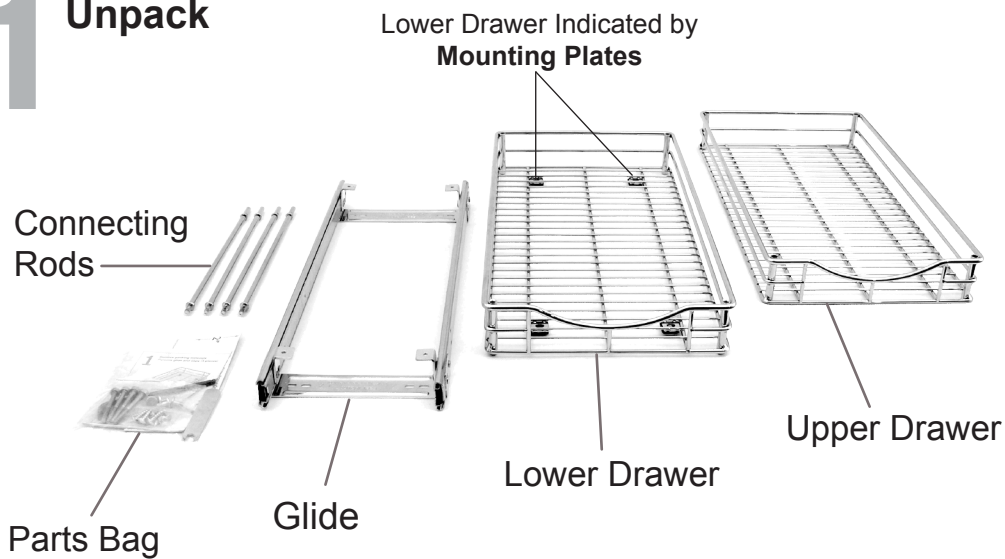


Parts Bag Includes:

-  Long Screws (4)
-  Mounting Screws (4)
-  Wood Screws (6)
-  Flat Wrench
-  L-Shaped Wrench
-  Instructions
-  Alignment Guide


2 Thread Connecting Rods...


into lower drawer by hand-screwing into tubes.

Lower drawer indicated by mounting plates.

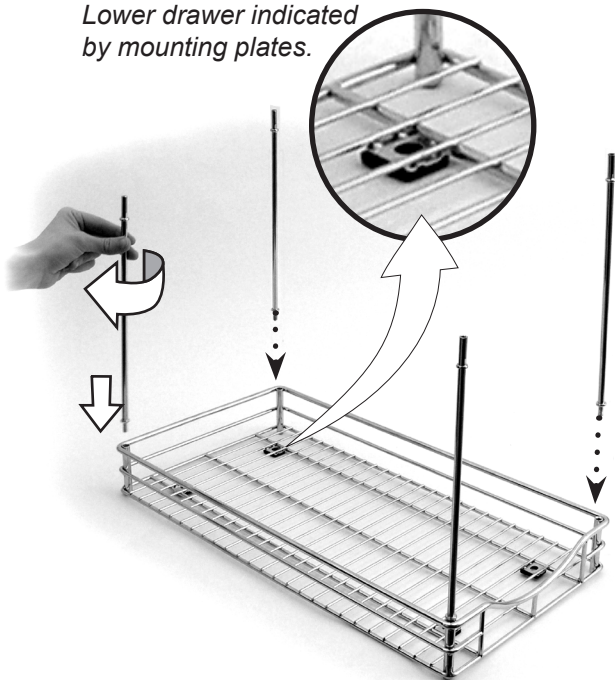


3 Tighten Connecting Rods...

using flat wrench  on flat spot near top of rods.

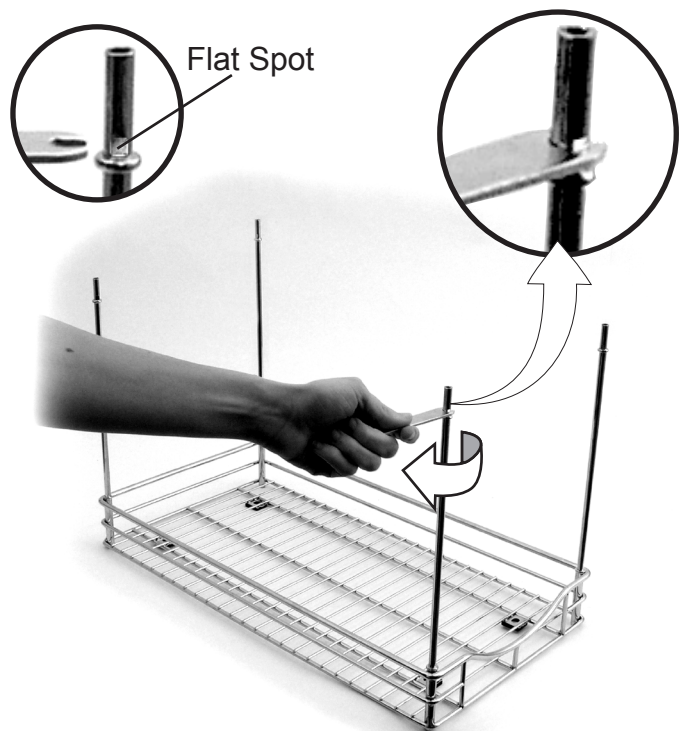


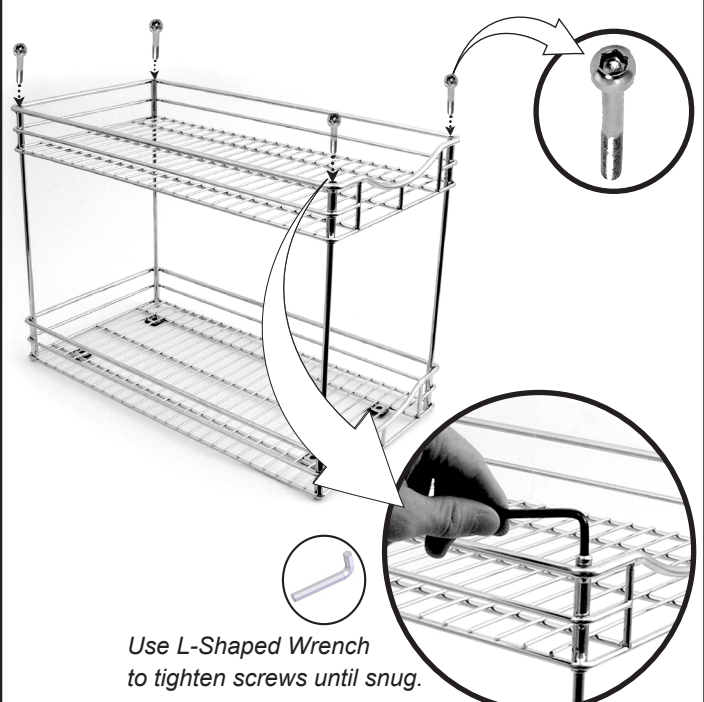
4 Place Upper Drawer...

onto connecting rods by inserting the rods into the corner tubes.

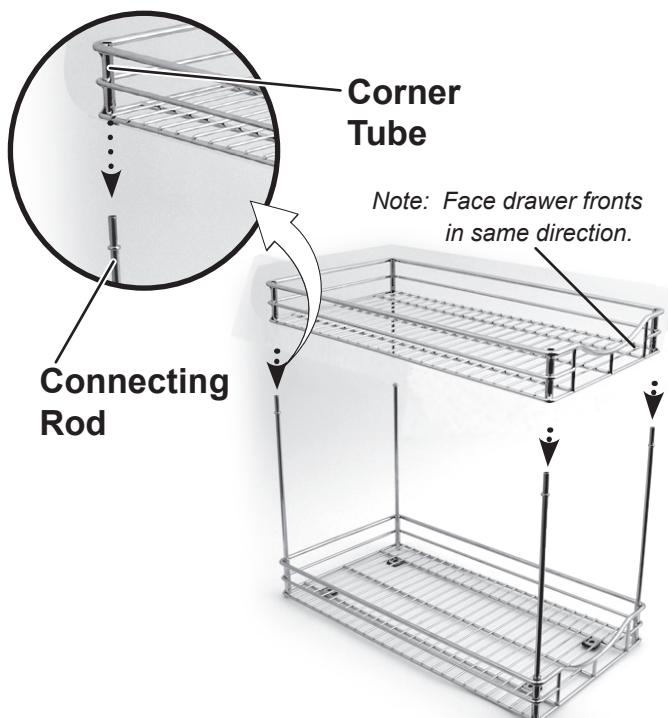

5 Secure Upper Drawer


Insert the 4 Long Screws  into the Upper Drawer corner tubes and tighten using the L-shaped wrench.



6

Align

Use alignment guide found in parts bag to align glide-frame inside of cabinet.

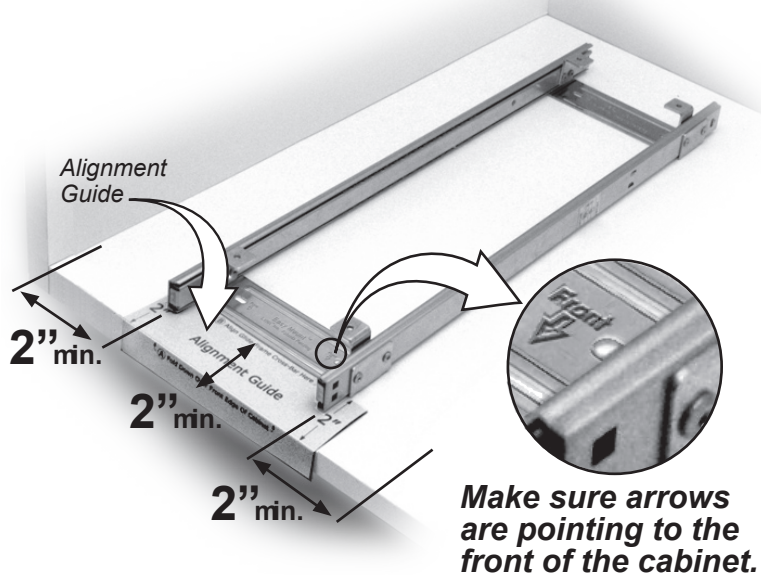

7

Check

Set the assembled double drawer onto glide-frame with mounting holes aligned.



Check for adequate cabinet and door clearance.


Adjust glide frame position as needed.

8

Install

Remove assembled drawers from glide-frame.

Move glide rails slightly forward as shown and install glide-frame into cabinet using wood screws (🔩) found in parts bag.

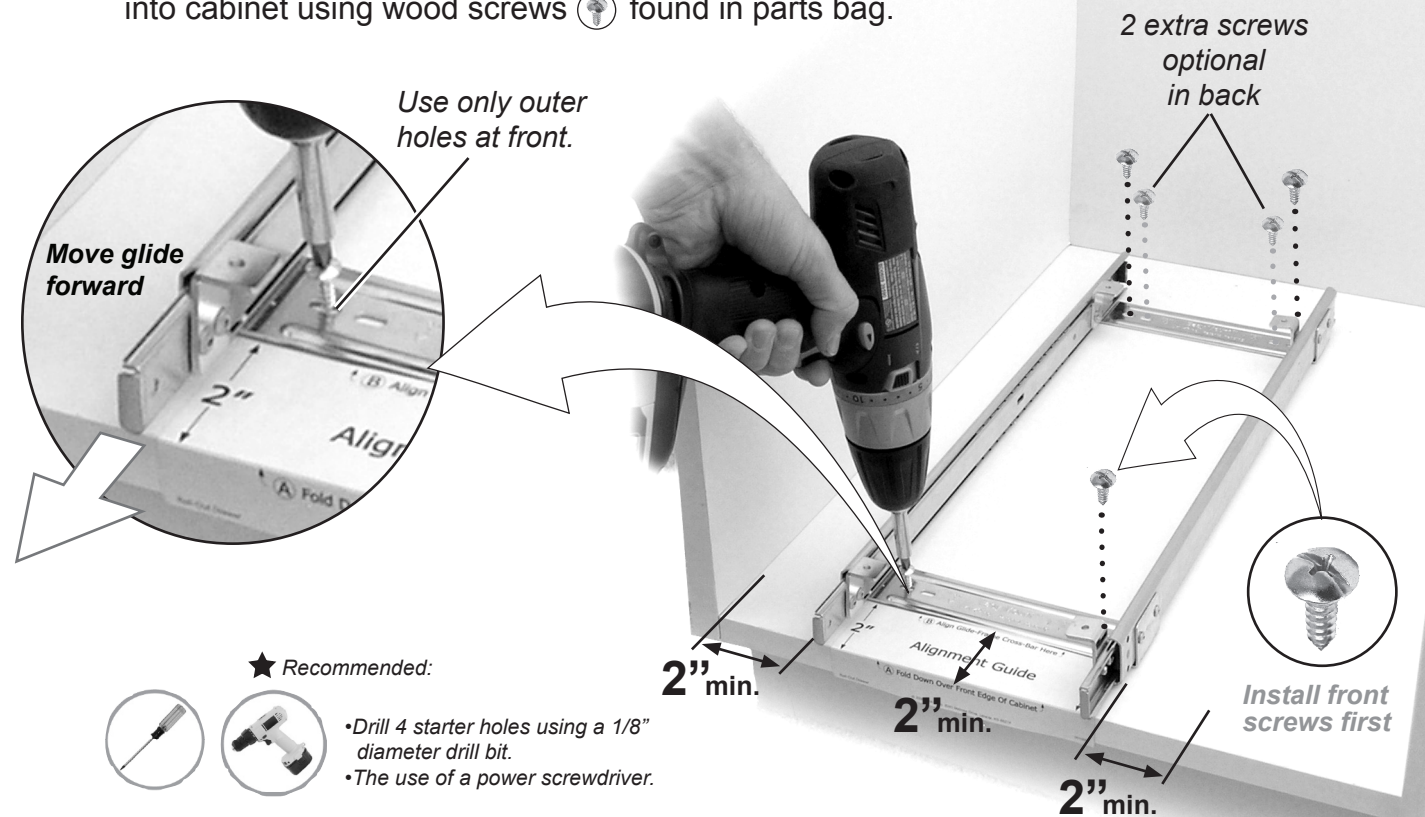

★ Recommended:



- Drill 4 starter holes using a 1/8" diameter drill bit.
- The use of a power screwdriver.

9

Mount

Set assembled drawers back onto glide-frame with mounting holes in base drawer and glide-frame aligned.

Attach base to glide frame using mounting screws. (🔩)

Only gently tighten.



★ Turn screws until just snug

