ASSEMBLY INSTRUCTIONS




- ◆ Inspect the wire insulation for any cuts, abrasions, or exposed copper that may have resulted during shipping. If there is a defect in the wire, do not attempt installation.
- ◆ Before starting installation of this fixture or removal of a previous fixture, disconnect the power by turning off the circuit breaker or by removing the fuse at the fuse box.




👍 If you need further assistance, please contact us by Email: customersupport@superiordecorinc.com





HARDWARE INCLUDED









Cover



Decorative

Nut



Stems(A~D)



Canopy



Mounting Unit














Wire Nuts

*PARTS SHOWN MAY DIFFER SLIGHTLY PER LIGHT FIXTURE

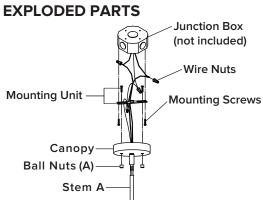


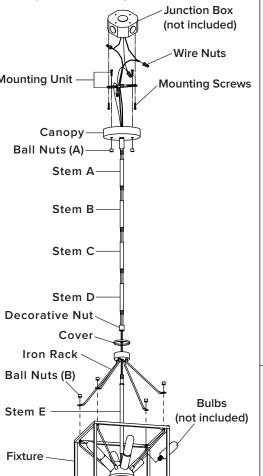


INSTALLATION STEP 1 Unscrew the ball nuts (A) from the mounting unit. Use the mounting screws to attach the

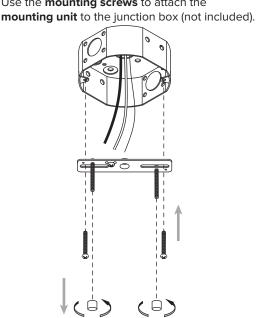


STEP 2

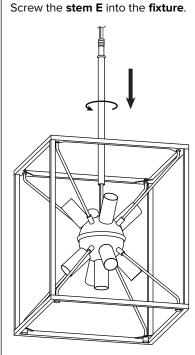


STEP 3 Adjust arms to proper position.



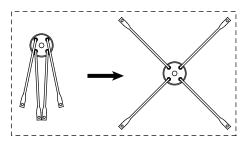


ASSEMBLY INSTRUCTIONS (INSTALLATION)

Attach the iron rack onto the fixture using ball nuts (B) as shown.

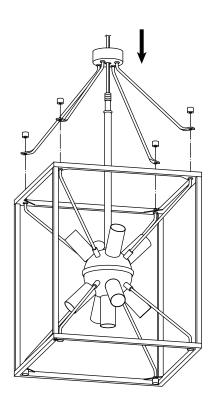

STEP 5


Place the cover onto the iron rack, then secure with decorative nut.

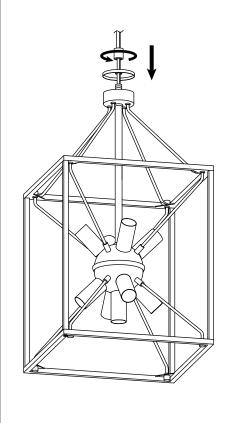

STEP 6

Install **stem** connecting the upper and lower ends of the lamp body.

Install stems based on the desired length of the item on the fixture, adding conopy one finished.

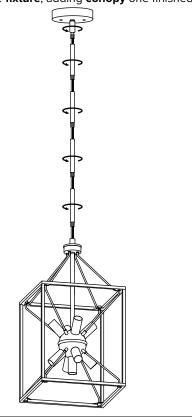


STEP 7

Black or Red wire (hot) from the junction box

White wire (neutral) from the junction box


Make the electrical connection from the junction box (not included) to the fixture. Connect the ground wire to the mounting unit using the preinstalled green ground screw. Next, connect the positive, negative and ground wires

with the supplied wire nuts. Secure with electrical tape.

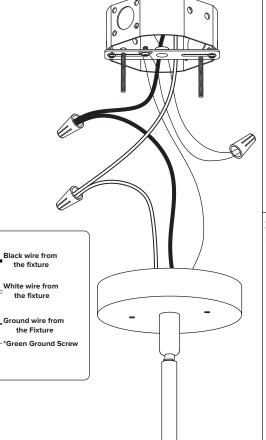

STEP 8

Secure the canopy to the mounting unit with the ball nuts (A).



STEP 9

