


SHOWER STOOL ASSEMBLY INSTRUCTIONS

Please keep for future reference

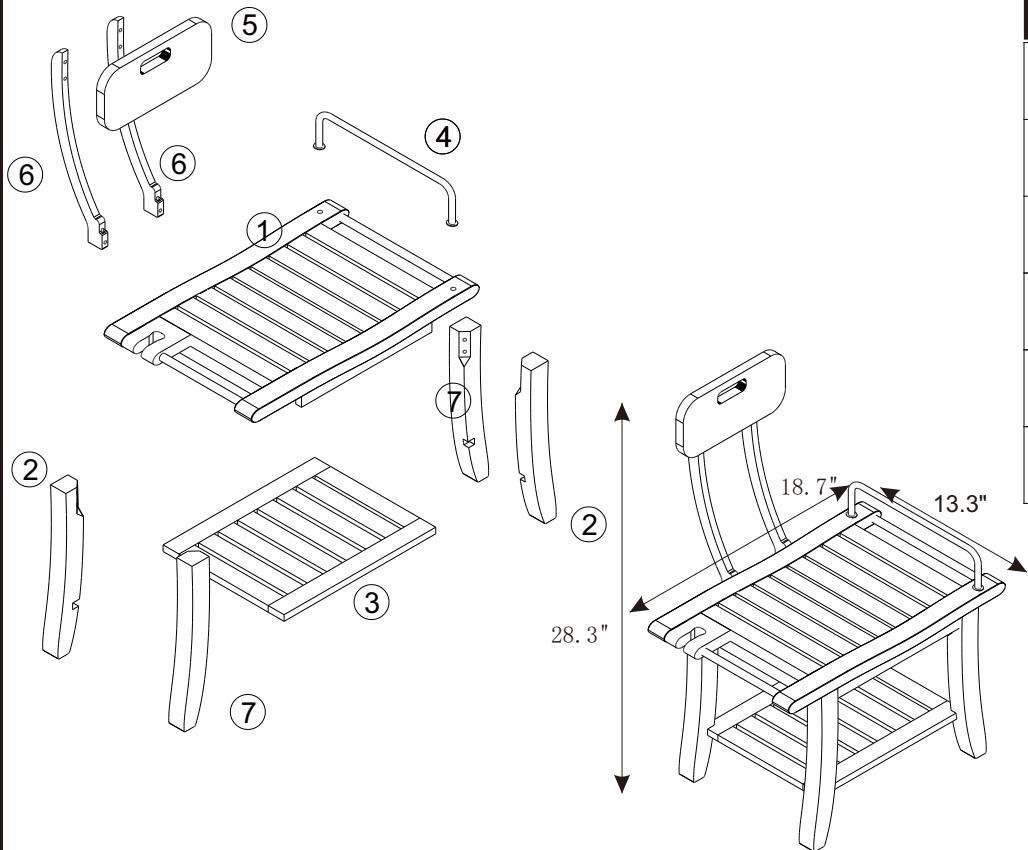


HARDWARE LIST

A	 M6x45	8 pcs
B	 M5x65	1pc
C	 M4x107	1pc
D	 M8x30	2 pcs
E	 M6x 25	4 pcs
F	 M6x70	4 pcs


We recommend air-drying the wet teak shower bench and NOT leaving in the sun.

STEP1

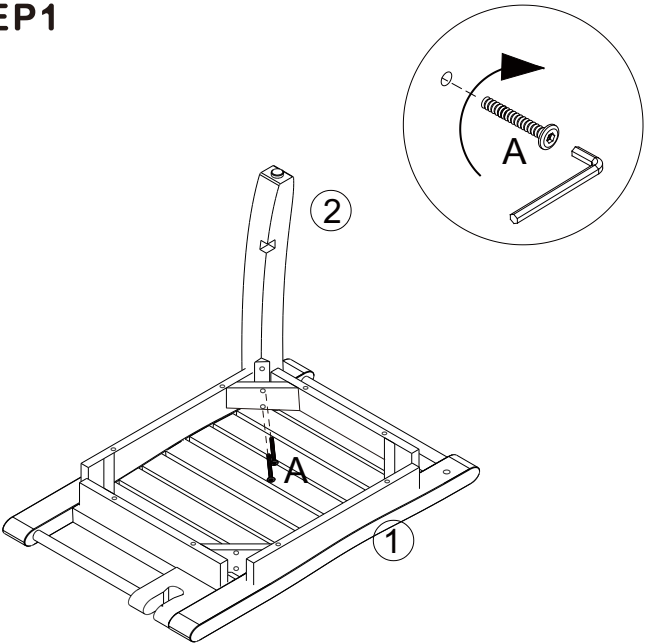

C		1 pcs
A		2 pcs


STEP2

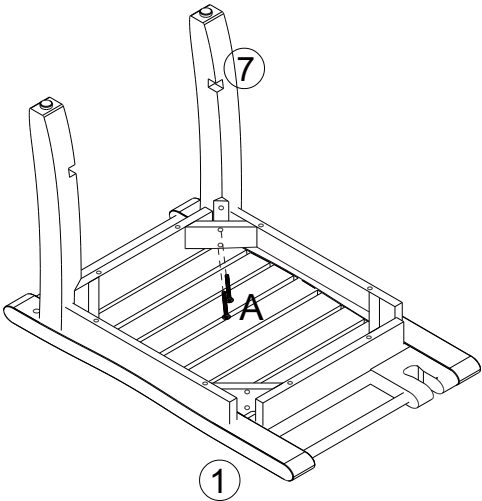


C		1 pcs
A		2 pcs

ASSEMBLY INSTRUCTIONS

STEP3

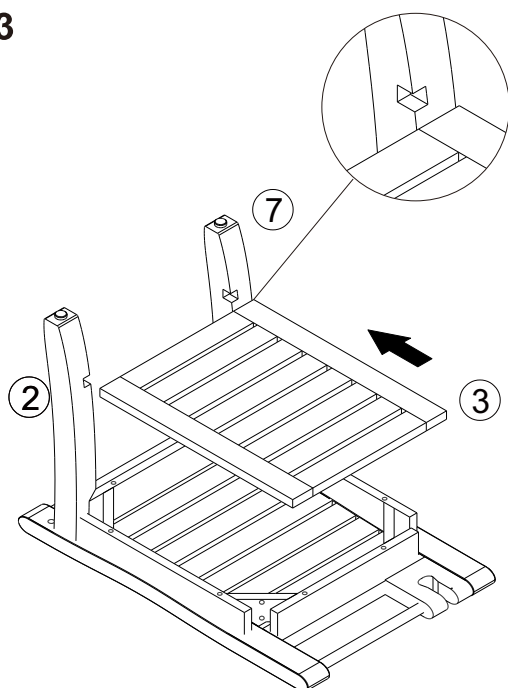


STEP4

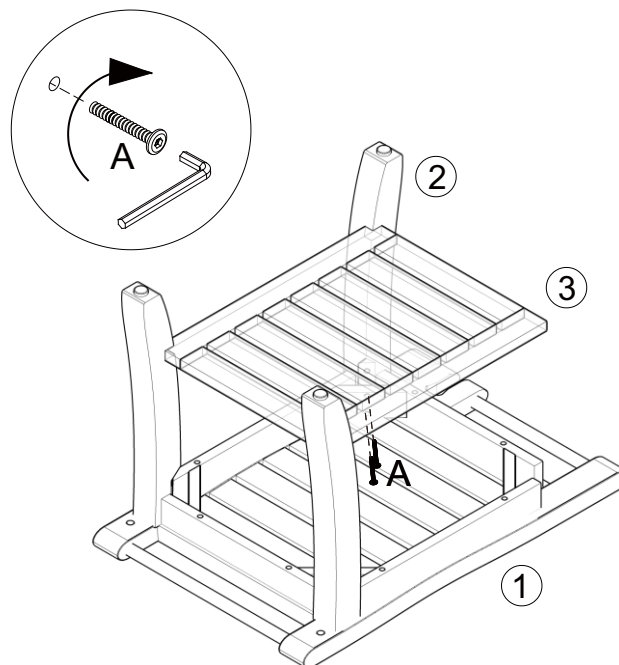


C		1 pcs
A		2 pcs

STEP5

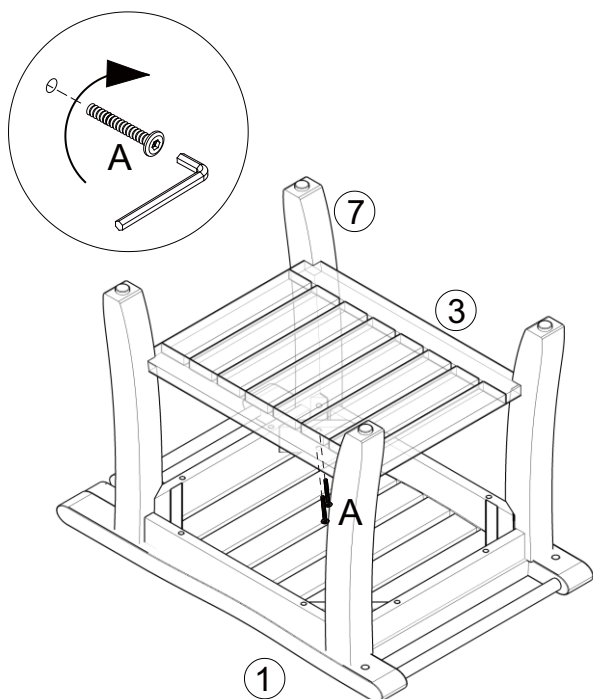

C		1 pcs
A		2 pcs


STEP6

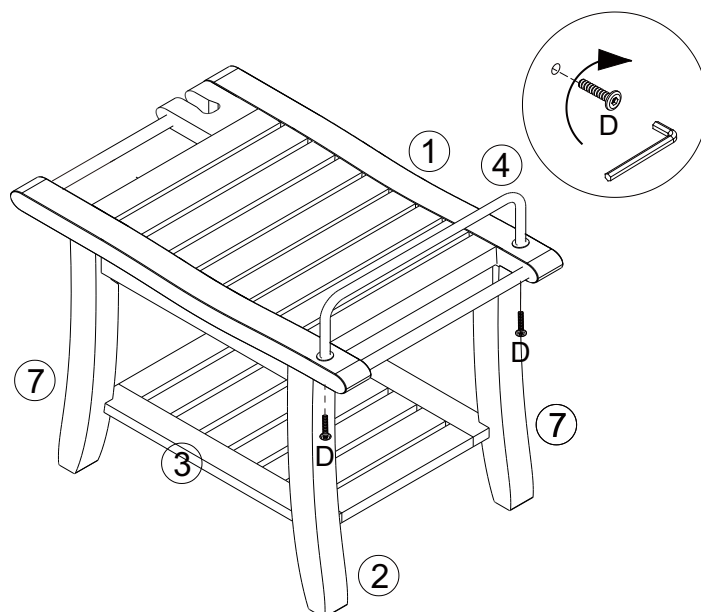



B		1 pcs
D		2 pcs

ASSEMBLY INSTRUCTIONS

STEP 7

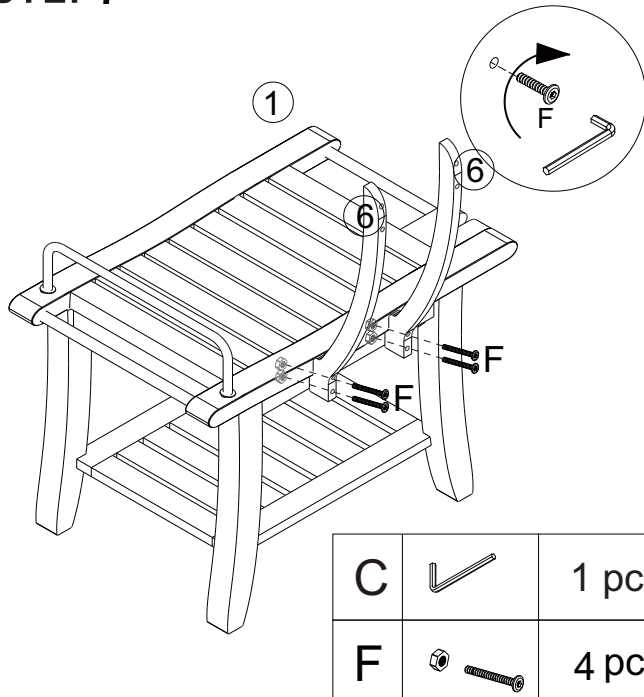

STEP 8

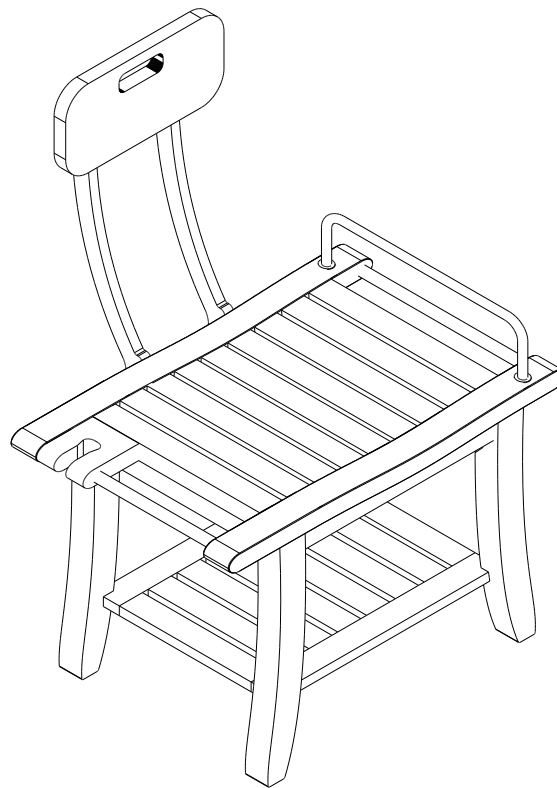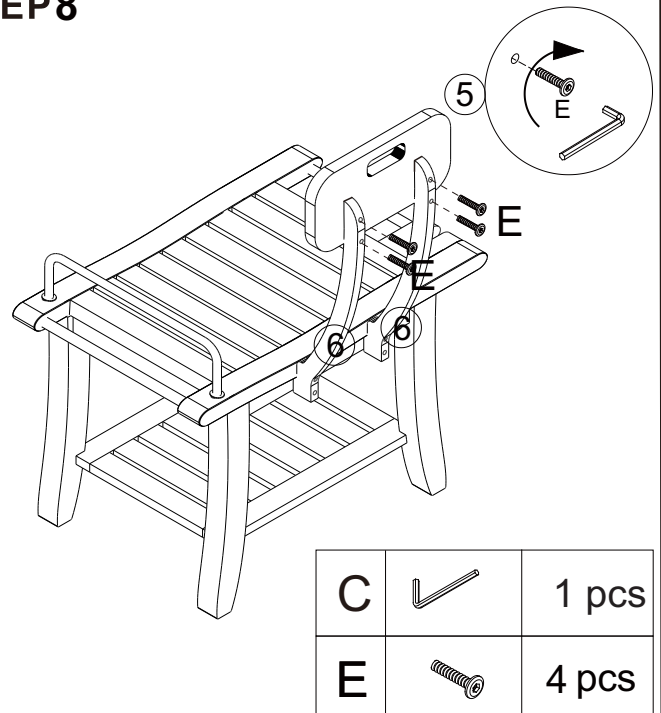

We value your trust in our company, we will do our best to meet your service expectations. Should you have any assembly related questions, parts replacement requests, comments or suggestions, please feel free to contact us at email **cs@lovitgoshop.com** . Please provide your name and order no. so that we can better assist you. To help expedite the service, please have the assembly instructions available along with your order receipt.