


# ASSEMBLY INSTRUCTIONS


## FULL SIZE HOUSE BED WITH TRUNDLE AND DRAWERS

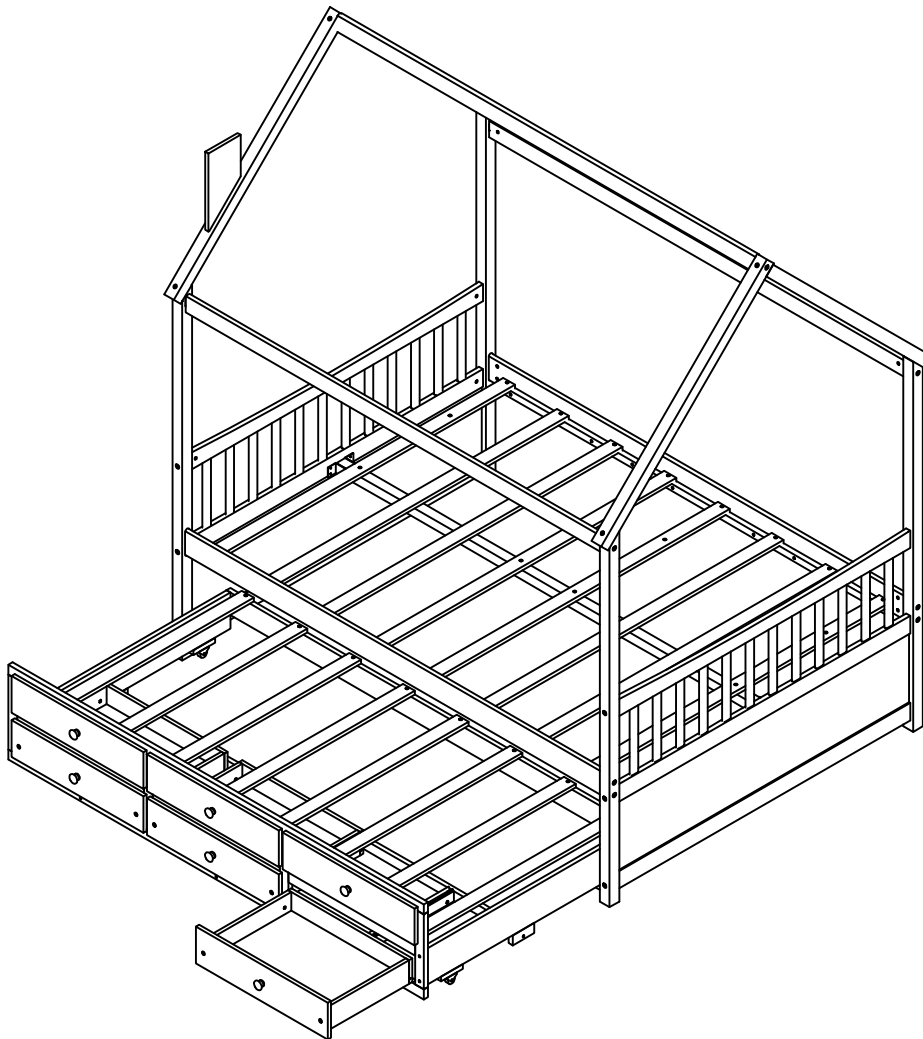

If you have any questions, please feel free to contact us.  
Email: [service@qualfurn.net](mailto:service@qualfurn.net)












**WF290936 \ WF290937**

# Detail View










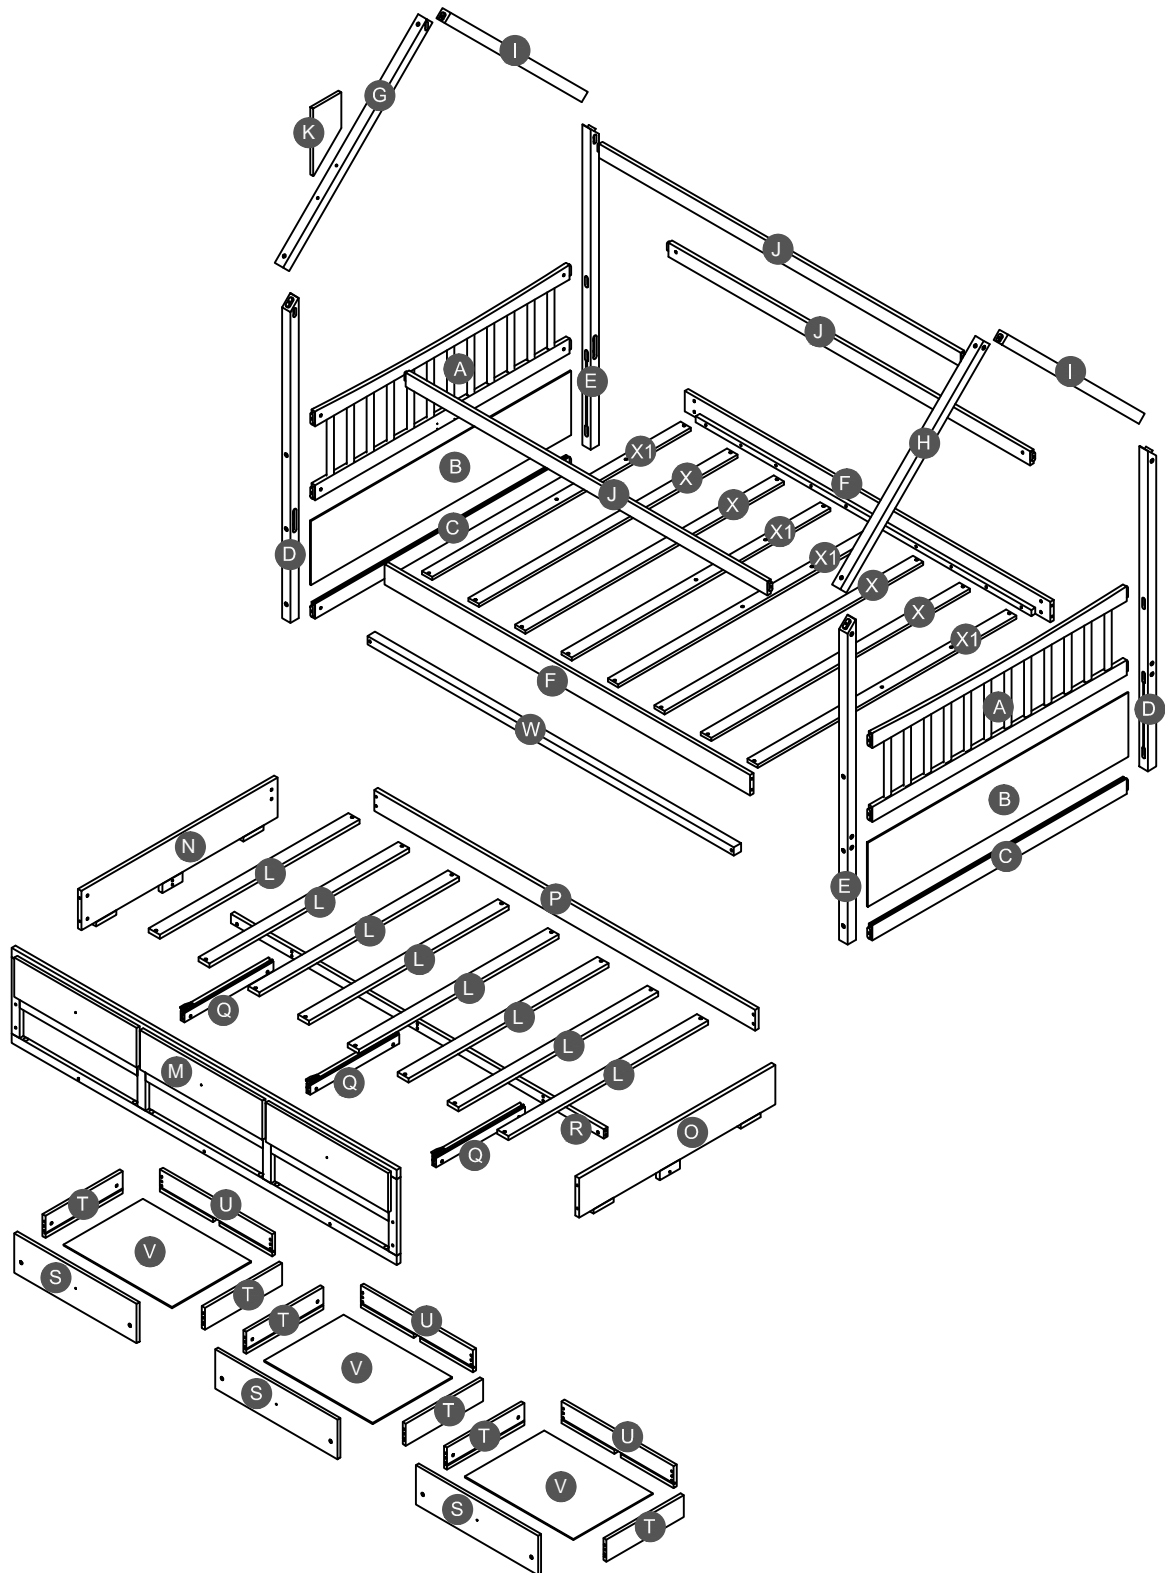






# Part List



















**WF290936**

<b>D</b>  Leg (Left Front / Right back ) - 2pcs	<b>E</b>  Leg (Left back / Right Front ) - 2pcs	<b>F</b>  Side rail (Back & Front) - 2pcs
<b>J</b>  Upper horizontal - 3pcs	<b>M</b>  Front panel of trundle - 1pc	<b>P</b>  Back panel side rail of trundle - 1pc
<b>R</b>  Support rail of trundle - 1pc	<b>U</b>  Back drawer panel - 3pcs	<b>W</b>  Lower support slat - 1pc
<b>X</b>  Slats - 4pcs	<b>X1</b>  Slats - 4pcs	


## Hardware List WF290937

<b>A</b>  HB & FB - 2pcs	<b>B</b>  Side panel - 2pcs	<b>C</b>  Horizontal bar - 2pcs
<b>S</b>  Front drawer panel - 3pcs	<b>G</b>  Upper (Left Front) - 1pc	<b>H</b>  Upper (Right Front) - 1pc
<b>I</b>  Upper (Back) - 2pcs	<b>K</b>  Piece of decorate - 1pc	<b>N</b>  Left side panel of trundle - 1pc
<b>O</b>  Right side panel of trundle - 1pc	<b>T</b>  Left / right drawer panel - 6pcs	<b>V</b>  Drawer bottom - 3pcs
<b>L</b>  Slats - 8pcs	<b>Q</b>  Support drawer - 3pcs	

# Hardware List WF290937


<b>1</b>	 Ø8*30mm Wood dowel (26pcs)	<b>2</b>	 (Ø15)1/4"*100mm Hex-Head bolts (14pcs)	<b>3</b>	 (Ø15)1/4"*80mm Hex-Head bolts (12pcs)
<b>4</b>	 (Ø12)1/4"*60mm Hex-Head bolts (28pcs)	<b>5</b>	 (Ø12)1/4"*65mm Wood screws (8pcs)	<b>6</b>	 1/4"*15 (9.5mm) Horizontal-Hole bolts(54pcs)
<b>7</b>	 Ø38*31mm Pine Knob (6pcs)	<b>8</b>	 3/16"*25mm Ph zinc(Knob) (6pcs)	<b>9</b>	 45*20*35mm Caster (4pcs)
<b>10</b>	 400*30mm Upper slider drawer (3pcs)	<b>11</b>	 (1/4")4.5*58mm Allen key (2pcs)	<b>12</b>	 Ø4*30mm Wood screws (36pcs)
<b>13</b>	 Ø3.5*19mm Wood screws (8pcs)	<b>14</b>	 Ø3.5*12mm Wood screws (9pcs)	<b>15</b>	 116*40*27mm Metal bracket (2pcs)
<b>16</b>	 Ø3.5*15mm Wood screws (8pcs)	<b>17</b>	 (Ø13)1/4"*14mm Connect bolt (2pcs)	<b>18</b>	 (Ø12)1/4"*40mm Hex-Head bolts (2pcs)

## ASSEMBLY TOOLS REQUIRED ( NOT INCLUDED )




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


## STEP 1:

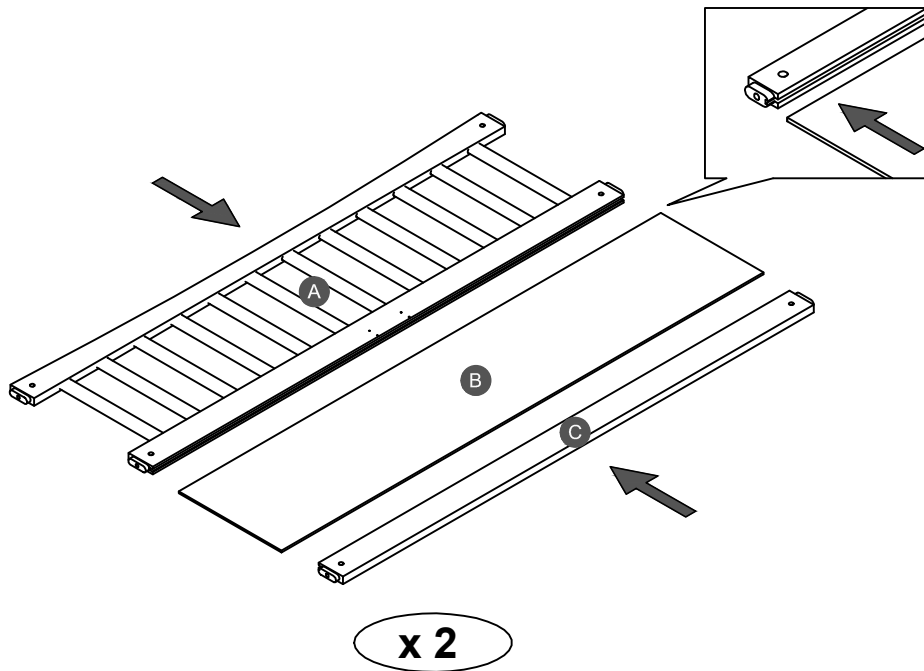


## STEP 2:

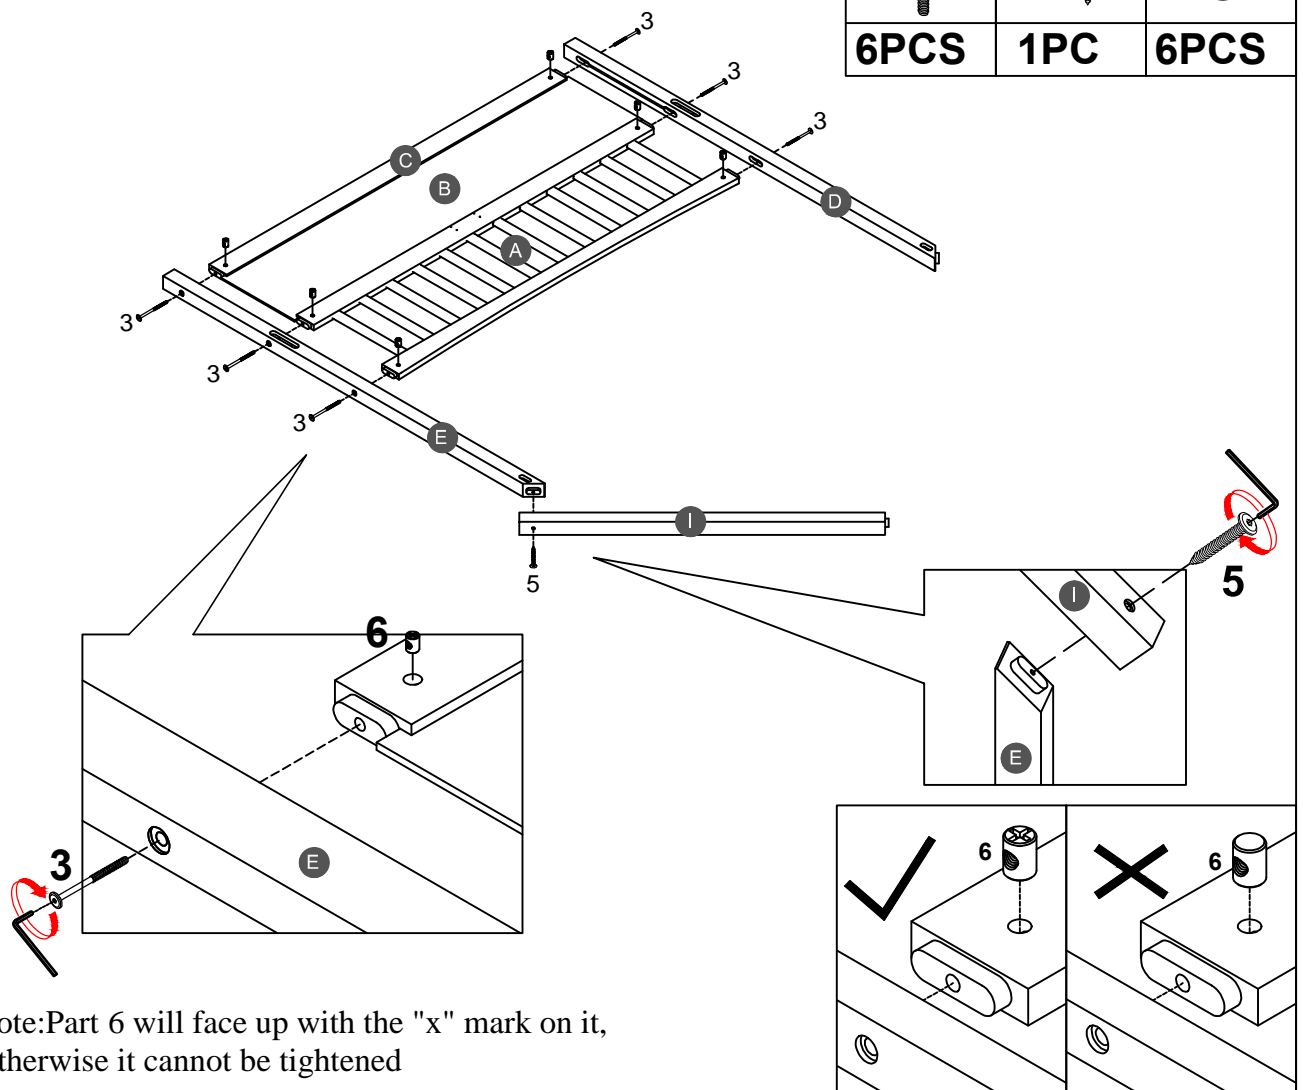


### STEP 3:

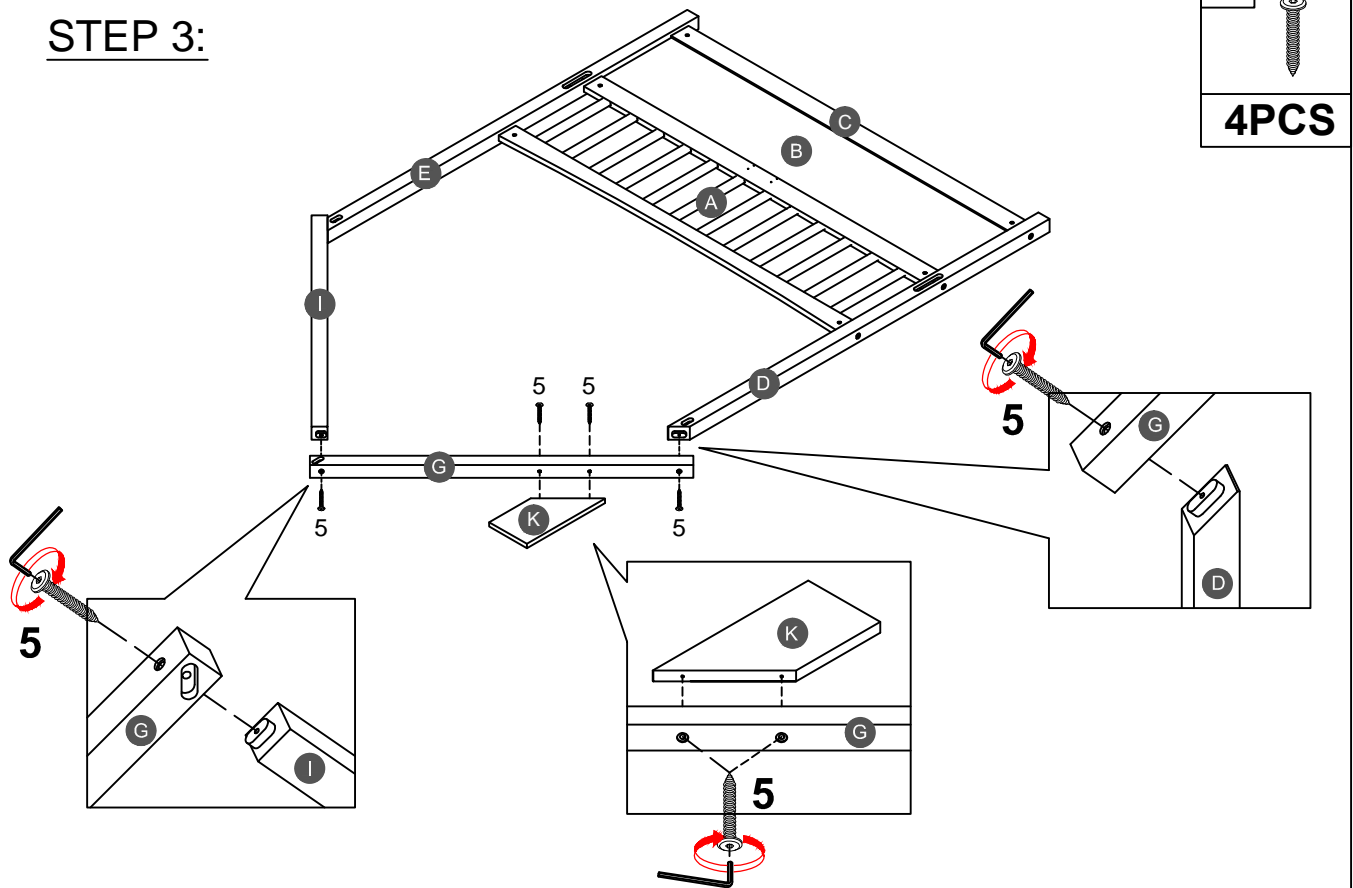


### STEP 4:

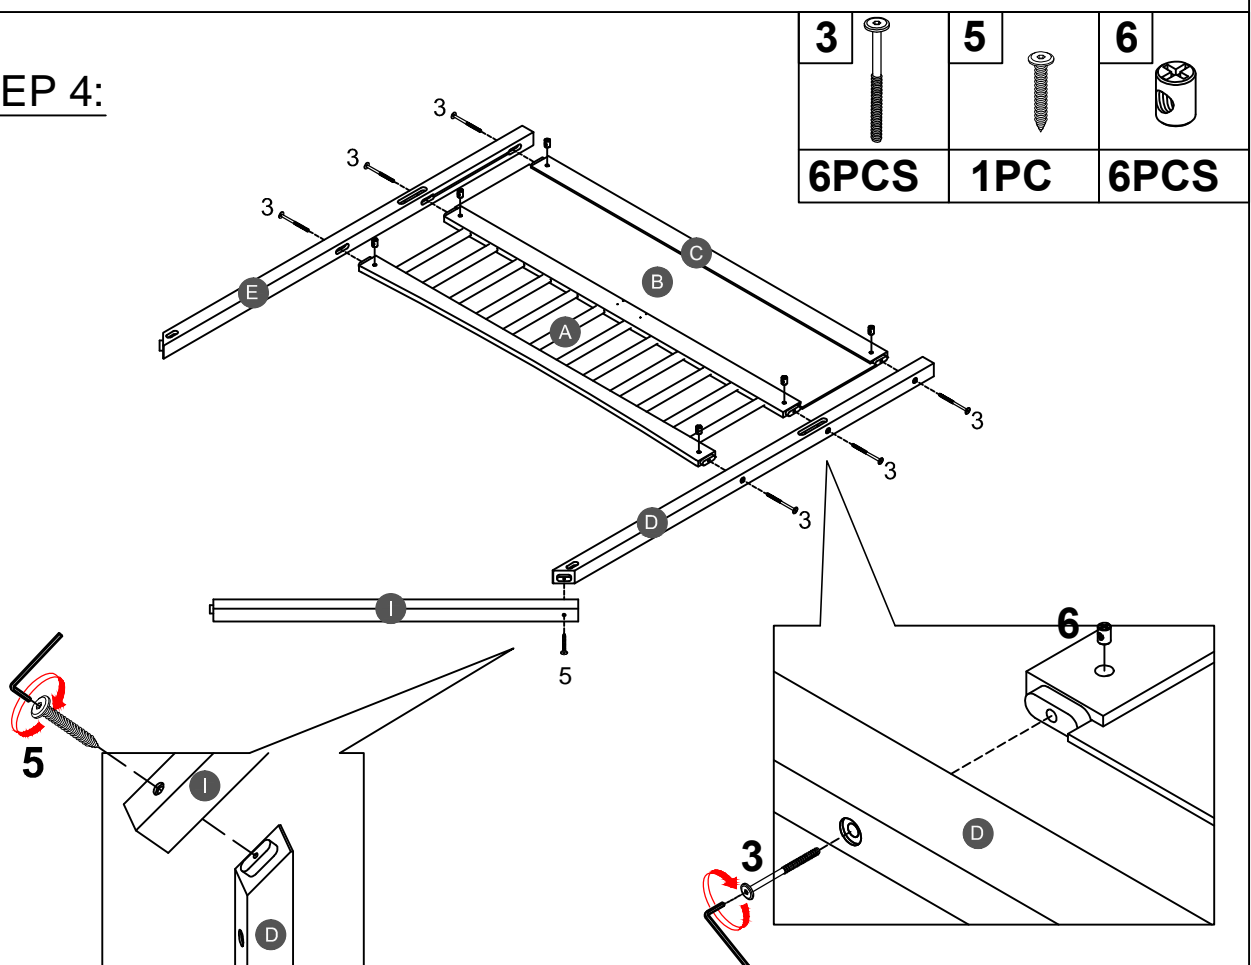

## STEP 5:

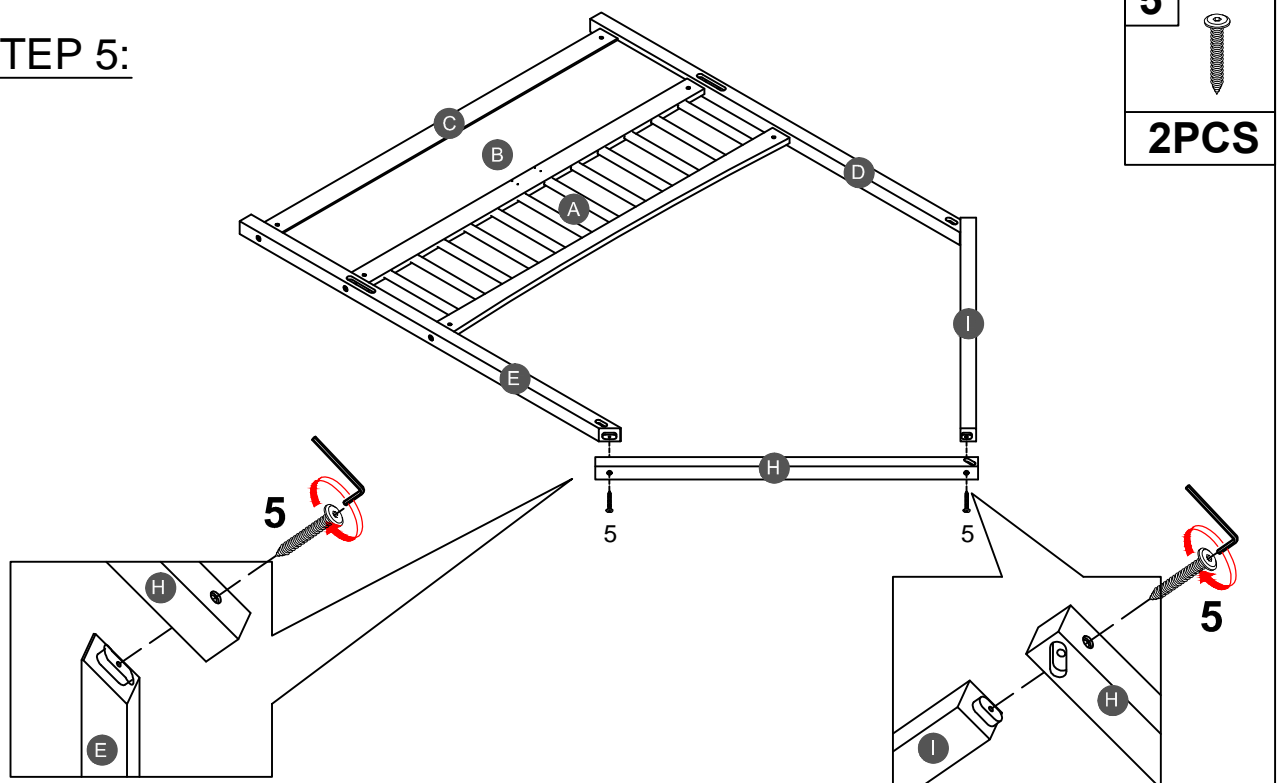


## STEP 6:

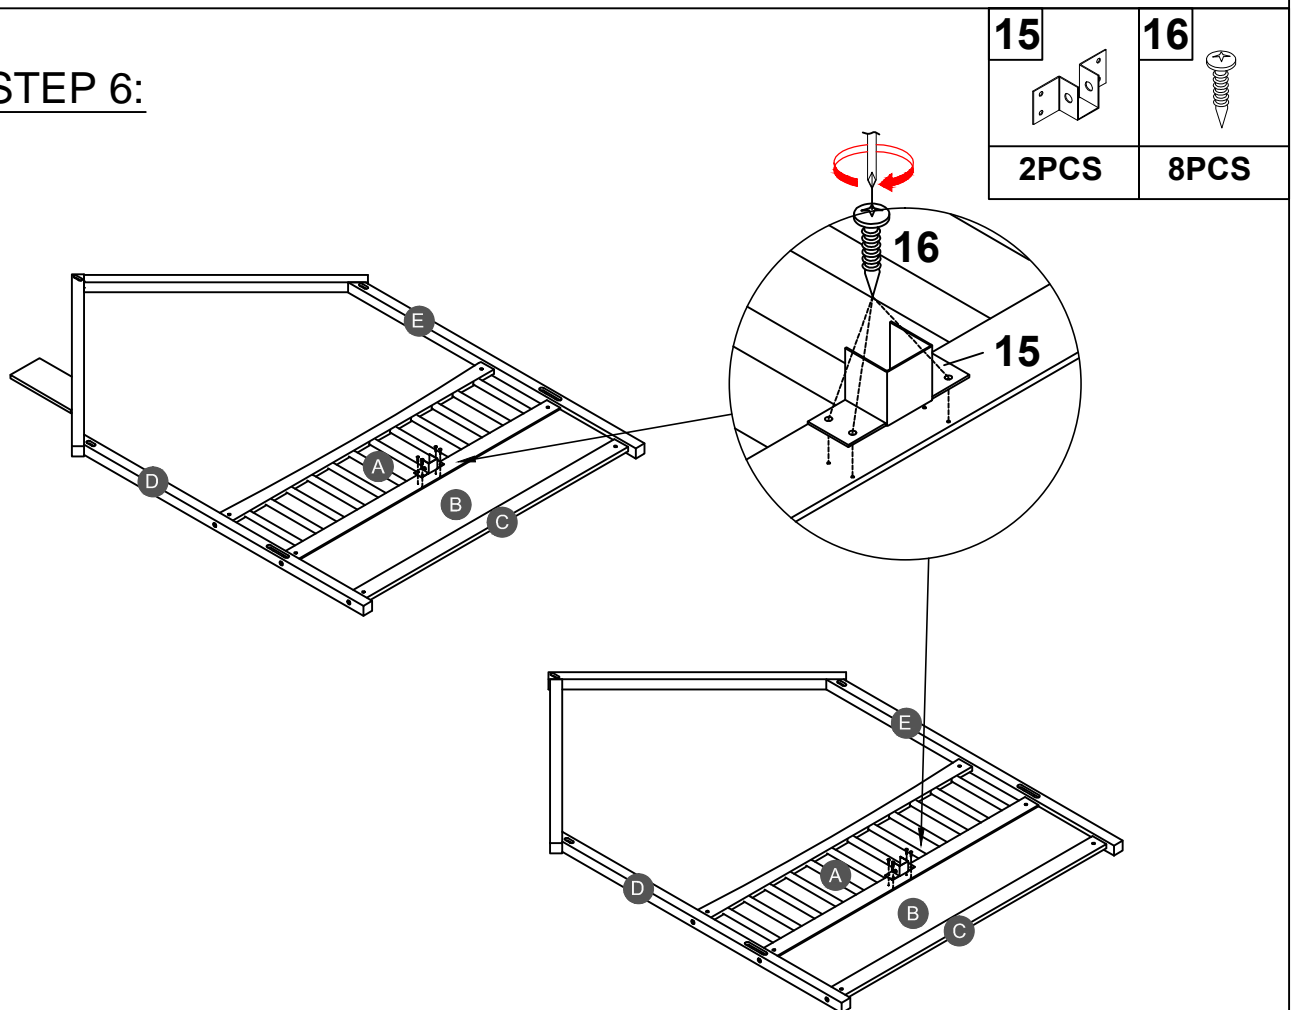


## STEP 7:

Remark: Upper horizontal  
paste stickers **WARNING: DO  
NOT HANG ON THIS BAR!**

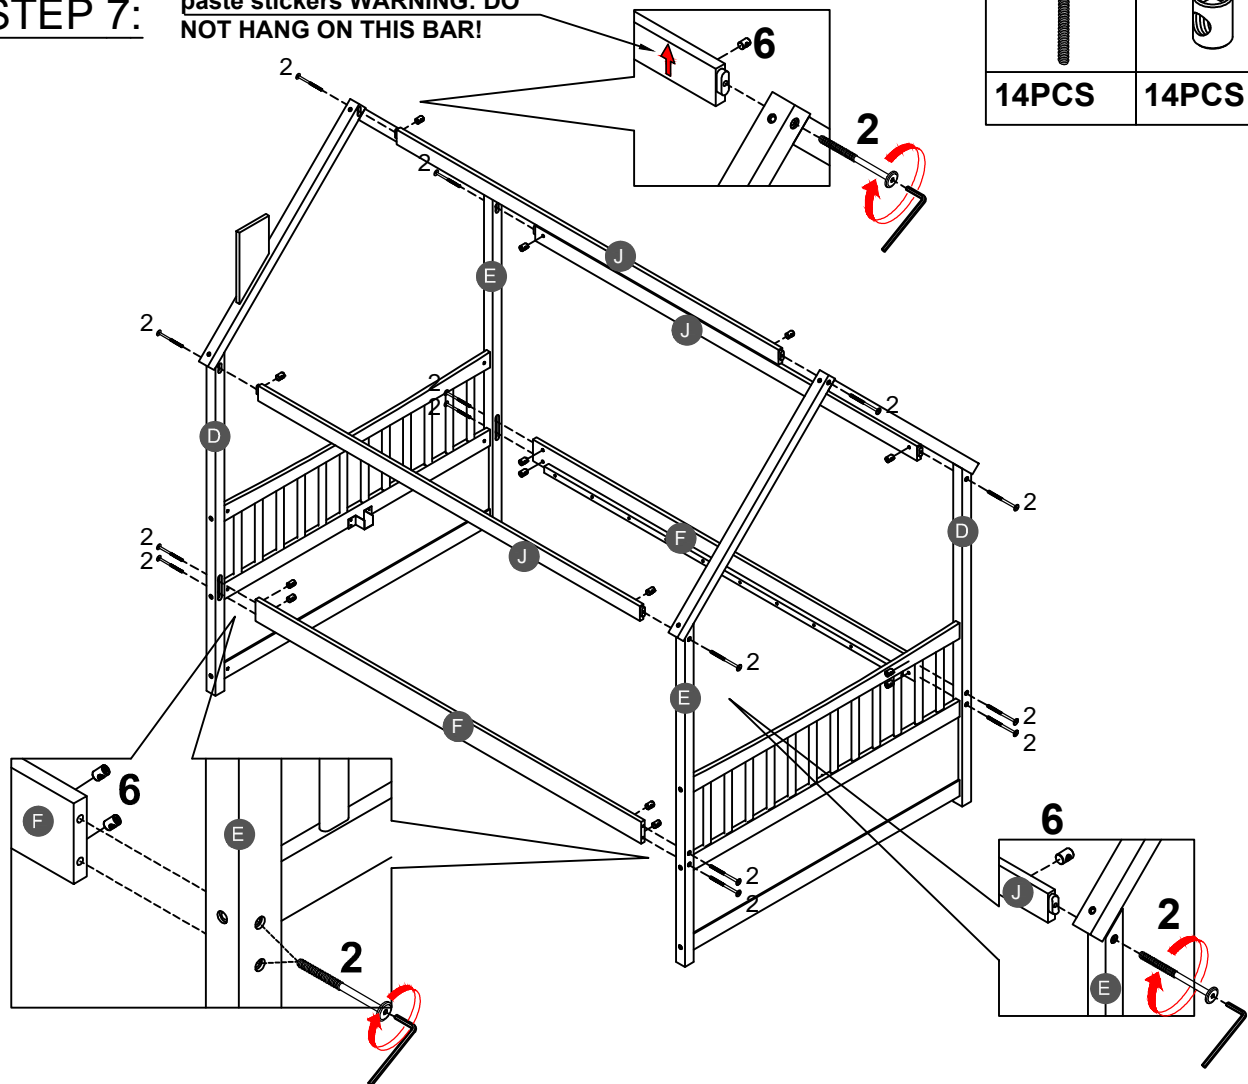

2	6
14PCS	14PCS

## STEP 8:

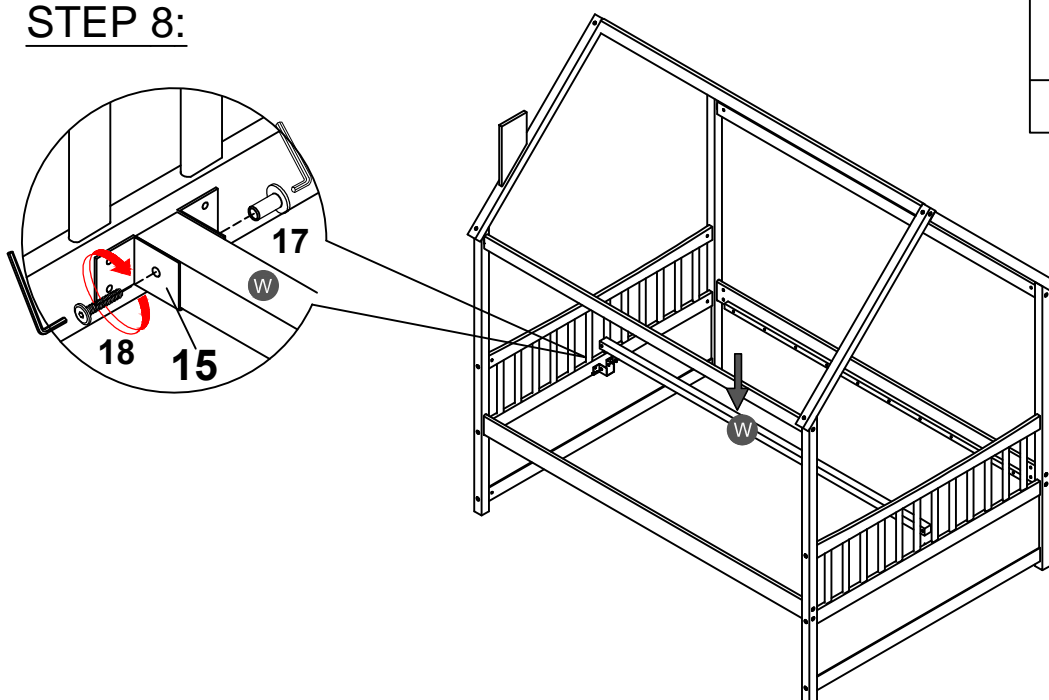

17	18
2PCS	2PCS






## STEP 9:

12



20PCS

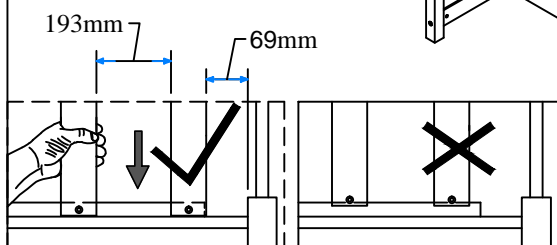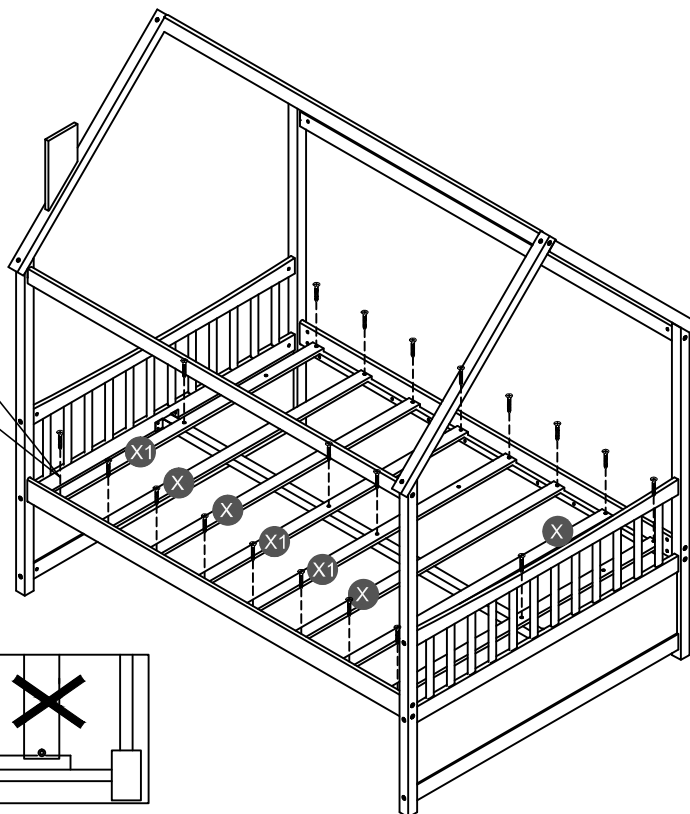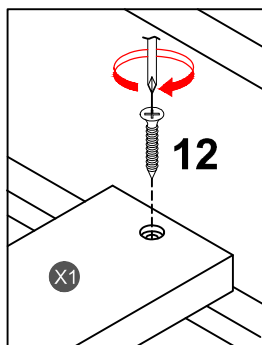

Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.  
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

## STEP 10:

9





4PCS




13

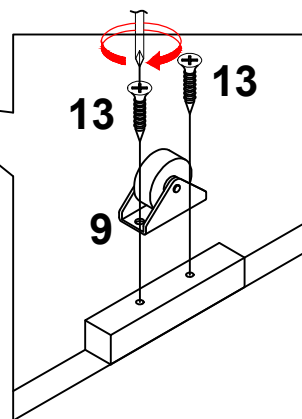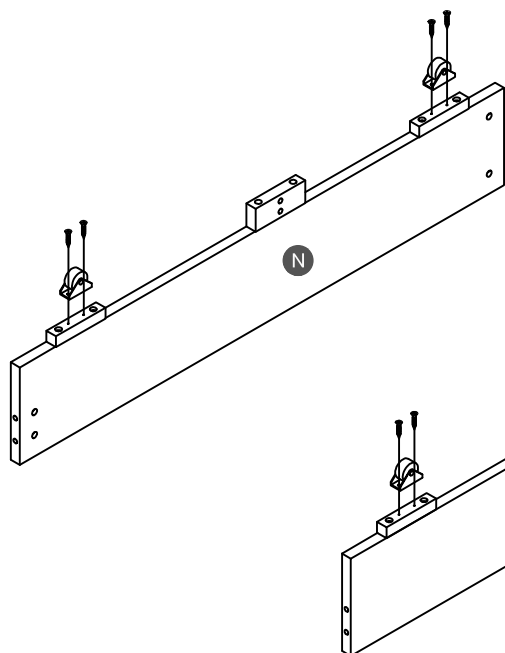


8PCS






## STEP 11:
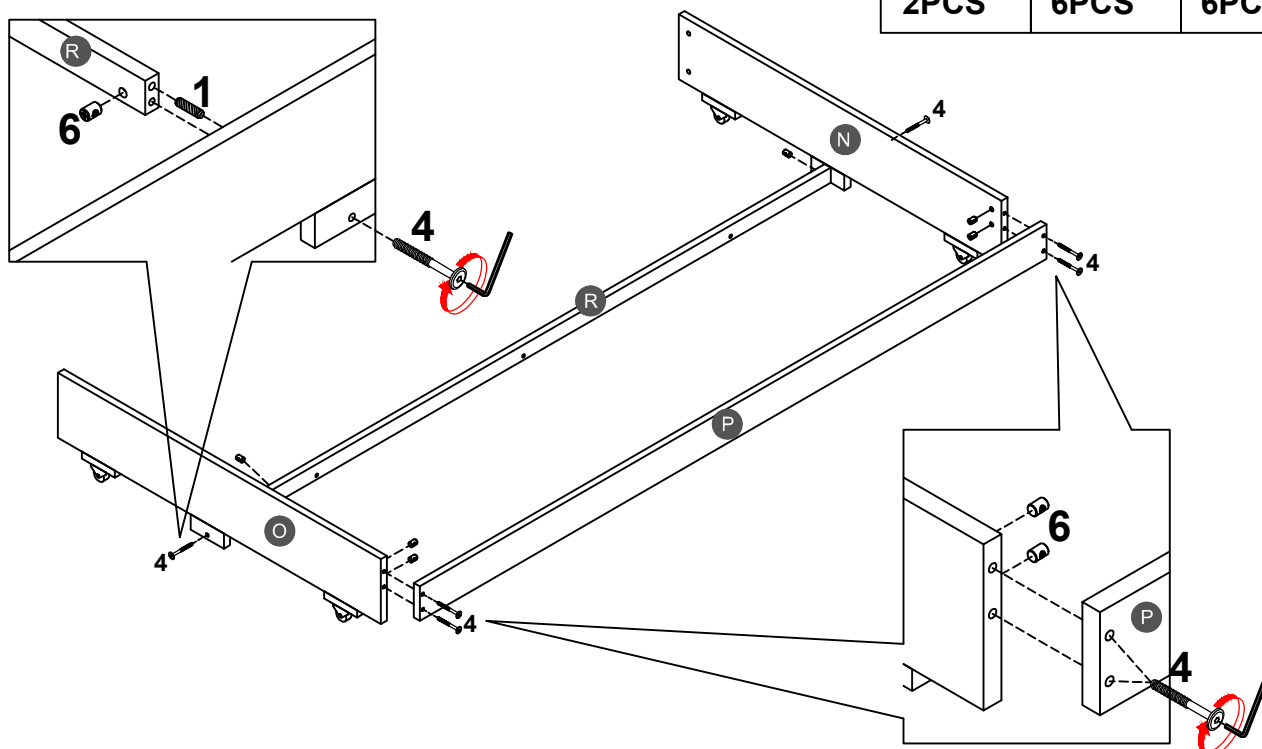
<b>1</b>		<b>4</b>		<b>6</b>	
<b>2PCS</b>		<b>6PCS</b>		<b>6PCS</b>	




## STEP 12:


<b>4</b>		<b>6</b>	
<b>3PCS</b>		<b>3PCS</b>	

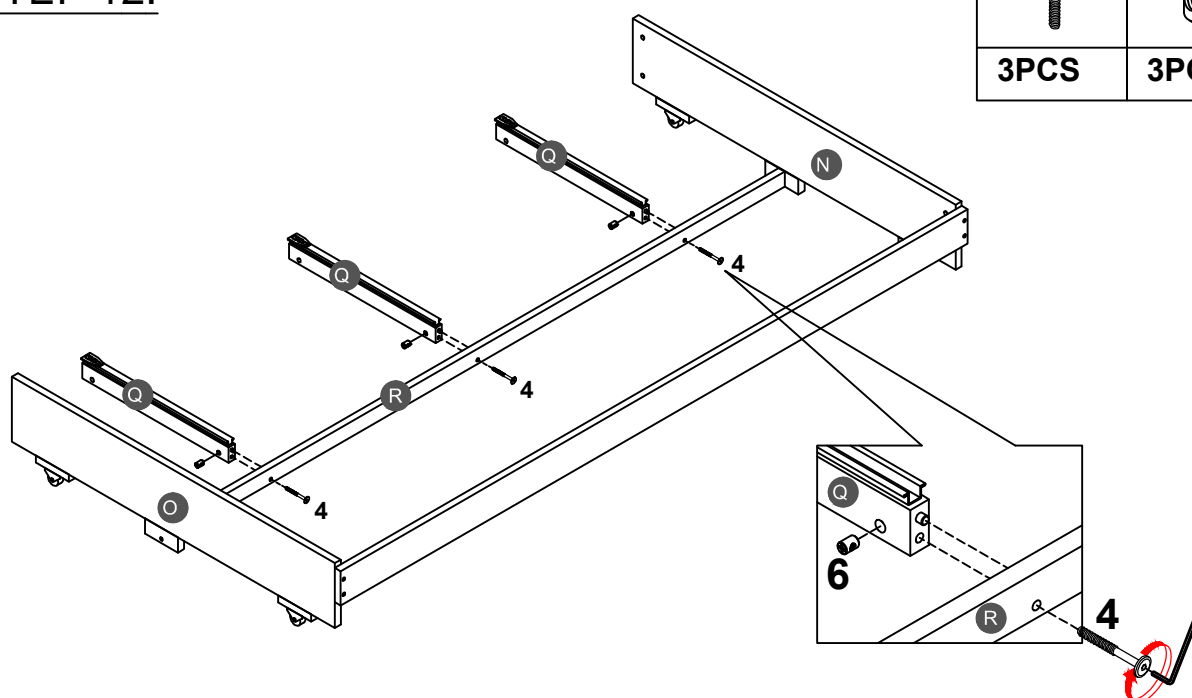

### STEP 13:

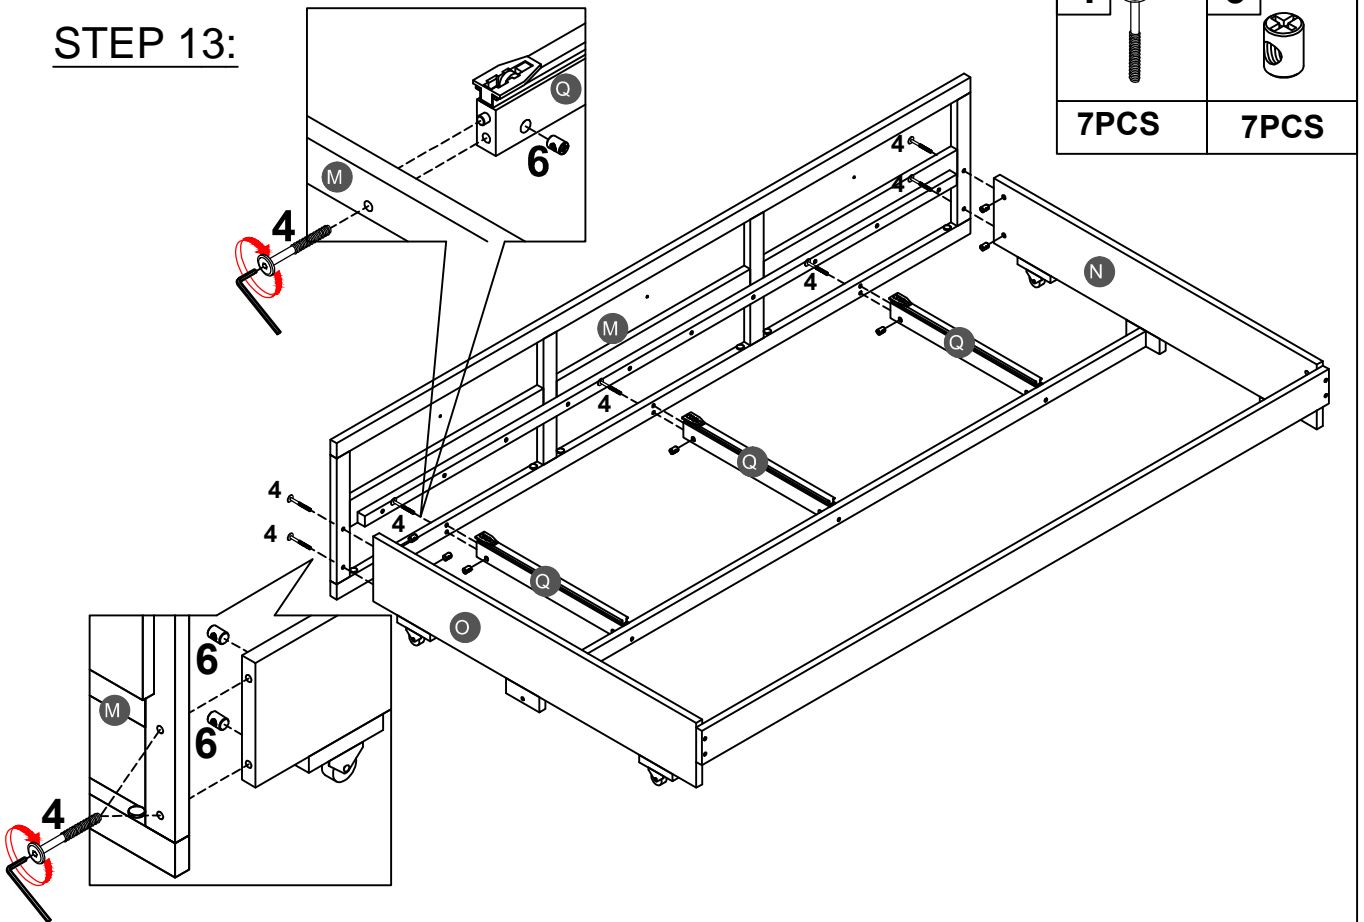


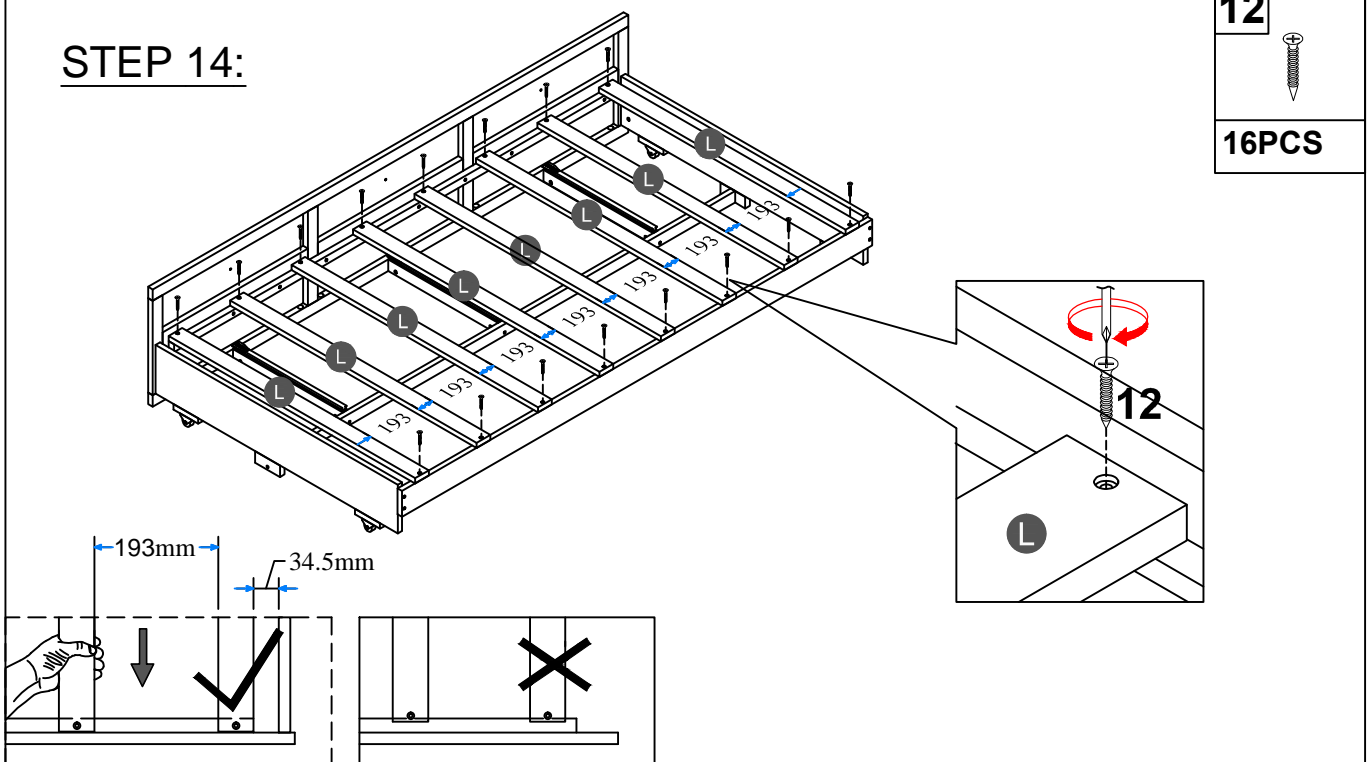


### STEP 14:




Note: Do not lock the screws of the bed slats to the outermost edge of the bed slats, you need to leave a certain space at the edges, otherwise it will cause the board to break.  
Do not lock the bed slats on the edge of the wood, please hold firmly before screwing , hold it in place with one hand, then lock the screw.

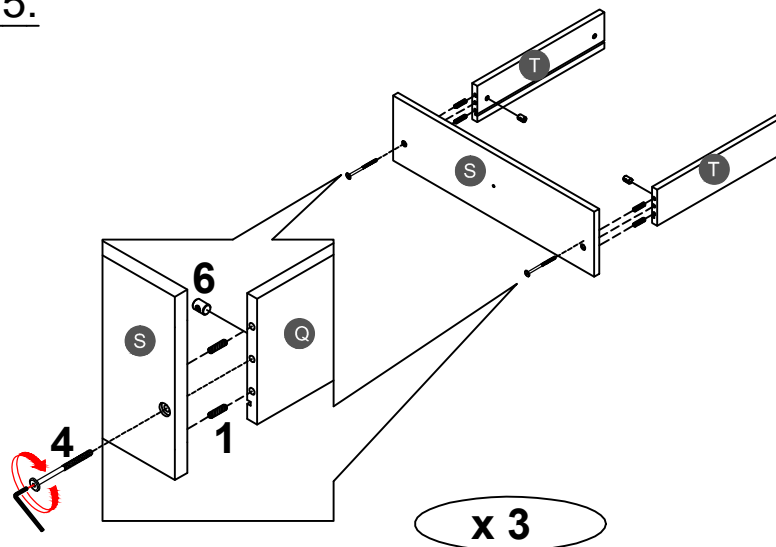


## STEP 15:




1	6
	
12PCS	6PCS
	4
	
	6PCS

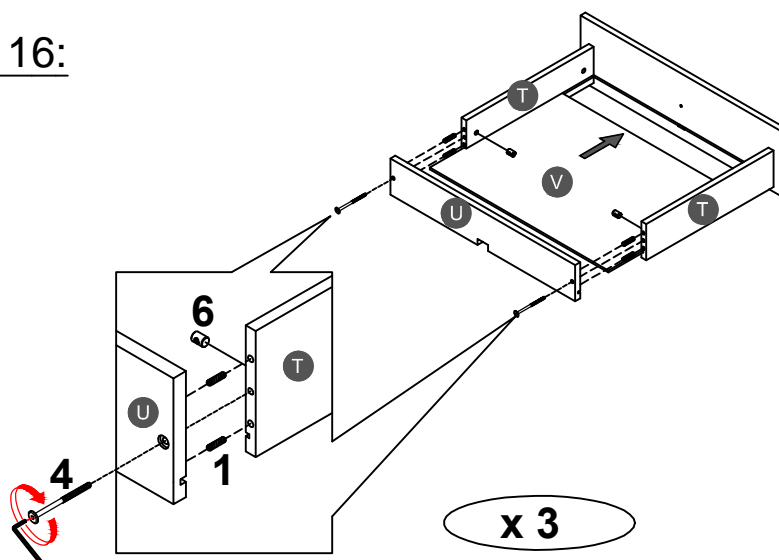

## STEP 16:





1	6
	
12PCS	6PCS
	4
	
	6PCS
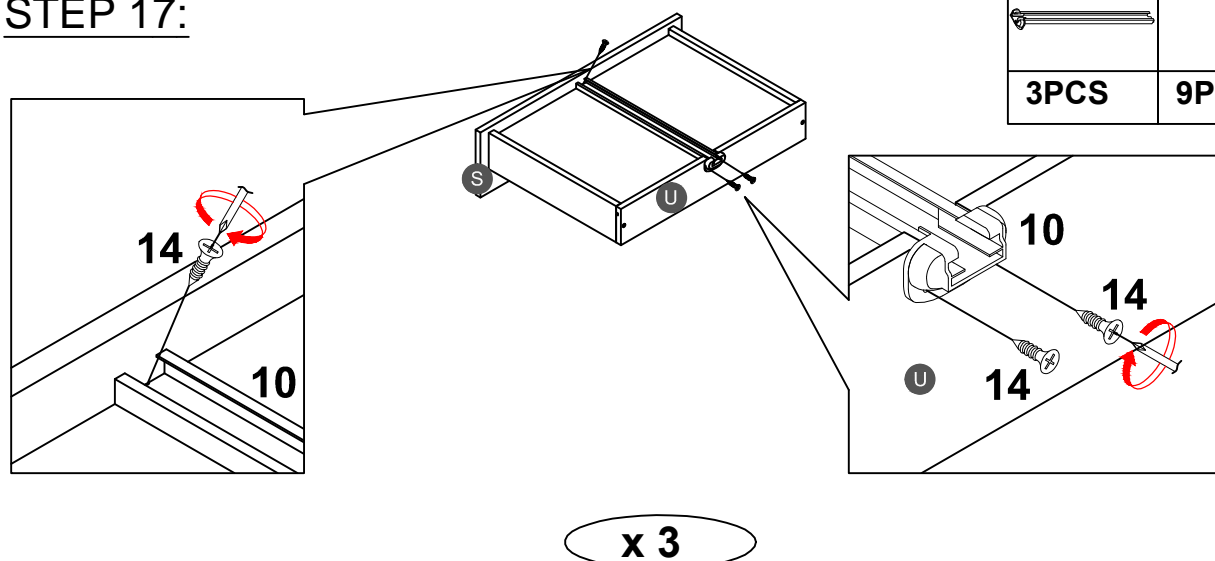
## STEP 17:





10	14
	
3PCS	9PCS

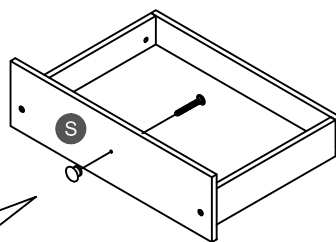
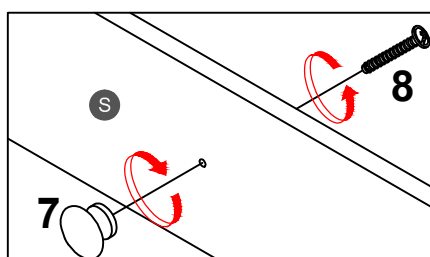
## STEP 18:





x 3

7	8
	
3PCS	3PCS

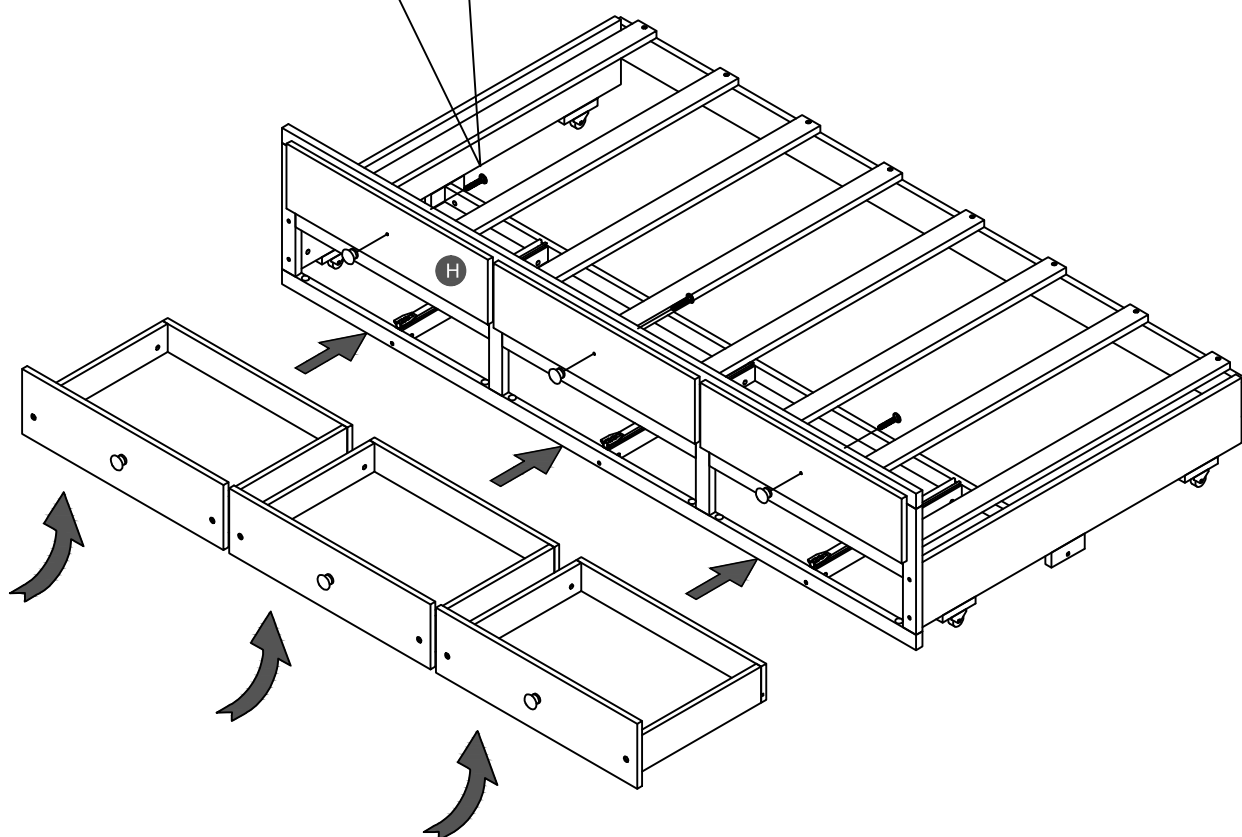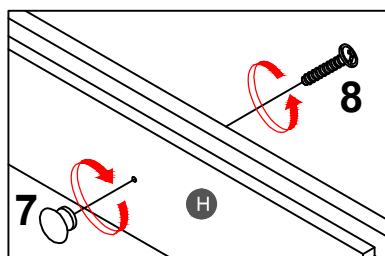
## STEP 19:




7	8
	
3PCS	3PCS

**Remark:** When opening or closing the drawer,  
Please lift the drawer slightly before opening or closing it.

**STEP 20:**

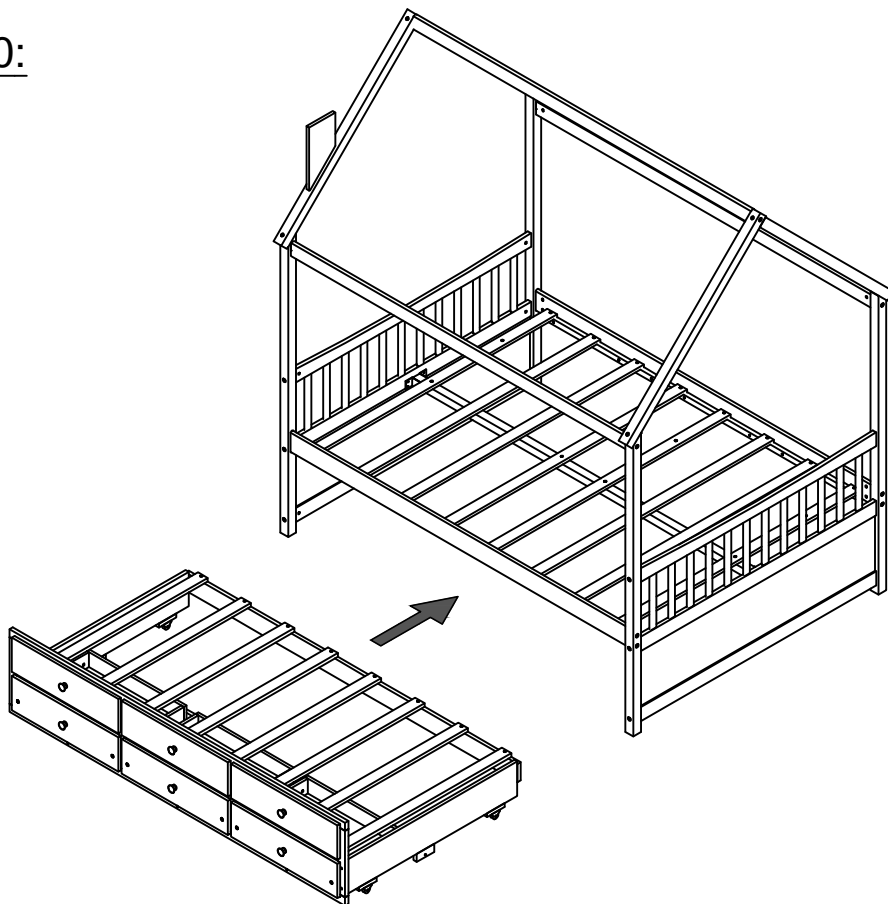

Push Trundle under the bottom of Twin bed.

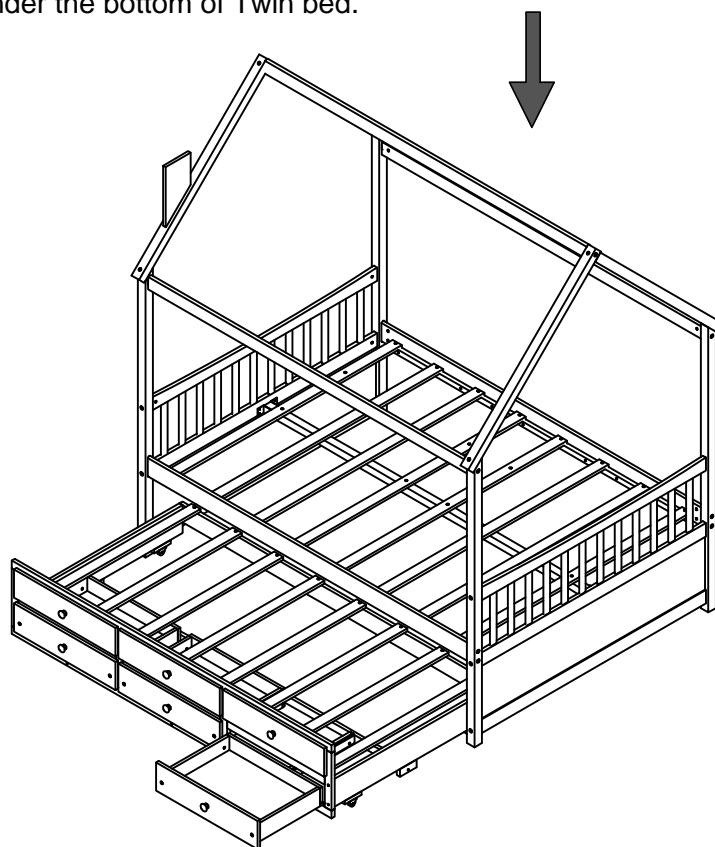

**Make sure to tighten all the screws of the bed.**