BEFORE INSTALLATION

This product has been inspected and debugged by the factory to the best condition. Please do not disassemble and assemble it yourself.




Before installing the faucet, please be sur to remove sundries and sludge from the water pipe to prevent sundries from



Freestanding Bathtub Faucet Manual

1.Please check everything component by the list below after you open the package, make sure nothing missing, any questions please contact us feel free, we will reply within 24 hours. and solve the issue together with you.

NO.	Part	PCS
1	Main Body	1
2	Straight Tube	1
5	DecorativeCover	1
6	Inlet Tube	2
7	Bolts Holder	1
8	Expansion Bolts	3
9	Shower Head	1
10	Shower Tube	1
11	Manual	1

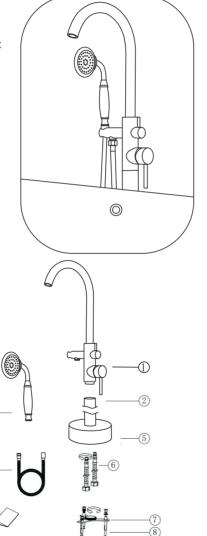

INSTALLATION INSTRUCTION




2. Using the faucet for a matching height bathtub.

CONCEALED SHOWER

INSTALLATION INSTRUCTIONS

Installation Manual

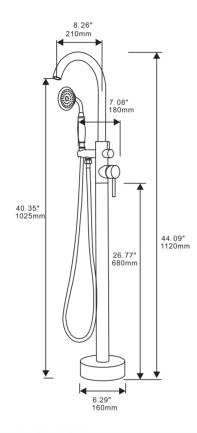








INSTALLATION STEPS


screw the inlet tube to main body.

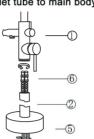

4.Connect the inlet tube like the drawing.




7. Tighten the expansion bolts.

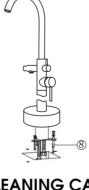




1.Connect the straight tube, decorative 2. The main body is rotationally cover and bolts holder to inlet tube then connected with the straight pipe.

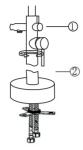

5.Twist the bolts holder to the faucet.



8. Twist the shower tube to both faucet and shower head.

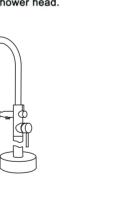

CLEANING CARE

In order to keep the appearance of faucet clean, bright and good performance, please take care of the faucet as follows;




1. Rinse with water only and dry with soff cotton cloth; 2.Use mild liquid and colorless glass cleaner to remove surface dirt and scale film, or use polish without abrasive effect;

3.Do not use abrasive deterfgent, polish, emery cloth, paper towel or scraper, etc.;

4.Do not use acid cleaner,or cleaner and soap with insoluble gran etc.;

5.In the process of use, mud my accumulate in the bubbler and make the water flow show, The bubbler can be unscrewed, rinsed with water, and then installed back in place.

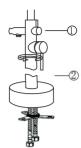


6.Drill holes on floor based on the drawing.

3.15"

3. Prepare water inlet like the

drawing below.

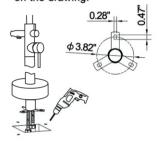

9. Finished assembly.

