


Bradford Pedestal Mail Post

MIS025

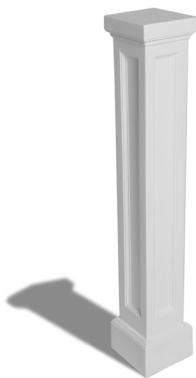

PACKAGE CONTENTS: 1x Bradford Pedestal Post

COLORS: Black, Clay, or White

DIMENSIONS: 7.5" W x 7.5"D x 42" H

IMPORTANT NOTES:


- 4x4 wood post, mailbox, and mailbox mounting hardware NOT included
- Mailboxes can be secured directly on top of the post or secured to a mounting board
- Please refer to local codes for mailbox installation height and setback from the curb.

General Information:


- Read instructions carefully before beginning assembly.
- Do not use excessive force when assembling components.
- To clean this product, for best results use a soap solution and high-pressure water.
- Missing or defective parts, please call toll free **1-866-363-8834** or email customerservice@gomayne.com.

**Customer Service Available
Weekdays 8am-5pm (EST)**

TOOLS REQUIRED

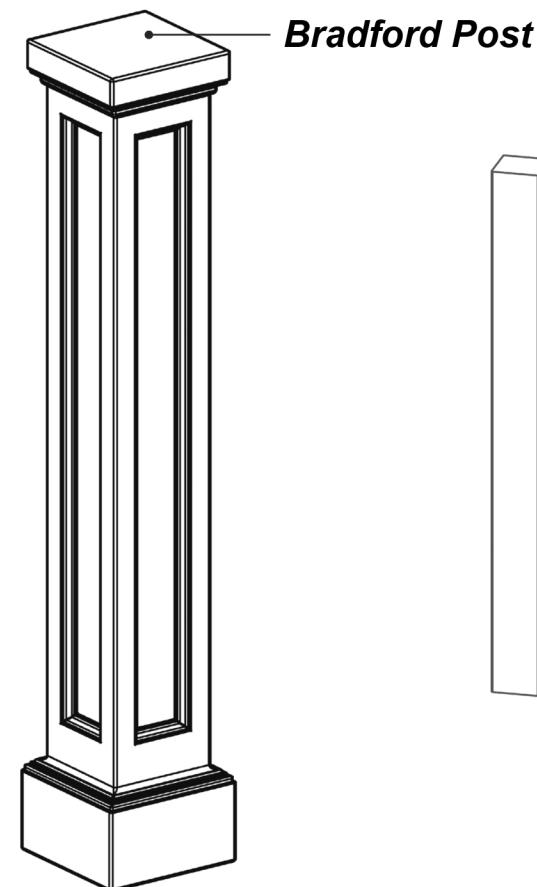

Bradford Post

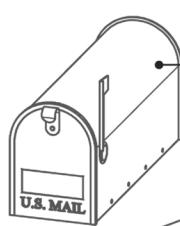

Parts Sold Separately

4x4 wood post
4x4 actual dimensions are 3.5x3.5
66" length is recommended

Mailbox
(small or medium mailbox
recommended)



Wood Mounting Board
(custom cut to match mailbox)




Wood Screws
(2x 3inch, 4x 1inch)

MAYNE[®]
Outdoor Products of Distinction
www.gomayne.com

Bradford Pedestal Mail Post


MIS025

1

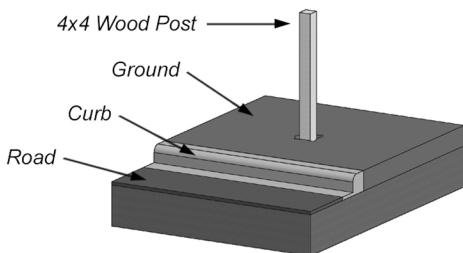


Dig a 24" deep hole in the desired location and insert a 4x4 wood post. Leave 42" exposed above ground. Fill in the hole with pre-mix concrete (not included) and level the wood post. Allow time for the concrete to cure.

2

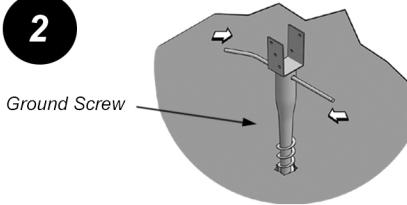


Optional Mayne "No-Dig" Ground Screw:

Twist the screw into the ground and attach a 4x4 post with the five lag bolts provided (approx. 39.5" length of 4x4 required, not included). Slide the decorative post over the 4x4.

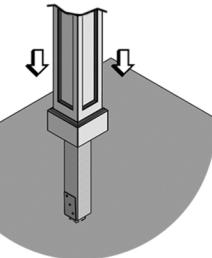


3

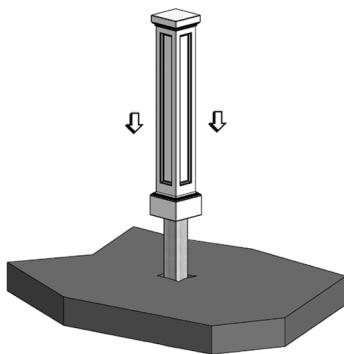


Slide the Bradford pedestal post over the 4x4 wood post. Make sure the posts sits flush on top and keep it centered over the 4x4.

4

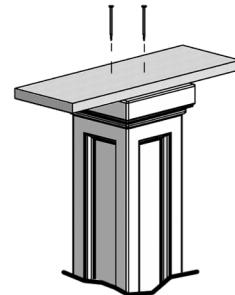


Center the wood mounting board on top of the post and secure in place with two 3 inch wood screws (mounting board and screws not included). Universal mounting boards are available at the local hardware store or you can cut a piece of plywood to match the size of your mailbox.

5

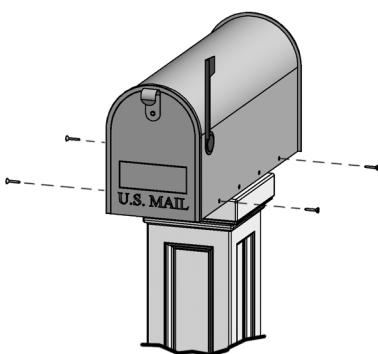

Set the mailbox on the mounting board. Secure in place using four 3/4 inch wood screws (mailbox and screws not included)

6

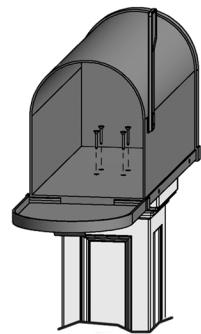

Alternative Installation: Center the mailbox on top of the Bradford post and secure 4 screws through the floor of the mailbox directly into the 4x4 inside. You may need to pre-drill holes to ensure the screws are aligned with the 4x4.