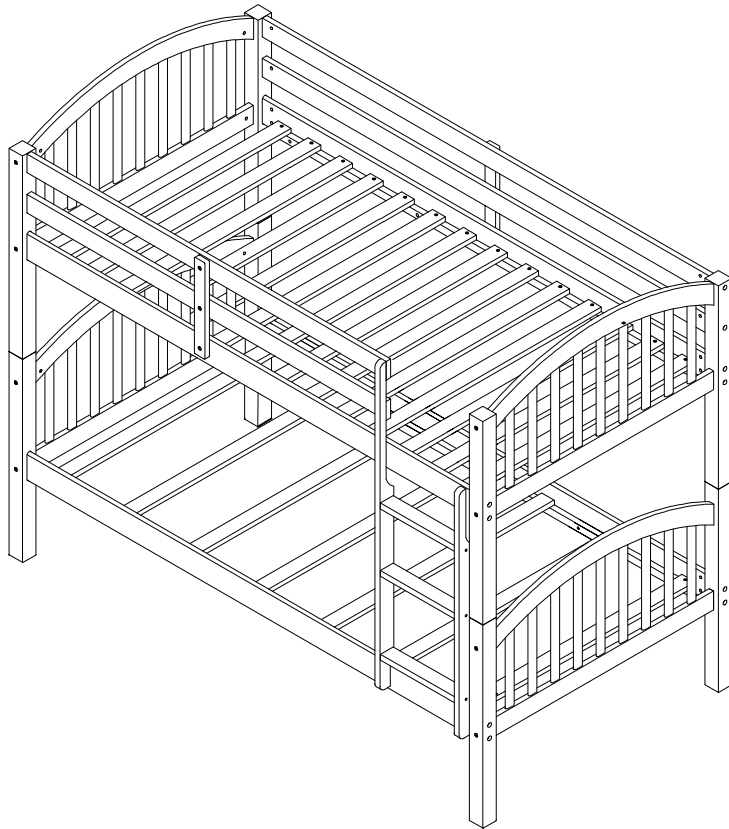


ASSEMBLY INSTRUCTIONS

TWIN SIZE BUNK BED

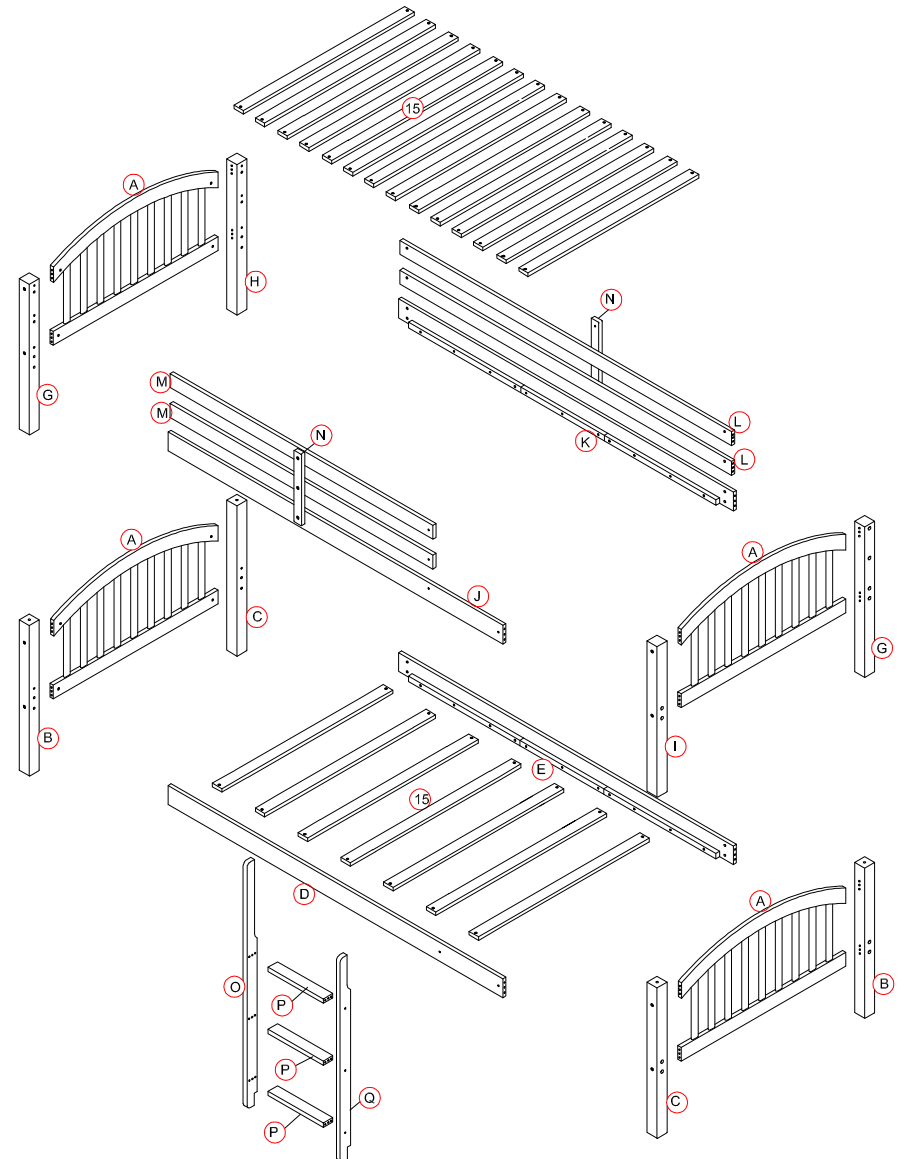
If you have any questions, please feel free to contact us.

Email: lowes.team@qualfurn.net






WF286814/WF286815




Detail View




Hardware List: WF286814

1		2		3	
	(1/4")4.5*58mm Allen key (1pc)		Wood dowel (64pcs)		Ø6"*100mm Hex-Head bolts (22pcs)
4		5		6	
	Ø6"*50mm Bolts screw (12pcs)		Ø6"*30mm Bolts screw (6pcs)		Ø4*30mm Wood screws (42pcs)
7		8		9	
	1/4"*15 (9.5mm) Horizontal-Hole bolts(22pcs)		Ø9*90mm Metal connector (4pcs)		Ø6"*100mm Bolts screw (16pcs)

Part List: WF286814









A		G		15	
	Frame HB&FB - 4pcs		Leg HB (Top) - 2pcs		Slats - (21pcs)

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE
POSITION WHEN YOU USE POWER TOOLS !

Part List: WF286815

D		B		C	
	Side rail(lower)-1pcs		Leg HB (Bottom) - 2pcs		Leg HB (Bottom) - 2pcs
E		H		I	
	Side rail(lower)-1pcs		Leg HB (Top) - 1pc		Leg HB (Top) - 1pc
J		K		L	
	Side rail(upper front)-1pc		Side rail(upper back)-1pc		guard rail(longer) - 2pcs
M		N		O	
	guard rail(shorter) - 2pcs		Vertical guard rail - 2pcs		Ladder side rail (left)-1pc
P		Q			
	Ladder Step - 3pcs		Ladder side rail (right)-1pc		


STEP 1:

2		9	
32PCS		16PCS	

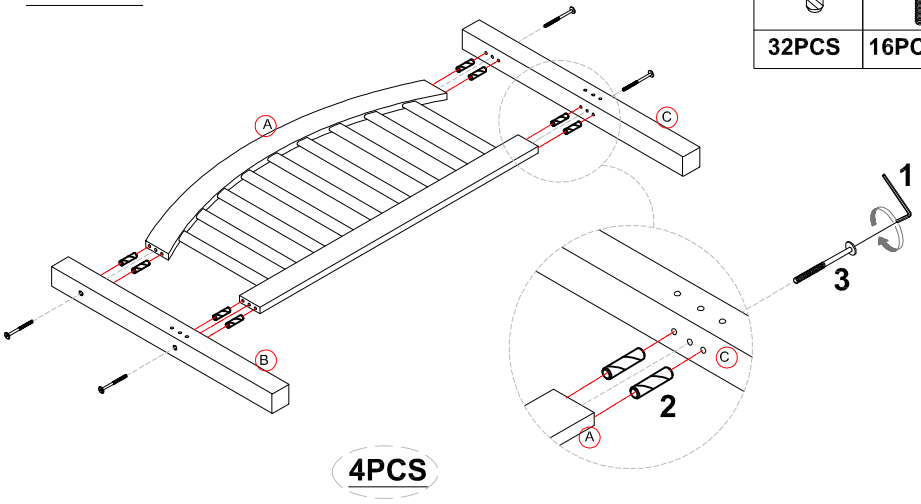


STEP 2:

2		3		7	
4PCS		8PCS		8PCS	

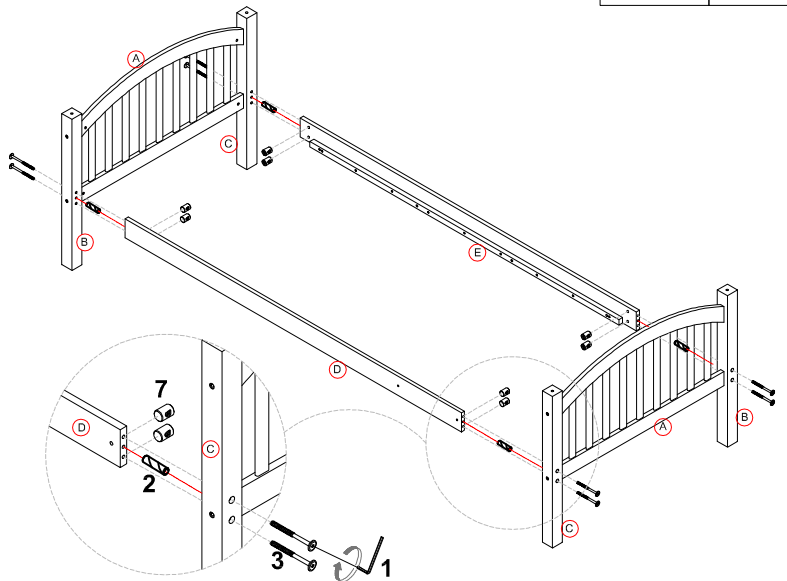


STEP 3:

2		3		7	
12PCS		12PCS		12PCS	

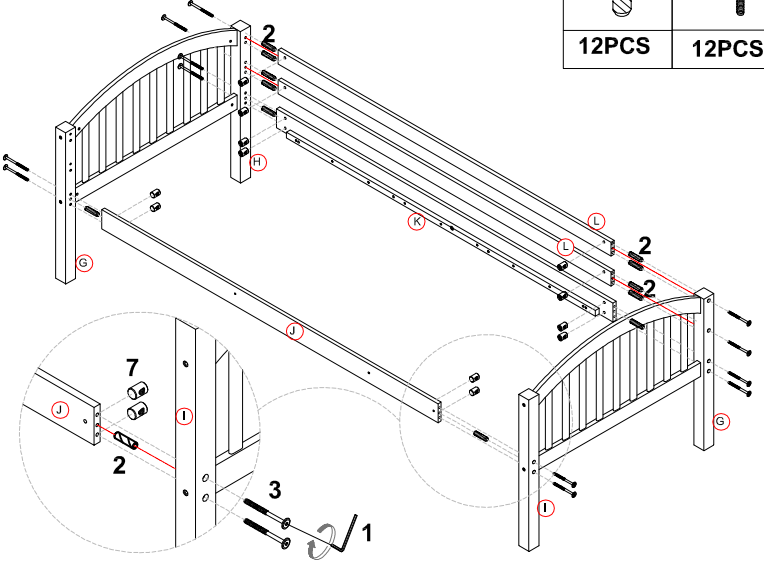


STEP 4:

2		4PCS
5		2PCS

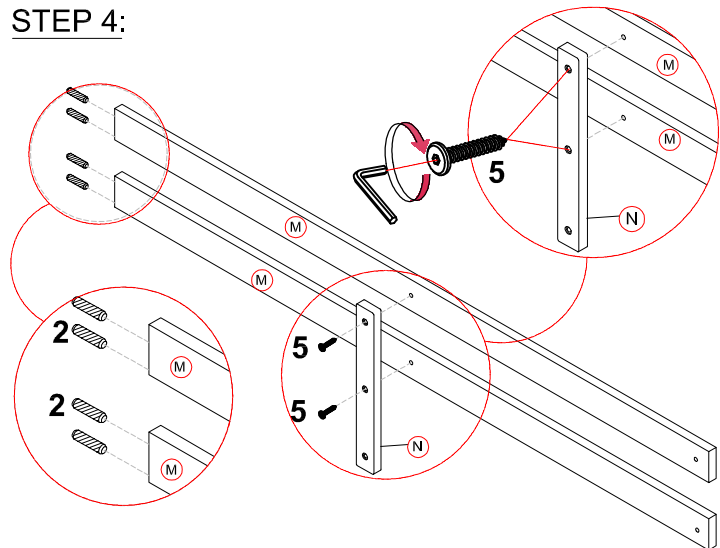

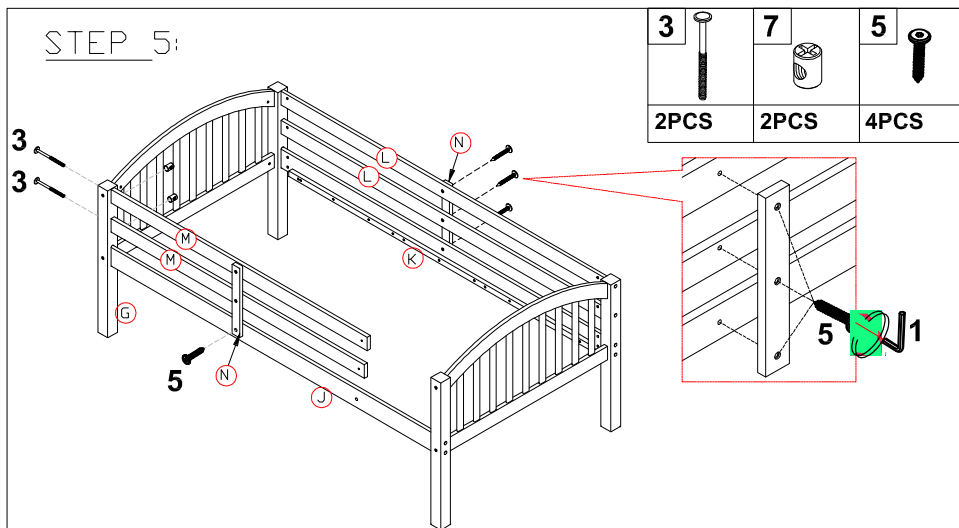STEP 5:




STEP 6:


STEP 1: PULL SIDE RAIL CLOSE TOGETHER ENOUGH TO FIT THE SLATS

STEP 2: SCREW ALL SLATS

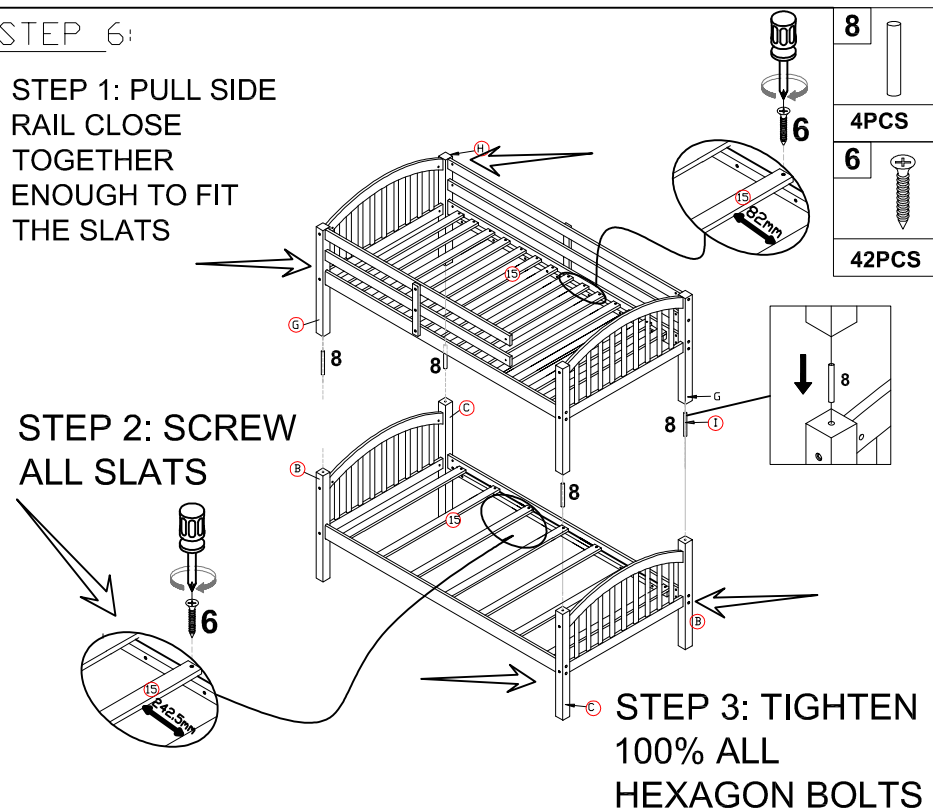
STEP 3: TIGHTEN 100% ALL HEXAGON BOLTS



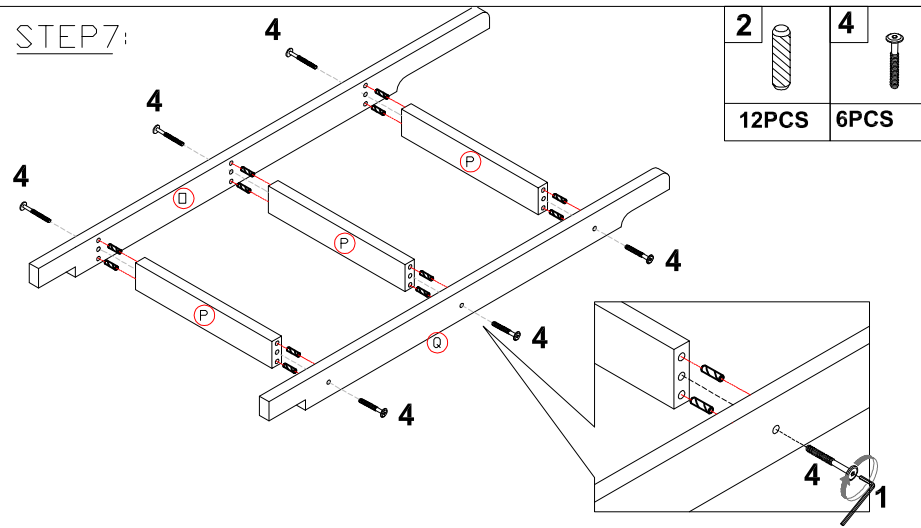STEP 7:



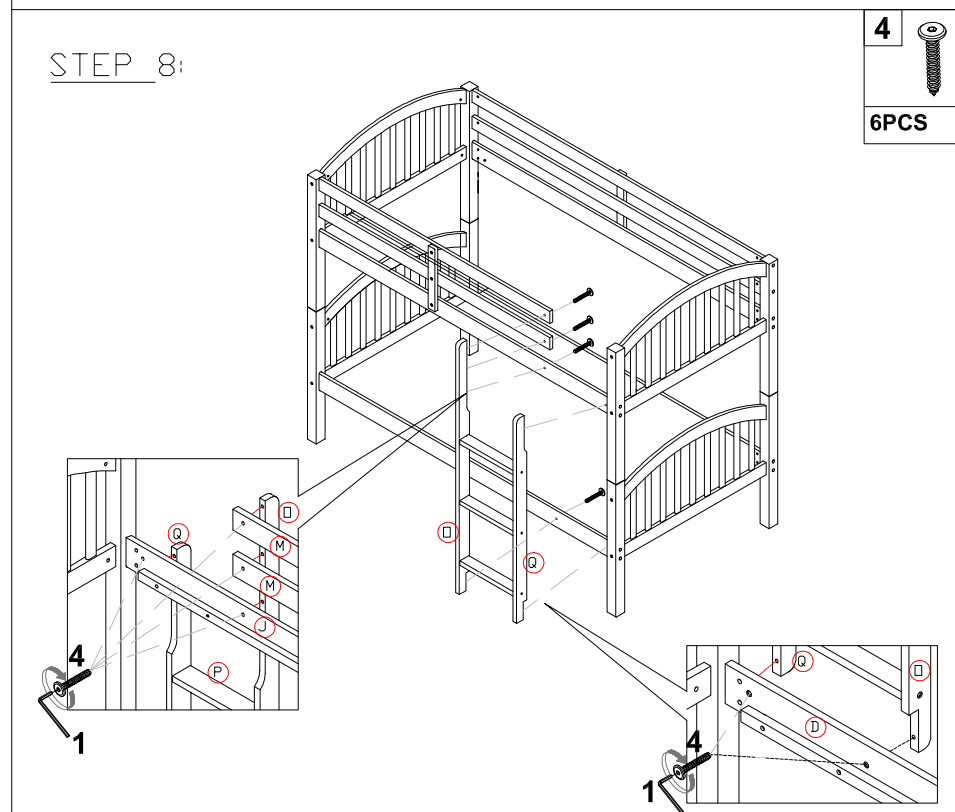STEP 8:



COMPLETED

