

N729P204176 Page 1 of 22

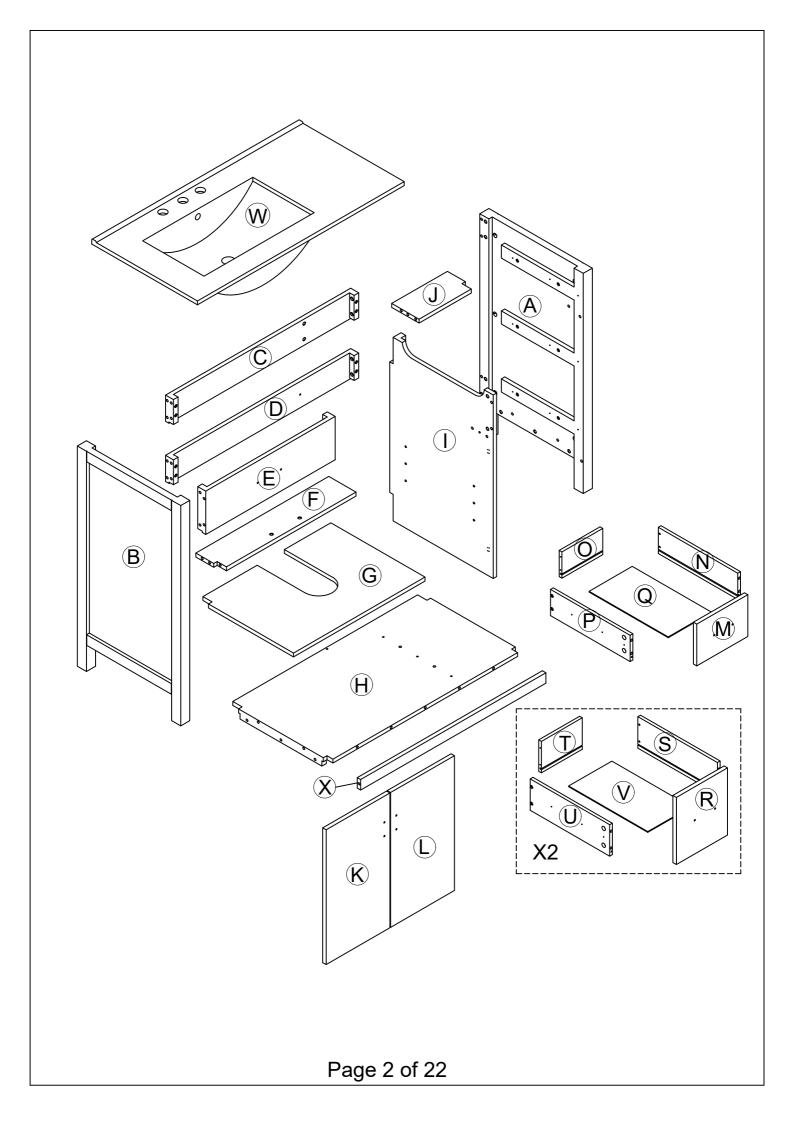



PRODUCT PARTS:


Α	В	С	D	E	F
1PC	1PC	1PC	1PC	1PC	1PC
G	Н	I	J	K	L
		;; ;; ;;			
1PC	1PC	1PC	1PC	1PC	1PC
M	N	0	Р	Q	R
			0.0		
1PC	1PC	1PC	1PC	1PC	2PCS
S	Т	U	V	W	Х
		(0.0)			
2PCS	2PCS	2PCS	2PCS	1PC	1PC

HARDWARE: 2 (1) 3 (4) (5) **6** Ø4x25mm Ø4x35mm Ø8x30mm Ø6x33mm Ø15x9mm 19+1 PCS 6 PCS 5 PCS 30+2 PCS 19+1 PCS 12+1 PCS 7 9 (12) (8) 10 (11) (X))))))) (X)))))))» 5/32"x15mm Ø4x12mm 12"x45mm Ø3x10mm 36+2 PCS 4 PCS 4 PCS 24+2 PCS 3 SET **12 PCS** 13

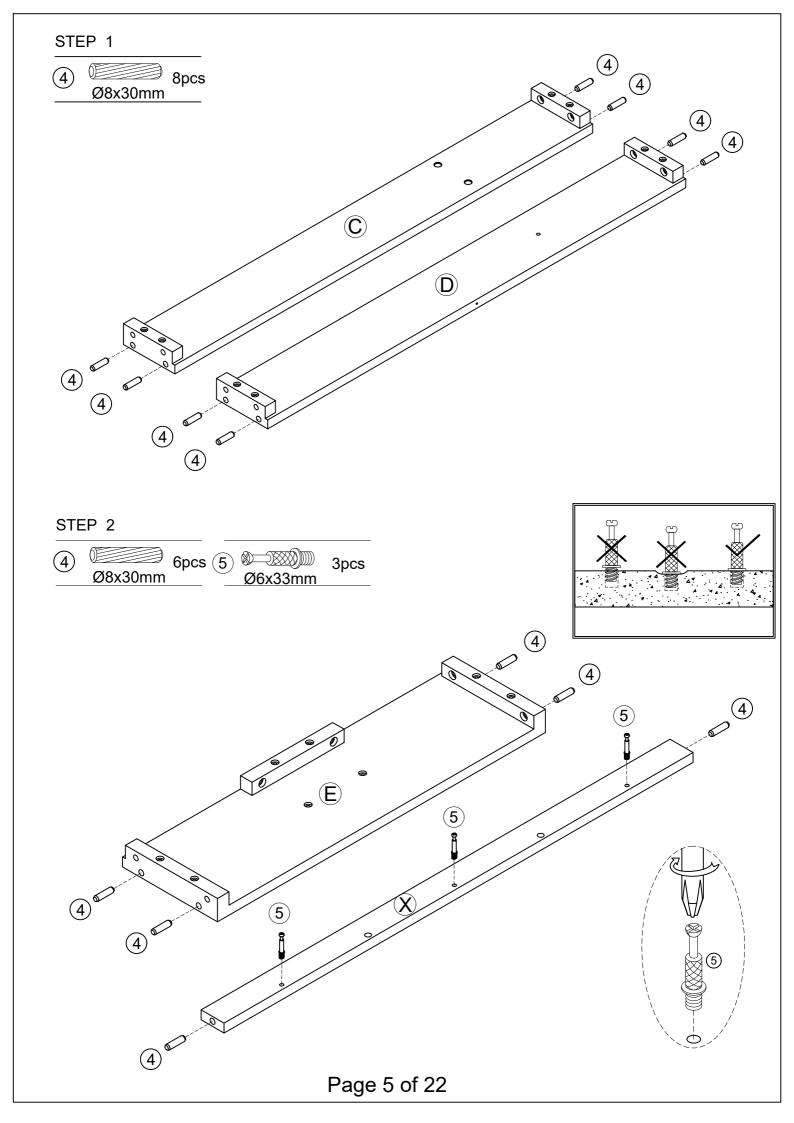


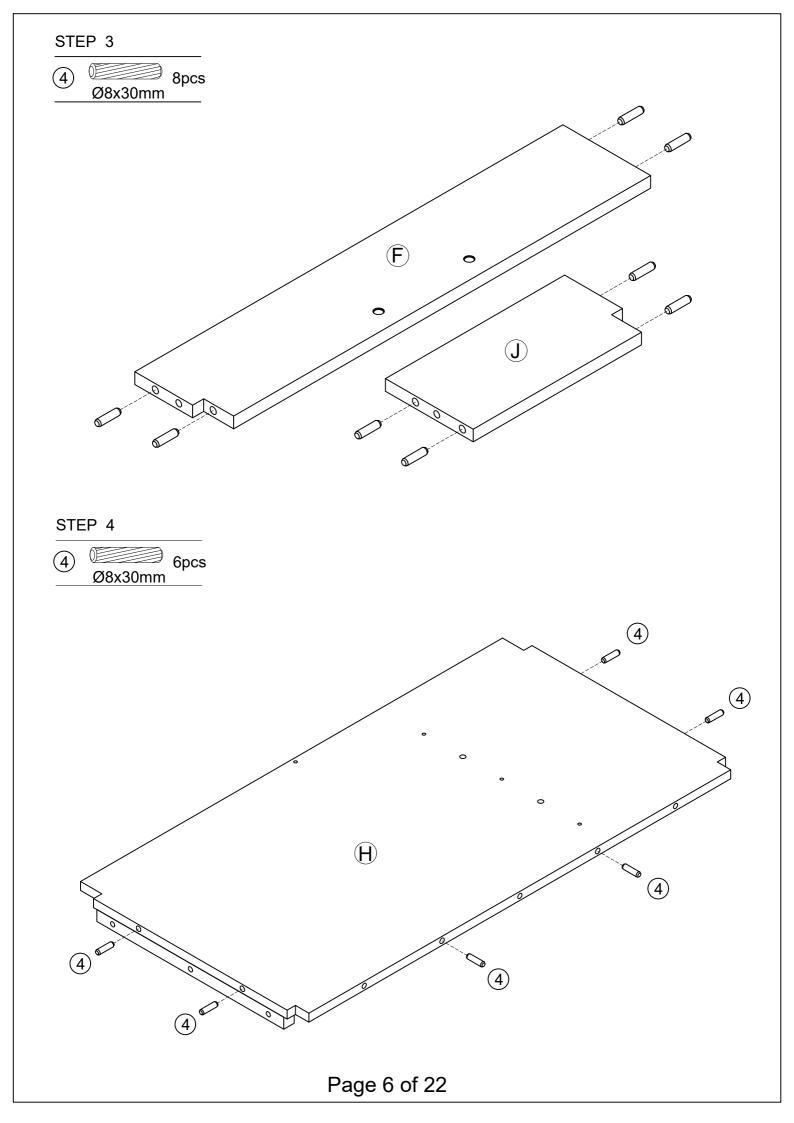

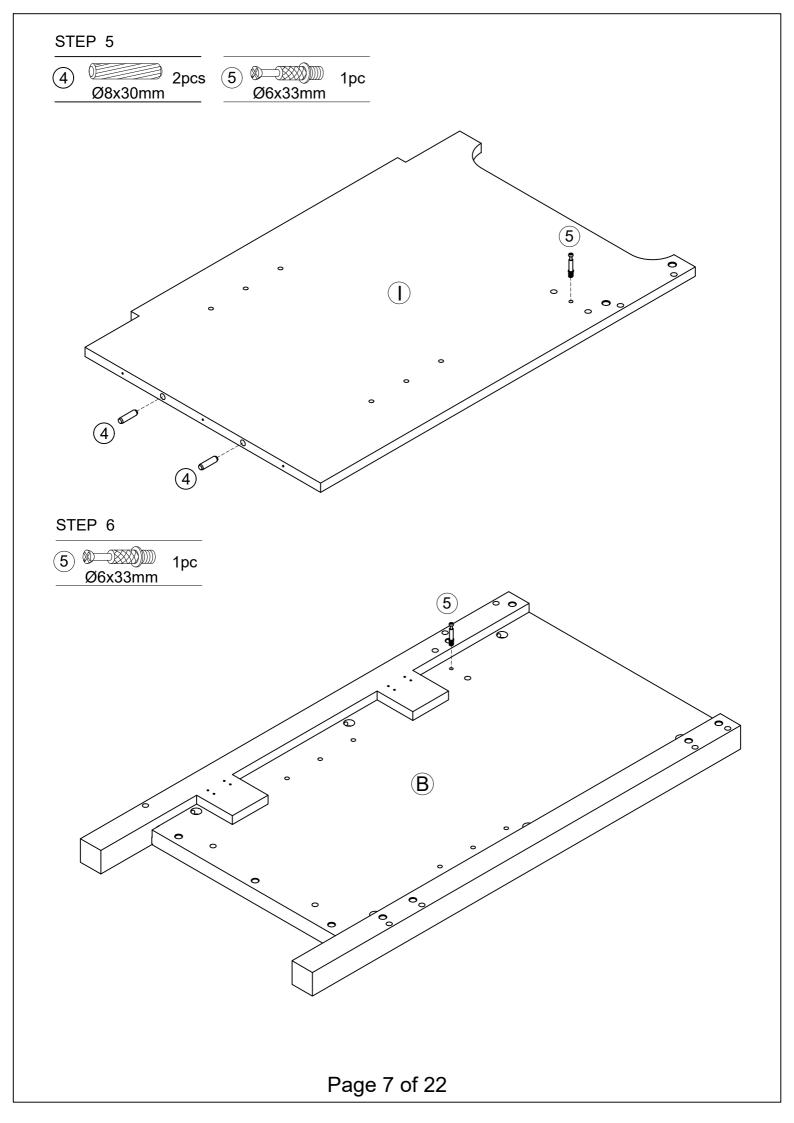


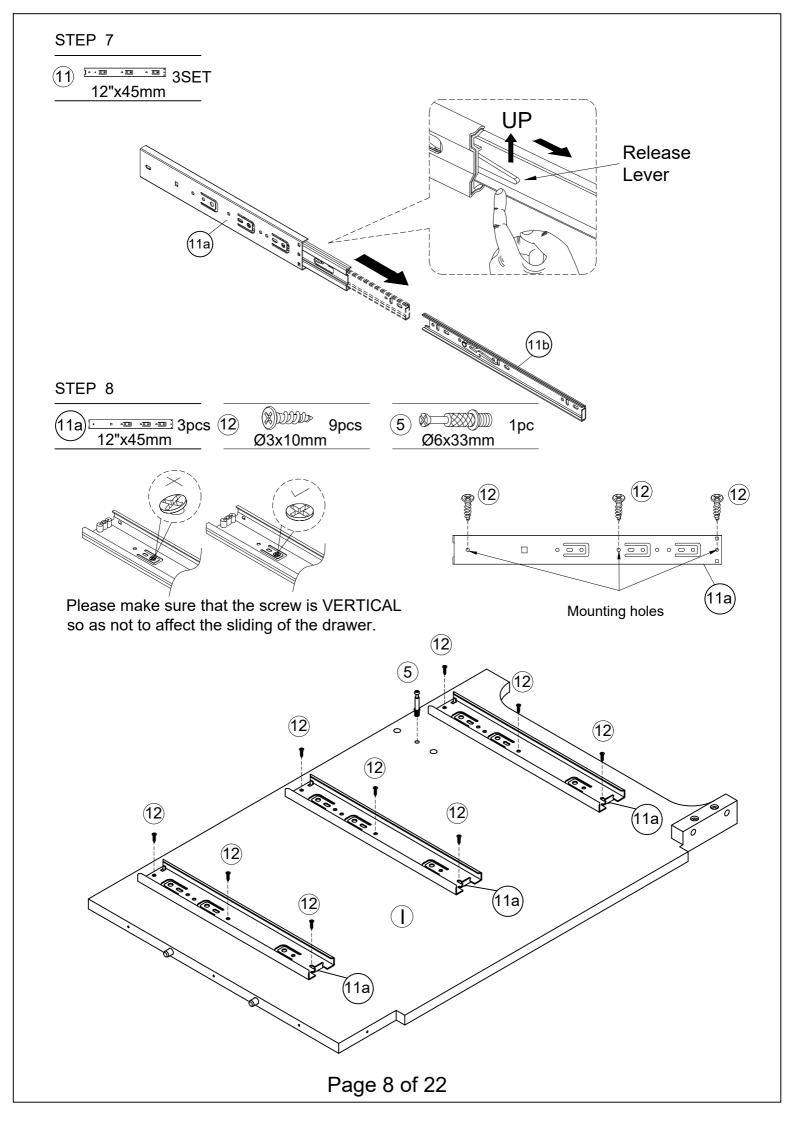





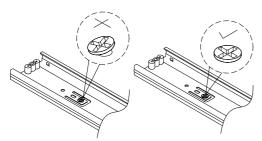



Please make sure that the screw is VERTICAL so as not to affect the sliding of the drawer.

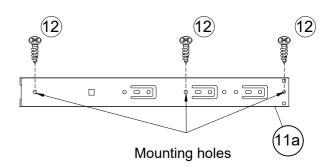


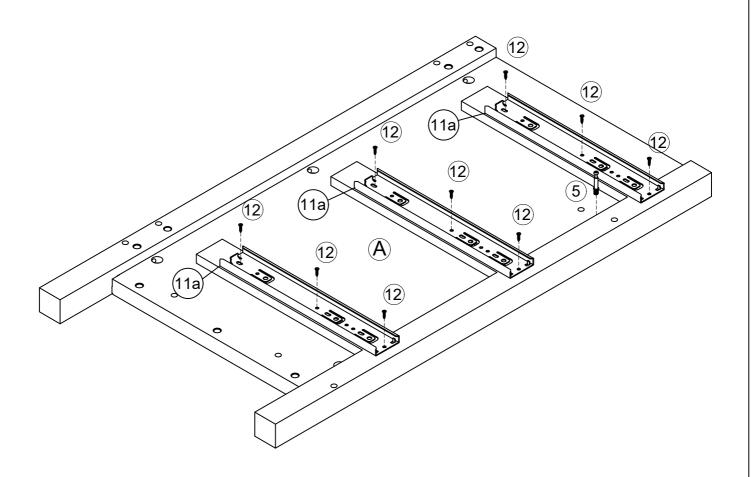


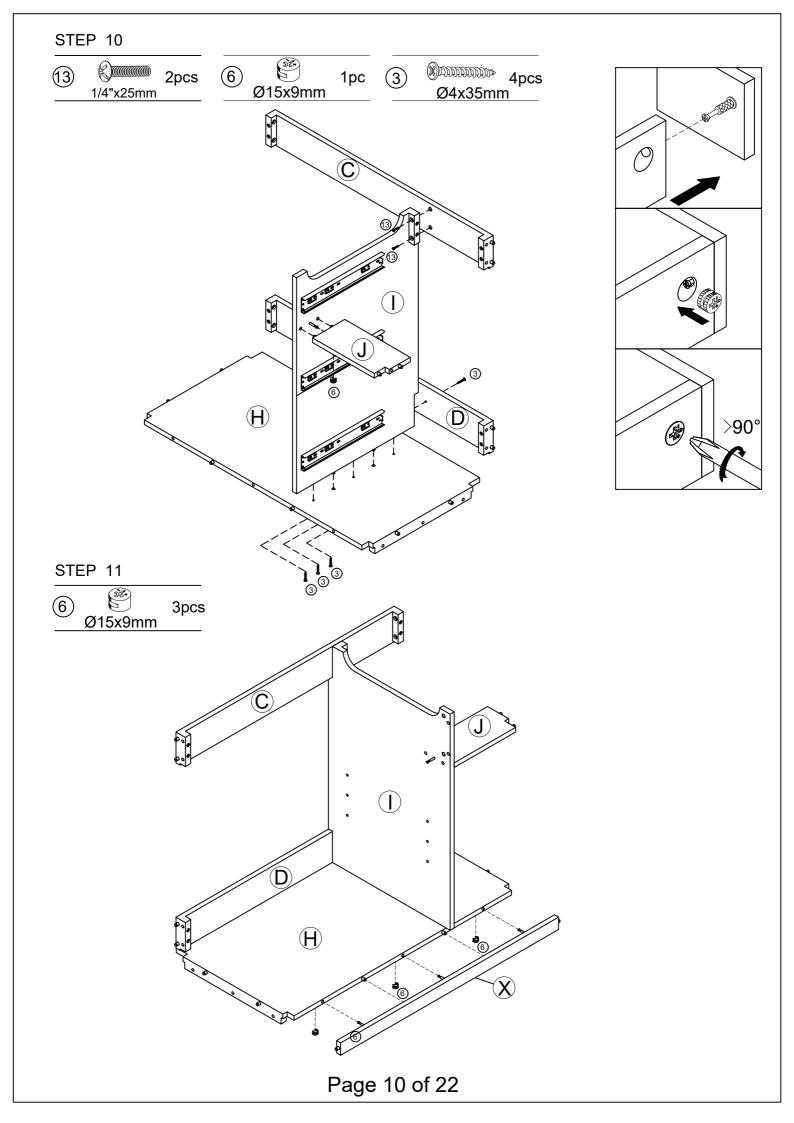


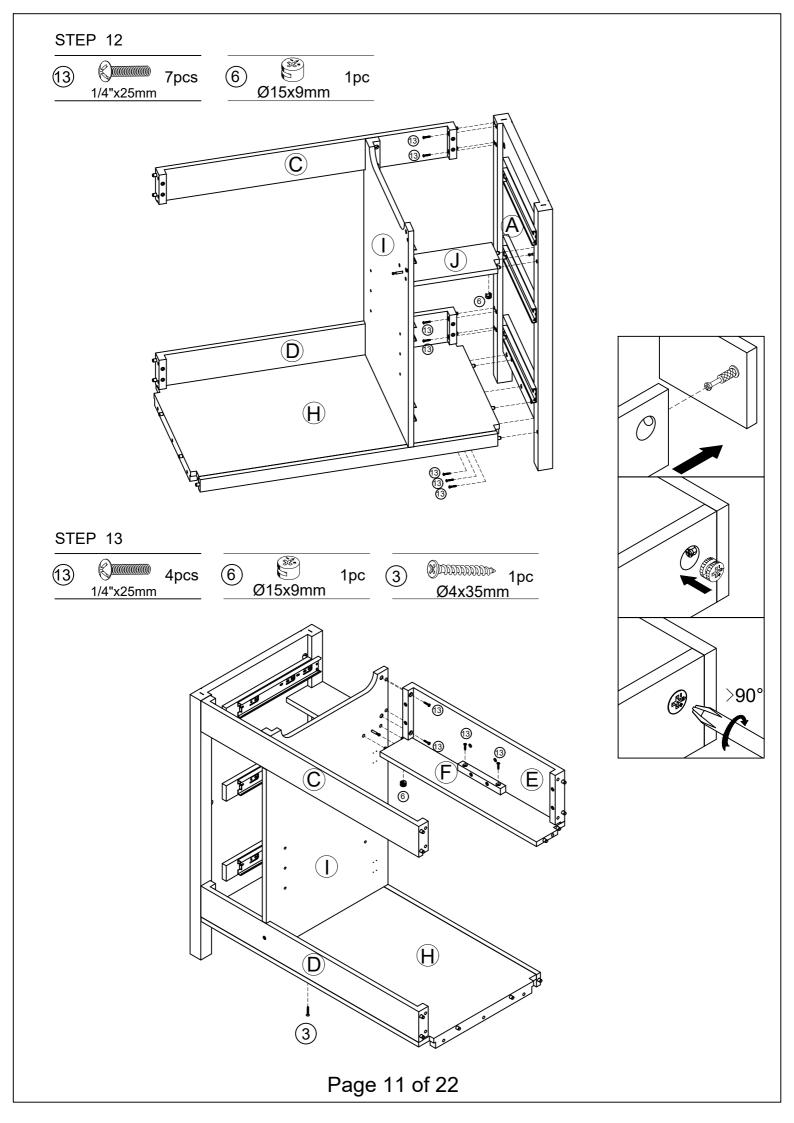

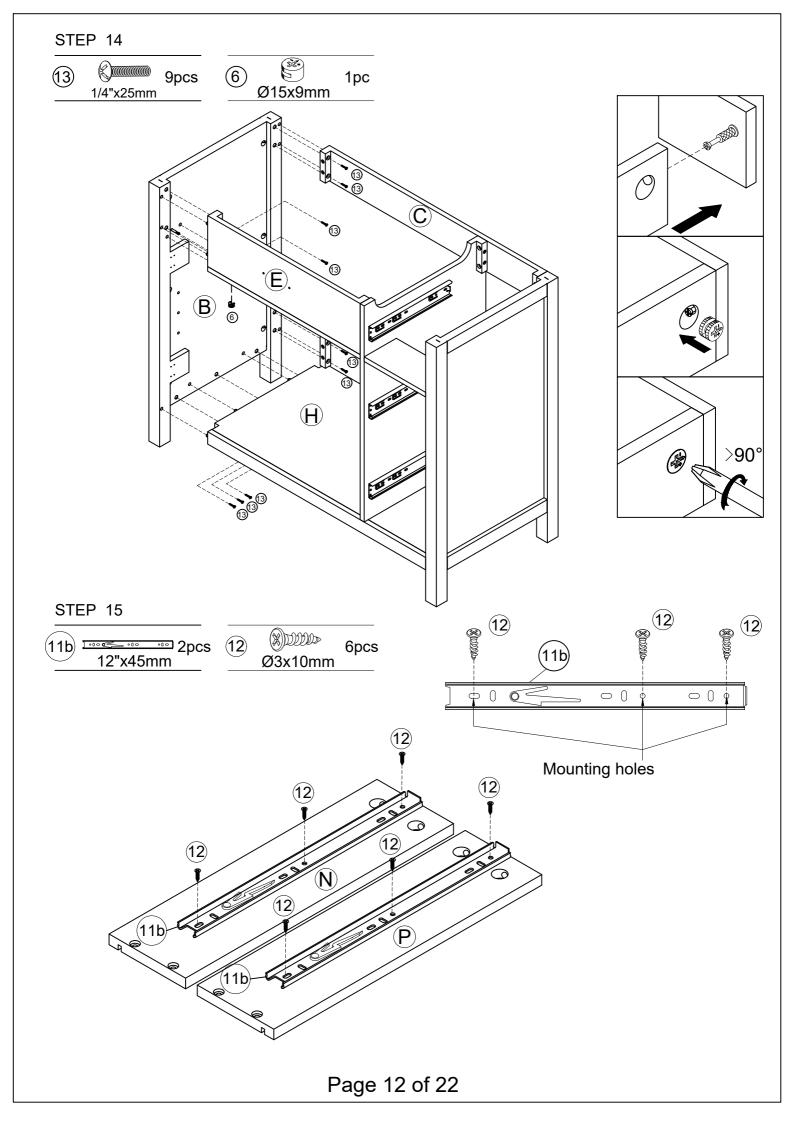


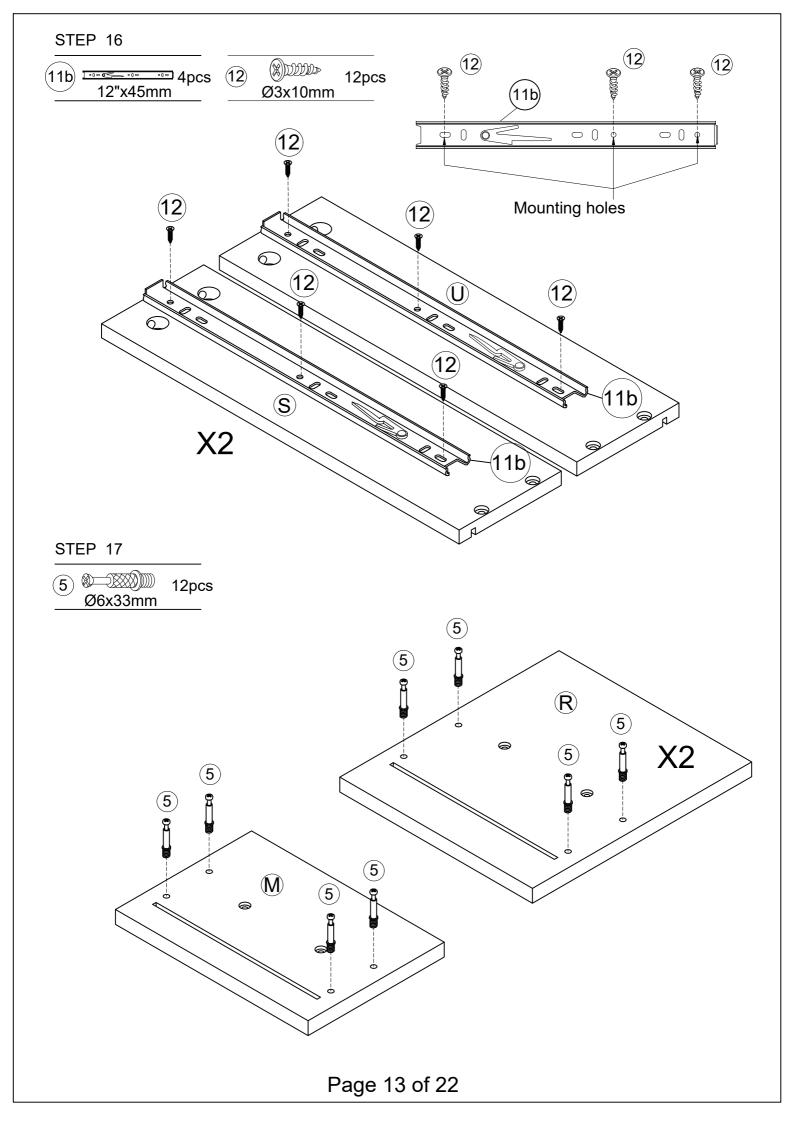




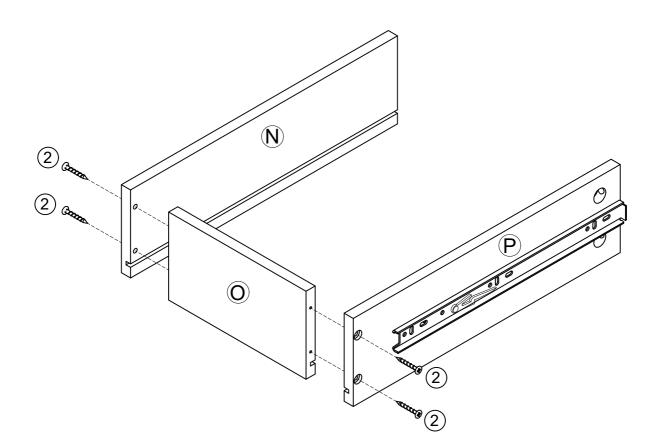


STEP 19

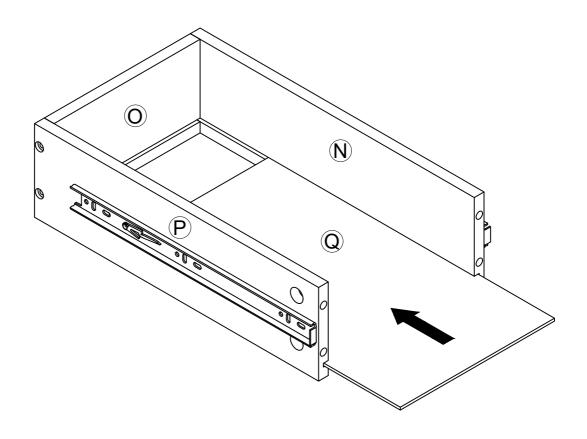



Page 14 of 22

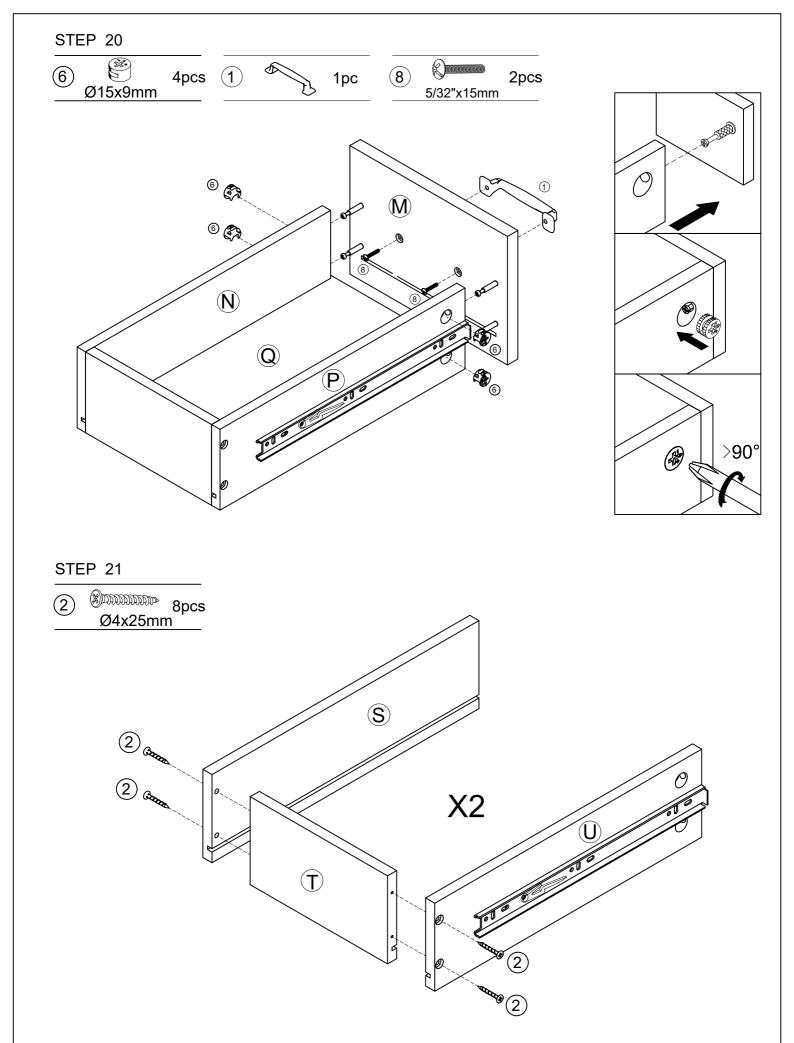



Page 15 of 22

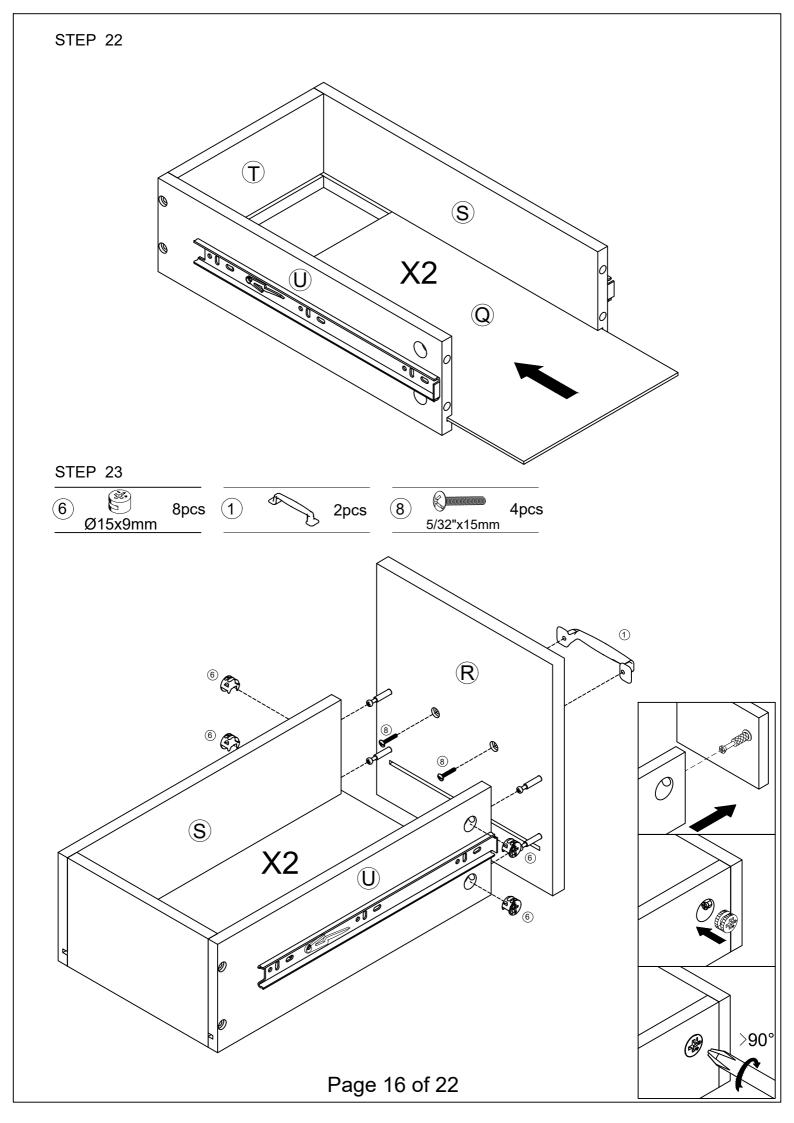

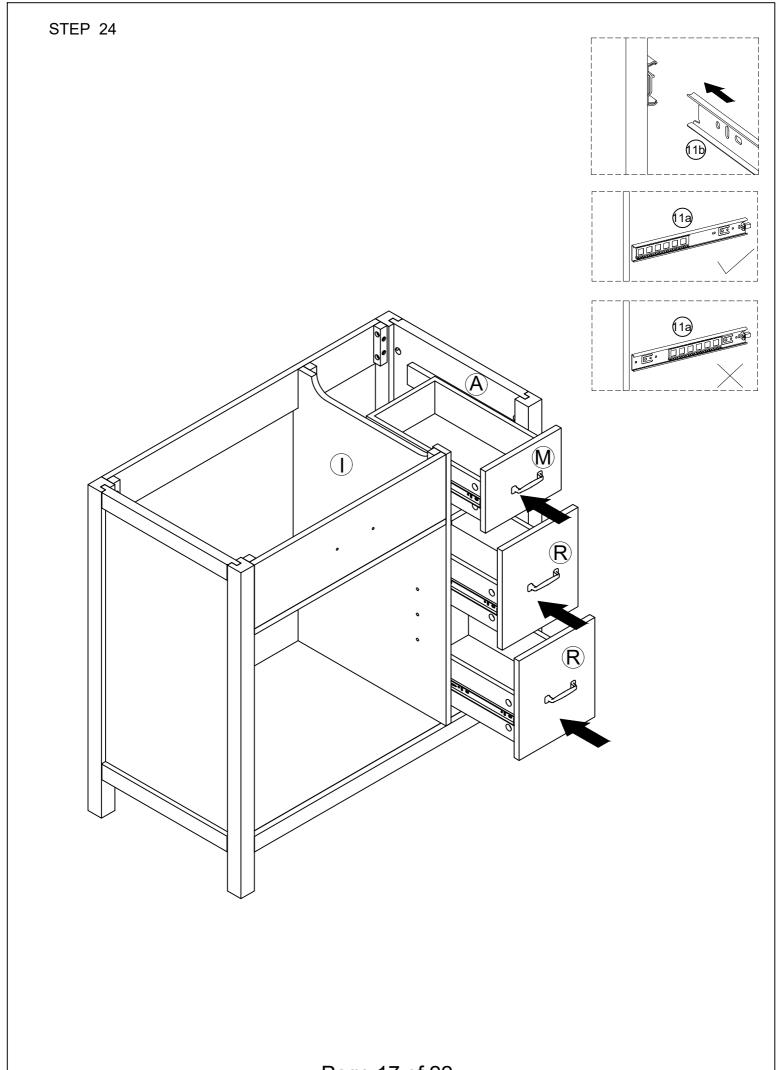

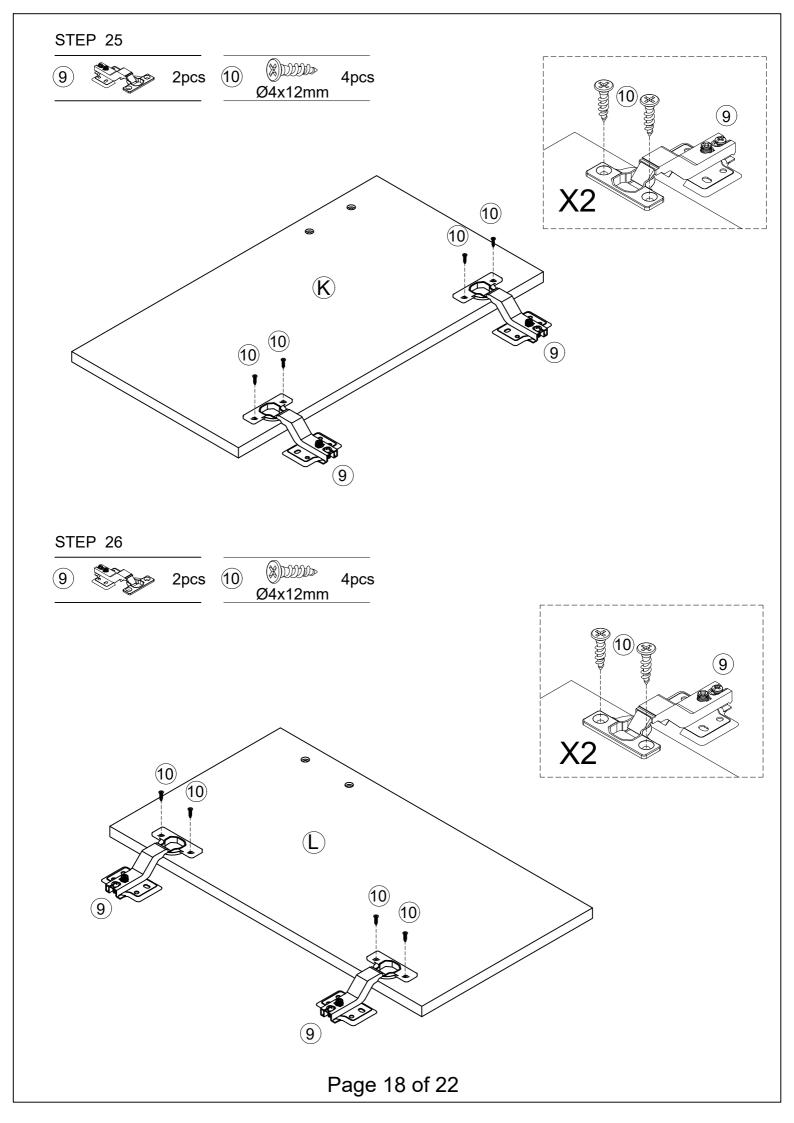


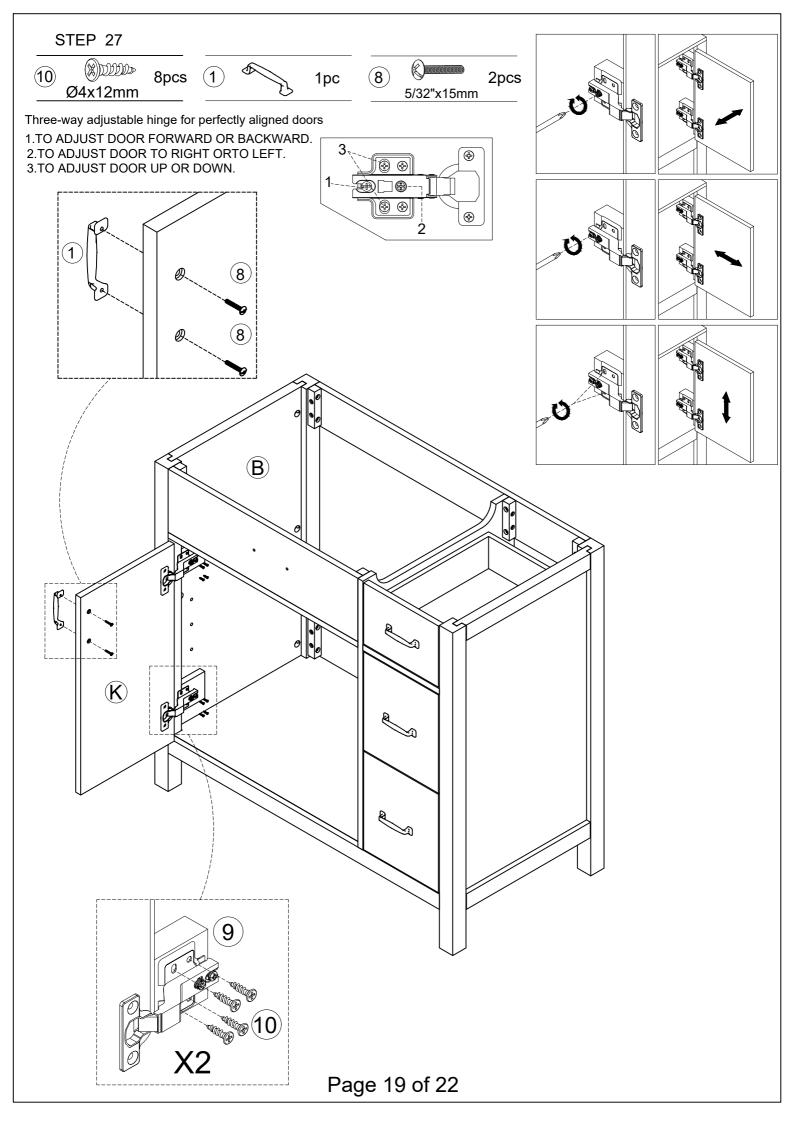

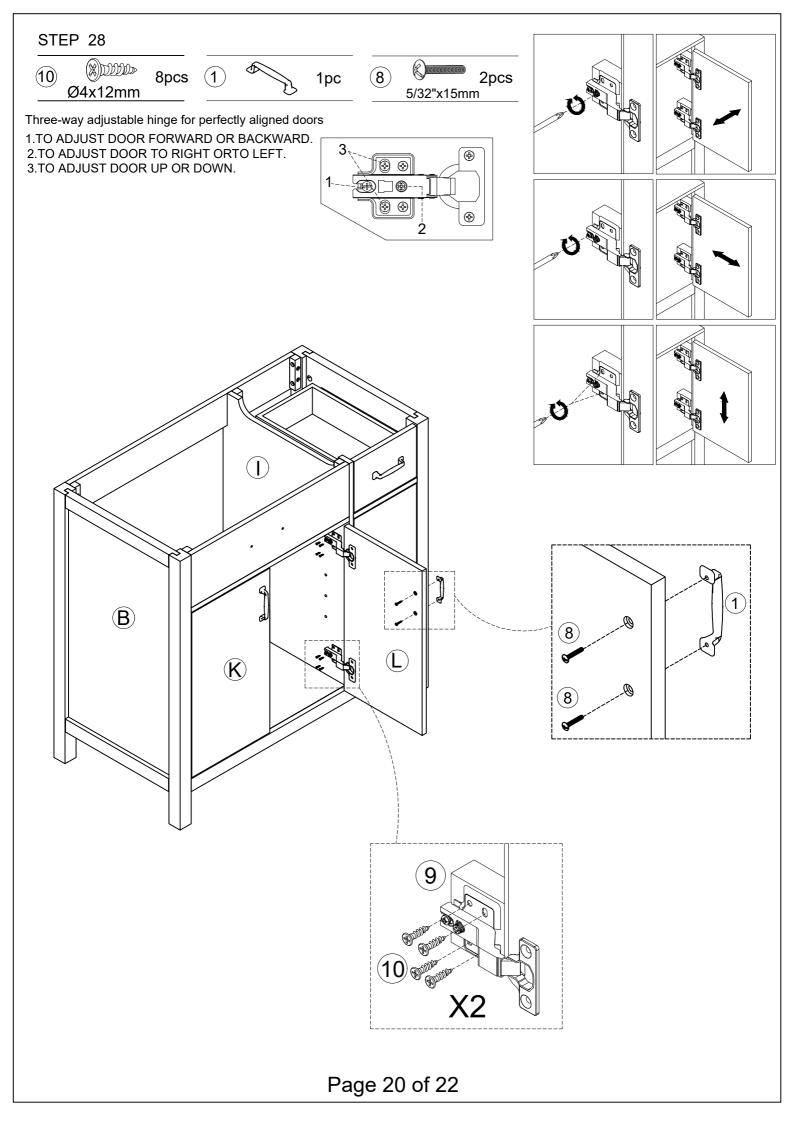





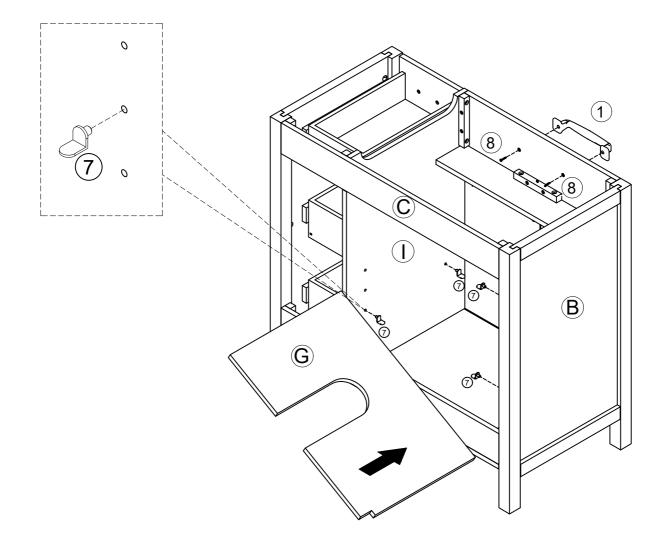

To install the Top (1) to the vanity (2). Apply silicone caulk to the top edge of the wood cabinet. With the help of another adult, gently lower the Sink top with assembled sink onto the cabinet. Make sure the Sink top is flush with the back side of the wood cabinet and the wood cabinet left and right side walls.

B

W

