




Enjoy Cozy Life!

ALICIA SWING CHAIR

ASSEMBLY MANUAL

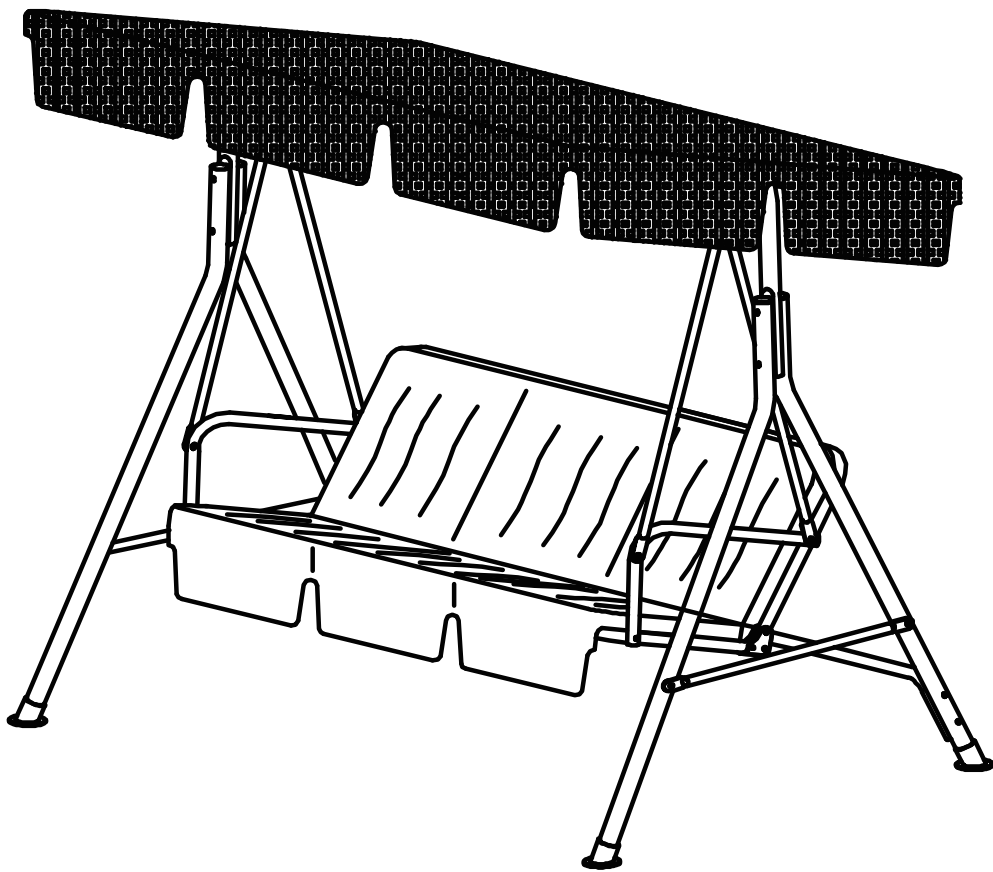

KOZYARD LLC PRODUCTS

www.kozyard.com

© Copyright 2016 - 2023 Kozyard LLC. | All Rights Reserved. Version: 09182023

ASEMBLY INSTUCTION

BEFORE ASSEMBLING,MAKE SURE THAT YOU LAY OUT AND IDENTIFY ALL PARTS LISTED BELOW IN THE PARTS LIST. INSTALL ON LEVEL GROUND.

INSTALL NOT LESS THAN 6 FEET FROM ANY OBSTRUCTION SUCH AS FENCE, GARAGE, HOUSE, OVERHANGING BRANCHES, LAUNDRY LINES,OR ELECTRICAL WIRES.

TIGHTEN ALL NUTS AND BOLTS SECURELY. ALL BOLTS SHOULD BE HAND TIGHENED BEFORE USE. NEVER USE POWER TOOLS OR EXCESSIVE FORCE DURING ASSEMBLY AND TIGHTENING OF BOLTS.

IT IS RECOMMENDED TO BE AT LEAST 2 PEOPLE FORE A SAFE ASSEMBLY OF THE PRODUCT.

TOOL REQUIRED:



ALLEN WRENCH

(PROVIDED)



SMALL WRENCH




2 PERSON
ASSEMBLY

IMPORTANT NOTICE:

1. Please refrain from kneeling or standing on the swing chair.
2. Ensure that the weight on the swing does not exceed the 525 lbs limit.
3. Prior to use, make certain that the swing is positioned on a stable, level surface.
4. When encountering rain or snow, remember to store the cushion away.


Part list

LEG TUBE

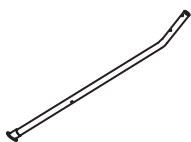

AX2

LEG TUBE

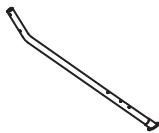

BX2

TOP CROSS BAR




CX1

TOP CROSS BAR



DX1

LEG CROSS




EX2

HANGING PIPE




E1X4

BACK LEG CROSS



FX1

BACK LEG CROSS

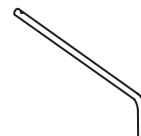

GX1

SPRING HOOK



HX2

ARMREST




IX2

SEAT & BACK
FRAME



JX1

CUSHION

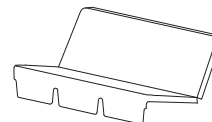

J1X1

CANOPY TUBE



KX2

CANOPY TUBE



LX2

CANOPY



MX1

BOLT



NX4

BOLT



OX1

BOLT



PX2

BOLT




QX2

BOLT




RX2

BOLT




SX2

BOLT



TX4

BOLT








UX4

NUT




VX21

Part list

<div>WASHER</div> <div></div> <div>WX21</div>	<div>PLASTIC SCREW</div> <div></div> <div>YX2</div>	<div>PLASTIC END CAP</div> <div></div> <div>ZX21</div>	<div>ALLEN KEY</div> <div></div>
<div>WRENCH</div> <div></div>			


STEP -1

Connect part D and part C to build the beam using bolt Q washer W, nut V and plastic end-cap Z as shown in diagram.

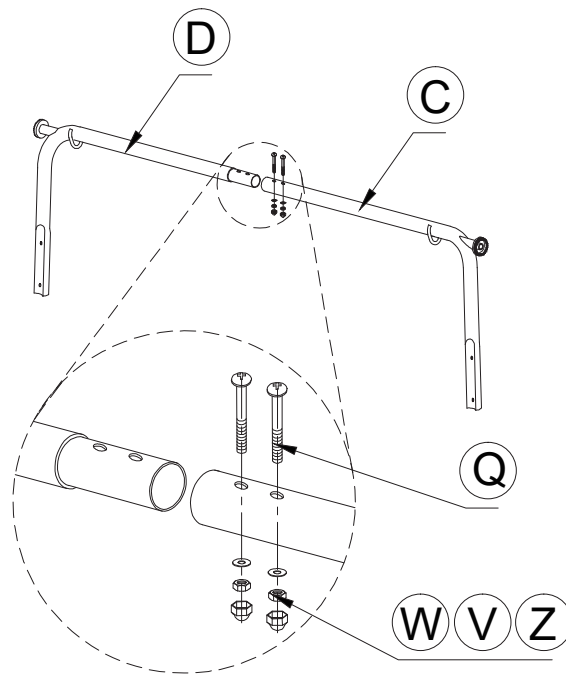

STEP -2


Connect part A and part B with the beam using bolt U washer W, nut V and plastic end-cap Z as shown in diagram.

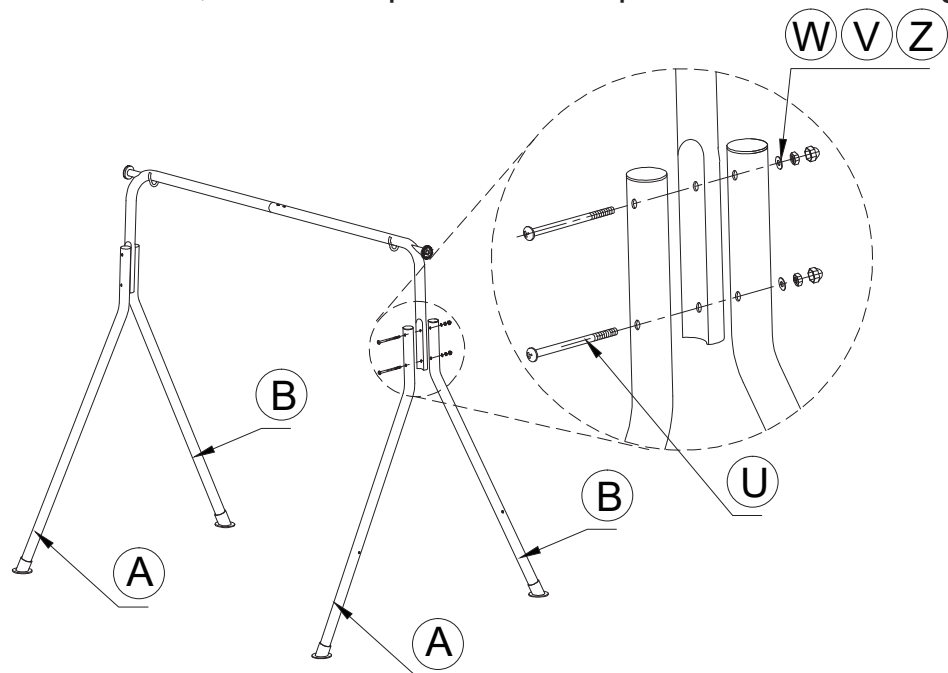

Attention: Both Part A should be on the same side, and both Part B should be on the other side.


STEP -3

Connect part E and legs (part A&B) using bolt N washer W,nut V and plastic end-cap Z as shown in diagram.

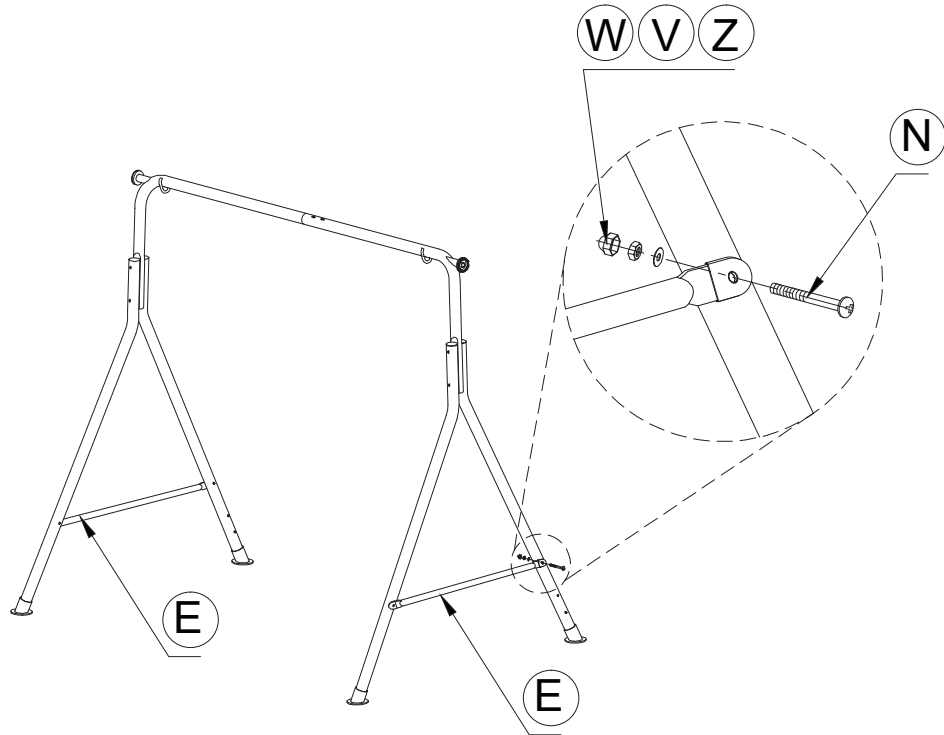


STEP -4

Connect part G and part F to build a connection tube for the rear foot using bolt O,washer X,nut W and plastic end-cap Z as shown in diagram.

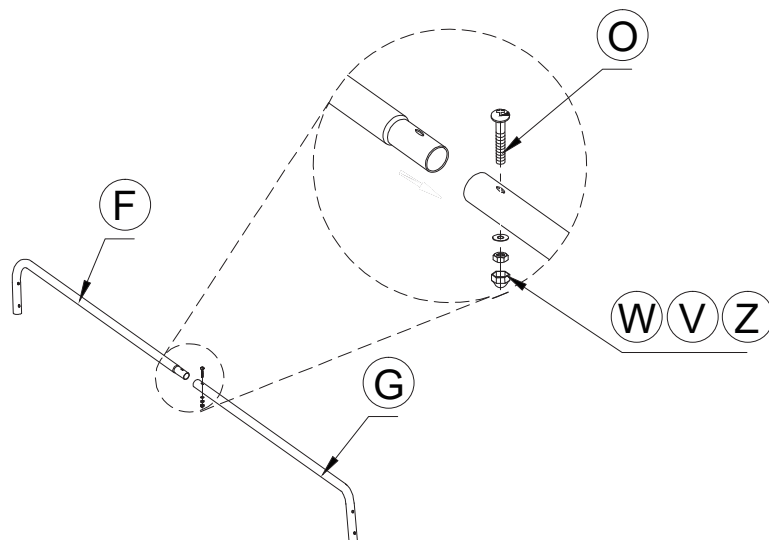


STEP -5

Connect the rear foot tube with part B using bolt T washer W,nut V and plastic end-cap Z as shown in diagram.

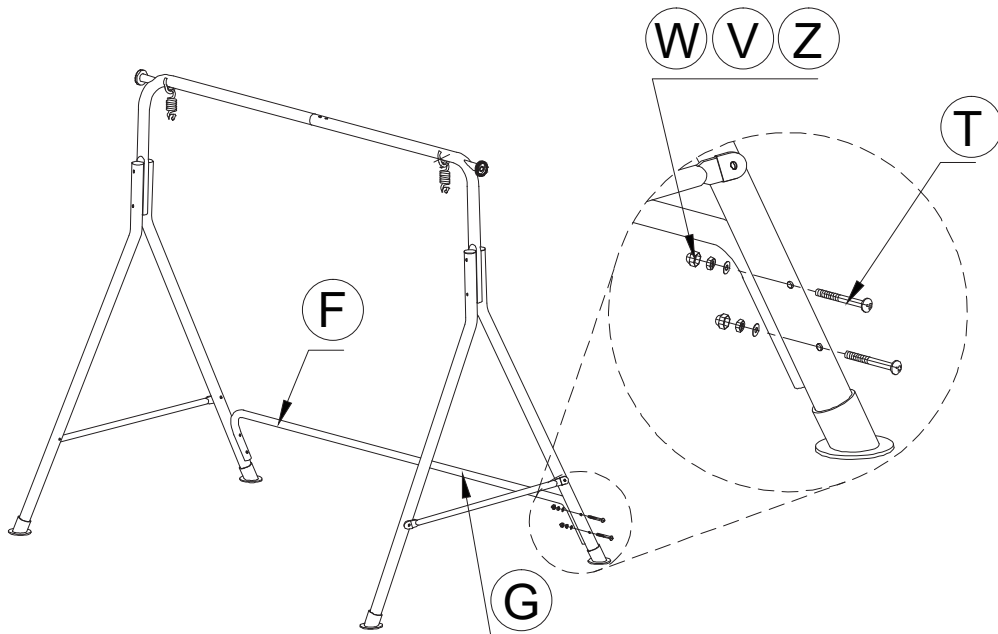


STEP -6

Connect part I and part J using bolt R washer W,nut V and plastic end-cap Z as shown in diagram.

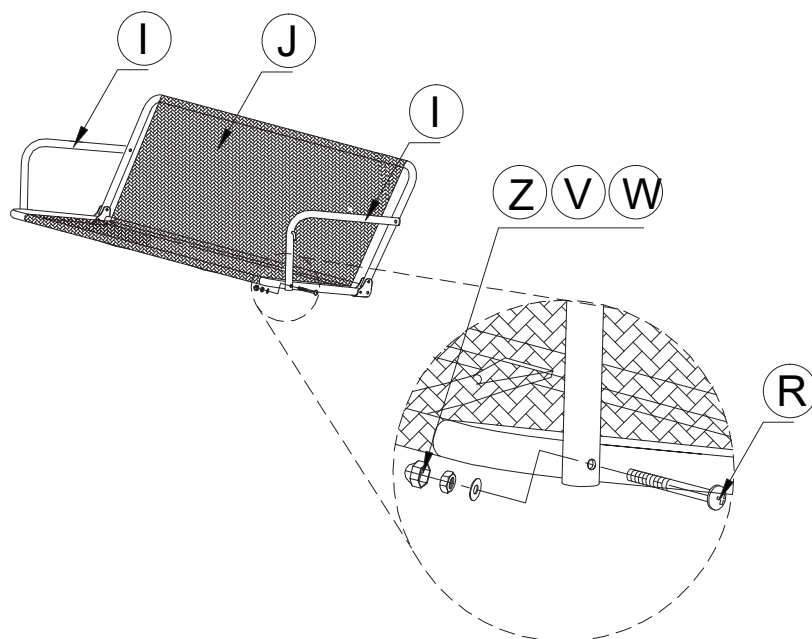

STEP -7


1. Connect part E with backseat (part J1) using bolt S, washer X, nut W and plastic end-cap Z as shown in diagram.

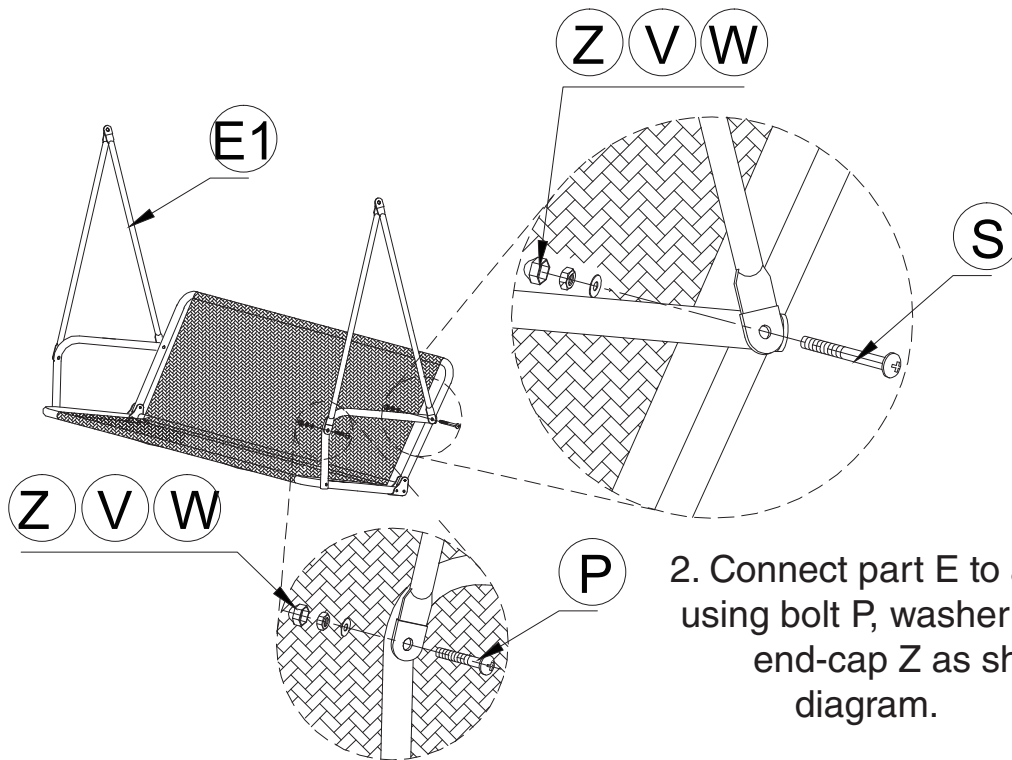


2. Connect part E to armrest (part I) using bolt P, washer W, nut V and plastic end-cap Z as shown in diagram.

STEP -8


Use part H to hook the seat to the frame.

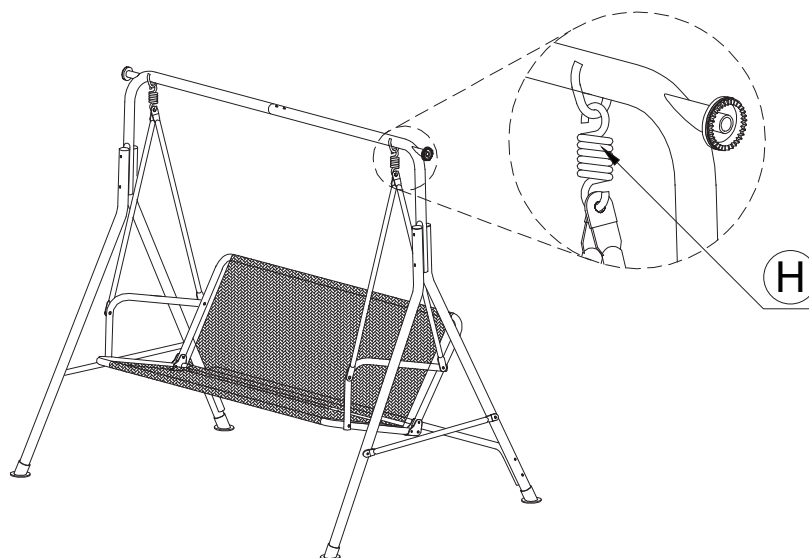


STEP -9 Affix part K to beam using screw Y.

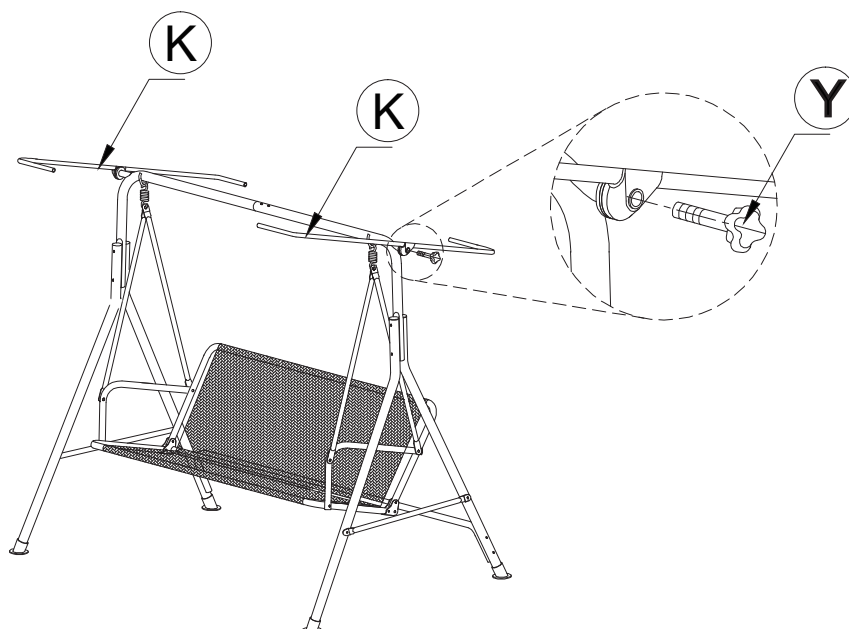


STEP -10 Insert part L to canopy.

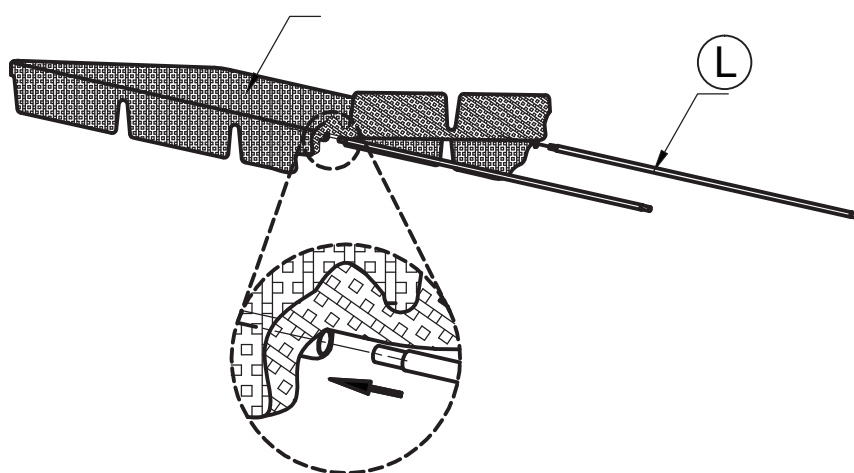

STEP -11 Connect Part L and Part K to support canopy.

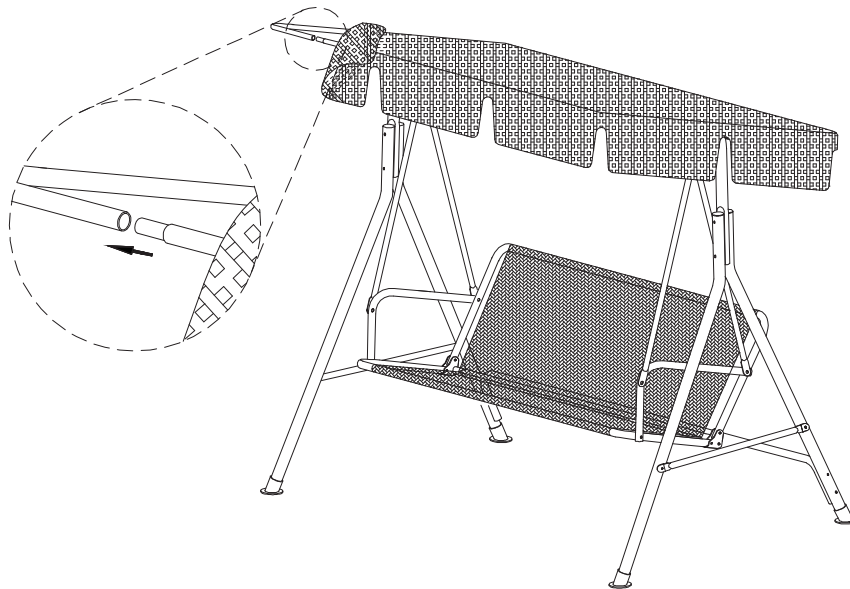

STEP -12 Place cushion part J1 onto the frame. If it rains or snows, please remember to store cushion part J1 away.

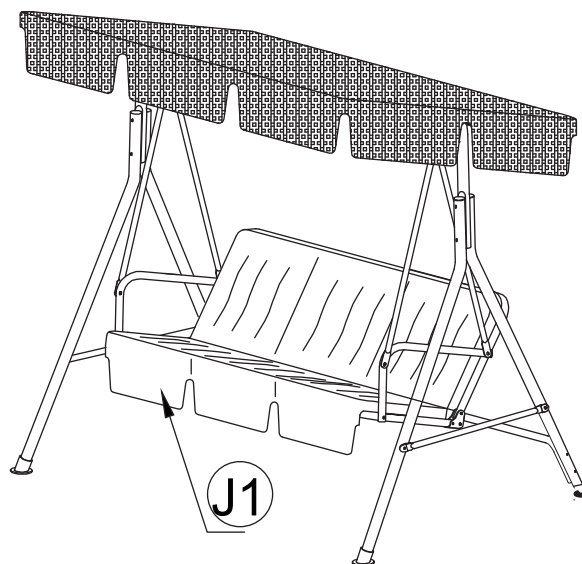

In the end, check that all screws are securely tightened before use.



Enjoy Cozy Life!

SUPPORT:

Toll free: 866-355-0018

www.kozyard.com

email: support@kozyard.com

SOCIAL MEDIA:



Follow us on Instagram

www.instagram.com/kozyard

Upload a picture of your Kozyard product in your home, with the hashtag #kozyard