


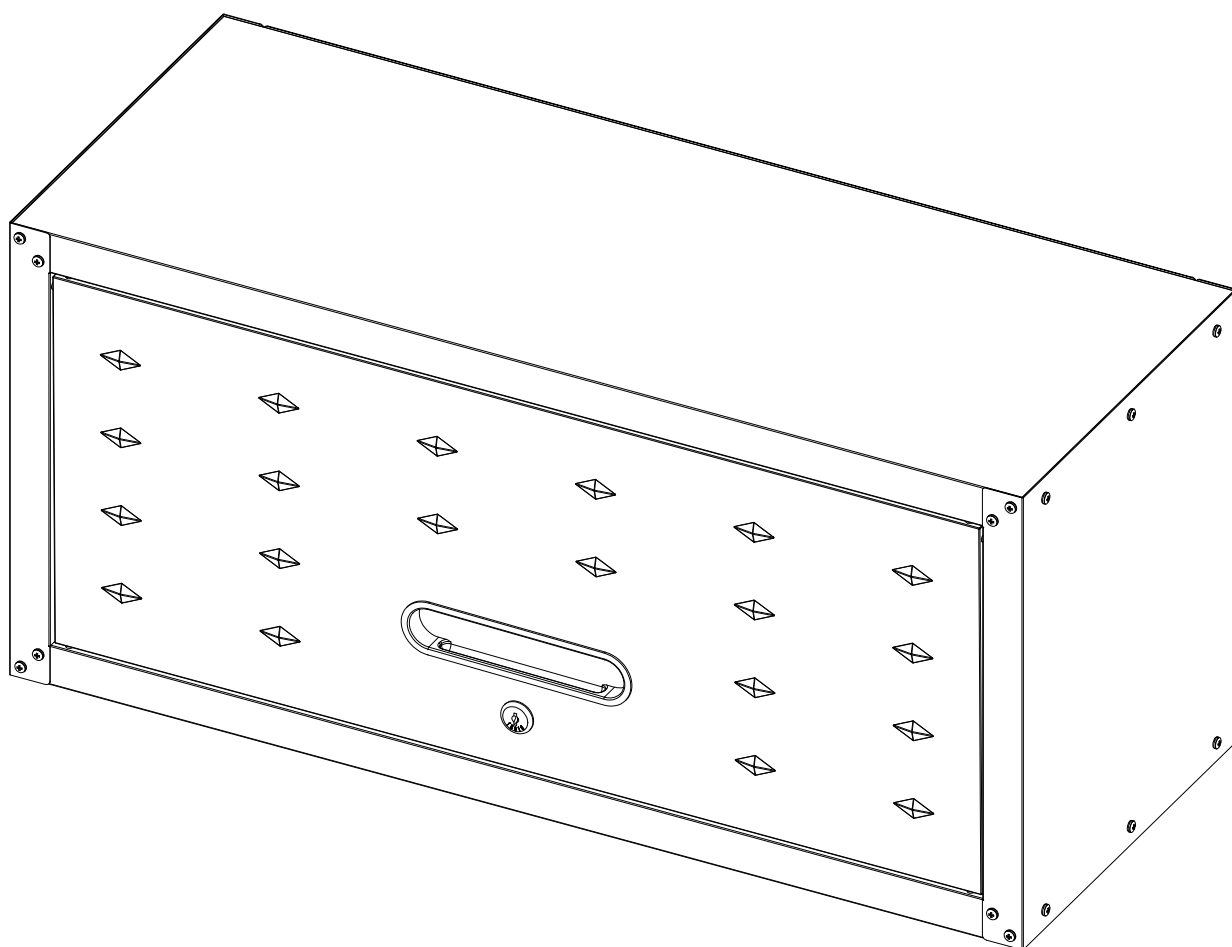
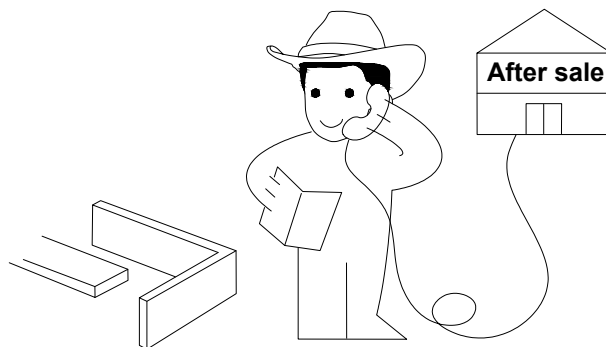
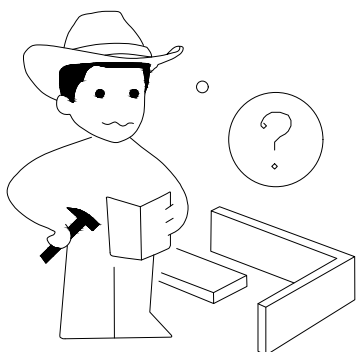
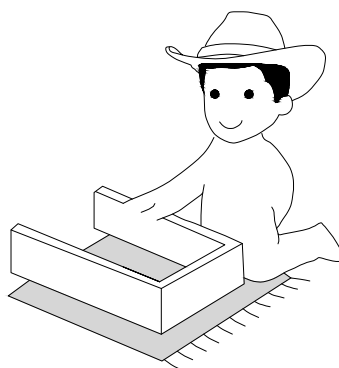
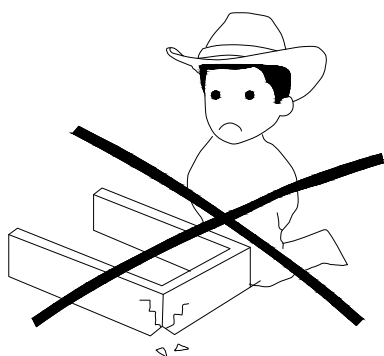
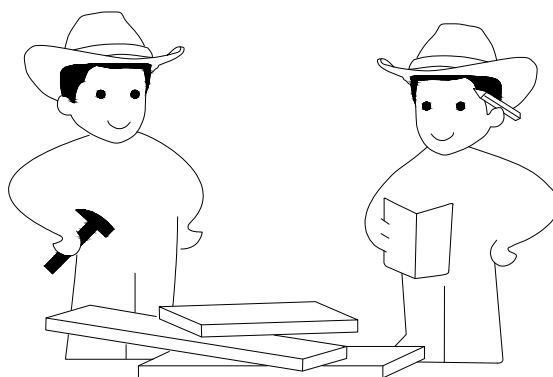
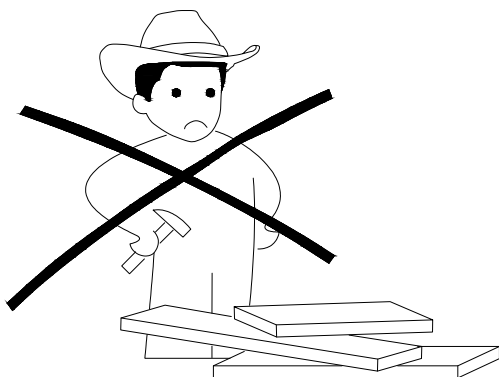

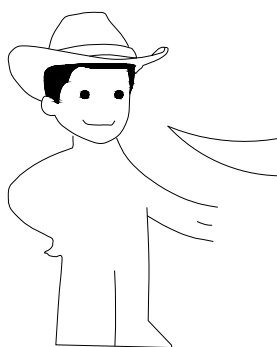
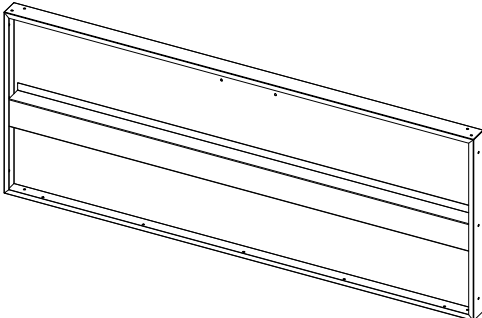
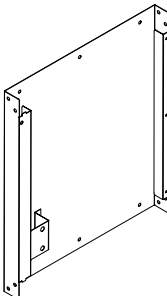
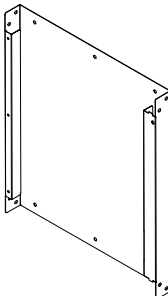
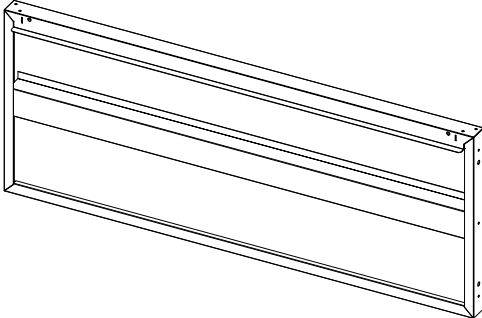
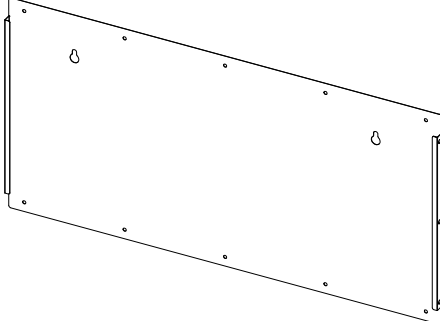
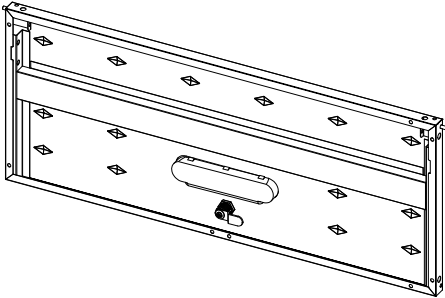





Installation video




1×1pc 		2×1pc 		3×1pc 			
4×1 		5×1 					
6×1 							
A×46  M4× 8mm 0.3inch	B×4  M5× 10mm 0.3inch	S×1 	T×1 	U×1 	V×2  M8  M5  M5×40 mm		

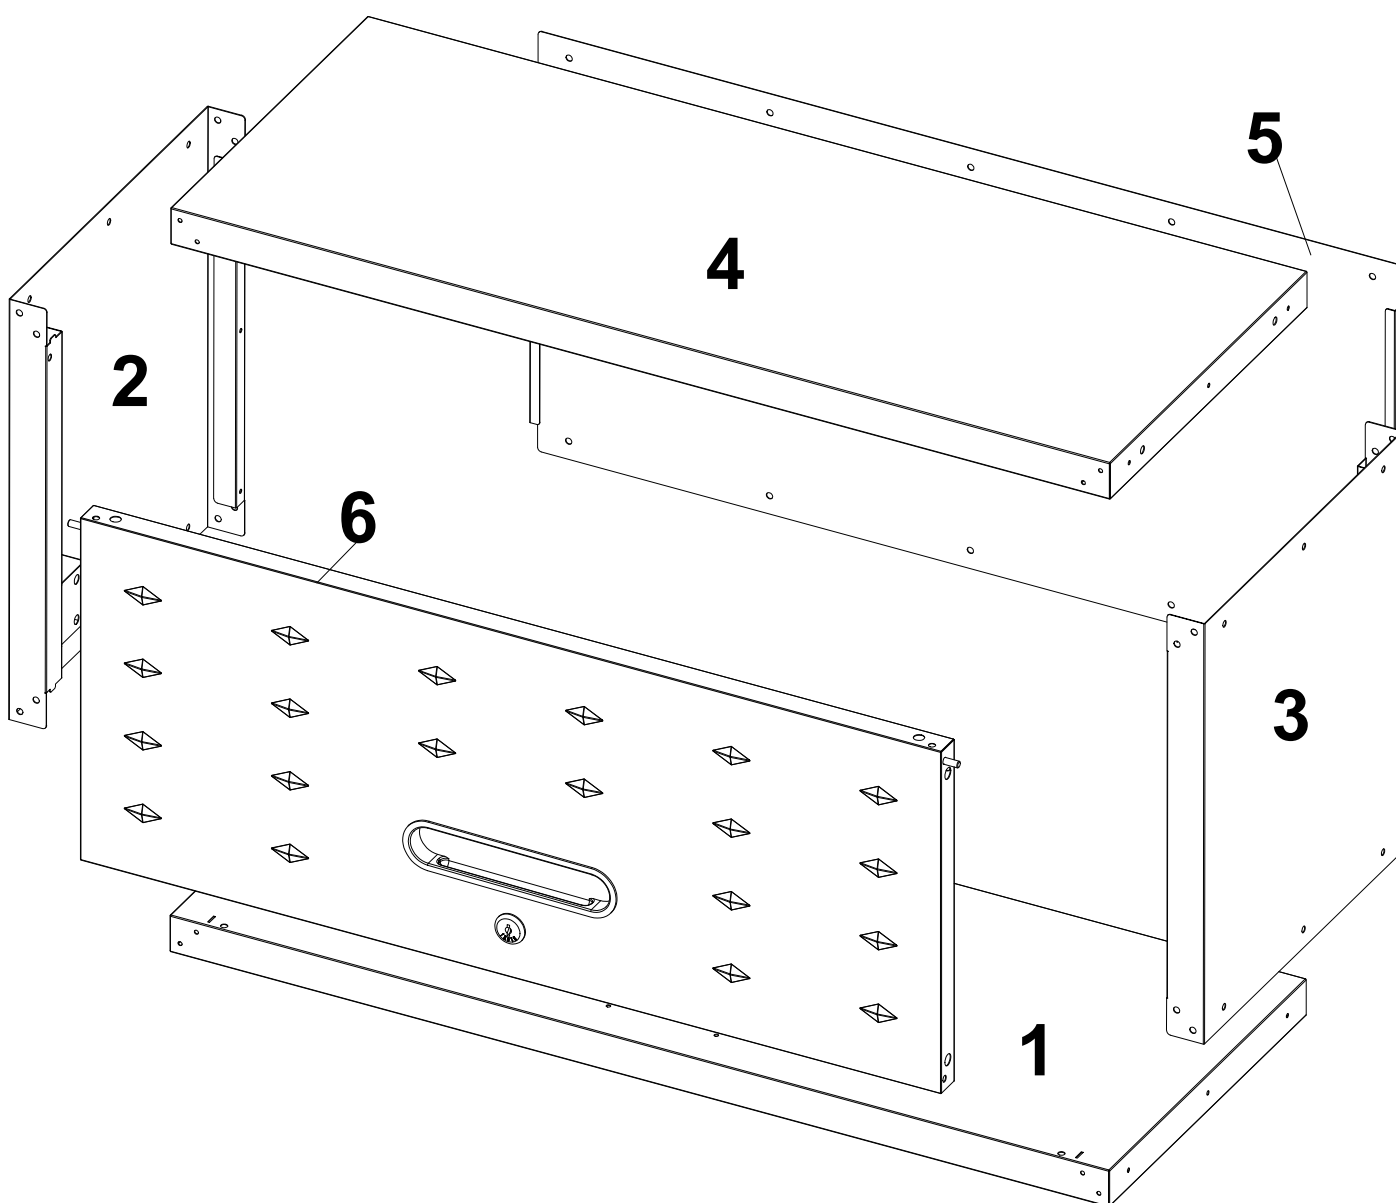




1

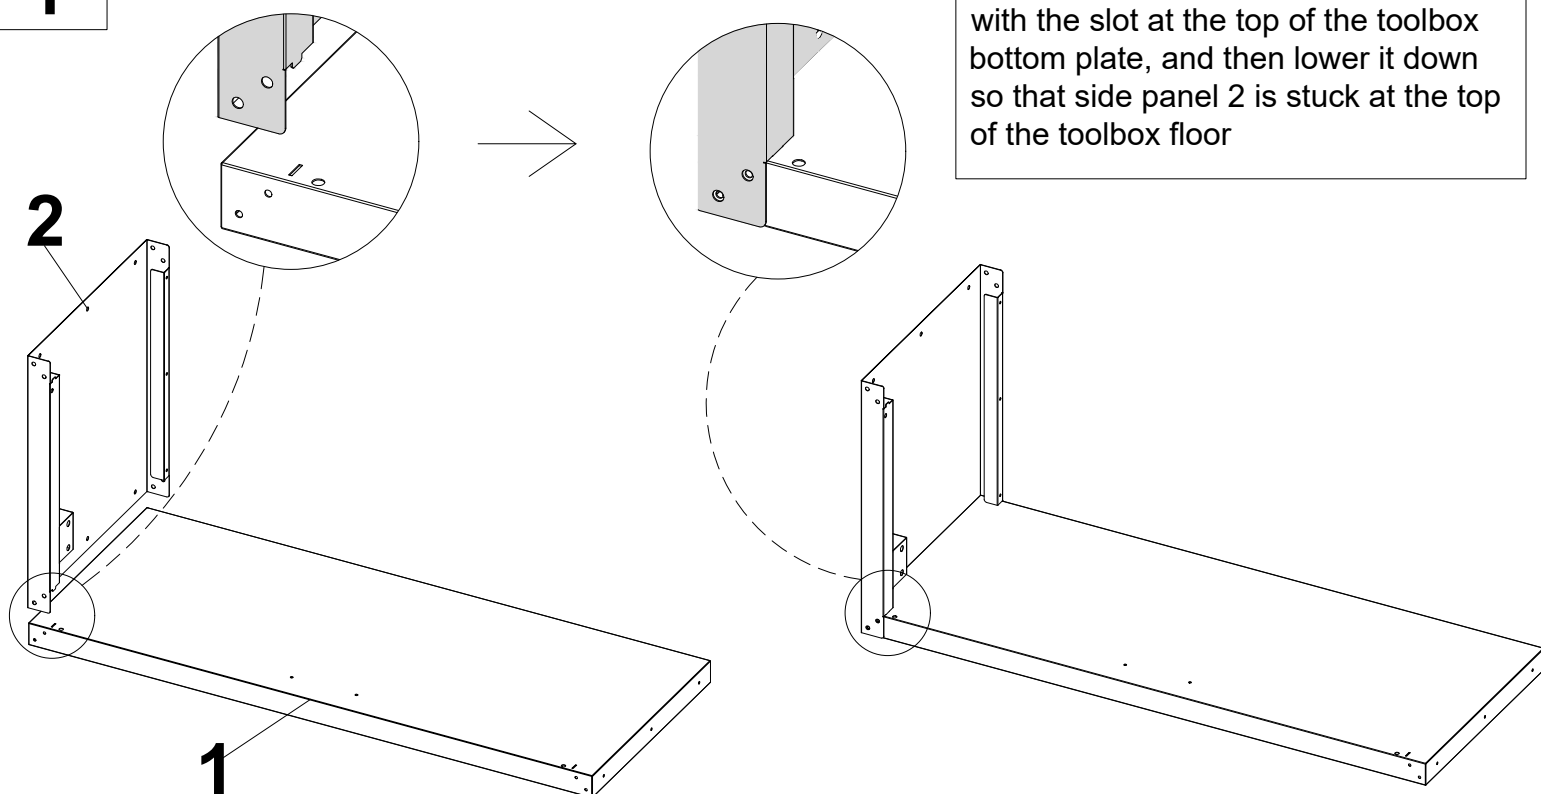

2




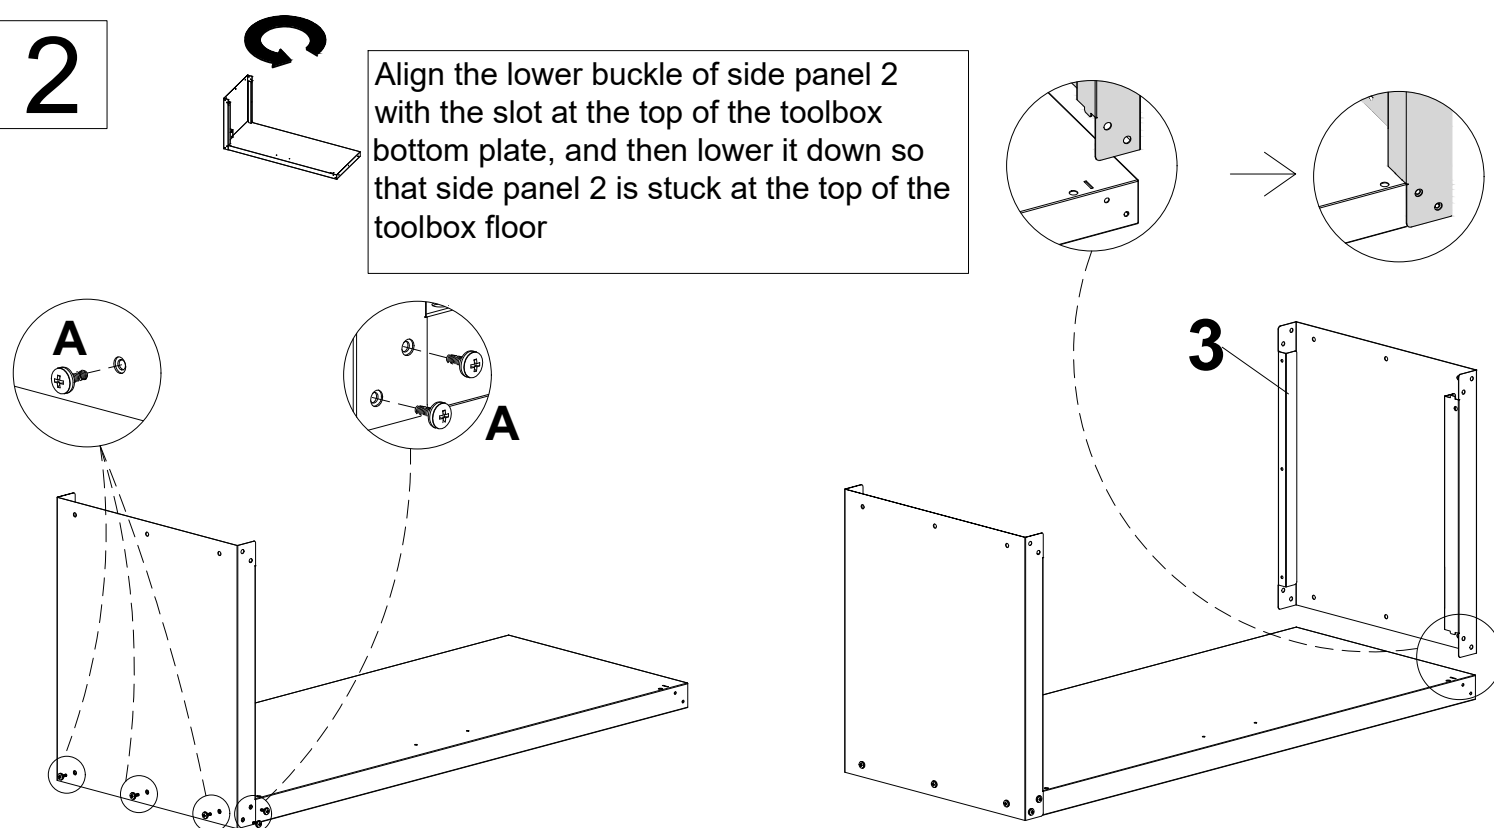


3

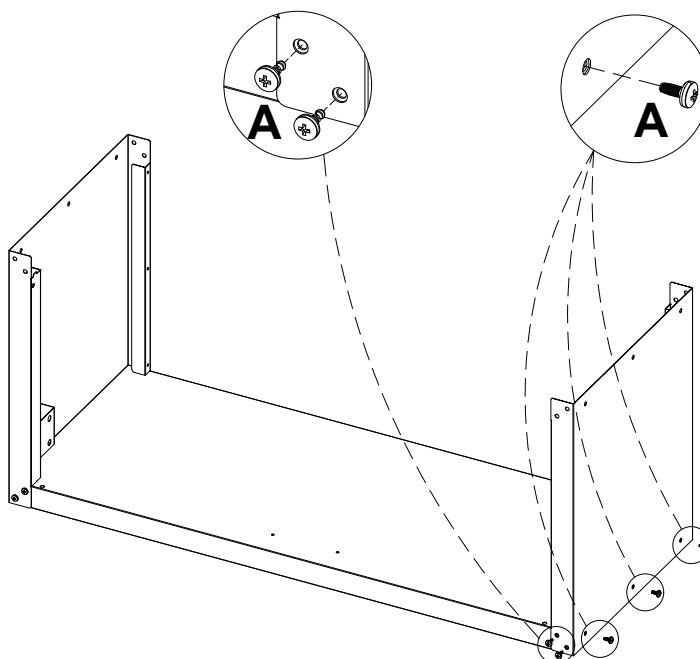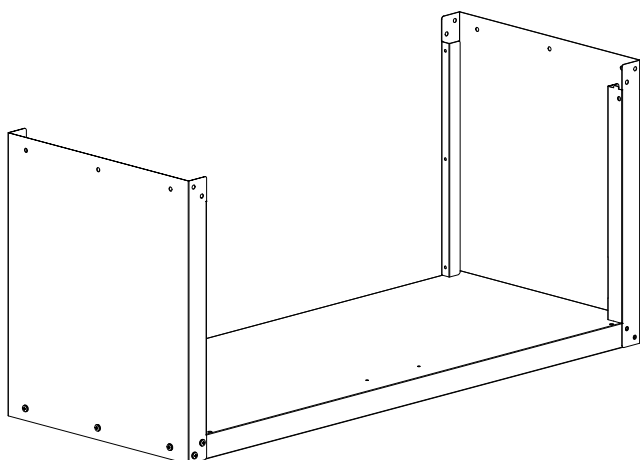
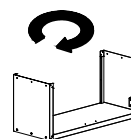


4




Align the card slots on both sides of the lower end of panel 4 with the buckles on the top of side panels 2 and 3, then lower it down so that panel 4 is stuck on the top of the toolbox

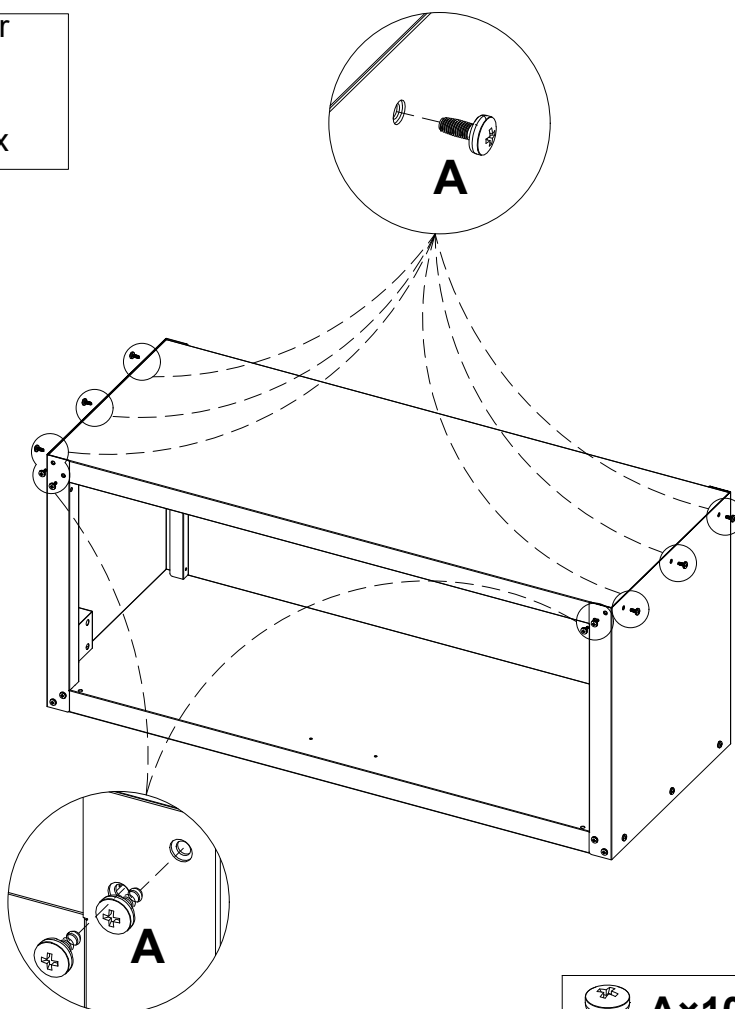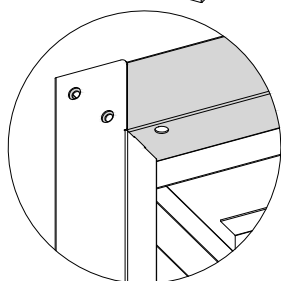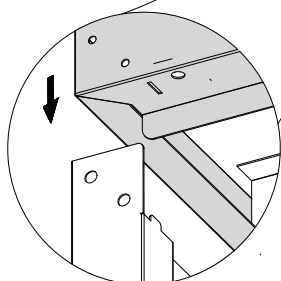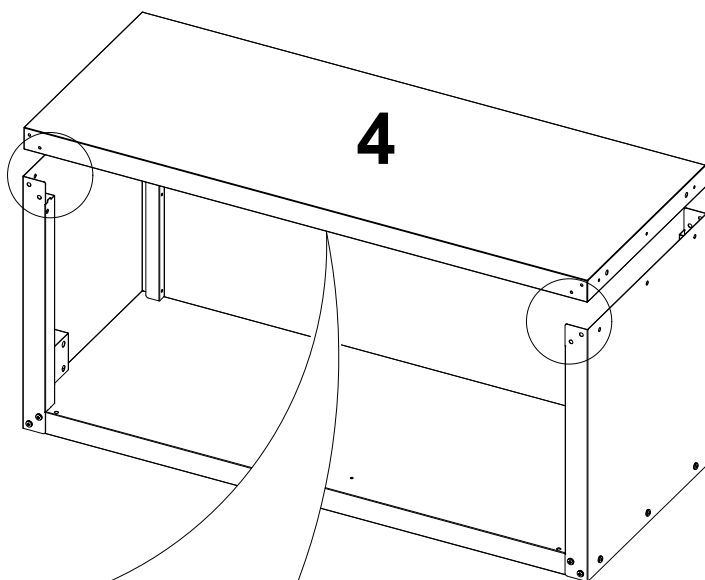


5

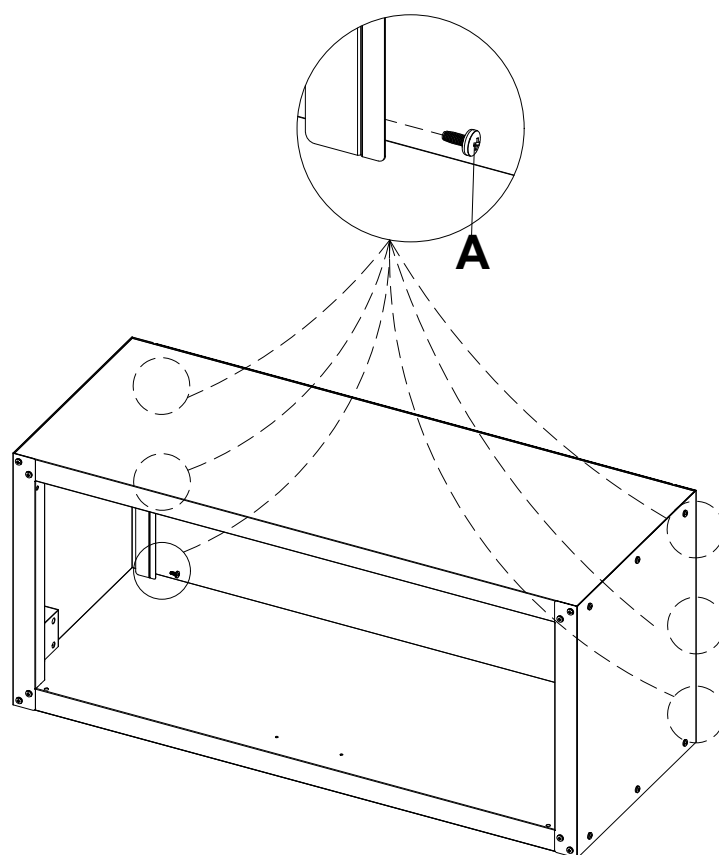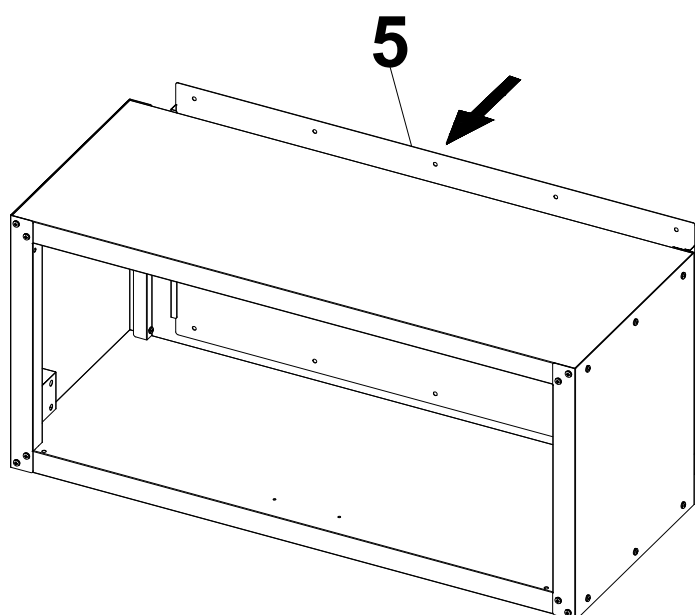

6

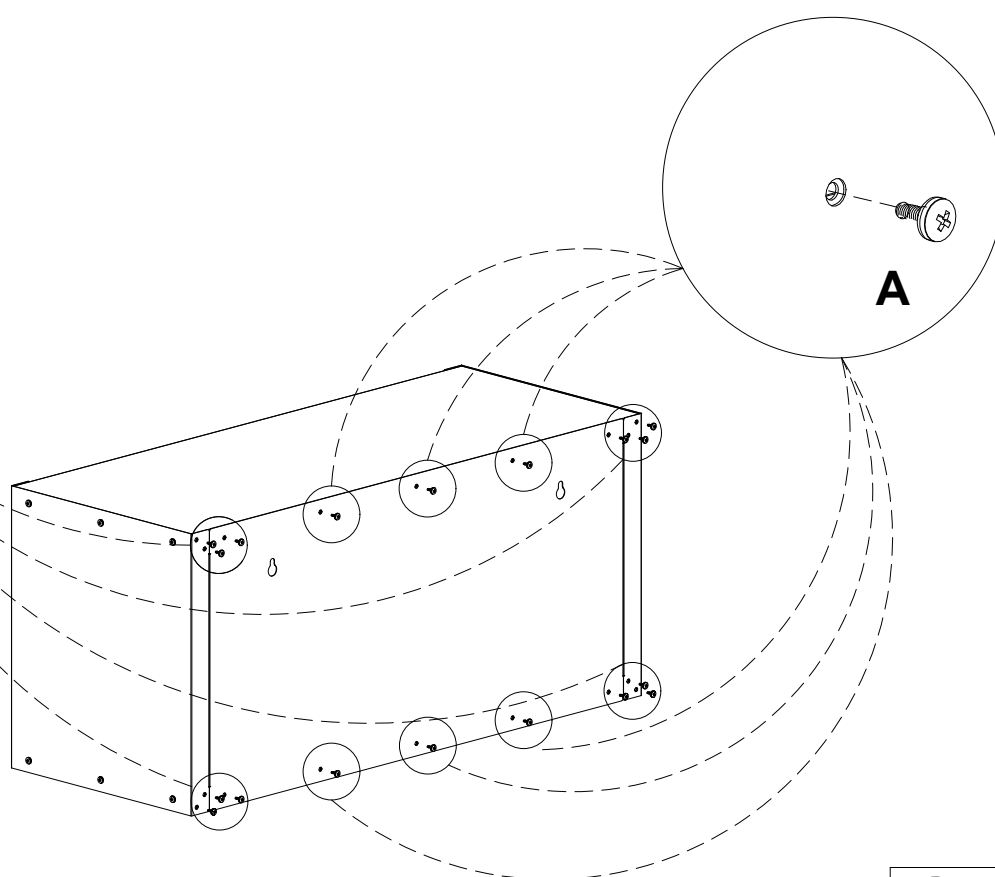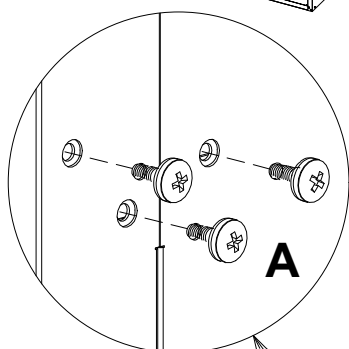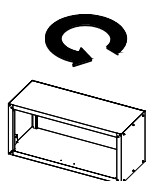


7

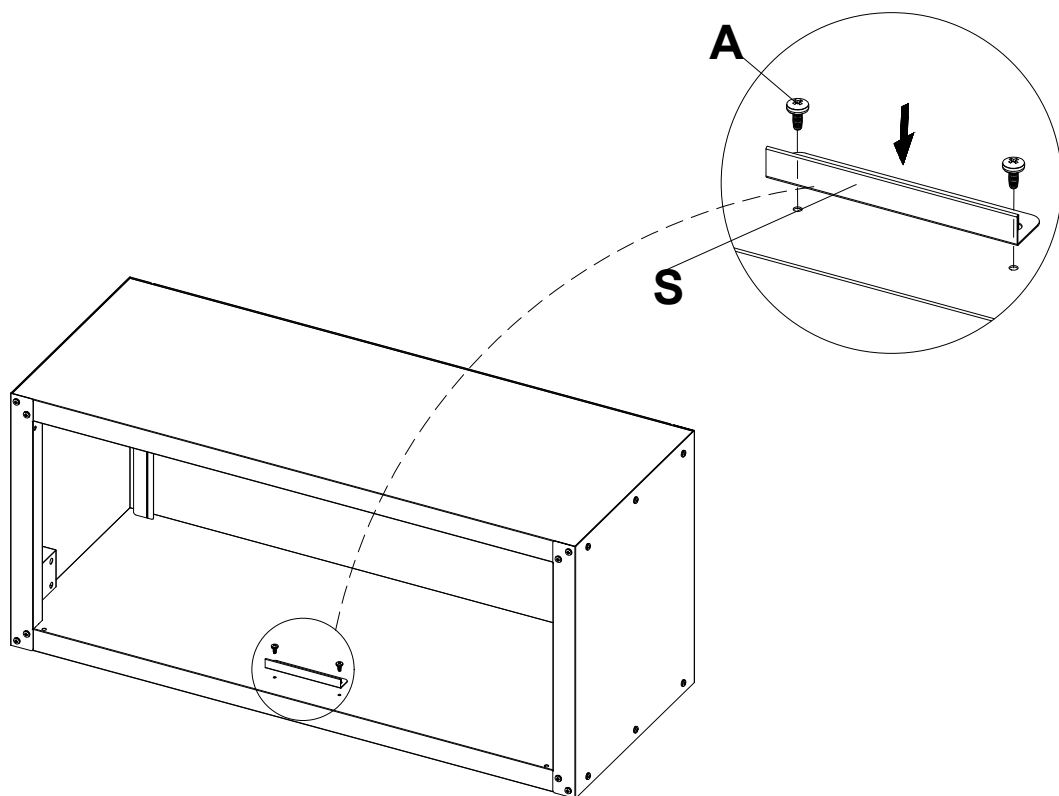


8


STEP 1

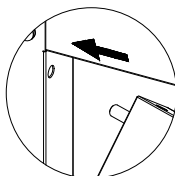




STEP 2

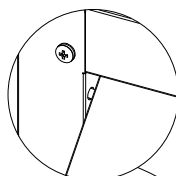


STEP 3

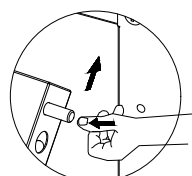


STEP 4

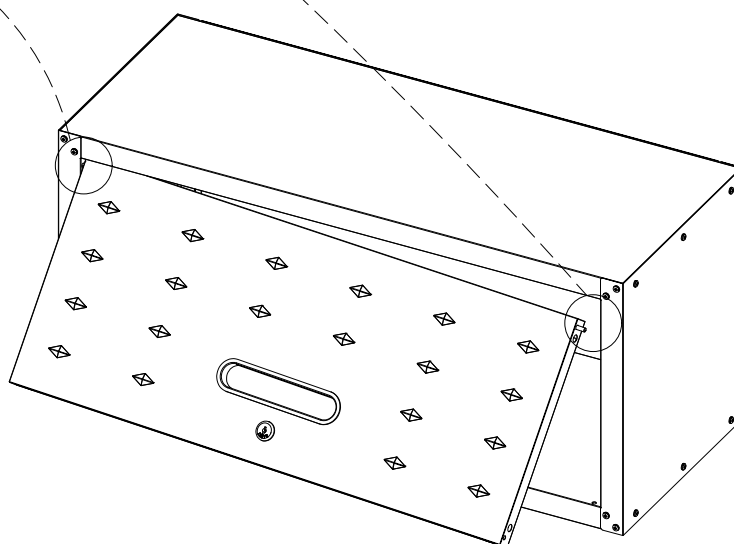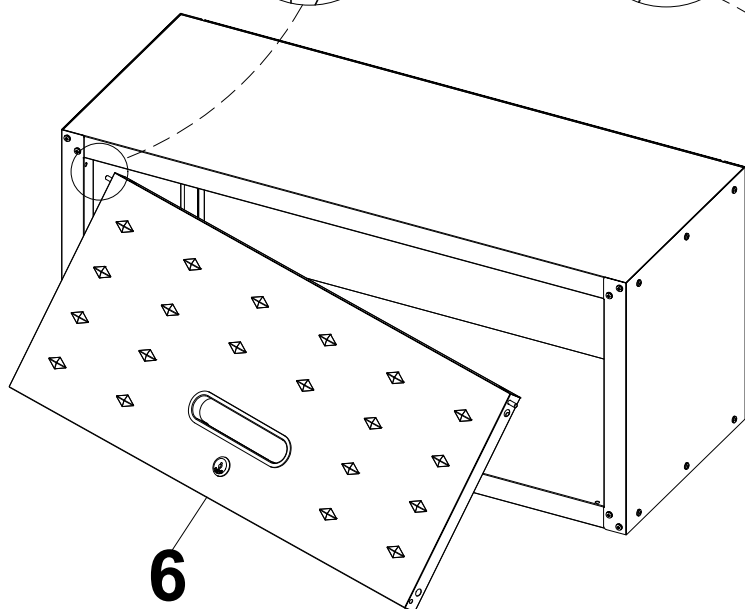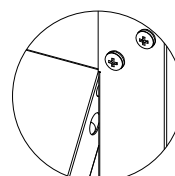


9

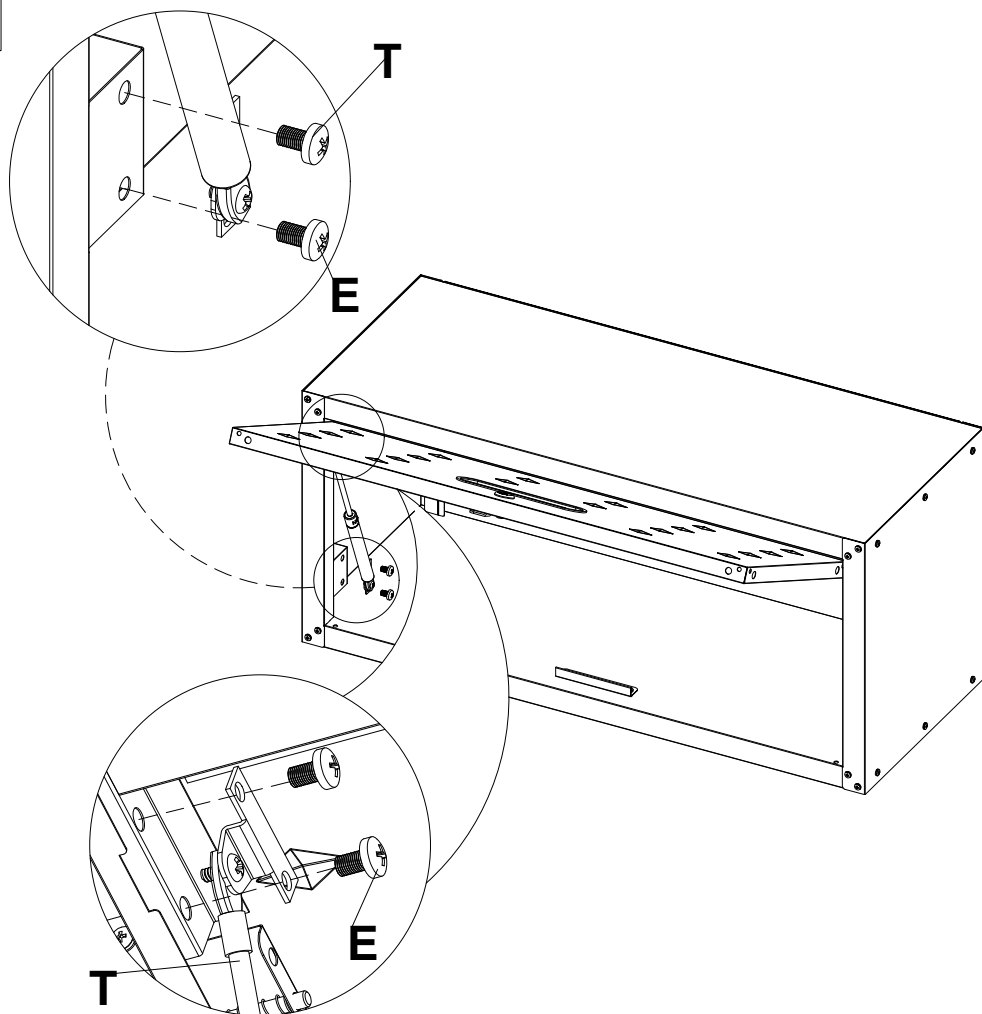

10

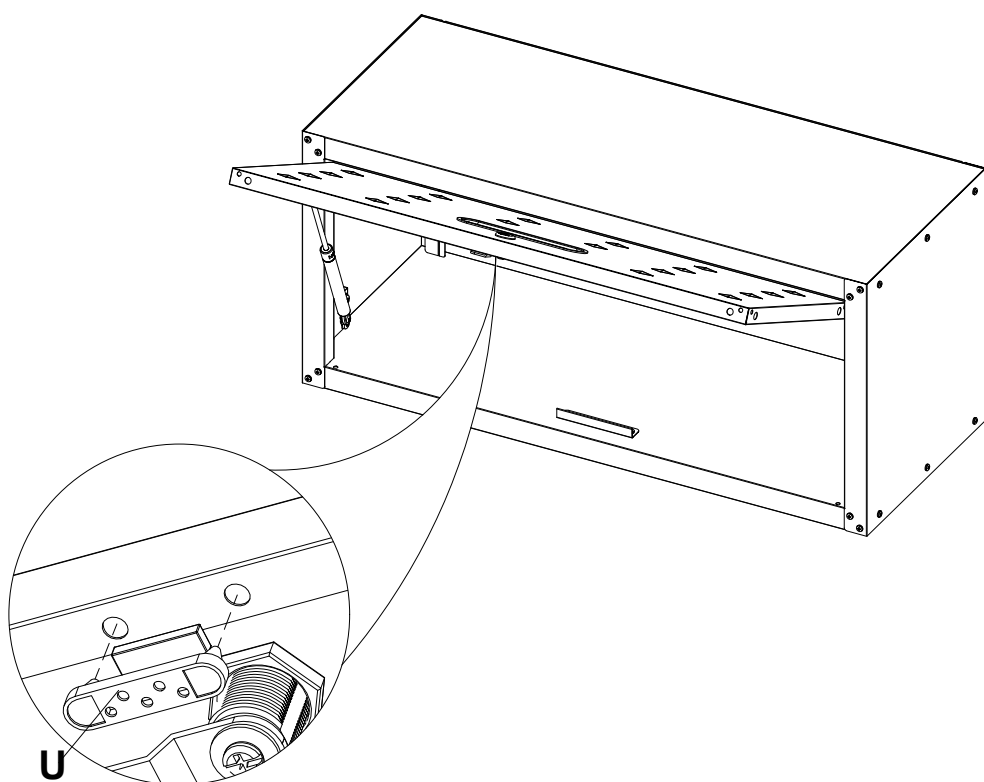

11

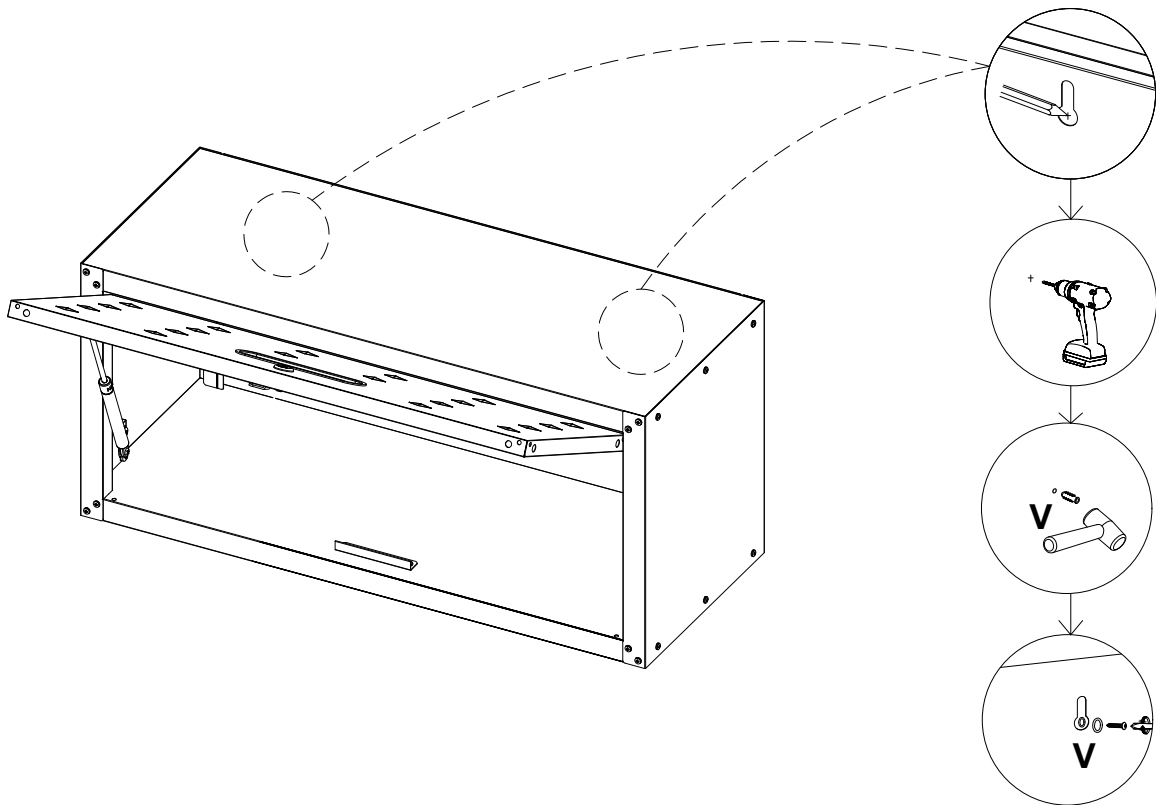

 **Vx2**

12

