




1. Remove plastic rough-in cover and screws.

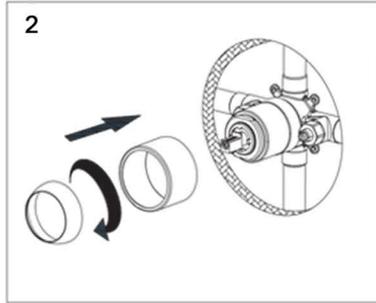

2. Install valve body sleeve and sleeve cover.

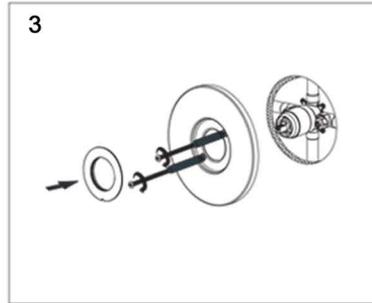


3. Install trim pate and screw plate cover.

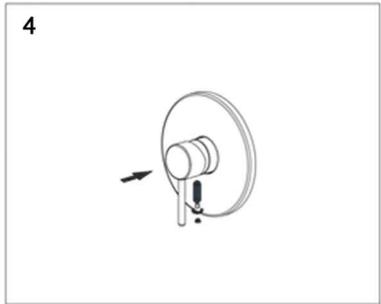

4. Install the handle and handle screw.




5. Install the shower arm and flange. Slide the flange onto the shower arm and teflon tape at least the first 3 threads of the end going into the wall (pipedope is recommended also for any connections in the wall) tighten arm securely.

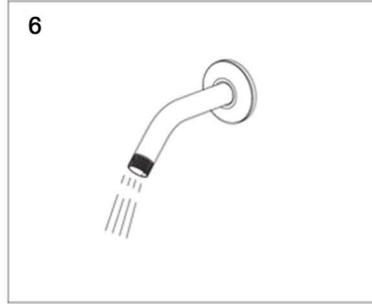

6. Turn on water to flush out any debris that may be in the lines.





7. Install showerhead use teflon tape on at least the first 3 threads and screw on the shower head using a wrench.

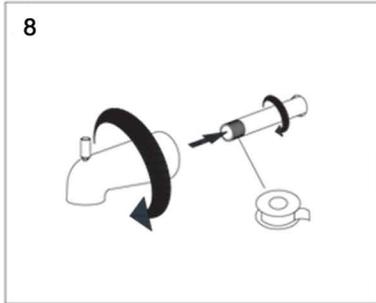

8. Install tub spout use teflon tape on at least the first 3 threads and screw on the tub spout securley.



Tub & Shower Trim

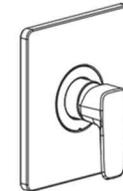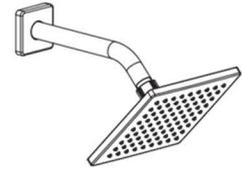

KCHS0023