

ASSEMBLY INSTRUCTIONS


SINGLE BED

If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net













WF191655






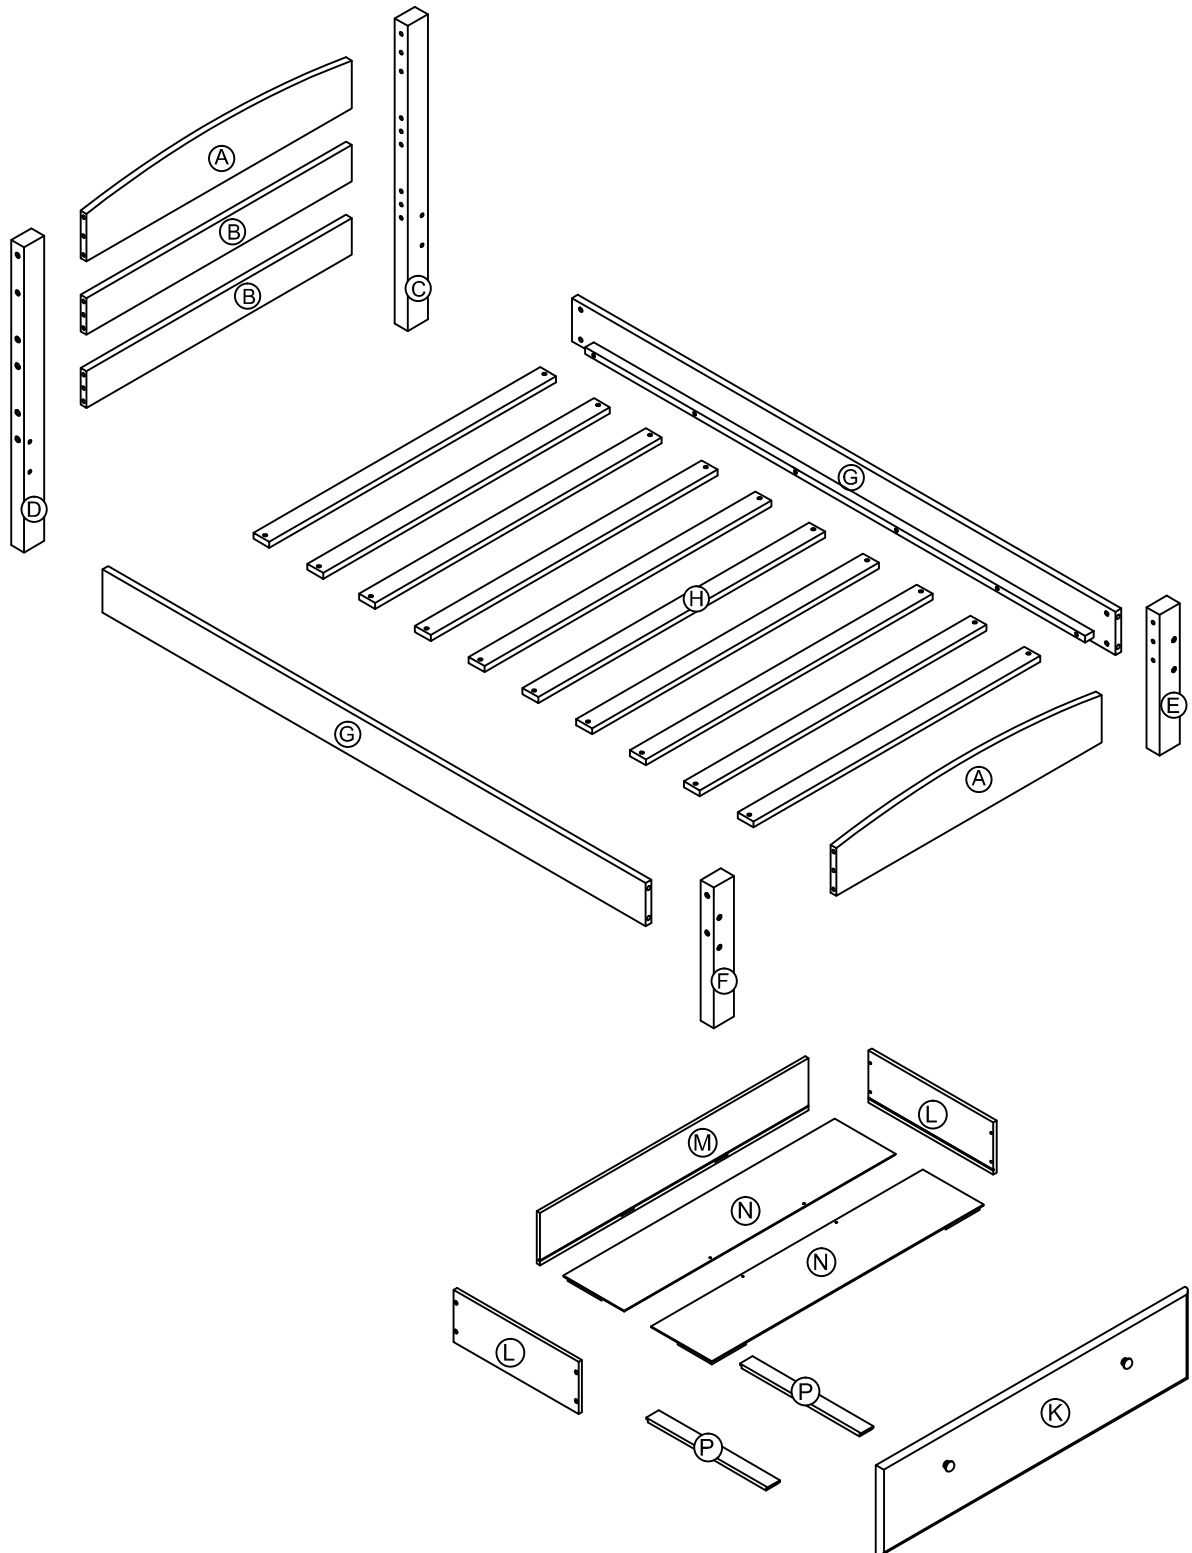
Detail View




PART LISTS

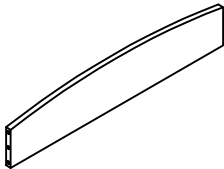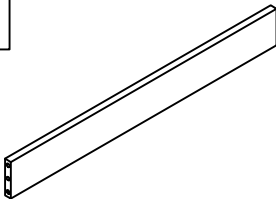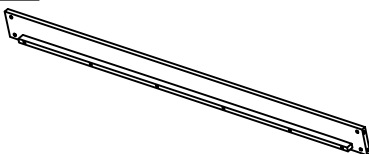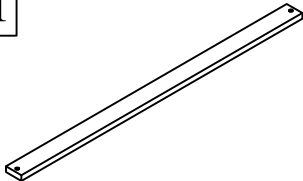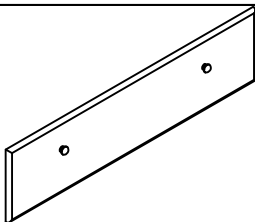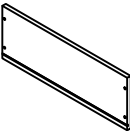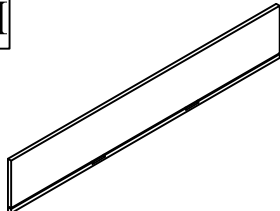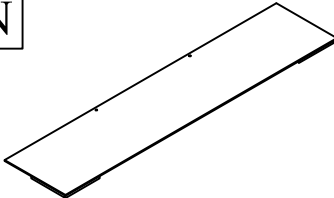A 	B 	C 
Headboard&footboard top rail 2pcs	Headboard Horizontal bar 2pcs	Headboard leg (left side) 1pc
D 	E 	F 
Headboard leg (Right side) 1pc	Footboard leg (left side) 1pc	Footboard leg (Right side) 1pc
G 	H 	K 
Side rail 2pcs	Slat 10pcs	Drawer Front 1pc
L 	M 	N 
Drawer side panel 2pcs	Drawer back panel 1pc	Drawer bottom panel 2pcs
P 		
Drawer bottom support 2pcs		

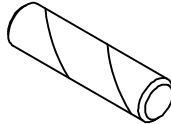
HARDWARE LISTS

1		2		3	
Long Bolt: 1/4" x 85mm (24pcs)		Hole bolt Ø 1/4"x15mm (8pcs)		Wood dower Ø10 x 30mm (12 pcs)	
4		5		6	
Screw #8 x 30mm (20 pcs)		Wheel 4 pcs		Screw Ø3 x 15mm (12 pcs)	
7		8		9	
Screw Ø4 x 25mm (8 pcs)		Allen key 4mm (1pc)		Bolt 3/16" x 25mm (2pcs)	
10					
Handle (2pcs)					

ASSEMBLY SCREW DRIVER REQUIRED (NOT INCLUDED)




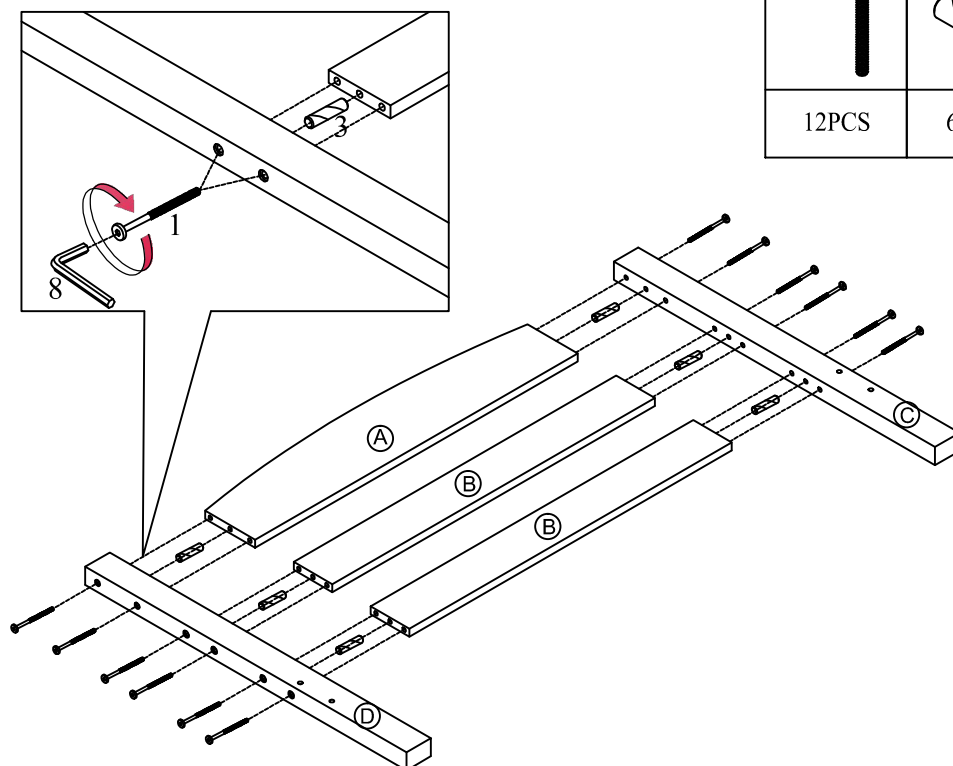STEP 1




1		3	
	12PCS		6PCS

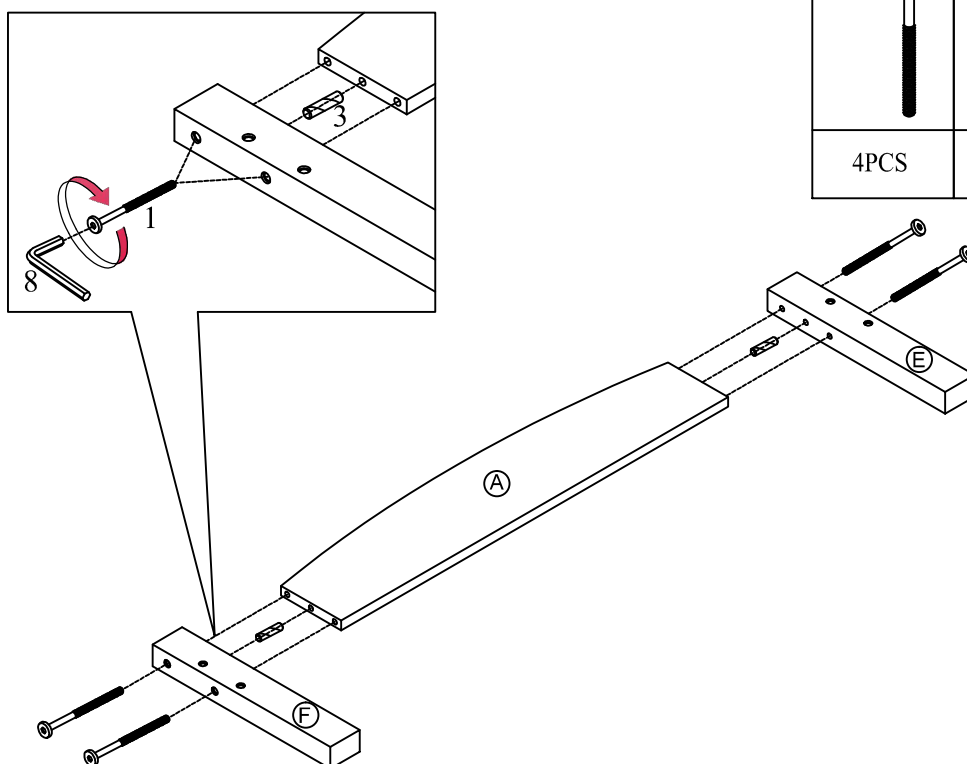STEP 2




1		3	
	4PCS		2PCS

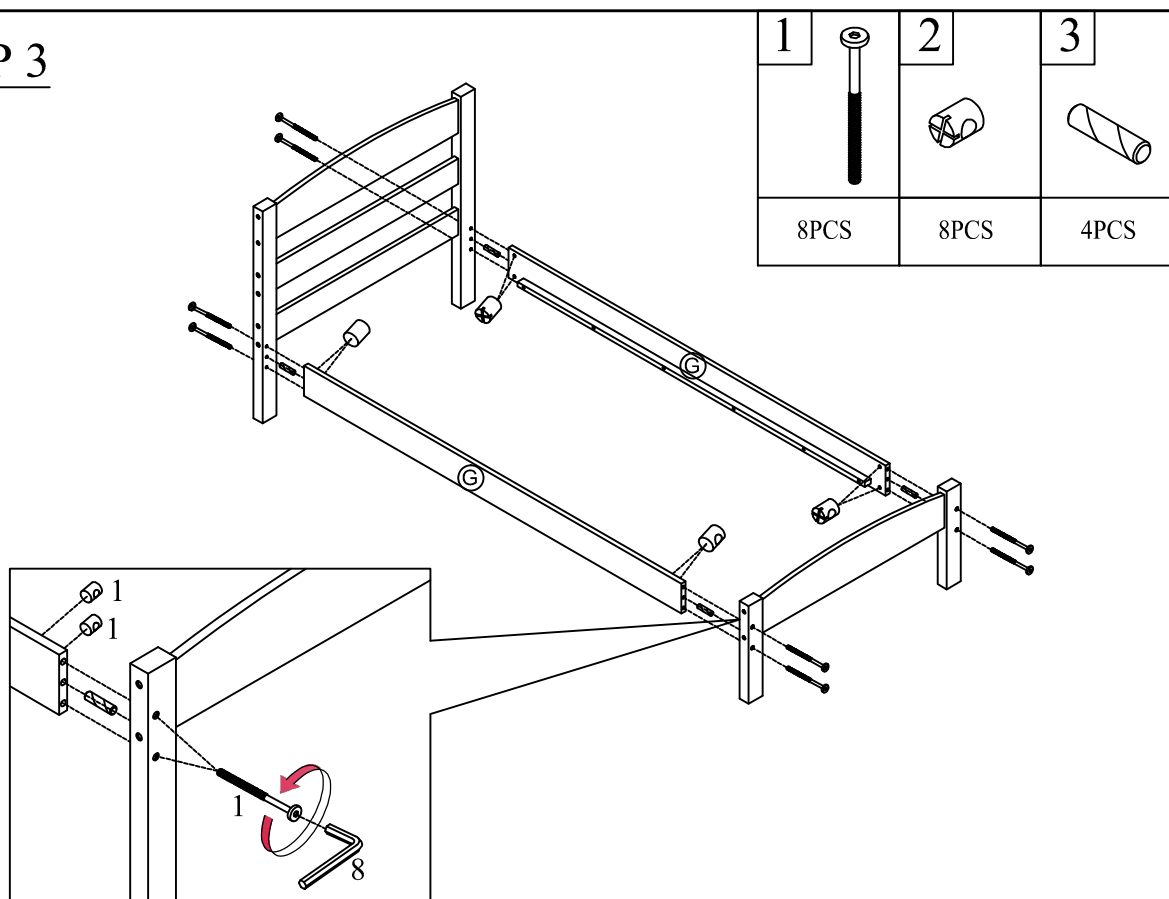
STEP 3



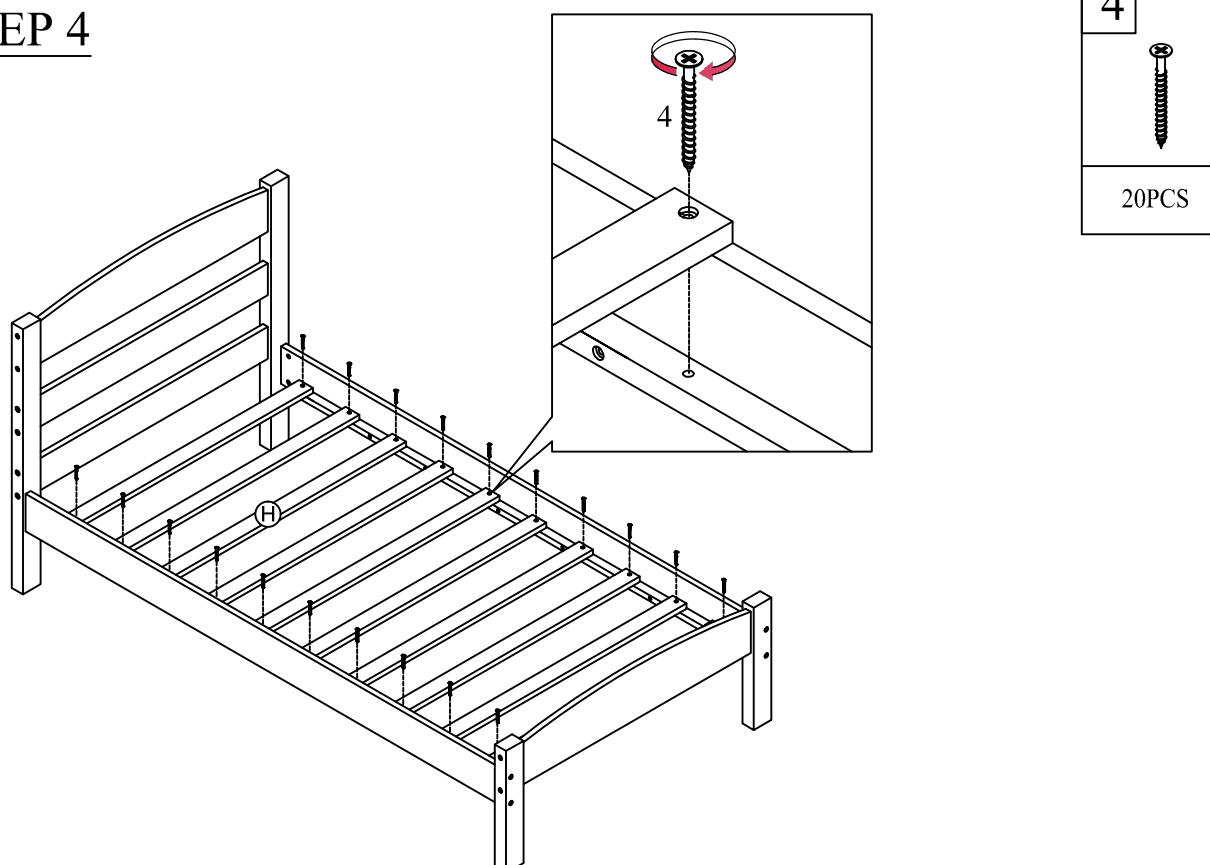STEP 4



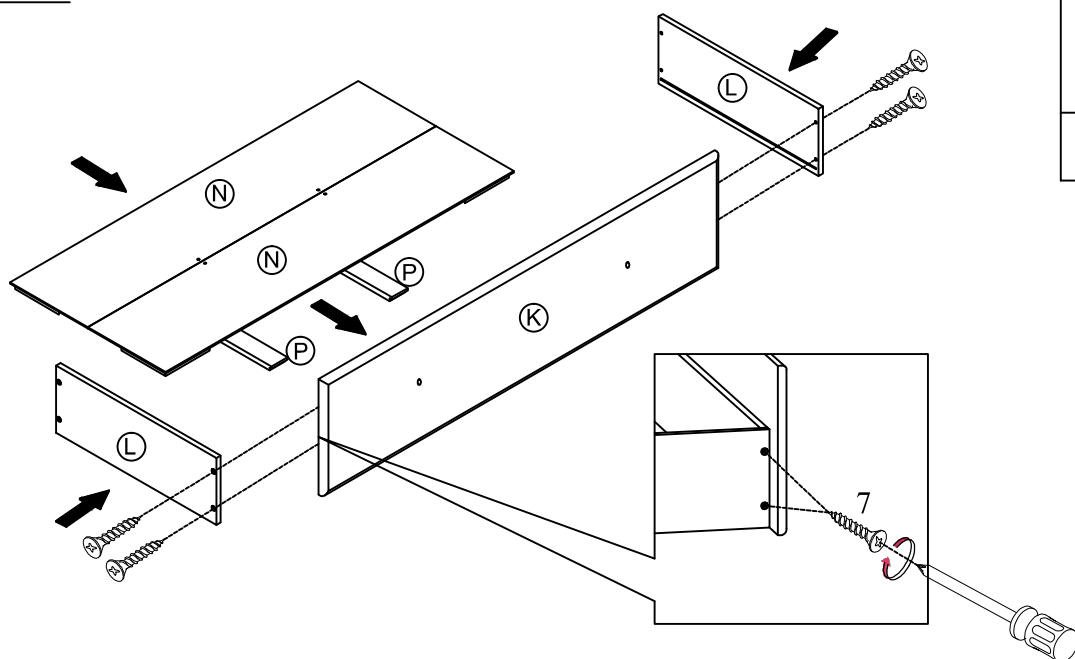STEP 5




7



4PCS

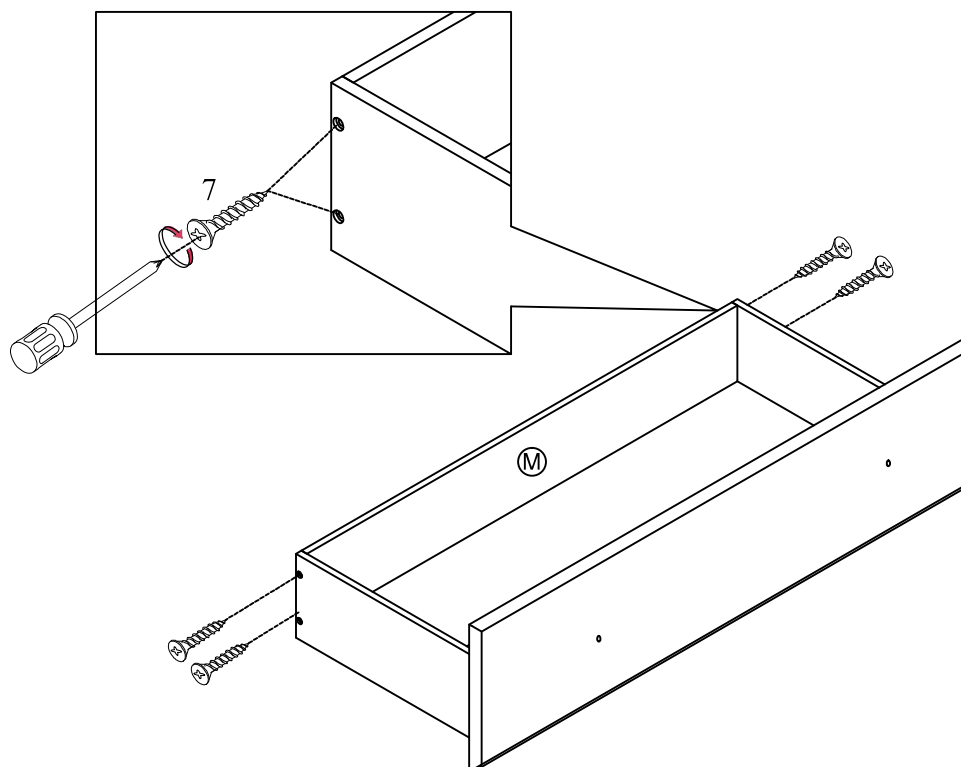STEP 6




7



4PCS

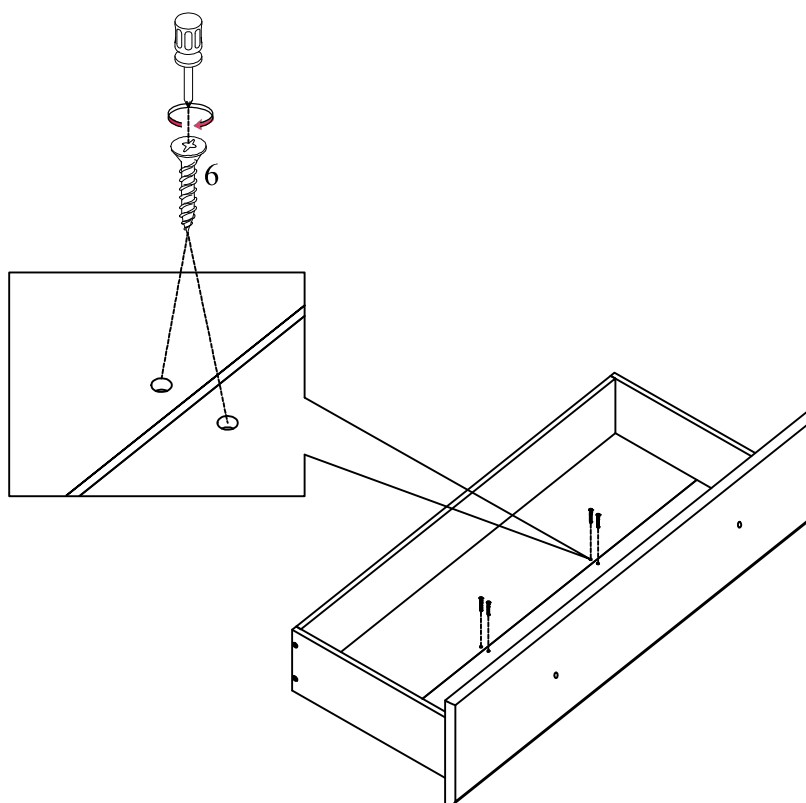STEP 7




6



4PCS

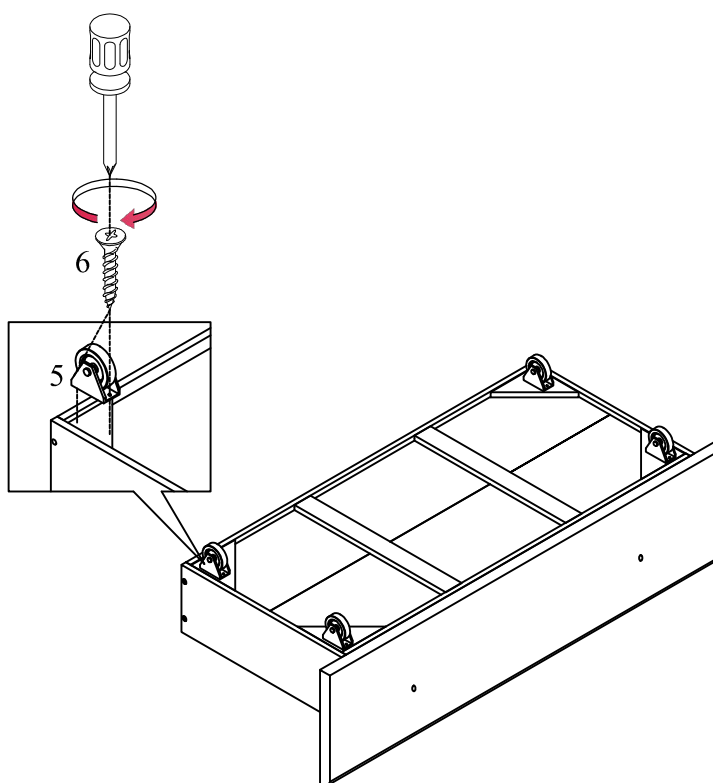STEP 8



5



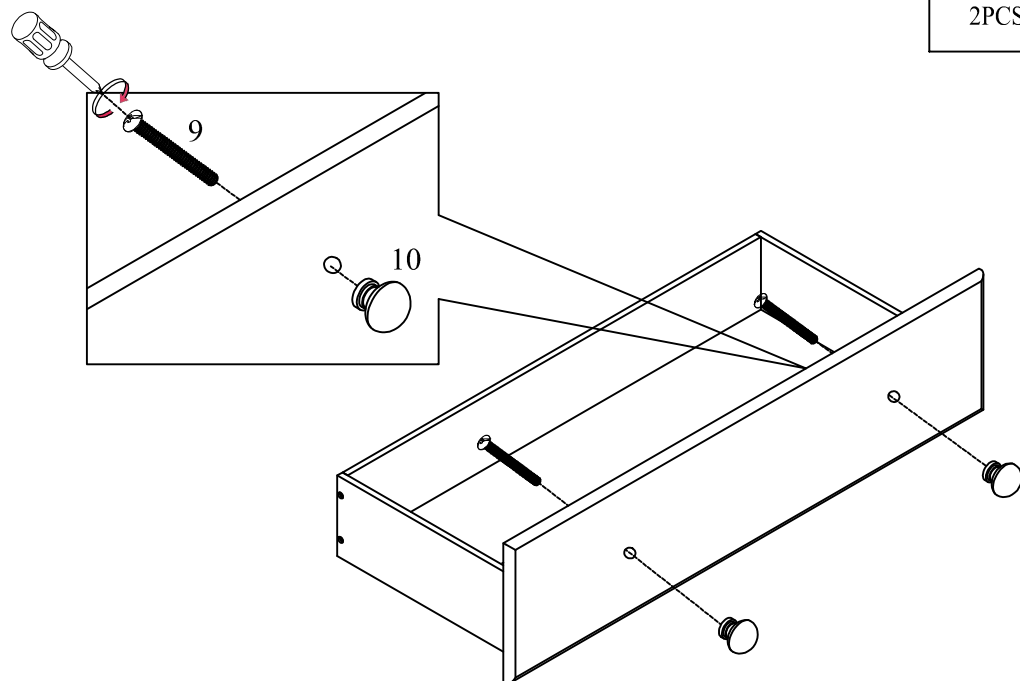
4PCS

6



8PCS

STEP 9



STEP 10

