

Installation Instructions

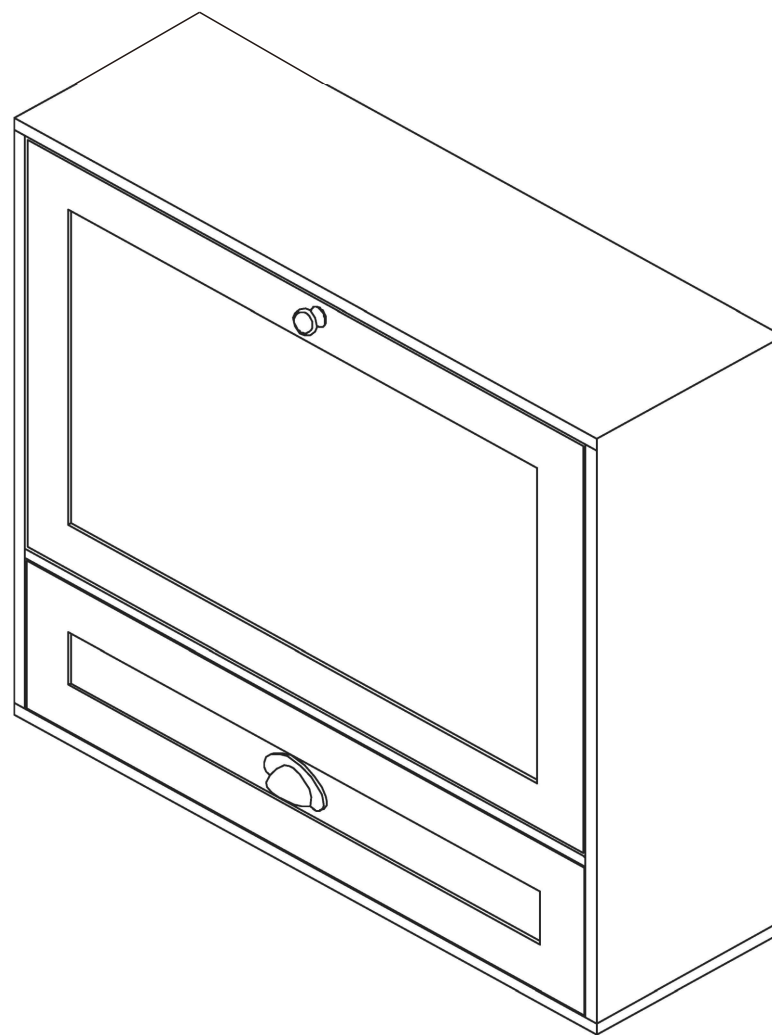

**Thank you for purchasing Utopia Alley Products. Please contact us if you have difficulty with assembly or need replacement parts. Utopia Alley customer service is here to assist you.
Email: CustomerService@utopiaalley.com
Please attach your name or Order ID so that we can assist you better.**



This document is proprietary and confidential. No part of this document may be disclosed in any manner to a third party without the prior written consent of Utopia Alley.

Item No.: FT73WW-IS




WARNING

Serious or fatal injury may occur from assembly or usage when not following our instructions.

1. During the assembly process, keep all parts away from babies or children.
2. Always securely fix this product to the wall. Make sure the wall area to be drilled is free from hidden electrical wires, water and gas pipes.
3. Use of tip-over restraints may only reduce, but not eliminated the risk of tip-over.
4. Unless specially designed to accommodate, do not set heavy objects on top of this product.
5. Place the heaviest items on the lowest shelf.
6. Never allow children to climb or bang on drawers, doors or shelves.
7. Manufacturer and seller expressly disclaim any and all liability for personal injury, property damage or loss, whether direct, indirect, or incidental, resulting from the incorrect attachment, improper use, inadequate maintenance, or neglect of this product.

Assembly Instructions

We have designed our furniture with you, the customer in mind. Our clear, easy to follow step by step instructions will guide you through the project from start to finish. Feel confident that this will be a fun and rewarding project. The final product will be a quality piece of furniture that will go together smoothly and give years of enjoyment.

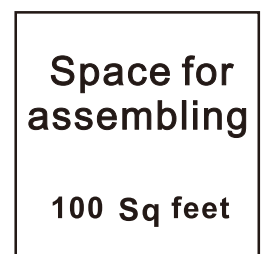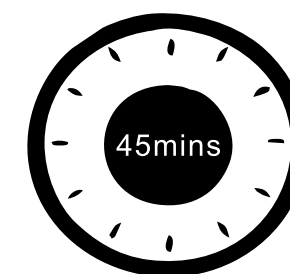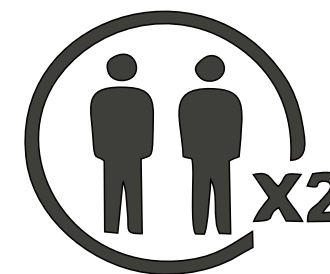


Before assembly


Tips before you start:

- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

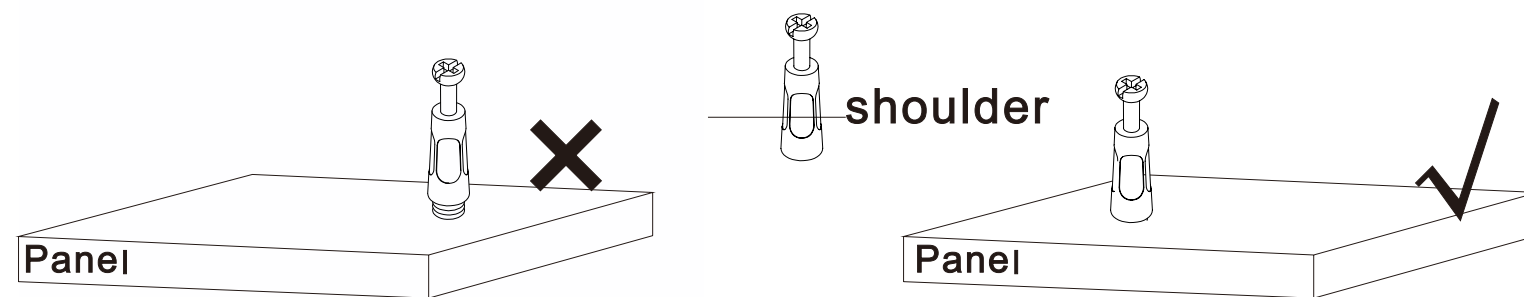


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

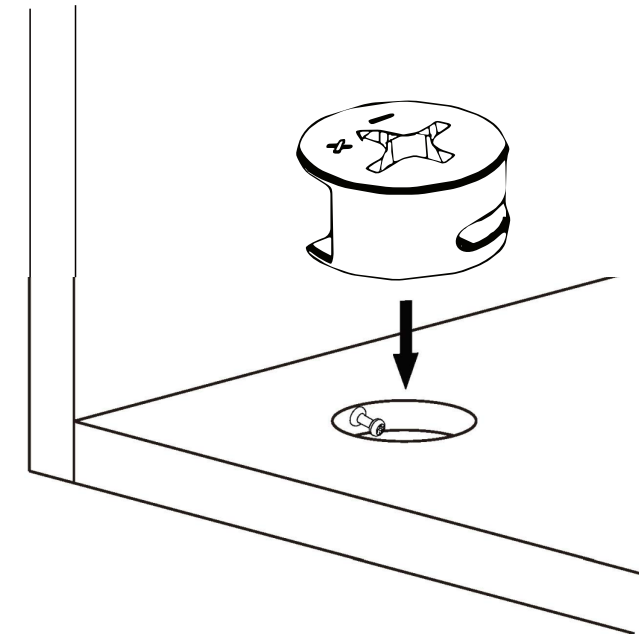


Quickfit head should be in the center of the cam lock. When the two panels are joined. Cam lock should be inserted before quickfit.

CAM LOCK

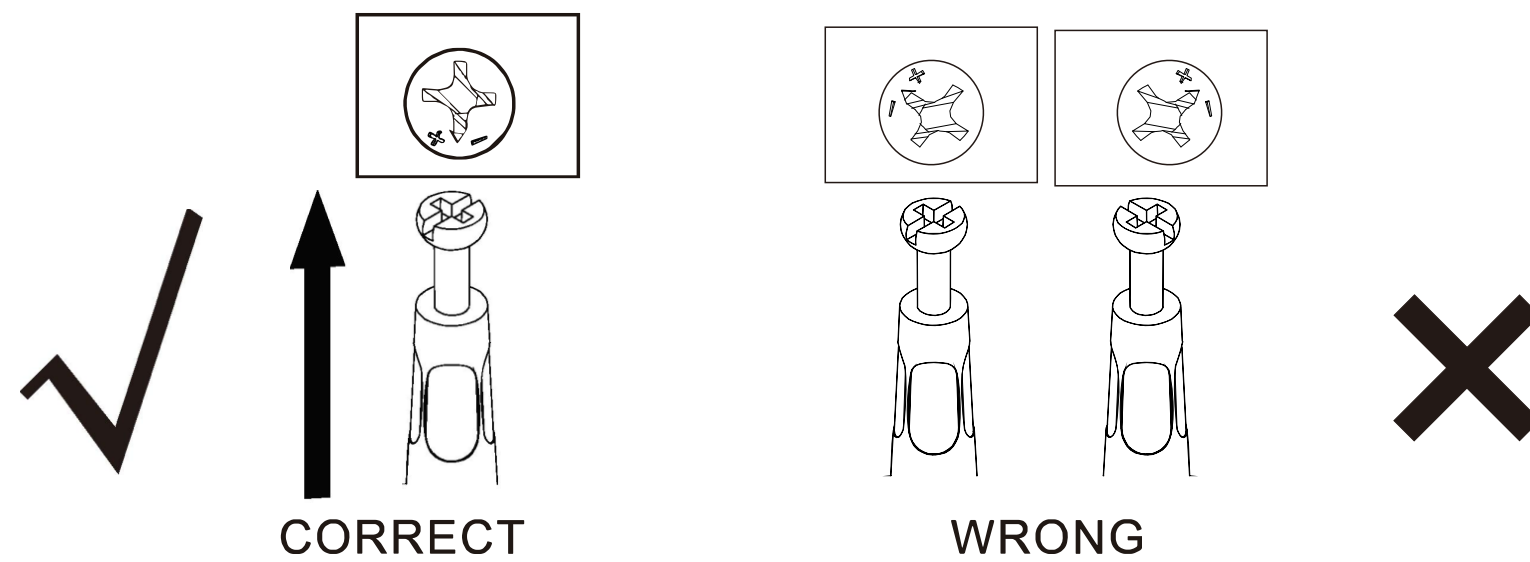


When fitting cam lock, ensure starting positions is correct before you insert cam lock to quickfit.

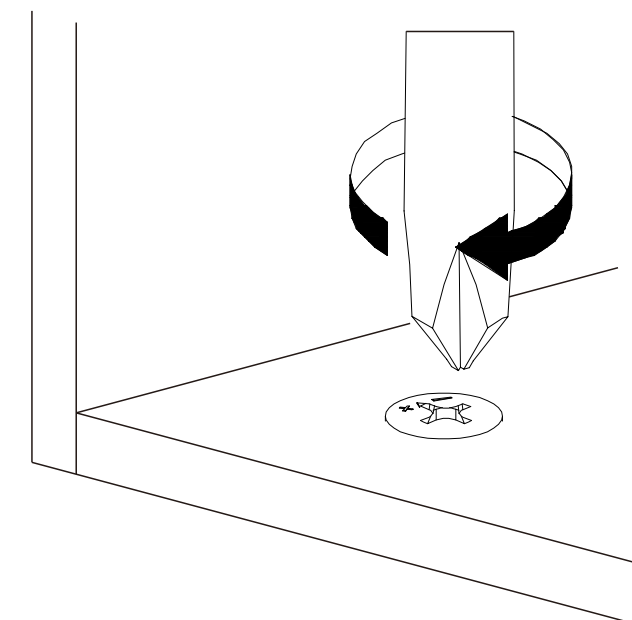


Turn cam lock clockwise to tighten.

When unpacking, please be careful not to discard any parts with the packaging.
Before continuing, please make sure you have the following parts:


The parts numbers are stucked on the side of each board.

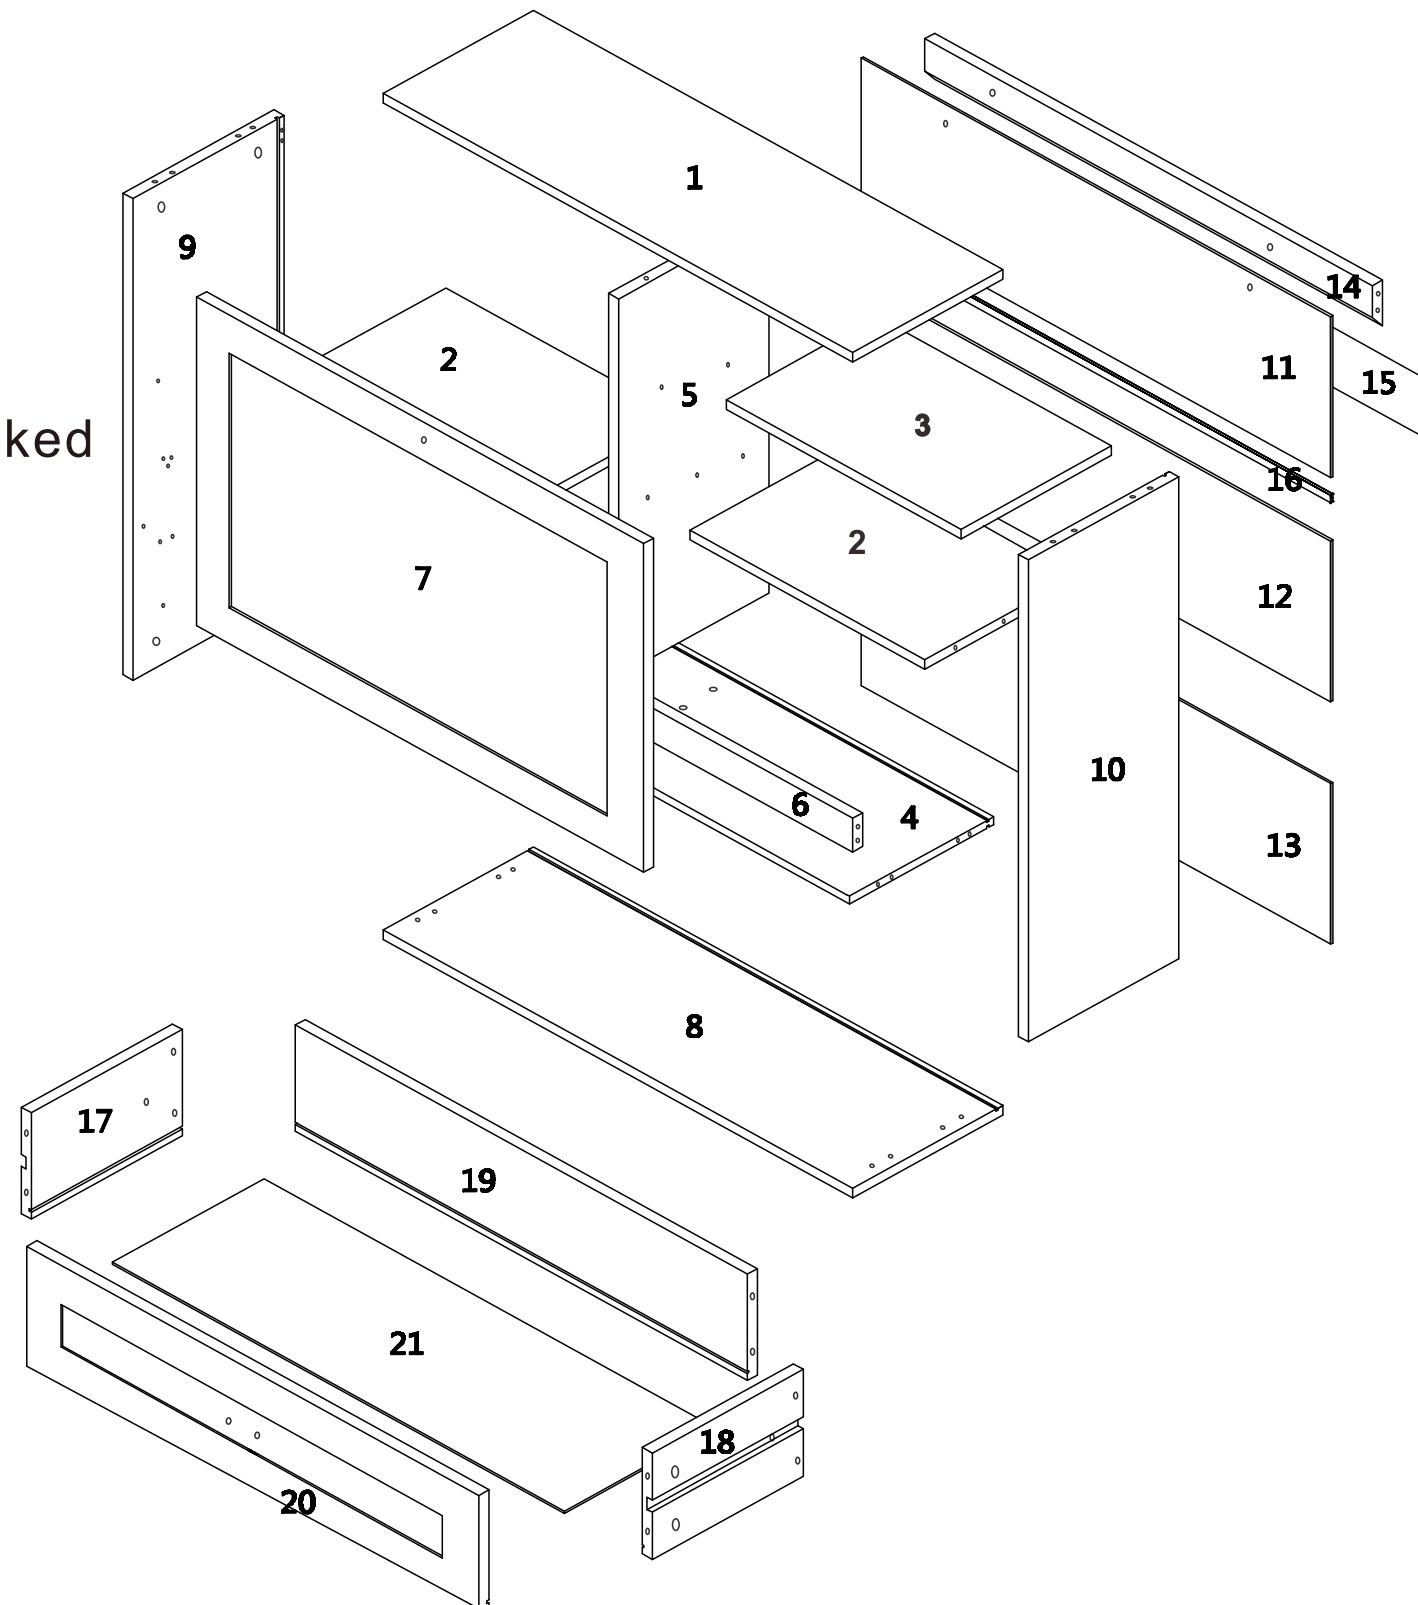





A x24	B x24	C x32	D x2	E x2	F x16 3x12mm	G x2	H x2 4x14mm	I x4 4x30mm
J x8 3x12mm	K x4 4x35mm	L x1	M x1 4x20mm	N x2	O x1	p x4	Q x2	R x4

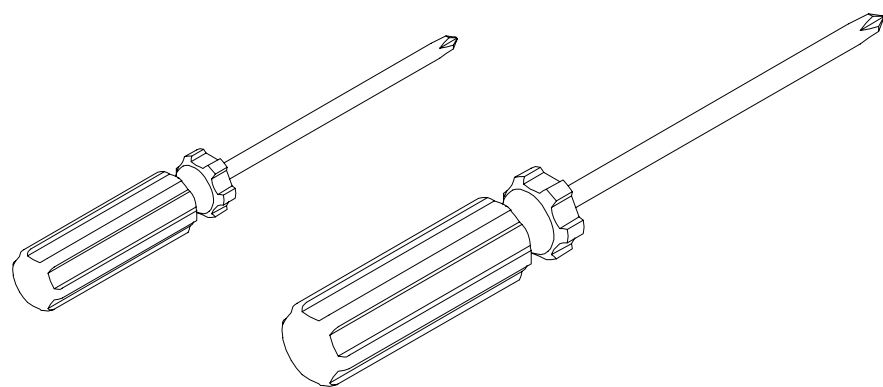


At least 2 Philip screwdrivers
needed:1) Around 4" length
2) 7" length
(NOT INCLUDED)

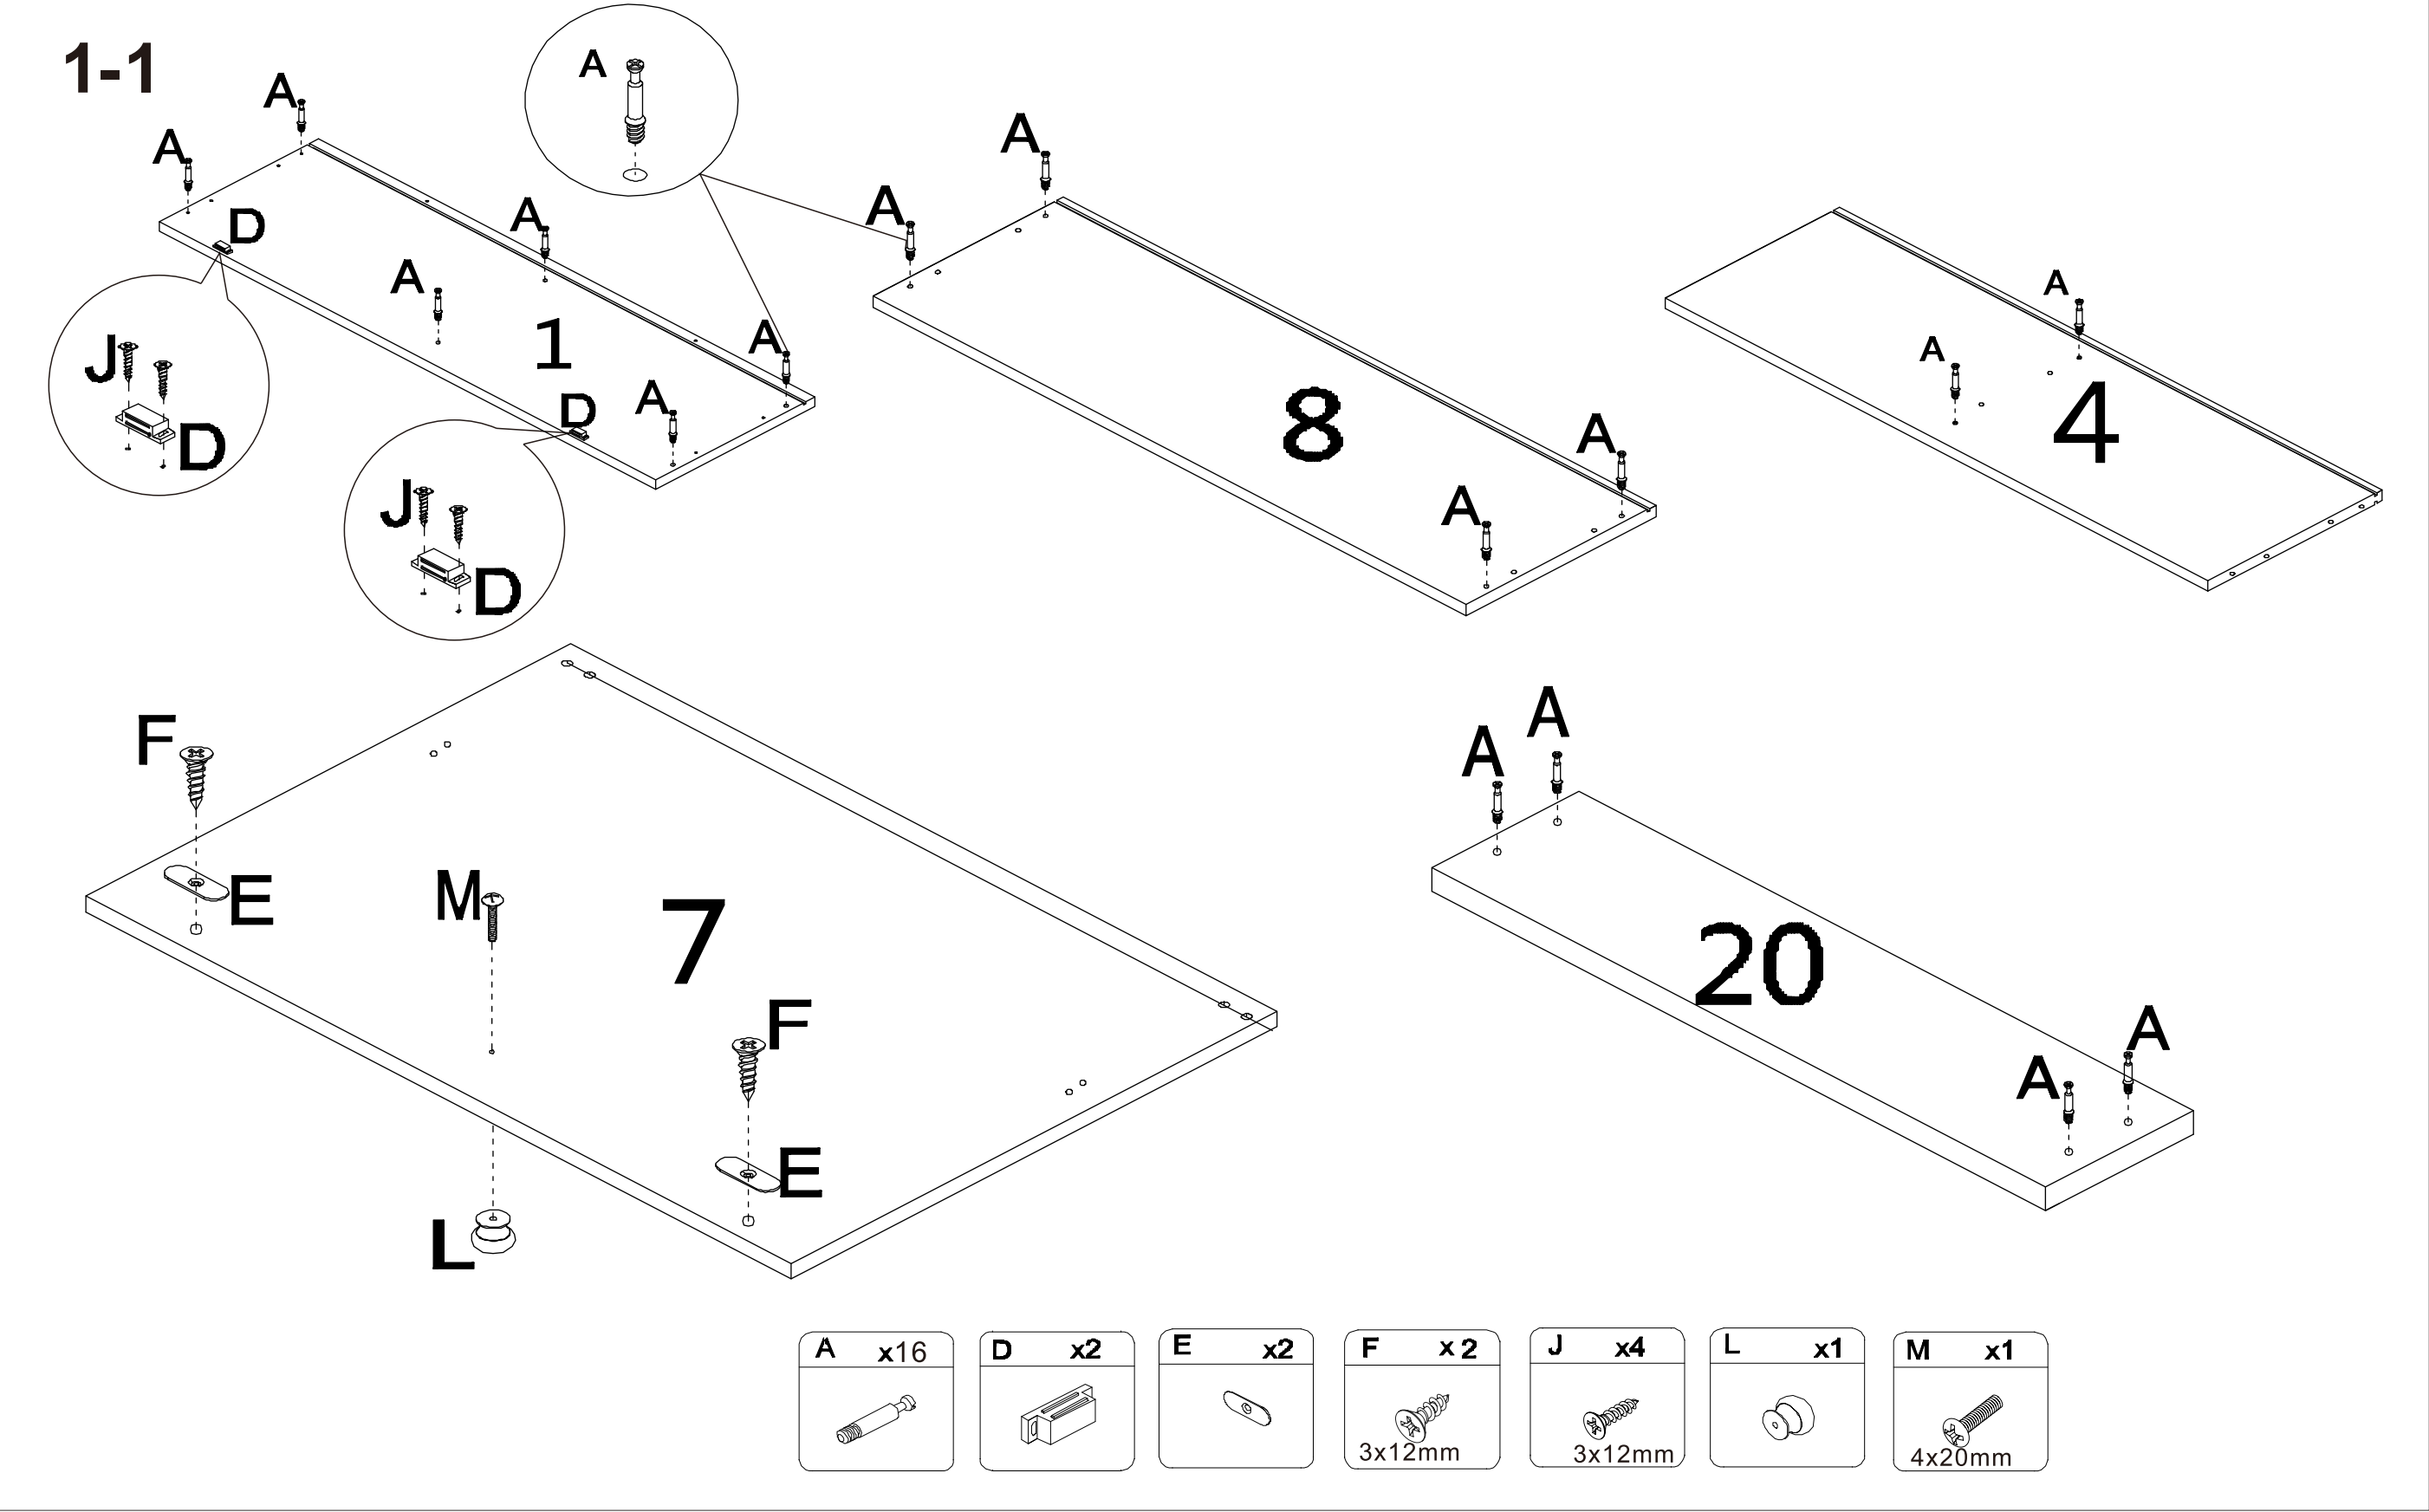


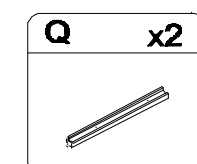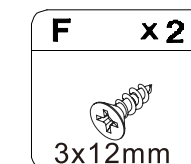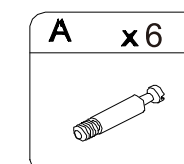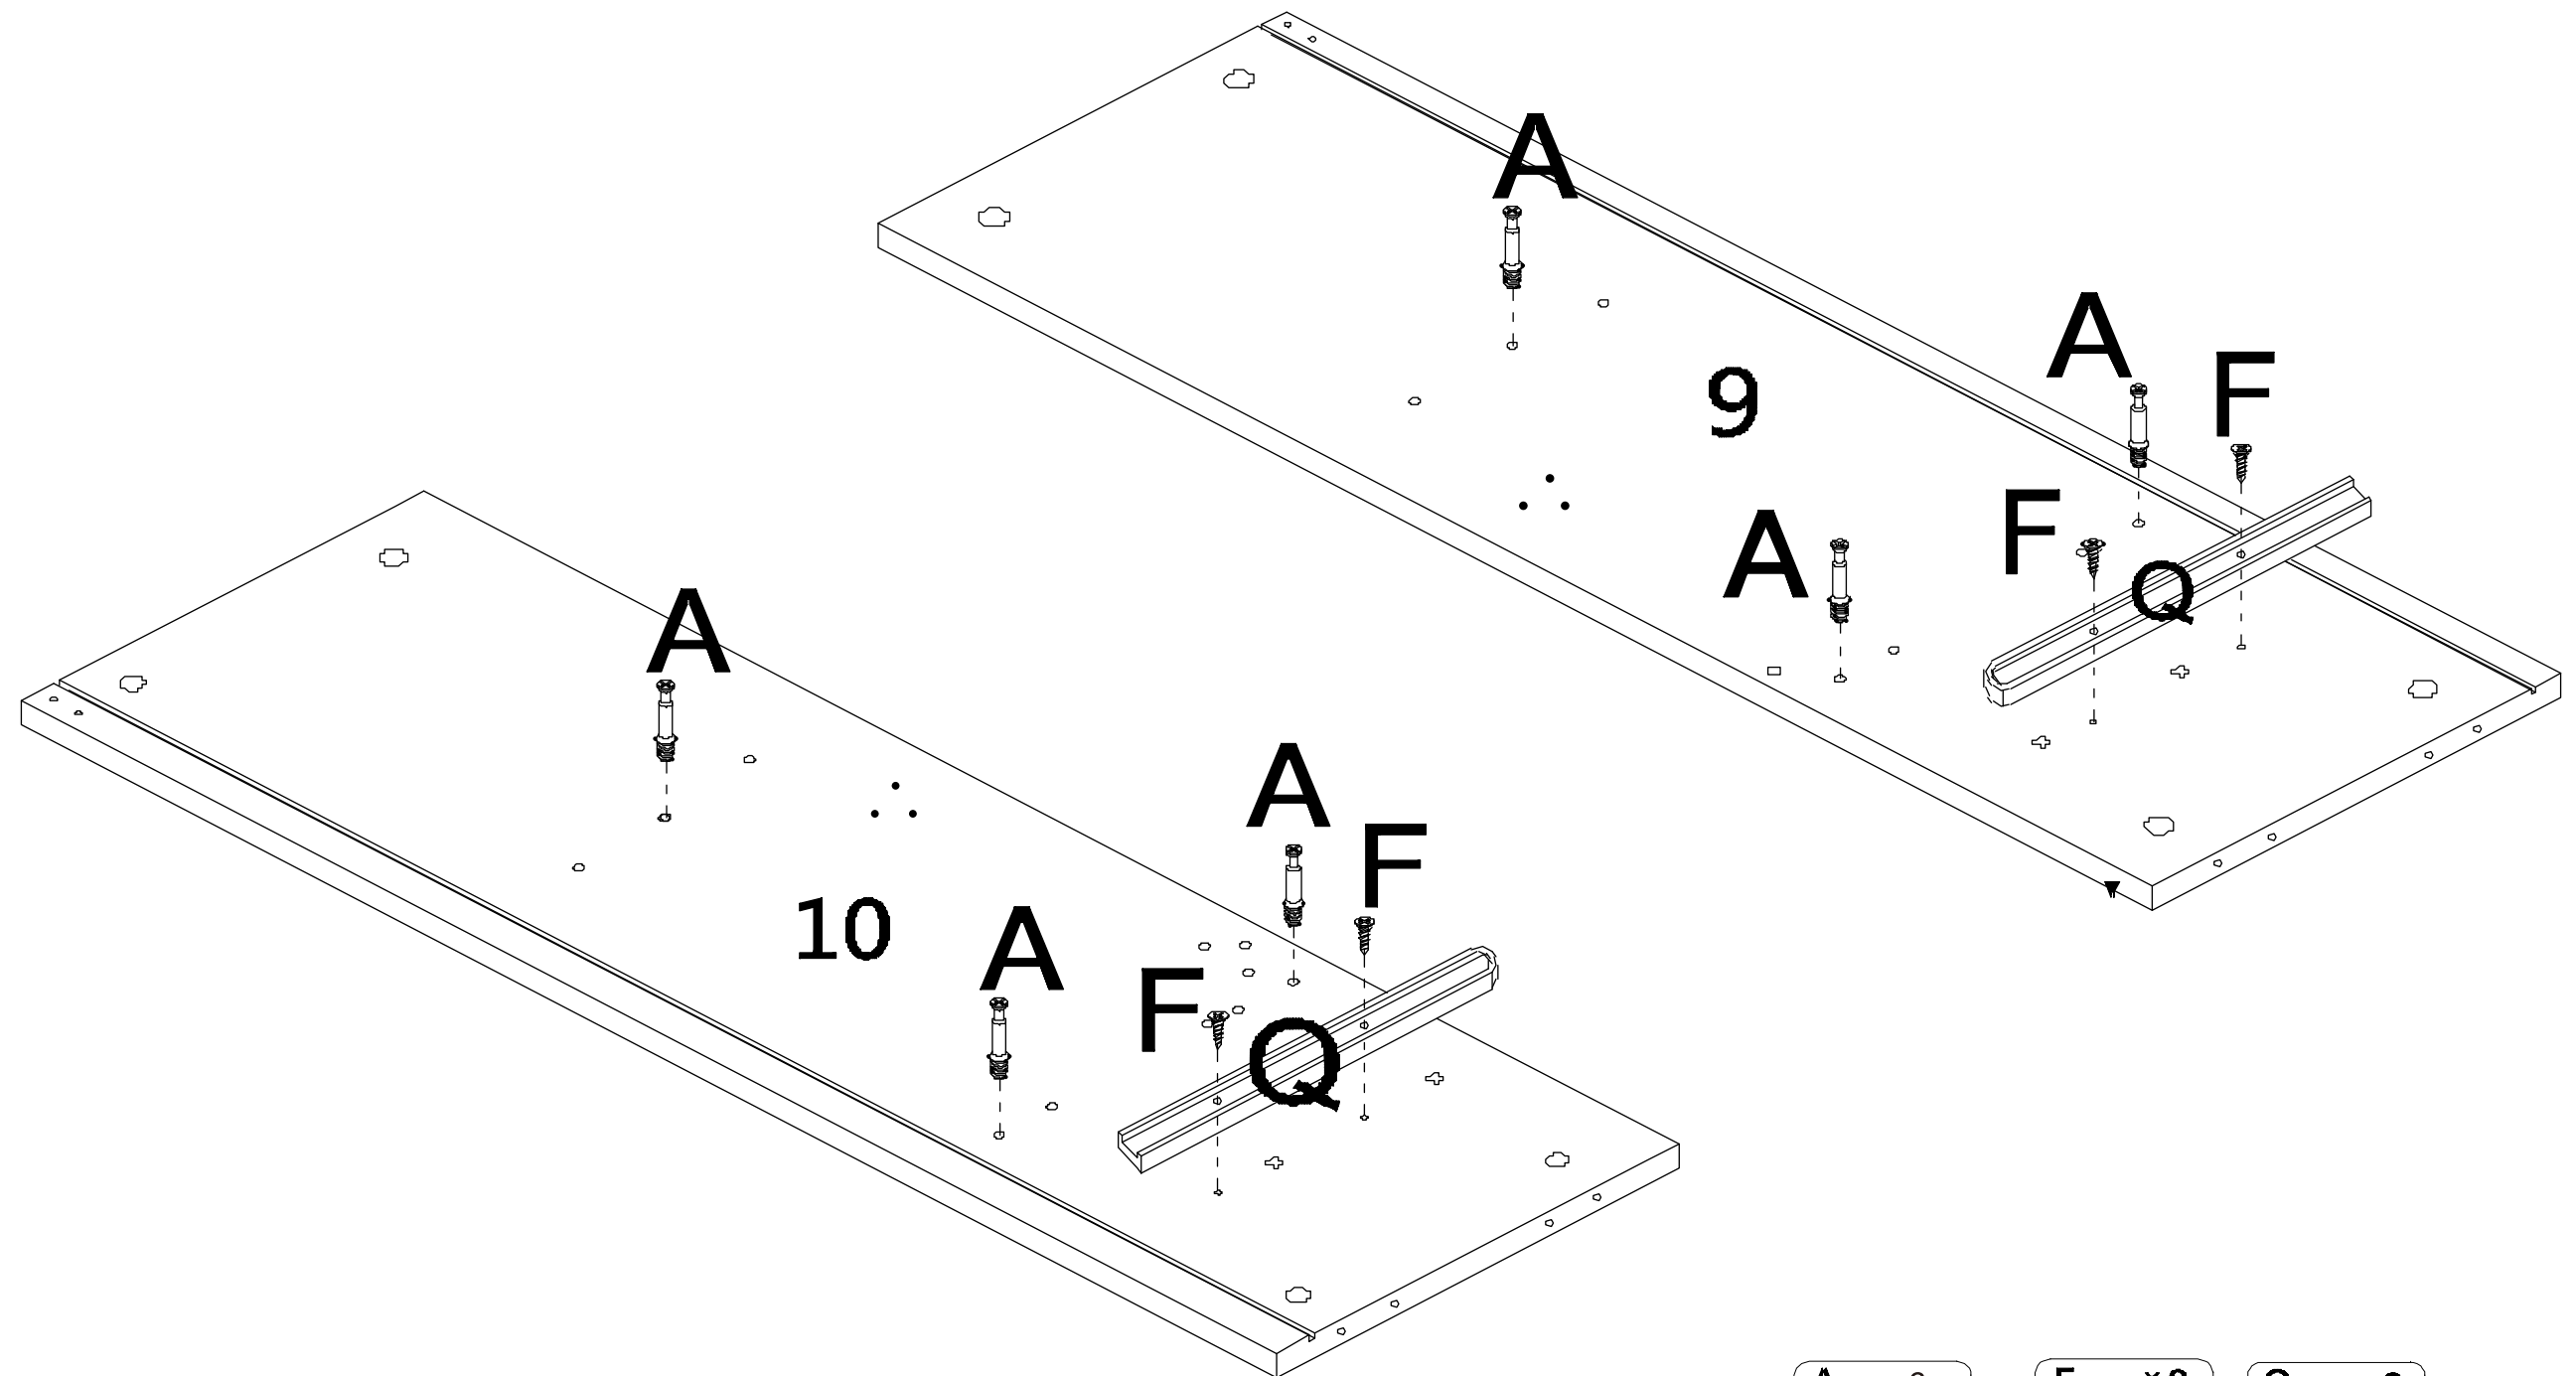

1-2




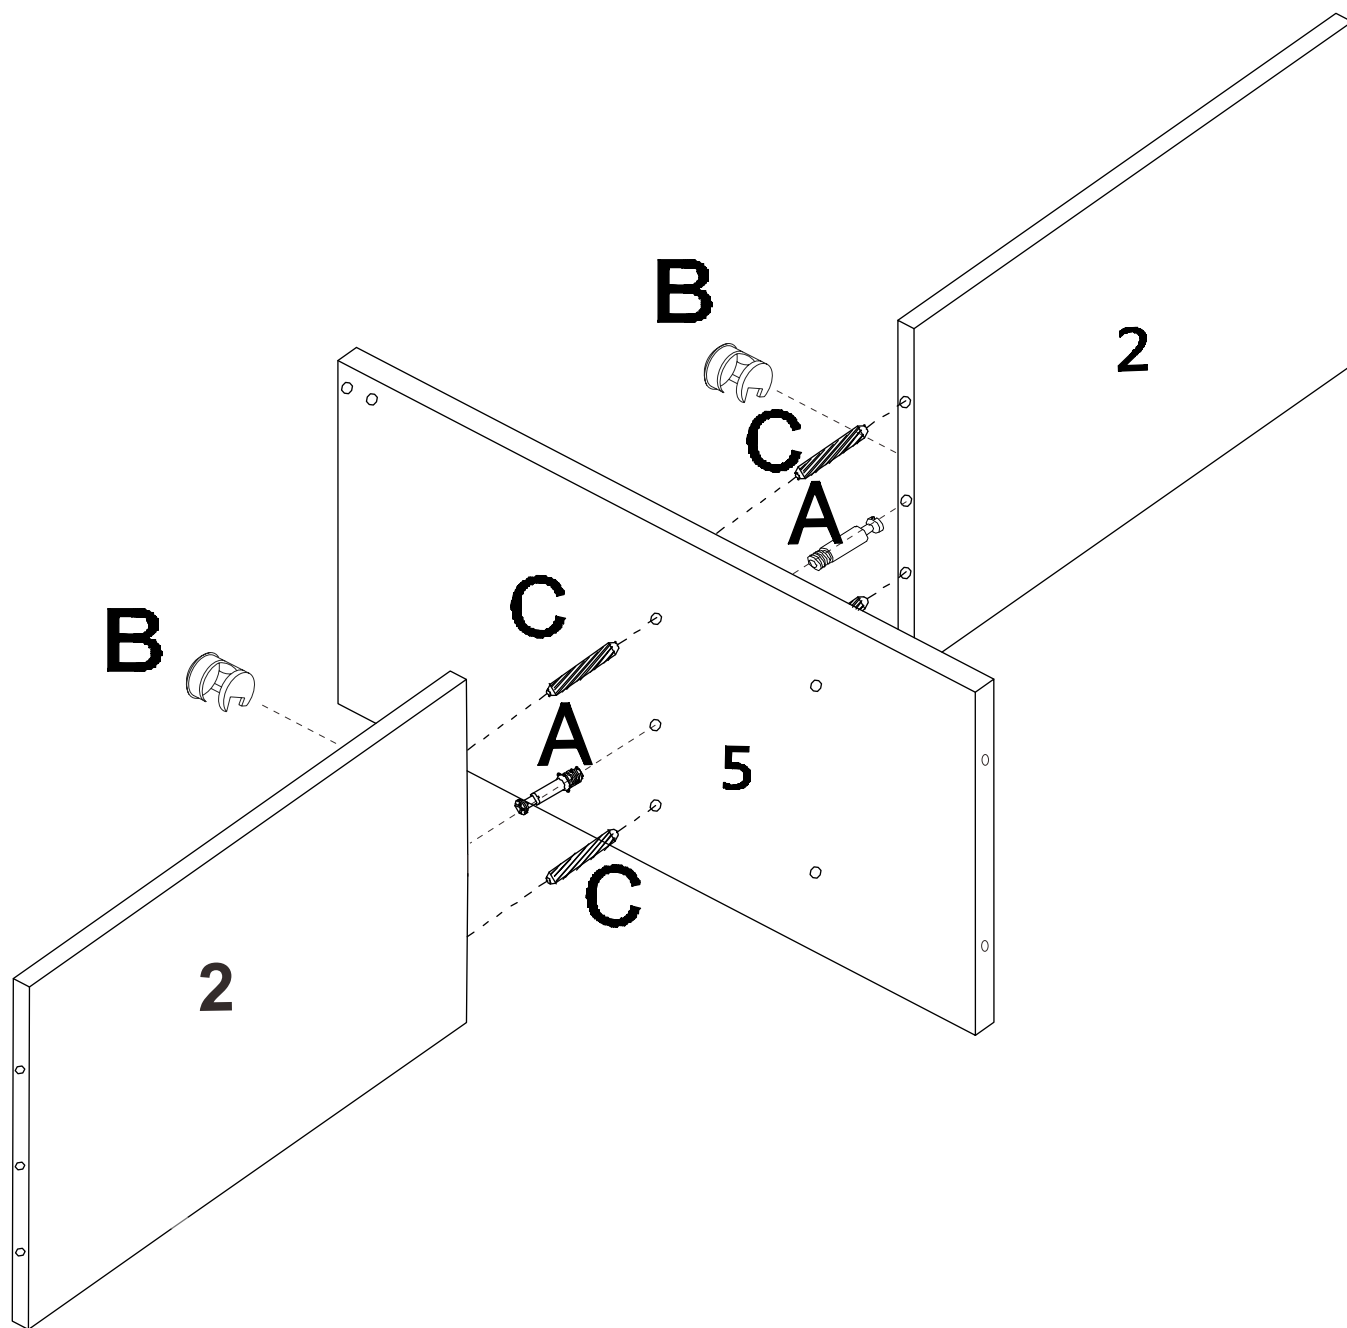

2






A	x 2	B	x 2	C	x 4
					
				6X30	

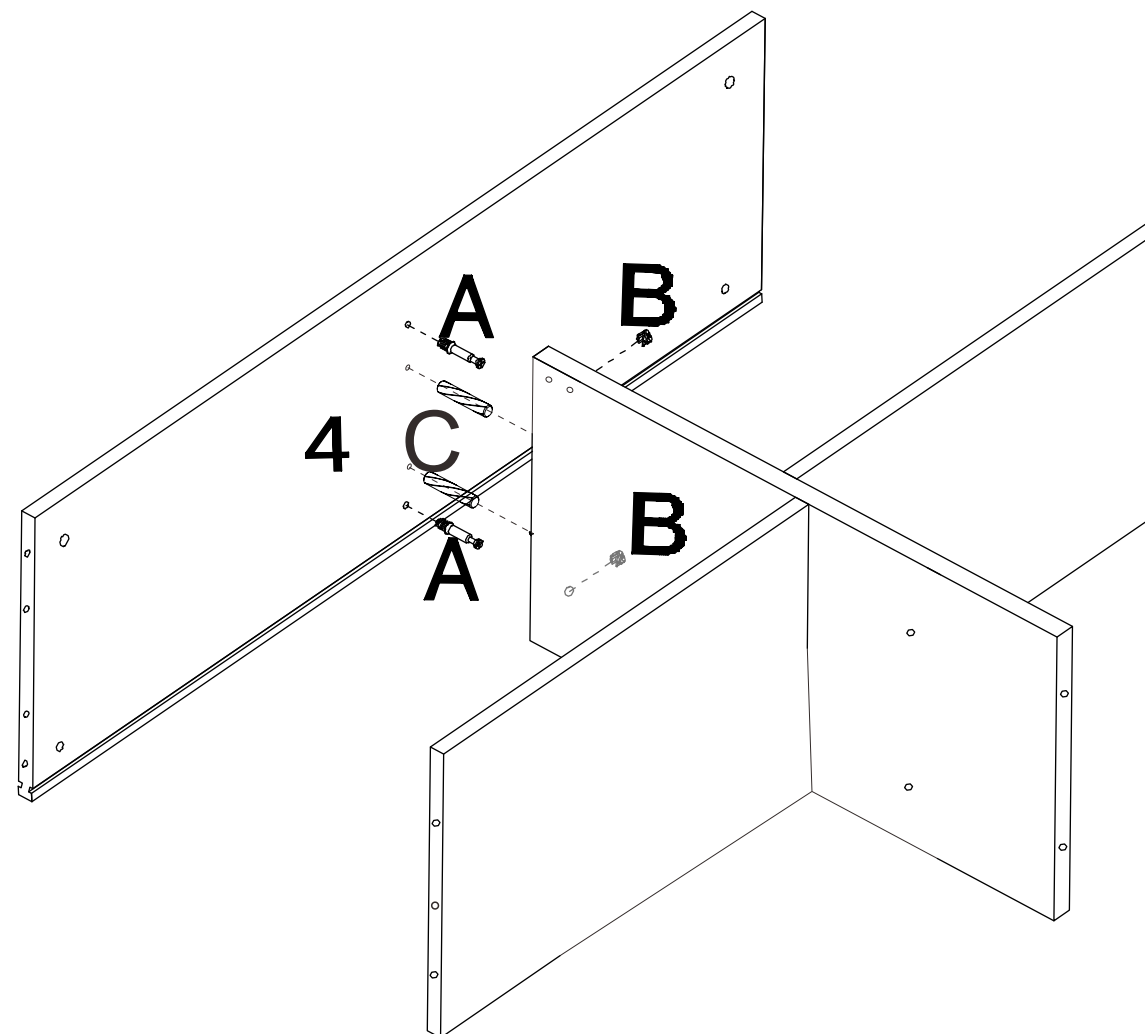3





B	x 2	C	x 2
			
		6X30	




4

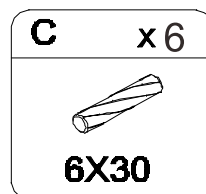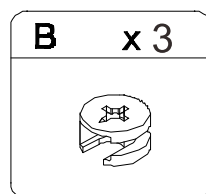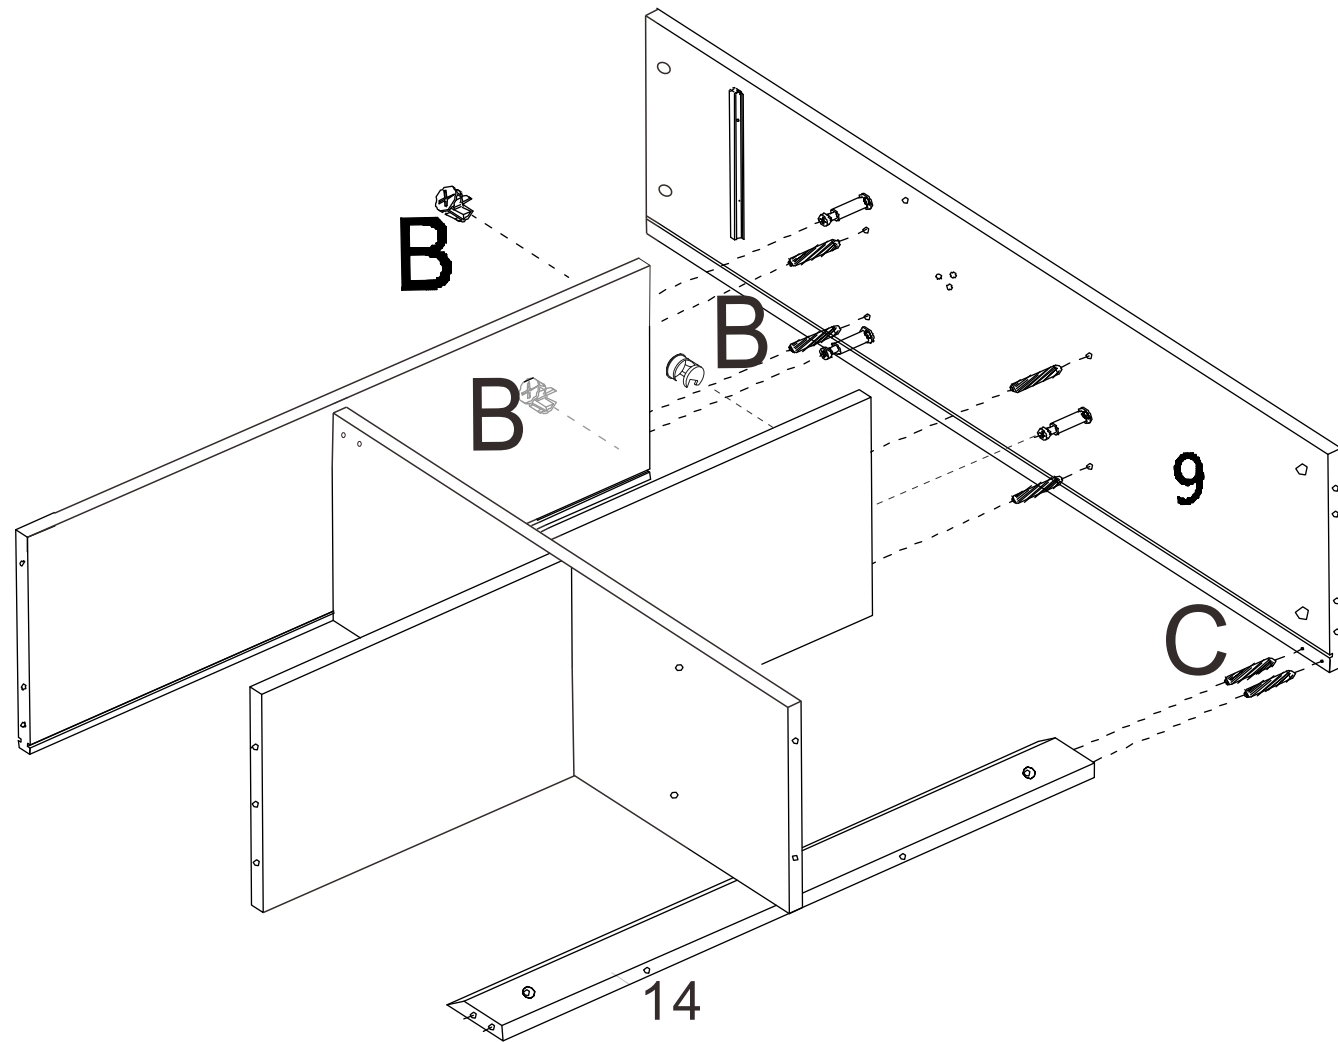


5

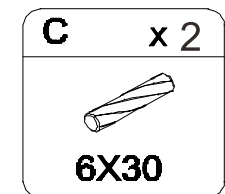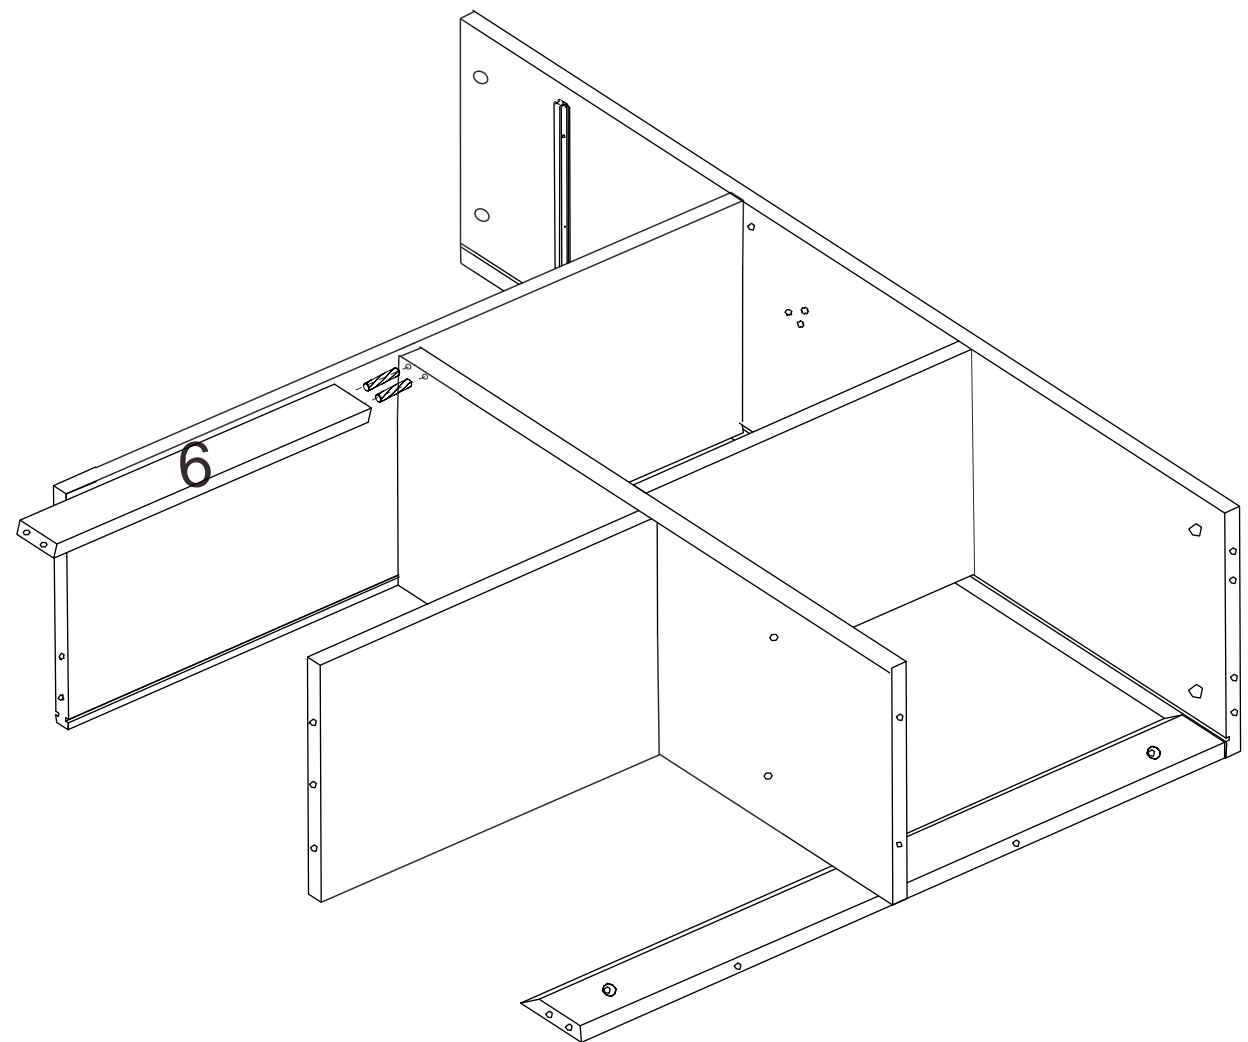




6

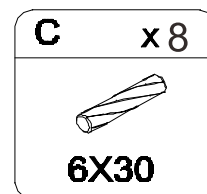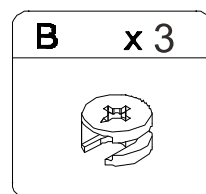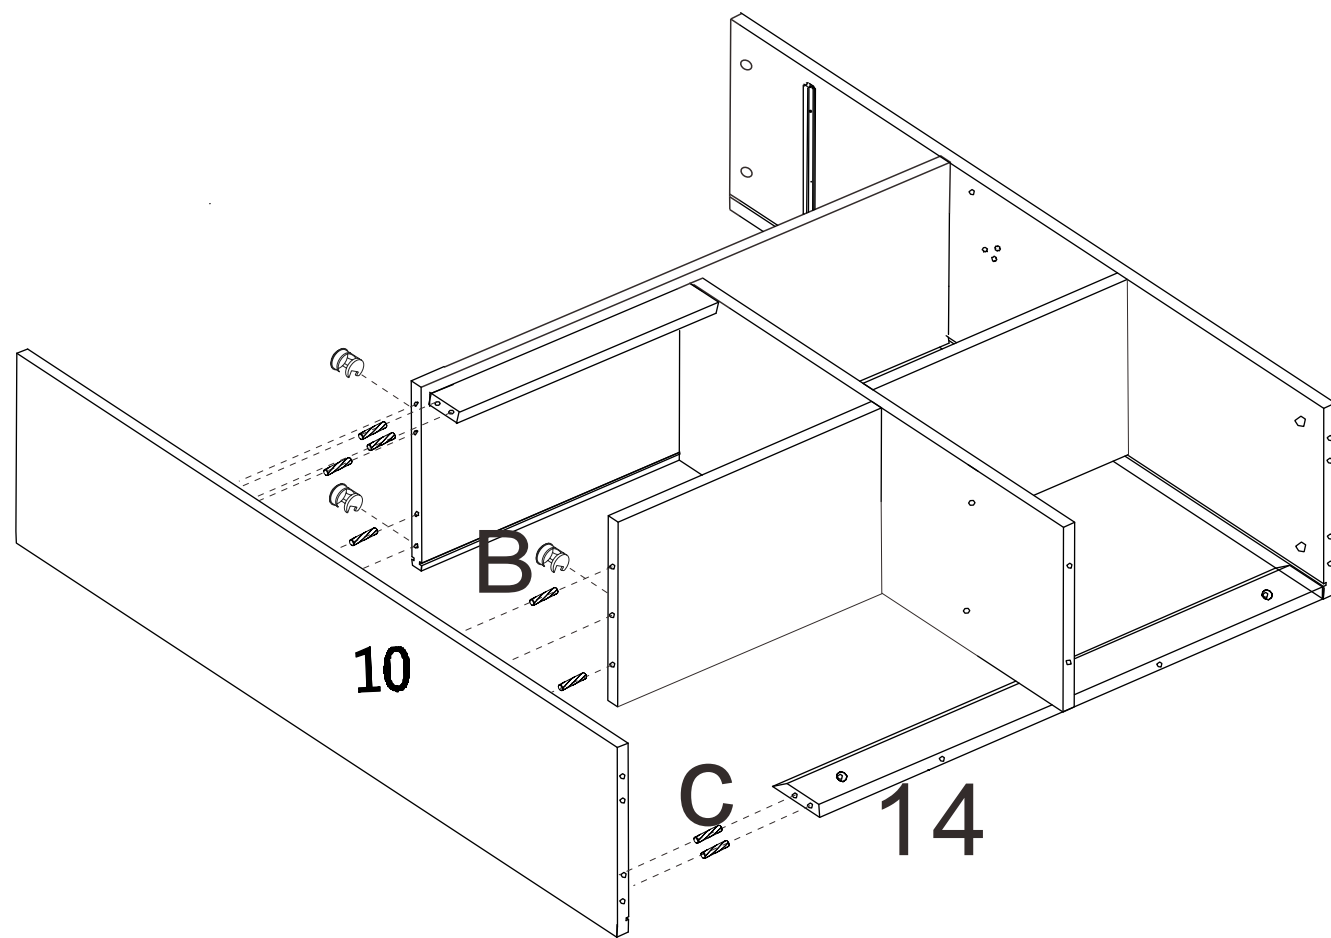


7

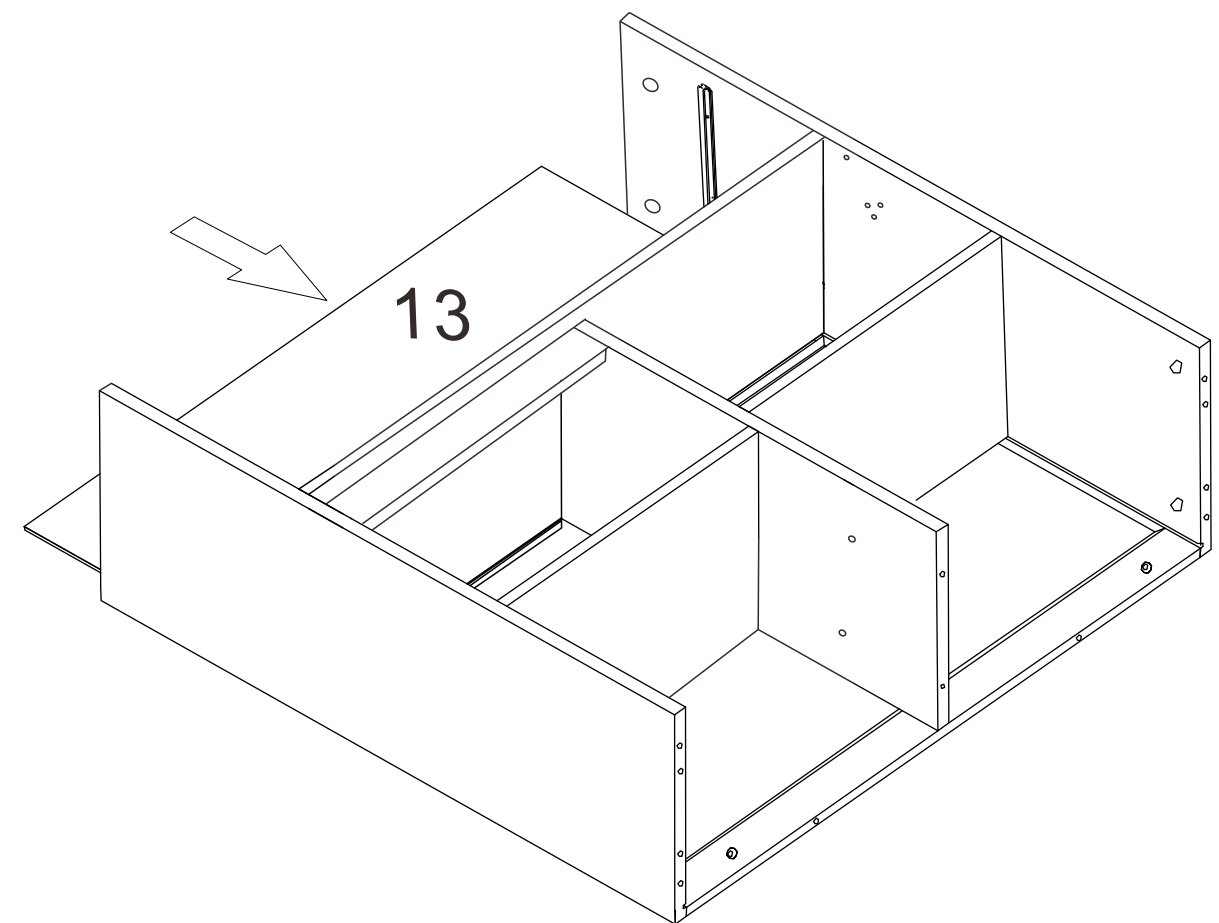




8

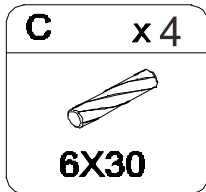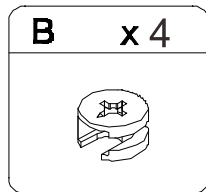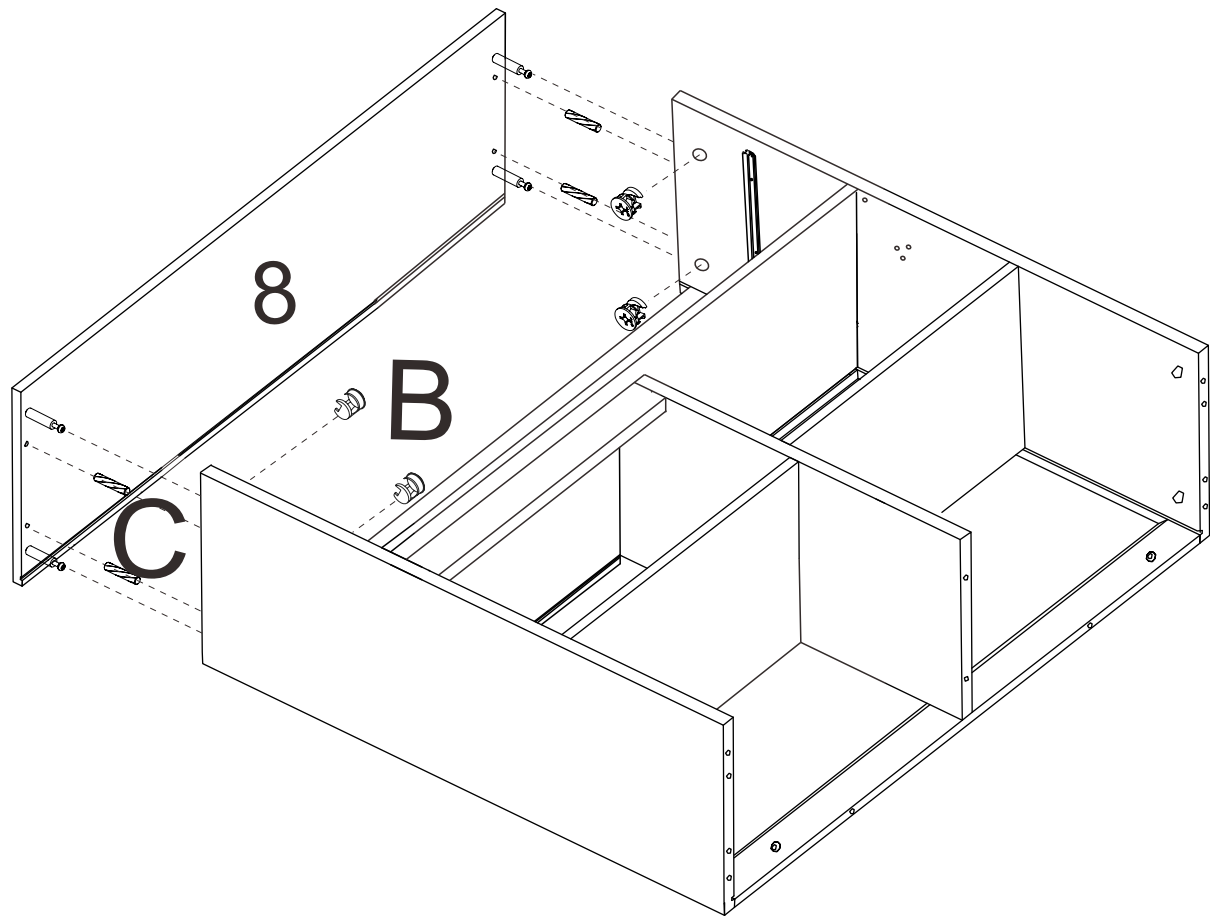



9


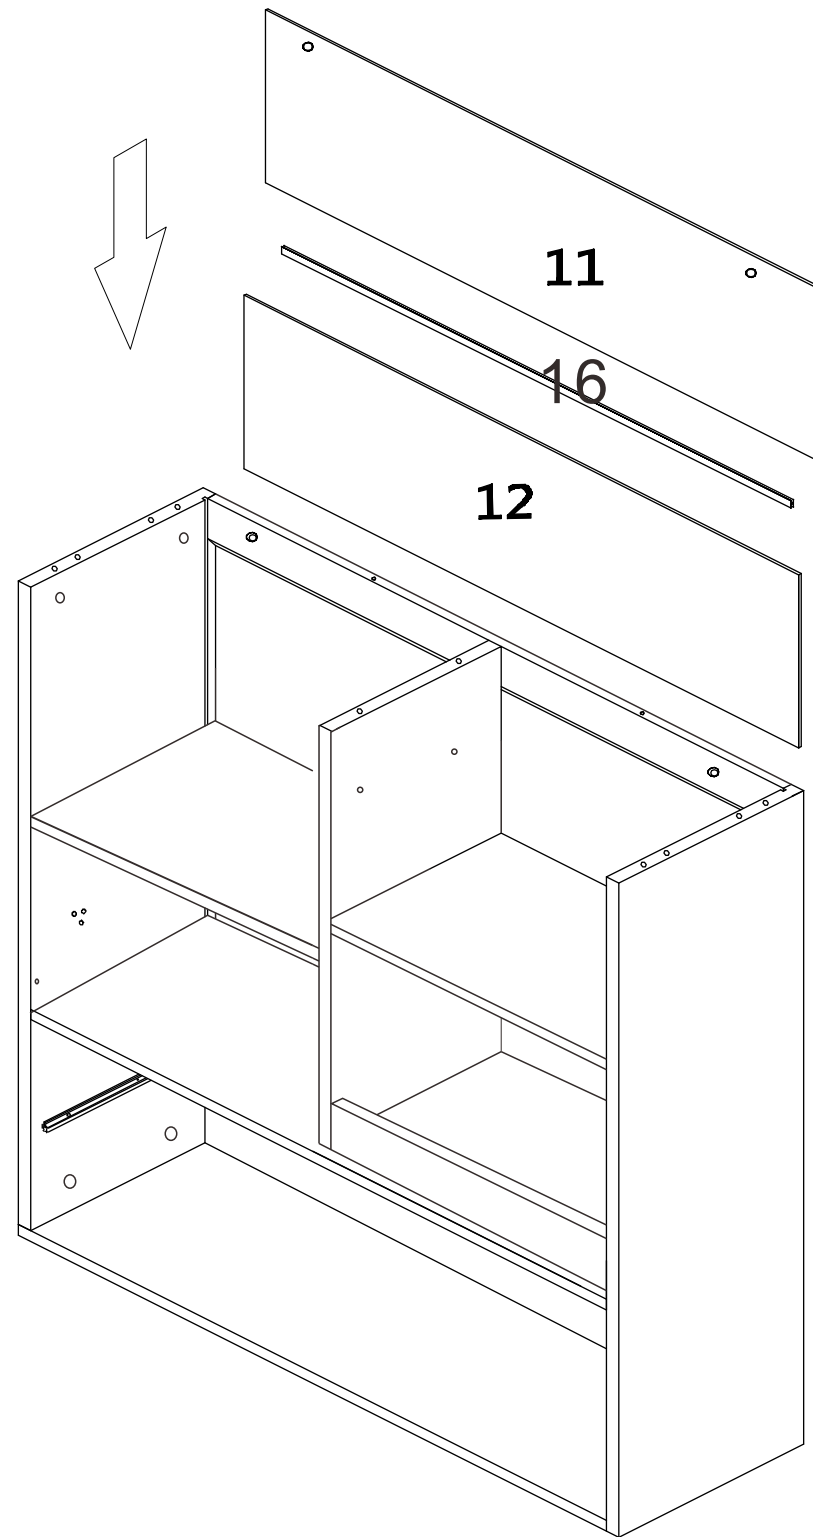


10

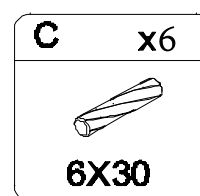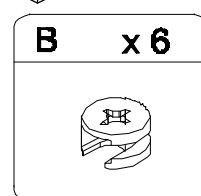
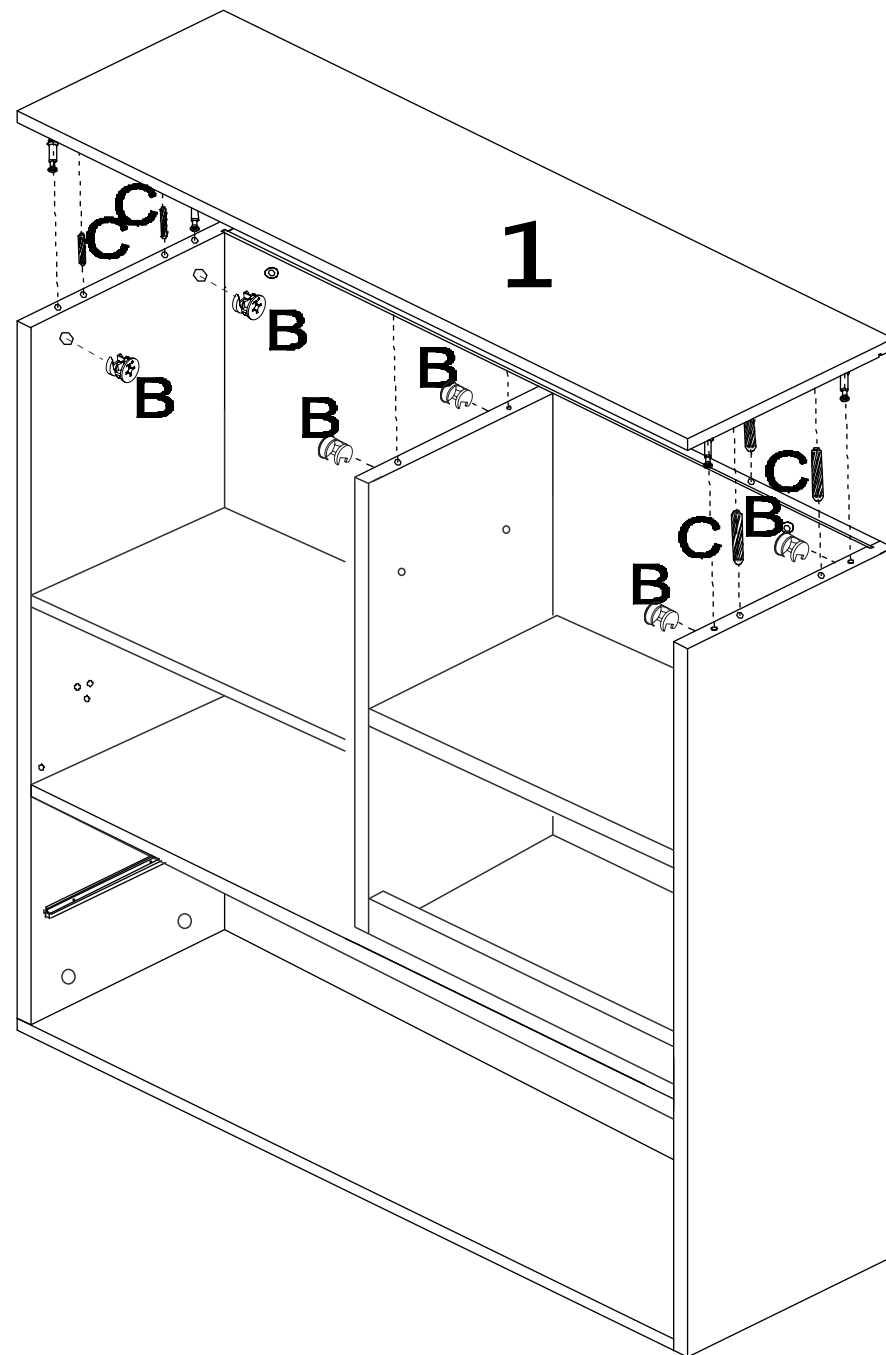


11

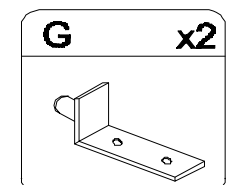
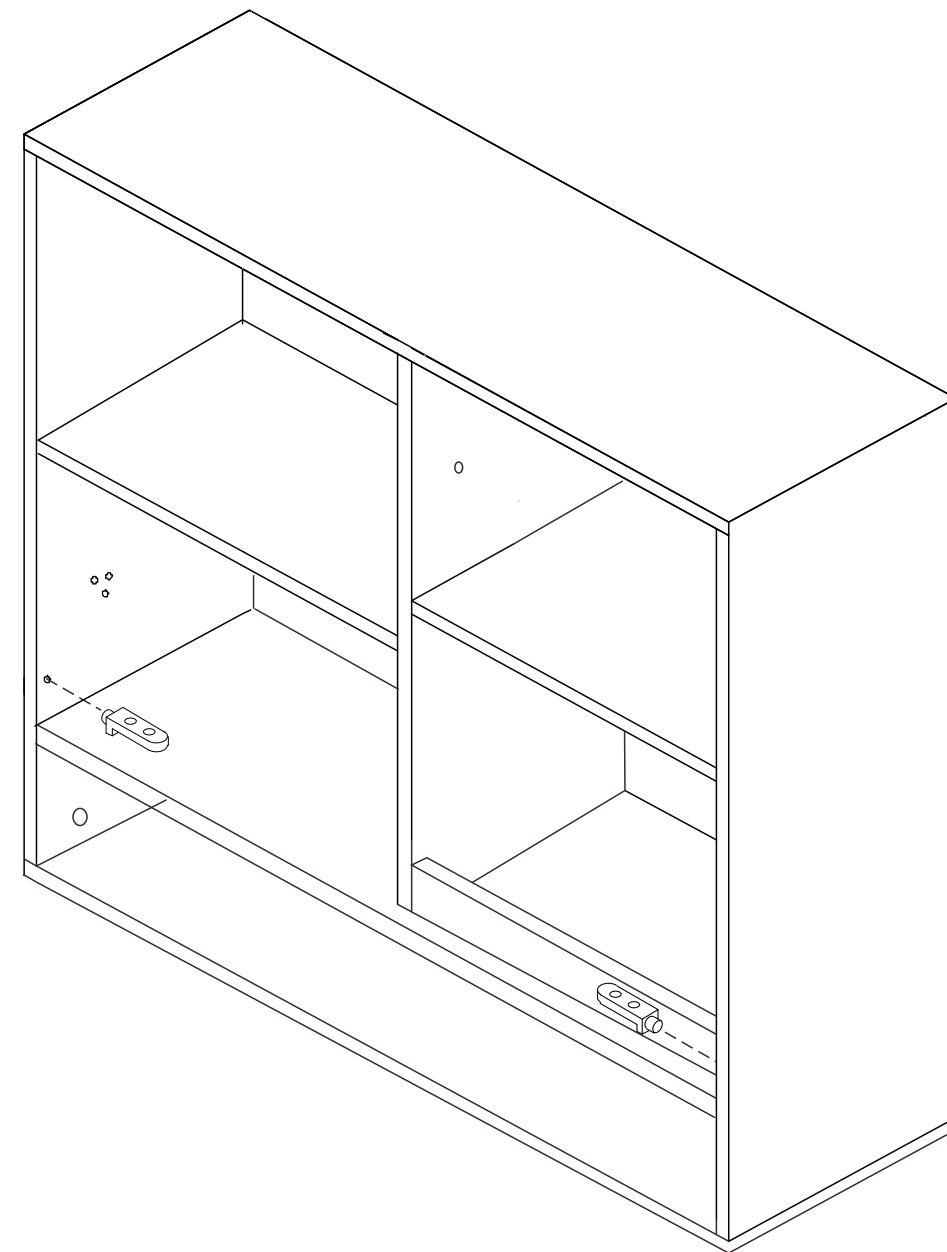


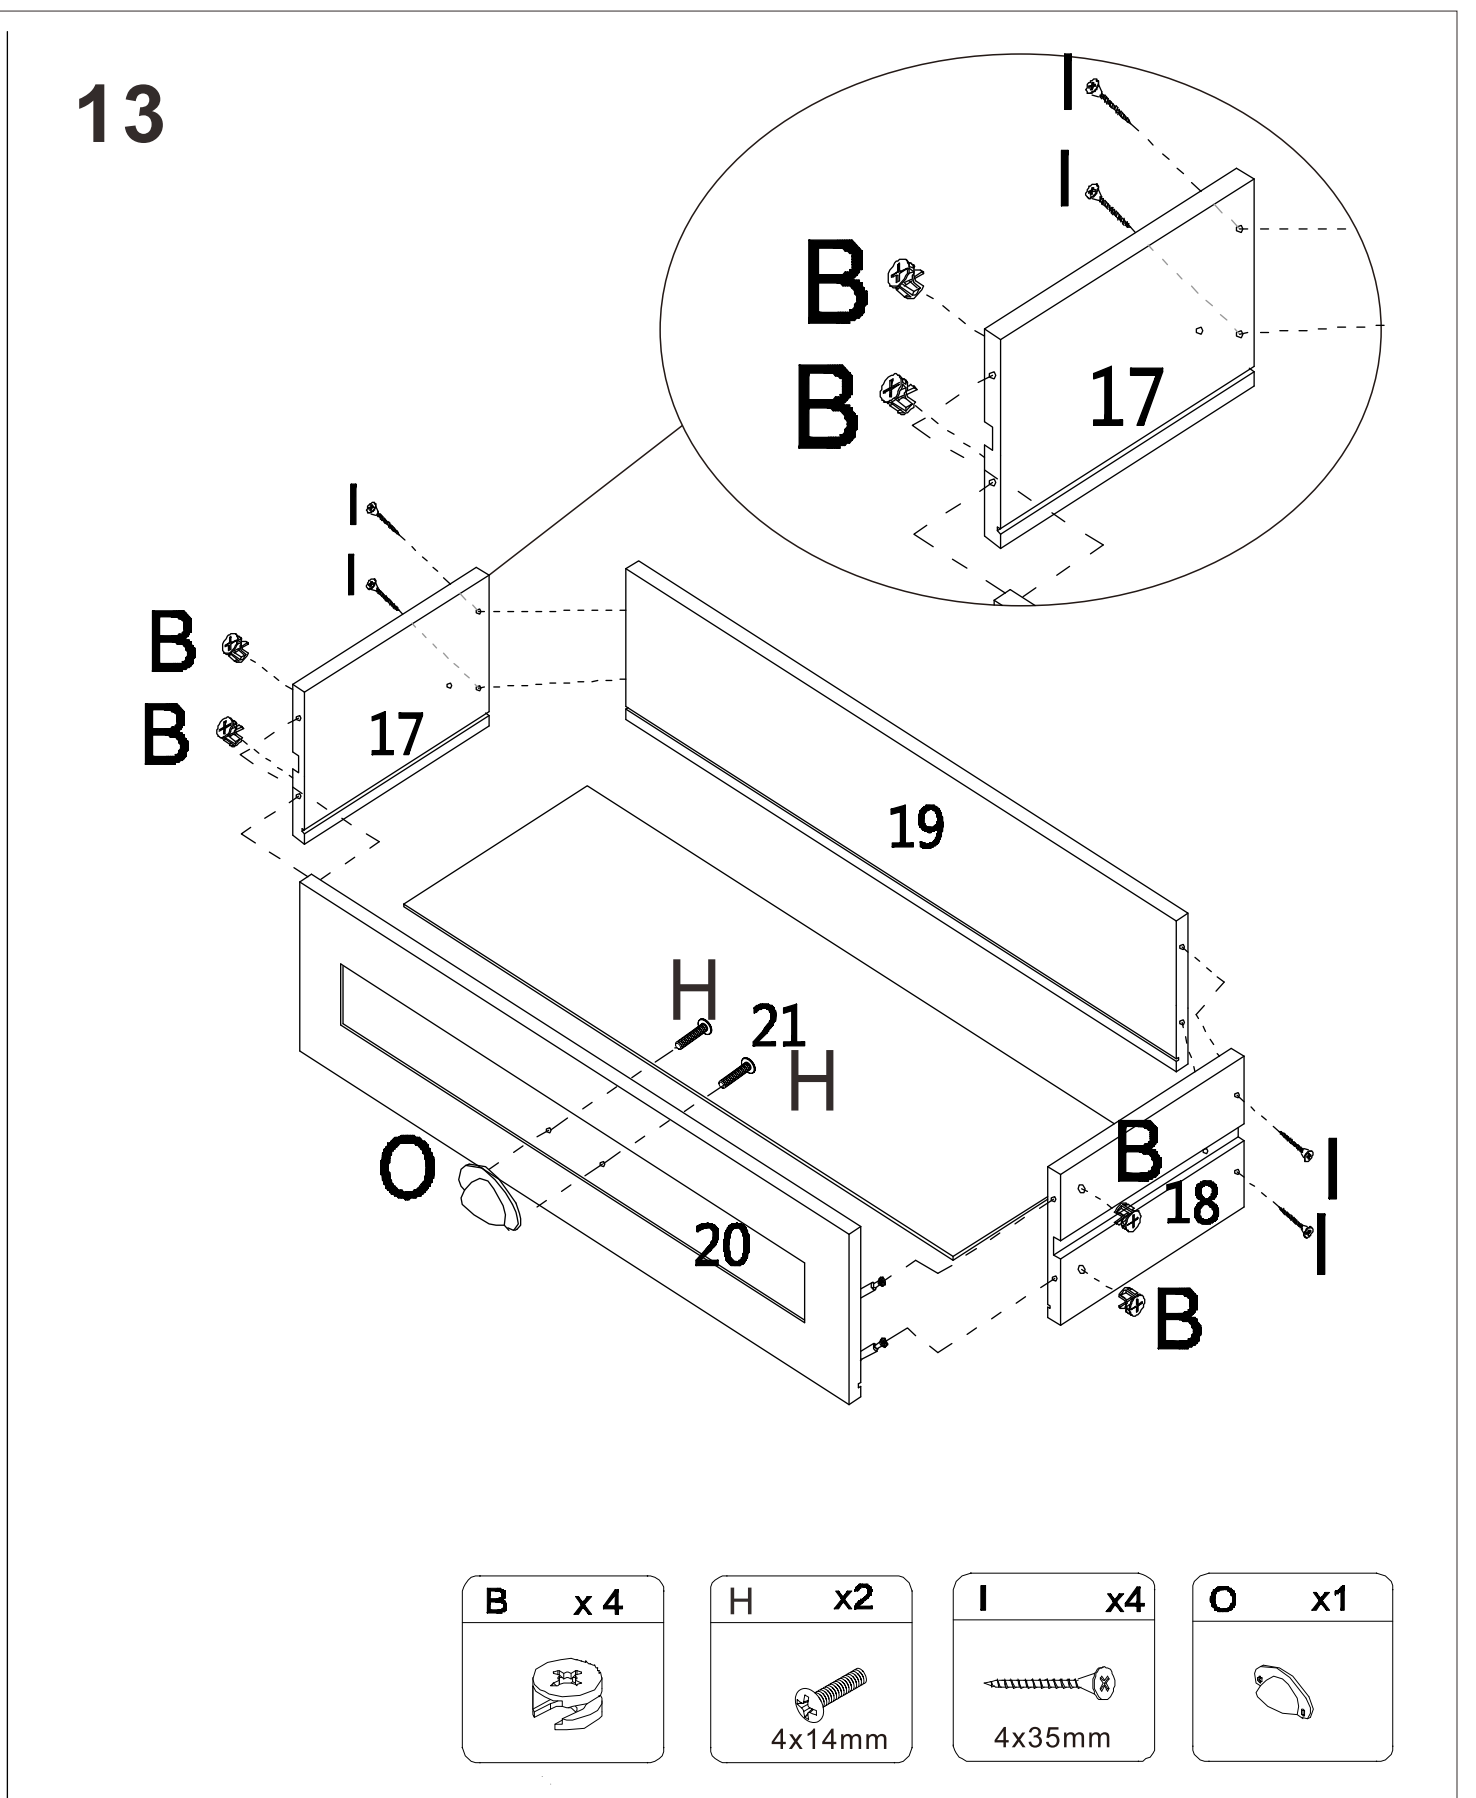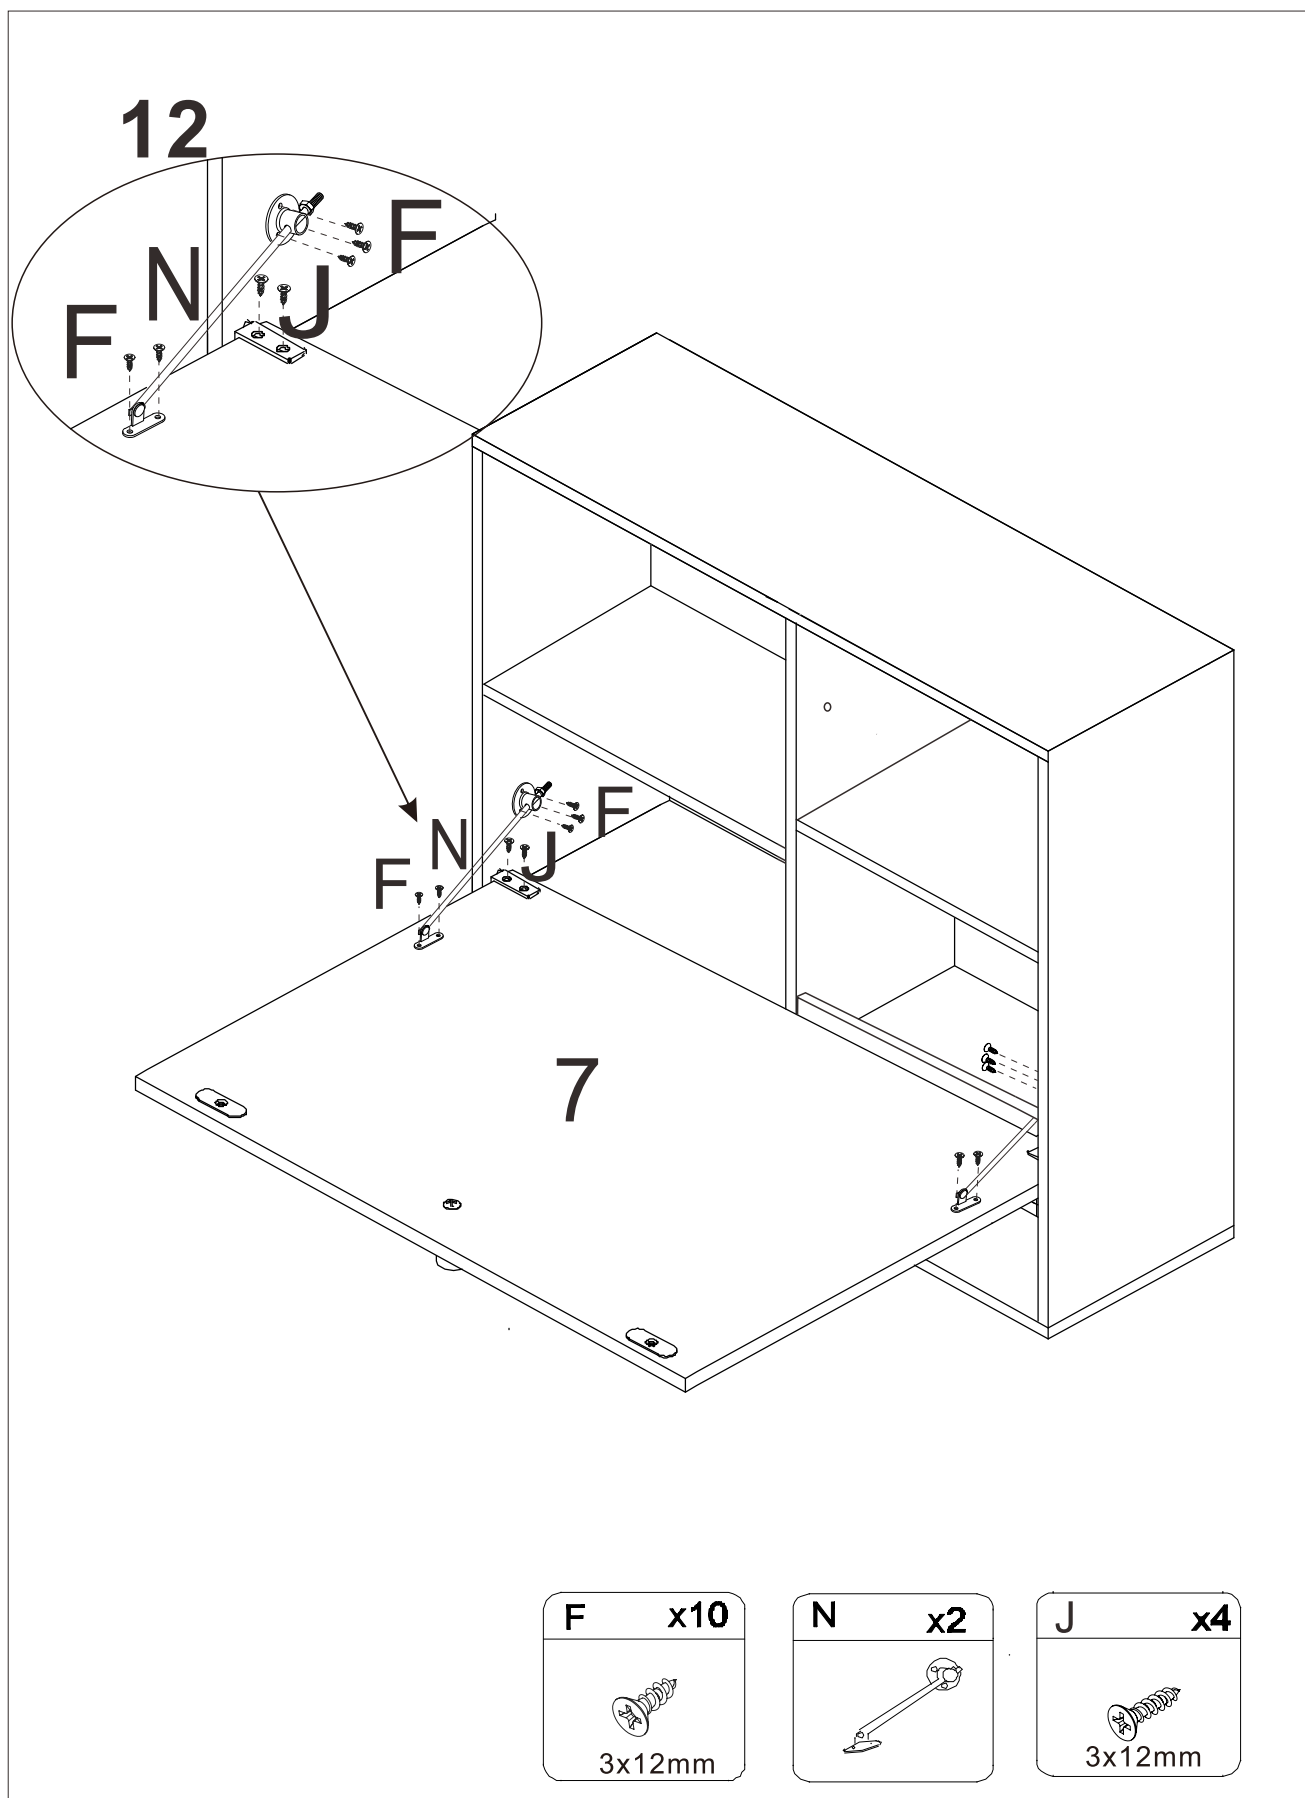


14

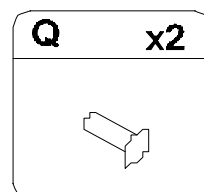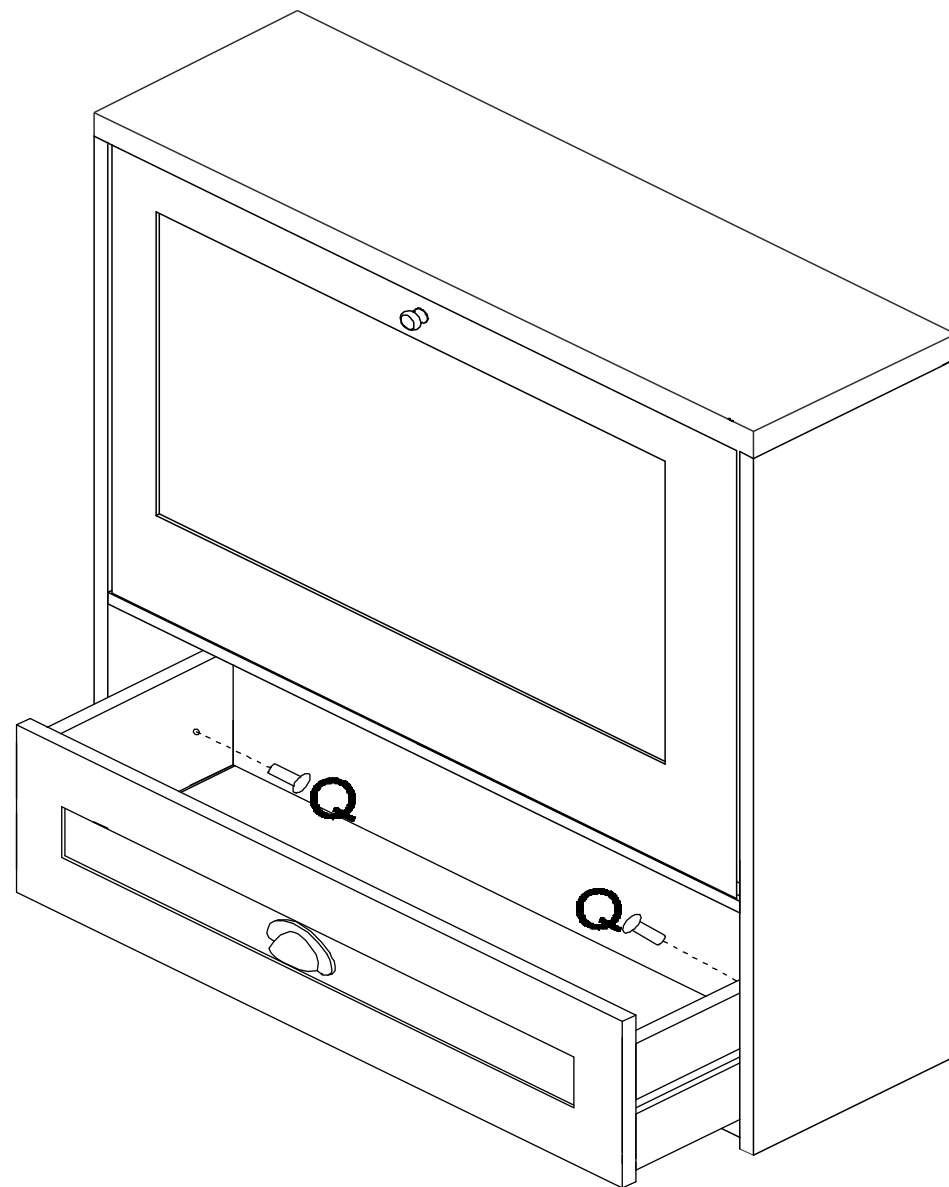


15

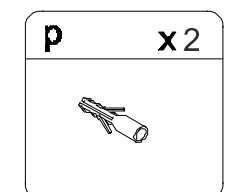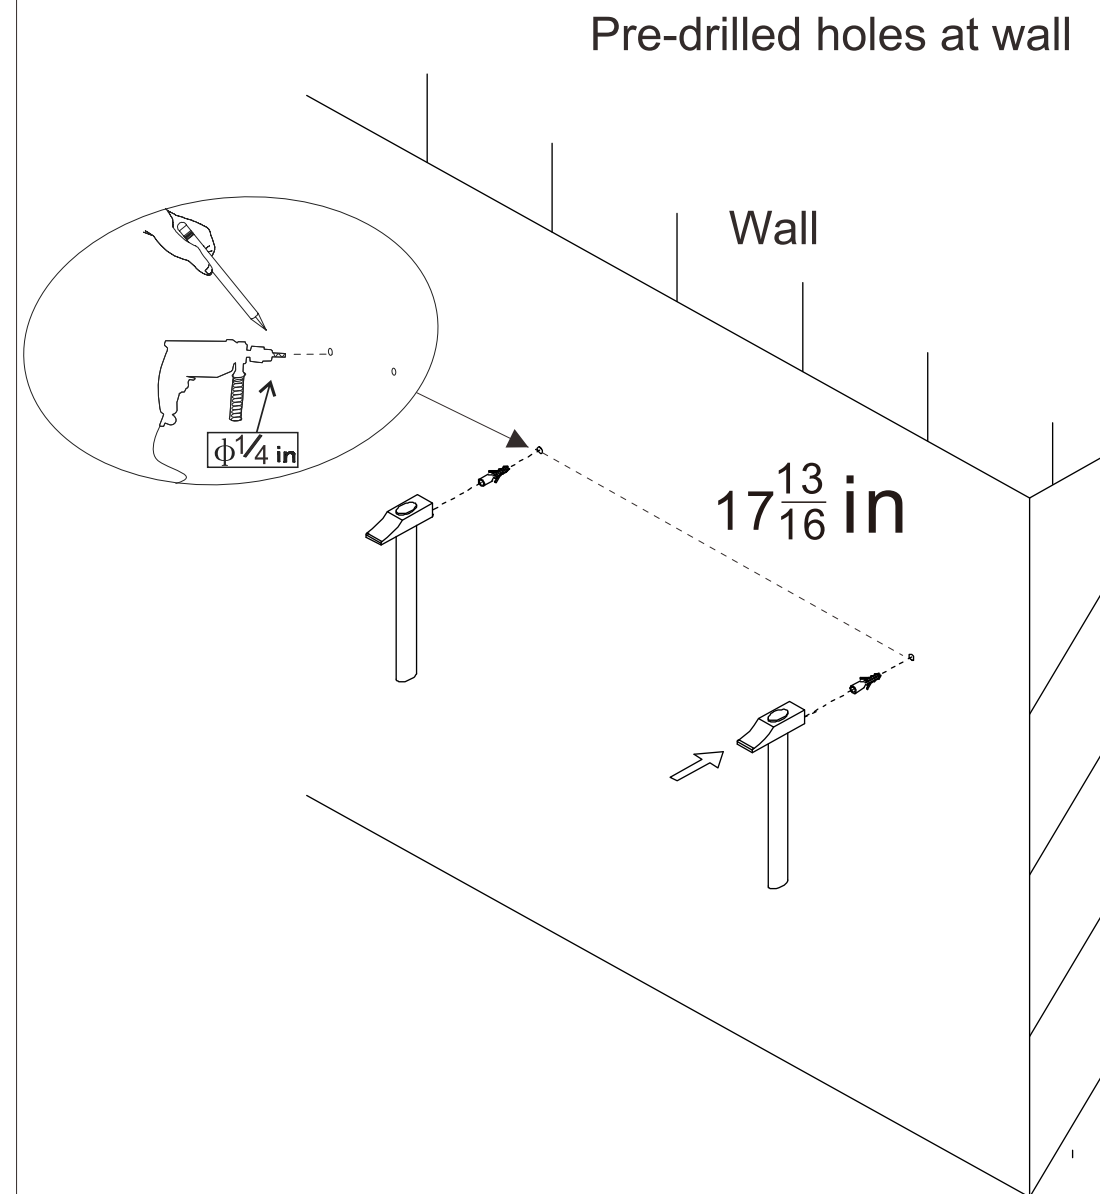




- 16** Install the hanging rail (#15) onto the wall first.
 There are 2 Pre-drilled holes provided on the Hanging Rail for drilling directly into the wall.
 If the location of these pre-drilled holes do not line up with your studs, please drill new holes into the hanging rail, to line up with the location of your studs.
 Due to the weight of the desk, it is imperative that the hanging rail, and therefore the desk, be attached to the studs.

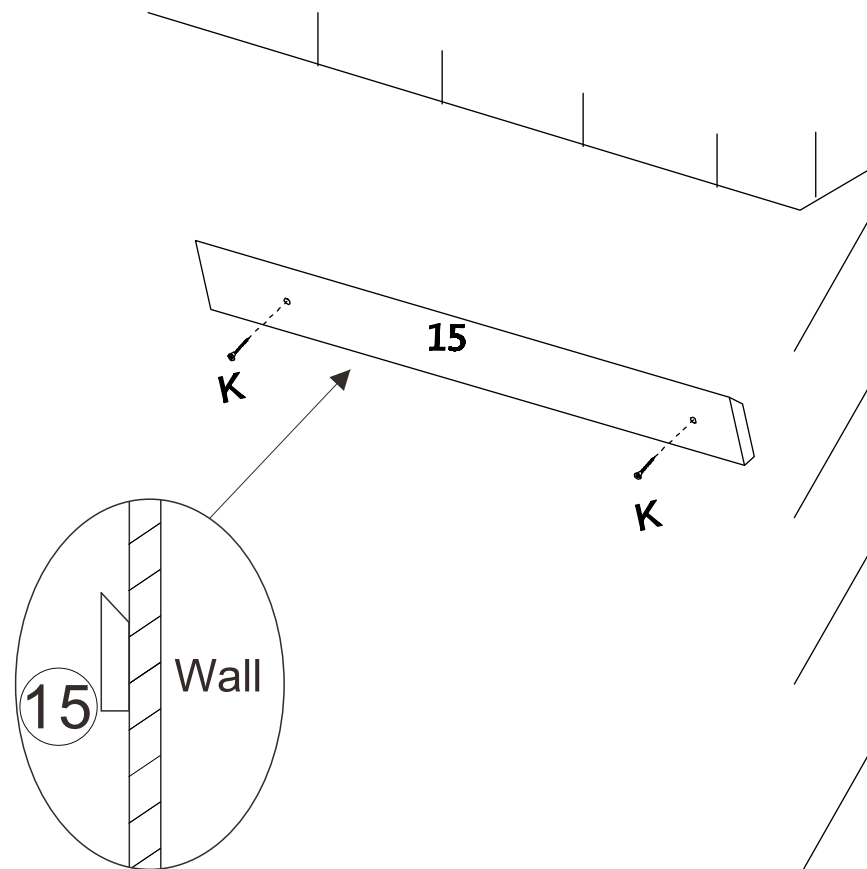



If screwing into stud, no need for anchor.

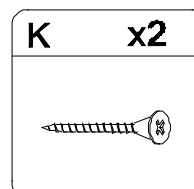

17

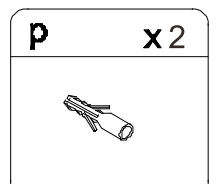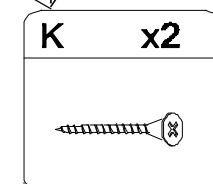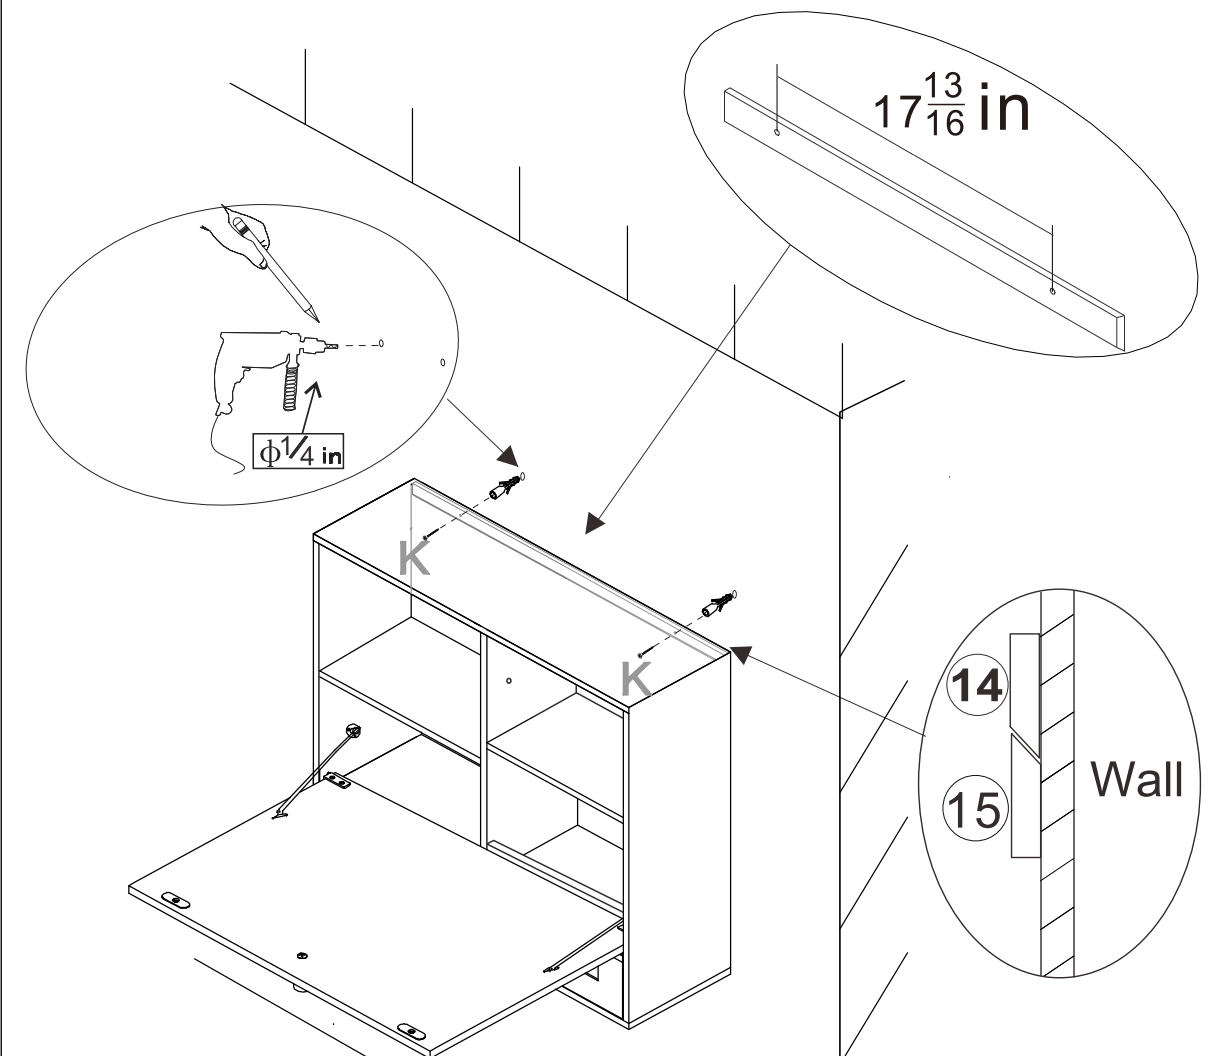

18

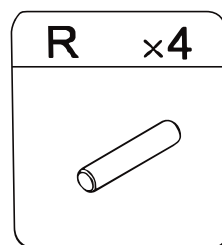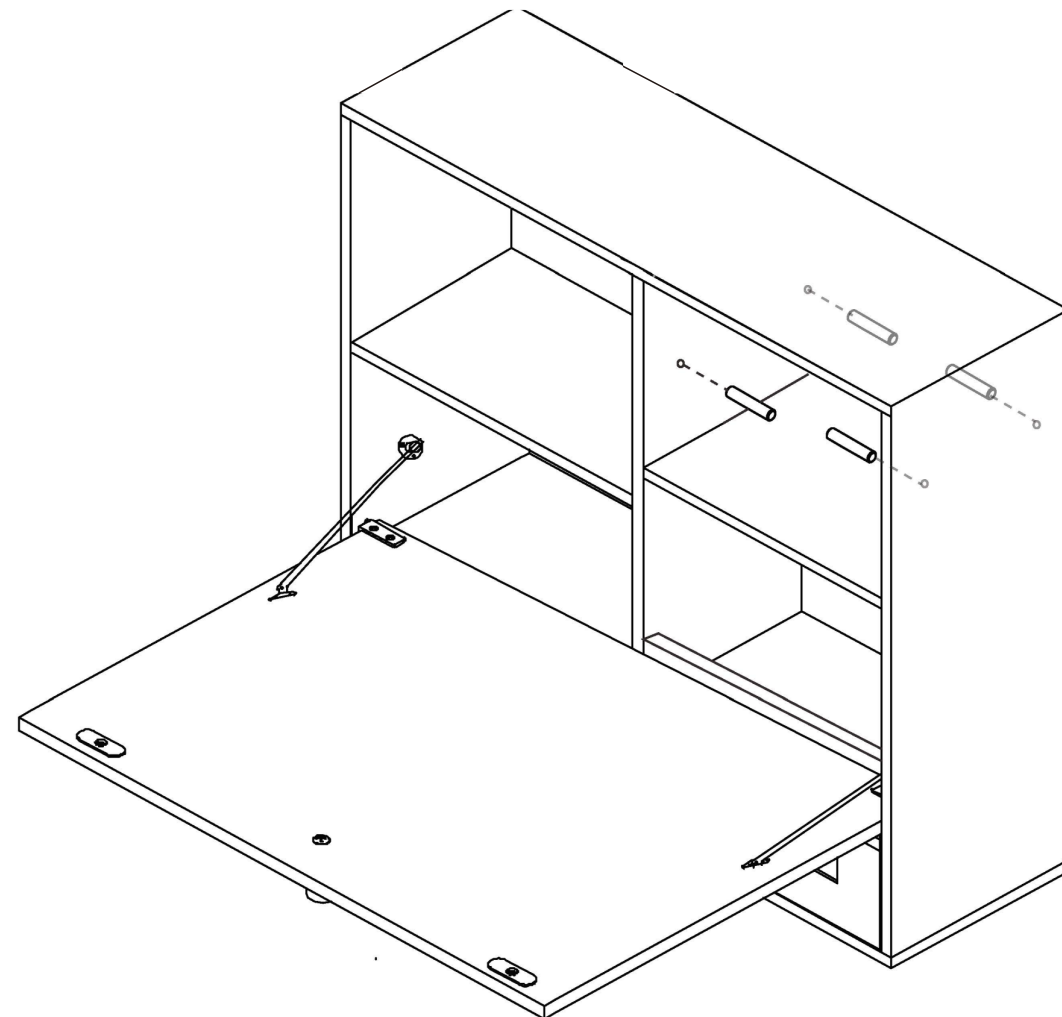

19

