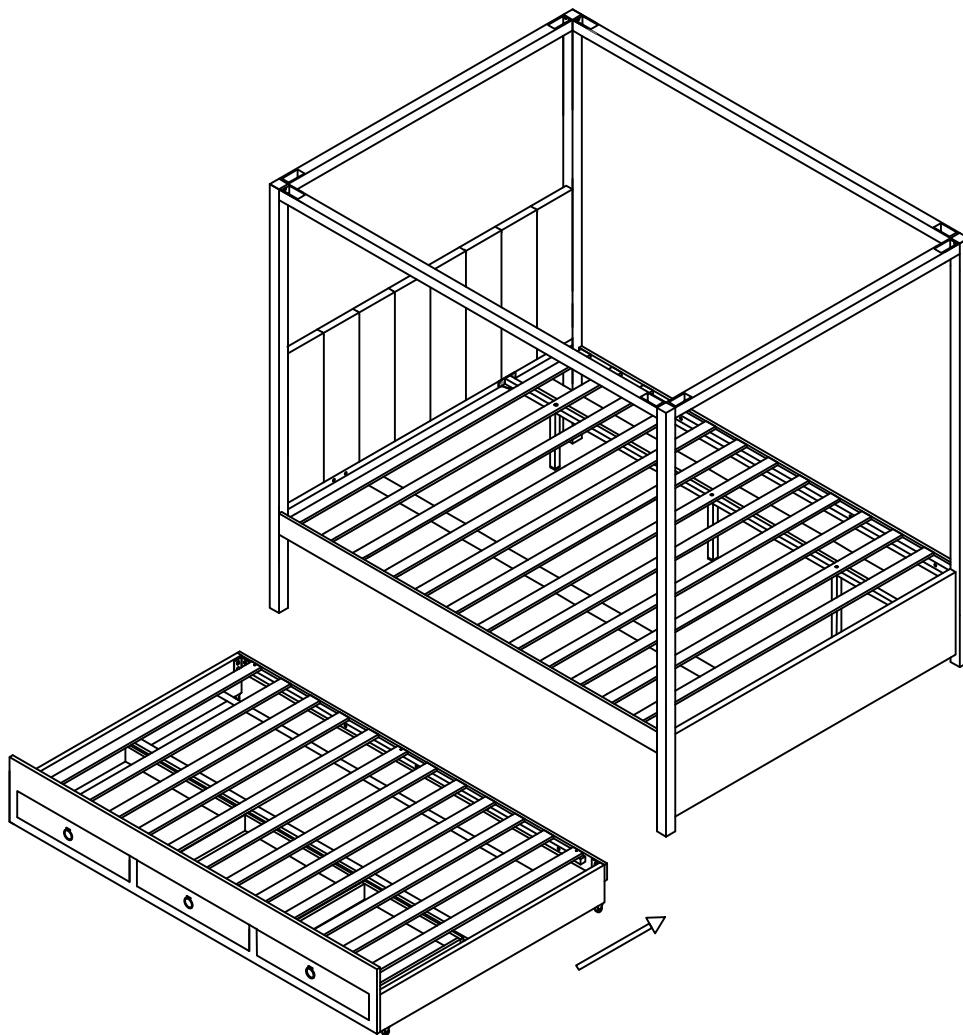



ASSEMBLY INSTRUCTION



If you have any questions, please feel free to contact us.
Email: lowes.team@qualfurn.net













WF324795 / WF324796

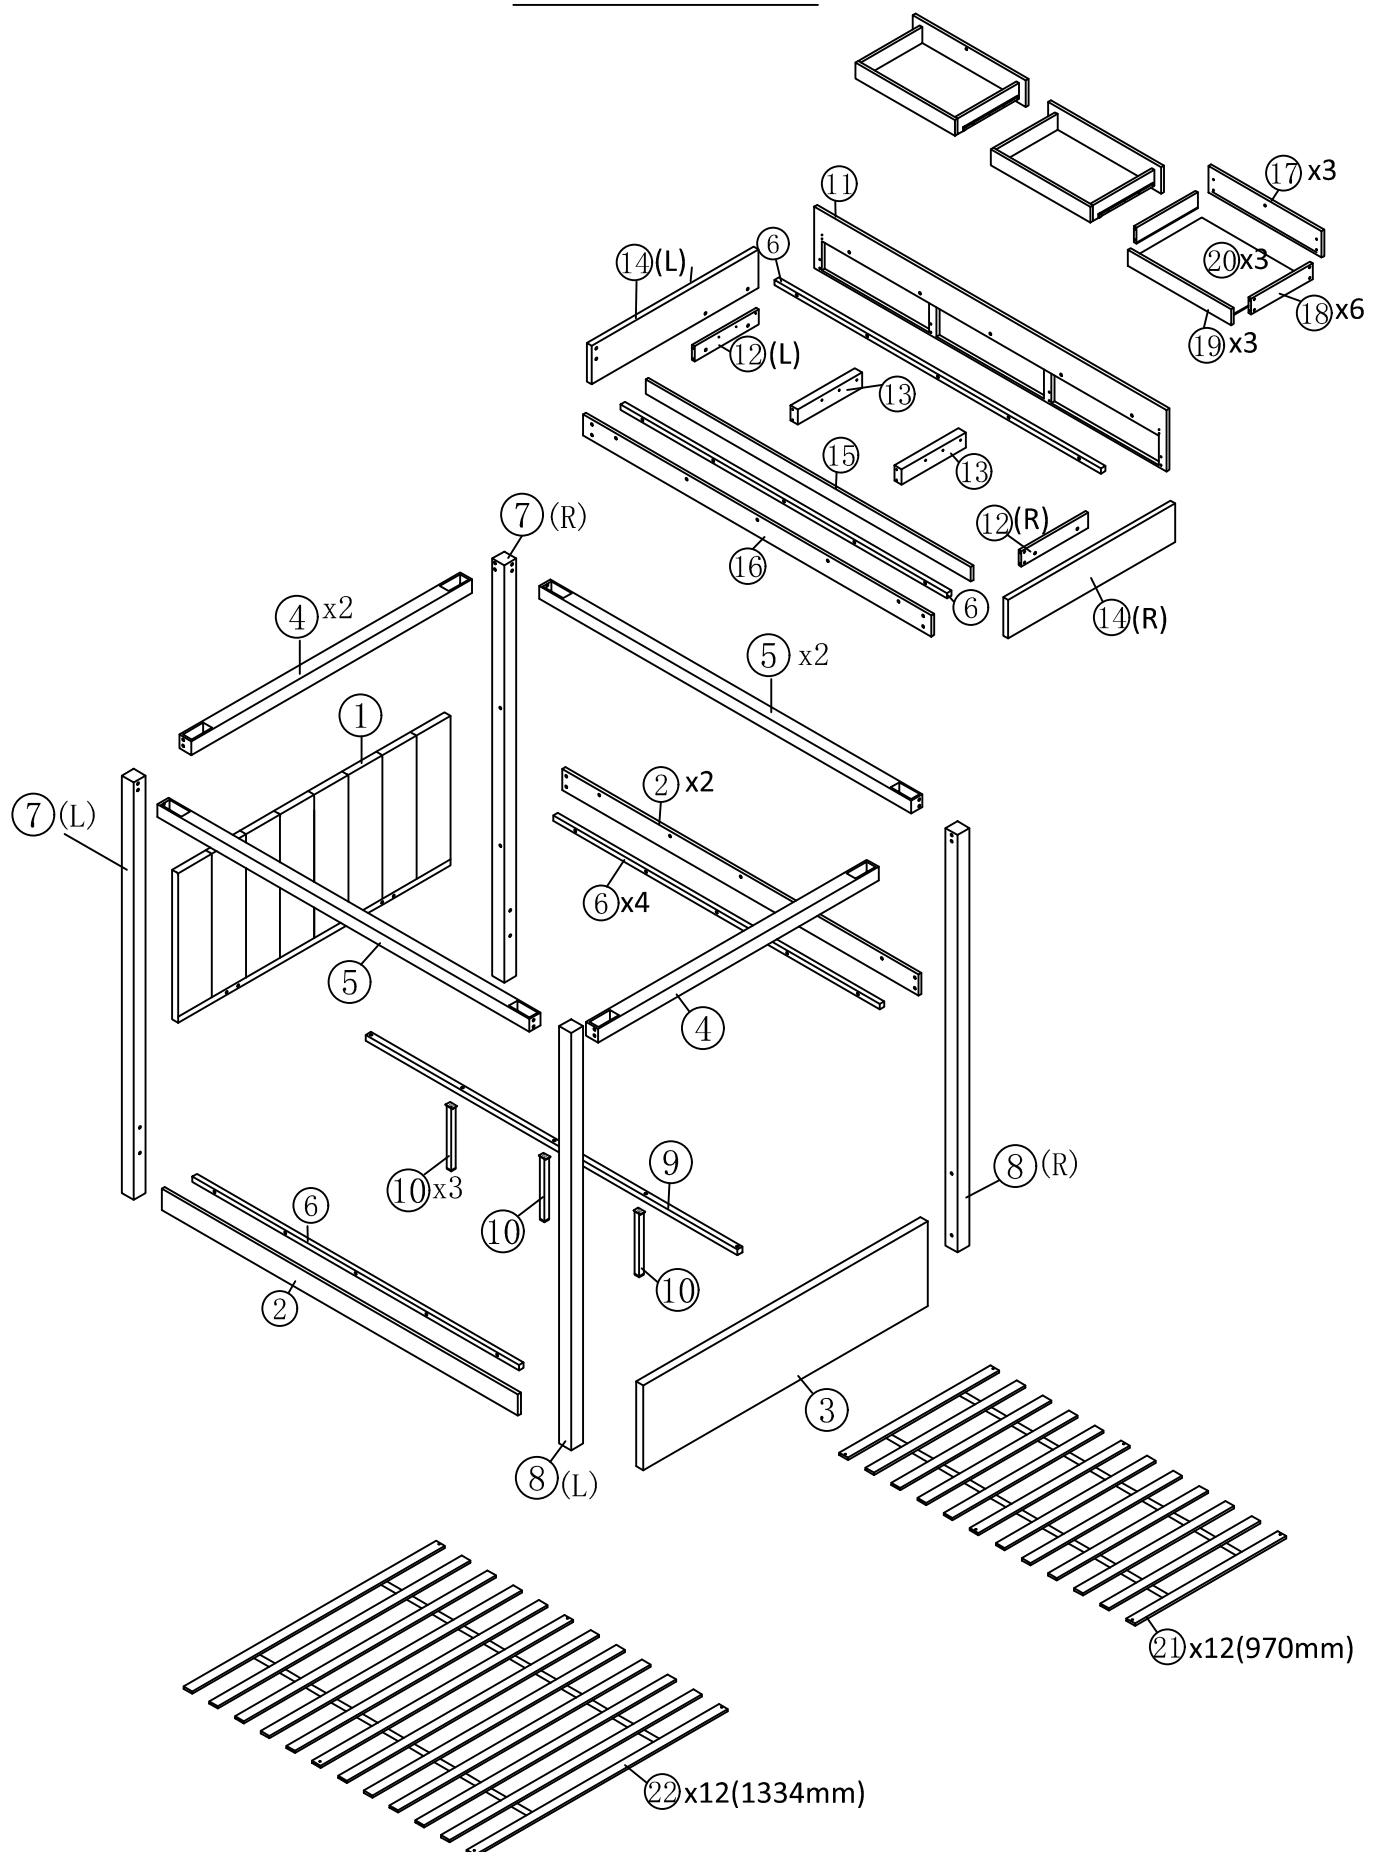Detail View











Part List

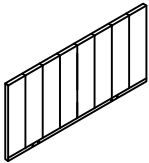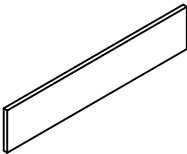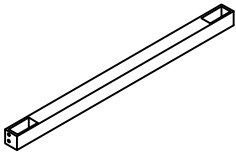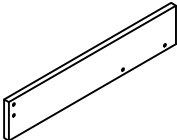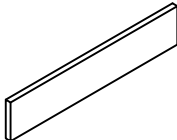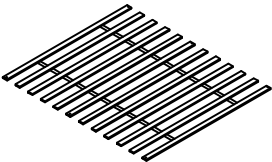Hardware List+WF324795

1  Head board-1pc	3  Foot board-1pc	4  Top cross bar-2pcs
10  Support leg-3pcs	12L  Bottom bed board-1pc	12R  Bottom bed board-1pc
13  Bottom bed board-2pcs	14L  Bottom bed board-1pc	14R  Bottom bed board-1pc
18  Drawer board-6pcs	19  Drawer board-3pcs	20  Drawer bottom board-3pcs
21  Slats(970mm)-12pcs	22  Slats(1334mm)-12pcs	







Part List

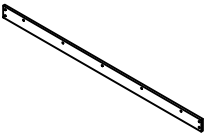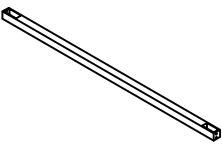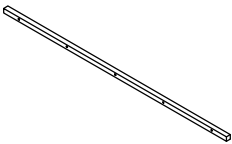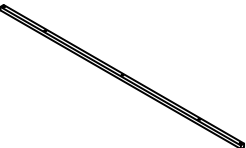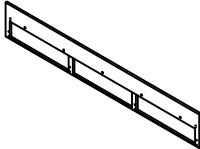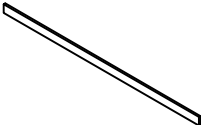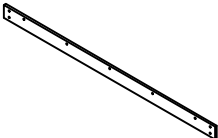WF324796

2  Siderails-2pcs	5  Top vertical bar-2pcs	6  Side rails support bar-4pcs
7L  Headboard standing bar-1pc	7R  Headboard standing bar-1pc	8L  Footboard standing bar-1pc
8R  Footboard standing bar-1pc	9  Center support bar-1pc	11  Bottom bed board-1pc
15  Bottom bed board-1pc	16  Bottom bed board-1pc	17  Drawer outer board-3pcs


Hardware List

WF324795

A		B	 Ø8*40mm	C	 Ø8*18mm
Allen Key(1pc)		Bolts(37pcs)		Bolts(28pcs)	
D	 M10	E	 M8x60	F	 M8
Wood chip(8pcs)		Bolts(8pcs)		Nuts(8pcs)	
G		H		I	
"7" Connector(6pcs)		Spanner(1pc)		Drawer fittings(40pcs)	
J		K		L	 Ø3*16mm
Drawer fittings(40pcs)		Wheel(4pcs)		Nails(44pcs)	
M	 Ø3*25mm	N	 Ø4*30mm	O	
Nails(8pcs)		Nails(12pcs)		Little "7" Connector(2pcs)	
P	 Ø5*20mm	Q	 86*32*28*2mm	R	 3pcsR/3pcsL
Bolts(3pcs)		Center support bar fittings(2pcs)		Drawer track(6pcs)	
S	 3pcsR/3pcsL	T		U	 M8
Drawer track(6pcs)		Drawer handle(3pcs)		Washer(8pcs)	


Remark: We recommend you assemble your bed in the flat ground.

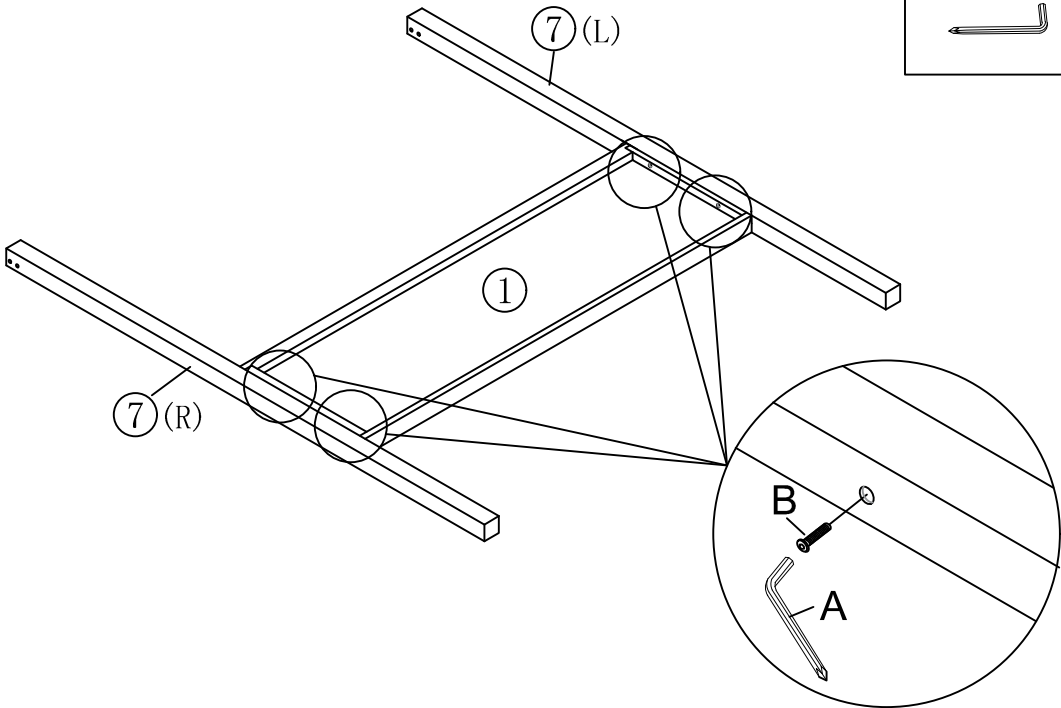Step 1




A	B
	 M8X40mm
	4PCS

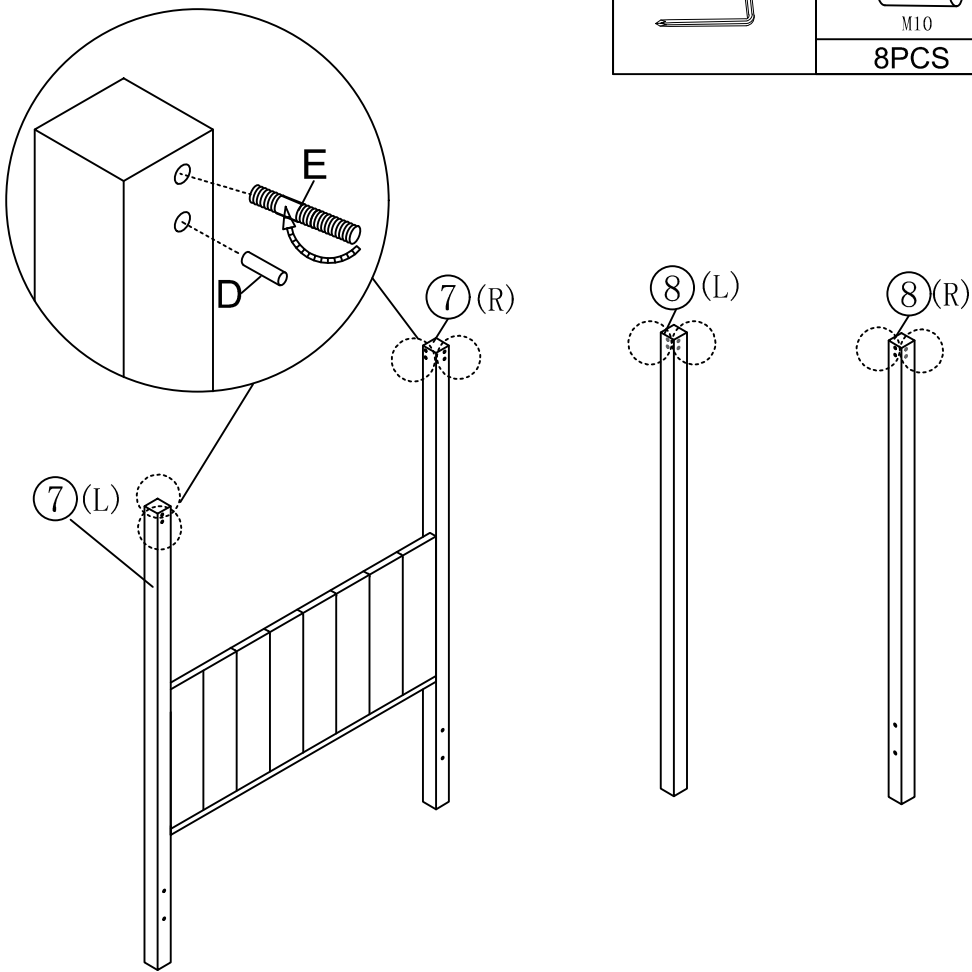Step 2



A	D	E
	 M10	 M8x60
	8PCS	8PCS

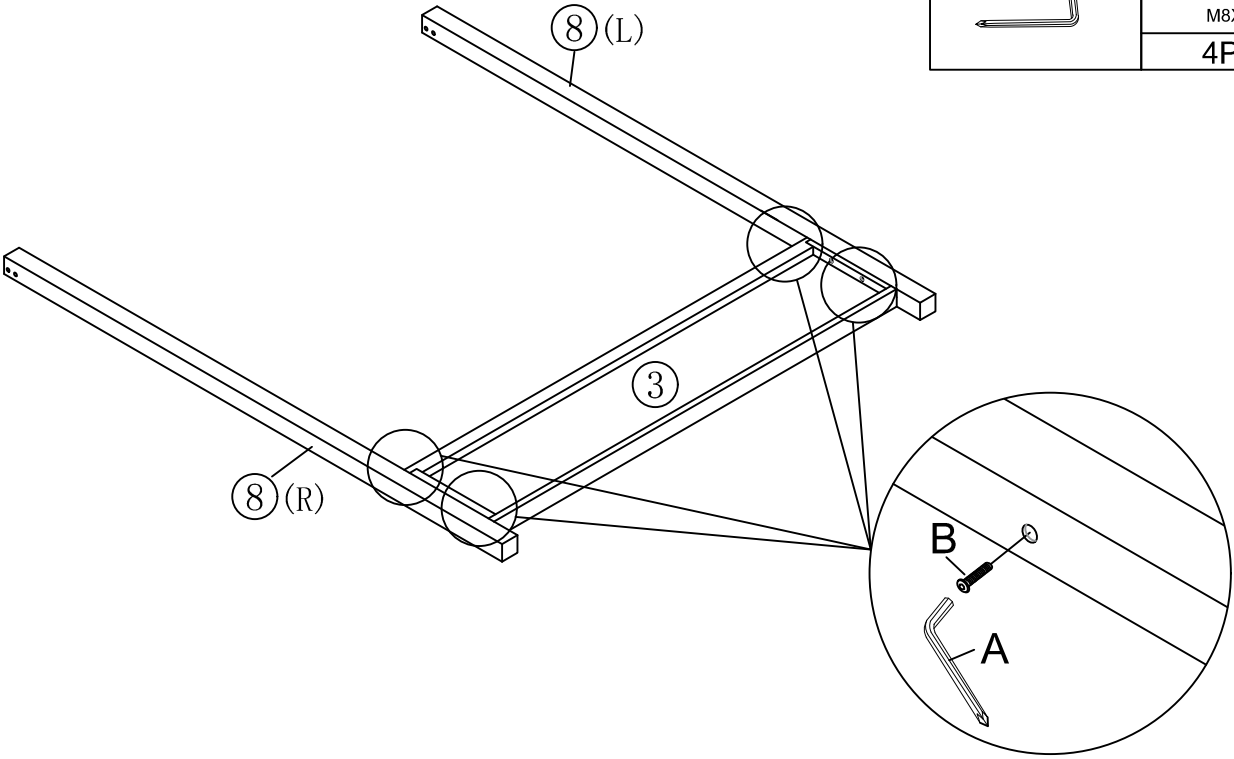
Step 3



A




B



M8X40mm

4PCS

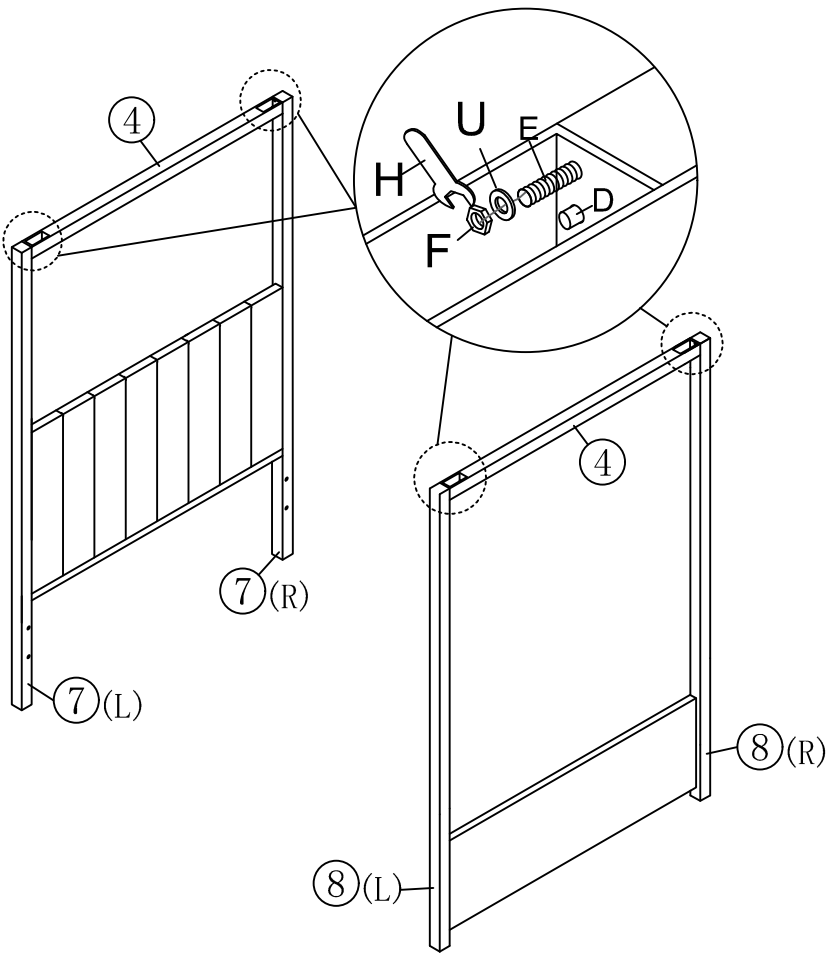Step 4



H



F



M8

4PCS

U



M8

4PCS

Step 5

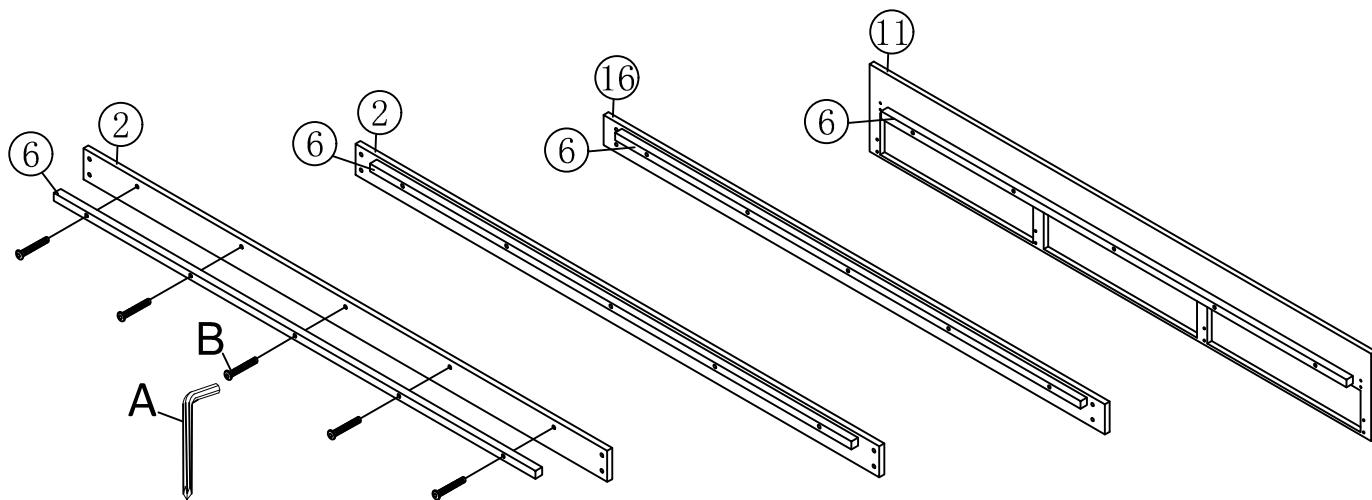
A



B



20PCS



Step 6

A



C

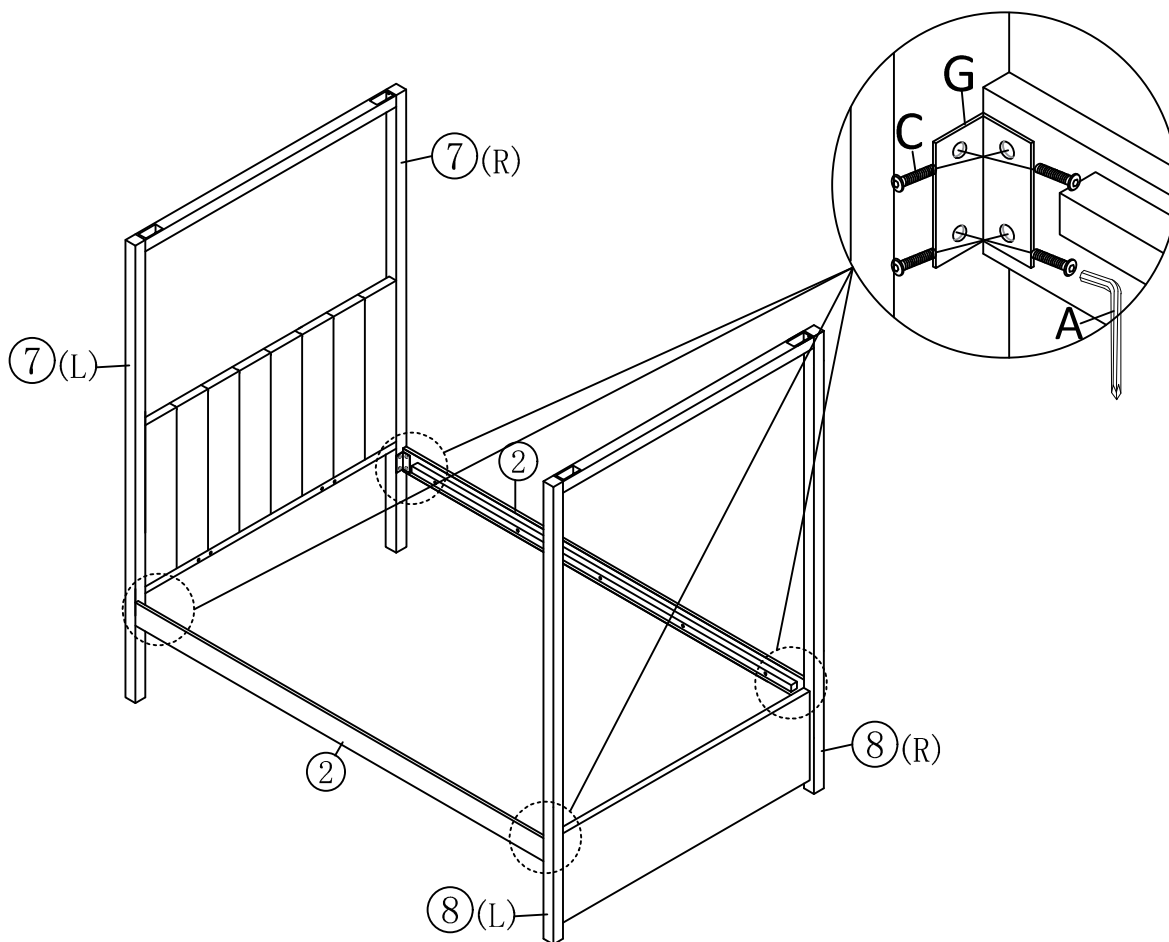


16PCS

G





4PCS





Step 7

H	F	U
	 M8	 M8
	4PCS	4PCS

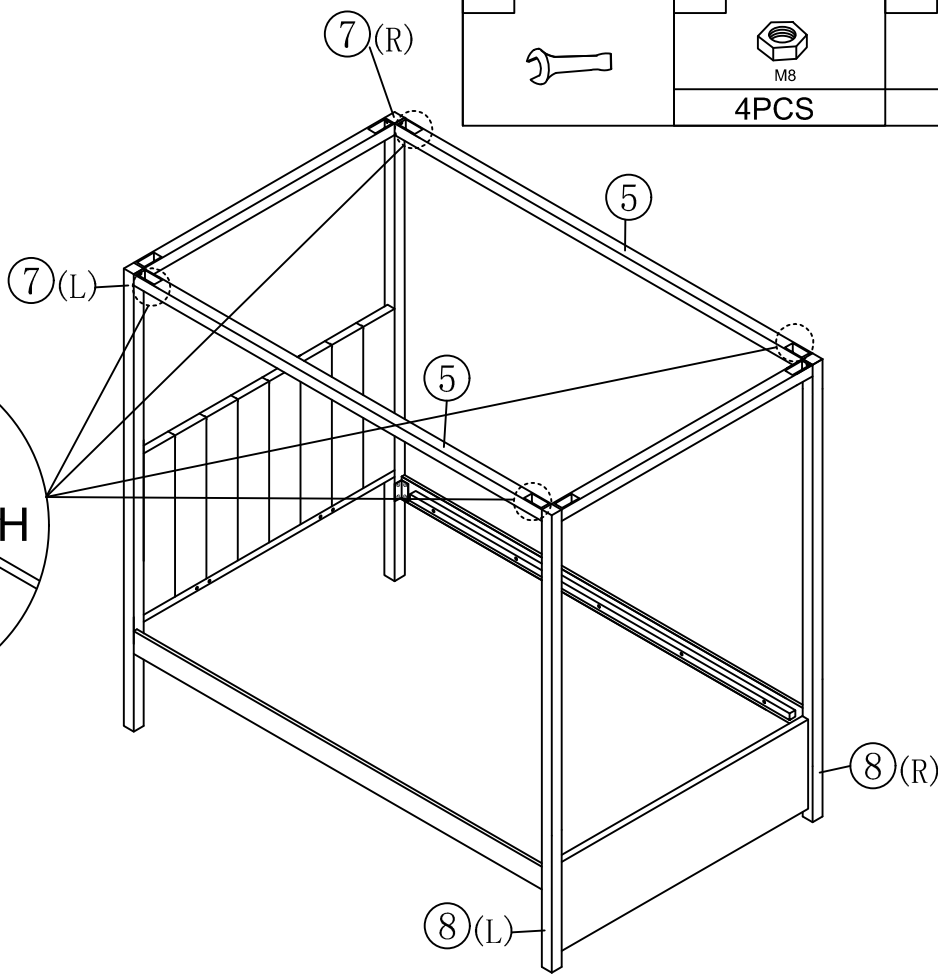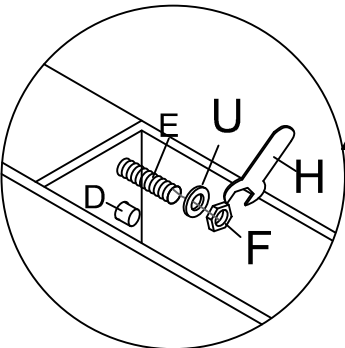

Step 8

A	C	Q
	 M8X18mm	
	4PCS	2PCS

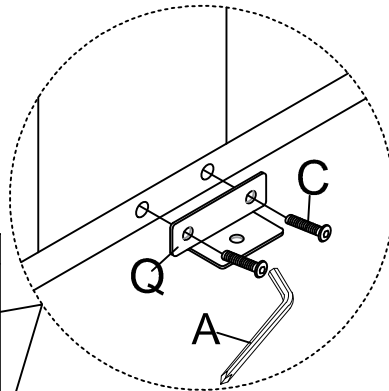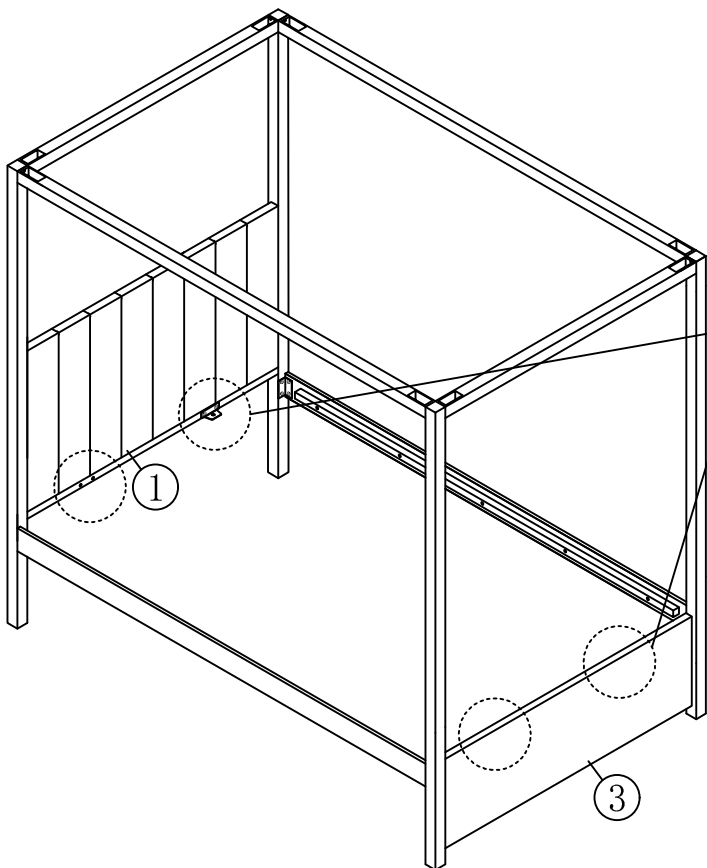


If you want to put the bottom bed on the right, you can chose the two pair holes on the left.

If you want to put the bottom bed on the left, you can chose the two pair holes on the right.


Step 9

A 	B  M8X40mm 3PCS
--	---

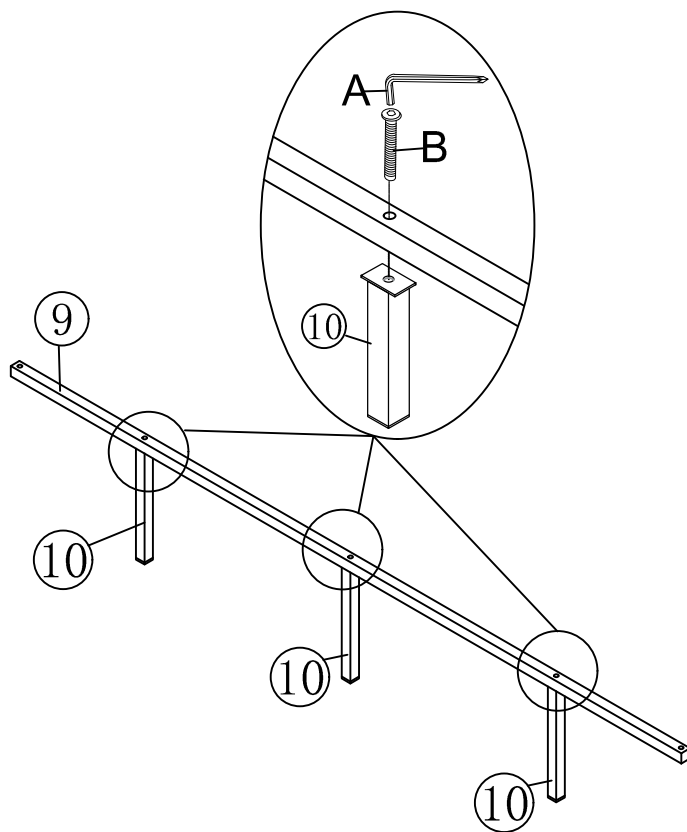


Step 10

A 	B  M8X40mm 2PCS
--	---

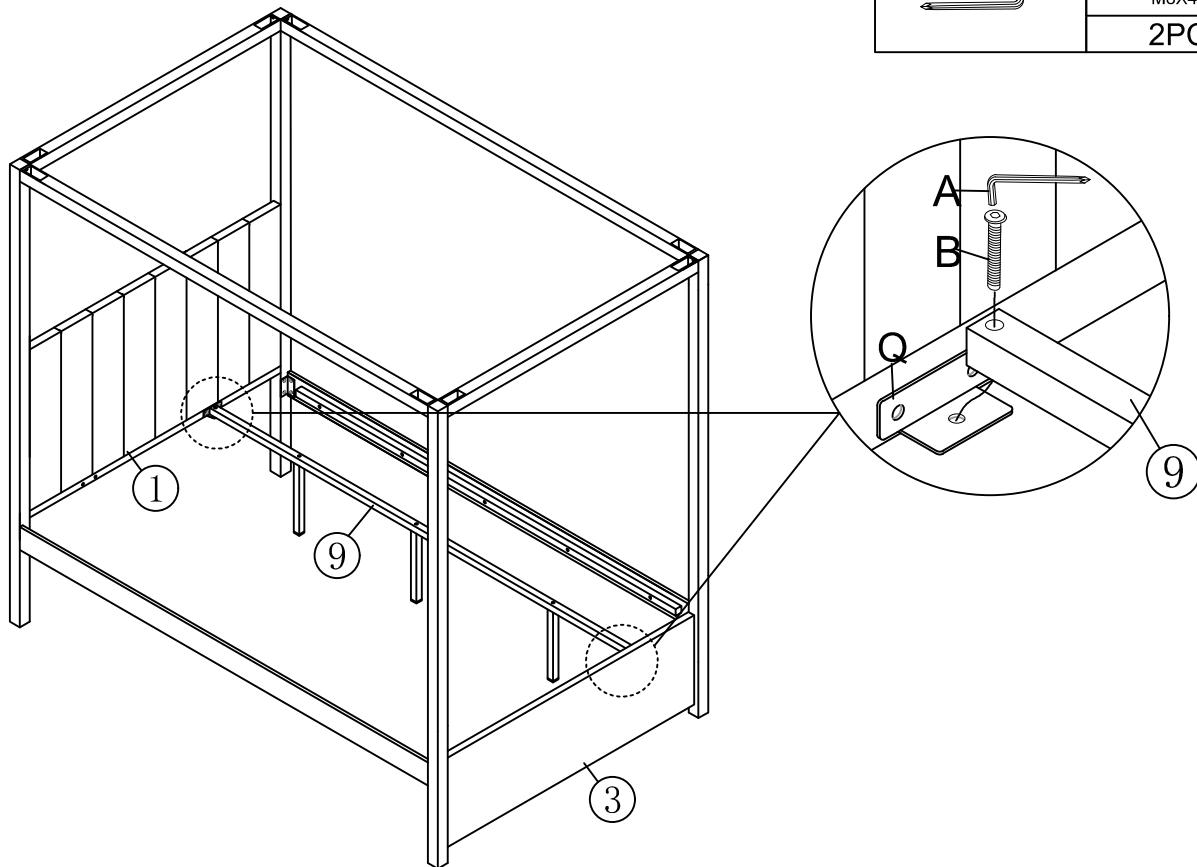


Step 11

A	I	J
		
	16PCS	16PCS

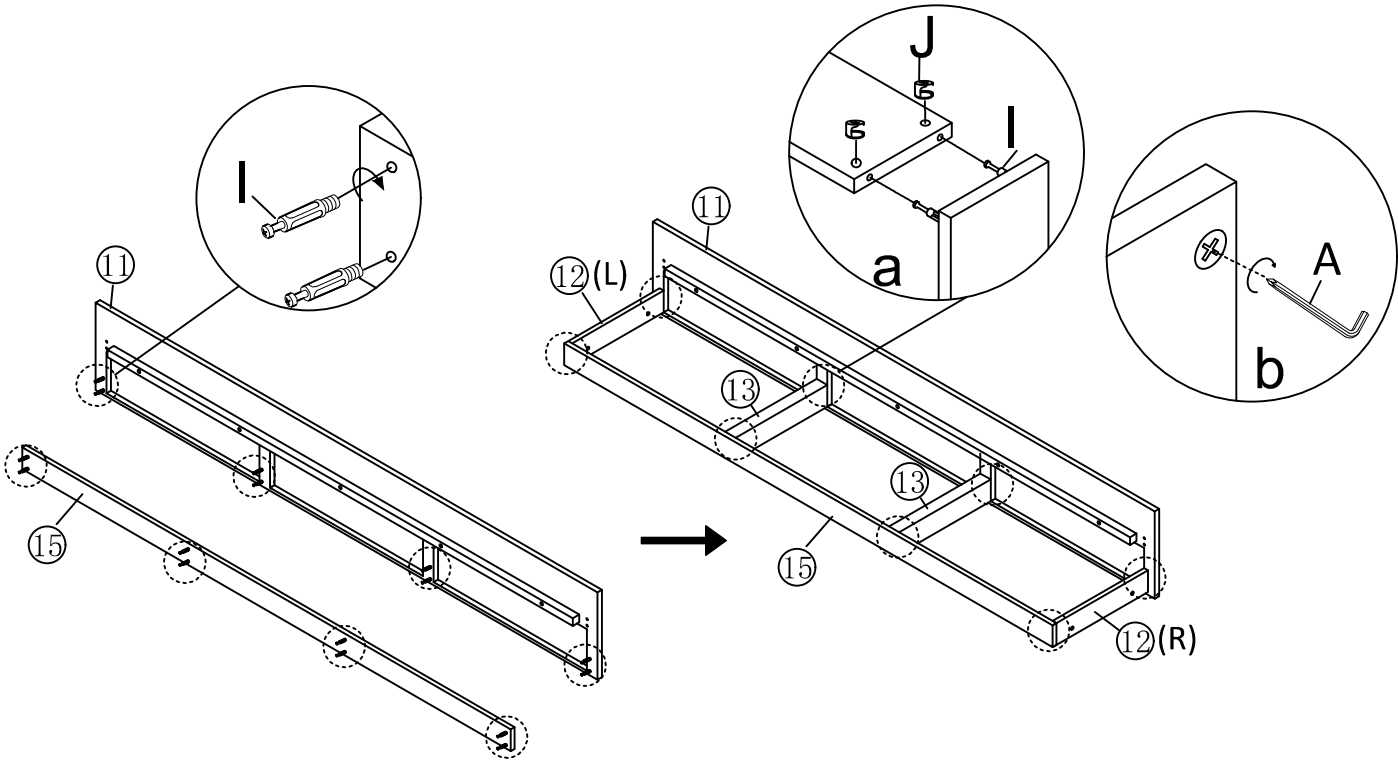


Step 12

A	R	L
		
	3R/3LP	M3X16mm 18PCS

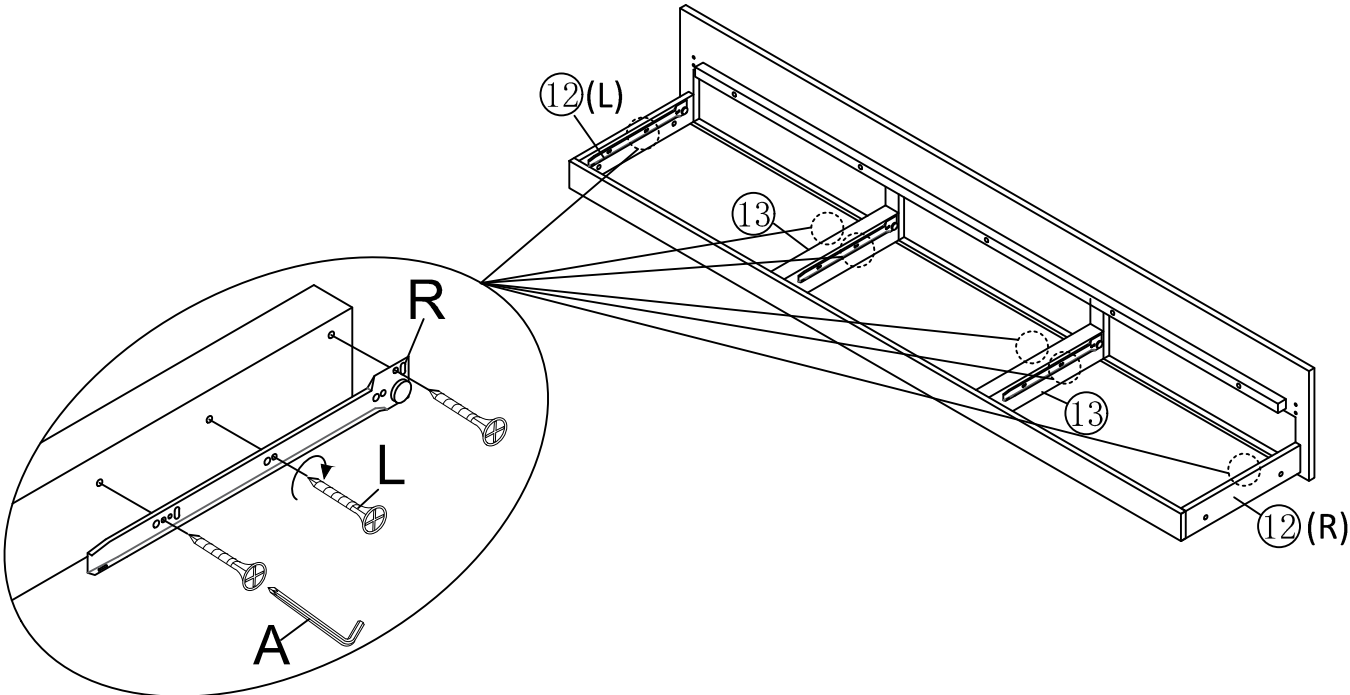


Step 13

A	B	M	K
	 M8X40mm	 M3X25mm	
4PCS	4PCS	8PCS	4PCS

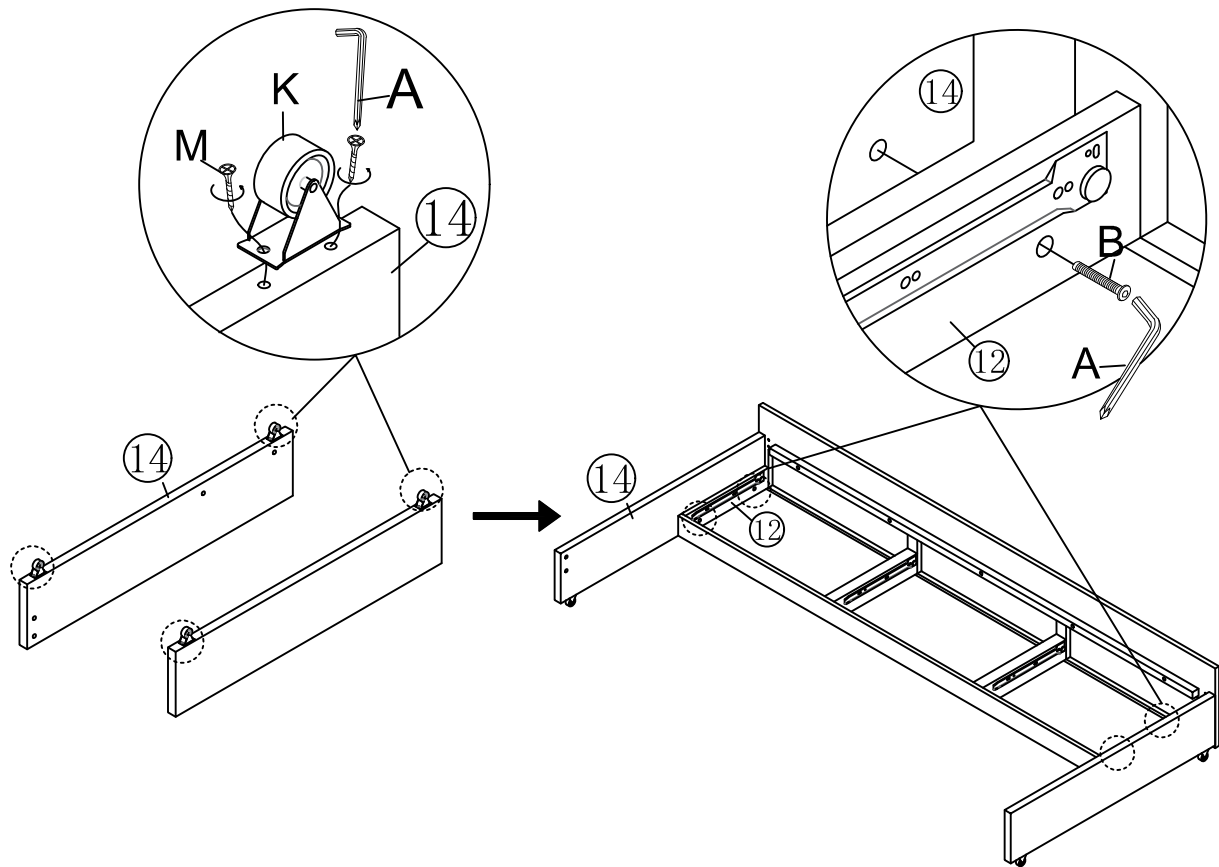


Step 14

A	C	G	L	O
	 M8X18mm		 M3X16mm	
8PCS	8PCS	2PCS	8PCS	2PCS

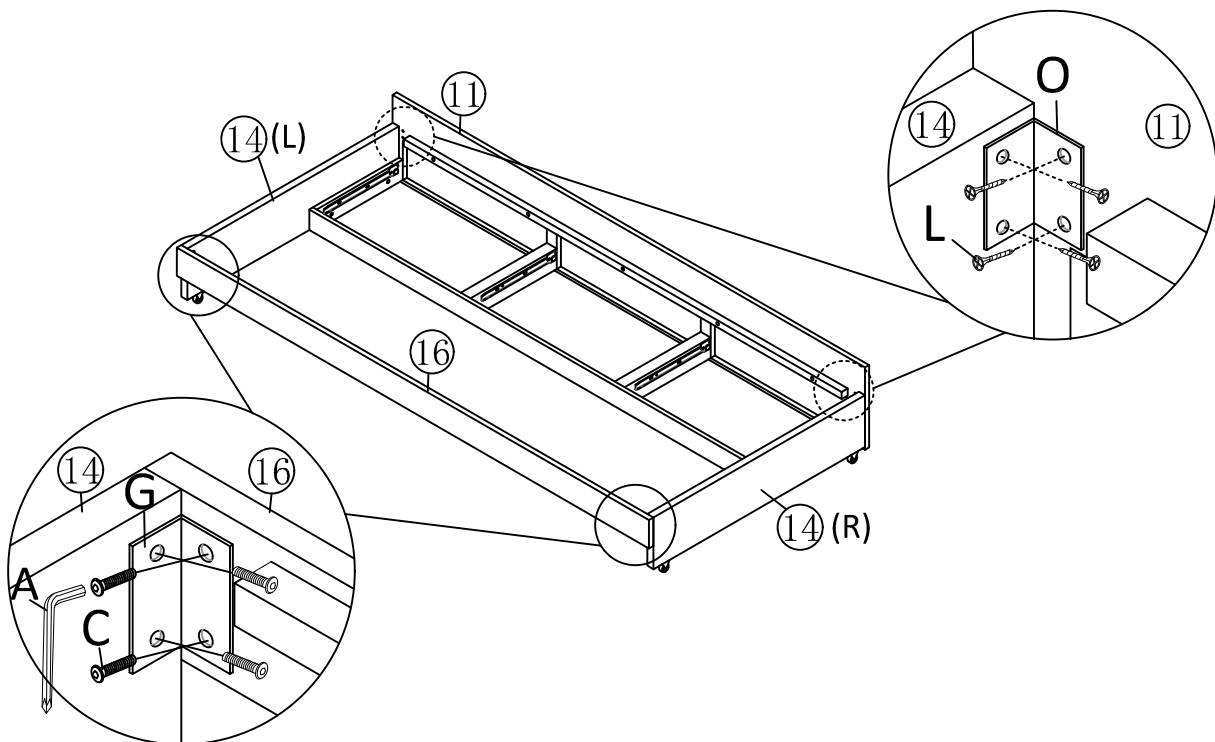

Step 15x3

A	I	J	L	S
			 M3X16mm	
	24PCS	24PCS	18PCS	3R/3LP
			T	P
				 M5X20mm
			3PCS	3PCS

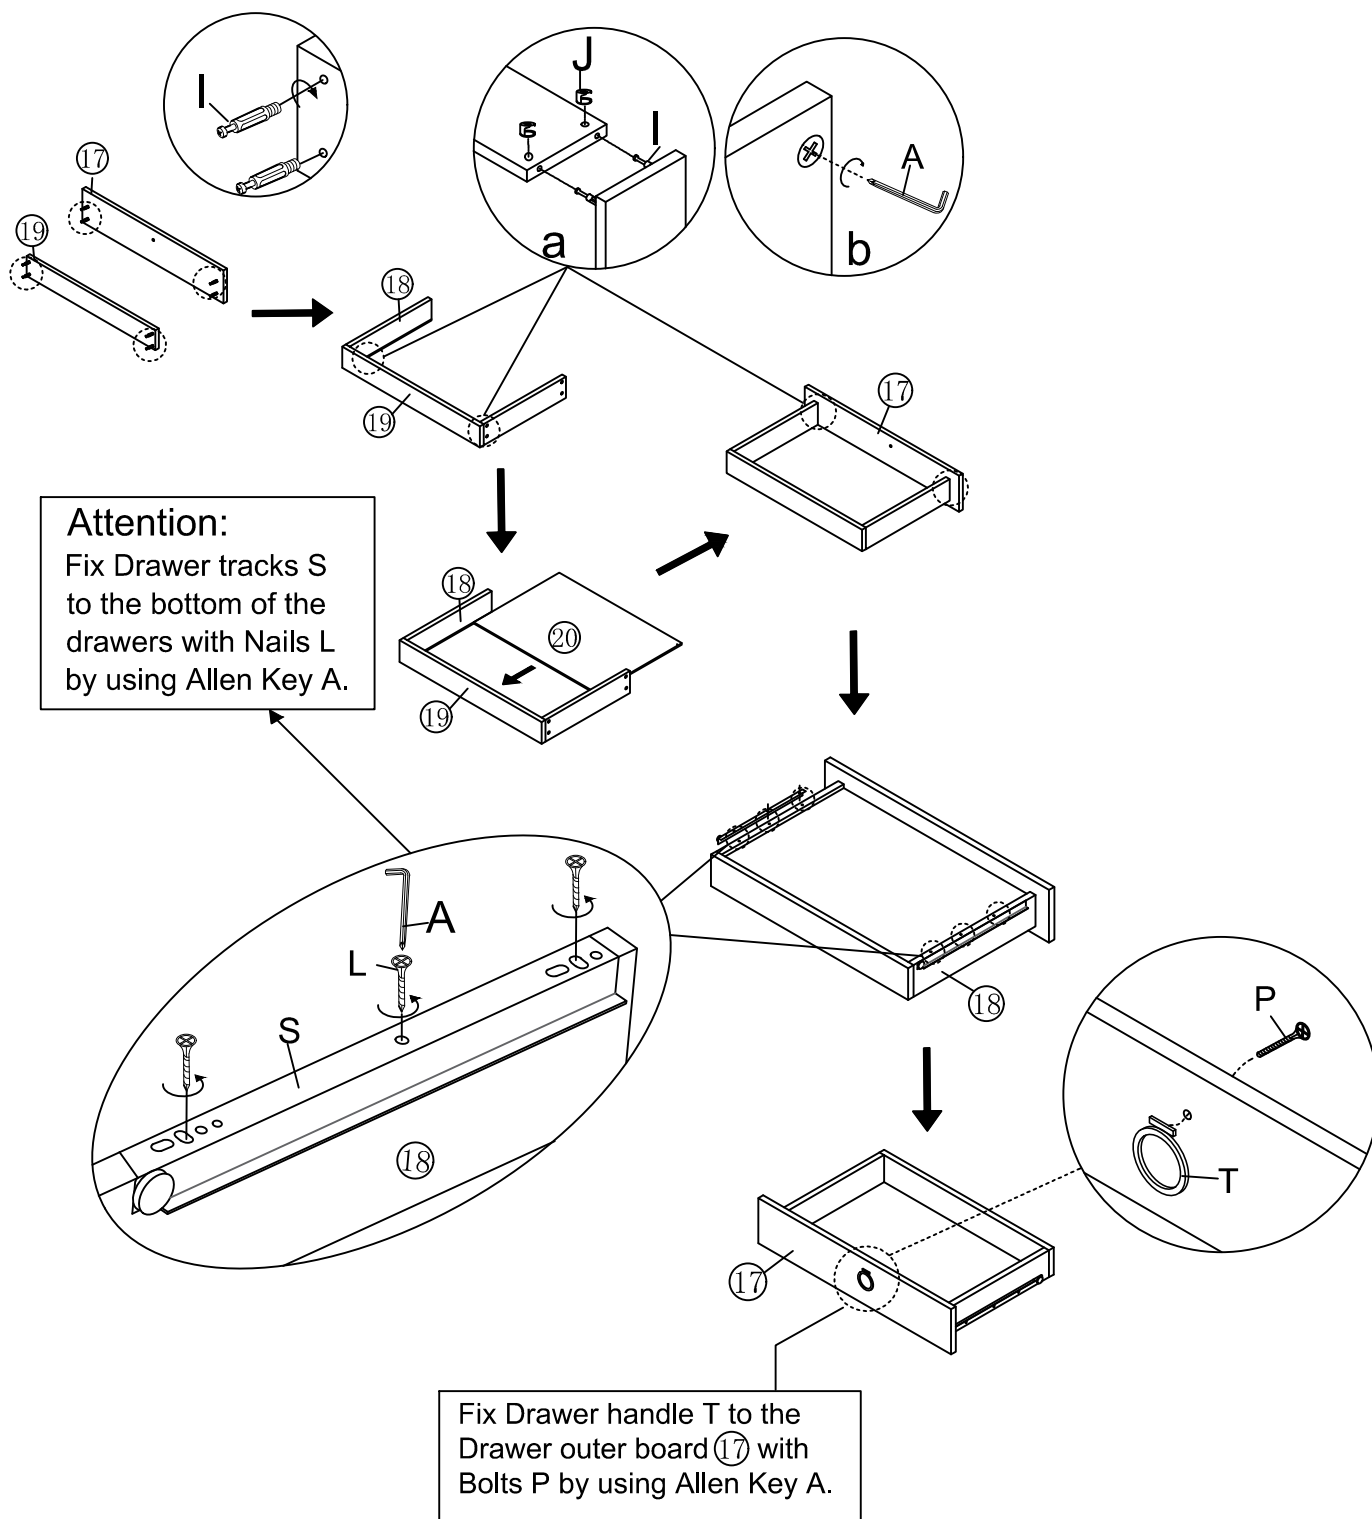

Step 16

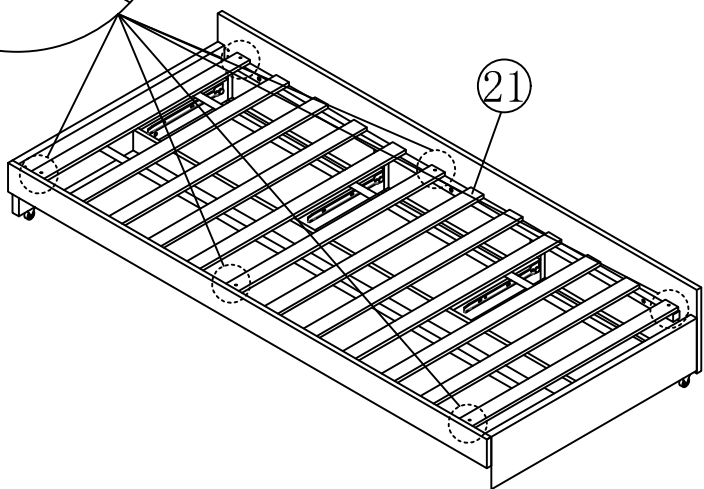
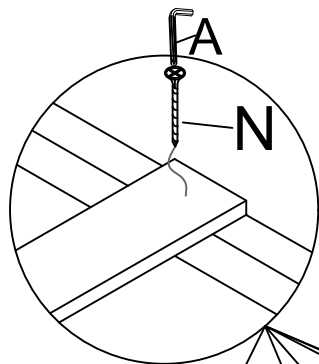
A

N





M4X30mm

6PCS



21

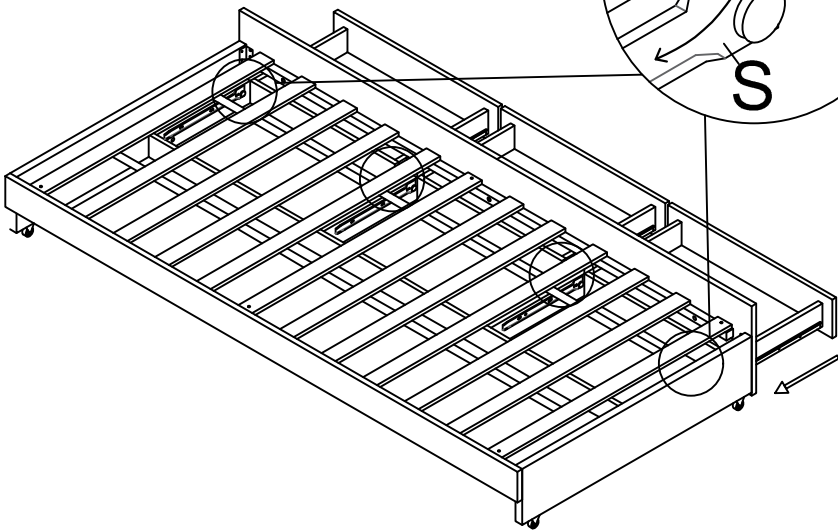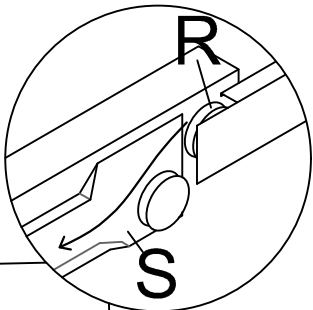Step 17



Step 18

A 	N  M4X30mm 6PCS
--	---

