20-Year Warranty

Great news! Your POLYWOOD warranty is already activated, no need to send anything in. Located on the bottom of each item is a sticker with a serial number. **Please keep this number for your records.**

View our full warranty: polywood.com/warranty

Cleaning Tips

For a Quick Clean: Simply wipe down with soap and water.

For a Deep Clean:


Wipe on ¹/₃ bleach and ²/₃ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ¹/₃ bleach and ²/₃ water solution and scrub with a soft bristle brush. Hose down to rinse.

POLYWOOD®

Assembly Instructions

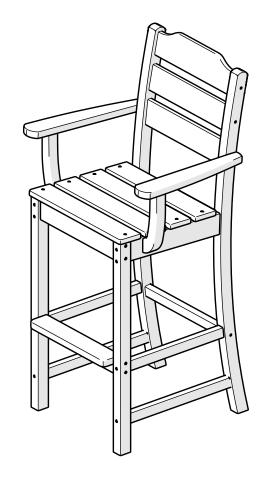

ARTLD202 allen+roth Oakport Bar Arm Chair by Polywood

Thank You

Thank you for choosing POLYWOOD! We hope your new furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!

Join the POLYWOOD Community

Sign up at: polywood.com/welcome

You'll be the first to hear about new product launches, giveaways, special offers, and more!


X

We're Always Here For You

If you have questions regarding assembly instructions, warranty claims, or missing parts, please visit our Help Center at help.polywood.com



For assembly tips and videos visit: polywood.com/assembly

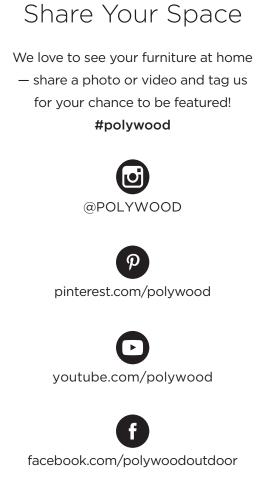


Join thousands of fans in our Outdoor Living Community! facebook.com/groups/polywoodoutdoorliving




Did You Know?


Our long-lasting furniture is made using plastics that could otherwise pollute oceans and overwhelm landfills — and it can also be recycled when the time comes. Better for the planet, better for all.

> Learn more about our story: genuinePOLYWOOD.com

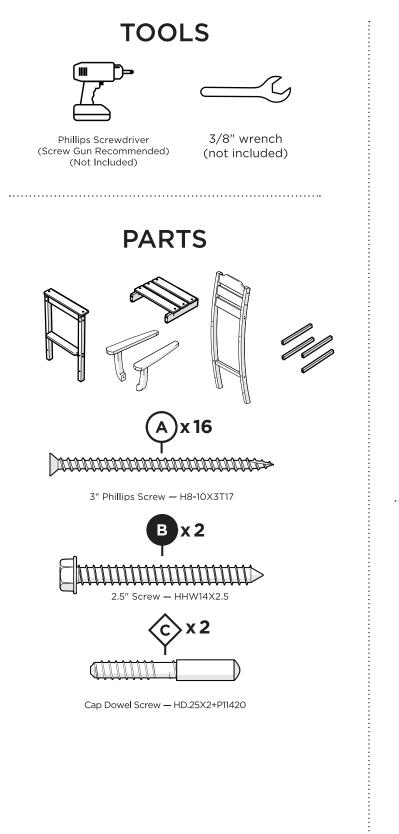

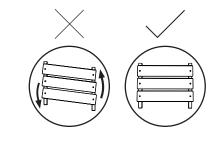

If seat has shifted, please pivot at corners to square up before assembling.

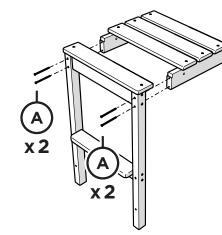


Pre-drilled holes indicate screw placement only. Fully thread screws into material for full engagement



Δ

 $A \times 2 A \times 2$ $A \times 2 A \times 2$ $A \longrightarrow A$

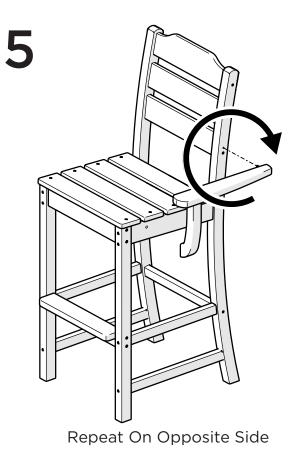

Something missing? Visit **help.polywood.com** Repeat On Opposite Side

