

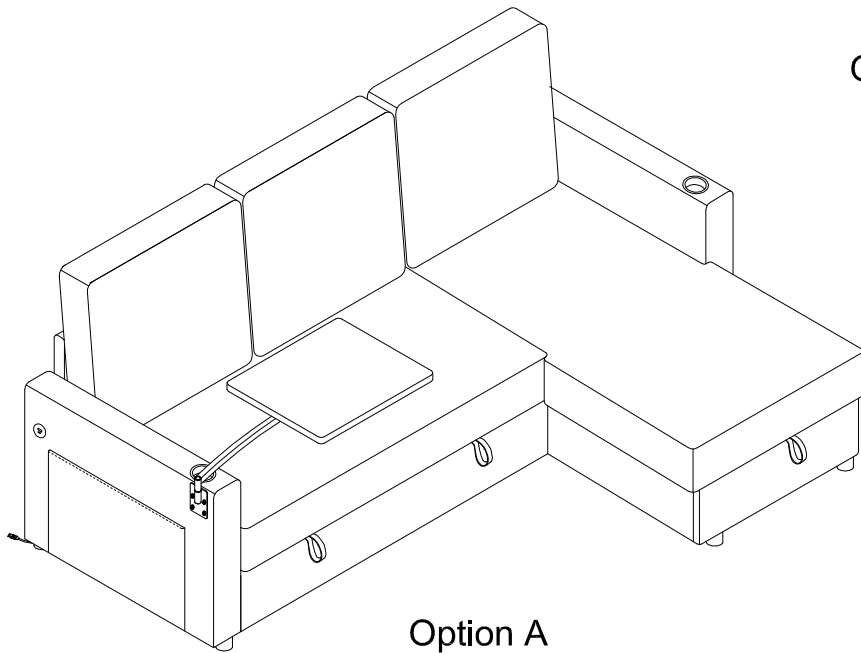


ASSEMBLY INSTRUCTIONS


























256

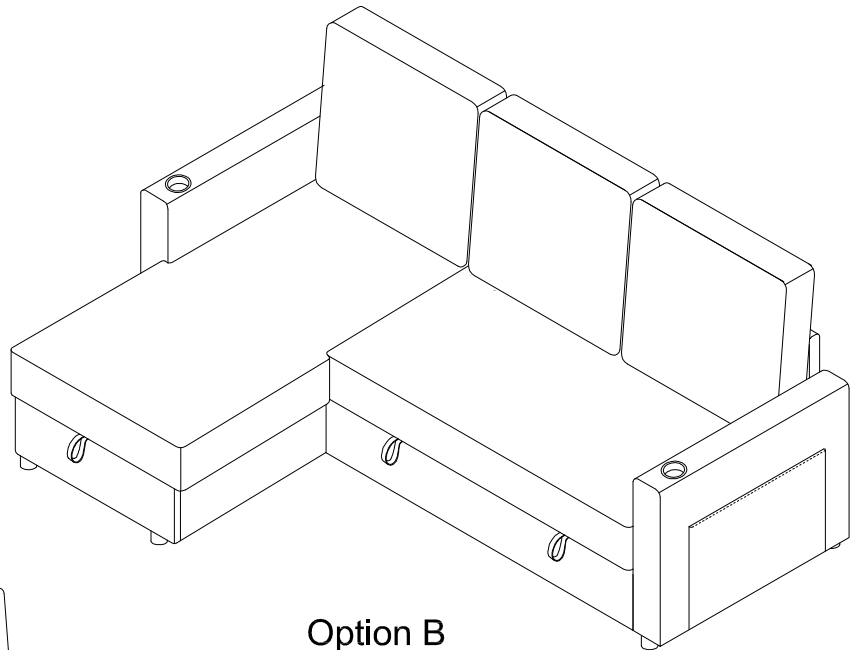





STEP :Packing Details


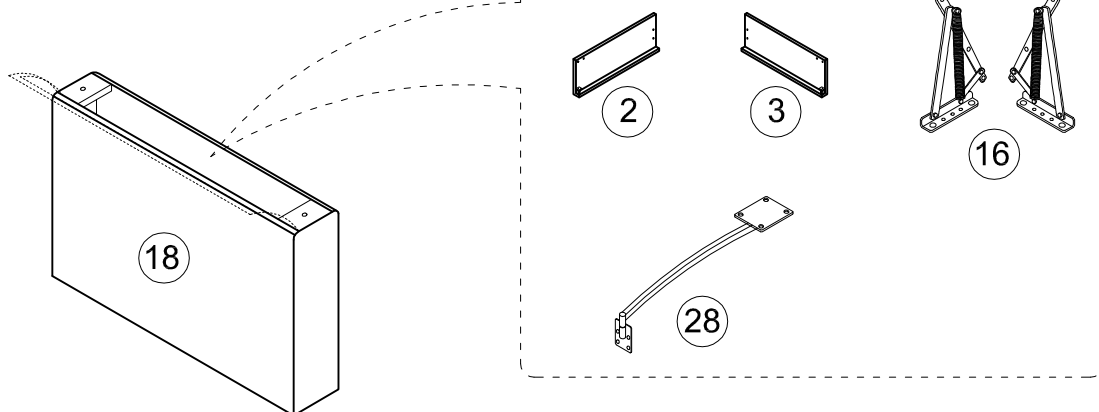


PARTS LIST

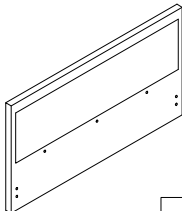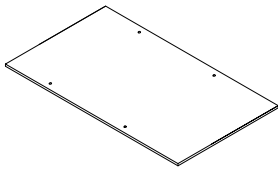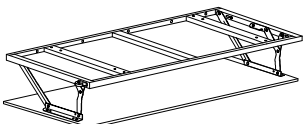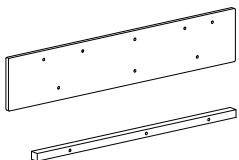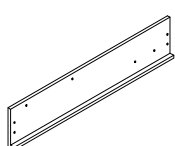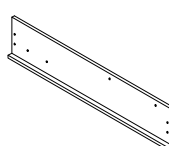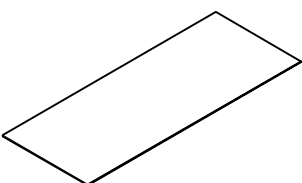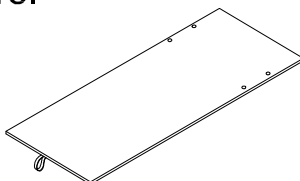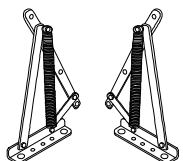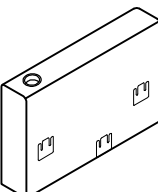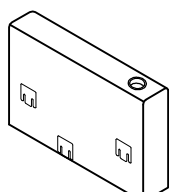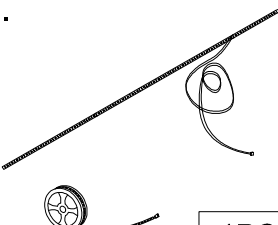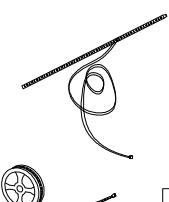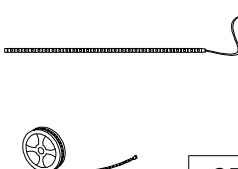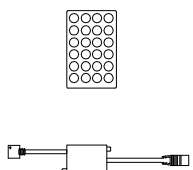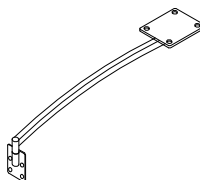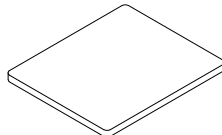PARTS LIST				
1.  1PC	2.  1PC	3.  1PC	4.  1PC	
5.  1PC	6.  1PC	7.  1PC	8.  1SET	
9.  1PC	10.  1PC	11.  1PC	12.  1PC	
13.  1PC	14.  2PCS	15.  1PC	16.  2PCS	
17.  1PC	18.  1PC	19.  6PCS	20.  12PCS	21.  4PCS
22.  1PC	23.  1PC	24.  2PCS	25.  1PC	
26.  1PC	27.  1PC	28.  1PC	29.  1PC	




PARTS LIST

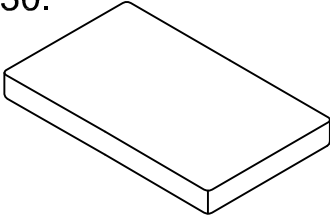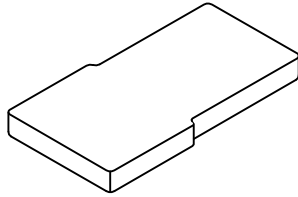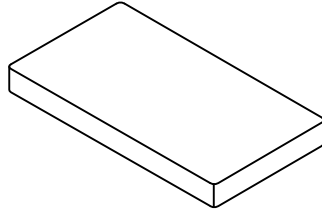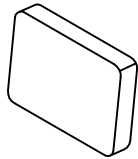30. 	31. 	32. 	33. 
1PC	1PC	1PC	3PCS

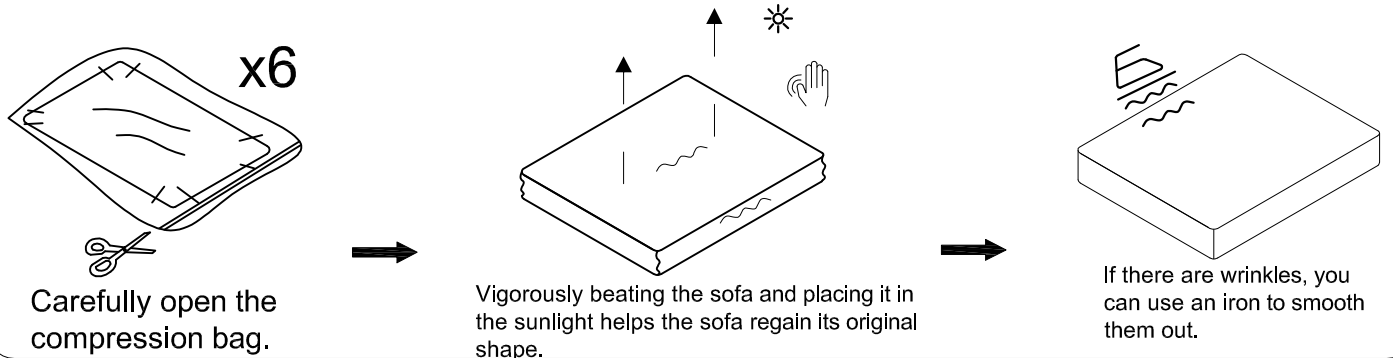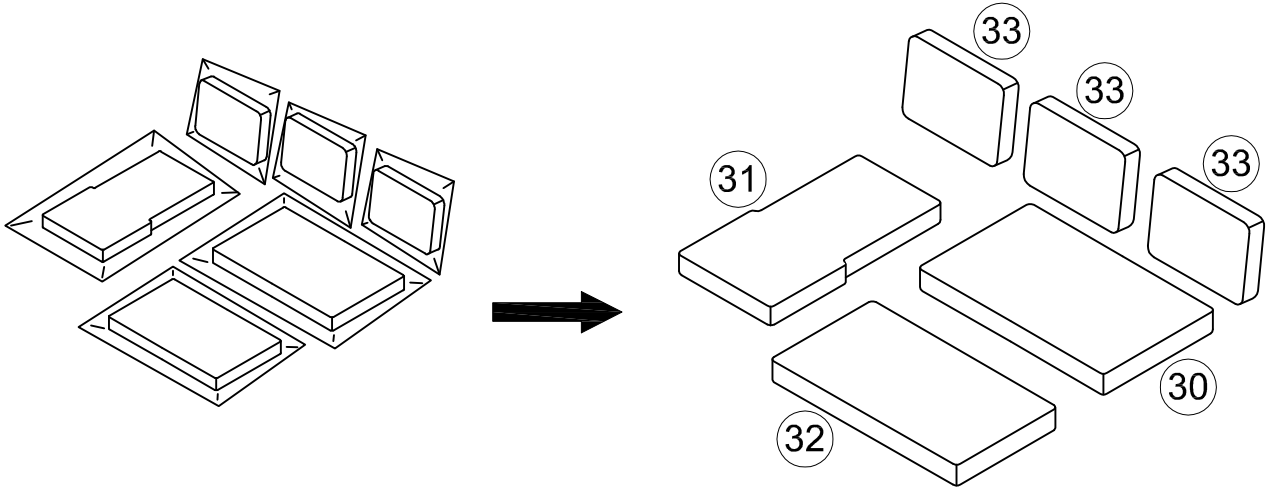


After packing up, place them in somewhere dry and ventilated. After about 72-96hours. it can be restored to the best use condition.

HARDWARE LIST

A. 	B. 	C. 	D. 	E. 
m6*16mm 28PCS	m6*35mm 11PCS	m6*40mm 8PCS	m6*20mm 6PCS	m6*16mm 67PCS
F. 	G. 	H. 	I. 	
m4*65mm 1PC	1PC	m6*20mm 16PCS	m6*30mm 4PCS	


STEP 1

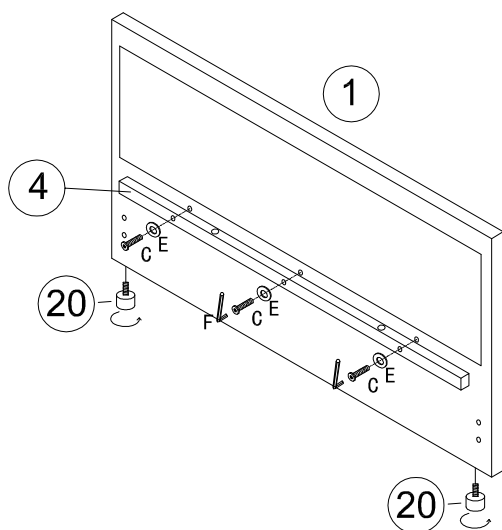

m6*40mm

	C x 3PCS
	E x 3PCS
	F x 1PC


STEP 2

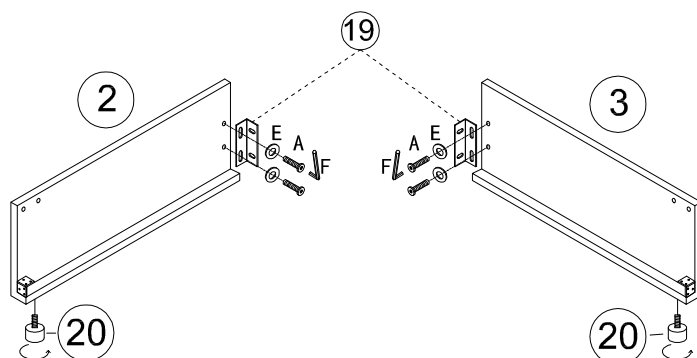

m6*16mm


	A x 4PCS
	E x 4PCS
	F x 1PC

STEP 3

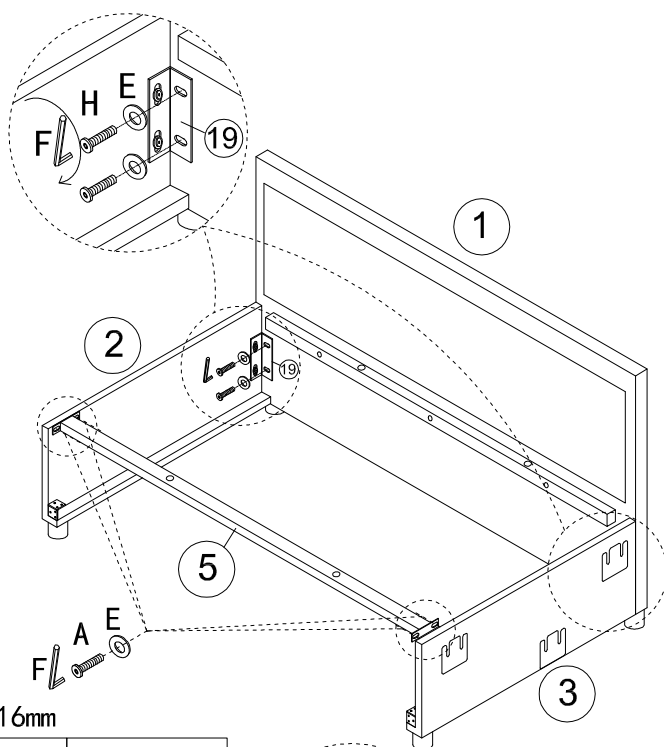


m6*16mm

	A x 4PCS
	H x 4PCS
	E x 8PCS
	F x 1PC

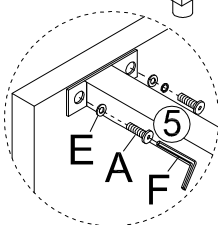


STEP 4

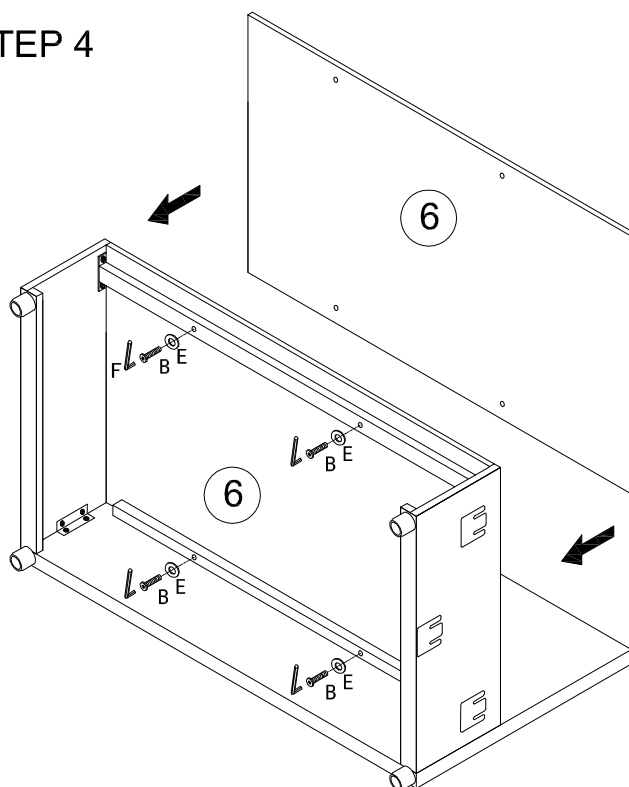

m6*35mm

	B x 4PCS
	E x 4PCS
	F x 1PC


STEP 5

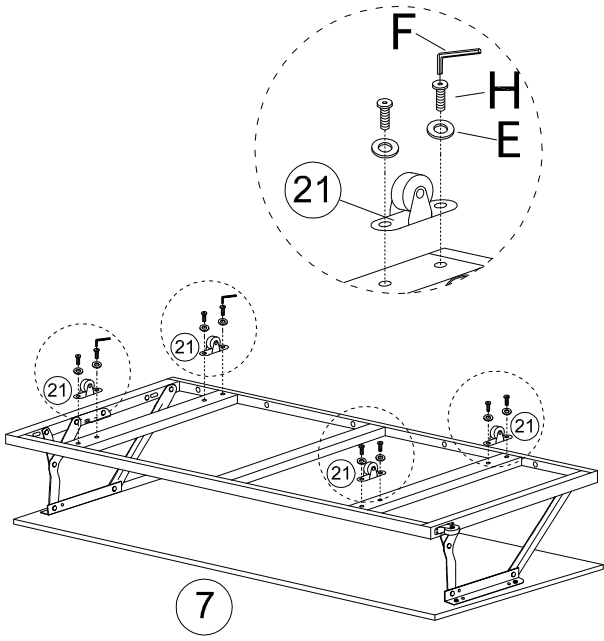

m6*20mm

	H x 8PCS
	E x 8PCS
	F x 1PC


STEP 6

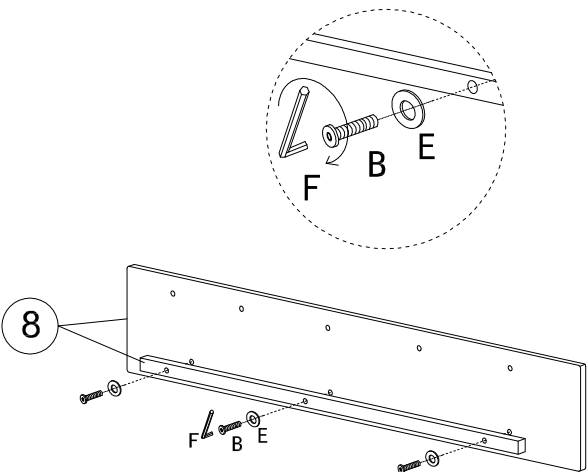

m6*35mm


	B x 3PCS
	E x 3PCS
	F x 1PC

STEP 7

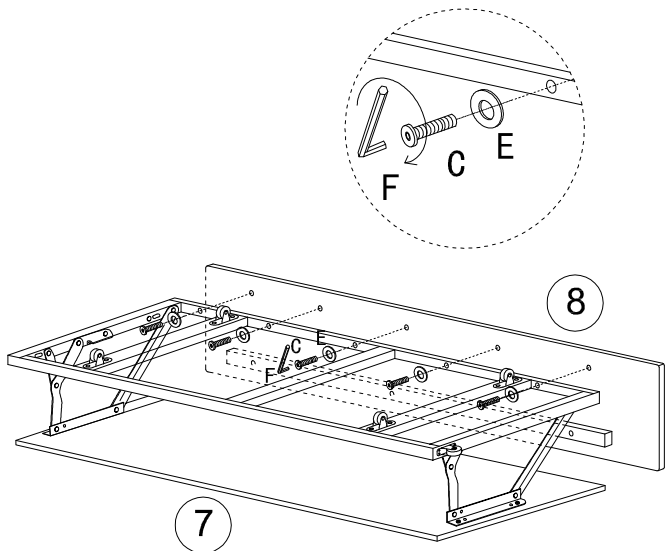


m6*40mm

	C x 5PCS
	E x 5PCS
	F x 1PC

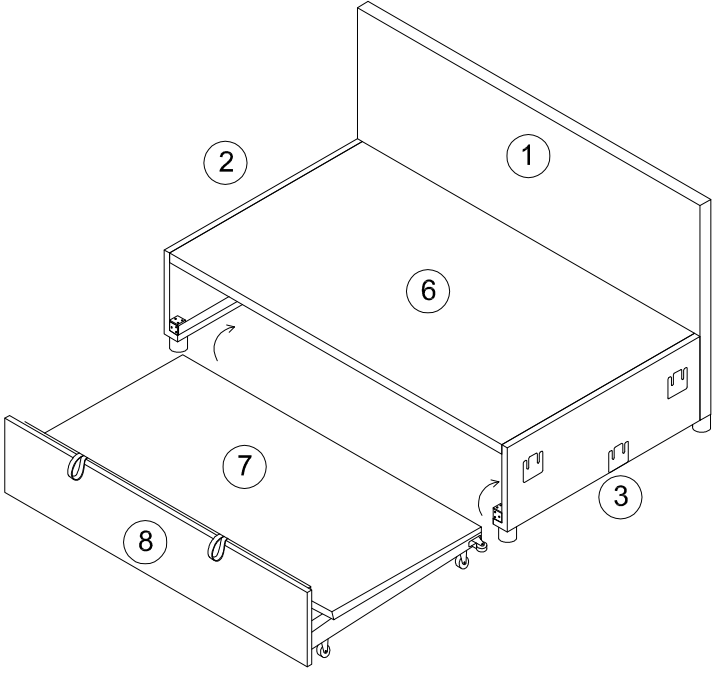


STEP 8

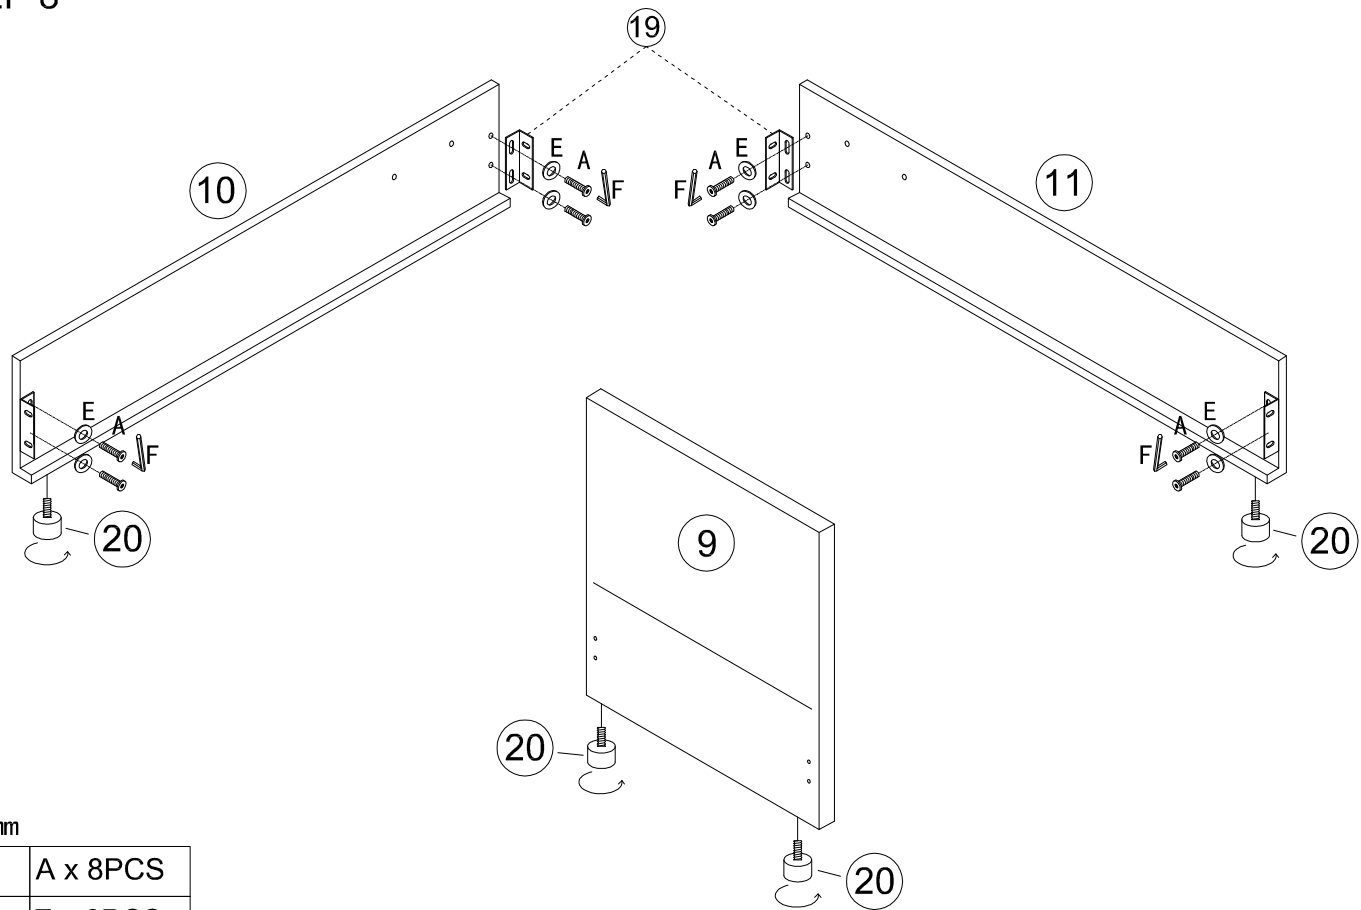

m6*16mm

	A x 8PCS
	E x 8PCS
	F x 1PC

STEP 9

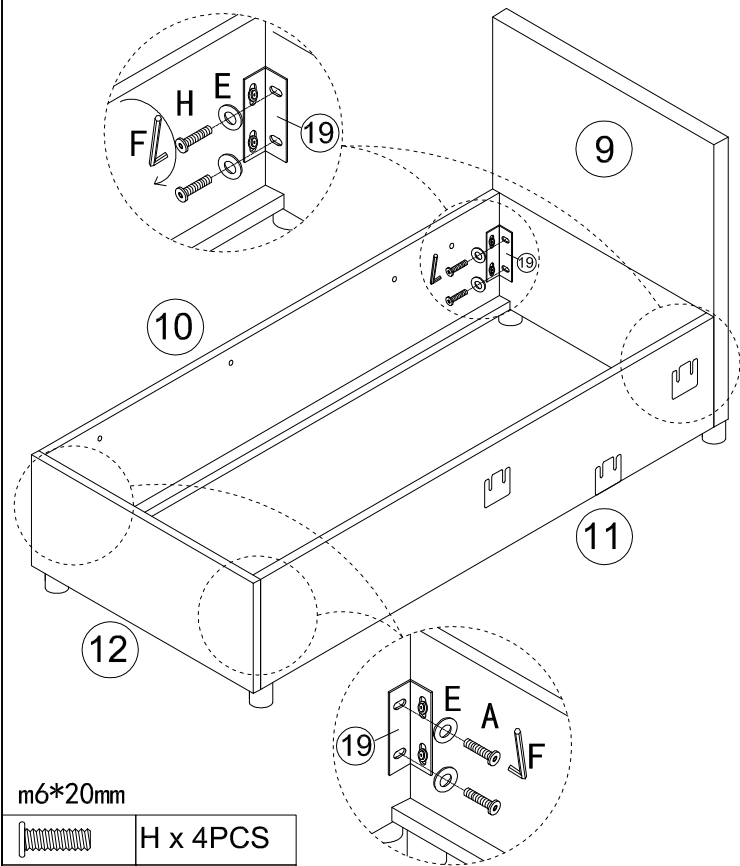


m6*20mm

	H x 4PCS
	E x 8PCS
	F x 1PC


m6*16mm

	A x 4PCS
---	----------

STEP 10

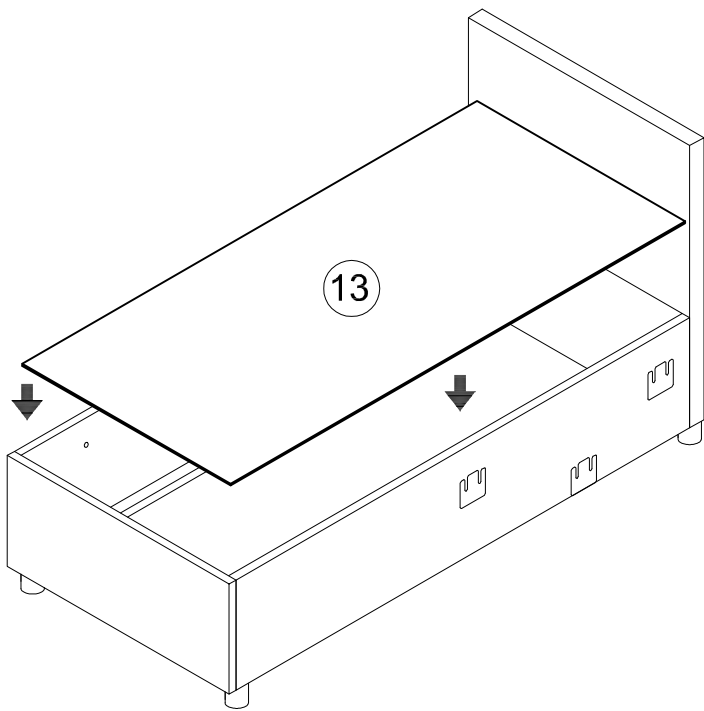


STEP 11

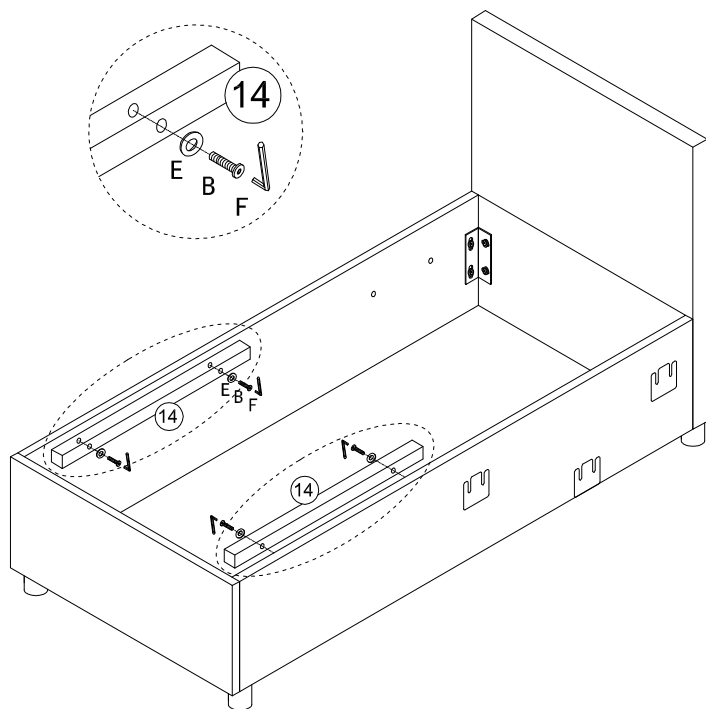

m6*35mm

	B x 4PCS
	E x 4PCS
	F x 1PC


STEP 12

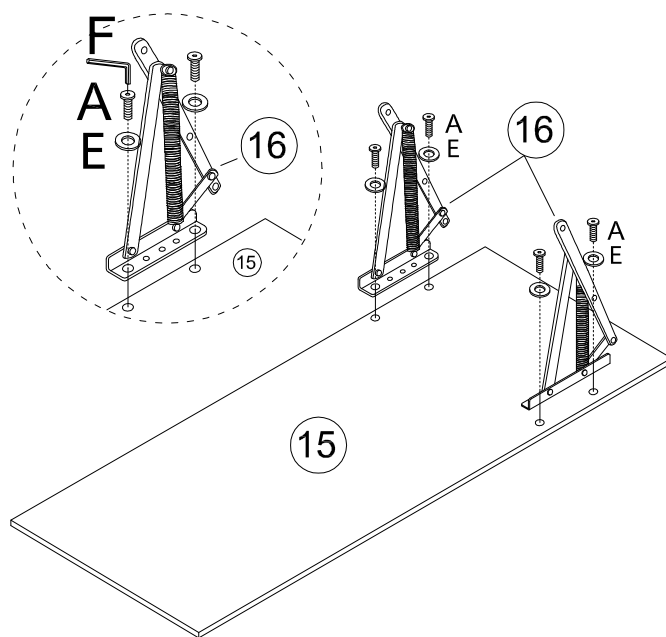

m6*16mm

	A x 4PCS
	E x 4PCS
	F x 1PC


STEP 13

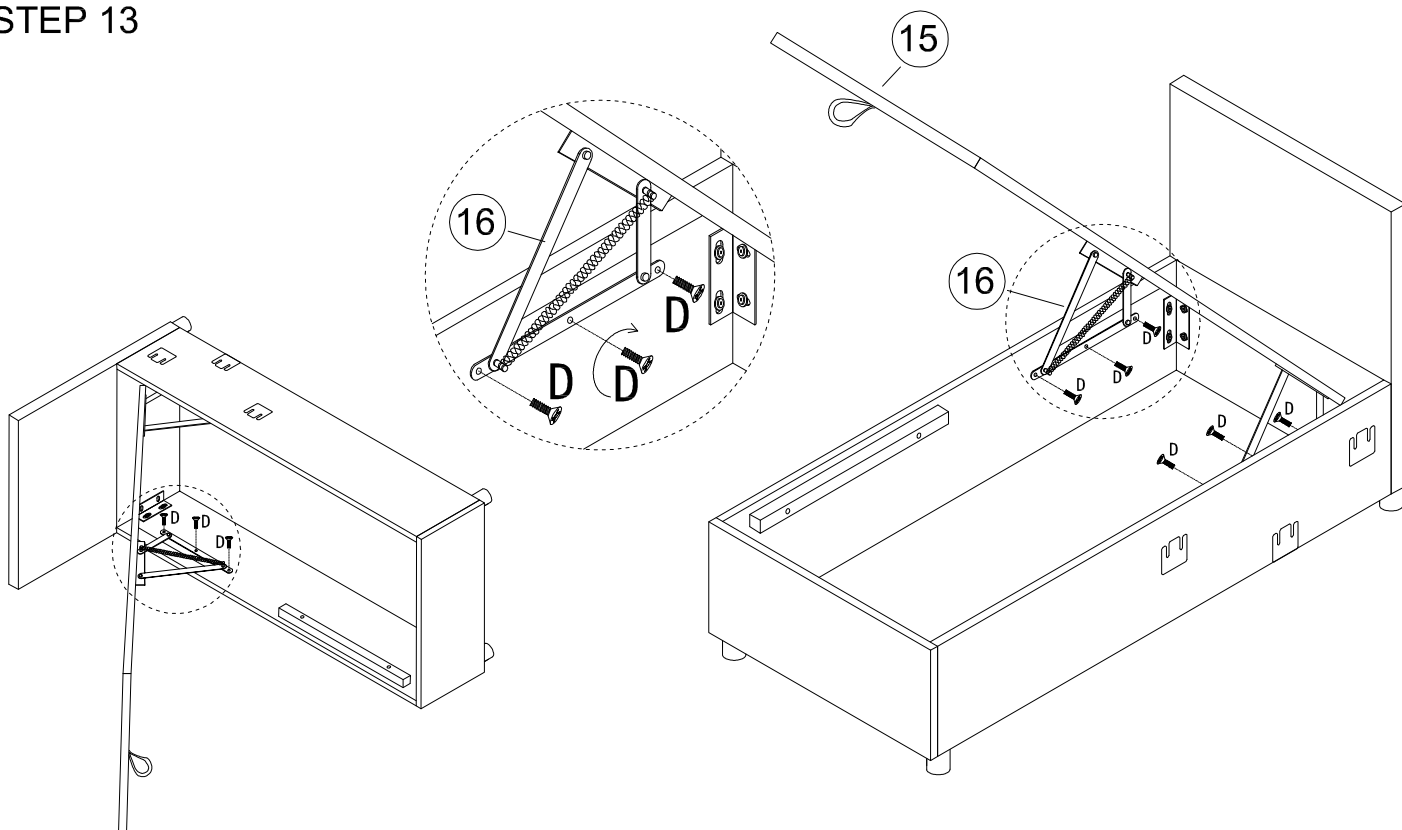


m6*20mm

	D x 6PCS
	G x 1PC


STEP 14

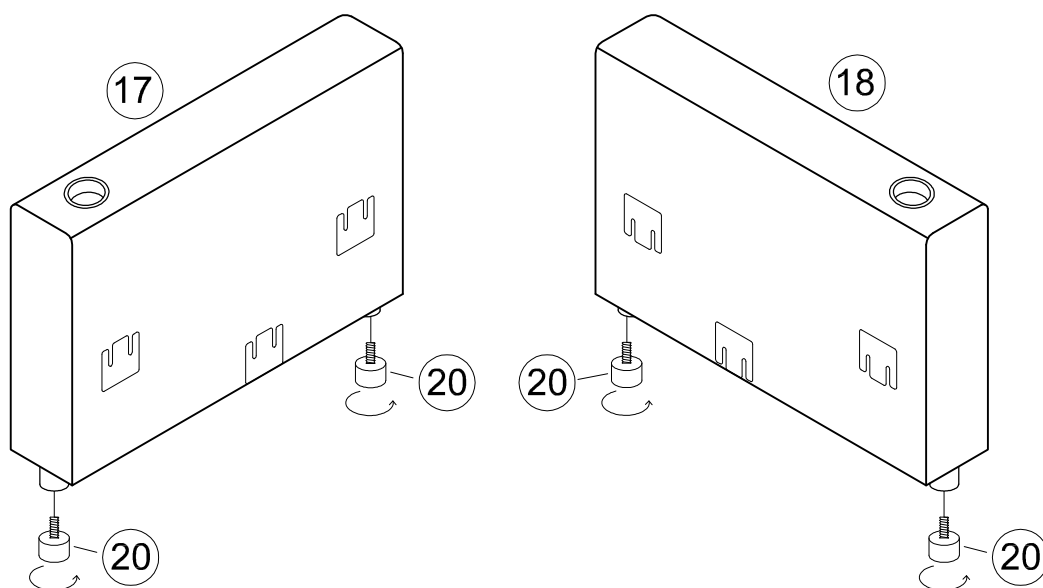

STEP 15

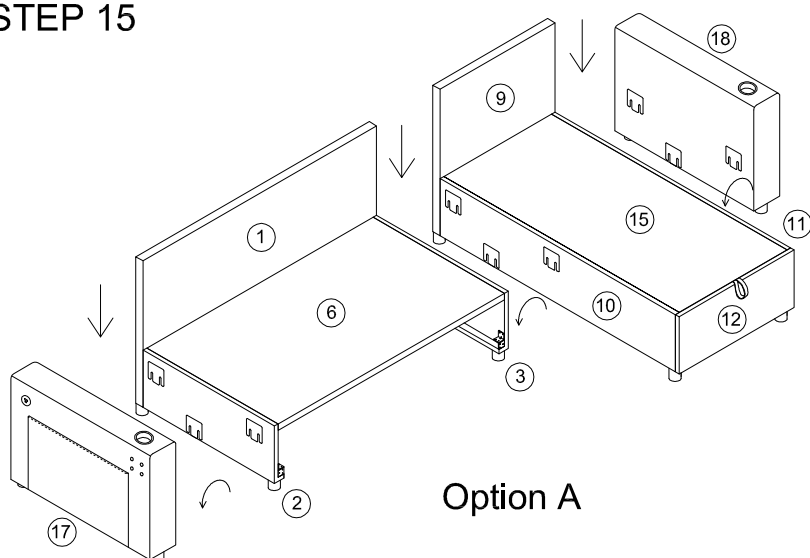


Option A

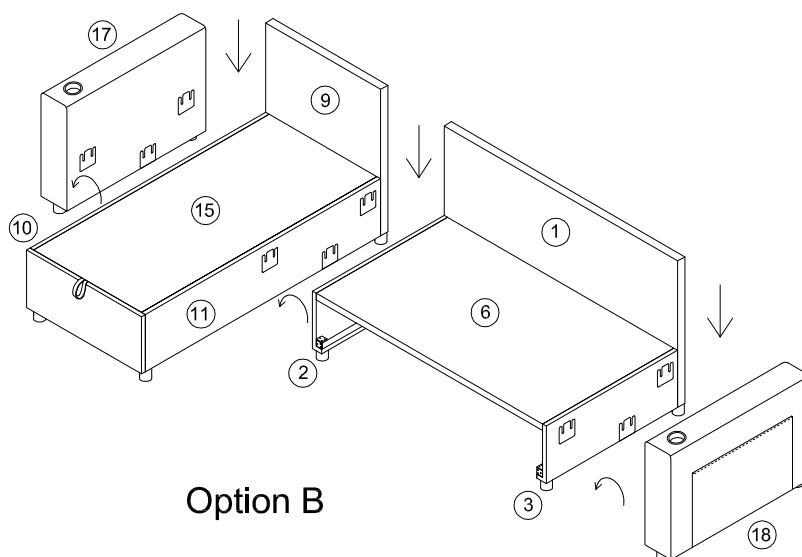


Option B

From left to right according to the assembly order installation, the armrest has left (17) and right (18) which direction cannot be changed.

STEP 16

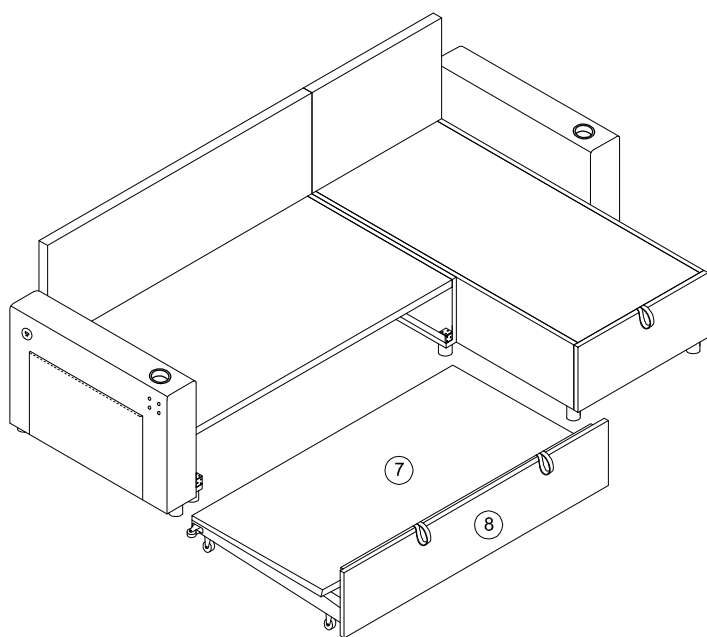


Option A

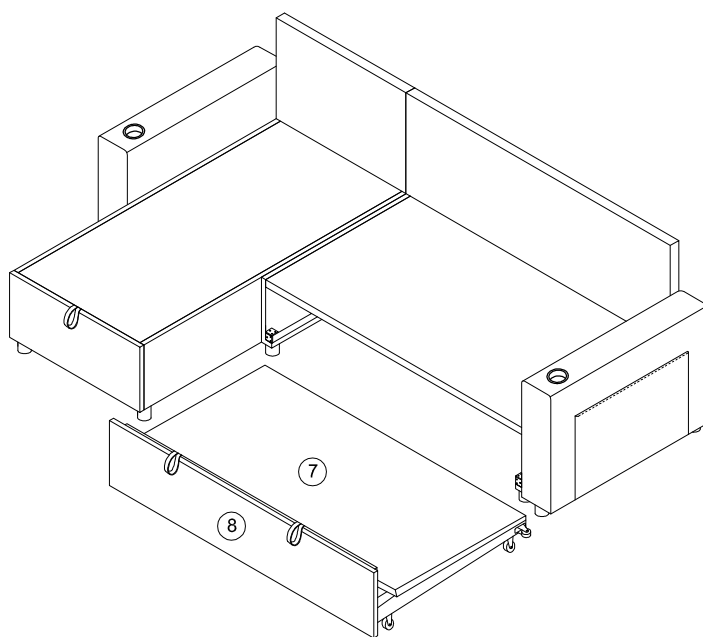


Option B


STEP 17

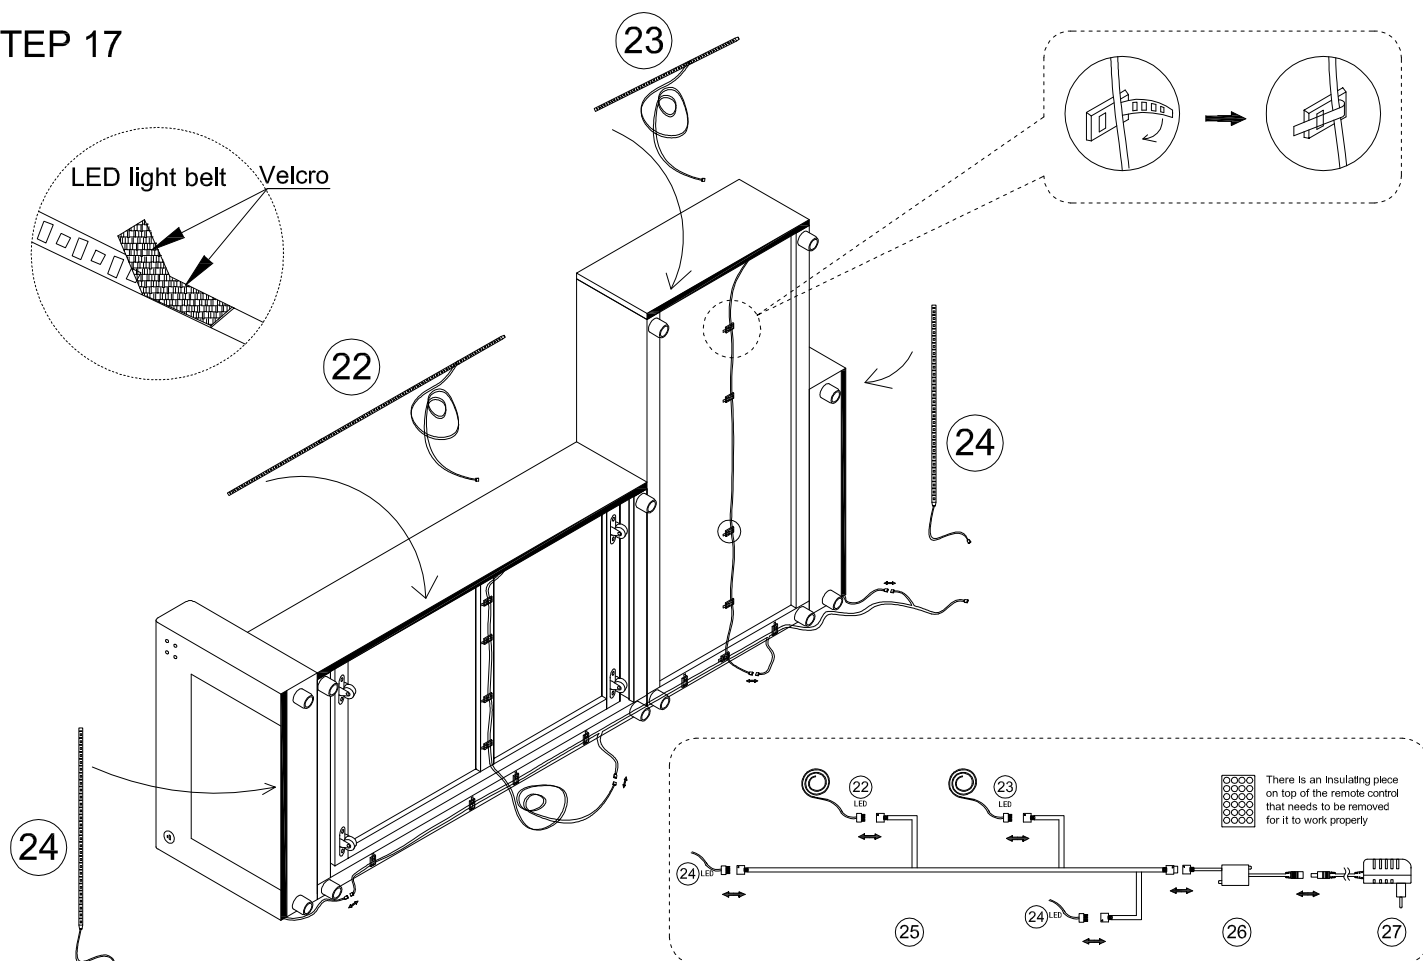


STEP 18

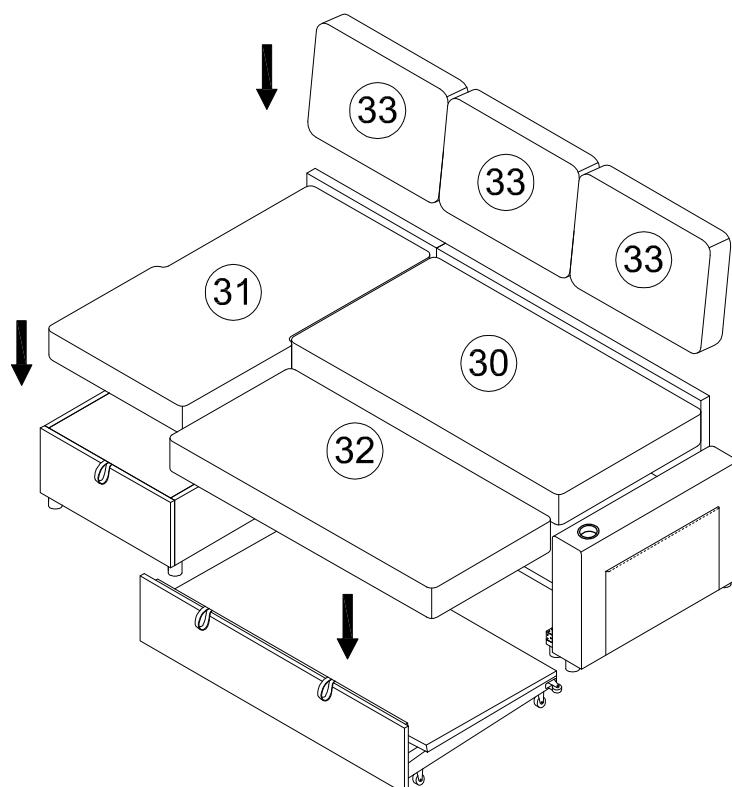


STEP 19

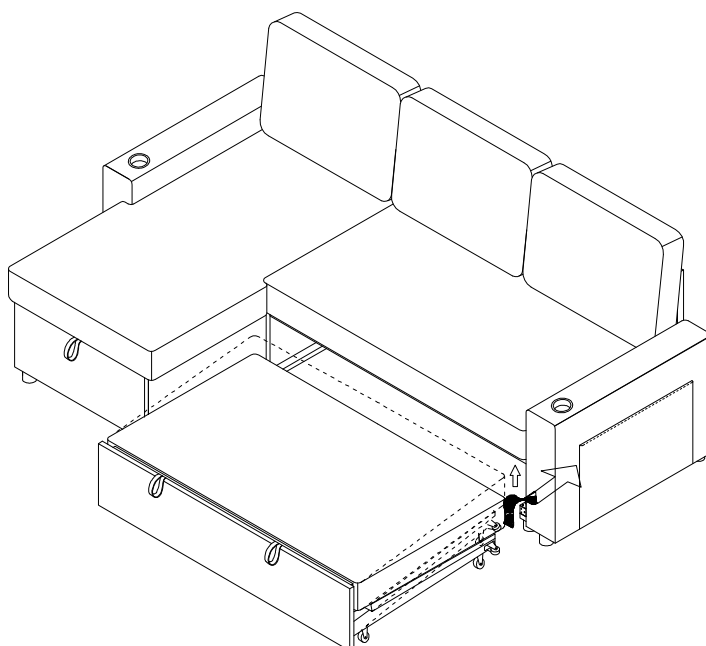


STEP 20

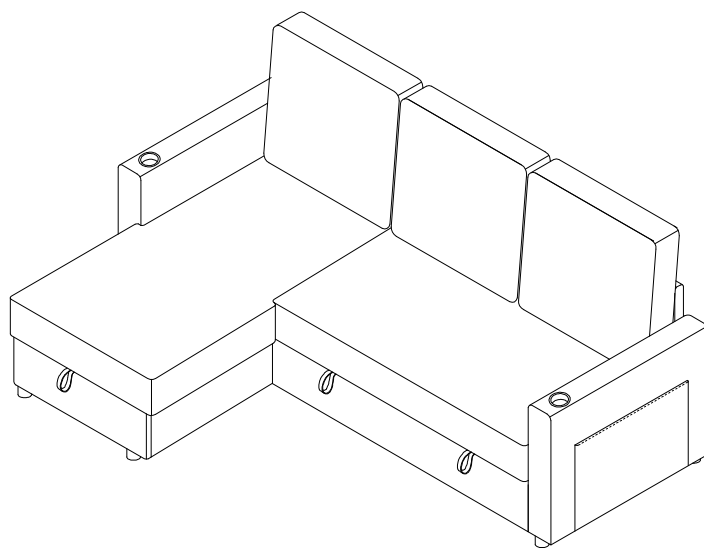


STEP 21

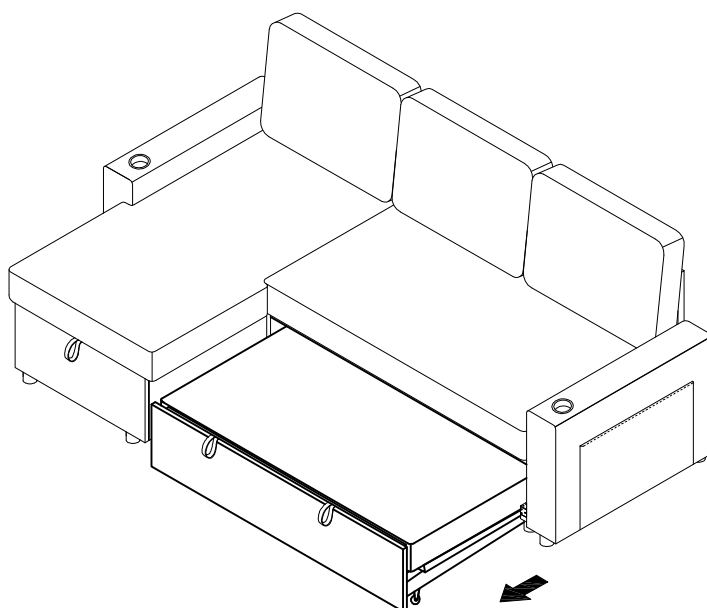


STEP 22

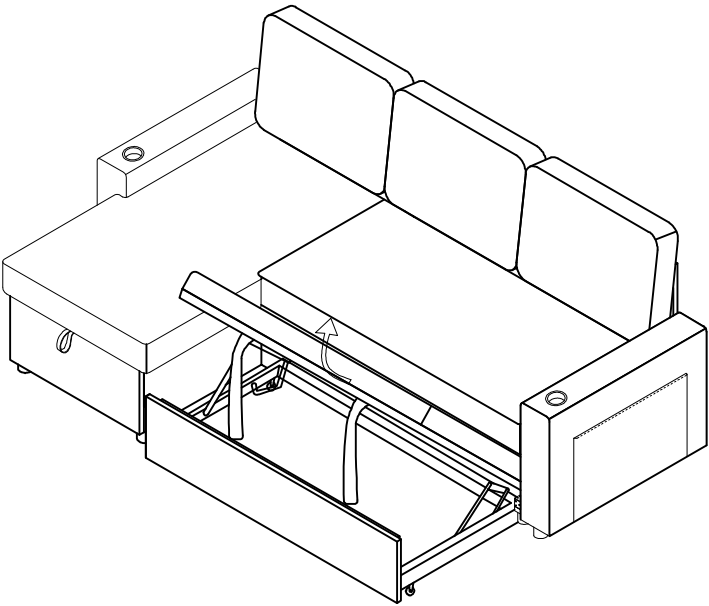

STEP 23

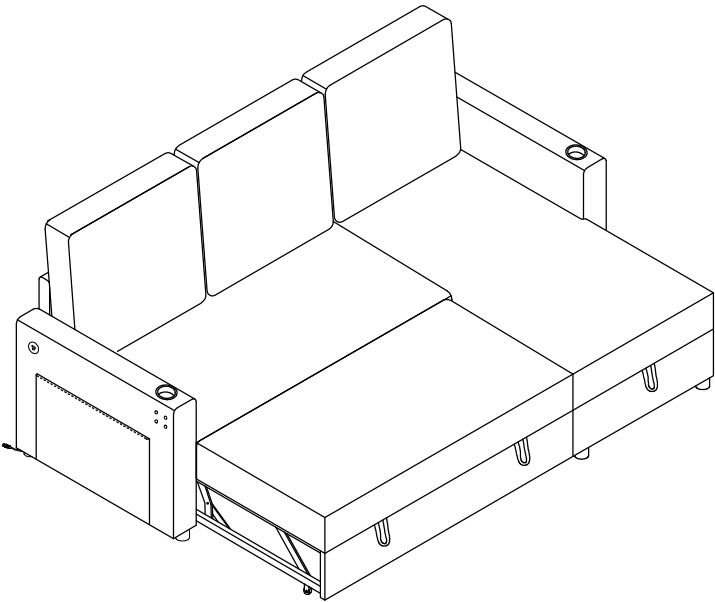


Option A

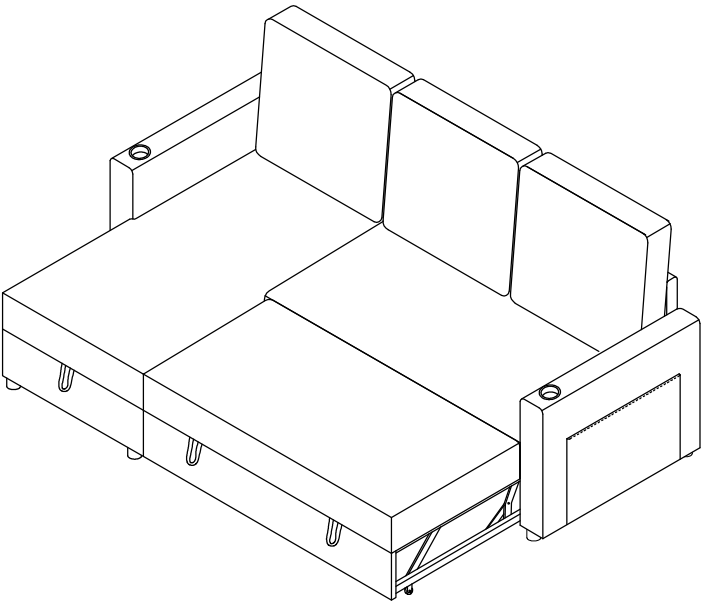

Option B


STEP 24

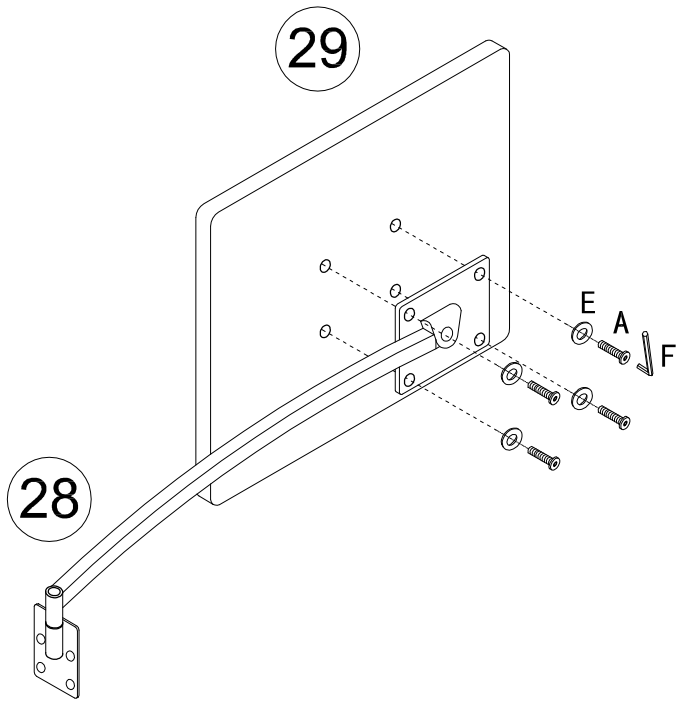

m6*16mm

	A x 4PCS
	E x 4PCS
	F x 1PC


STEP 25

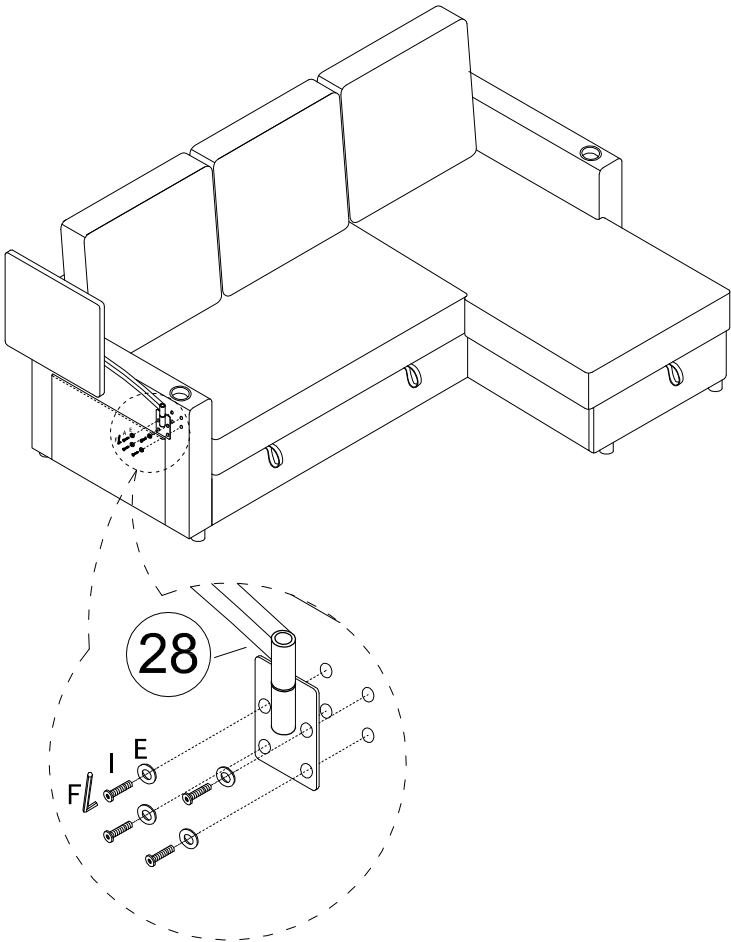


m6*30mm

	I x 4PCS
	E x 4PCS
	F x 1PC

STEP 26

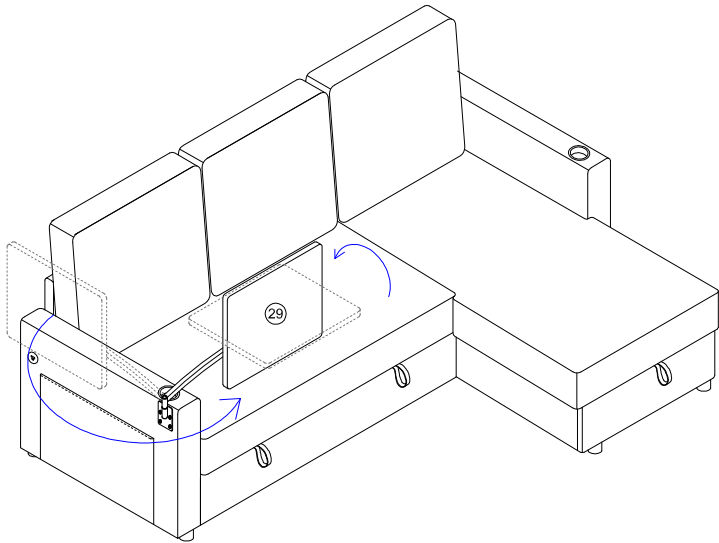

STEP 27

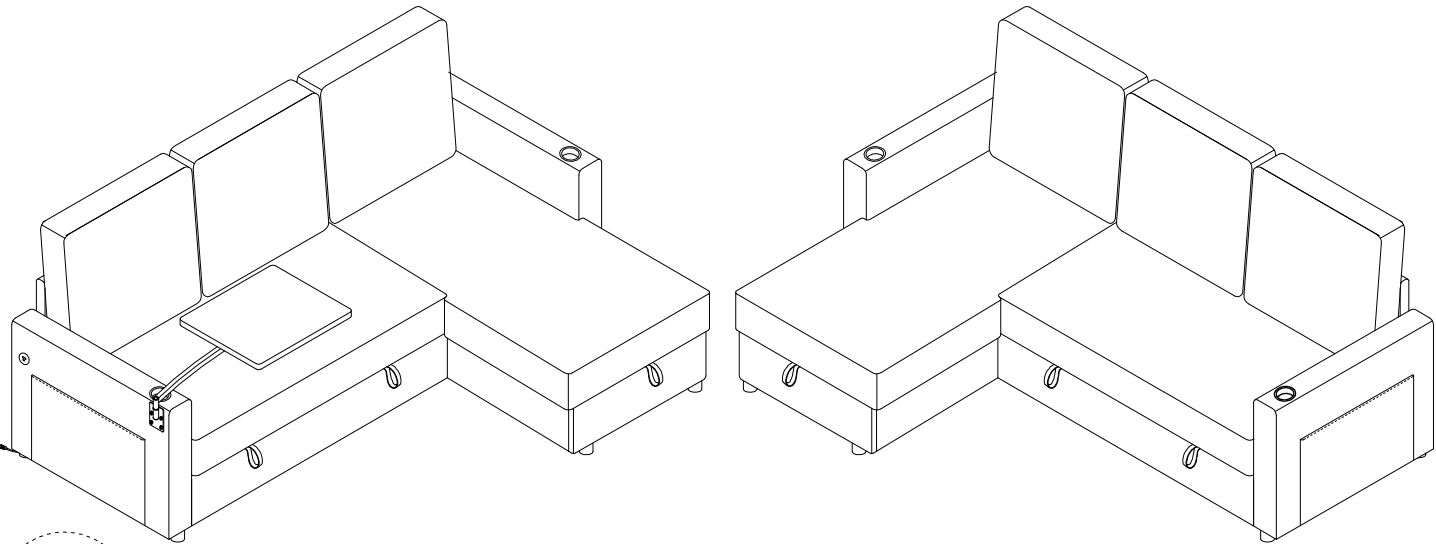

Option A

Option B

