
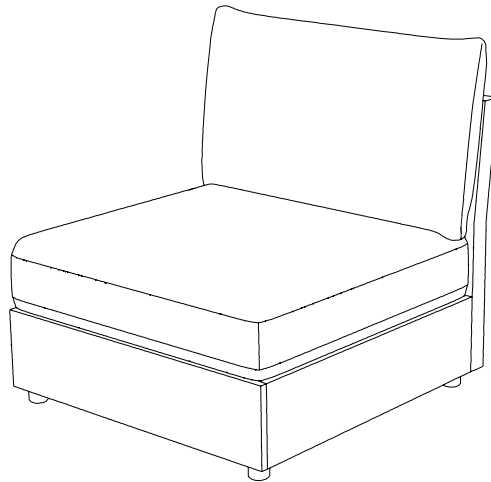
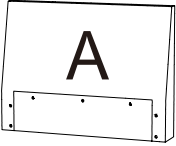
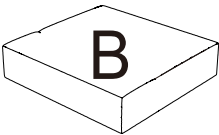
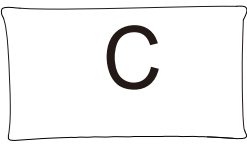


ASSEMBLY INSTRUCTION





ITEM NO.:D88083.D88084.D88085.D88086-A

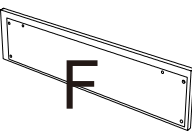

PARTS LIST

 A Backrest x1	 B Seat cushion x1	 C Back cushion x1	 F Base Frame Front Panel x1
 G Base Frame Side Panel x2	 H Support Bar x2	 M Slats x1	

HARDWARE LIST

 1 1/4*1.8cm x16	 2 1/4*4.5cm x4	 3 19mm x4	 5 40mm*100mm x1
 7 x4	 8 x4	 9 x2	




BEFORE ASSEMBLY

Open up Velcro of Non-Woven Fabric cover on the bottom to remove hardware, legs and parts.

1. Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.


2. After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.

3. Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package.

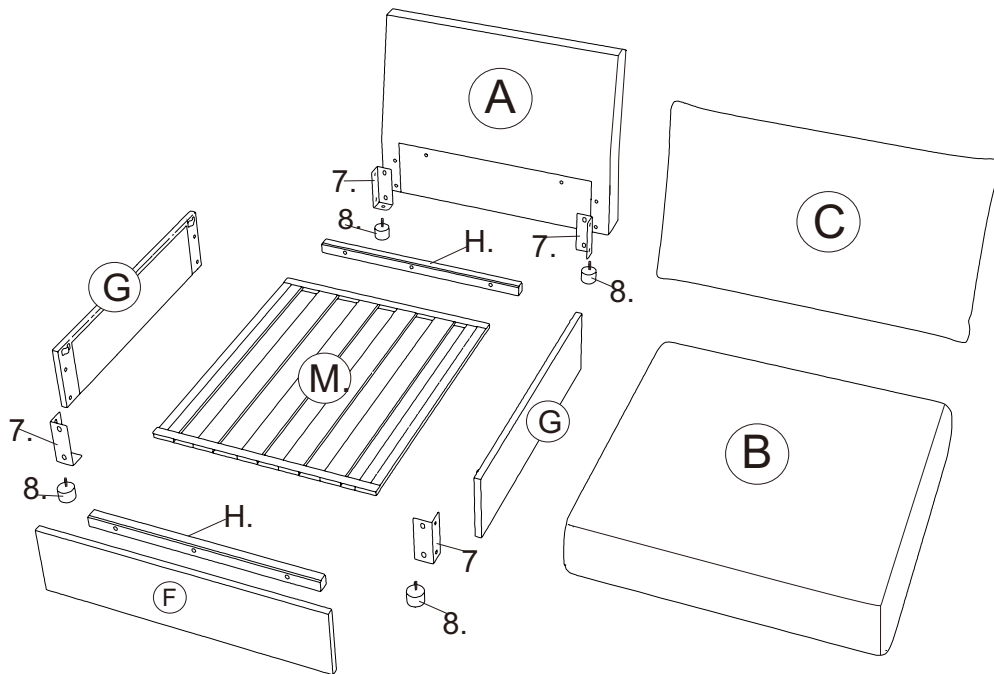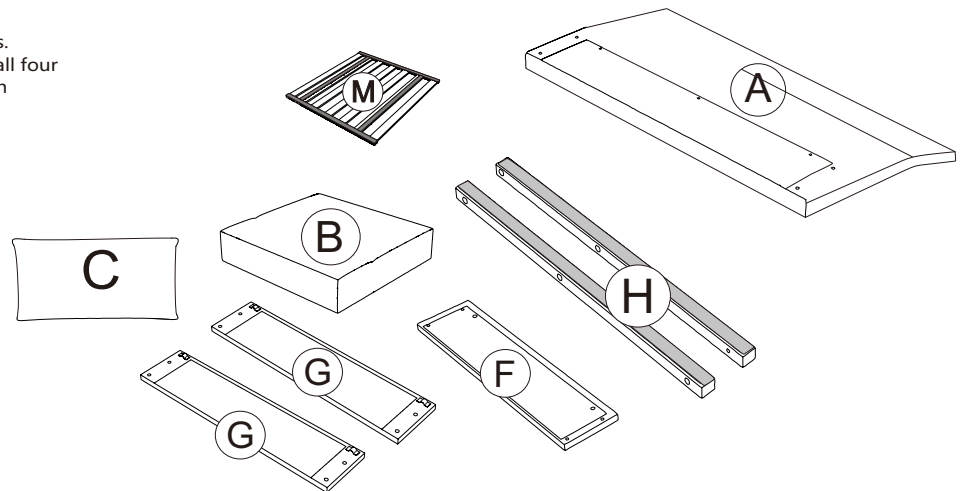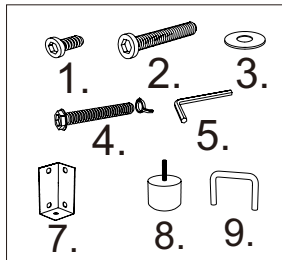


SOFA ASSEMBLY INSTRUCTION


Step1

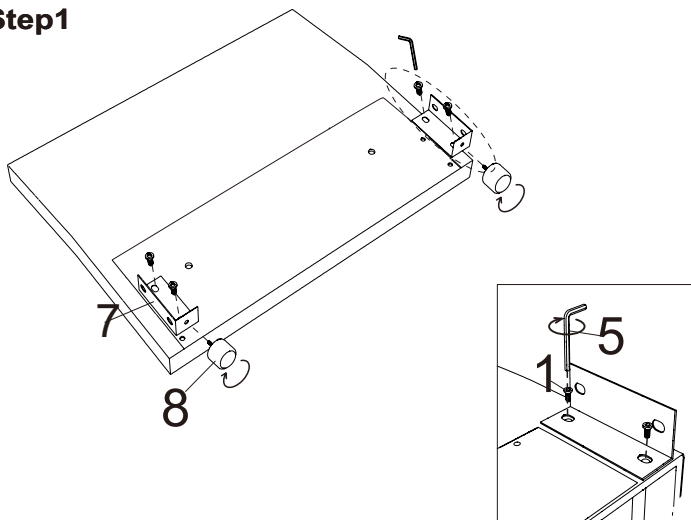


Step2

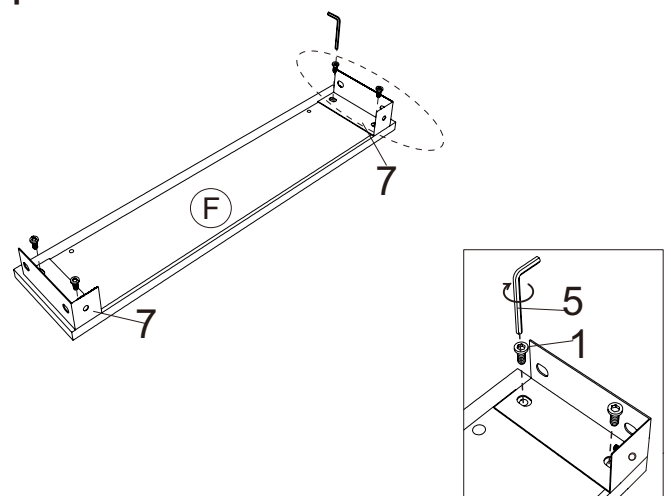



Step3

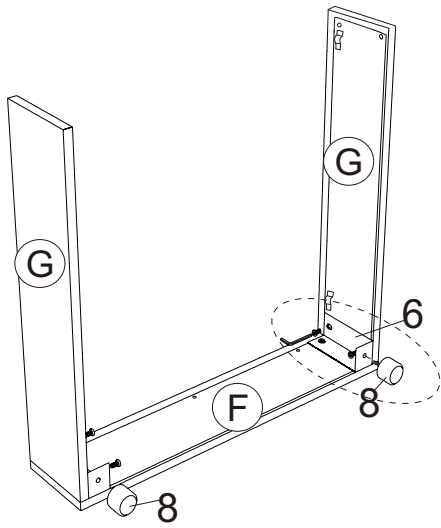


Make sure to align Part#G,F, and 7 at the same level.
If there is any issue, use the oval screw holes to adjust.

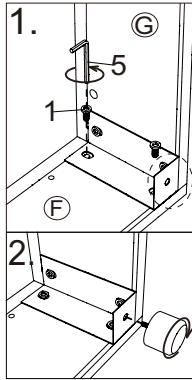


Step4

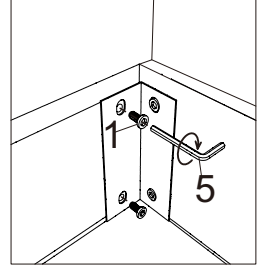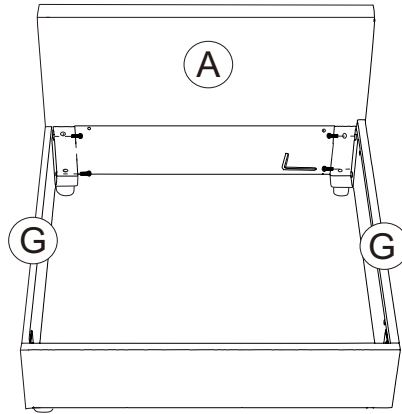


Step5

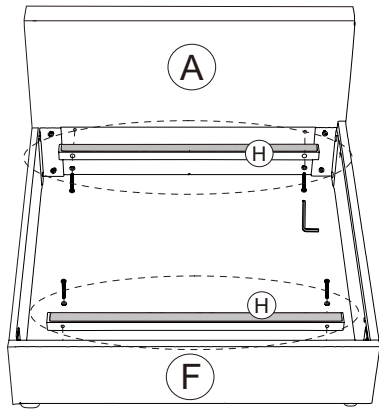


Face the Velcro upward.

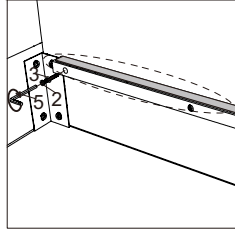

Step6

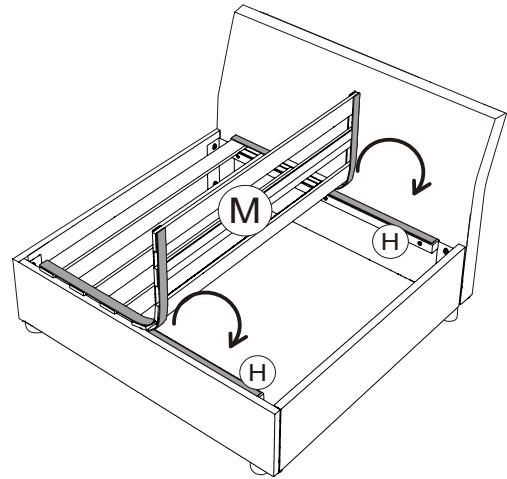


Step7

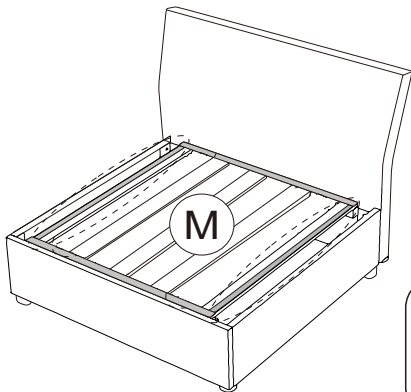


Face the Velcro upward.

Step8

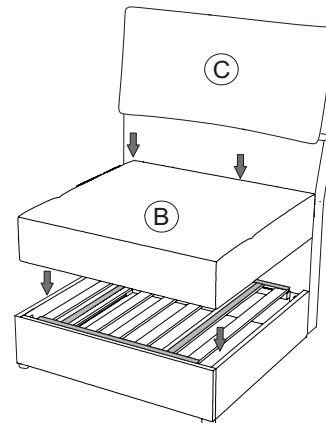


Step9



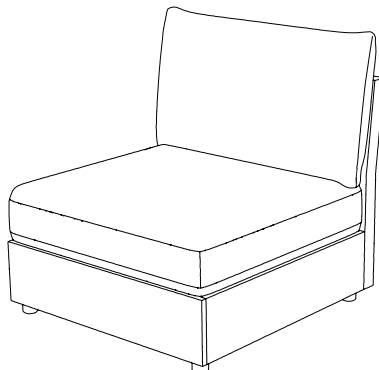


ASSEMBLY INSTRUCTION





ITEM NO.:D88083-D88084-D88085-D88086-C

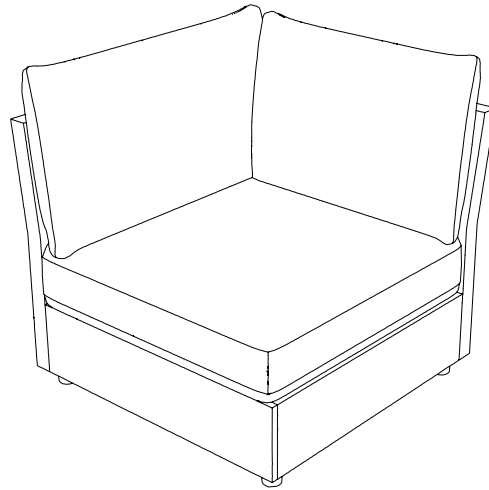

PARTS LIST

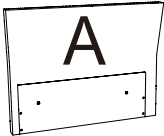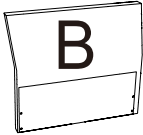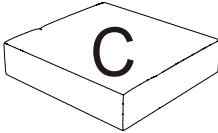 Backrest x1	 Backrest x1	 Seat cushion x1	 Back cushion x1
 Back cushion x1	 Base Frame Front Panel x1	 Base Frame Side Panel x1	 Support Bar x2
 Slats x1			




HARDWARE LIST

 1 1/4*1.8cm x16	 2 1/4*4.5cm x4	 3 19mm x4	 5 40mm*100mm x1
 7 x4	 8 x4	 9 x2	

BEFORE ASSEMBLY


Open up Velcro of Non-Woven Fabric cover on the bottom to remove hardware, legs and parts.

1. Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.
2. After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.
3. Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package.

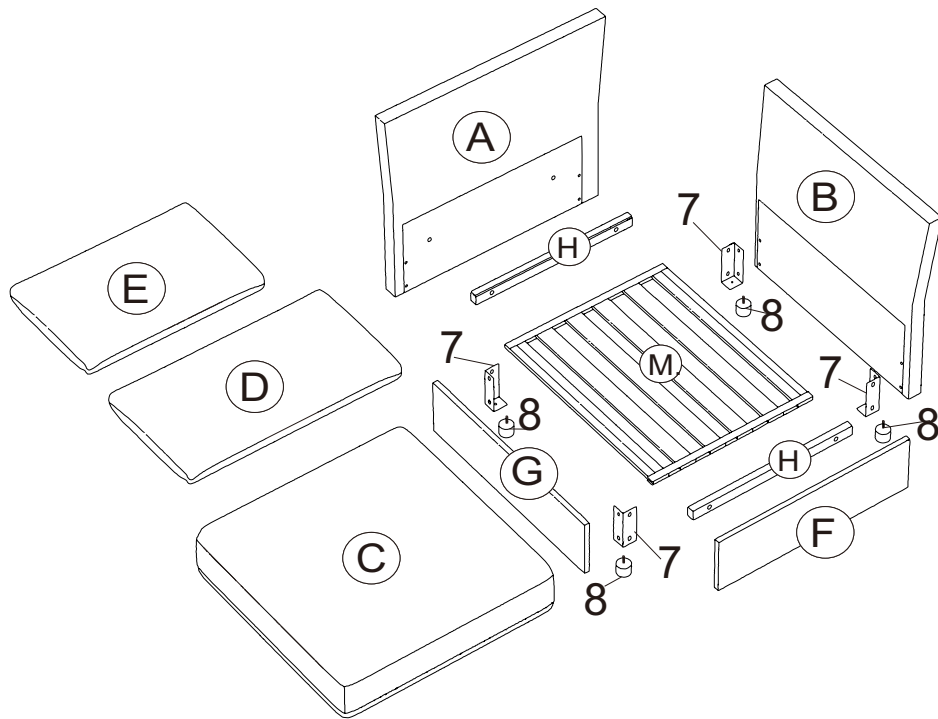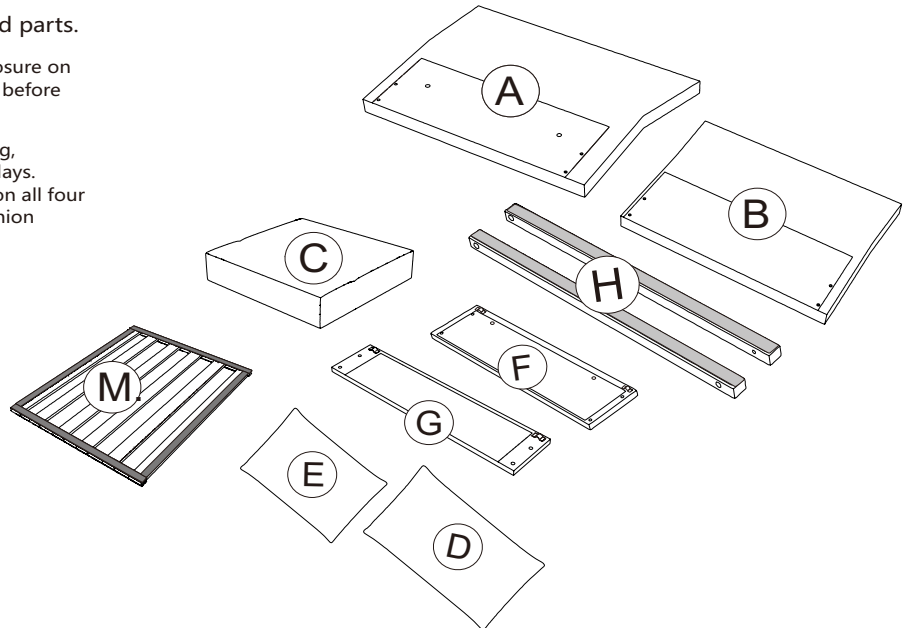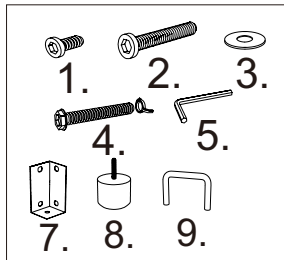


SOFA ASSEMBLY INSTRUCTION



Step1

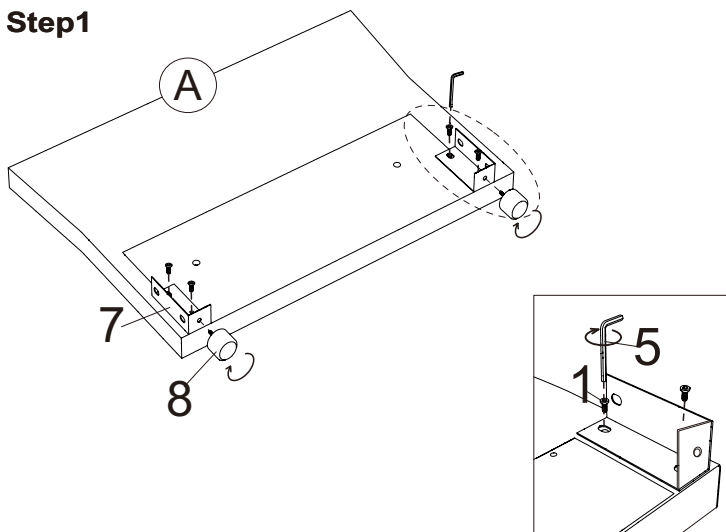



Step2

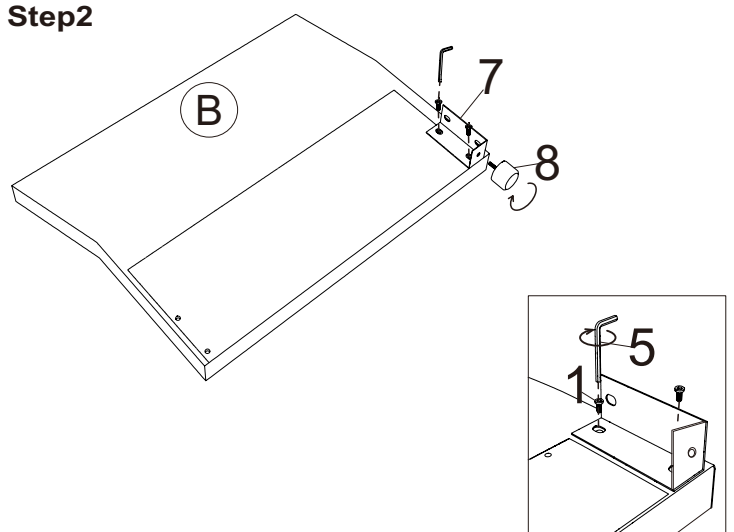


Step3

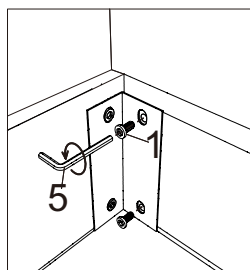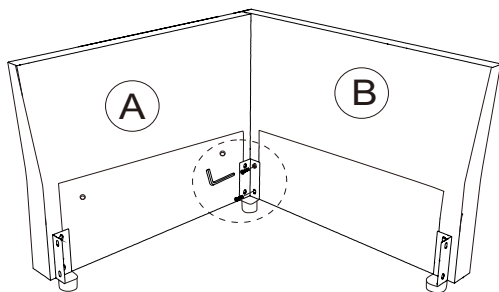


Step4

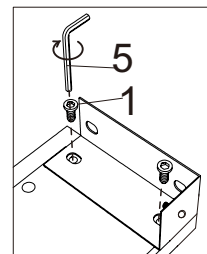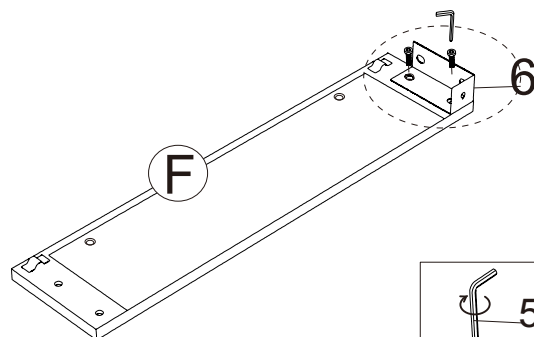



Step5

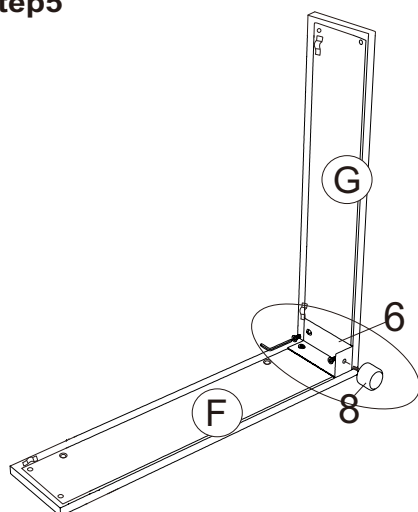


Make sure to align Part#F,G, and 7 at the same level. If there is any issue, use the oval screw holes to adjust.

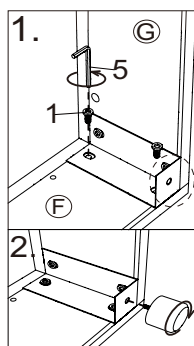


Step6

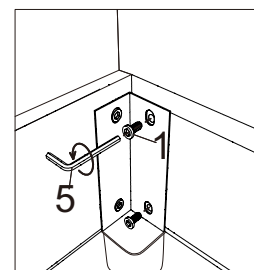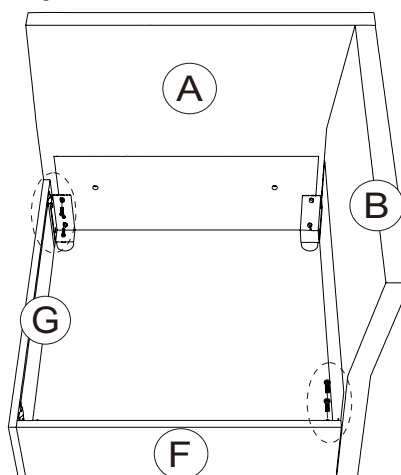


Step7

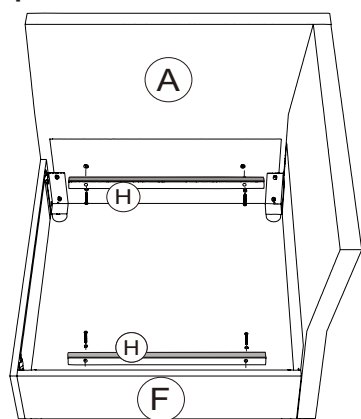


Face the Velcro upward.

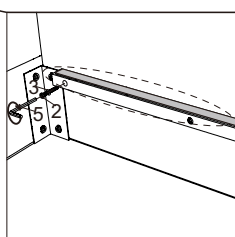

Step8


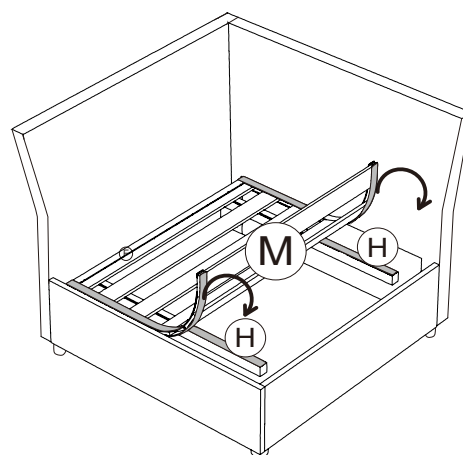


Step9

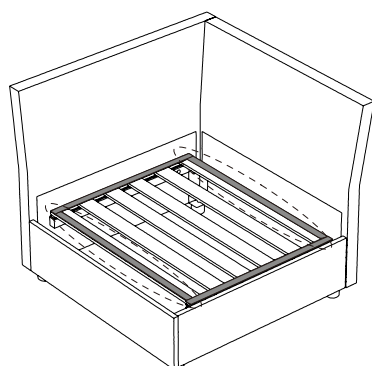


Face the Velcro upward.

Step10

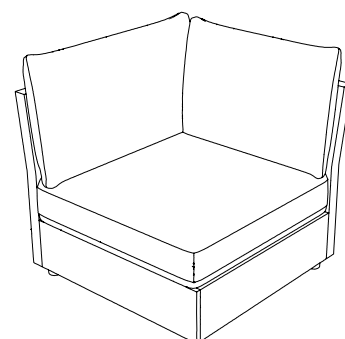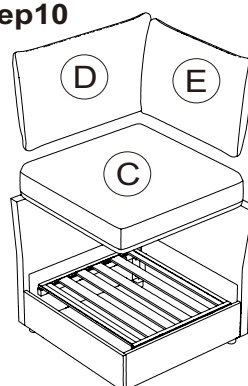


ASSEMBLY INSTRUCTION

ITEM NO:..D88083.D88084.D88085.D88086-O

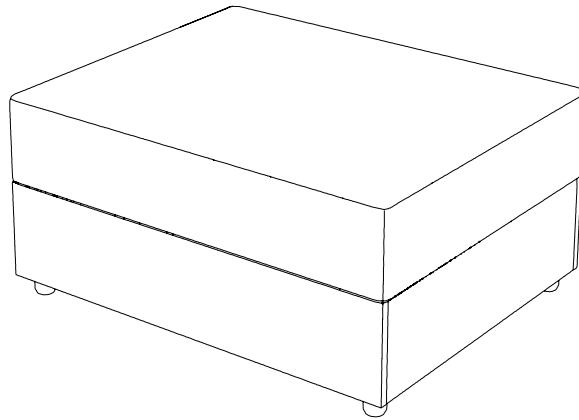


PARTS LIST

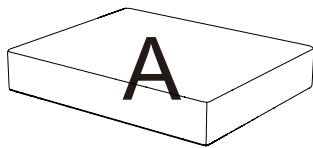


Seat cushion

x1

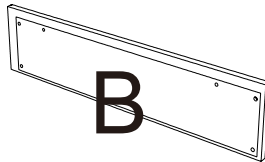

Base Frame Front Panel

x2

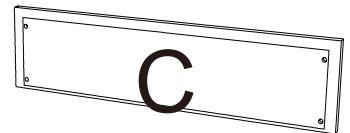

Base Frame Side Panel

x2



Support Bar

x2



Slats

x1


HARDWARE LIST



1/4*1.8cm

1

x16



1/4*4.5cm

2


x4



18mm

3


x4



40mm*100mm


5

x1



x4

8



x4




BEFORE ASSEMBLY

Open up Velcro of Non-Woven Fabric cover on the bottom to remove hardware, legs and parts.

1. Please open the black woven fabric with Velcro closure on the bottom of the frame then cut off the black straps before removing the parts for assembly.


2. After removing the cushion from the compress bag, please allow air to flow through the cushion for few days. You can try to fluff cushion by push in and push out on all four sides of the cushion. Hitting the top/front of the cushion with your hand to fluff them after installation.

3. Please allow at least 24 hours for the cushions to recover to its natural state after removing from the package.

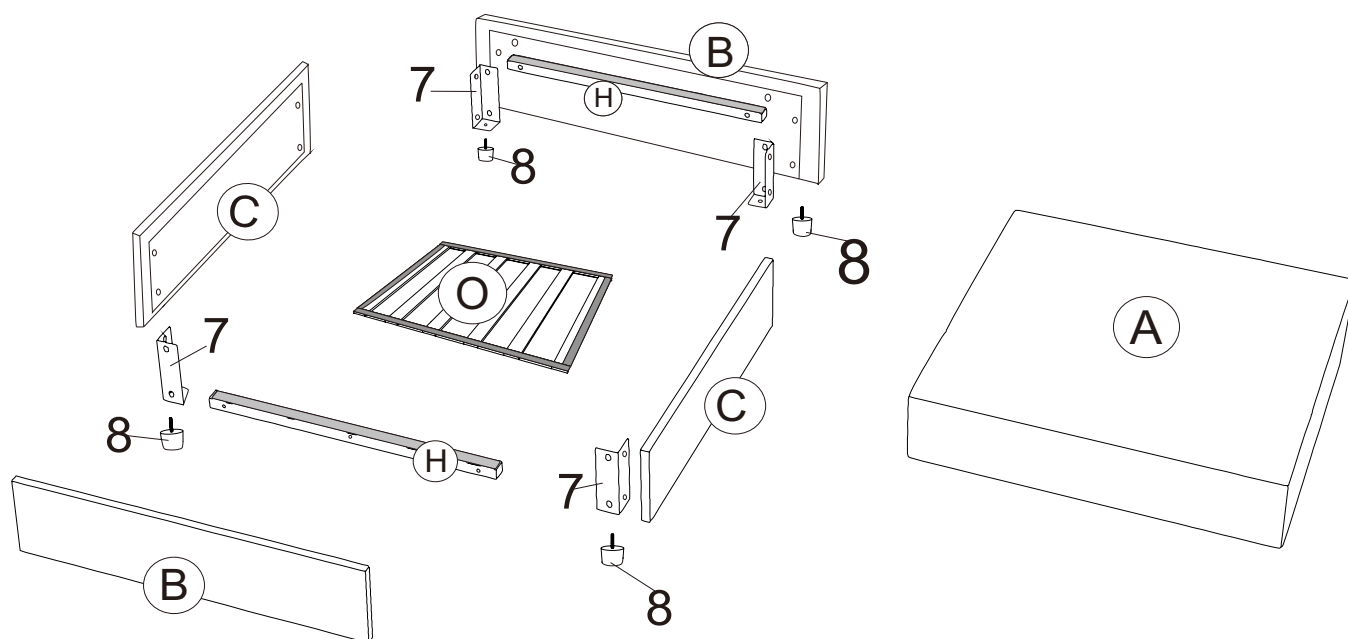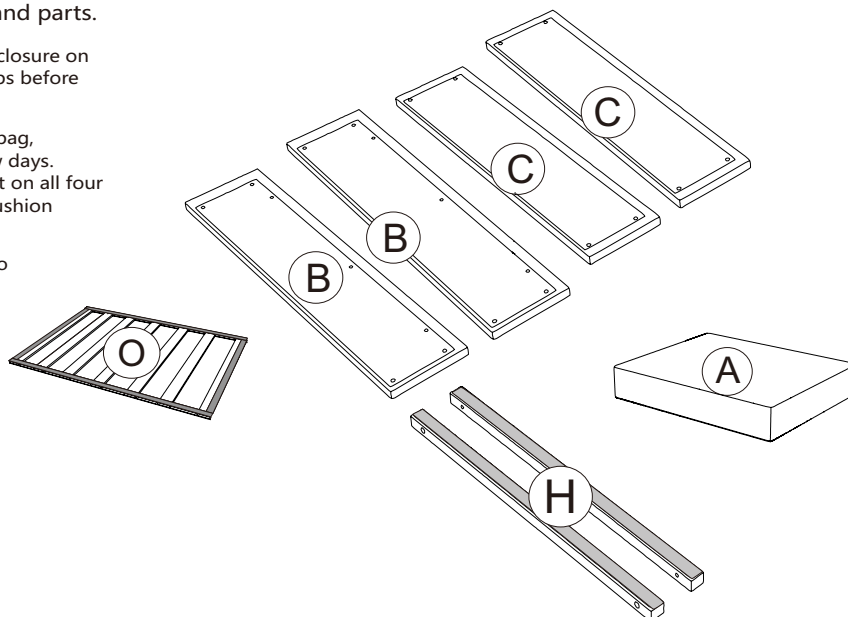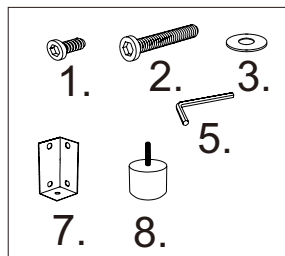


SOFA ASSEMBLY INSTRUCTION


Step1

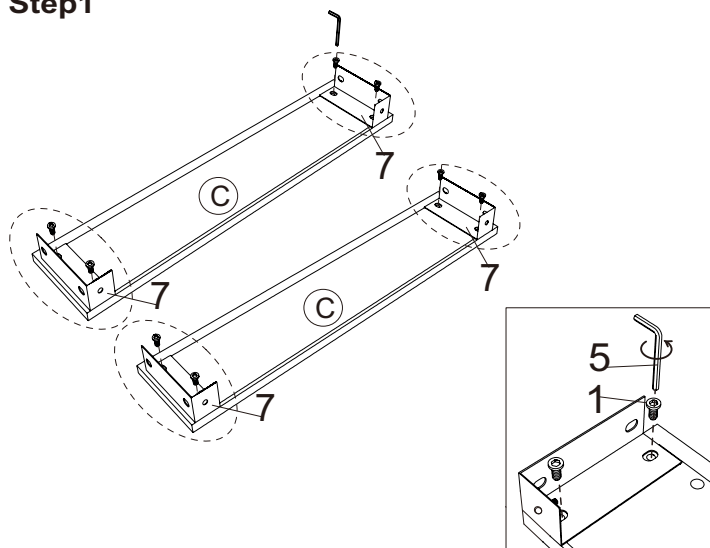


Step2

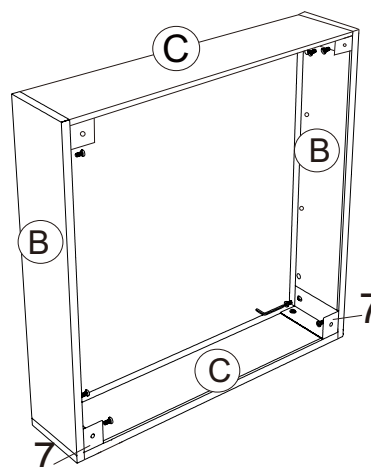


Make sure to align Part#B,C and 7, at the same level. If there is any issue, use the oval screw holes to adjust.

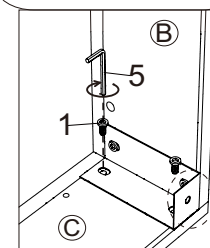


Step3

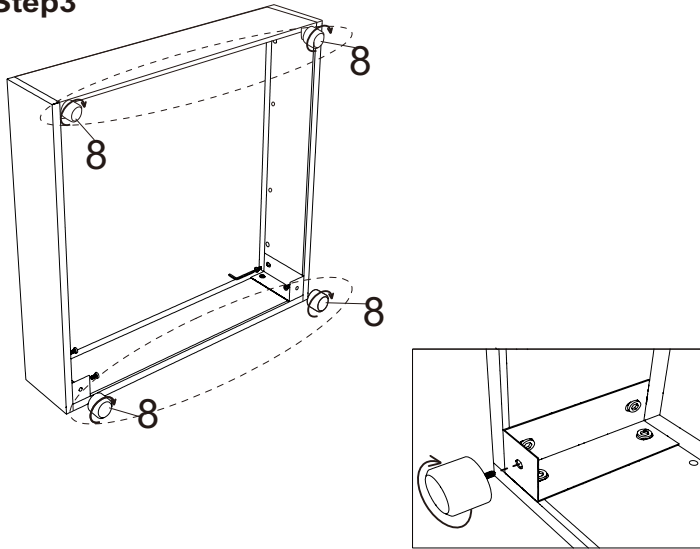



Step4

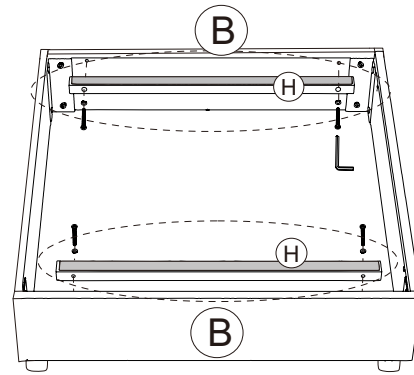

Face the Velcro upward.

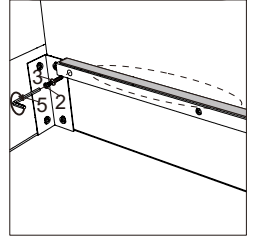

Step5

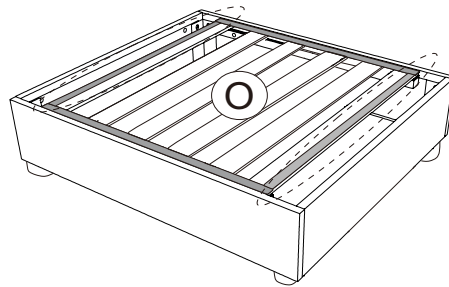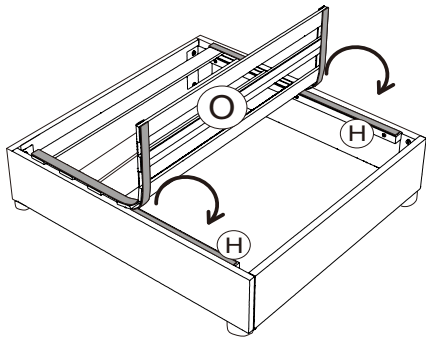

Face the Velcro upward.

Step6

