


# ASSEMBLY INSTRUCTIONS

## FULL SIZE HOUSE BED WITH DRAWERS

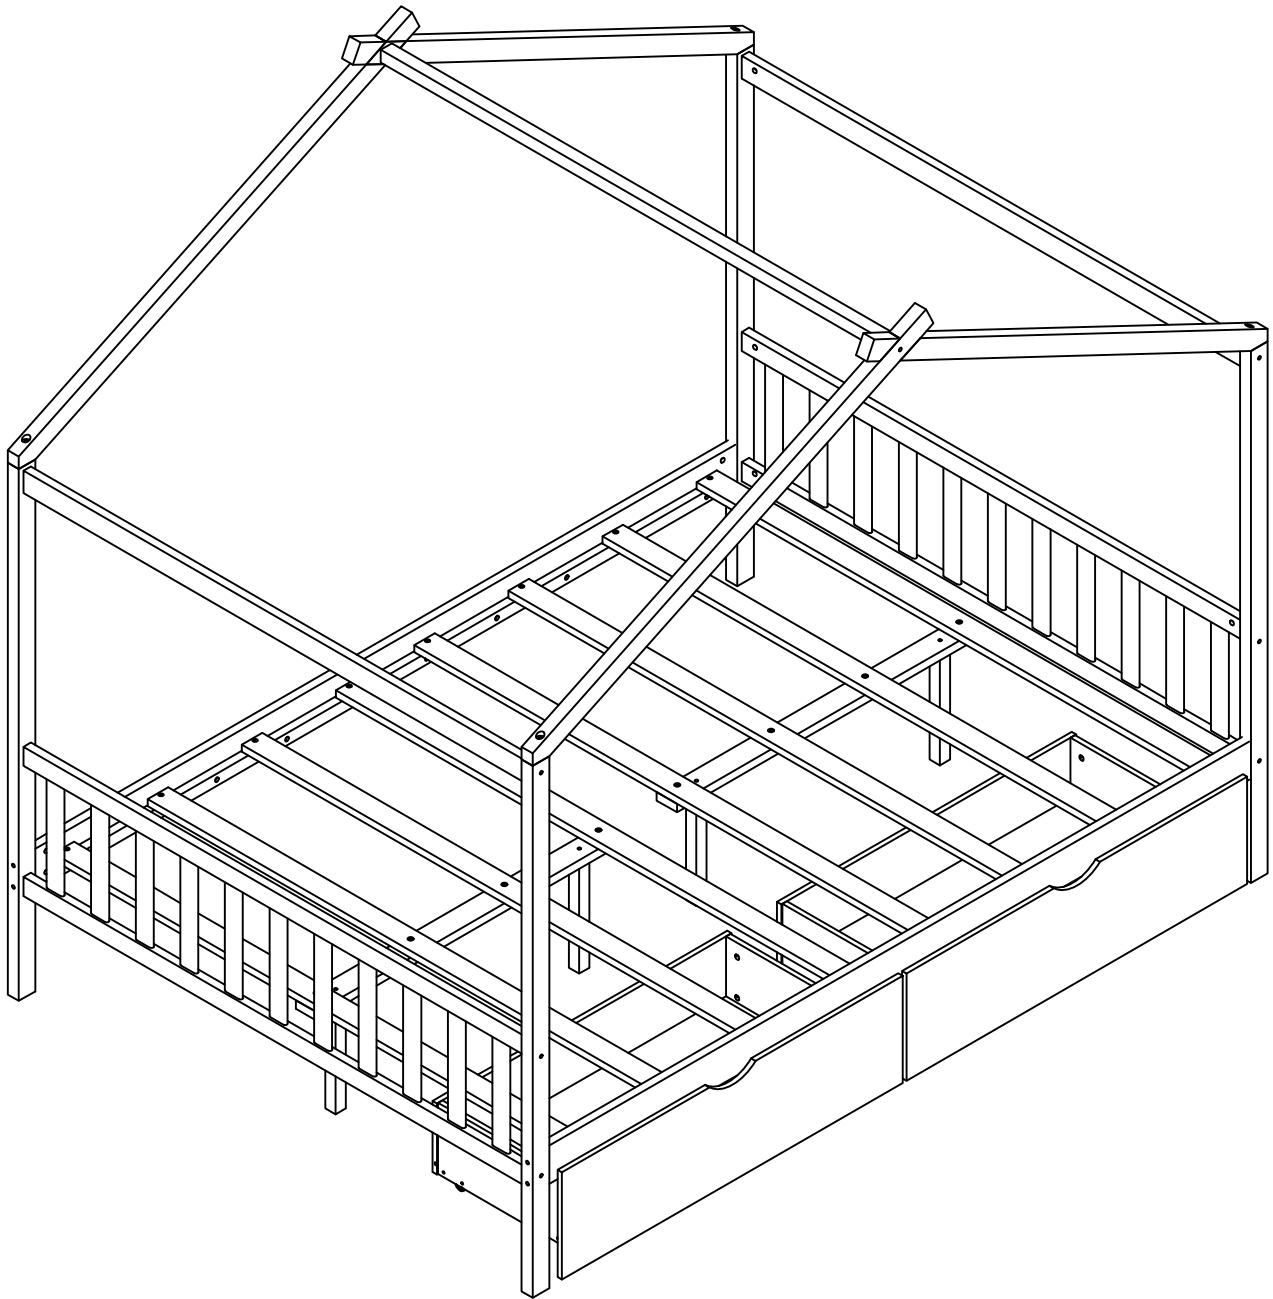


If you have any questions, please feel free to contact us.

Email: [service@qualfurn.net](mailto:service@qualfurn.net)

WF292923






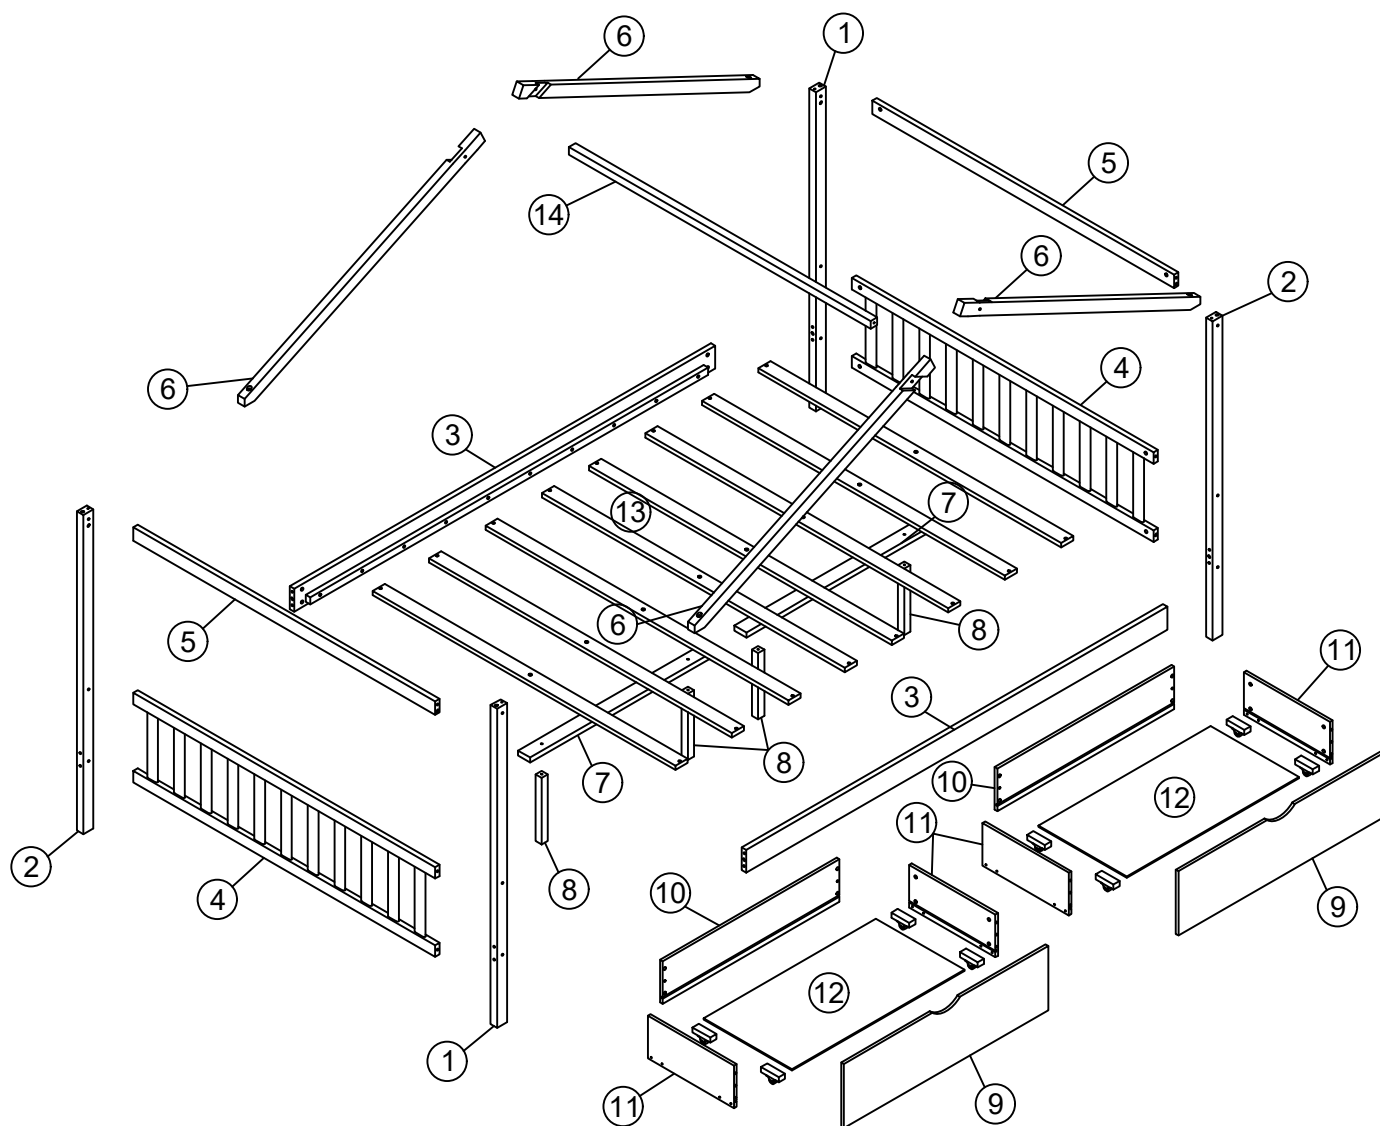








# ASSEMBLY INSTRUCTIONS















# ASSEMBLY INSTRUCTIONS

## PARTS LIST

WF292923 ( Hardware in this SKU)


<b>1</b>		2pcs	<b>8</b>		4pcs
<b>2</b>		2pcs	<b>9</b>		2pcs
<b>3</b>		2pcs	<b>10</b>		2pcs
<b>4</b>		2pcs	<b>11</b>		4pcs
<b>5</b>		2pcs	<b>12</b>		2pcs
<b>6</b>		4pcs	<b>13</b>		8pcs
<b>7</b>		2pcs	<b>14</b>		1pc




## HARDWARE LIST (WF292923)

<b>A</b>	1/4x75 	12PCS	<b>M</b>	Ø4x30 	40PCS
<b>B</b>	1/4x90 	8PCS	<b>H</b>	6.5x50 	4PCS
<b>C</b>	6.5x80 	6PCS	<b>Q</b>	Ø12x10 	16PCS
<b>D</b>	Ø10x40 	12PCS	<b>K</b>	1/4x25 	4PCS
<b>E</b>	Ø8x30 	8PCS	<b>L</b>		8PCS
<b>F</b>	Ø 6.5x35 	16PCS	<b>J</b>	4x58 	1PC

# ASSEMBLY INSTRUCTIONS

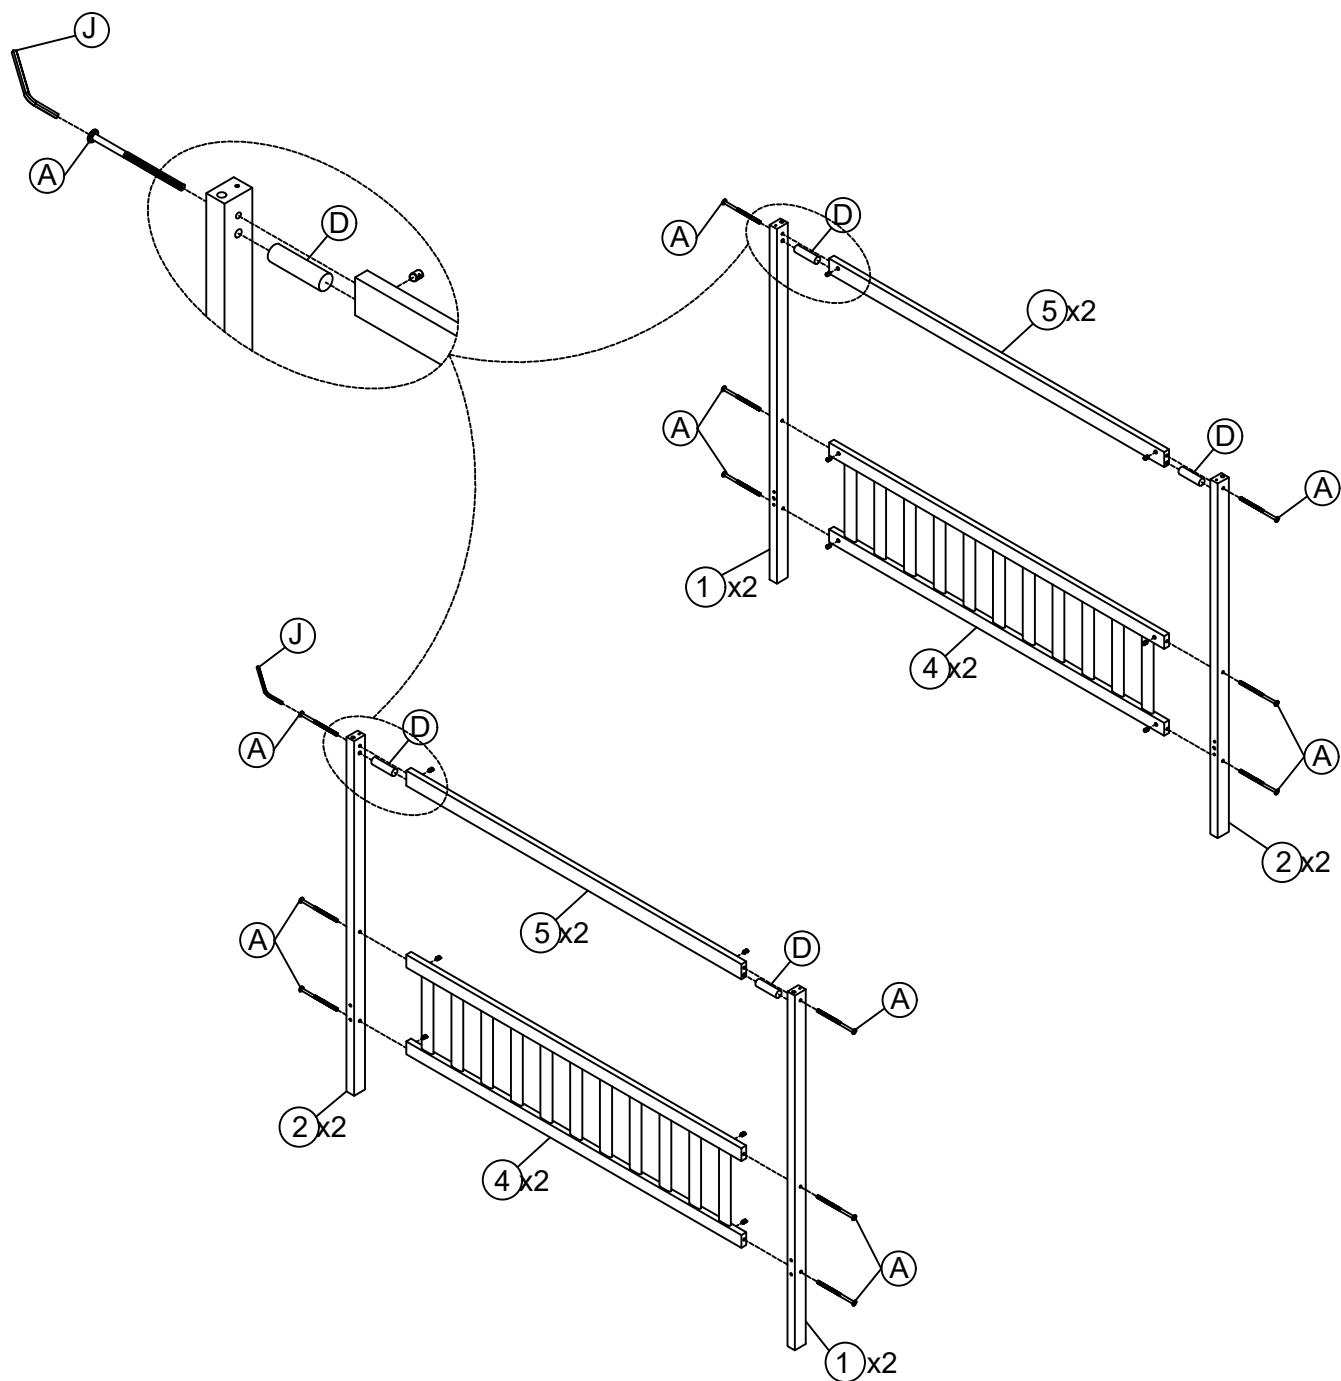
## Step 1






				<b>J</b>	4x58		1PC
<b>D</b>	Ø10x40		4PCS	<b>A</b>	1/4x75		12PCS

# ASSEMBLY INSTRUCTIONS

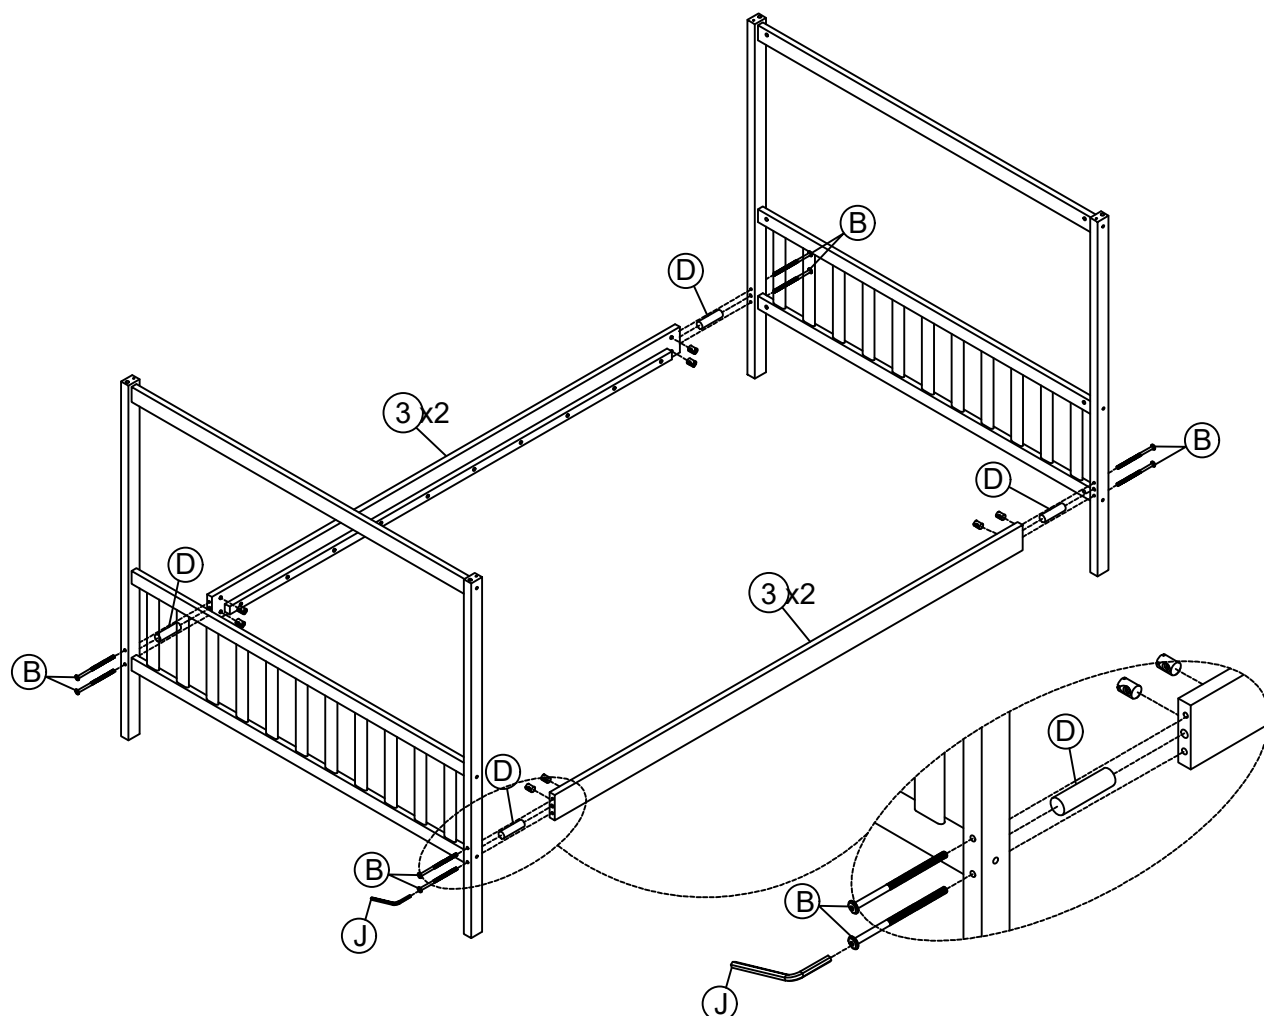
## Step 2






				<b>J</b>	4x58		1PC
<b>D</b>	Ø10x40		4PCS	<b>B</b>	1/4x90		8PCS


## ASSEMBLY INSTRUCTIONS

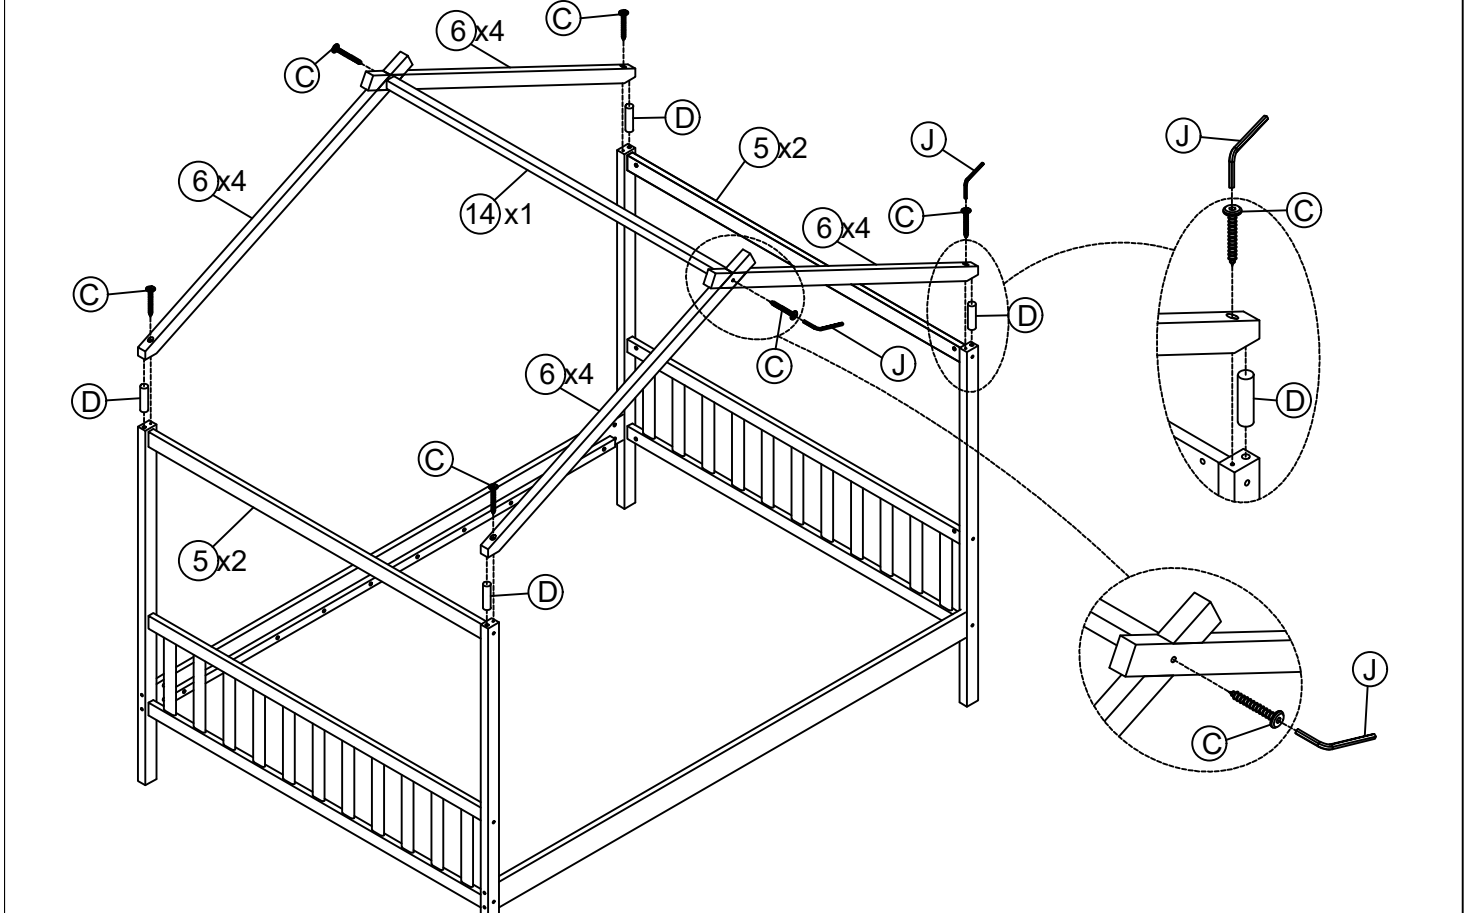


Step 3
--------



				<b>J</b>	4x58		1PC
<b>D</b>	Ø10x40		4PCS	<b>C</b>	6.5x80		6PCS

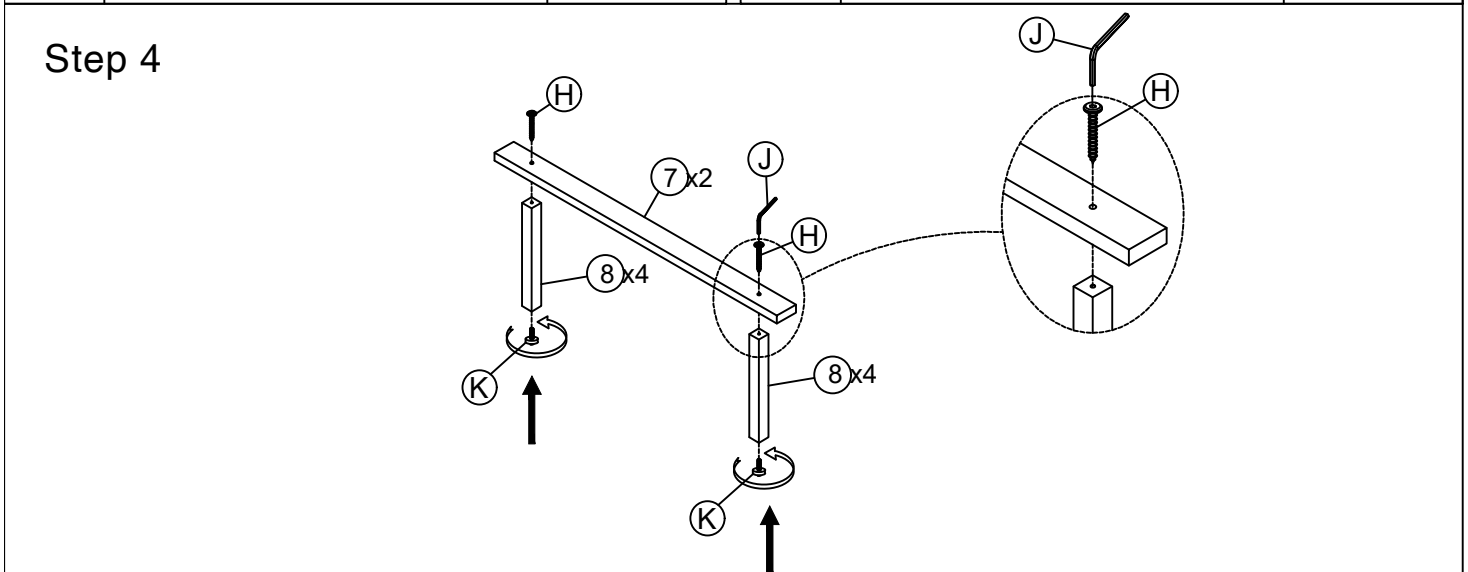
Step 4



<b>J</b>	4x58		1PC
<b>H</b>	6.5x50		4PCS
<b>K</b>	1/4x25		4PCS


# ASSEMBLY INSTRUCTIONS

**Step 5** First attach 2pcs part 13 to the front and end of the frame between headboard. Then attach the remaining part 13 equidistantly between headboard

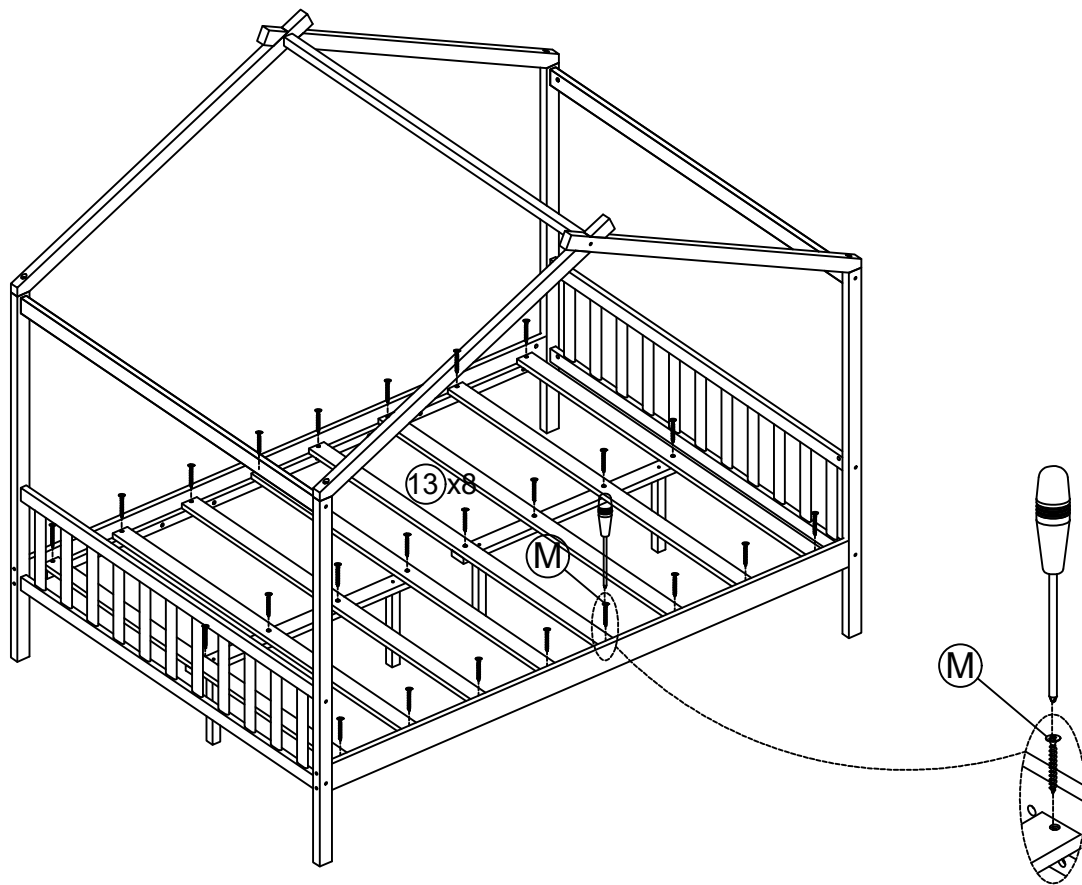


<b>M</b>	Ø4x30		24PCS
----------	-------	---	-------

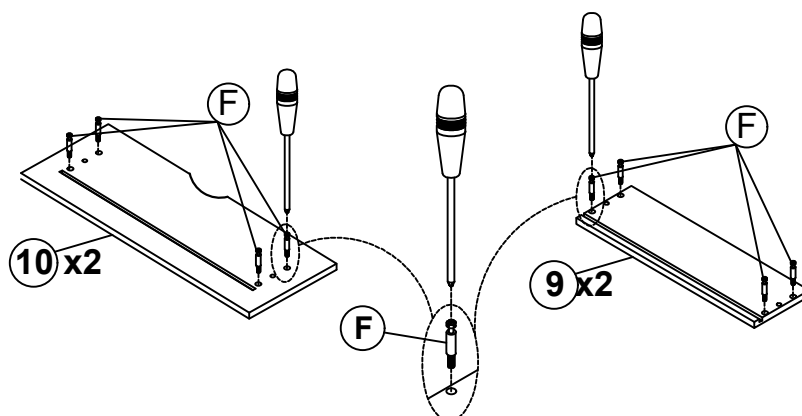



**Step 6**



<b>F</b>	Ø 6.5x35		16PCS
----------	----------	---	-------
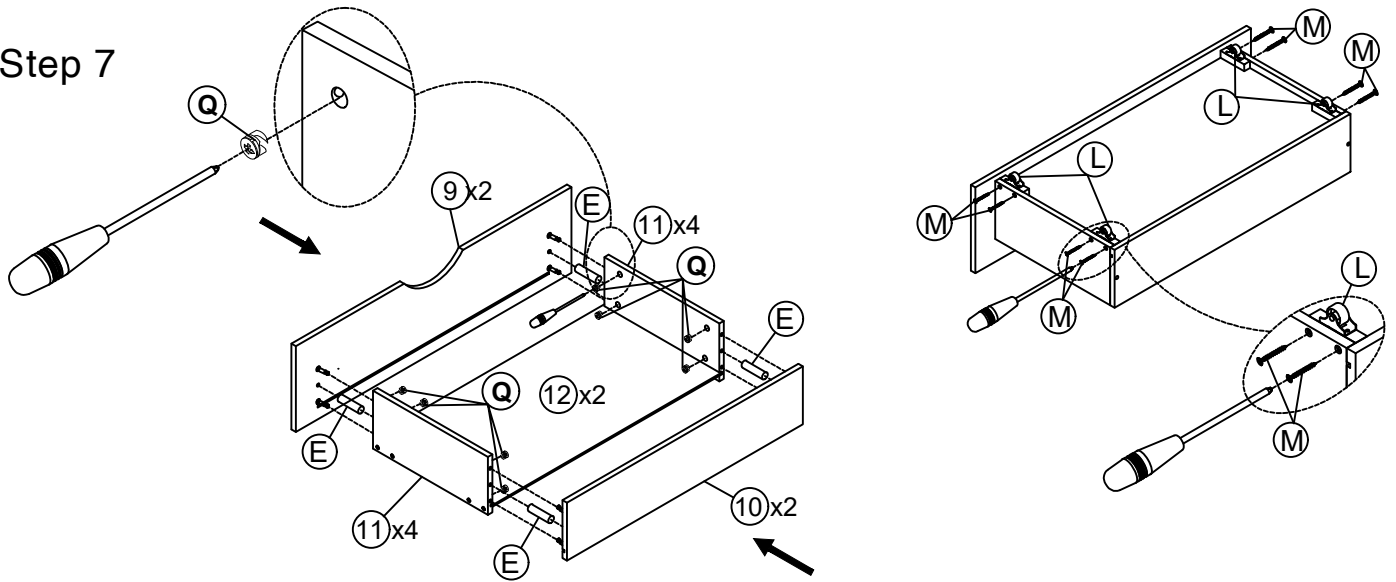
## Step 7



<b>M</b>	Ø4x30		16PCS	<b>Q</b>	Ø12x10		16PCS
<b>E</b>	Ø8x30		8PCS	<b>L</b>			8PCS

## Step 8

