



The Plastic Floral Grille Insert sits behind the screen of the vent. In most cases the installation of the vent will hold the Plastic Floral Grille Insert in place. If the fit seems loose or at risk of separation a few dabs of adhesive caulk will secure the insert.

Note: The Plastic Floral Grille Insert is a decorative enhancement to an existing vent, it is not a vent itself.

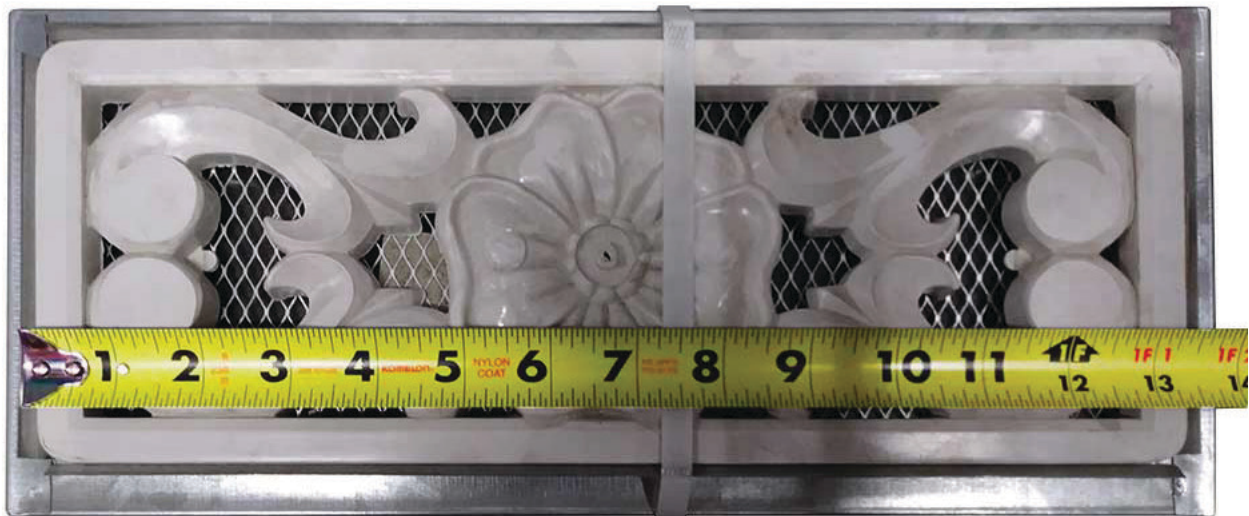

This photo shows the back side of a Plastic Floral Grille Insert inside a 14 in. x 6 in. vent. The plastic strap is for transporting the TWPIV and would be removed just prior to installation.

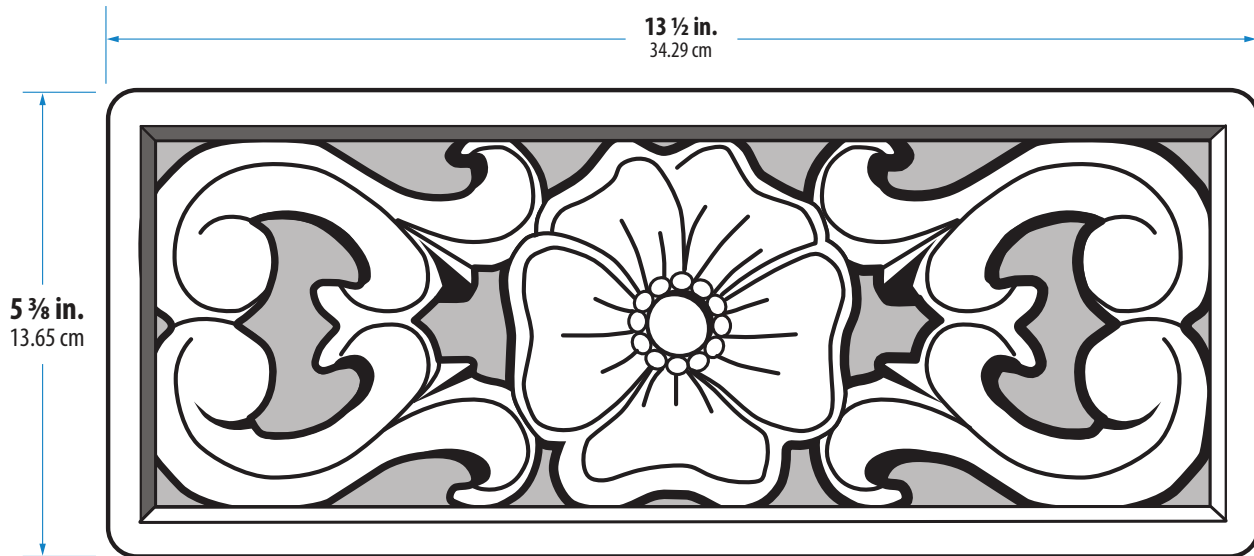

CAUTION! Working above grade is inherently dangerous, be sure that proper fall protection measures are in place. When working with power tools, gloves and eye protection are absolutely required.

These installation guidelines are for use with typical or standard applications. It is always recommended to seek advice from a licensed professional, and to check with your local building inspector or building permit office for approvals and possible variations that may apply.