

How to Install Stock Metal Blinds


Before you begin your installation:

READ ALL INSTALLATION INSTRUCTIONS!

IMPORTANT: If bound, do not remove binding until the blinds are installed in the window.

- Make sure that you have all tools and hardware needed for installation.
- Check the installation surface (wall, ceiling, or window frame) to ensure that you have suitable fasteners and tools for the material.
- Double check the headrail and blinds for proper width and length. If you are installing several sets of blinds, be sure to match them with the appropriate window.
- Check the parts list shipped with the product to confirm that you have the correct number of brackets.

PARTS LIST




Width	Up to 37 in.	37 in. to 72 in.
A. Mounting Bracket	2	3
B. Bottomrail Endcap	2	2
C. Headrail Endcap	2	2
D. Hold-down Bracket	2	2
E. #5 Screw x 3/4 in.	4	4
F. #6 Screw x 1-1/4 in.	5	7

TOOLS YOU MAY NEED (NOT INCLUDED):

- Tape Measure
- Pencil
- Flat-blade or Philips Head Screwdriver
- Drill with 1/16" Bit


2. UNPACKING THE PARTS

Remove these parts packed in the headrail. Quantity varies with blind size.

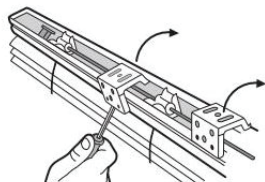


3. BRACKET PLACEMENT


Pre-drill wood frame if necessary

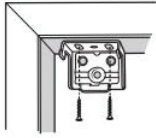

Inside Mount


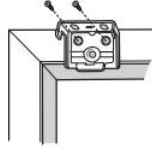


Outside Mount



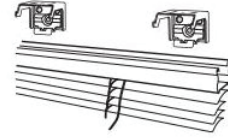


4. ENDCAPS AND WAND

Snap together where applicable.

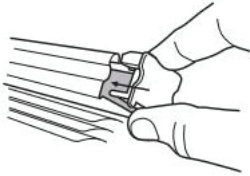


5. FINISHING UP

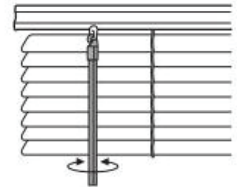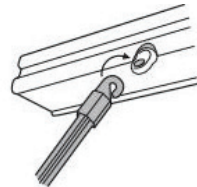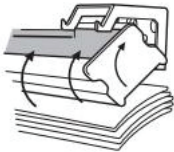


Tilt slats downward for maximum closure.

IF APPLICABLE: Hold-down brackets

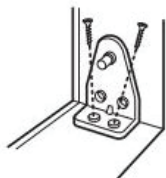

Inside Mount

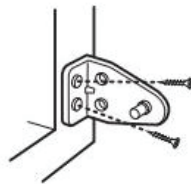

Outside Mount

