

Kingsley Technical Specification


Robe Hook

YB5403

Stock Numbers:

- q **YB5403CH – Robe Hook**
Chrome Finish
- q **YB5403CP – Robe Hook**
Chrome & Polished Brass Finish
- q **YB5403PB – Robe Hook**
Polished Brass Finish
- q **YB5403WR – Robe Hook**
Wrought Iron Finish
- q **YB5403BN – Robe Hook**
Brushed Nickel Finish
- q **YB5403AN – Robe Hook**
Antique Nickel Finish
- q **YB5403ORB – Robe Hook**
Oil Rubbed Bronze Finish

Dimensions:

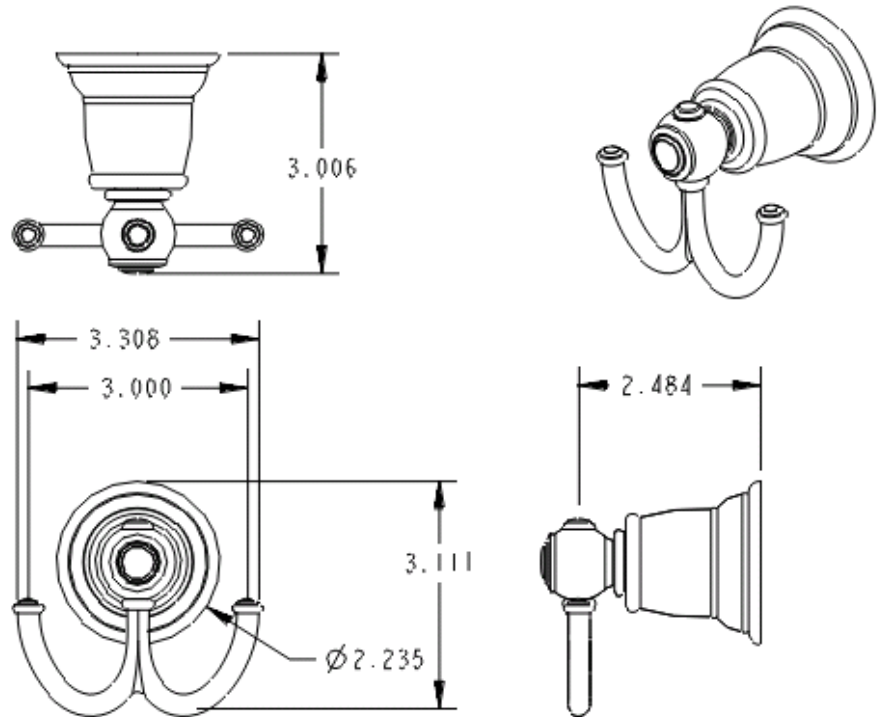

Materials:

Robe Hook is constructed of zinc.

Installation Instructions:

1. Remove the mounting post from the body by loosening the setscrew.
2. Position the mounting post on the wall at desired location. Large slots to be right and left. Small holes to be top and bottom.
3. One at a time, place each anchor screw through the mounting post, centered in the large slot hole. Using a Phillips screwdriver, turn the anchor screw while applying pressure. Screw will self drill and tap into drywall. Do not over tighten.
4. Place assembly over the mounting post, setscrew facing down.
5. Tighten setscrew.

Cleaning Instructions:

To preserve the fine finish of this product, clean only with a soft damp cloth. Dry well. Do not use commercial or abrasive cleaners.

Stock Number: _____ **Robe Hook**
By CSI Bath Furnishings



25300 AL MOEN DRIVE • NORTH OLMSTED, OH 44070 (800) 321-8809 •
FAX: (800) 848-6636 • INTERNATIONAL: (440) 962-2000 •
FAX: (440) 962-2726 CUSTOMER SERVICE (USA): 800-882-0116

©Copyright CSI Bath Furnishing Division of Moen 02/22/01

Literature #BA1117