
# **ASSEMBLY INSTRUCTIONS**

## **DINING CHAIR**


If you have any questions, please feel free to contact us. Email: lowes.team@qualfurn.net

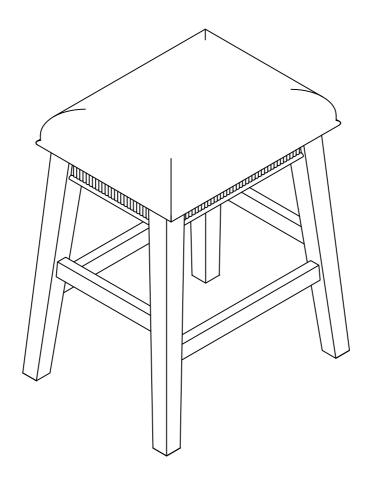

WF309907

#### **IMPORTANT NOTE:**


- 1 PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE SUCH AS A RUG OR CARPET TO AVOID THE PARTS FROM BEING SCRATCHED.
- ② BEFORE YOU BEGIN, KINDLY FOLLOW THE ASSEMBLY INSTRUCTIONS STEP BY STEP.
- ③ DO NOT TIGHTEN ALL SCREWS AND BOLTS UNTIL THE CHAIR IS FULLY SET-UP.

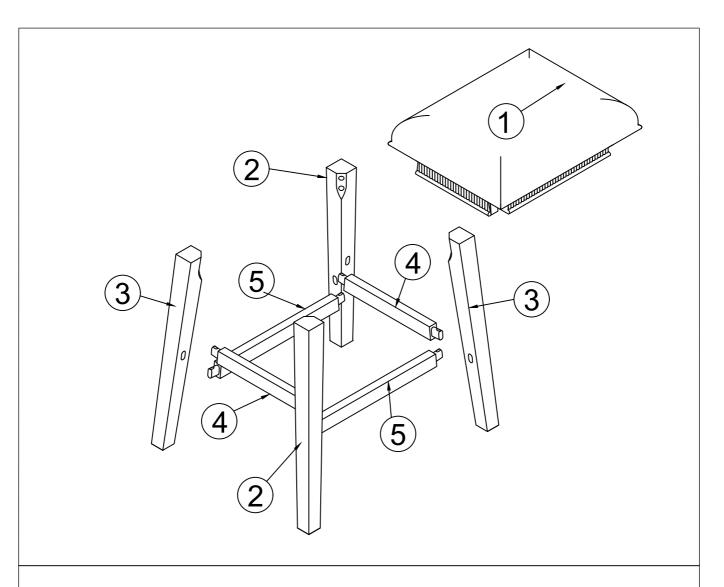


# Hardware List For One Chair

A		B
	Ø1/4" x 60mm	Ø1/4" x 11mm
	BOLT (8PCS)	LOCK WASHER (8PCS)
(C)		D @
	Ø1/4" x 18mm	4MM
	FLAT WASHER (8PCS)	ALLEN (1PC)
E	()	
	M4 x 45mm	
	SCREW (8PCS)	
2 OF 5		


# **Part List For One Chair**

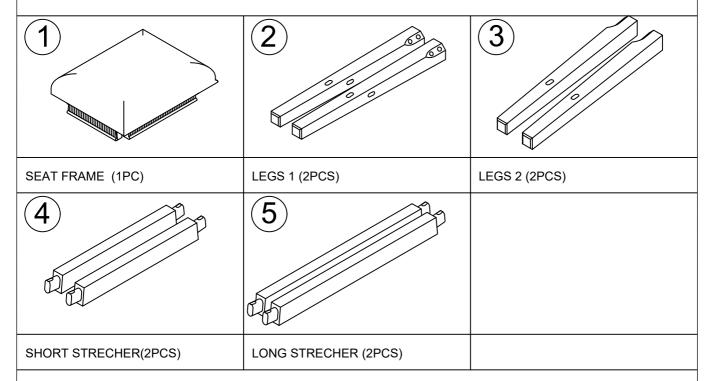

#### STEP 1:

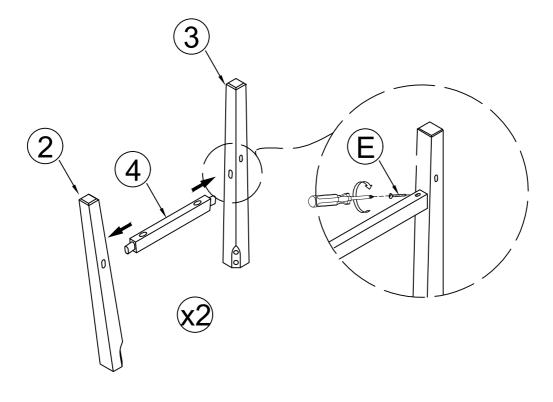


Ε	M4 x 45mm	()	4pcs

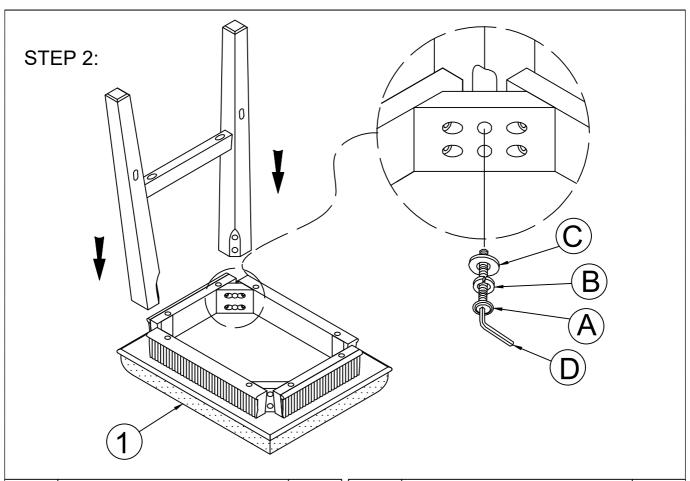


Α	Ø1/4"x60mm	4pcs
С	Ø1/4"x18mm	4pcs

В	Ø1/4"x11mm	4pcs
D	4mm	1рс

### STEP 3:

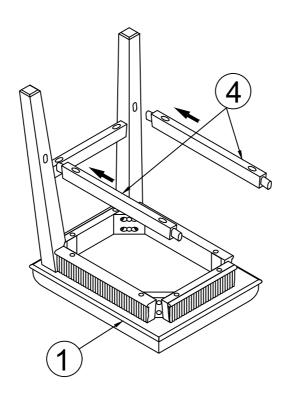

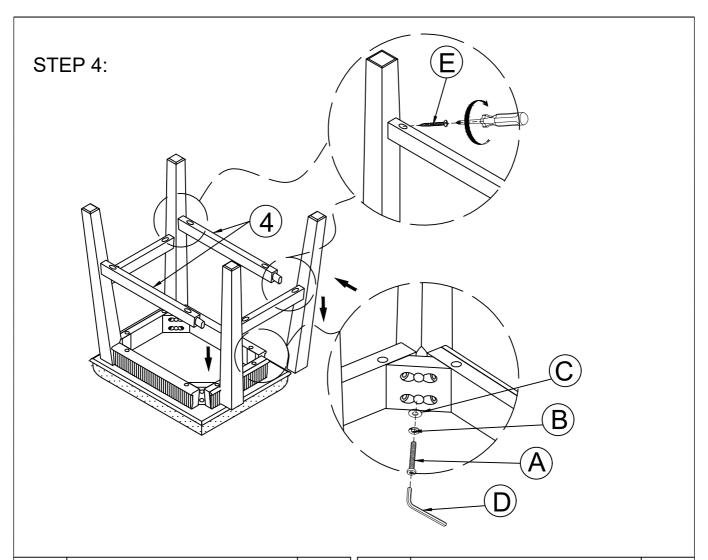

Α	Ø1/4"x60mm		4pcs
С	Ø1/4"x18mm		4pcs
Е	M4 x 45mm	()	4pcs

В	Ø1/4"x11mm		4pcs
D	4mm		1рс
		•	

