


ASSEMBLY INSTRUCTIONS


ITEM CODE: WF321635-WF321636

If you have any questions,
please feel free to contact us



















Email: lowesteam@aminalife.com

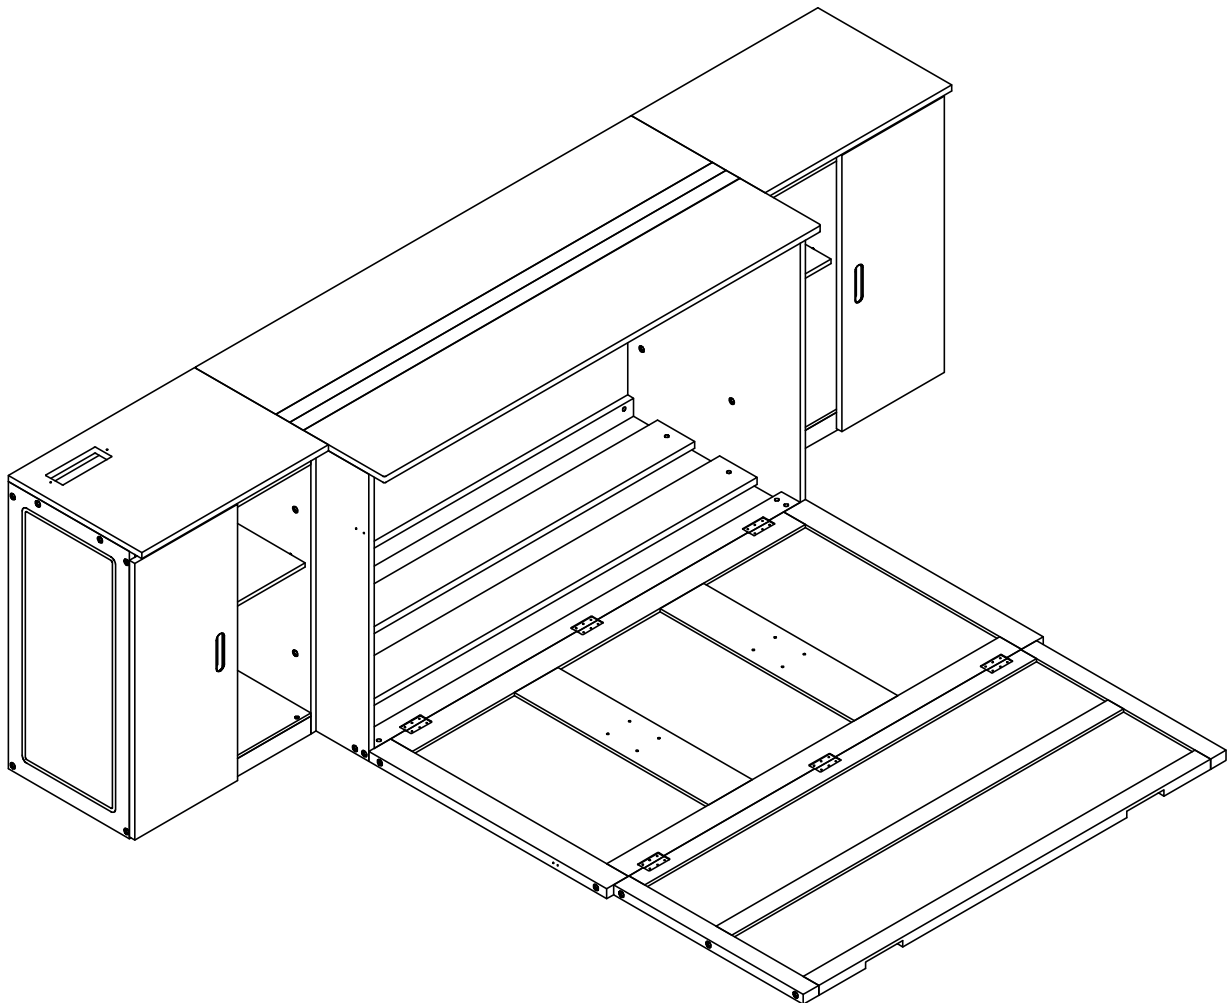















DETAIL VIEW

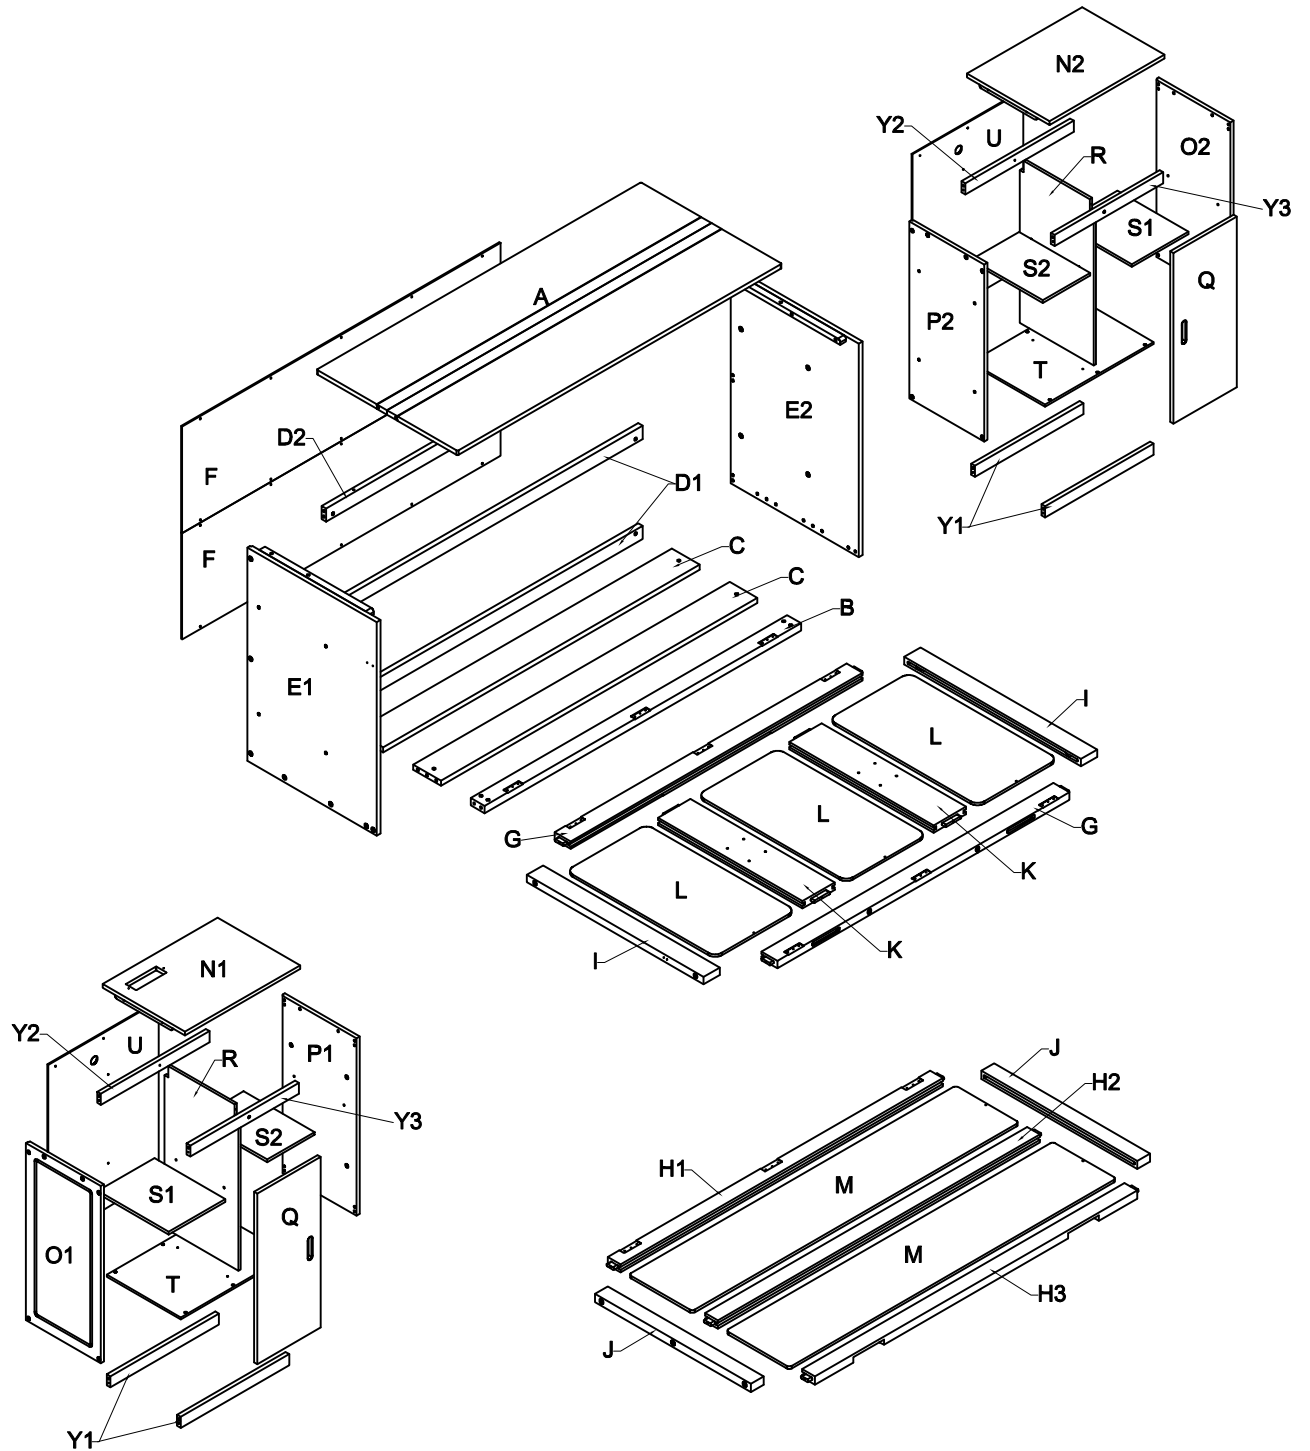












BOX 1: WF321635

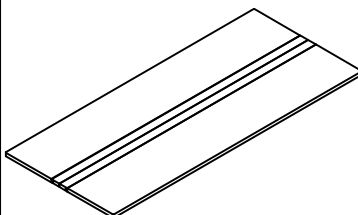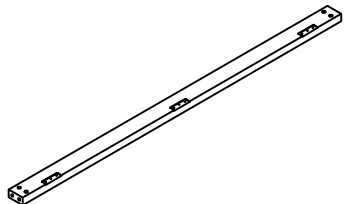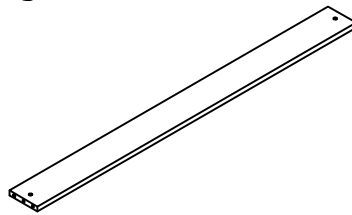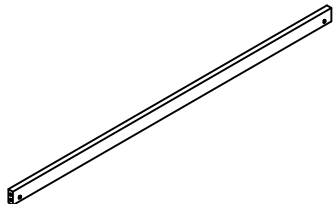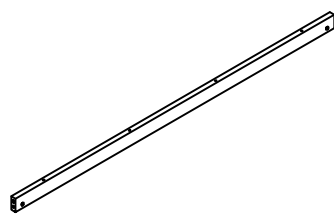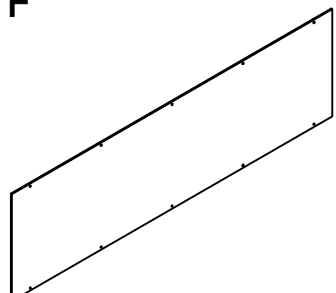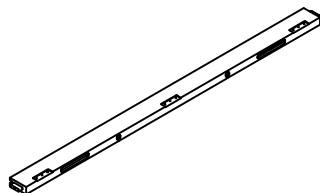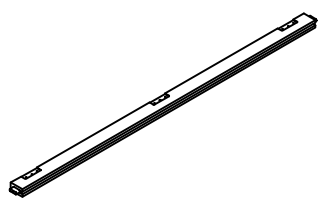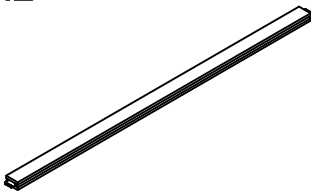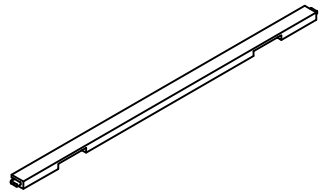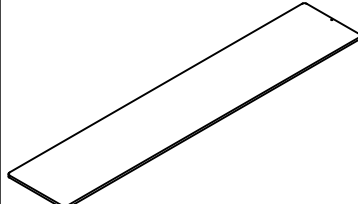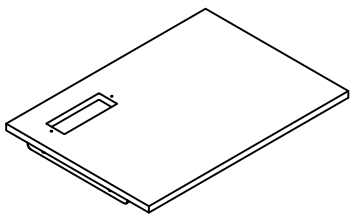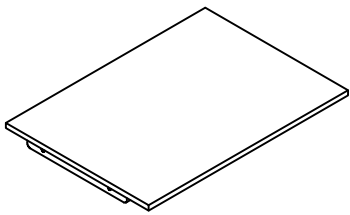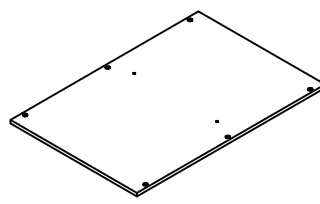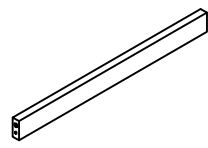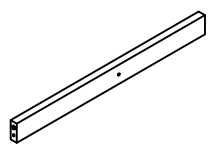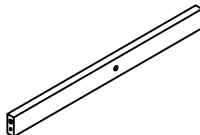
A  Top panel (1pc)	B  Bottom panel (1pc)	C  Bottom panel (2pcs)	D1  Back rail (2pcs)
D2  Back rail (1pc)	F  Back panel (2pcs)	G  Horizontal rail (2pcs)	H1  Horizontal rail (1pc)
H2  Horizontal rail (1pc)	H3  Horizontal rail (1pc)	M  Front panel (2pcs)	N1  Cabinet face - left (1pc)
N2  Cabinet face - right (1pc)	R  Middle partition (2pcs)	T  Bottom floor (2pcs)	Y1  Support bottom (4pcs)
Y2  Cabinet roof support (2pcs)	Y3  Cabinet roof support (2pcs)		

BOX 2: WF321636

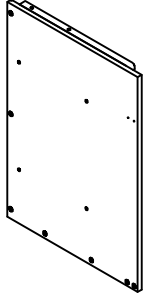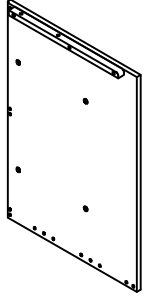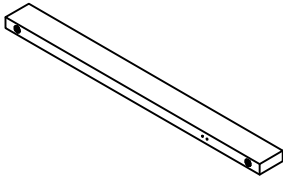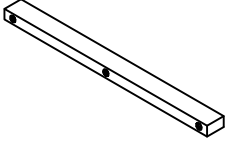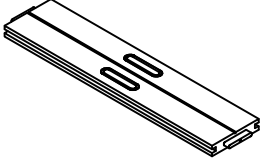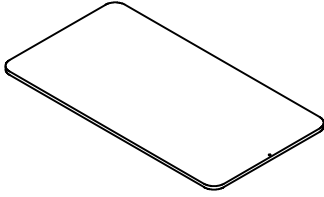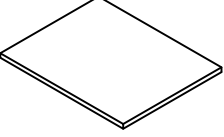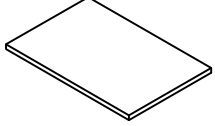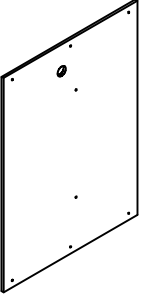E1  Side frame - left (1pc)	E2  Side frame - right (1pc)	I  Vertical side rail (2pcs)	J  Vertical side rail (2pcs)
K  Vertical bar (2pcs)	L  Front panel (3pcs)	O1  Side frame - left (1pc)	O2  Side frame - right (1pc)
P1  Side frame - right (1pc)	P2  Side frame - left (1pc)	Q  Door (2pcs)	S1  Cabinet shelves (2pcs)
S2  Cabinet shelves (2pcs)	U  Back panel (2pcs)		


HARDWARE LIST: WF321636

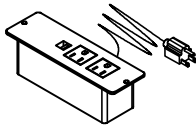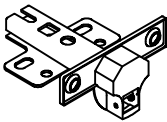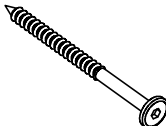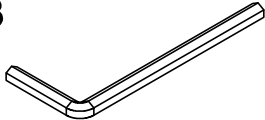1  Wood dowel Ø8 * 30 - 30pcs	2  Horizontal - Hold bolts Ø1/4" - 14pcs	3  Hex - Head bolts Ø1/4" * 60 - 14pcs	4  Hex - Head bolts Ø1/4" * 30 - 12pcs
5  Wood crews M4 * 45 - 4pcs	6  Round wood crews M3.5 * 15 - 20pcs	7  Wood crews M4 * 25 - 16pcs	8  Wood crews M4 * 35 - 4pcs
9  Hexagonal bolts catch wood Ø1/4" * 50 - 16pcs	10  Round wood crews M3.5 * 20 - 16pcs	11  Wood crews M3.5 * 15 - 70pcs	12  Power outlet - 1pc
13  L-Shaped Supports - 16pcs	14  Wood crews M3.5 * 12 - 16pcs	15  Hex - Head bolts Ø1/4" * 25 - 8pcs	16  Canopy head though Ø1/4" - 8pcs
17  Full Overlay - 4pcs	18  Hexagonal bolts catch wood Ø1/4" * 90 - 8pcs	19  Hexagonal bolts catch wood Ø1/4" * 70 - 6pcs	20  Hinge - 6pcs
21  Duckbill lock A - 2pcs	22  Duckbill lock B - 2pcs	23  Allen key K4 - 2pcs	



Assembly Tools Required (Not Included)

STEP 1

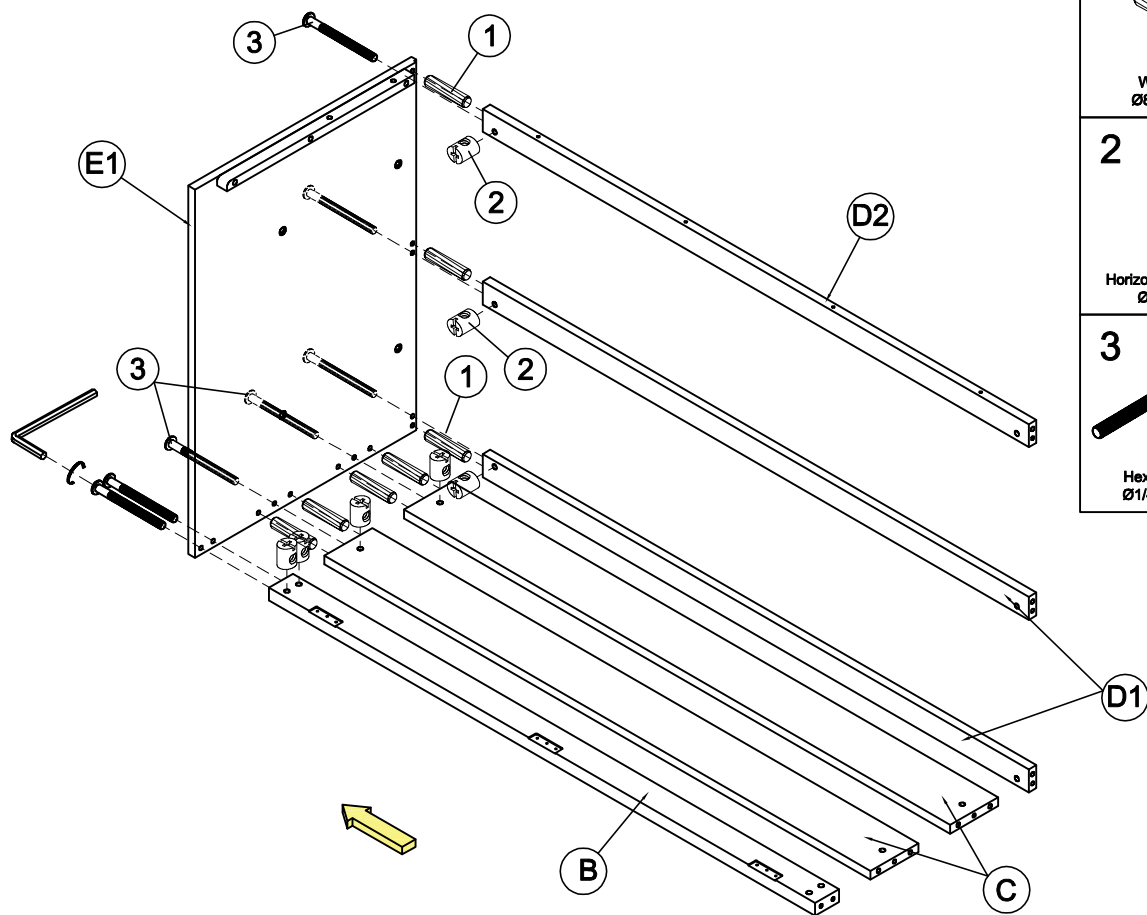

1



Wood dowel
Ø8 * 30 - 7pcs

2




Horizontal - Hold bolts
Ø1/4" - 7pcs

3



Hex - Head bolts
Ø1/4" * 60 - 7pcs

STEP 2

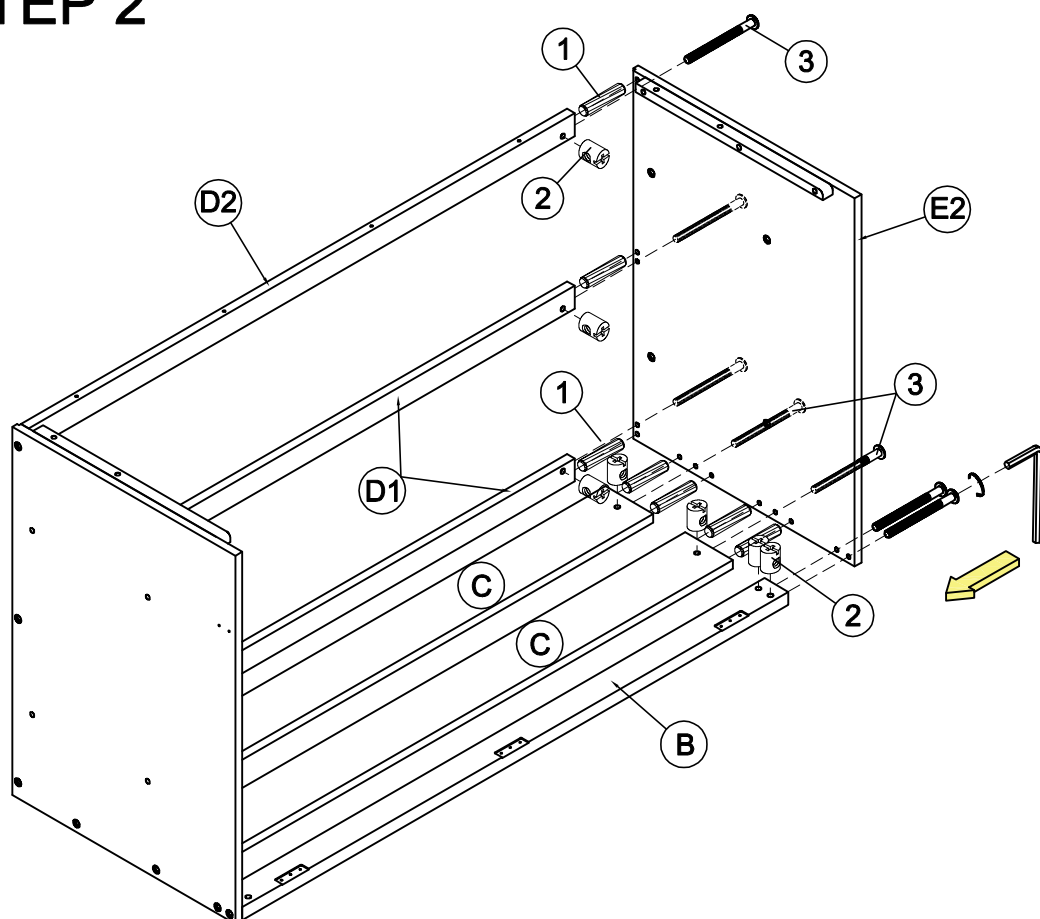

1



Wood dowel
Ø8 * 30 - 7pcs

2




Horizontal - Hold bolts
Ø1/4" - 7pcs

3



Hex - Head bolts
Ø1/4" * 60 - 7pcs

STEP 3

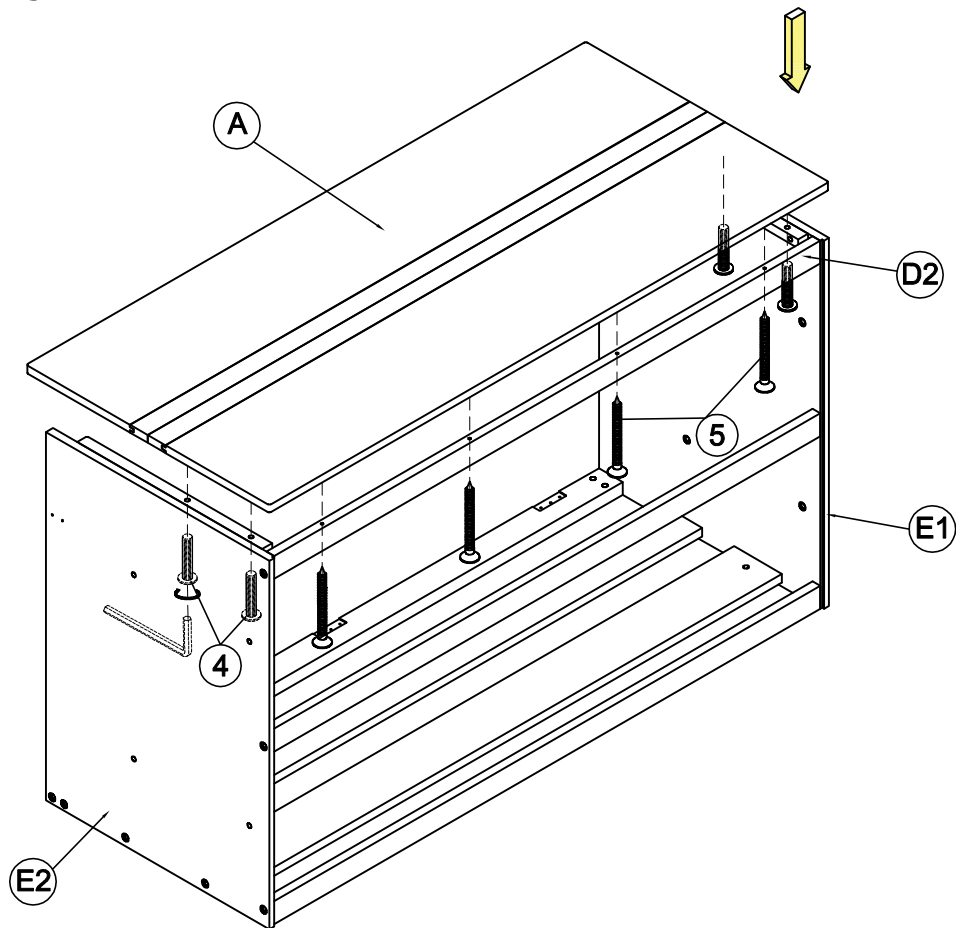

4




Hex - Head bolts
Ø1/4" * 30 - 4pcs

5



Wood crews
M4 * 45 - 4pcs

STEP 4

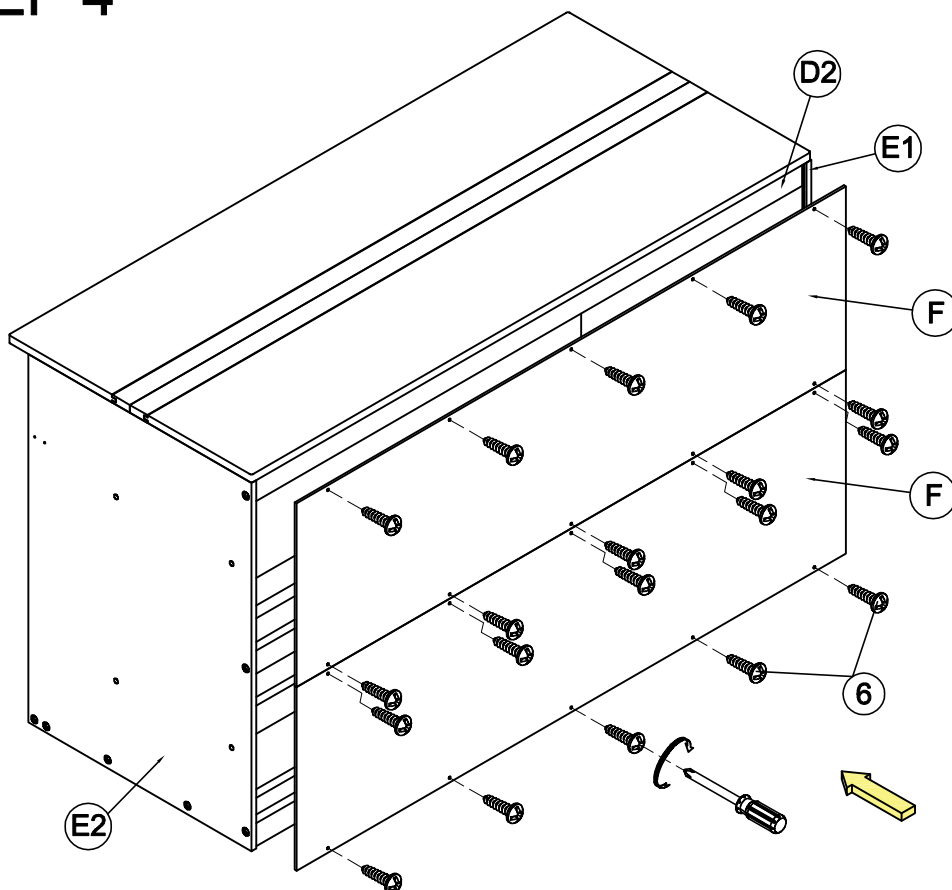


6




Round wood crews
M3.5 * 15 - 20pcs

STEP 5

X2

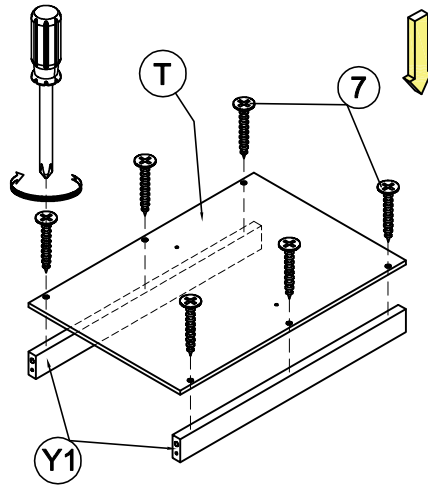


7




Wood crews
M4 * 25 - 12pcs

STEP 6

X2

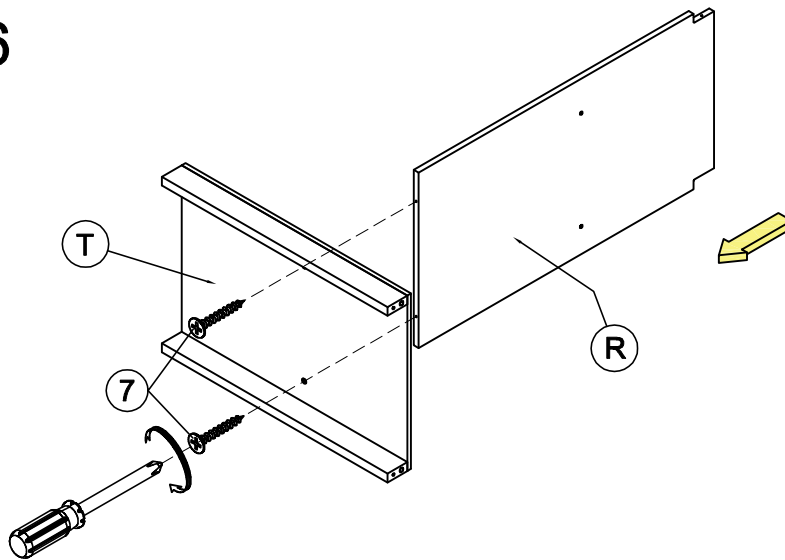


7




Wood crews
M4 * 25 - 4pcs

STEP 7

X2

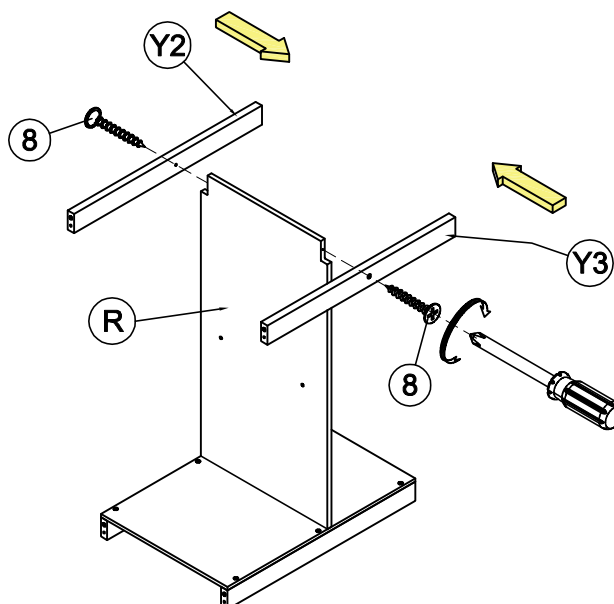


8



Wood crews
M4 * 35 - 4pcs

STEP 8

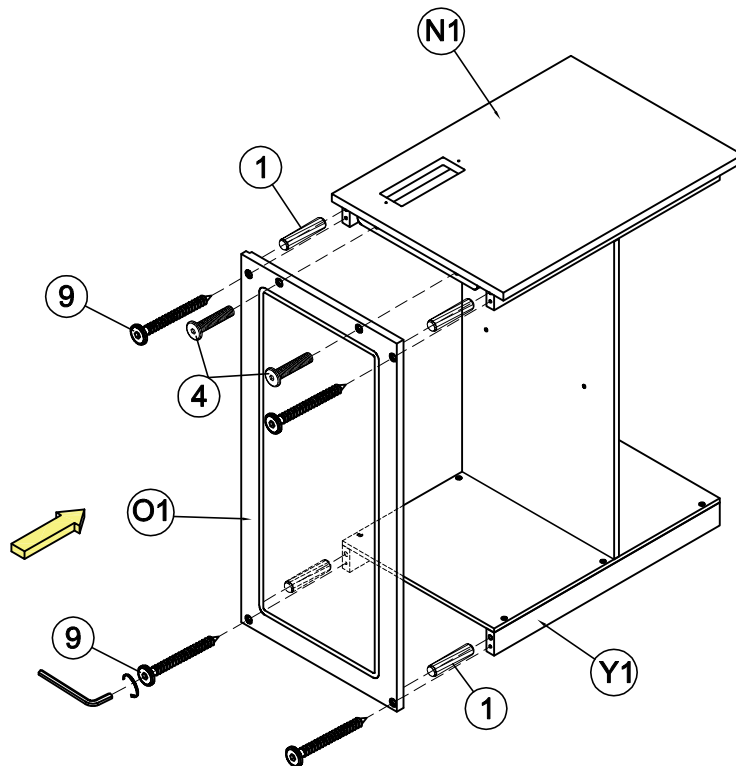

1



Wood dowel
Ø8 * 30 - 4pcs

4




Hex - Head bolts
Ø1/4" * 30 - 2pcs

9



Hexagonal bolts catch wood
Ø1/4" * 50 - 4pcs

STEP 9

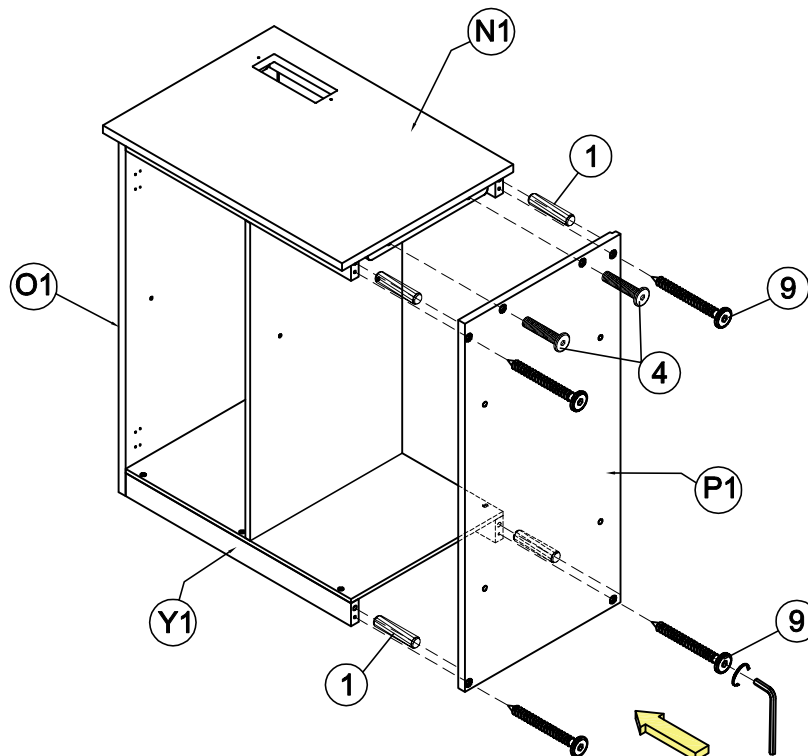

1



Wood dowel
Ø8 * 30 - 4pcs

4




Hex - Head bolts
Ø1/4" * 30 - 2pcs

9



Hexagonal bolts catch wood
Ø1/4" * 50 - 4pcs

STEP 10

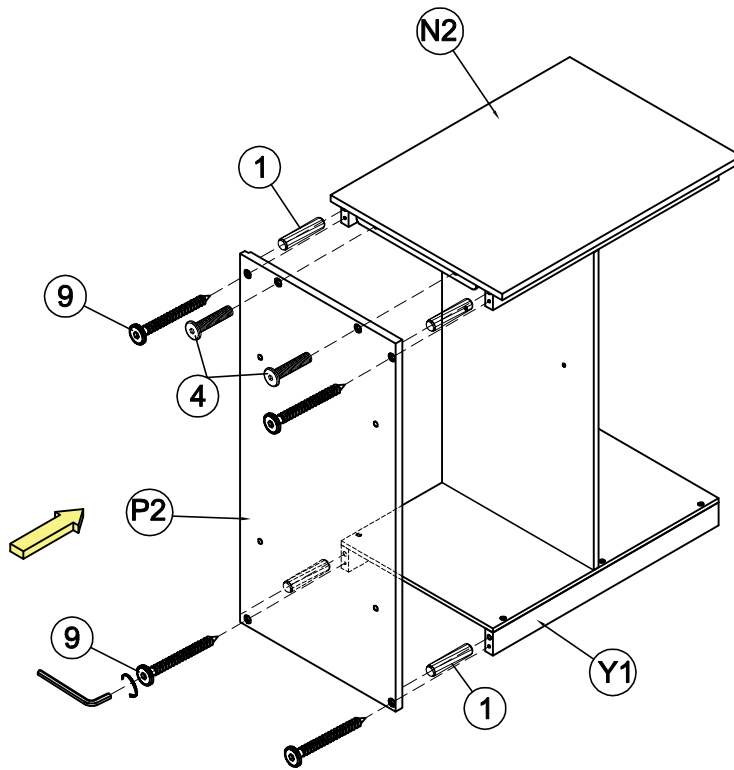

1



Wood dowel
Ø8 * 30 - 4pcs

4




Hex - Head bolts
Ø1/4" * 30 - 2pcs

9



Hexagonal bolts catch wood
Ø1/4" * 50 - 4pcs

STEP 11

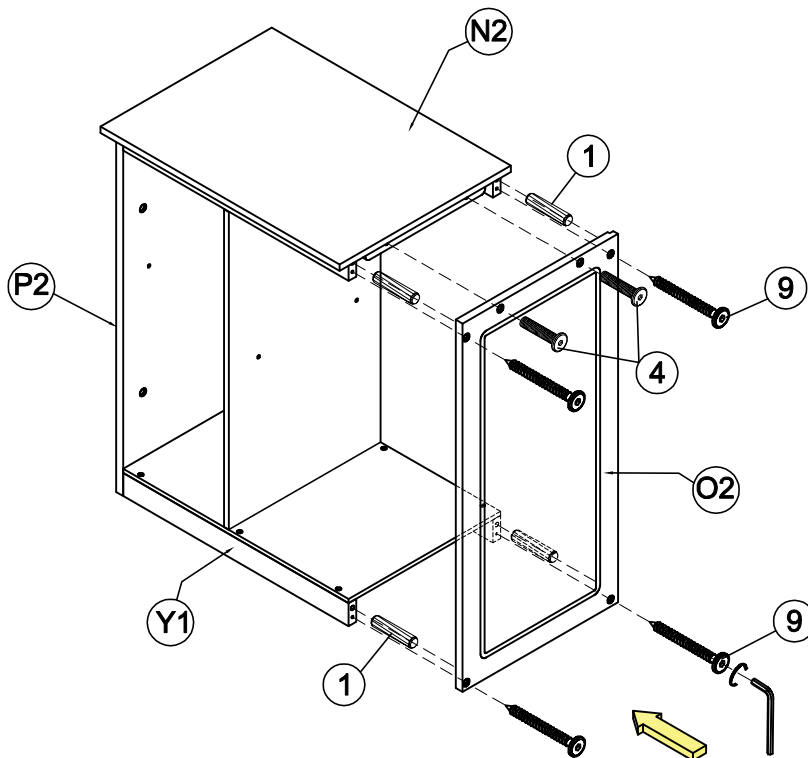

1



Wood dowel
Ø8 * 30 - 4pcs

4



Hex - Head bolts
Ø1/4" * 30 - 2pcs

9




Hexagonal bolts catch wood
Ø1/4" * 50 - 4pcs

STEP 12

10



Round wood crews
M3.5 * 20 - 8pcs

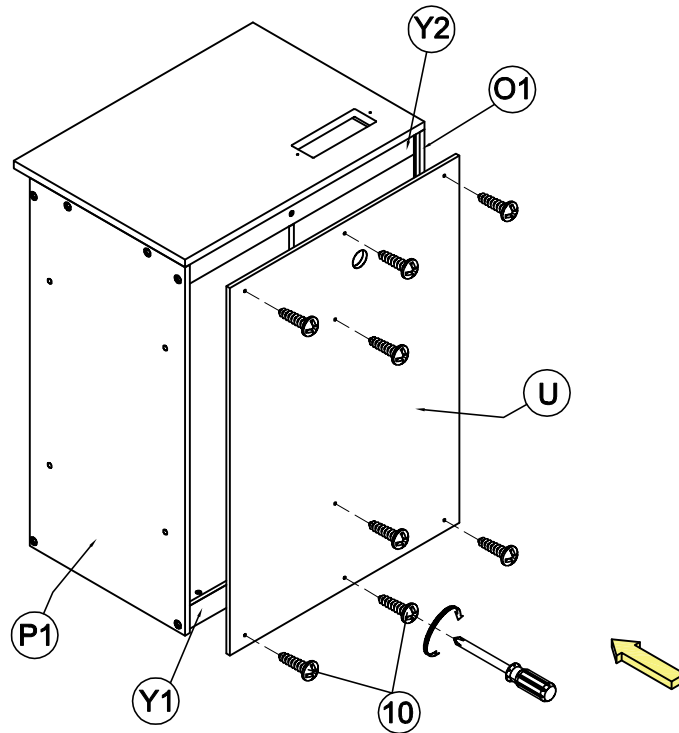


STEP 13


10



Round wood crews
M3.5 * 20 - 8pcs

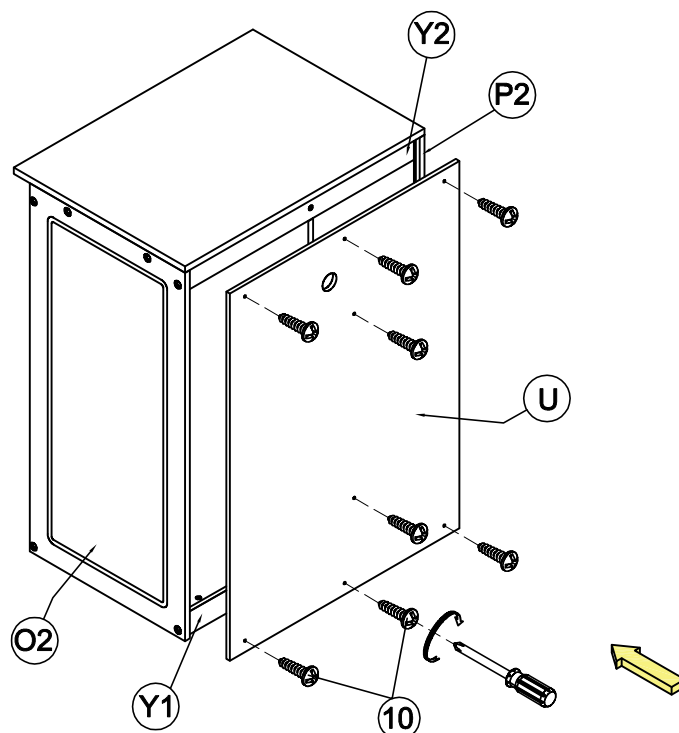

STEP 14

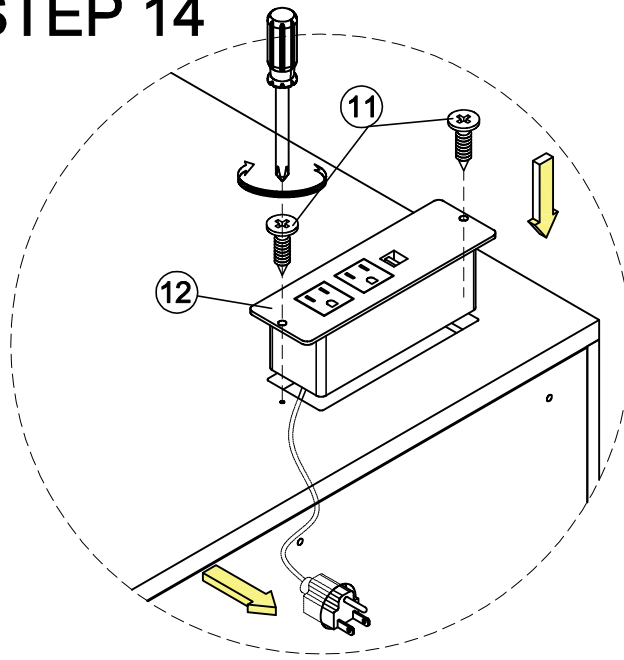


11




Wood screws
M3.5 * 15 - 2pcs

12



Power outlet - 1pc

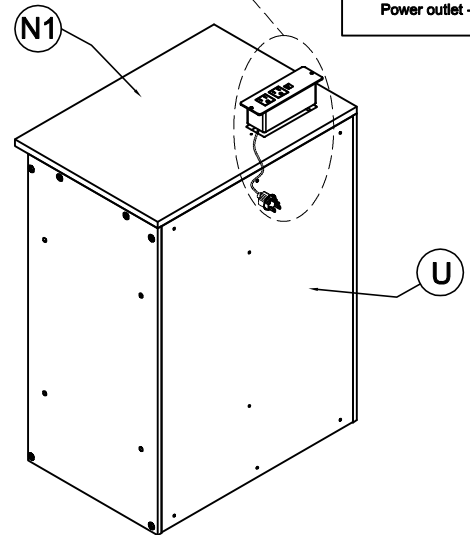


STEP 15


13



L-Shaped Supports - 8pcs

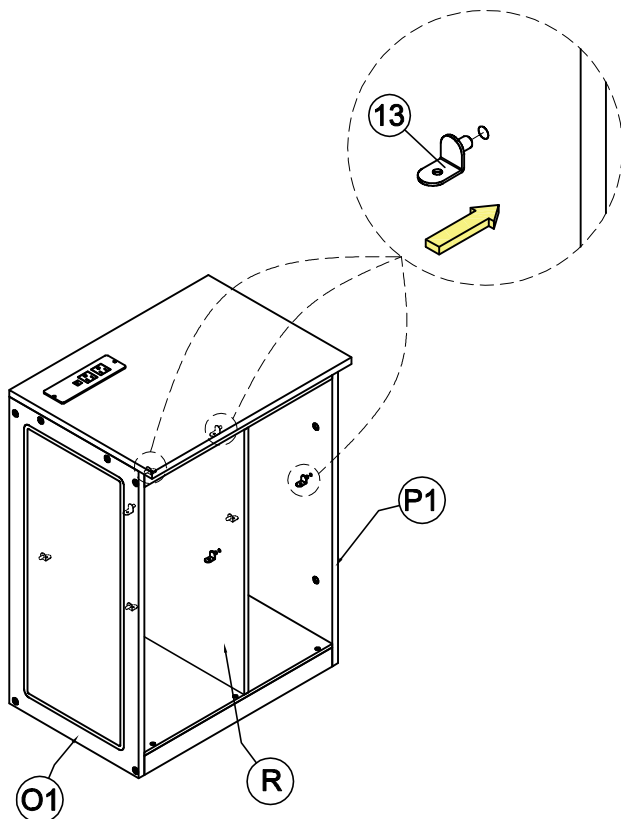

STEP 16

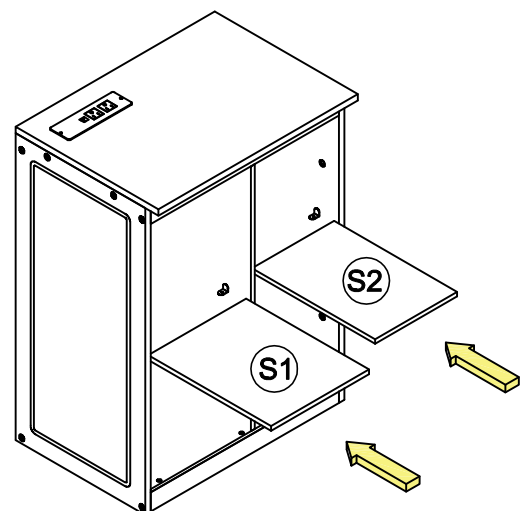


STEP 17

14



Wood screws
M3.5 * 12 - 8pcs

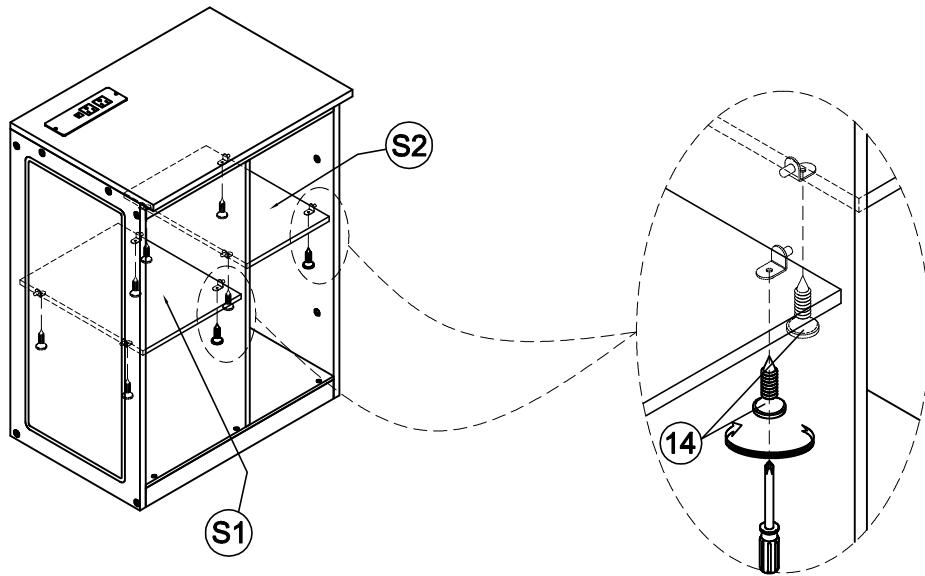


STEP 18


13



L-Shaped Supports - 8pcs

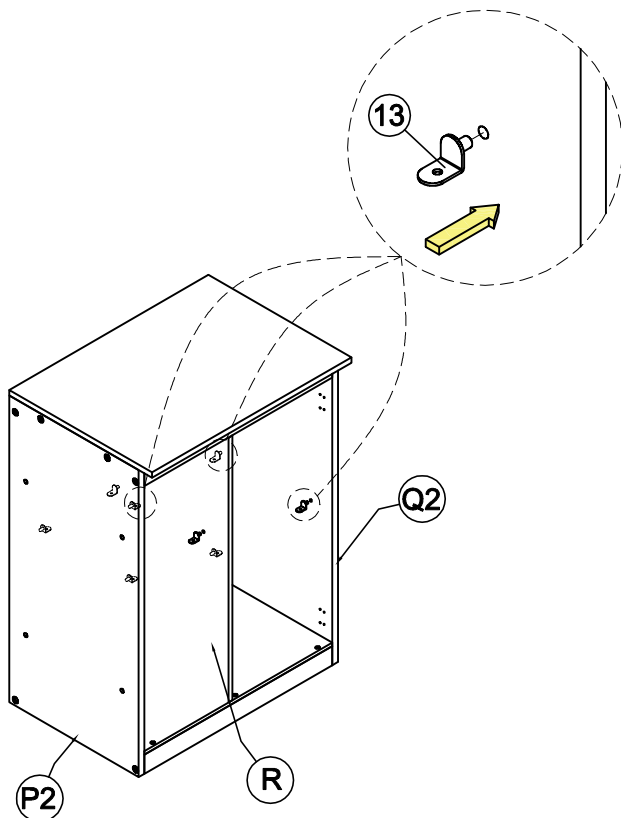

STEP 19

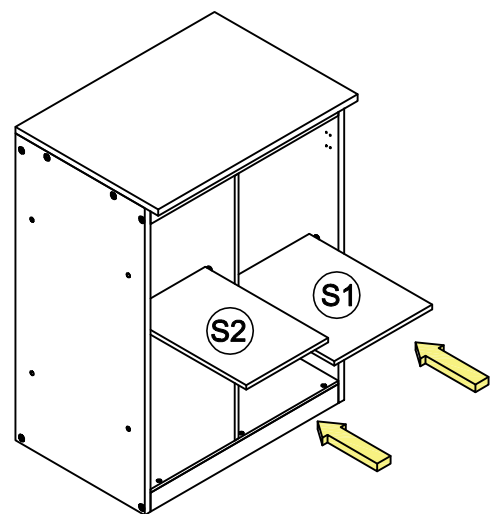


STEP 20

14



Wood crews
M3.5 * 12 - 8pcs

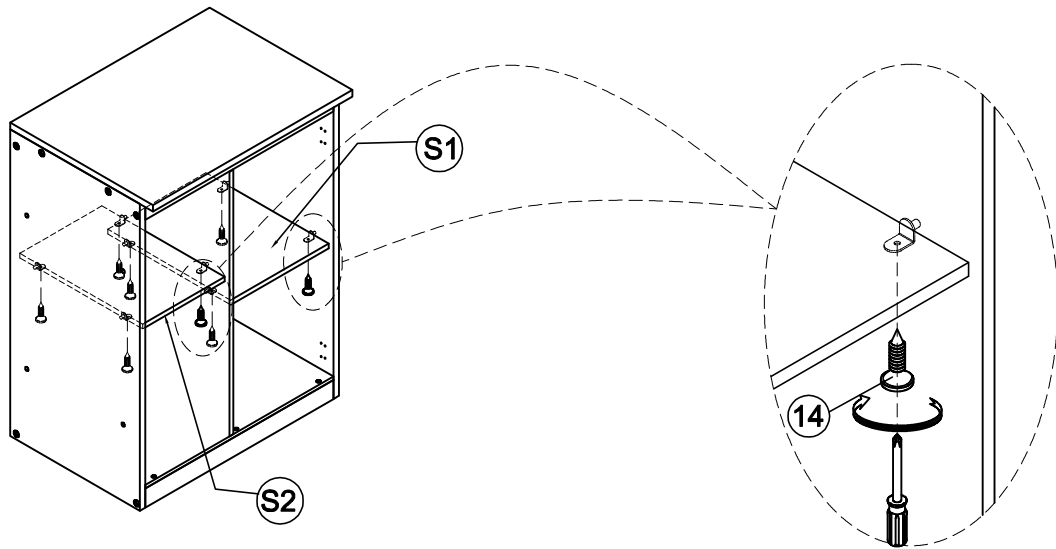

STEP 21

15




Hex - Head bolts
Ø1/4" * 25 - 4pcs


16



Canopy head though
Ø1/4" - 4pcs

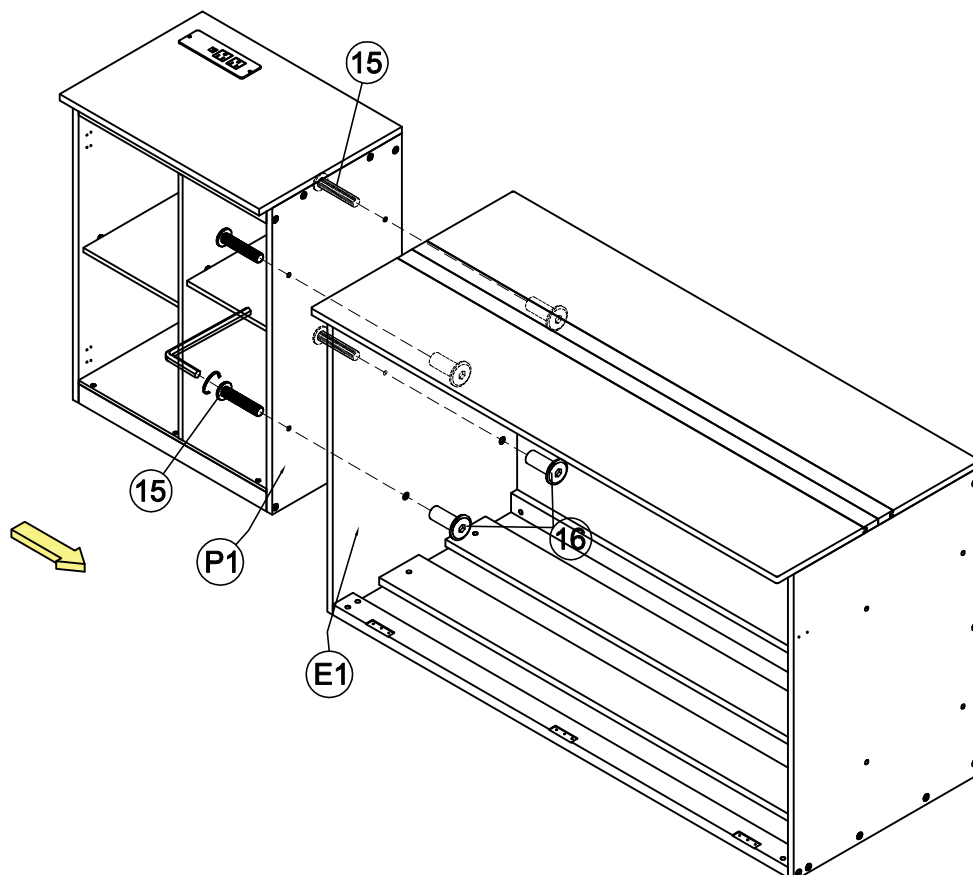

STEP 22

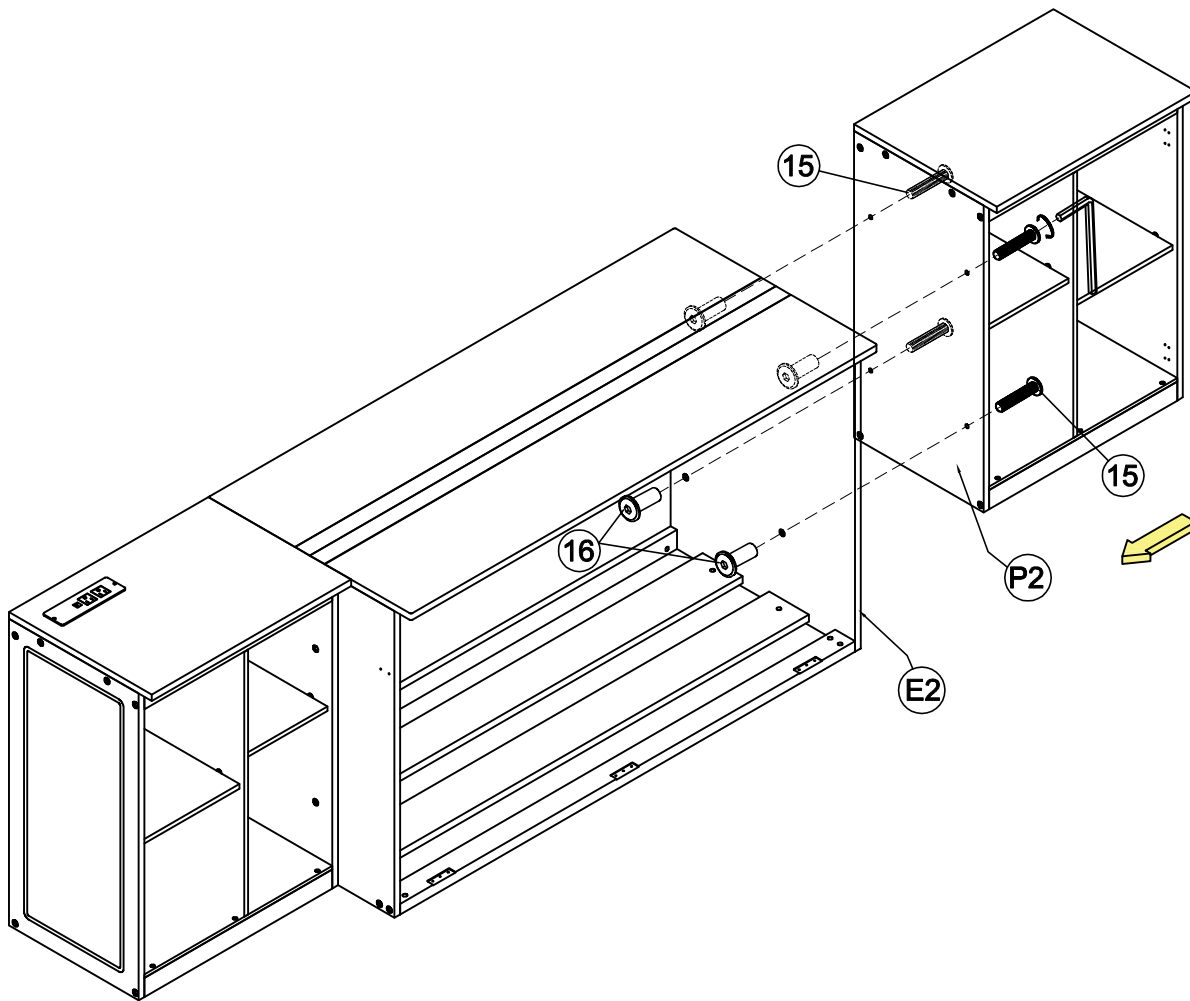

15




Hex - Head bolts
Ø1/4" * 25 - 4pcs

16



Canopy head though
Ø1/4" - 4pcs

STEP 23

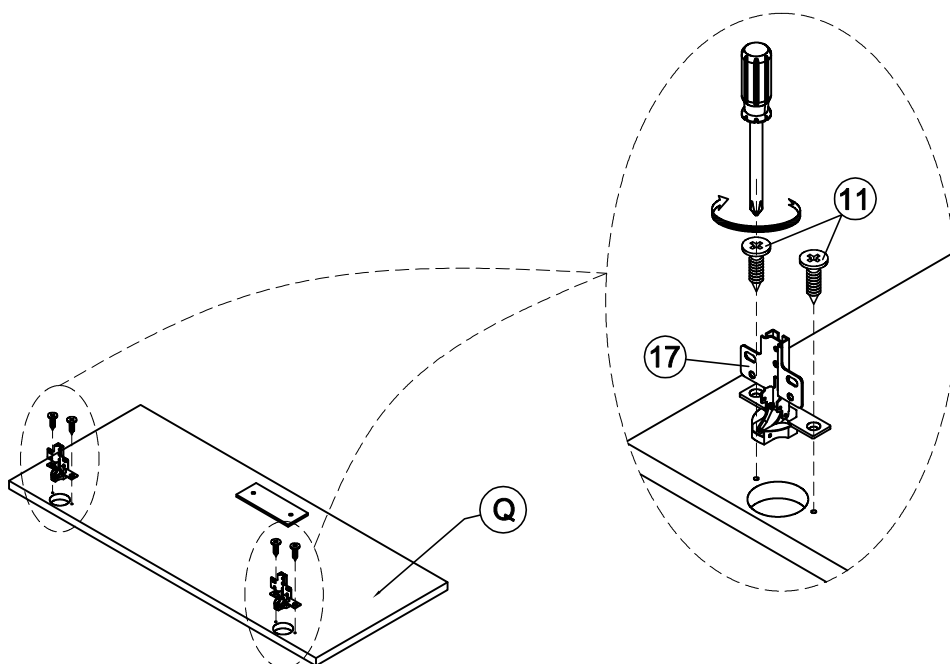

11



Wood screws
M3.5 * 15 - 8pcs

17



Full Overlay - 4pcs


X2

STEP 24

11




Wood screws
M3.5 * 15 - 16pcs


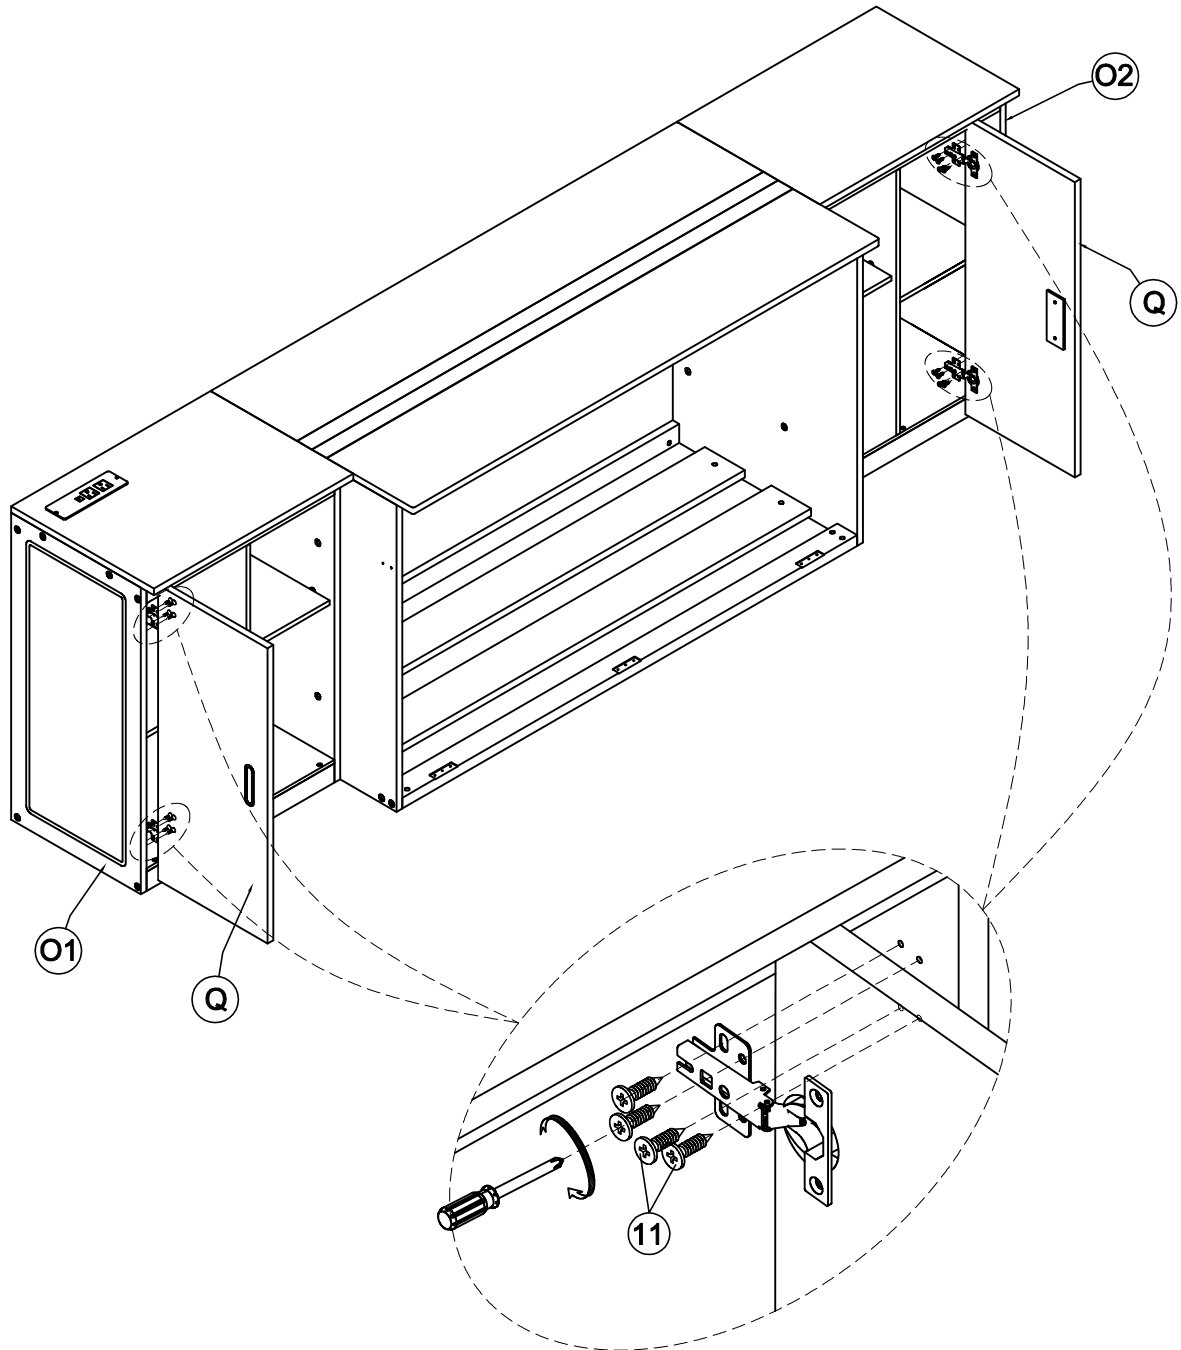


STEP 25

LEFT




RIGHT

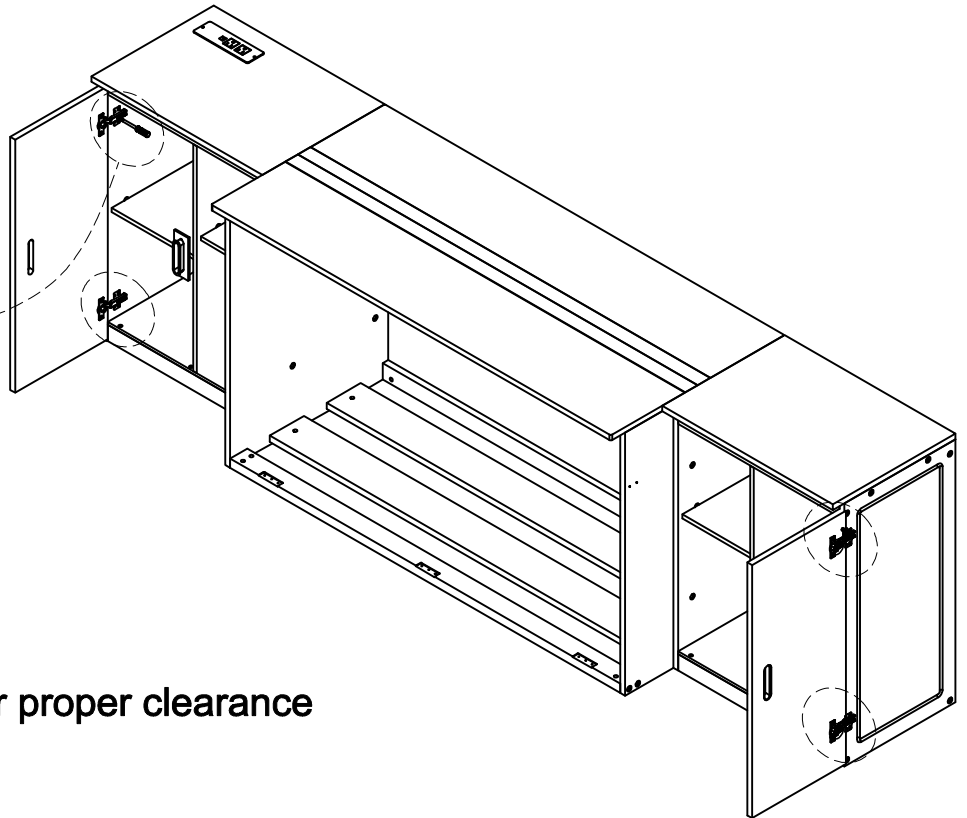
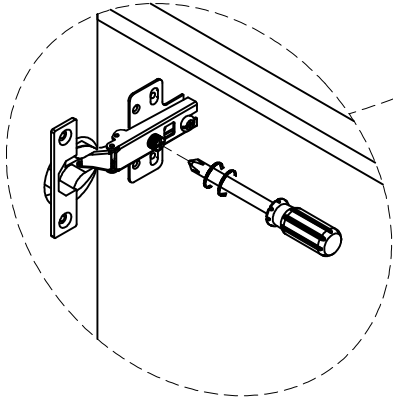


Adjust the hinges for proper clearance

FRONT




BACK

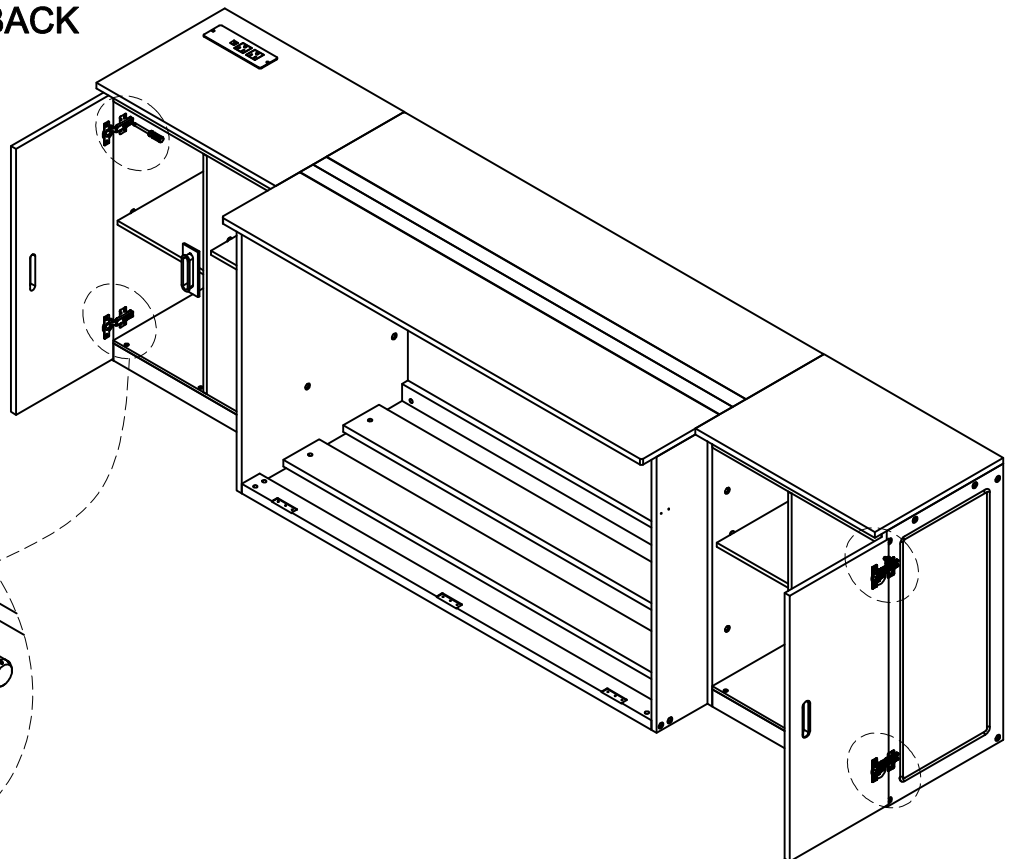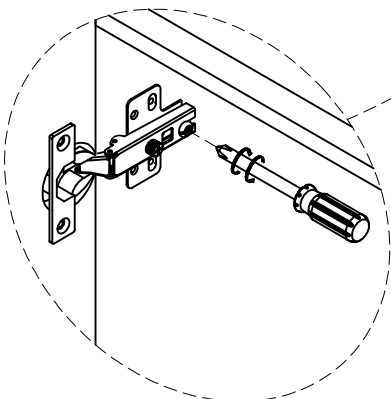

Adjust the hinges for proper clearance


STEP 26

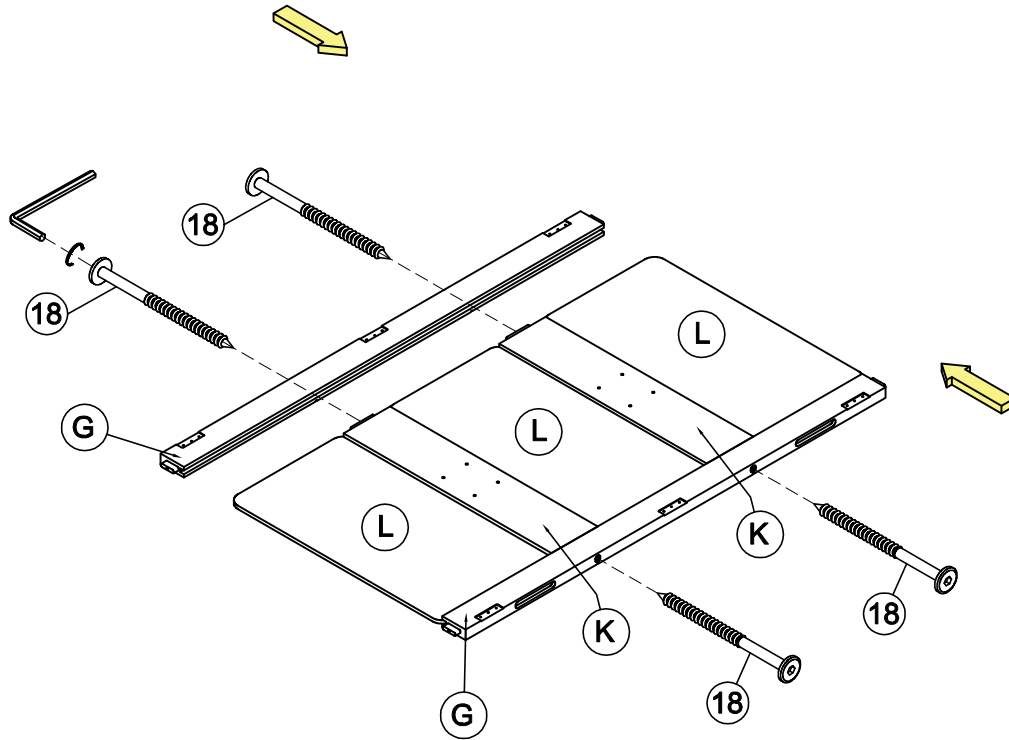

18

Hexagonal bolts catch wood
Ø1/4" * 90 - 4pcs


STEP 27

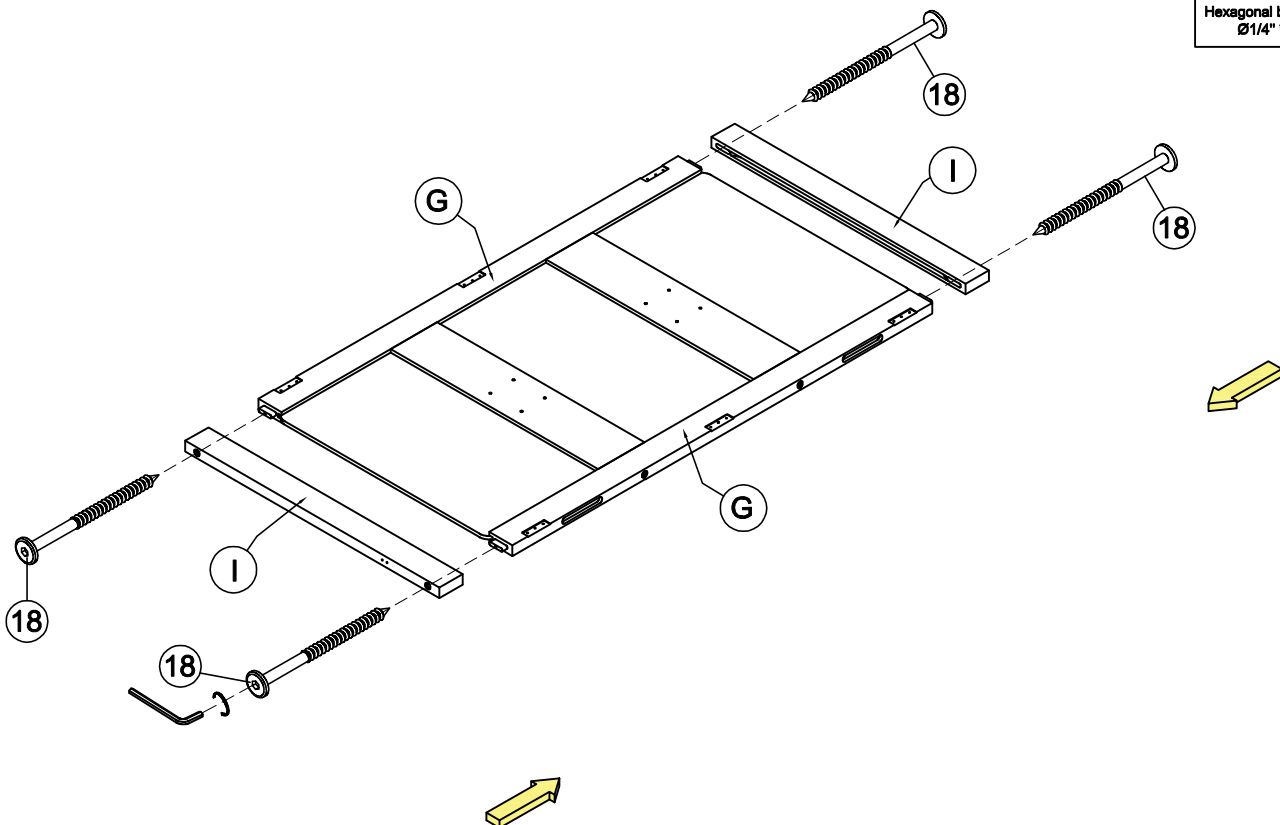

18

Hexagonal bolts catch wood
Ø1/4" * 90 - 4pcs


STEP 28

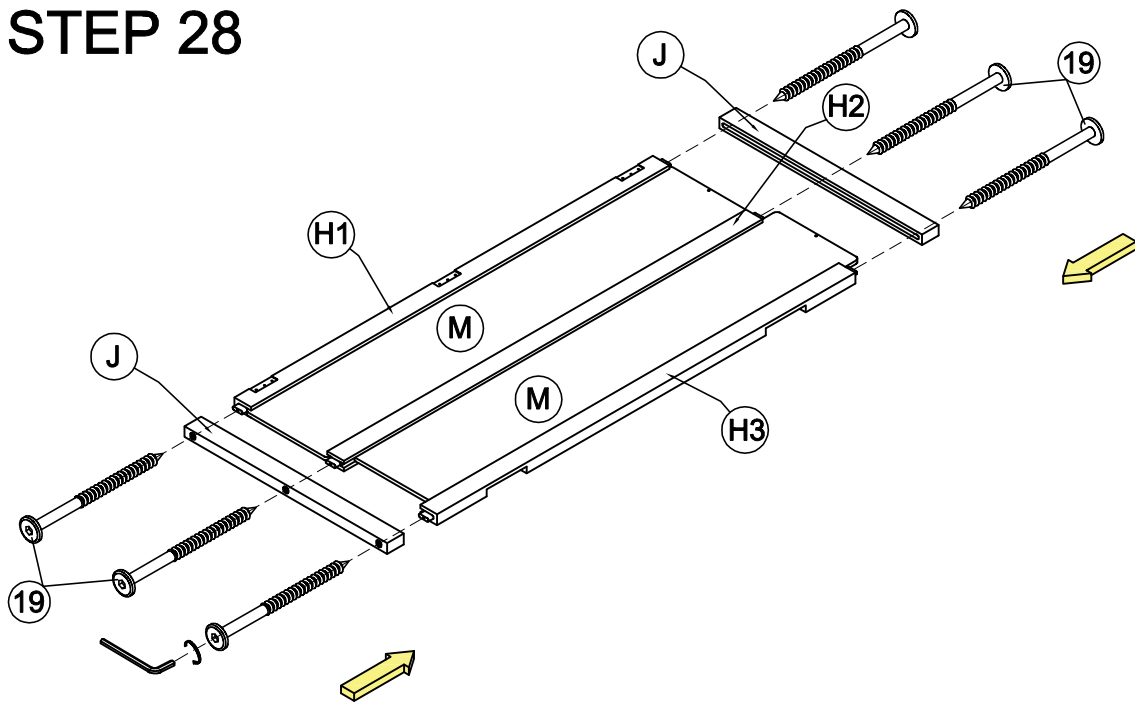


19

Hexagonal bolts catch wood
Ø1/4" * 70 - 6pcs

STEP 29

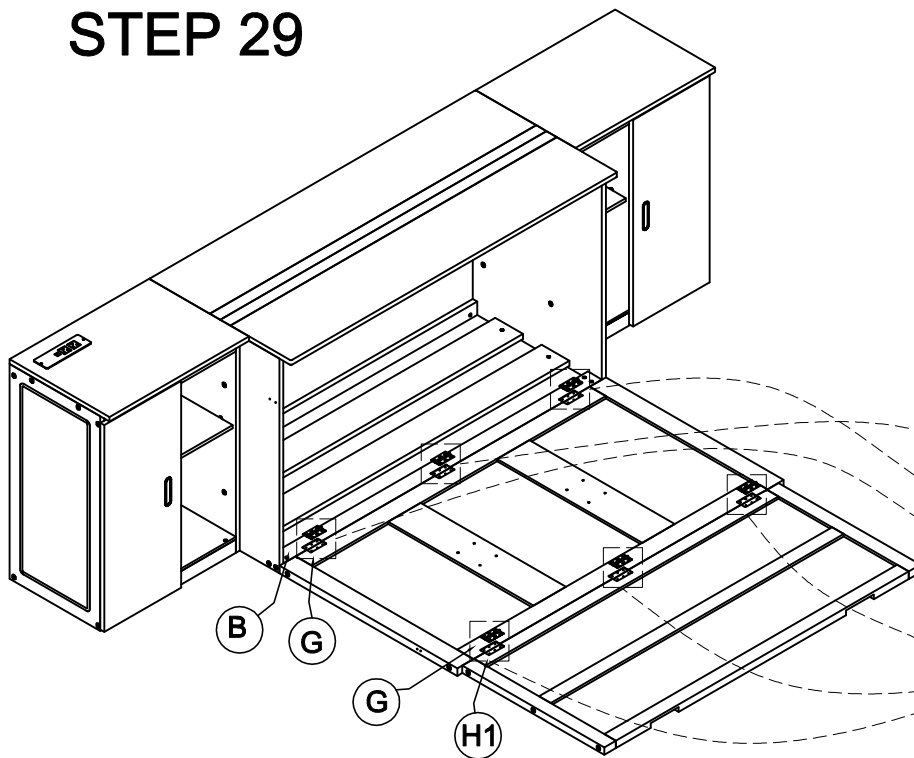

20




Hinge - 6pcs

11



Wood crews
M3.5 * 15 - 36pcs

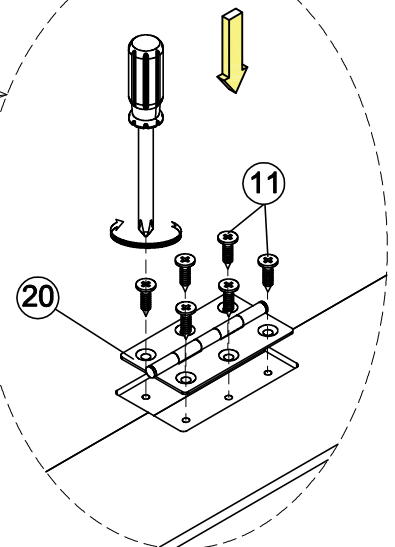


STEP 30

11



Wood screws
M3.5 * 15 - 8pcs

21




Duckbill lock A - 2pcs


22




Duckbill lock B - 2pcs

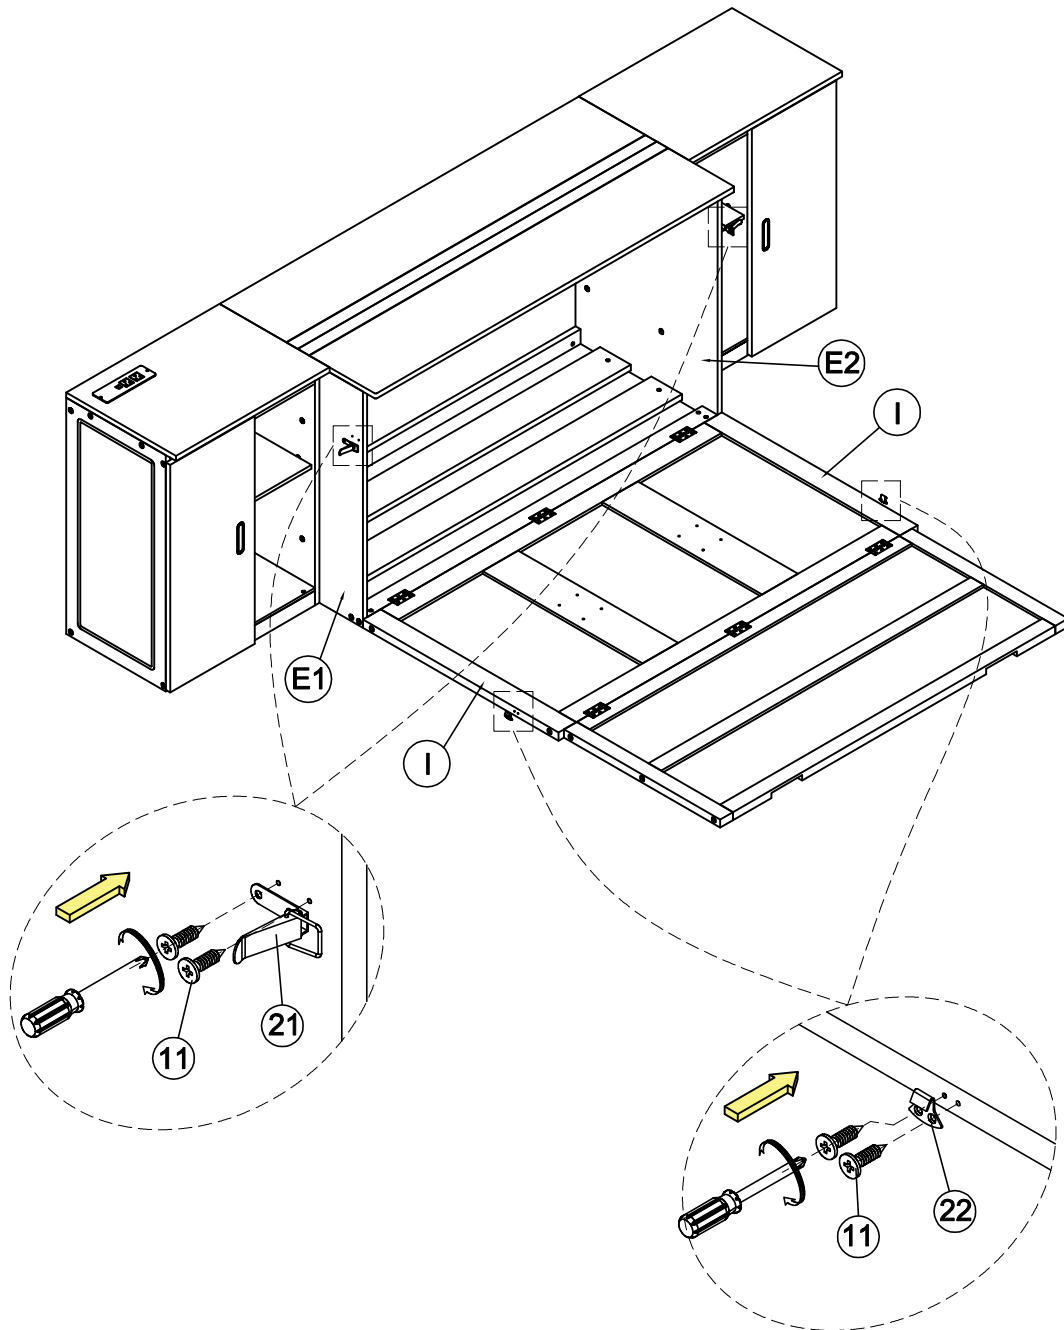

STEP 31

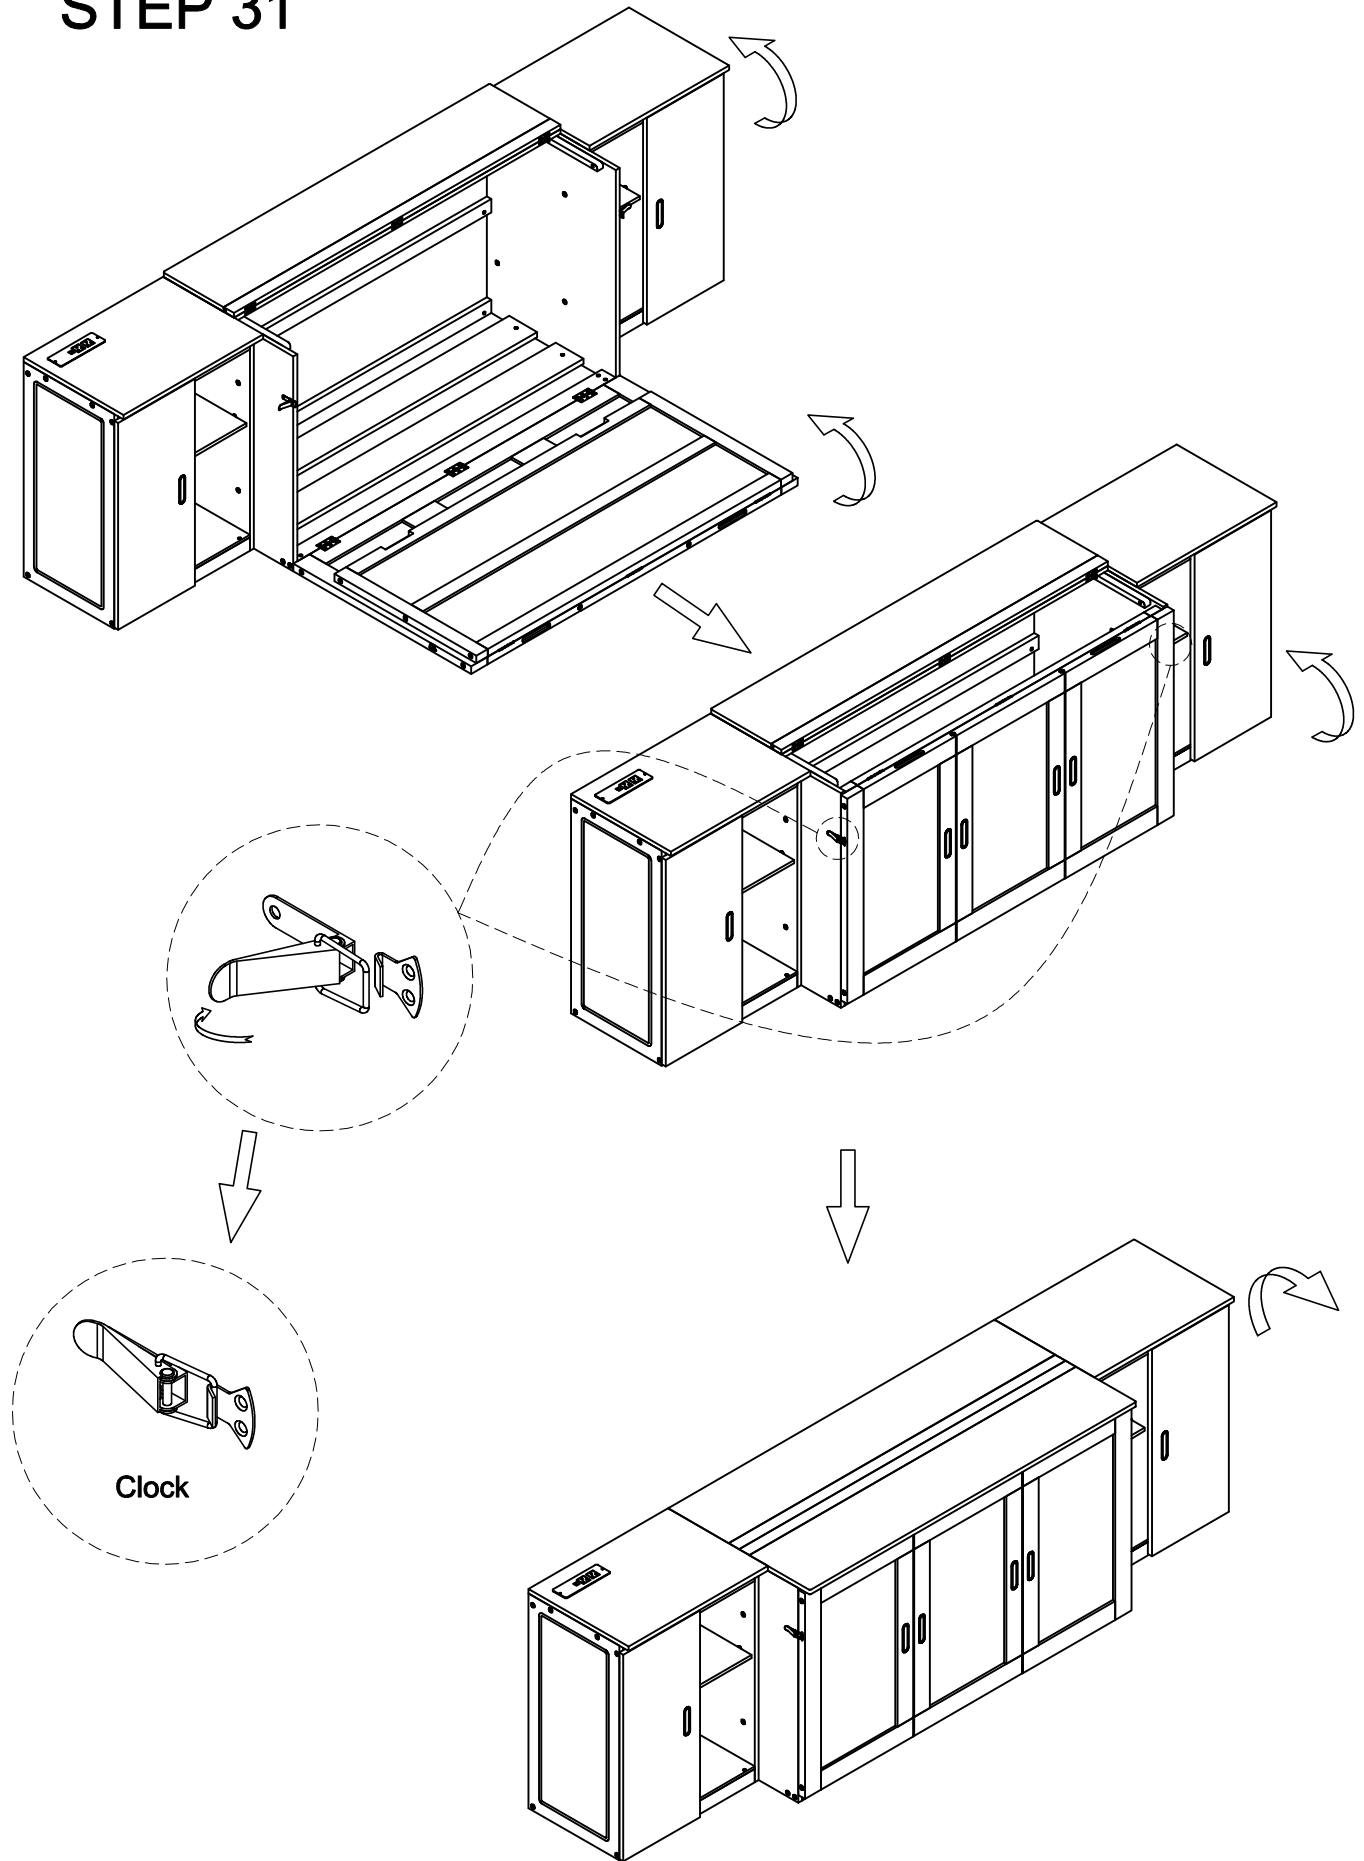


STEP 32

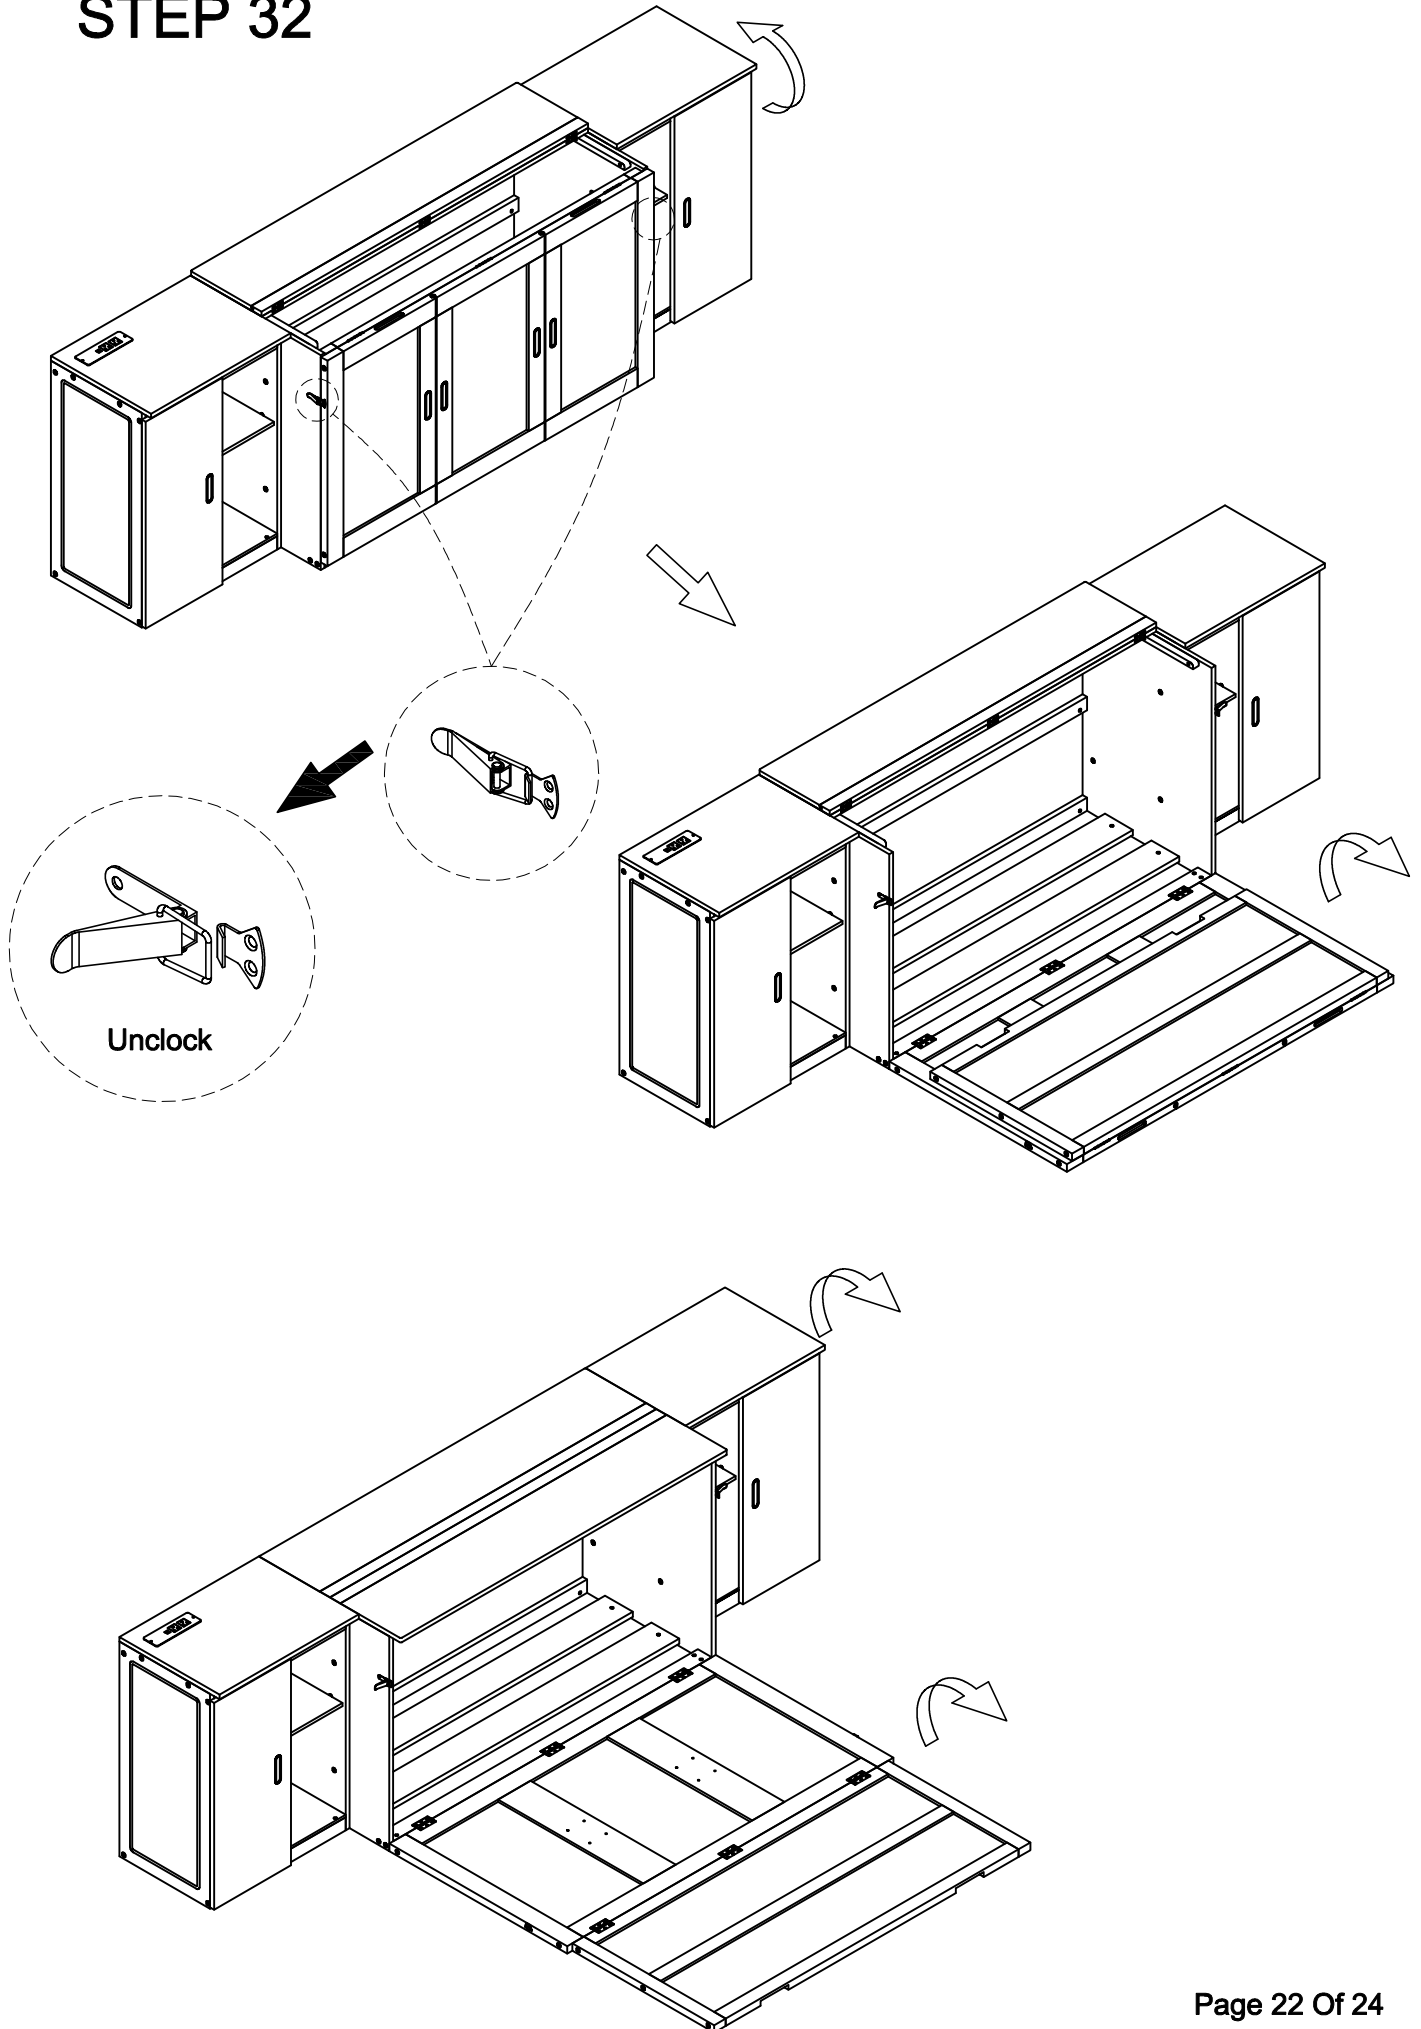


STEP 33

Remove HW numbers #15 and #16
to separate the product into
2 independent clusters

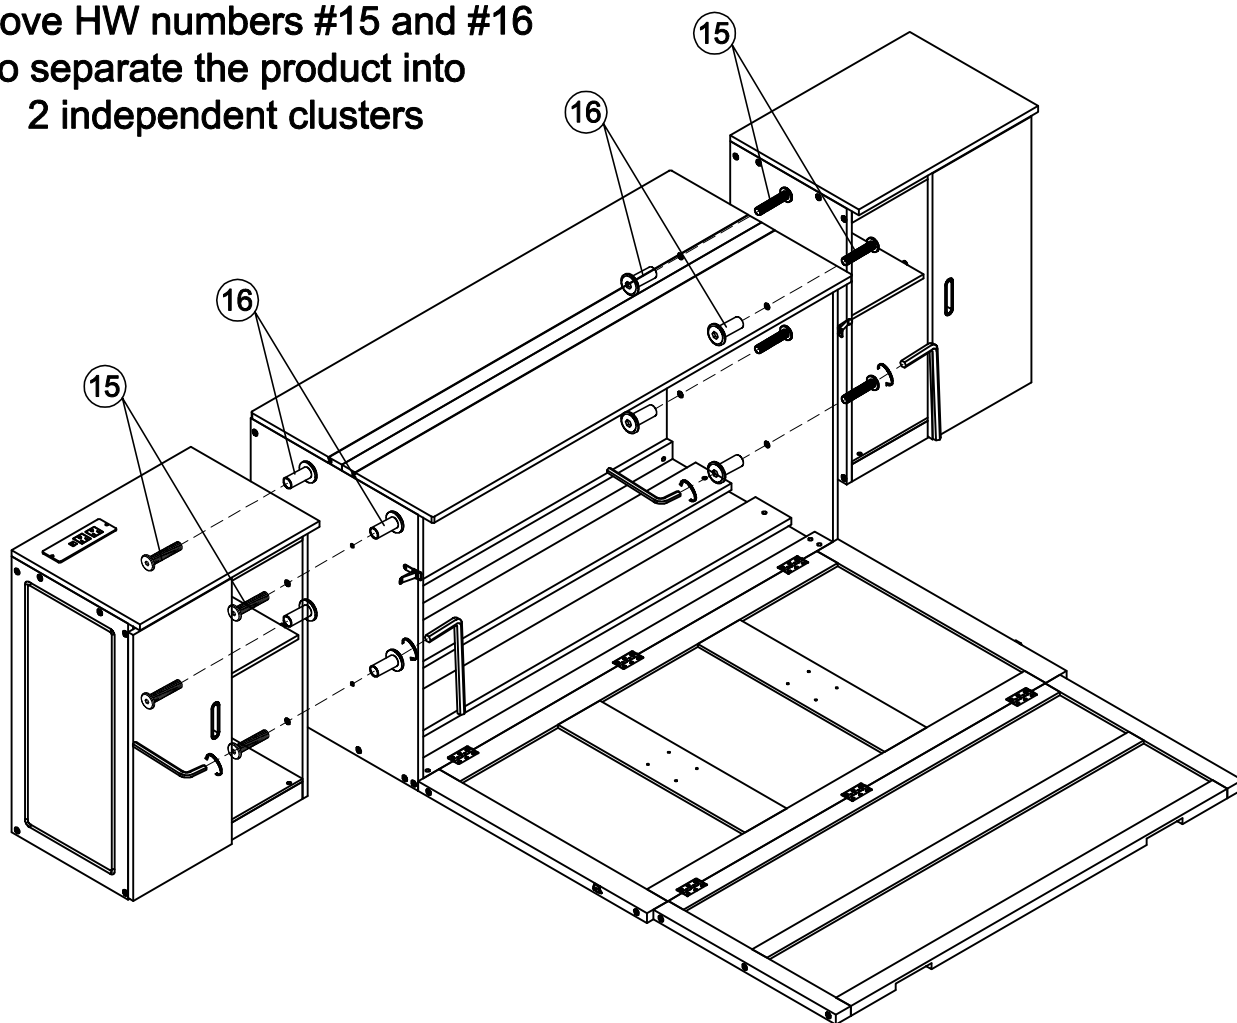

STEP 34

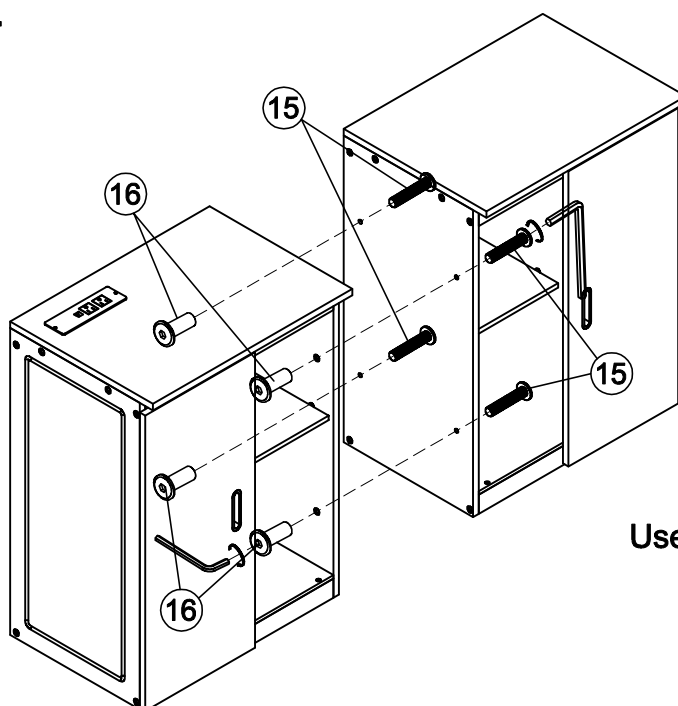

15



Hex - Head bolts
Ø1/4" * 25 - 4pcs

16




Canopy head through
Ø1/4" - 4pcs


Use HW numbers #15 and #16
of step 32

COMPLETED


OPTION 1

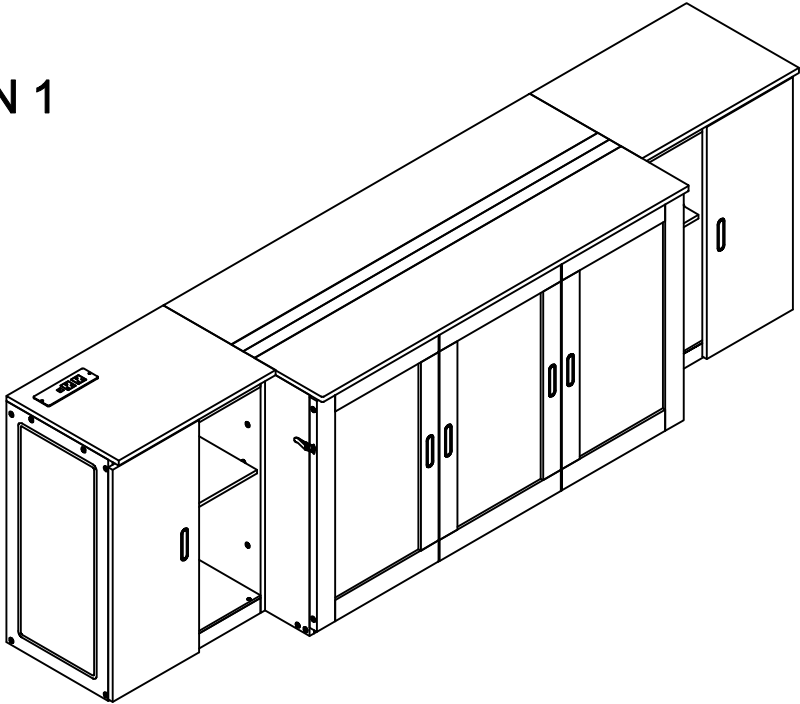

OPTION 2

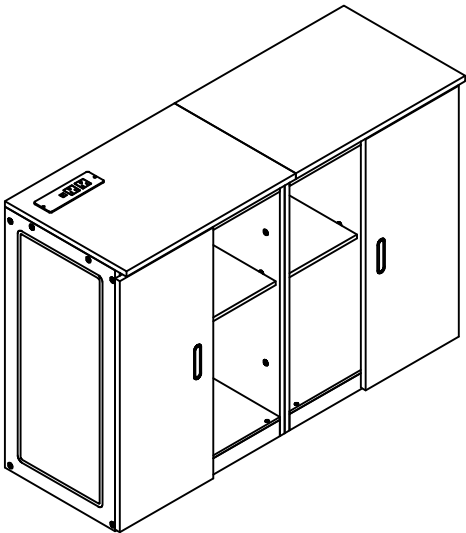

CABINET

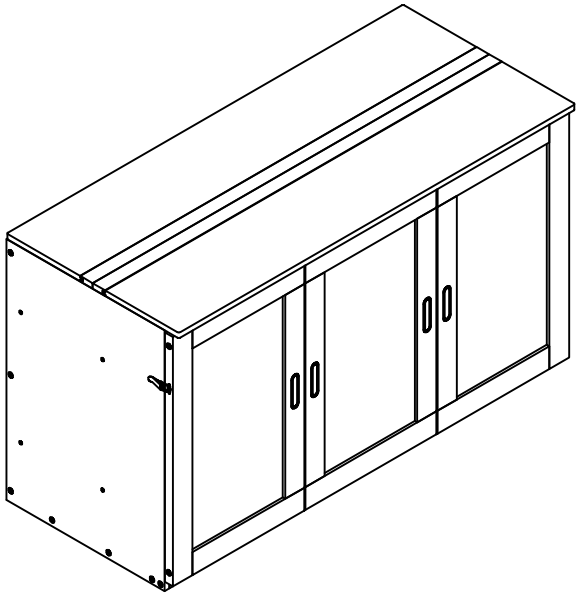

MURPHY BED