





MANHATTAN
COMFORT

167GMC

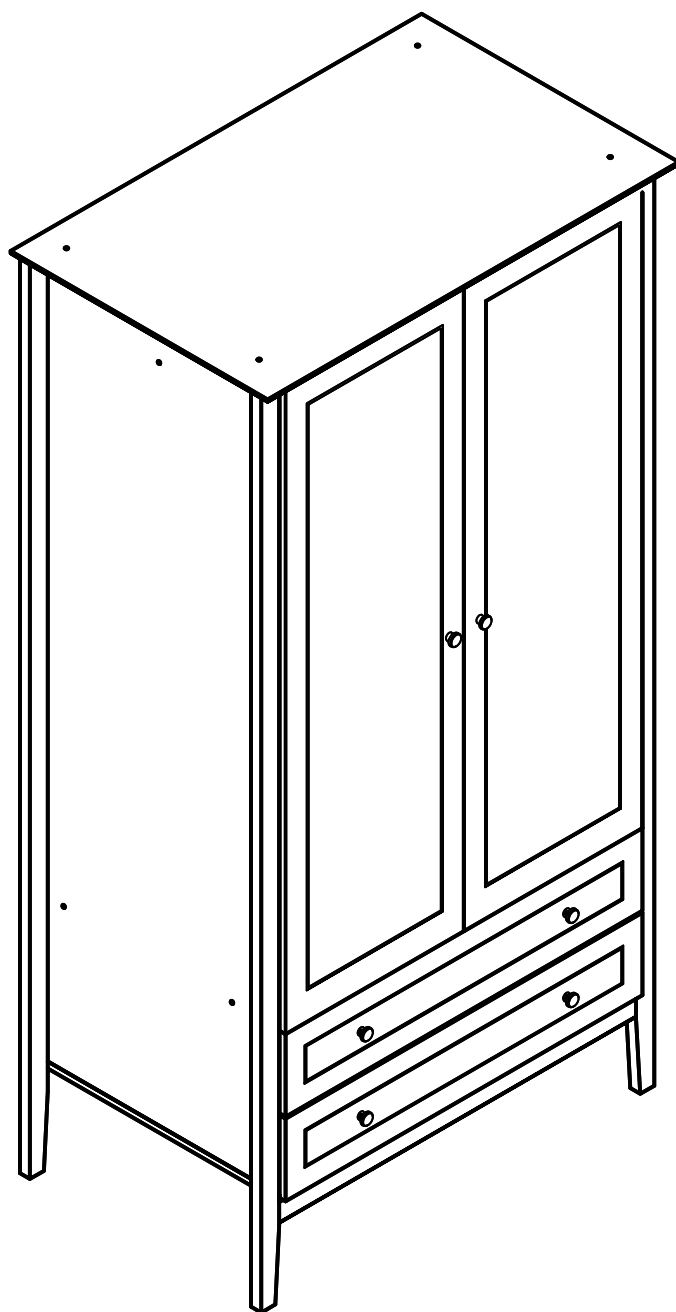

V.08192022

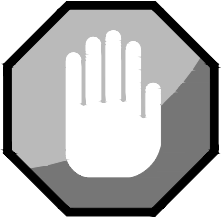


STOP!


Before beginning the assembly process, ensure all boxes and parts have been delivered.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

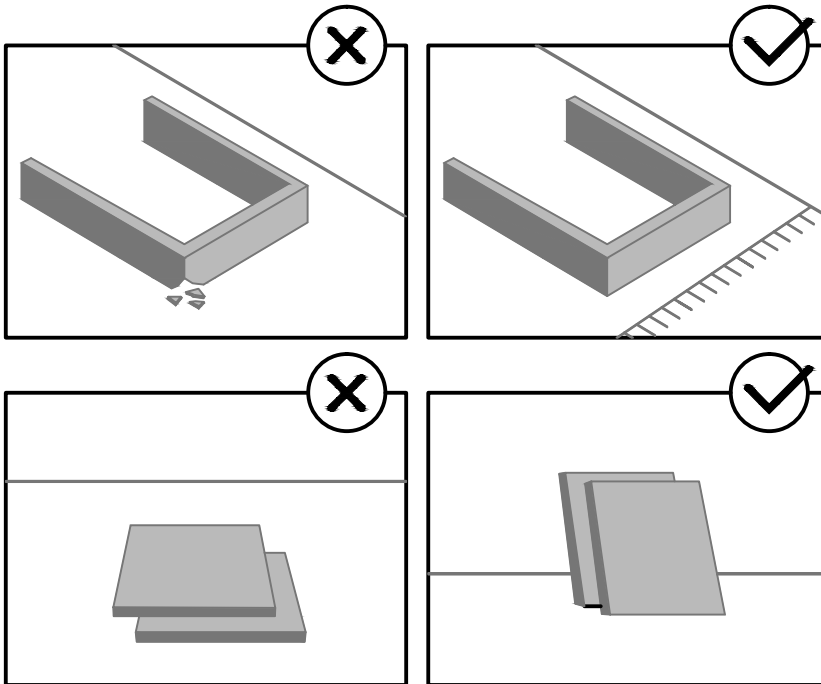

TOOLS REQUIRED

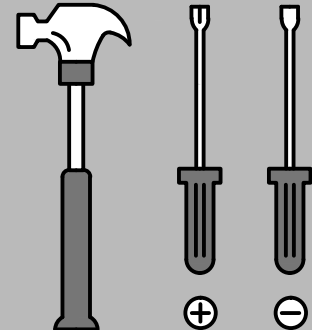

SUPPORT SITE




View our assembly video online
WWW.MANHATTANCOMFORT.COM




Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail: **help@manhattancomfort.com**



Included in this package:

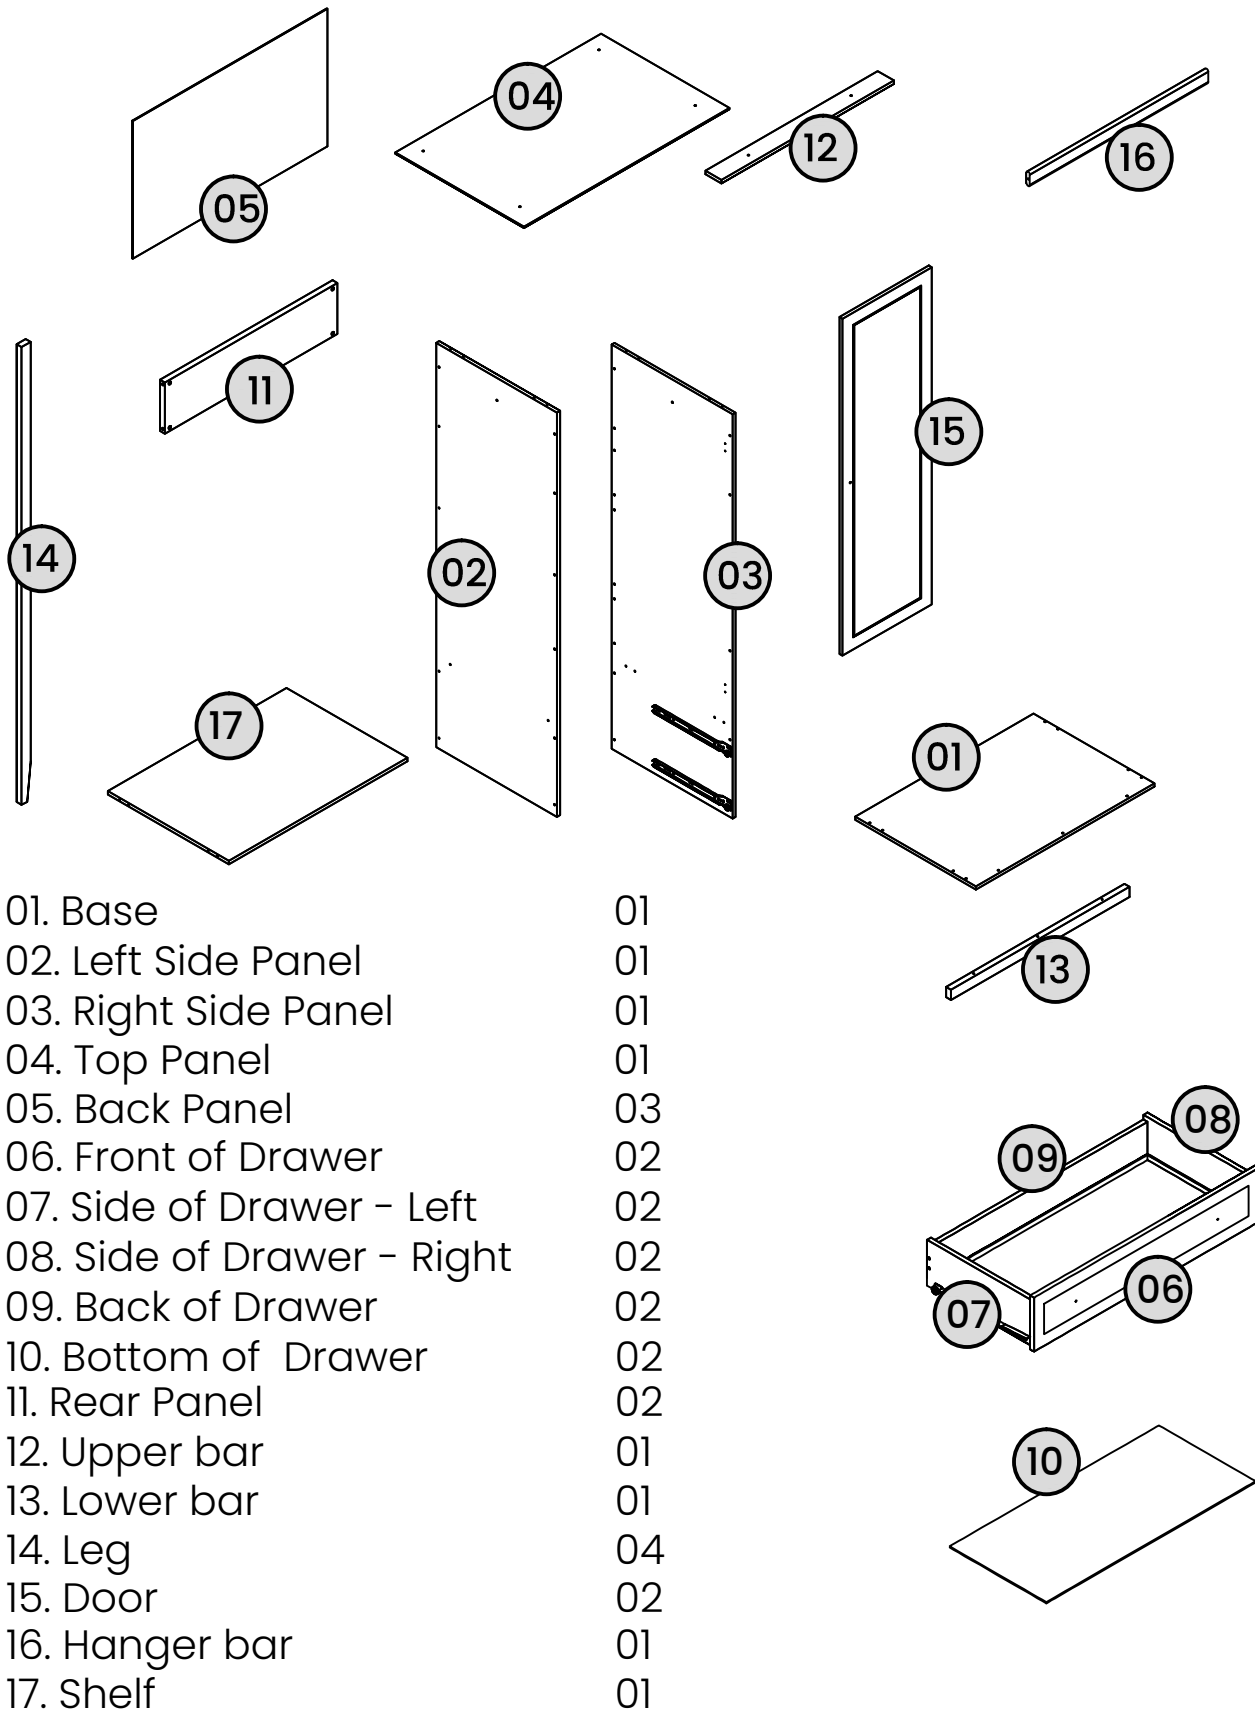

Included in this package:



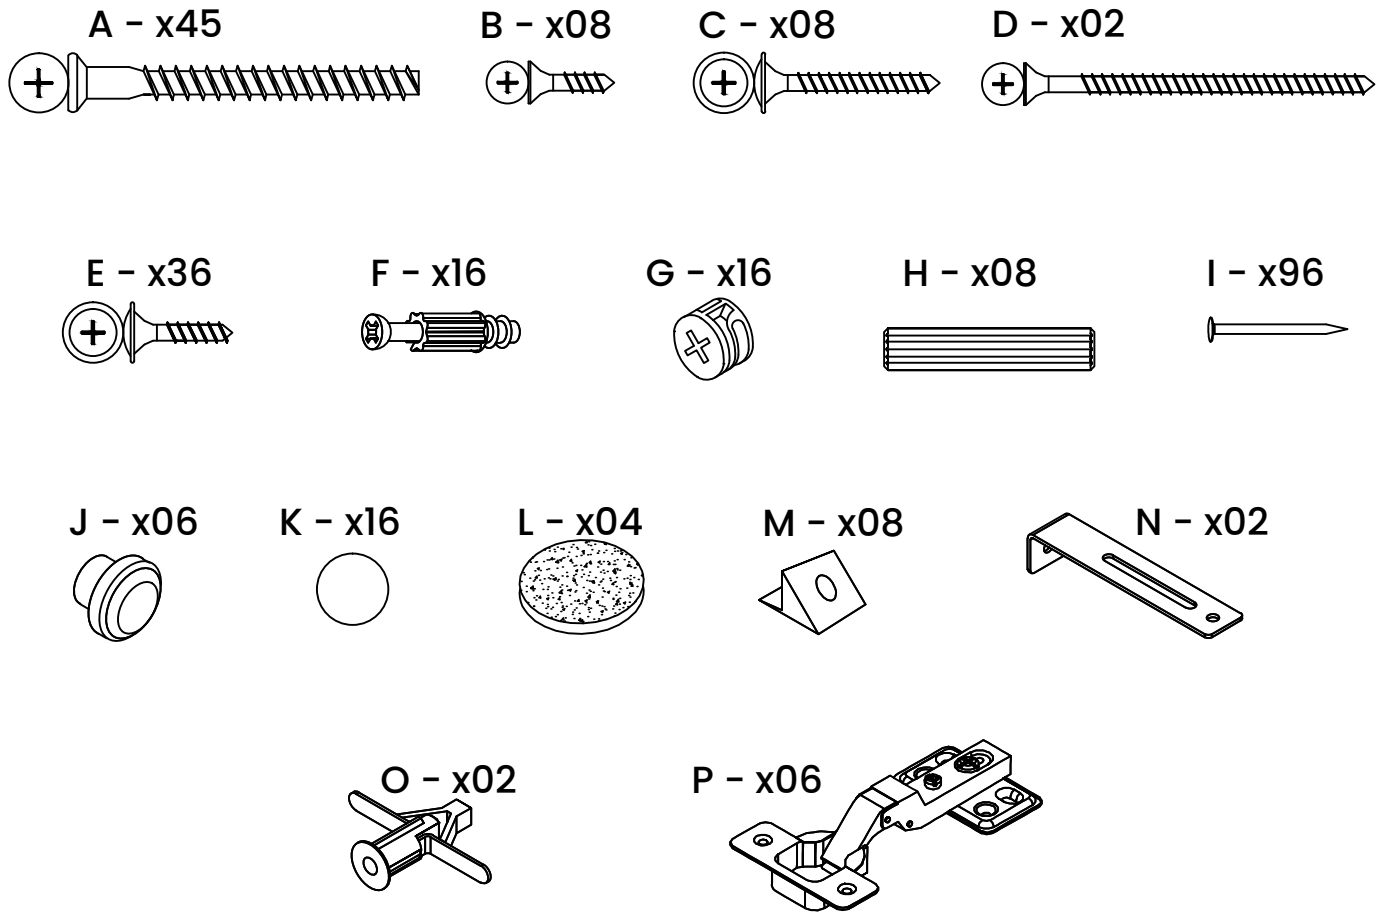


Where to find the items:

BOX - 1	
02	
03	
07	
08	
09	
14	
15	
16	

BOX - 2			
01	17	H	P
04	A	I	
05	B	J	
06	C	K	
10	D	L	
11	E	M	
12	F	N	
13	G	O	


Weight capacity:

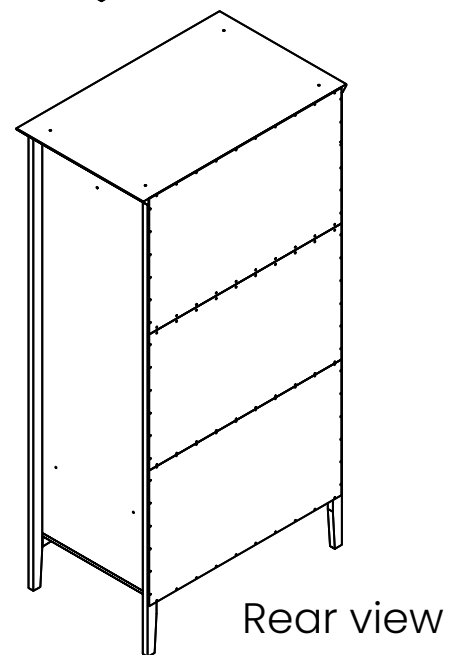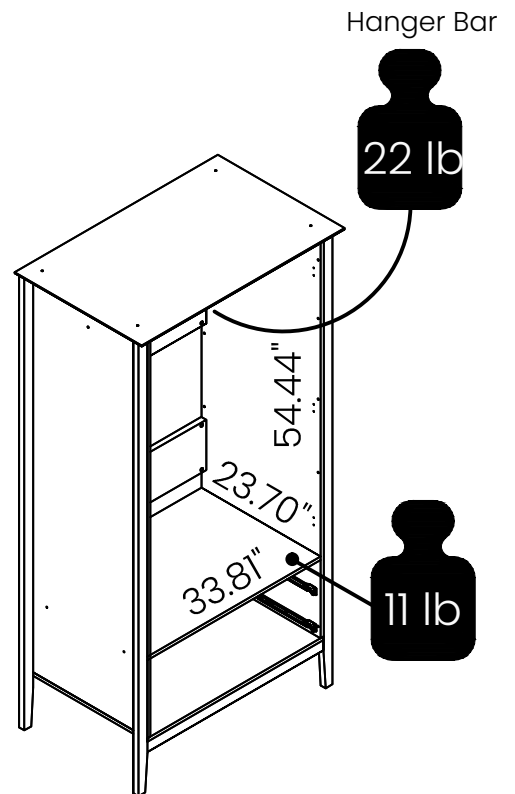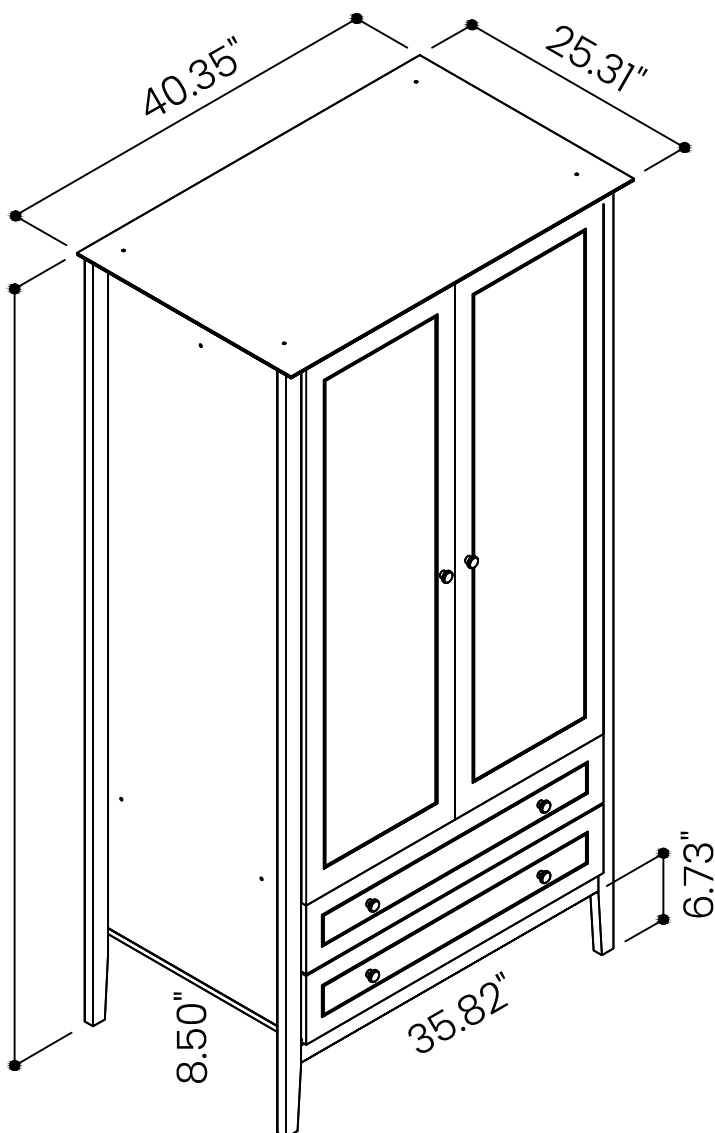

Attention, all the assemblage must be done on the cardboard box or the Styrofoam boards to avoid damage to the parts.


- It is mandatory two people to assemble**
- It is recommended to use a ladder**

Step 01



H = 08x

Apply the hardware (H) into the parts 02 and 03.

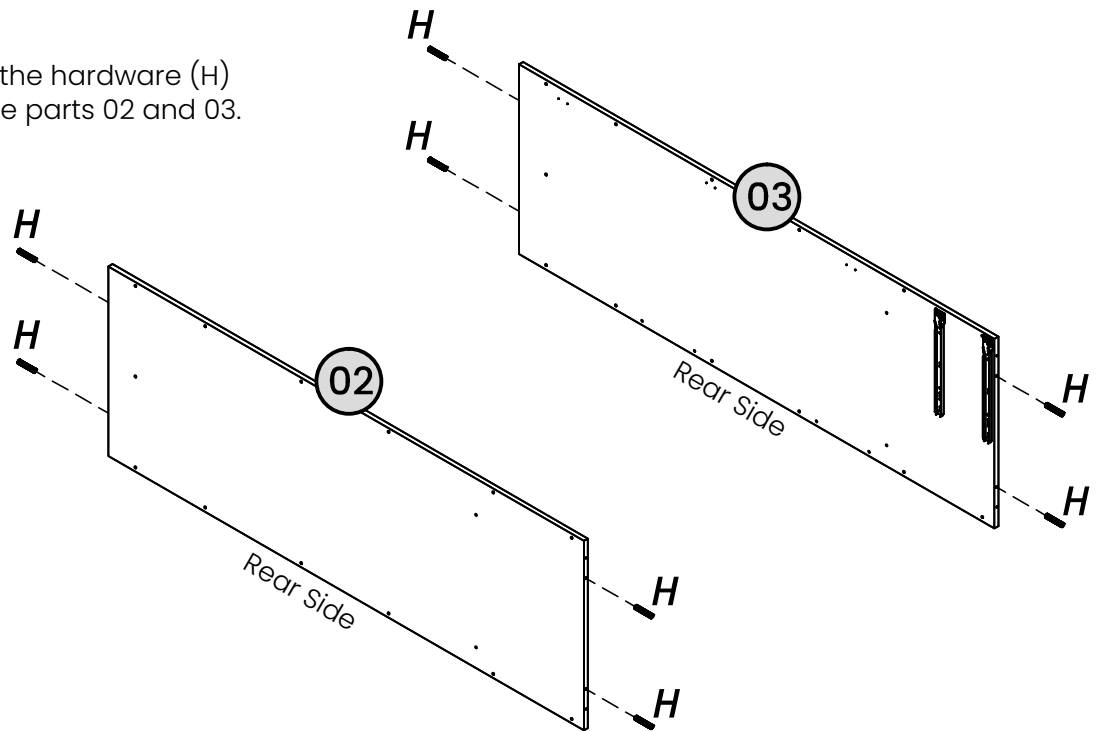



Step 02





F = 08x

Apply the hardware (F) into the parts 02 and 03.

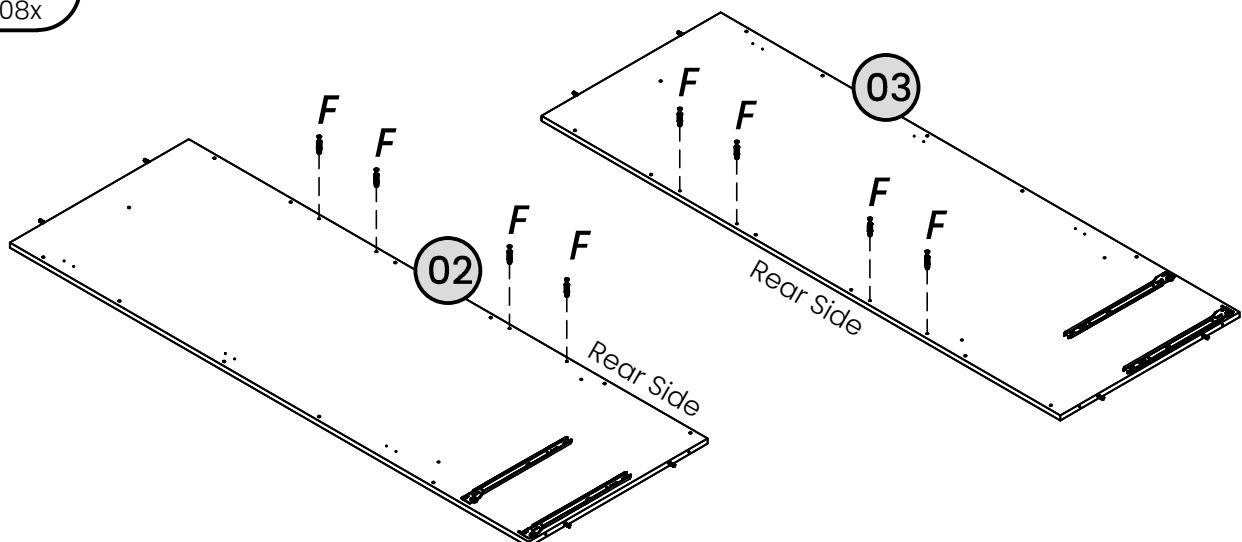


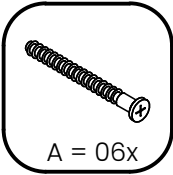
Step 03

Connect the part 14
onto the part 02
with the hardware (A).

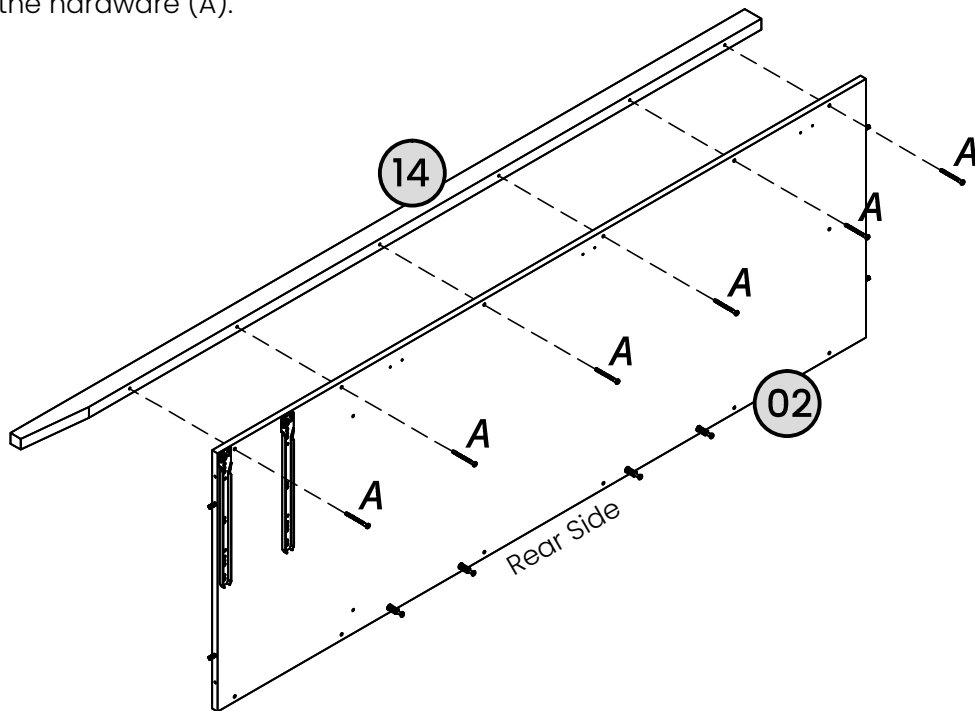
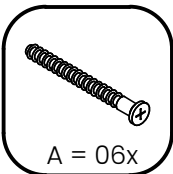
**Step 04**

Connect the part 14
onto the part 02
with the hardware (A).

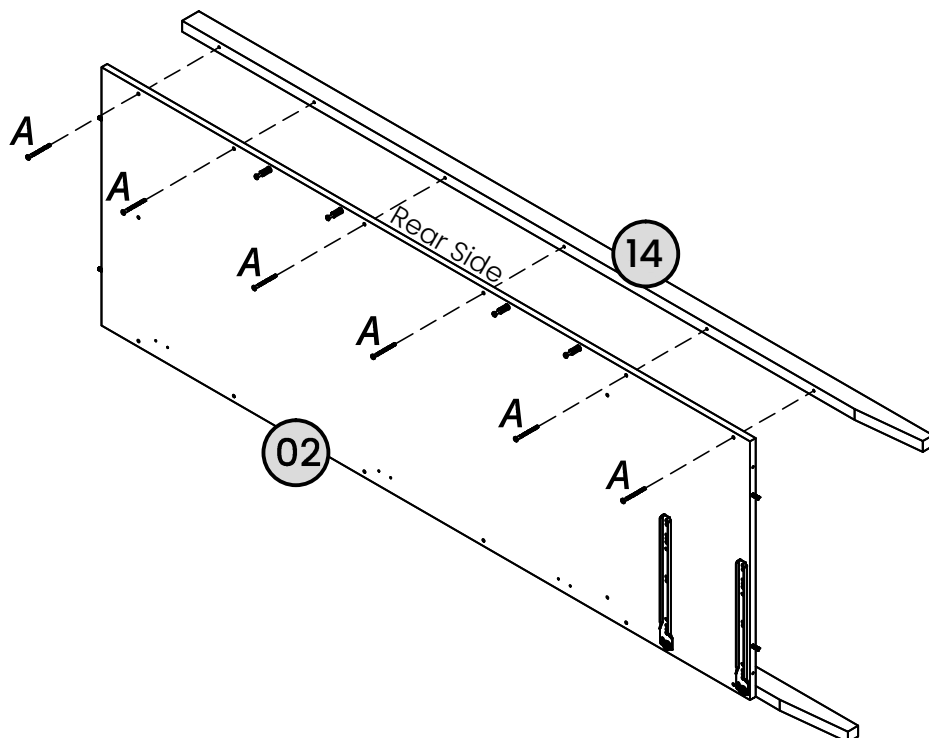


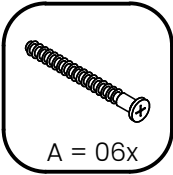Step 05

Connect the part 14
onto the part 03
with the hardware (A).

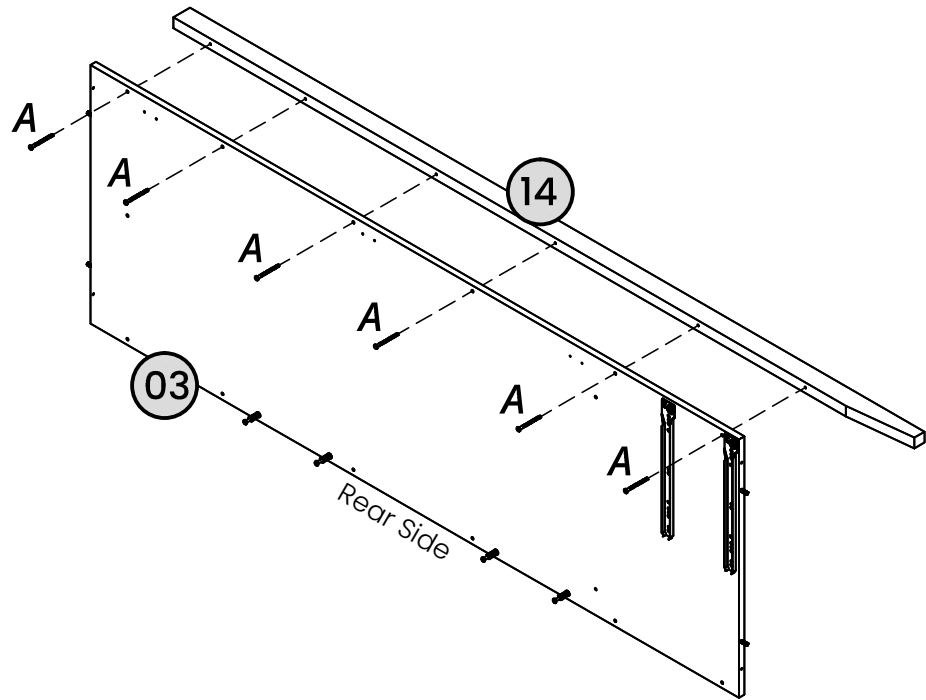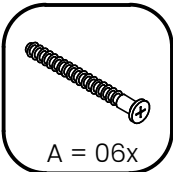**Step 06**

Connect the part 14
onto the part 03
with the hardware (A).

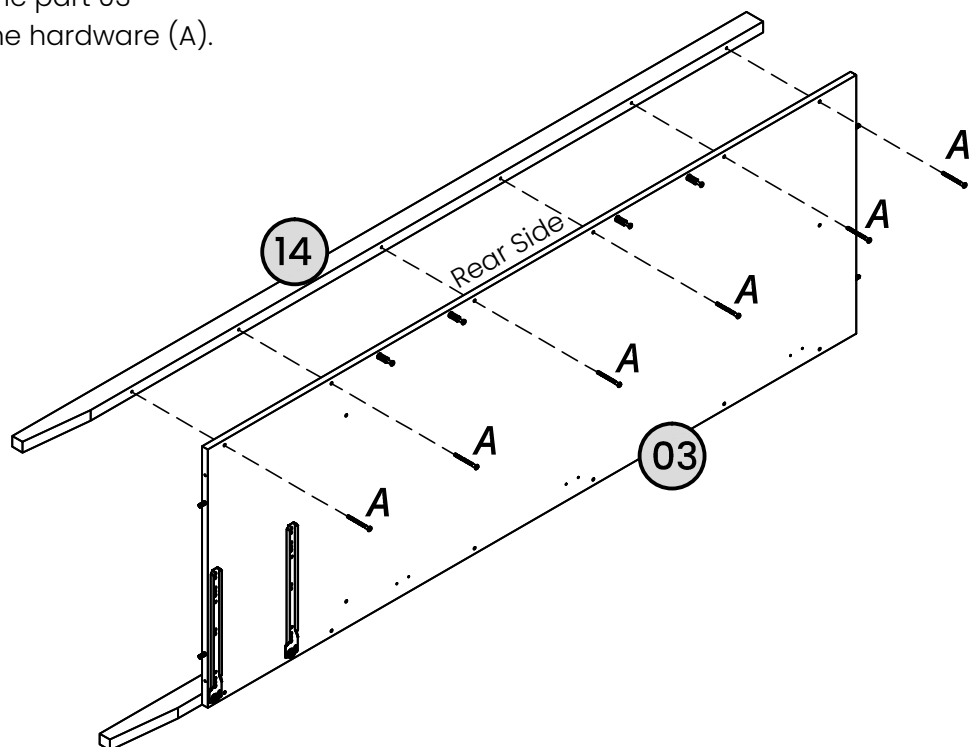

Step 07




Connect the part 11 onto the part 02 with the hardware G.



G = 04x



K = 04x

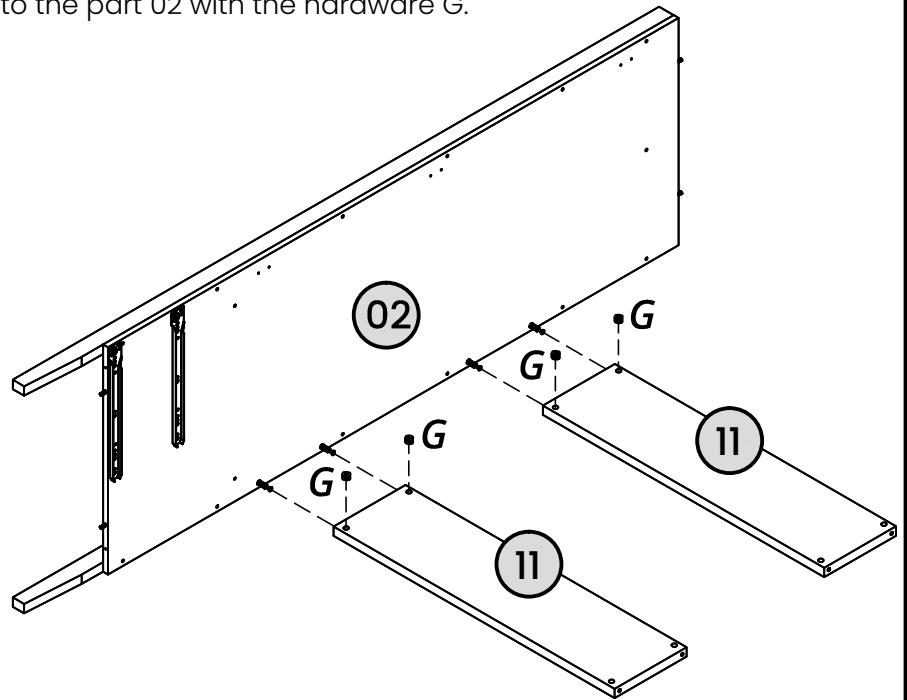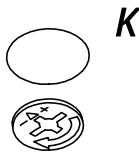

Apply the hardware (K) on the hardware (G).

Step 08




Connect the part 11 onto the part 03 with the hardware G.




G = 04x




K = 04x

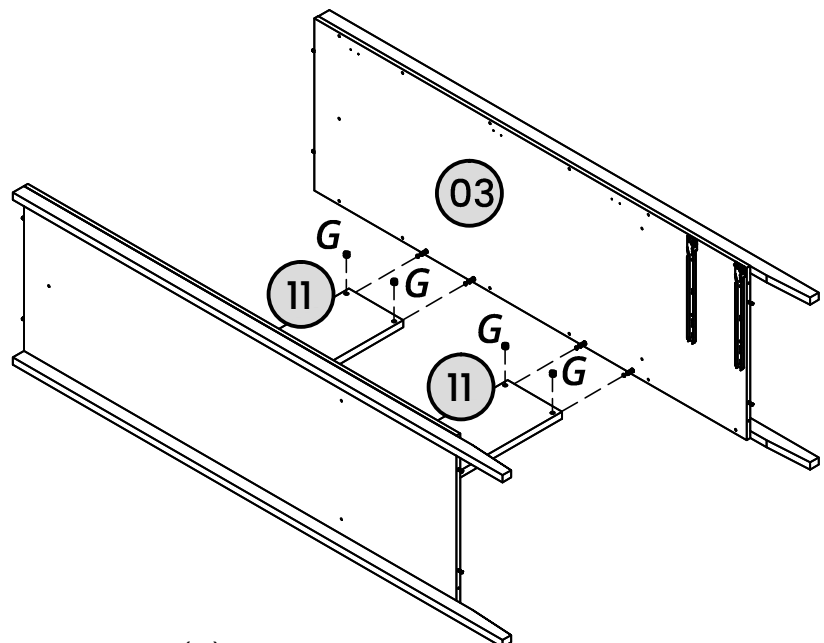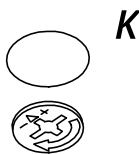


Apply the hardware (K) on the hardware (G).

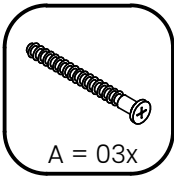Step 09

Connect the part 13 onto the part 01 with the hardware (A).

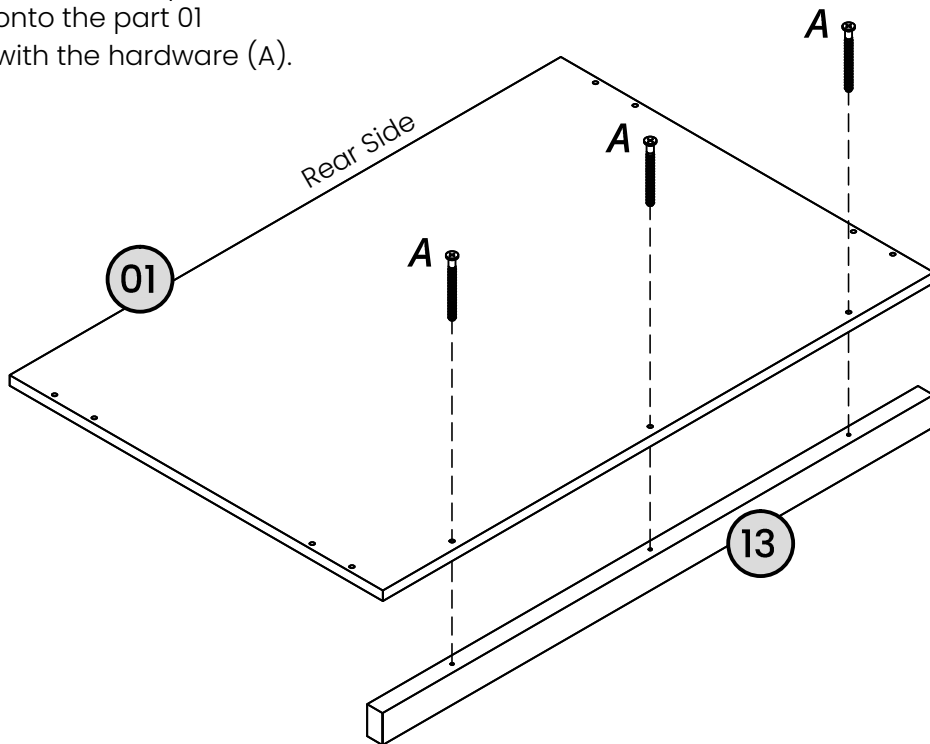**Step 10**


Connect the part 01 onto the part 02 and 03 with the hardware (A).

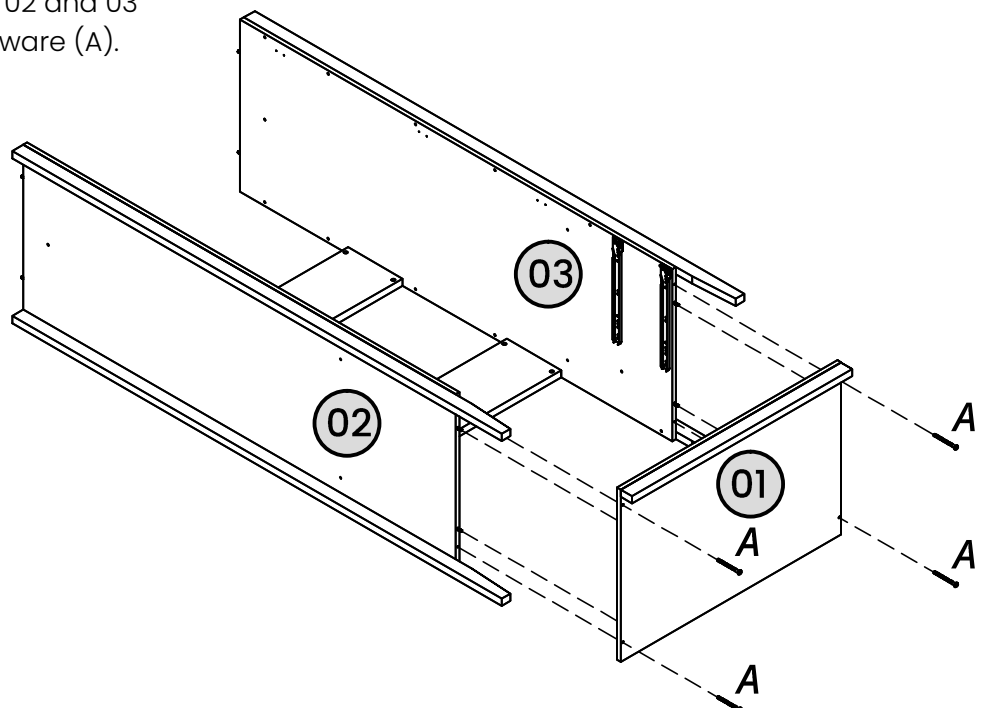

Step 11




Connect the part 12 onto the part 04 with the hardware (C).

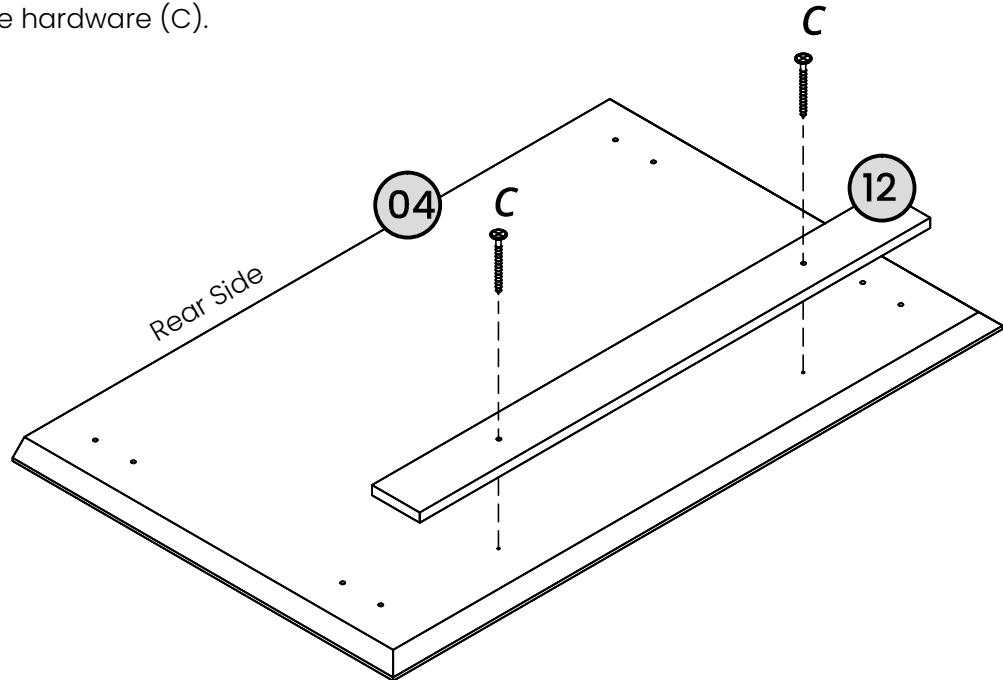

Step 12



Connect the part 04 onto the part 02 and 03 with the hardware (A).

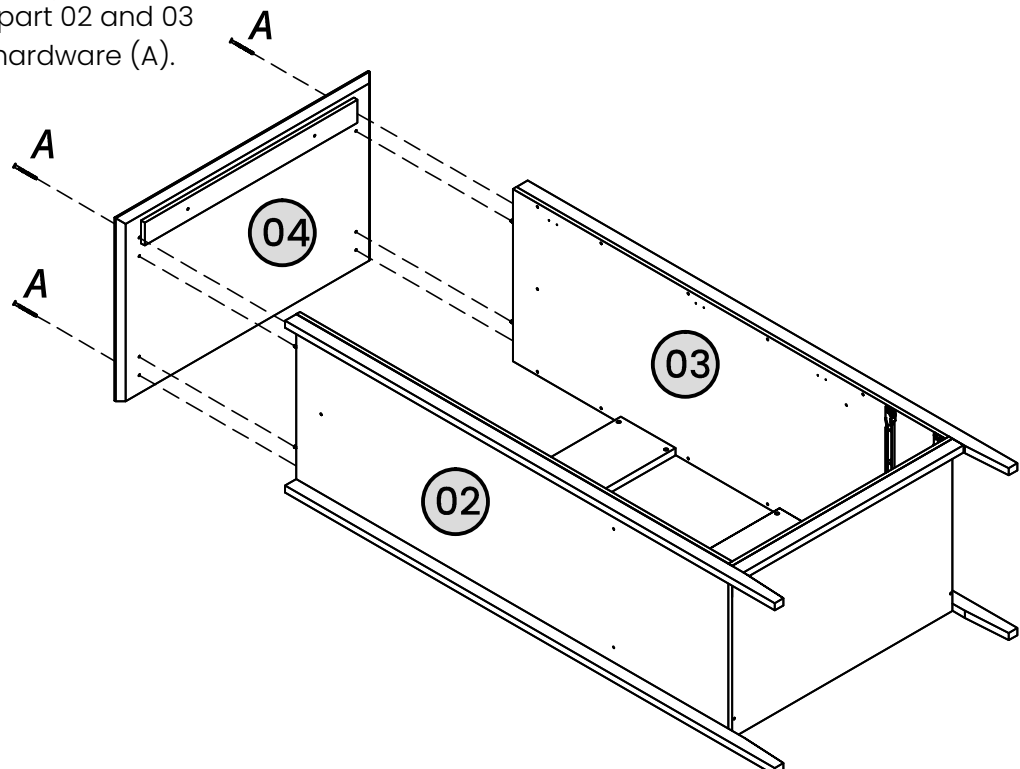


Step 13




L = 04x

Apply the hardware (L) into the part 14.

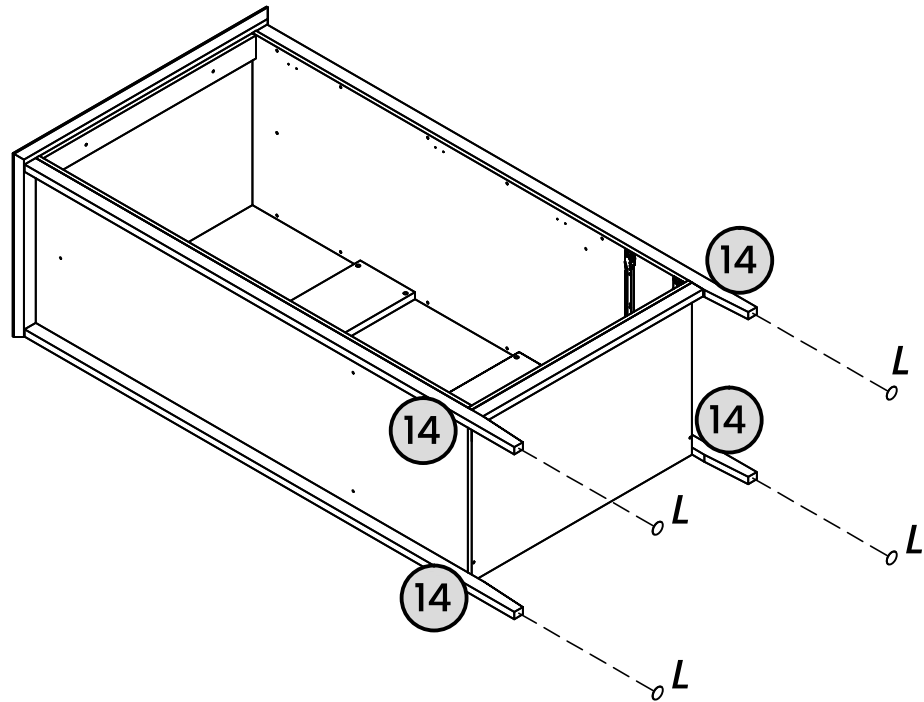


Step 14




A = 06x


Connect the part 16 onto the part 02 and 03 with the hardware (A).

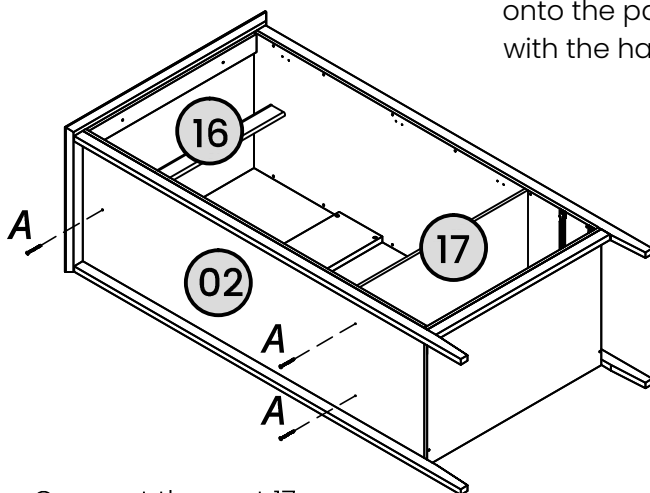


Connect the part 17 onto the part 02 with the hardware (A).

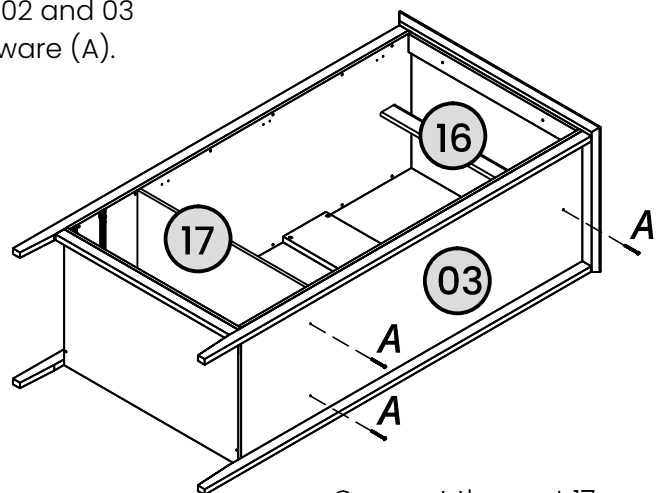

Connect the part 17 onto the part 03 with the hardware (A).

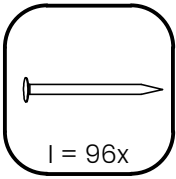Step 15




Connect the part 05 with the hardware (I).

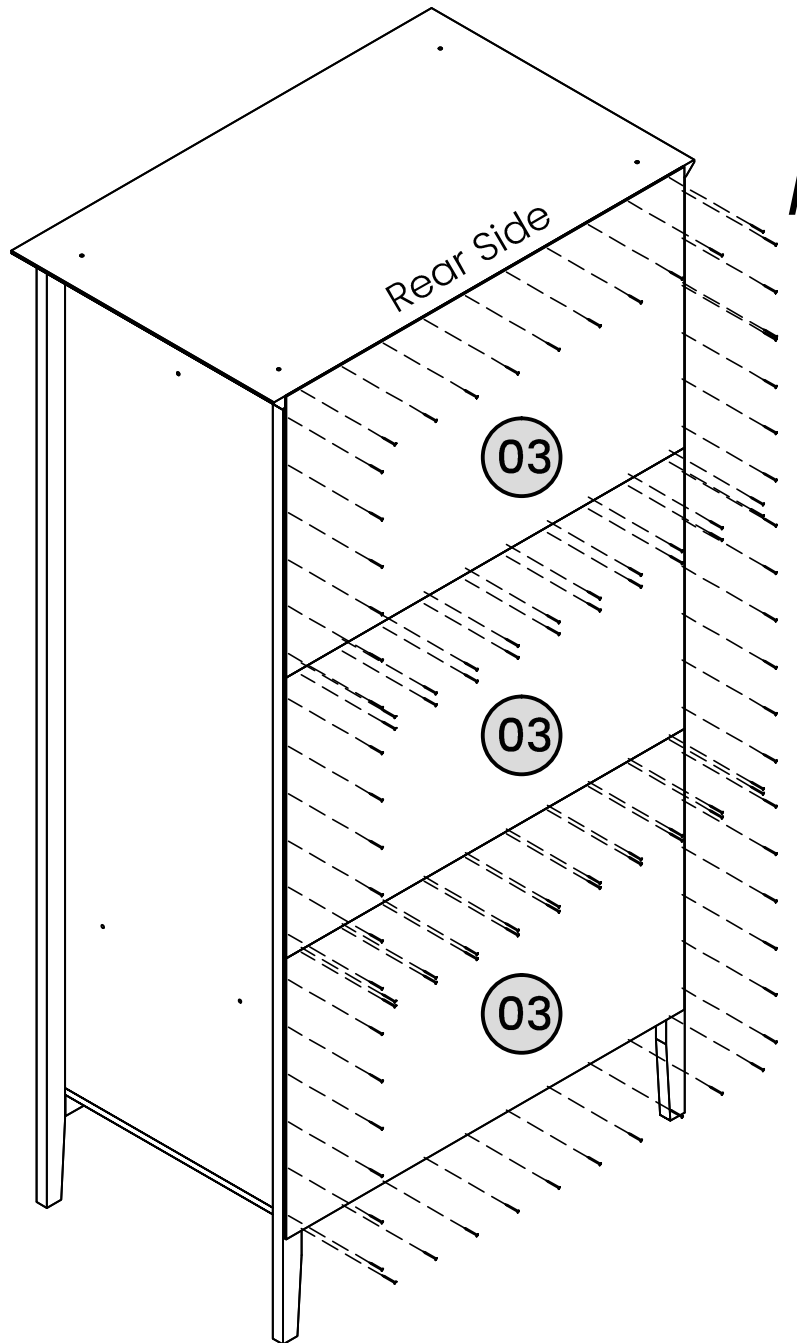


Step 16

Attention! Tipover system.**(It is recommended to use a ladder)**

First, approach the furniture as close as possible to the wall.

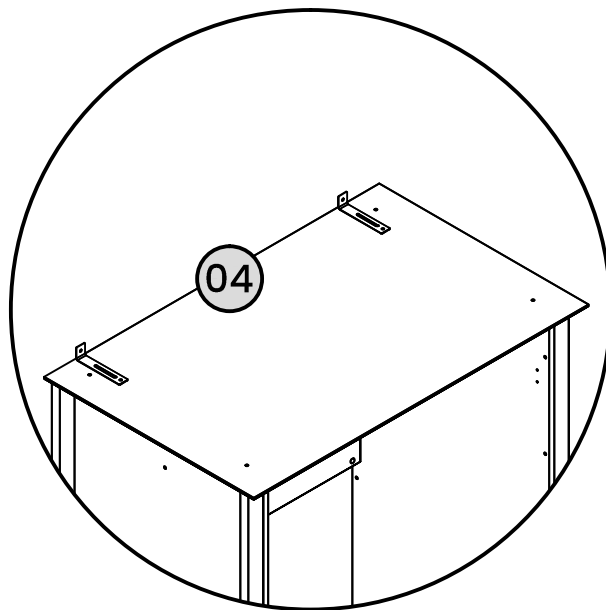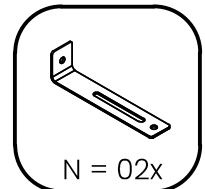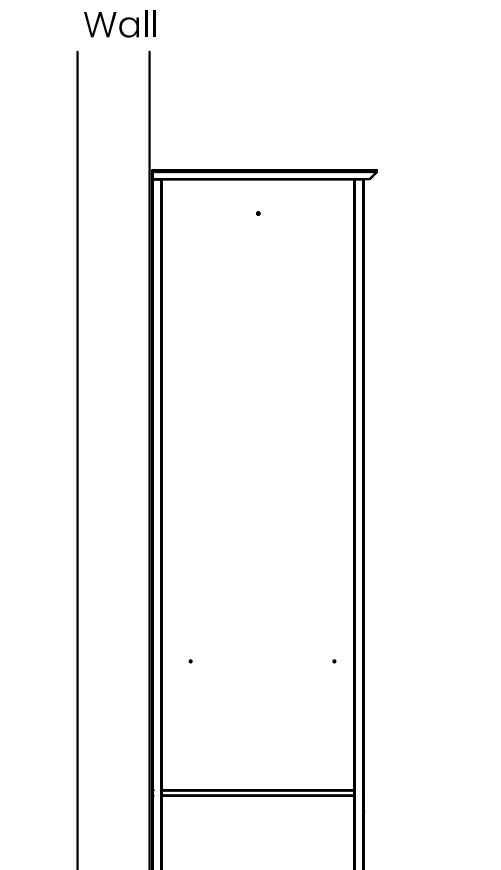


You will need a pencil to mark where you should drill the wall with a 3/8" drill bit to put in the hardware (O).


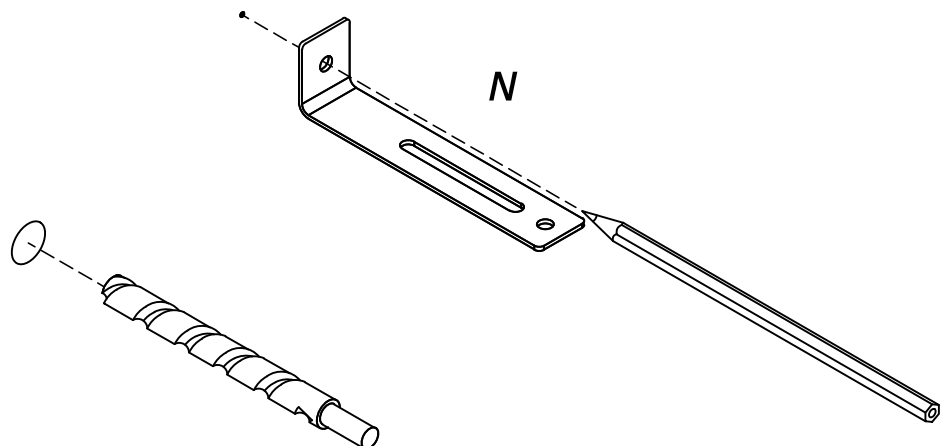


Use the 3/8" drill bit to drill the wall.

Step 17


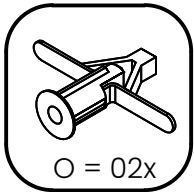
Attention! Tipover system.

Press the wings of the hardware (O) and put it in to the hole that you drilled on the wall.

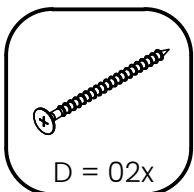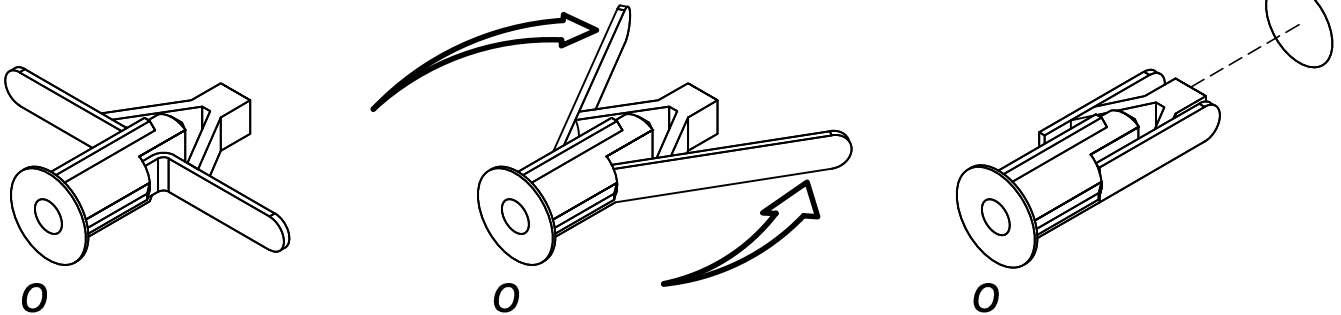


Connect the hardware (M) on the wall using the hardware (D).


*Hardware (O) plugged in the wall.

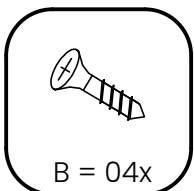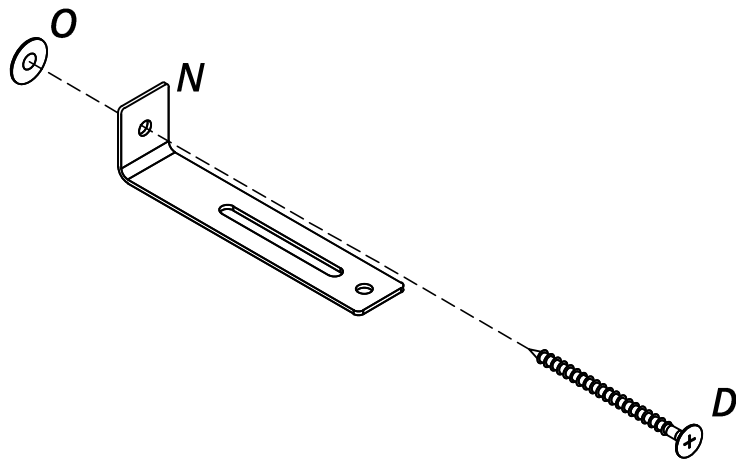


Connect the hardware (N), on the part 04 with the hardware (B).

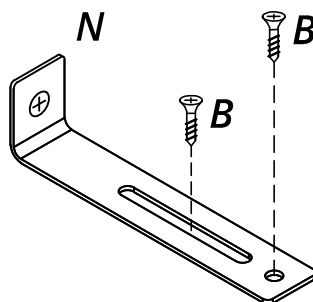


Step 18

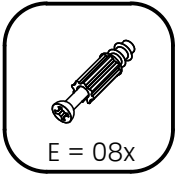



Apply the hardware (E) into the part 06.



Attention:
Assemble item on a soft surface,
such as cardboard, Styrofoam board
or carpet to avoid damage.

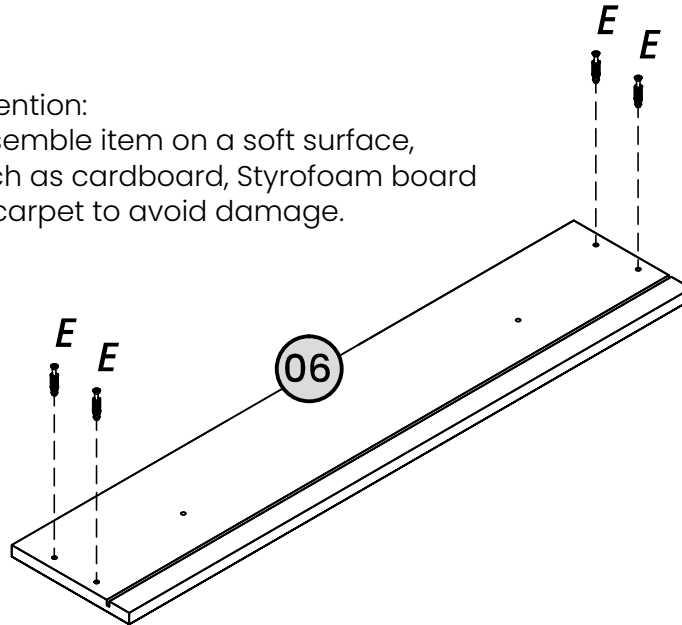



Step 19

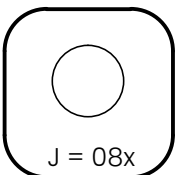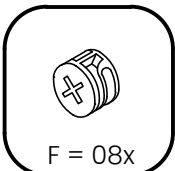

Connect the parts 07, 08 onto the part 06 with the hardware F.



Attention:
Assemble item on a soft surface,
such as cardboard, Styrofoam board
or carpet to avoid damage.

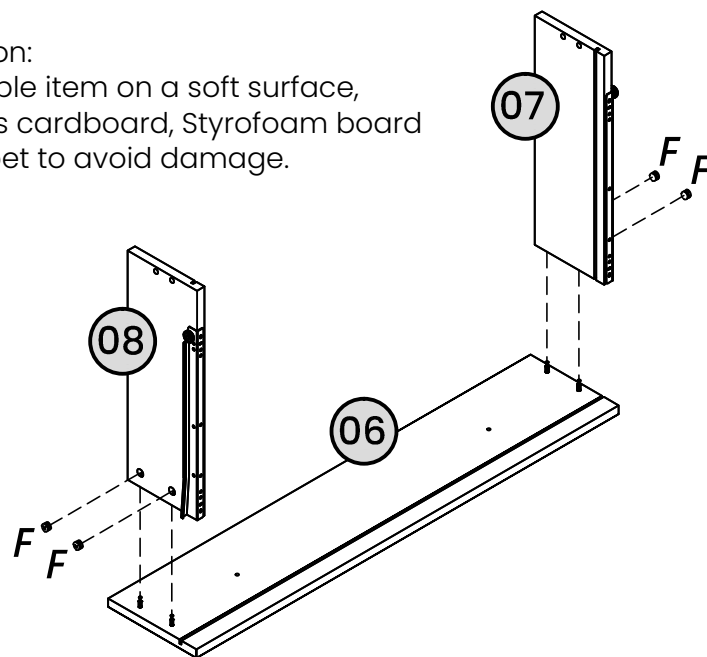
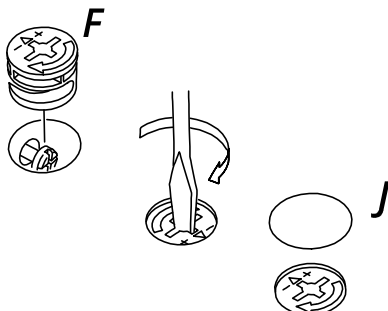


Apply the hardware (J) onto the hardware (F).


Step 20

Apply the part 10 in the groove of the parts 07, 08 until the groove of the part 06.

Attention:
Assemble item on a soft surface,
such as cardboard, Styrofoam board
or carpet to avoid damage.

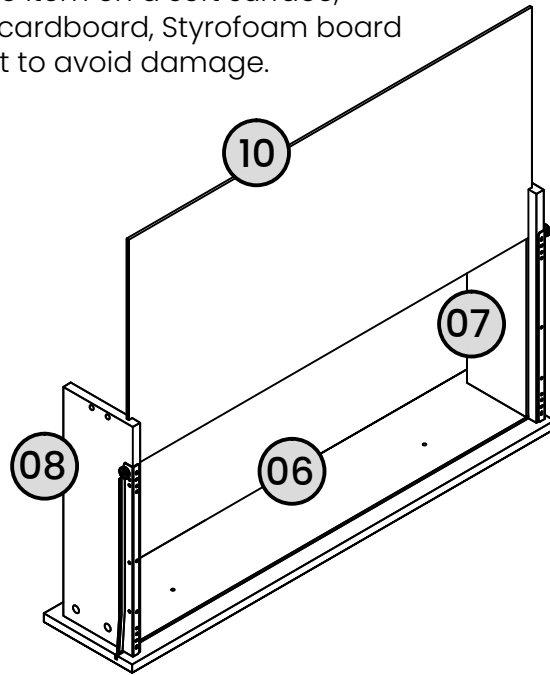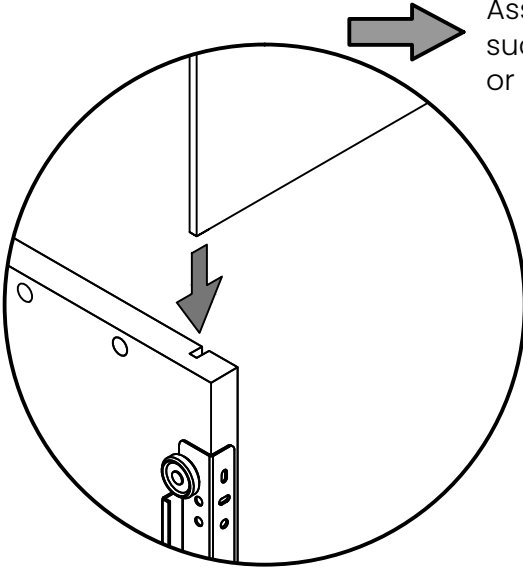


Step 21

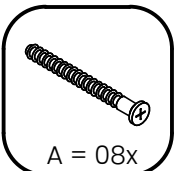

Connect the part 09 onto the parts 07, 08 with the hardware (A).


Attention:
Assemble item on a soft surface,
such as cardboard, Styrofoam board
or carpet to avoid damage.

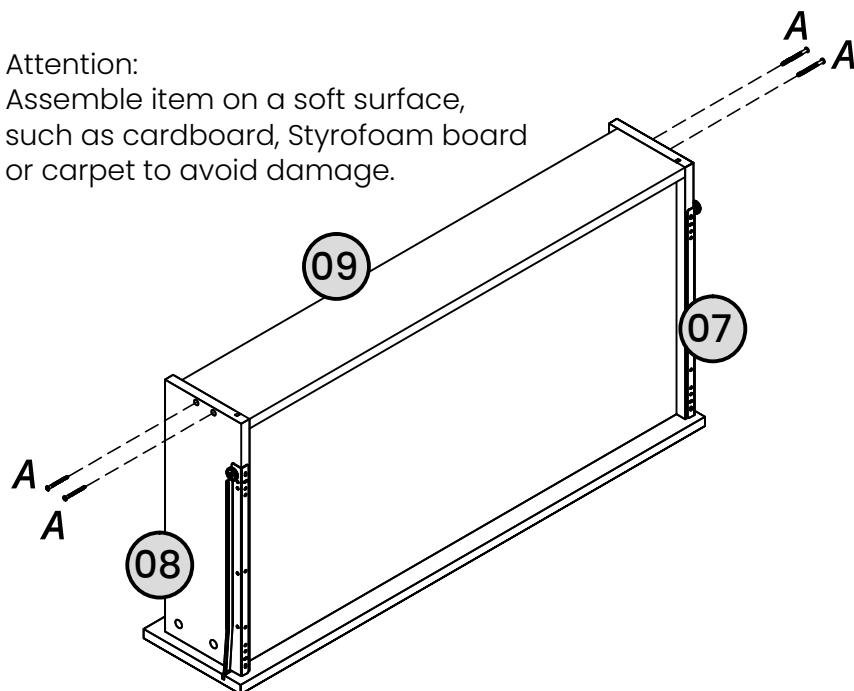

Step 22



B = 08x





M = 08x

Apply the hardware (B + M) into the groove of the part 06 and 09 as shown on detail.

Attention:


Assemble item on a soft surface, such as cardboard, Styrofoam board or carpet to avoid damage.

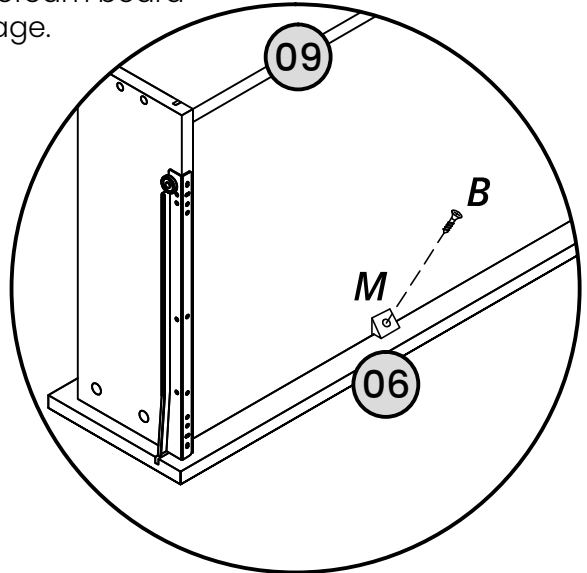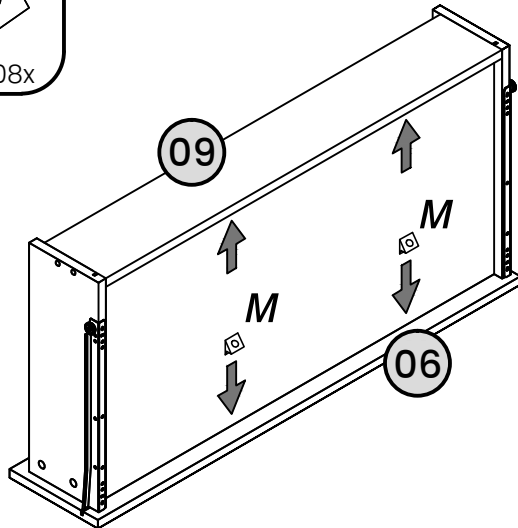

Step 23



C = 04x




H = 04x



Apply the hardware (C + H) onto the front of the drawer.

Attention:

Assemble item on a soft surface, such as cardboard, Styrofoam board or carpet to avoid damage.

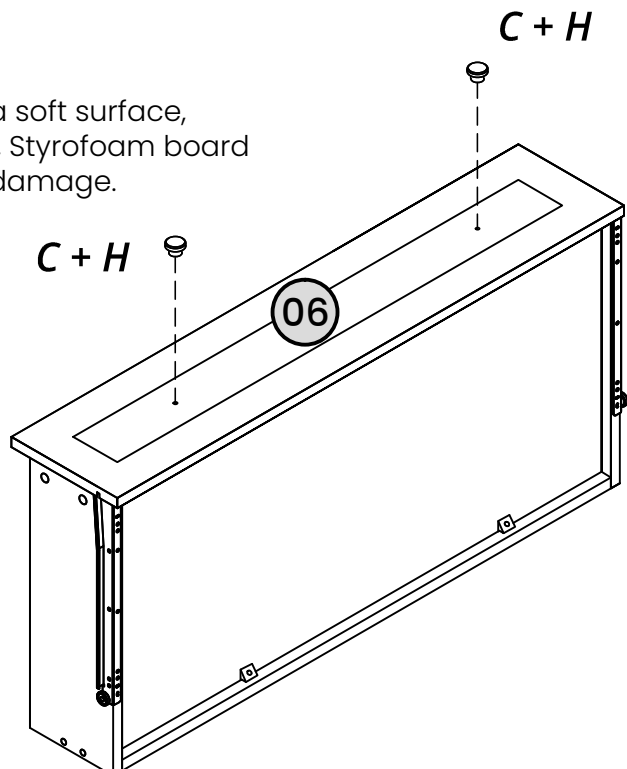


Step 24

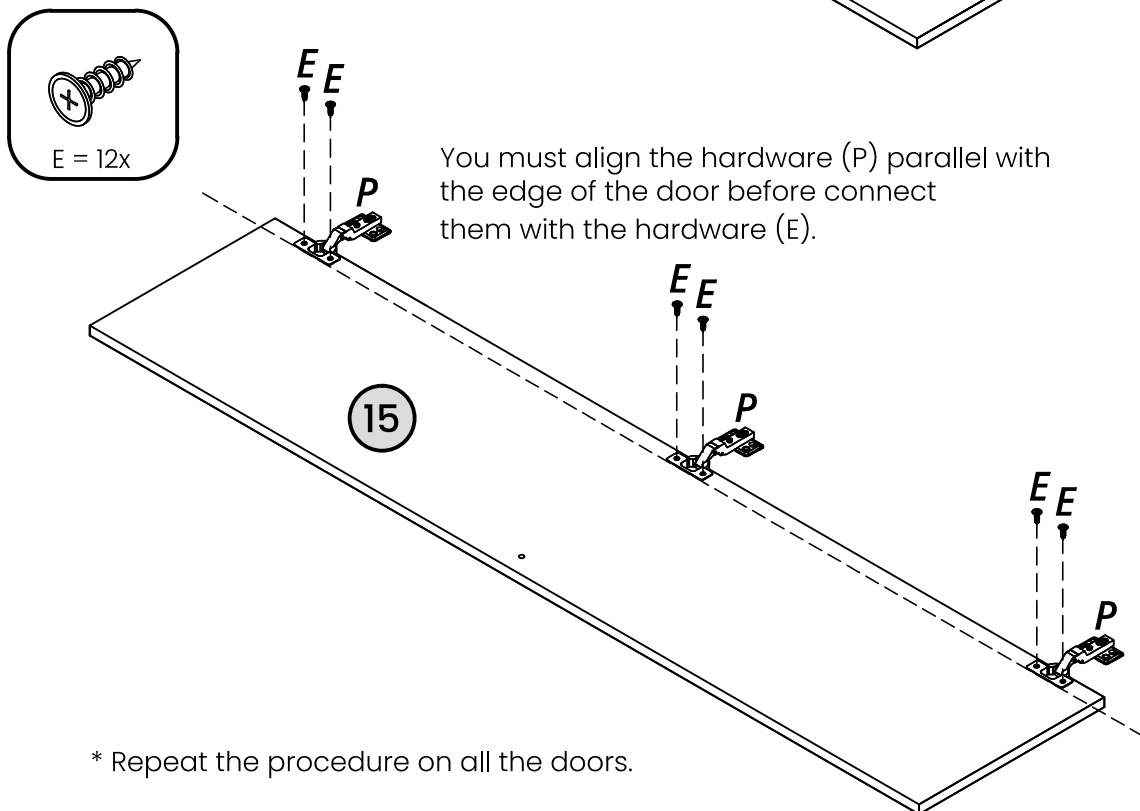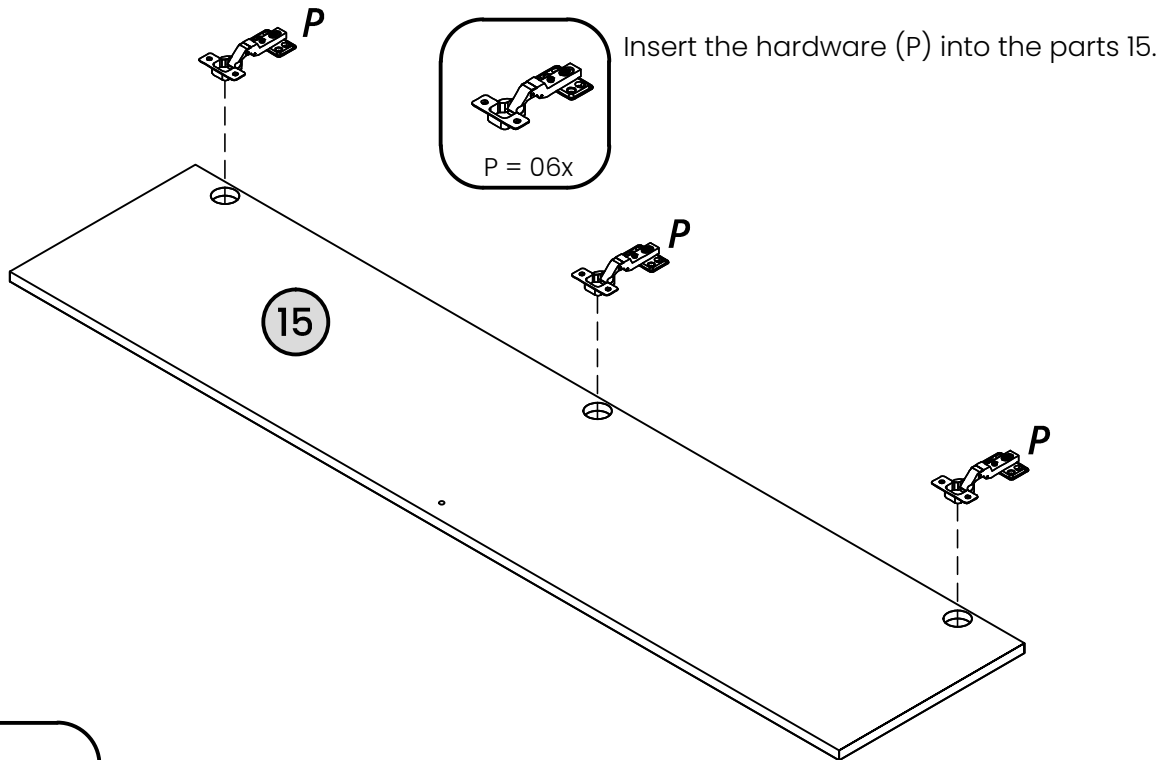Door assembly and adjustment.**Attention!****Is the wardrobe in the right place?****If yes go ahead installing the doors.**

* Repeat the procedure on all the doors.

Step 25




Connect the parts 15 onto the parts 02 and 03 with the hardware (E)

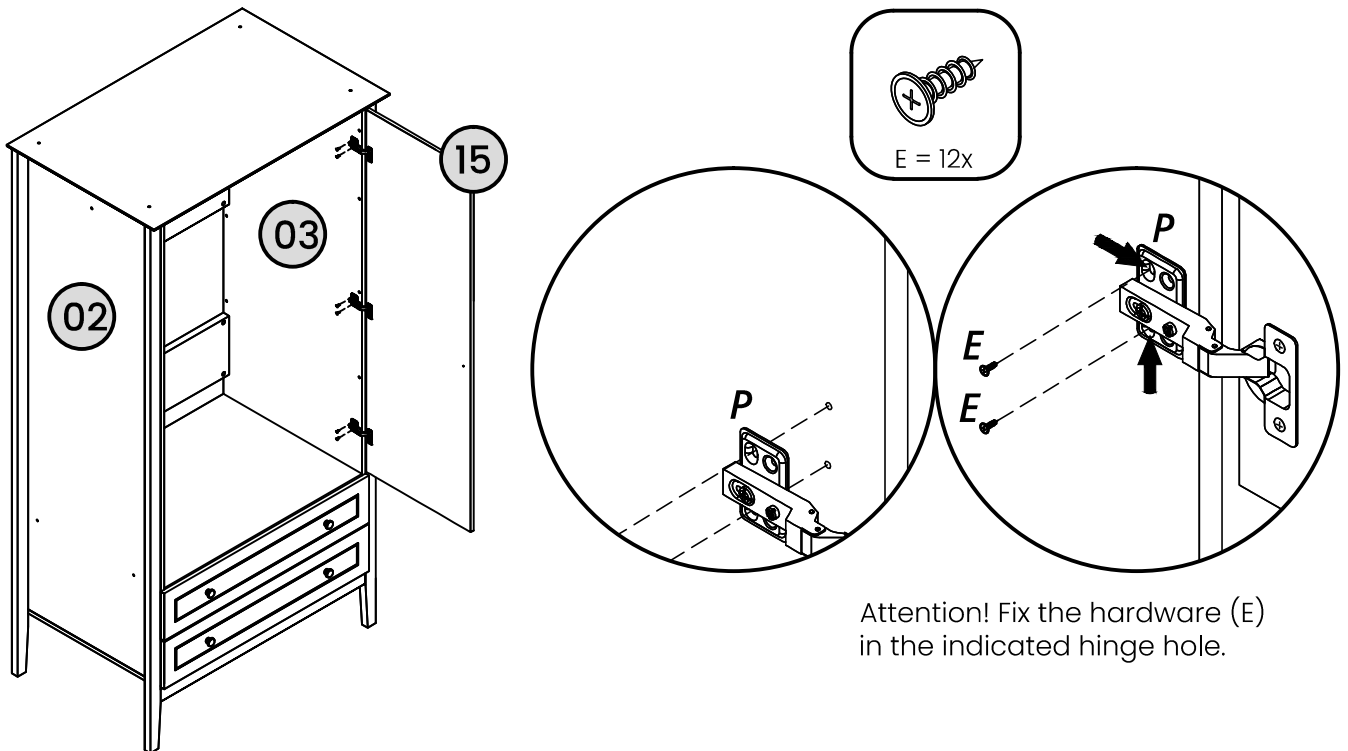

* Repeat the procedure to install all the doors.


Step 26

Apply the hardware (C + J) onto the doors (parts 15).

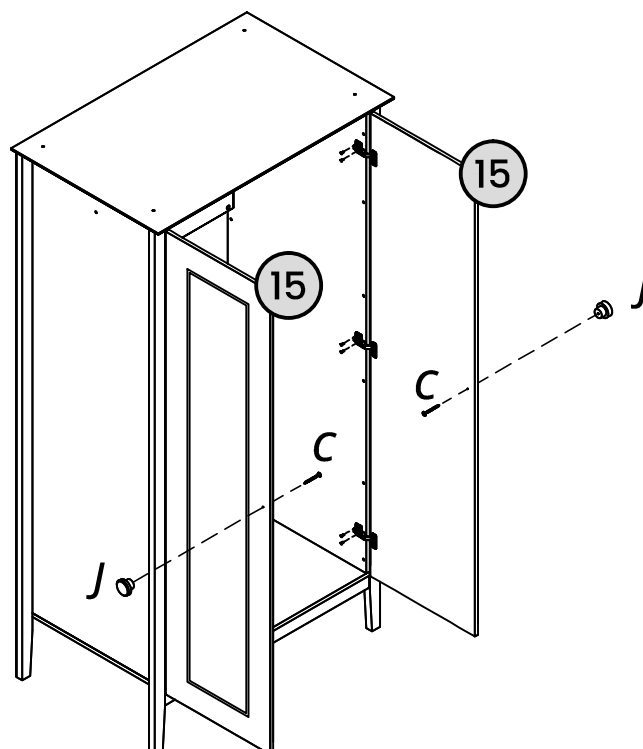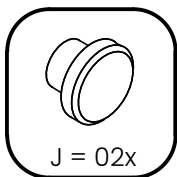
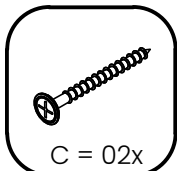


Step 27

Starting aligning all the doors using as reference the Top Panel (04).

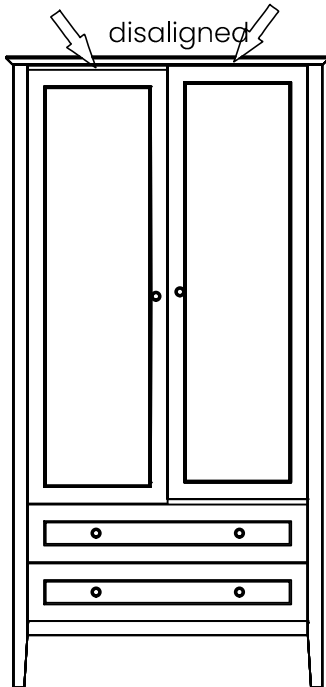


To adjust the alignment of the doors loosen the indicated screw and adjust the 3 hinges up or down on each door, and after aligned, retighten all the screws.

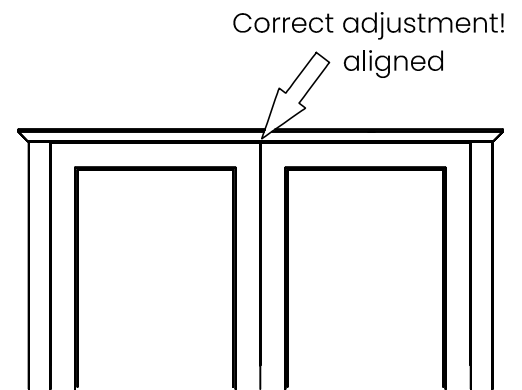
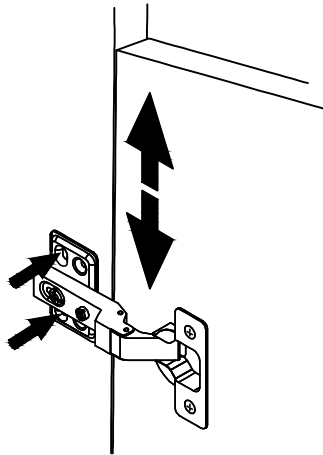


Step 28

Adjusting the distance between the doors.

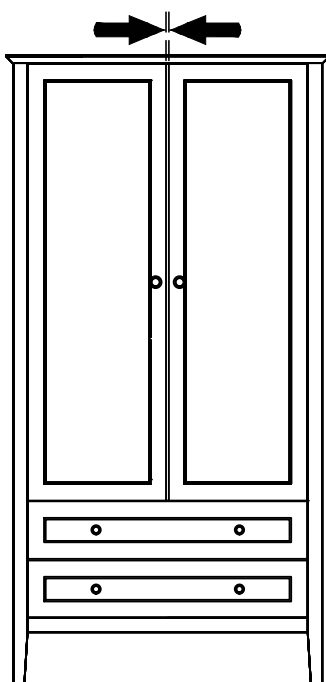


To adjust the distance between the doors turn the indicated screw to the clockwise or counterclockwise.

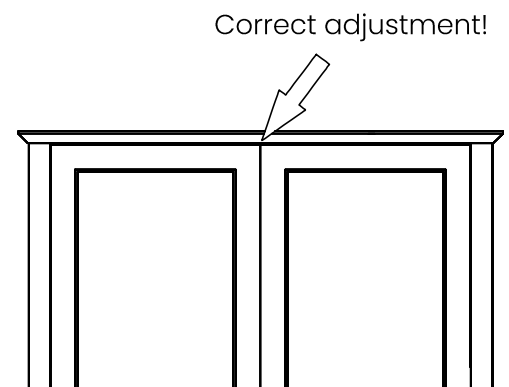
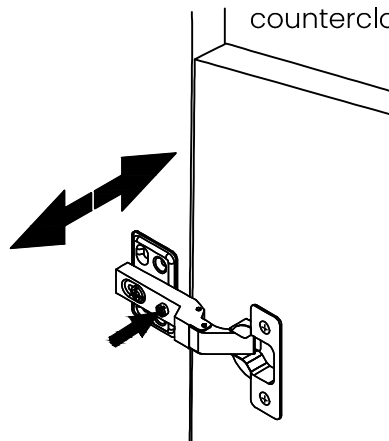


Step 29

To adjust the distance between the doors of the wardrobe.

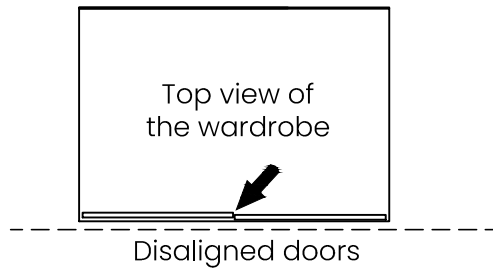

To adjust the nearby of the doors to the wardrobe loosen the indicated screw and adjust the hinge forward or backward then retighten the screw
It is necessary to check all the hinges!

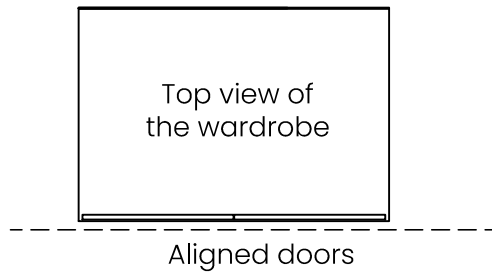
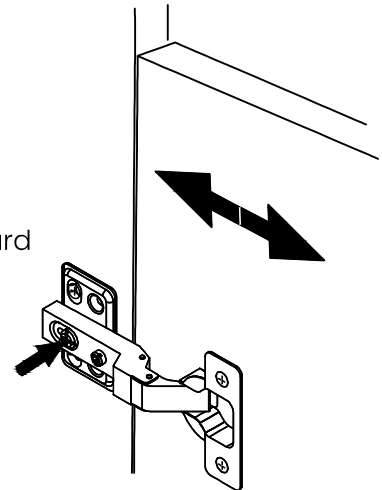


Step 30

Attention!

To finish the assembly process, and after all the doors adjusted, fix the hardware (E) in the indicated hinge holes

Repeat the proccess for all the hinges.

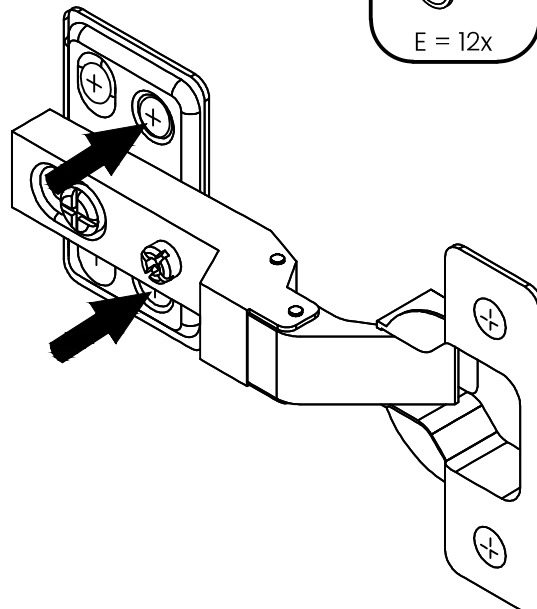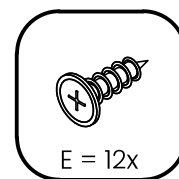



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.
- Defects/damages caused by inappropriate use of the furniture.



319 Ridge Rd. Dayton, NJ 08810

908-888-0818