



**Step 1,
Full circle coverage**
Rotate wire trip pin to the up position



**Step 2,
Partial Circle Coverage**
Rotate wire trip pin to the down position.
To achieve any portion of a 360° circle,
slide the friction collars.

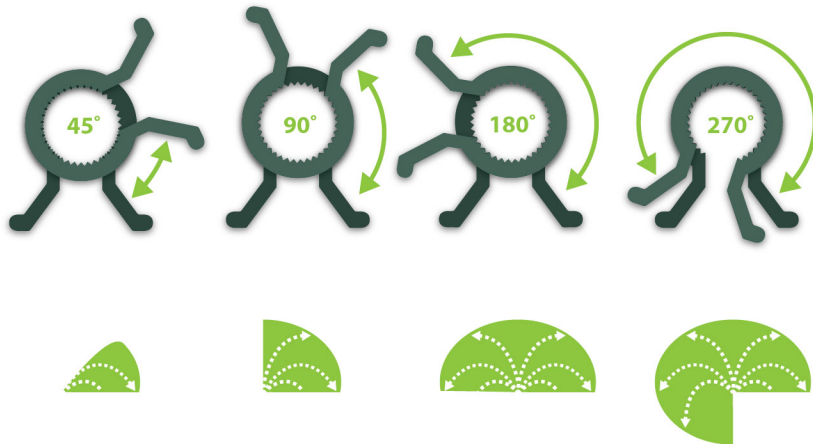

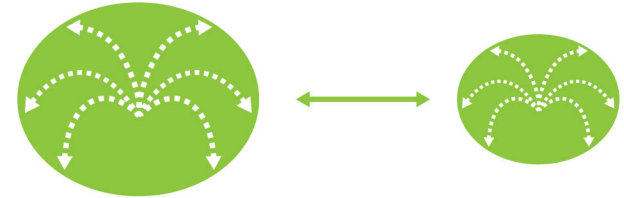

The distance of spray can be adjusted to turn coverage knob to change the height of deflector shield



Screw pin into water stream to change the spray pattern to mist