


Hallway Cabinet


Instruction Manual

NV072-YX

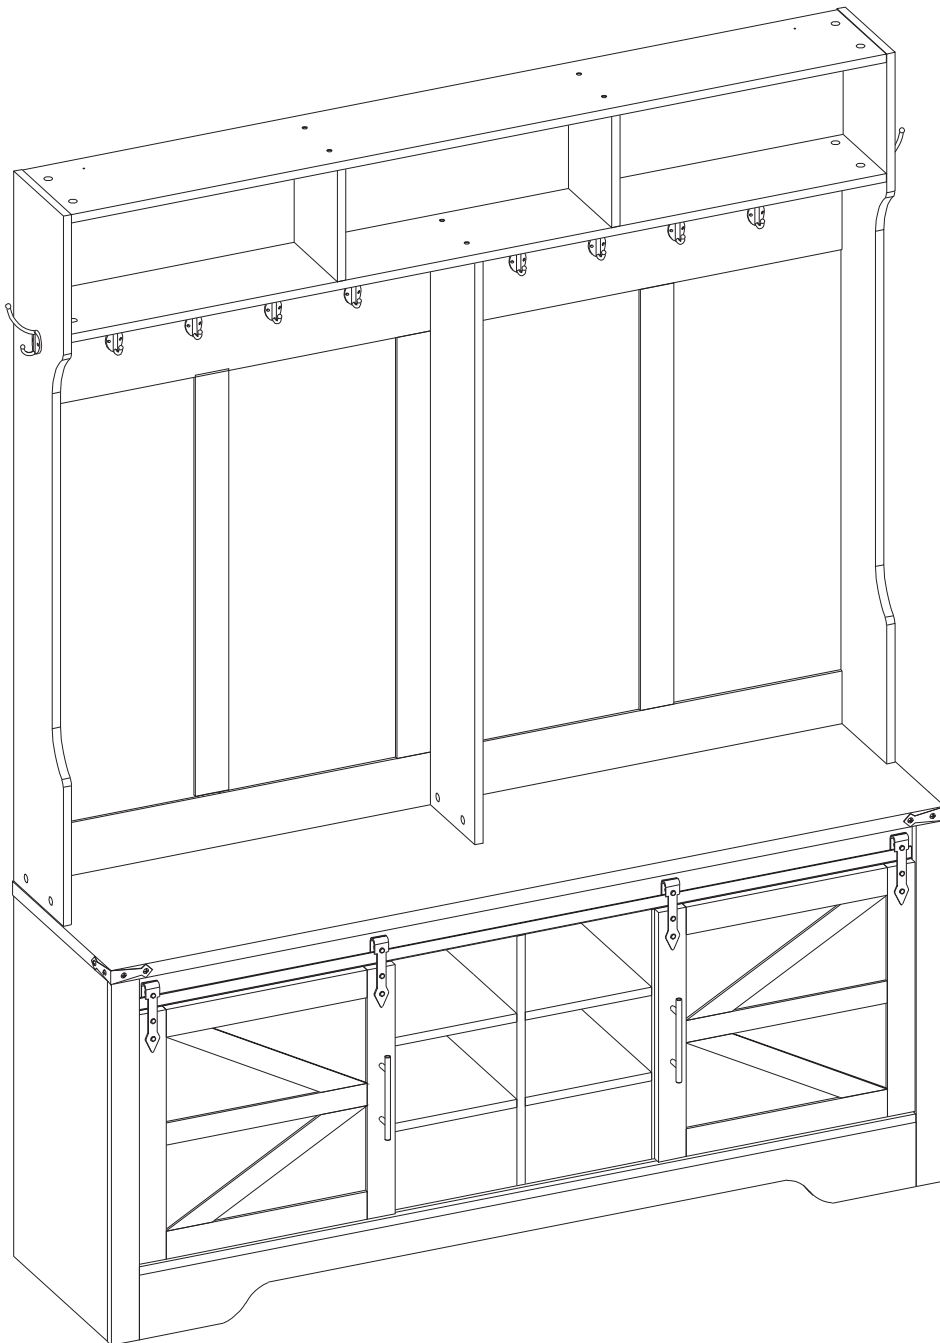

TEL: **(800)209.3199** (MON-FRI 9:00am-5:00pm Eastern Time)
Email: help@EverythingSupport.com


Parts List

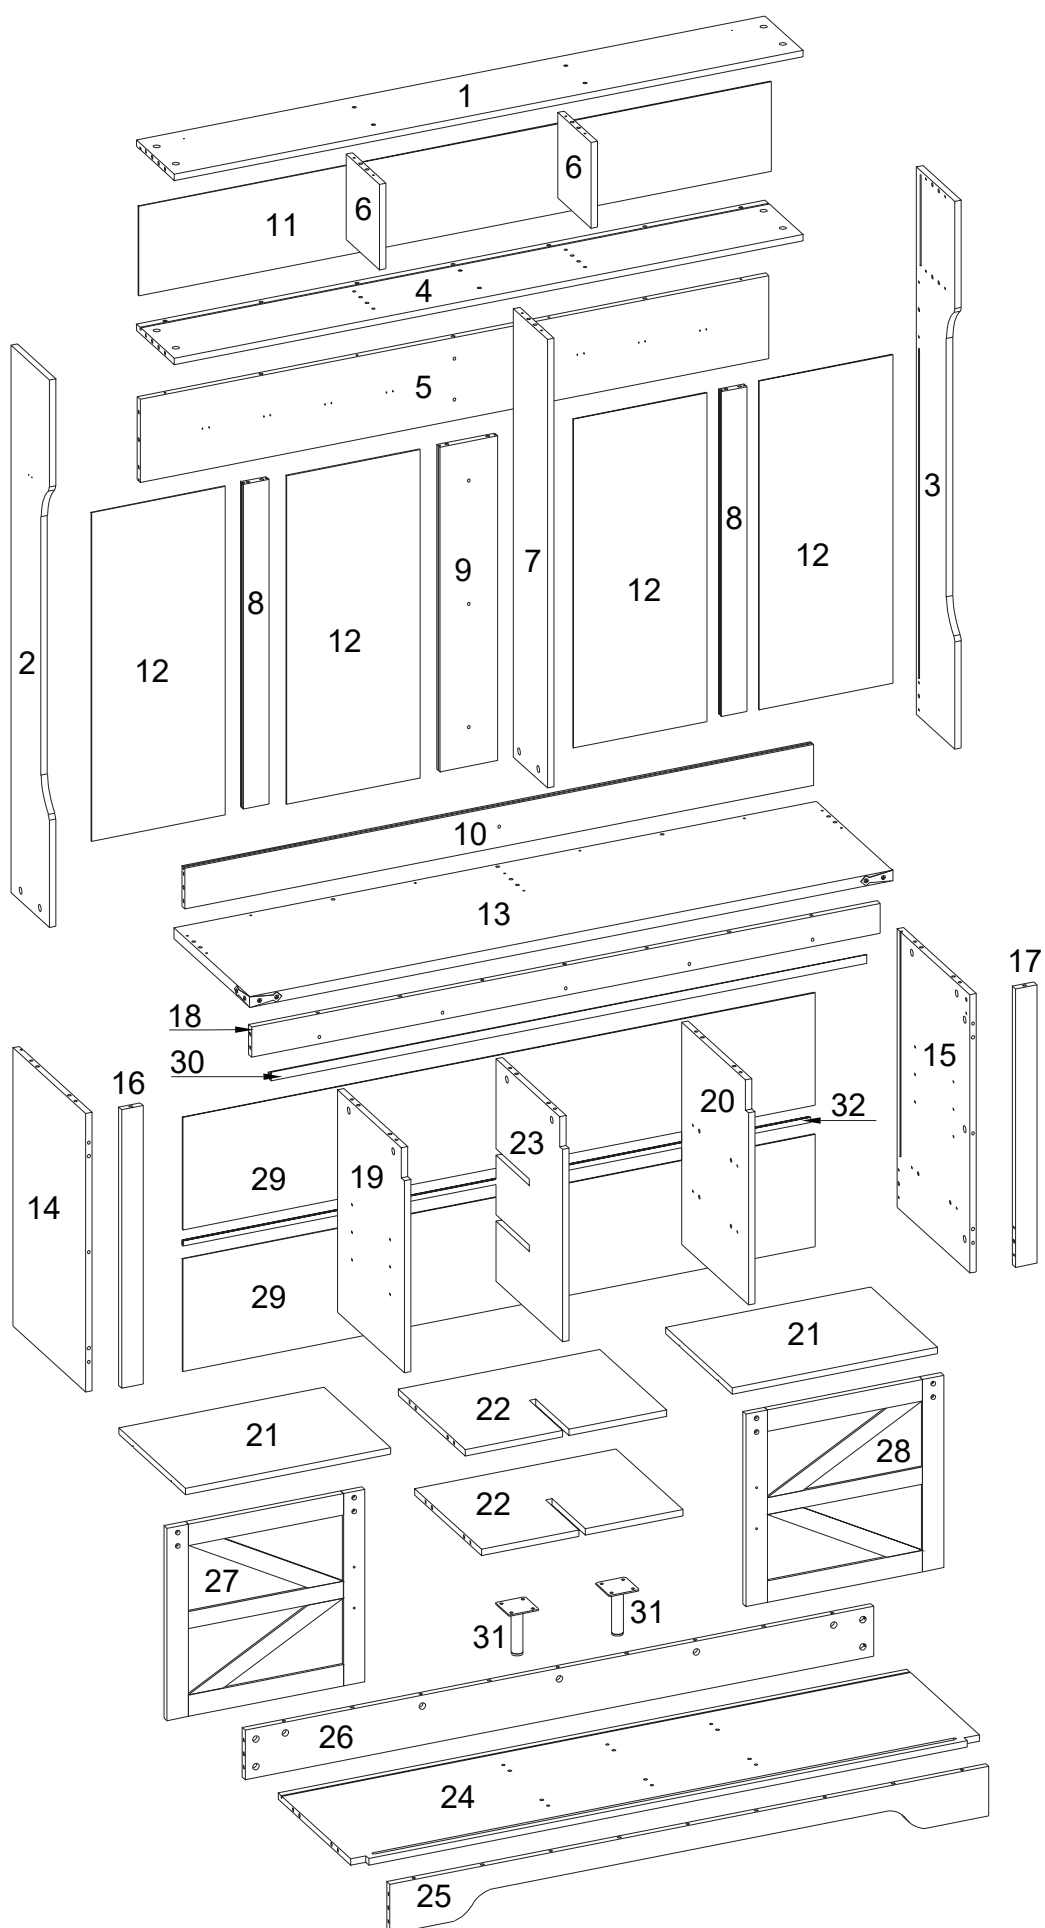



Hardware Usage Guide

HOWTO USE A CAM LOCK & CAM BOLT OR CAM DOWEL


1. NOTE: CAM BOLT or a CAM LOCK may be used.

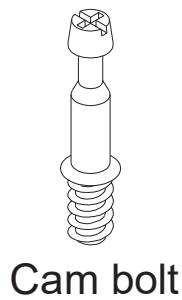

Turn the CAM BOLT until the shoulder is against the surface of the part.

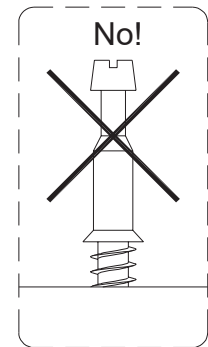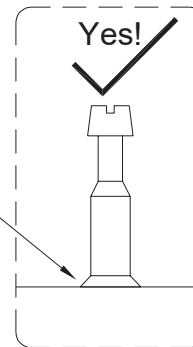


2.

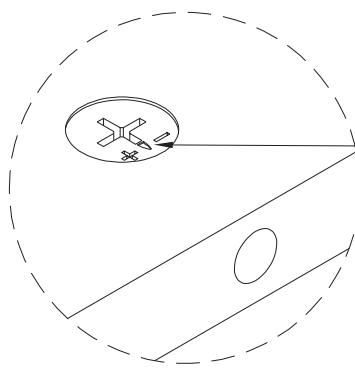


Push a CAM LOCK into the part. The arrow in the CAM LOCK must point toward the hole in the edge of the board.


3. Insert the CAM BOLT into the CAM LOCK. Tighten the CAM LOCK.

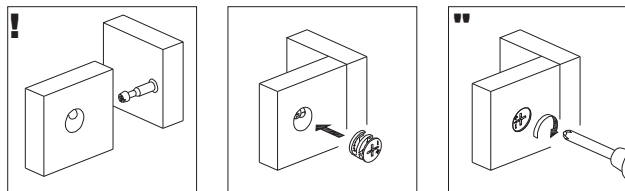

4. The provided glue is to secure wood dowels in place. When first inserting dowels, locate the appropriate hole for the dowel, place a small amount of glue in the hole and insert the dowel. Wipe away excess glue immediately.




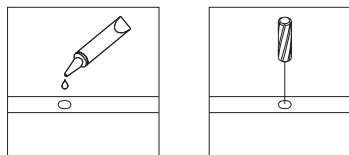










In future assembly steps when dowels are necessary to attach assembly parts together, place a small amount of glue on the end of the dowel before attaching parts together. Wipe away excess glue immediately.

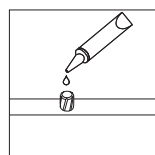






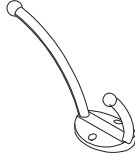





Hardware List

- Carefully remove all the parts from the carton and place them individually on a softcloth to prevent scratches or other damage.
- Carefully and strictly follow these assembly&installation instructions to ensure acompleted product as designed.
- Do not tighten all the screws until each part is properly assembled.

Number	Parts	Quantity	Number	Parts	Quantity
A	 Cam bolt 6x35mm	78 PCS	G	 Bolt M6x12mm	16 PCS
B	 Cam lock 15x11mm	78 PCS	H	 Bolt M6x20mm	5 PCS
C	 Wooden dowel 8x30mm	97 PCS	I	 Handle	2 PCS
D	 Screw M6x48mm	26 PCS	J	 Pulley	4 PCS
E	 Shelf support pin	8 PCS	K	 Door Guide	4 PCS
F	 Bolt M4x16mm	4 PCS	L	 Screw M4x14mm	8 PCS

Hardware List

Number	Parts	Quantity	Number	Parts	Quantity
M	 Screw 3.5x12mm	20 PCS	S	 Screw 4x38mm	2 PCS
N	 Hex Key M4	1 PC	T	 Plastic wedge	20 PCS
O	 Sticker 30mm	78 PCS	U	 Screw 3x17mm	20 PCS
P	 L shaped iron piece 76*15*30mm	2 PCS	V	 Hook up	10 PCS
Q	 Nut	2 PCS	W	 Glue tube	2 PCS
R	 Screw 4x14mm	2 PCS			

Step 1




C x 4




D x 4




N

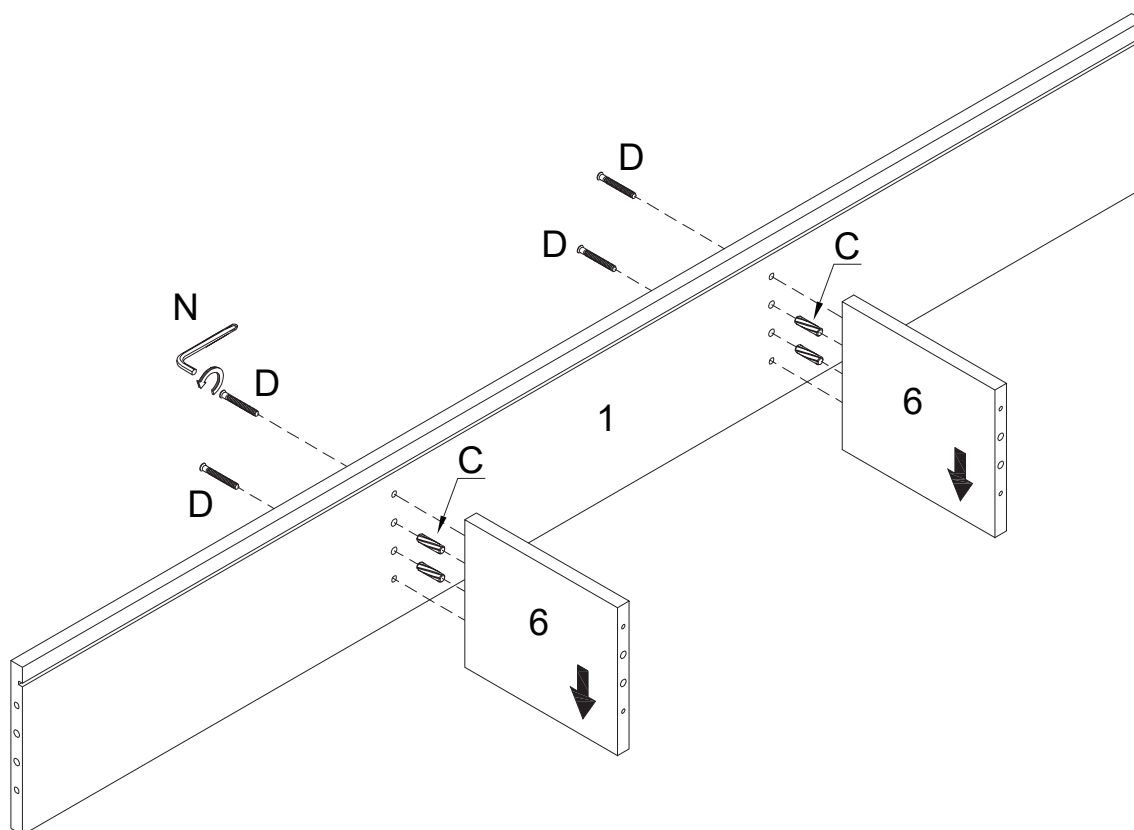


Step 2

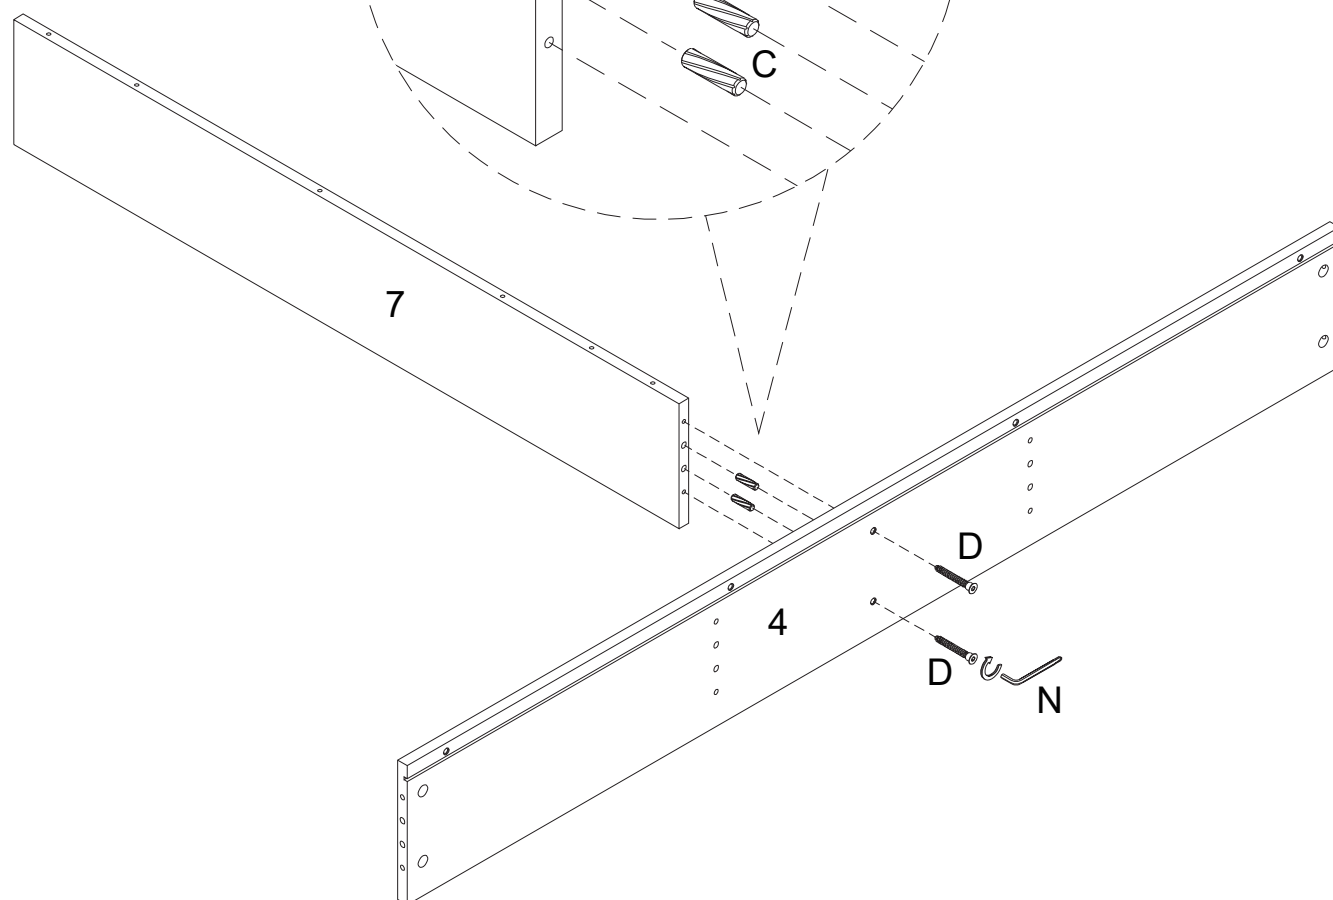


Step 3



M x 16

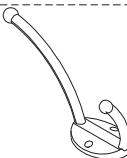

V x 8

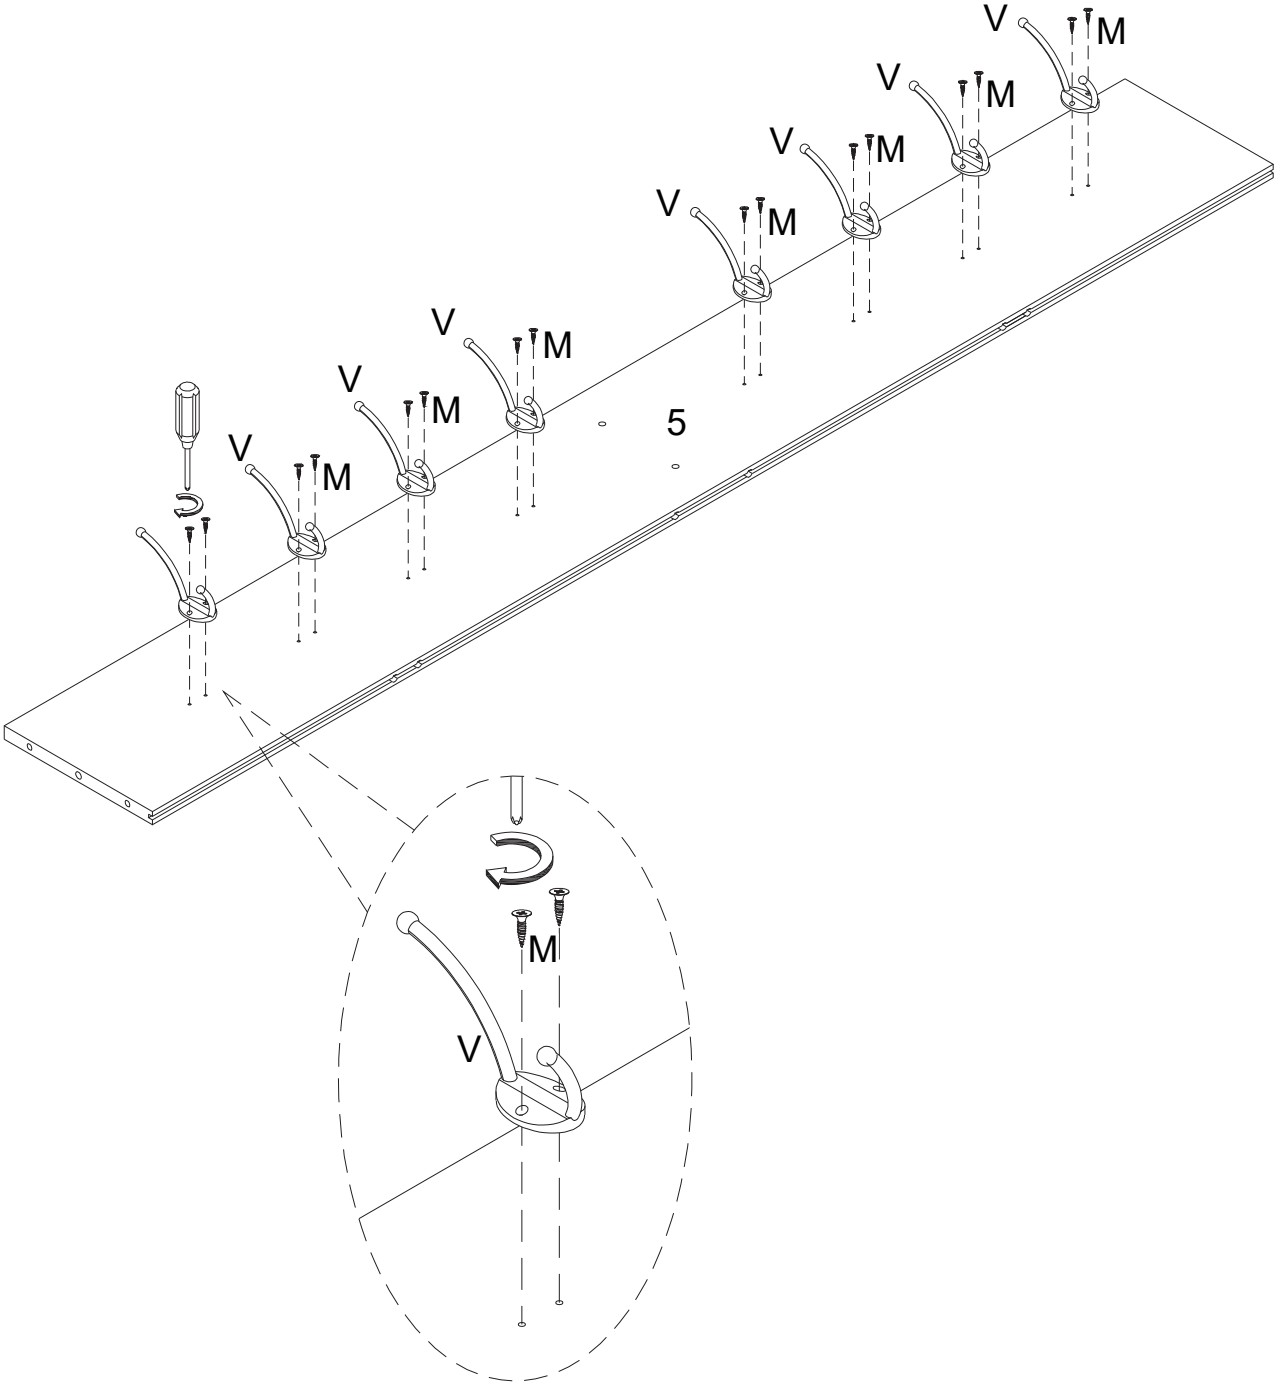

Step 4




C x 3



D x 6



N

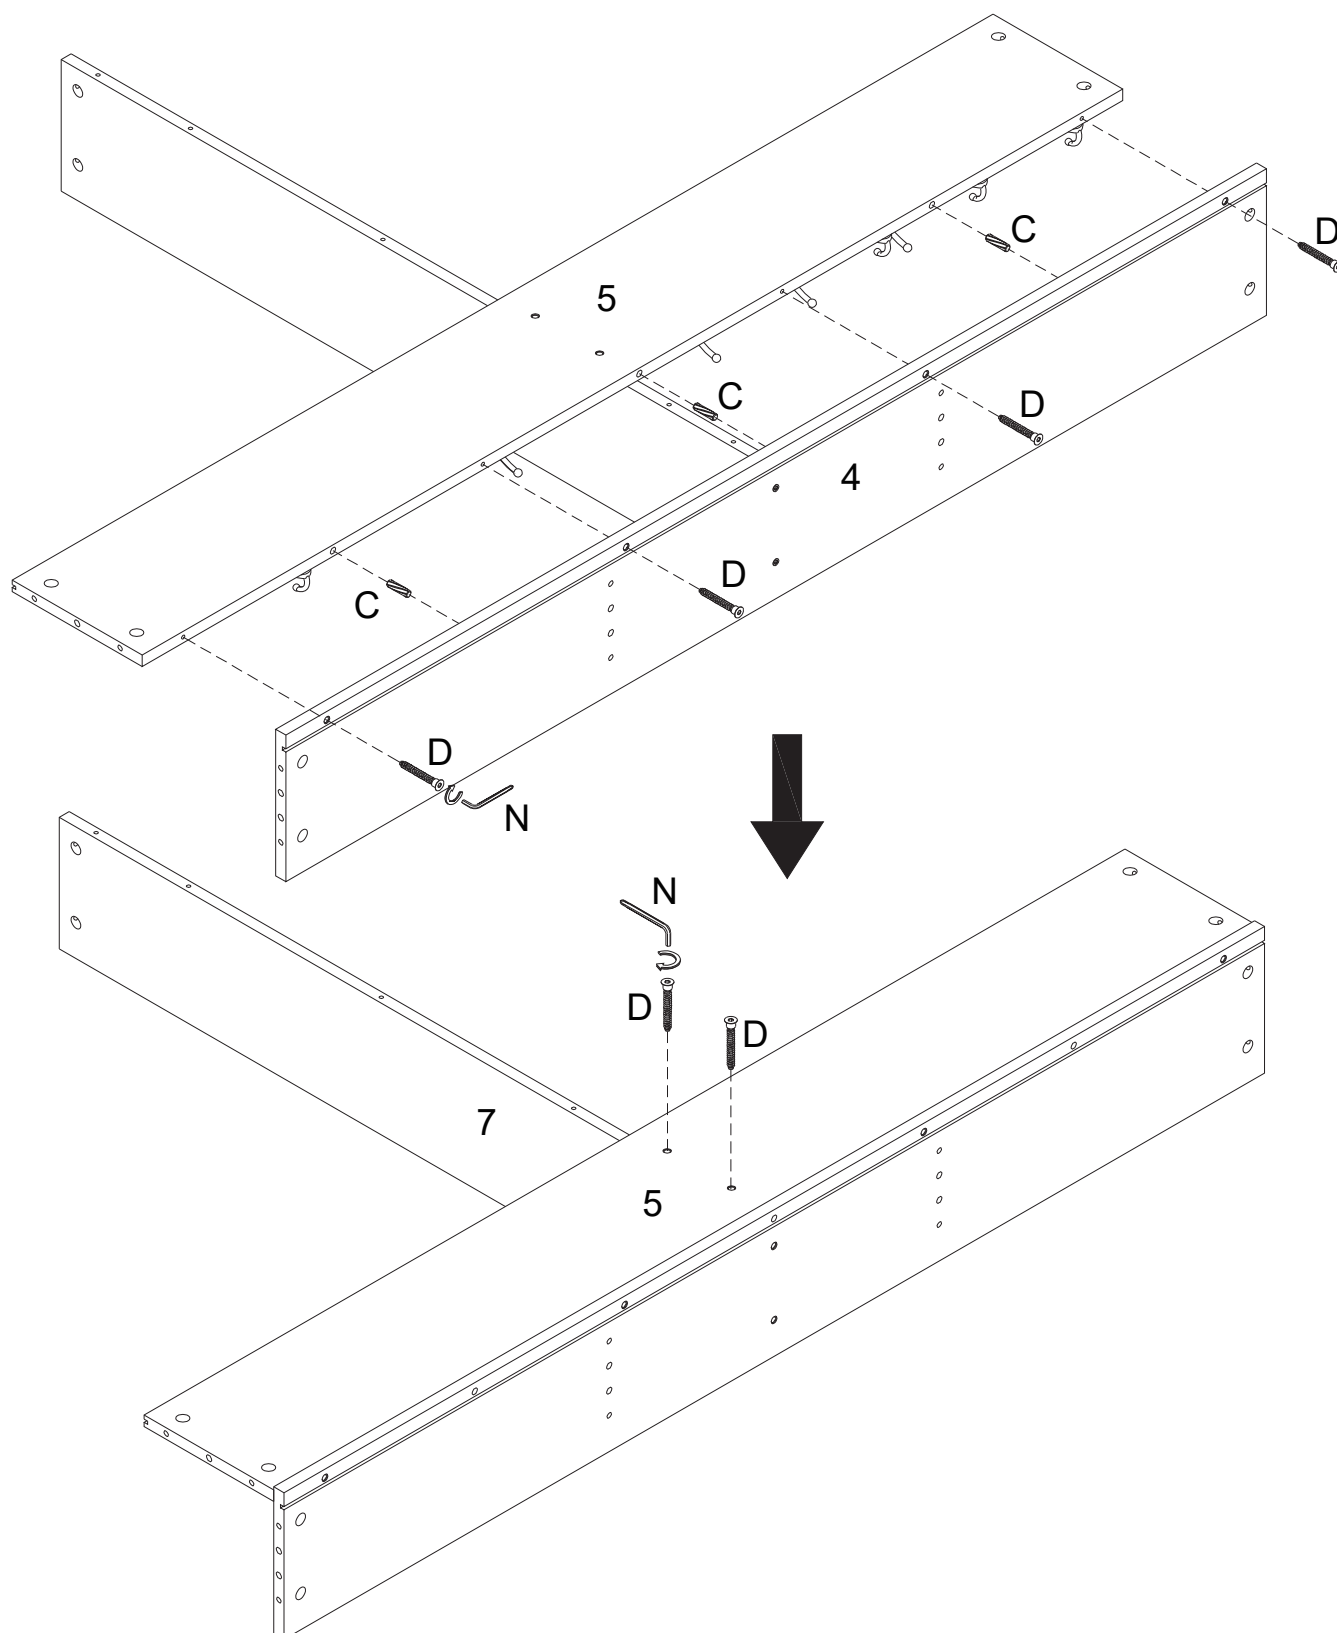

Step 5




C x 4




D x 4



N

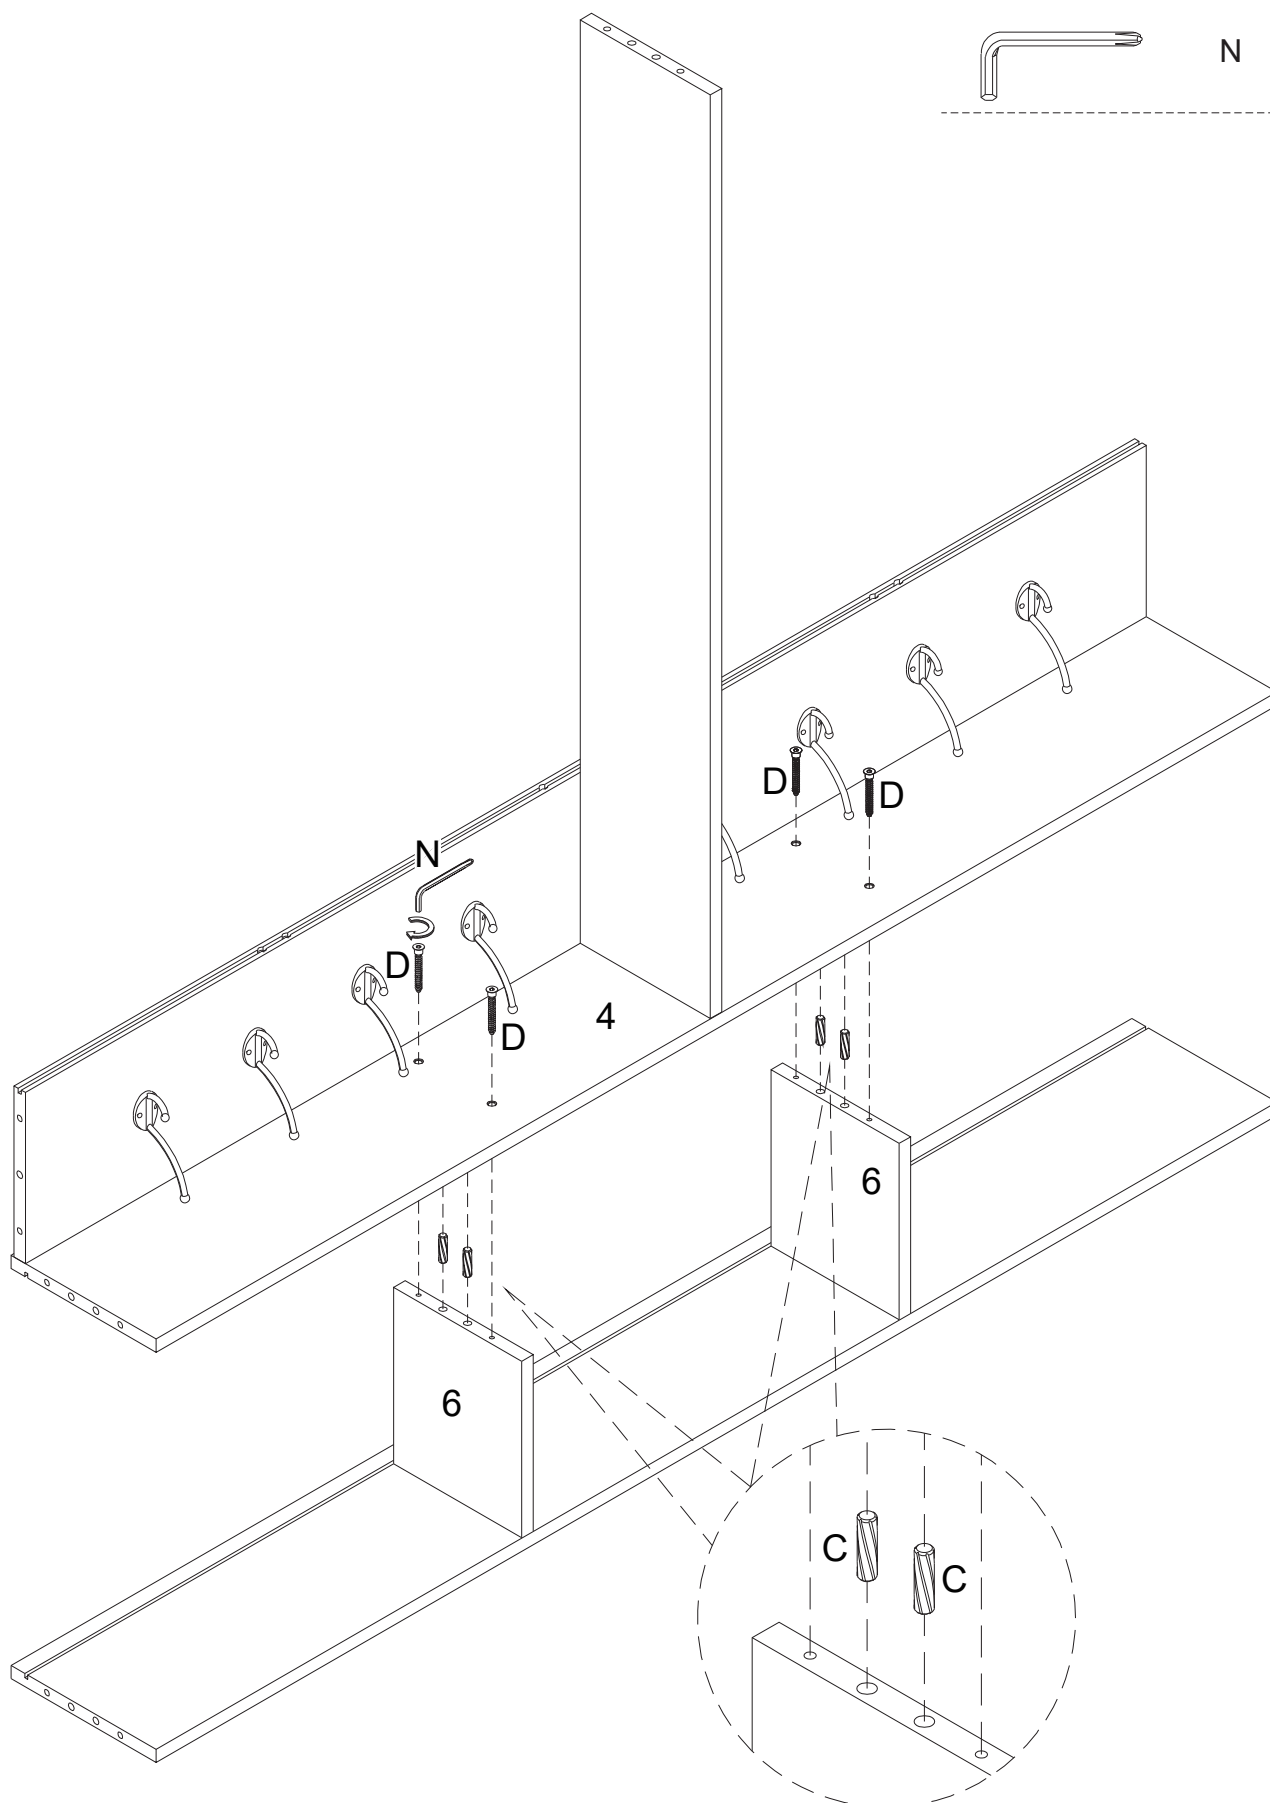


Step 6

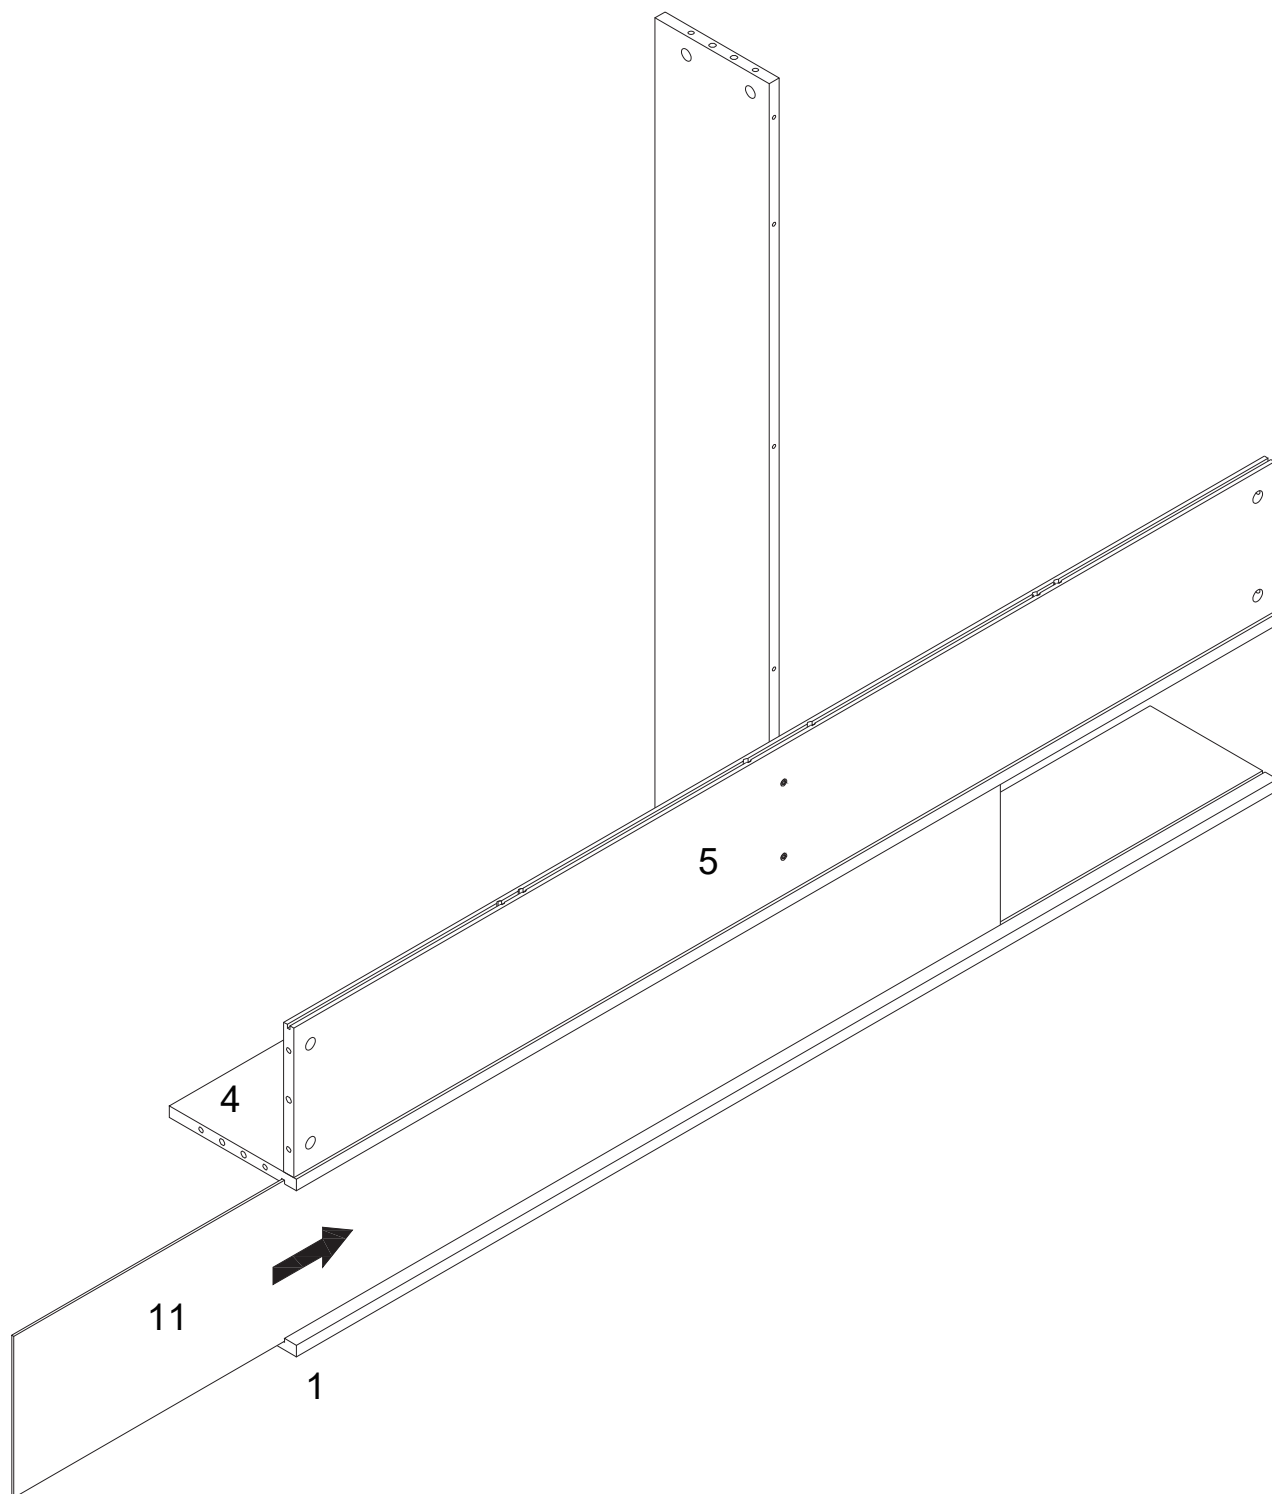

Step 7




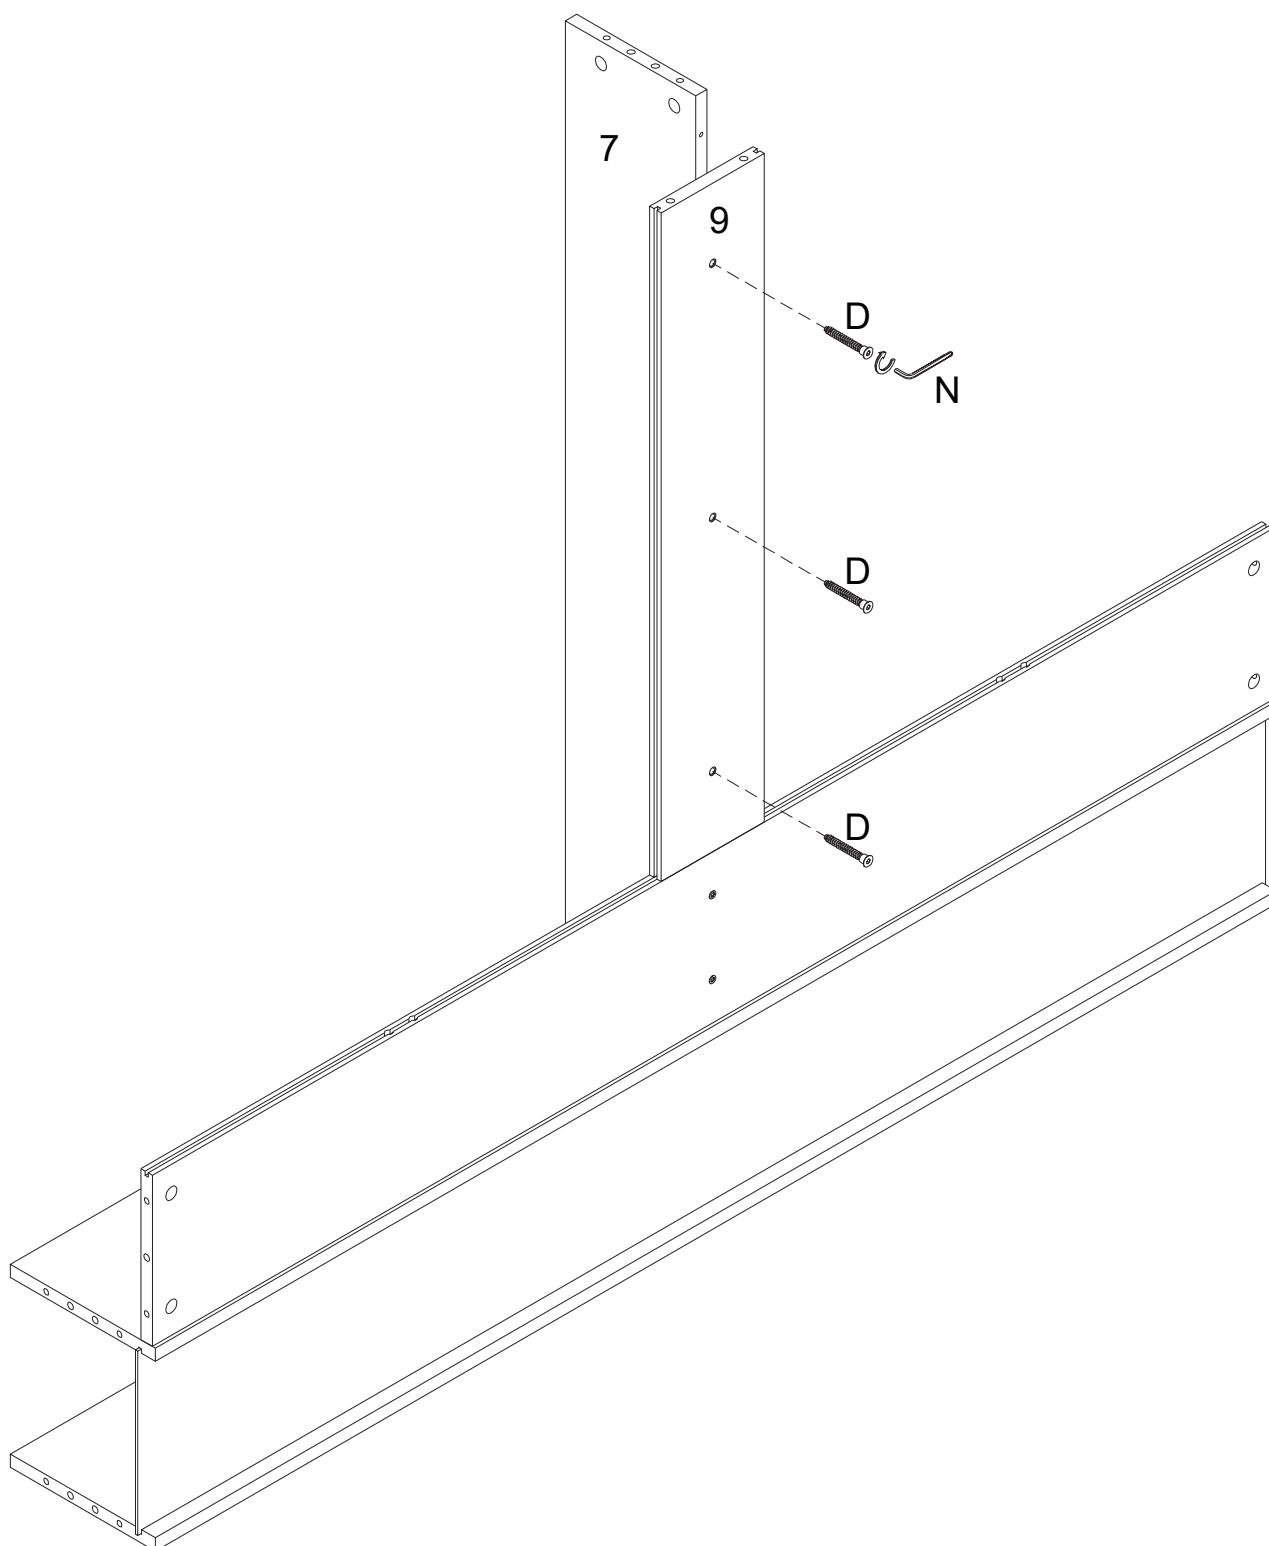
C x 2

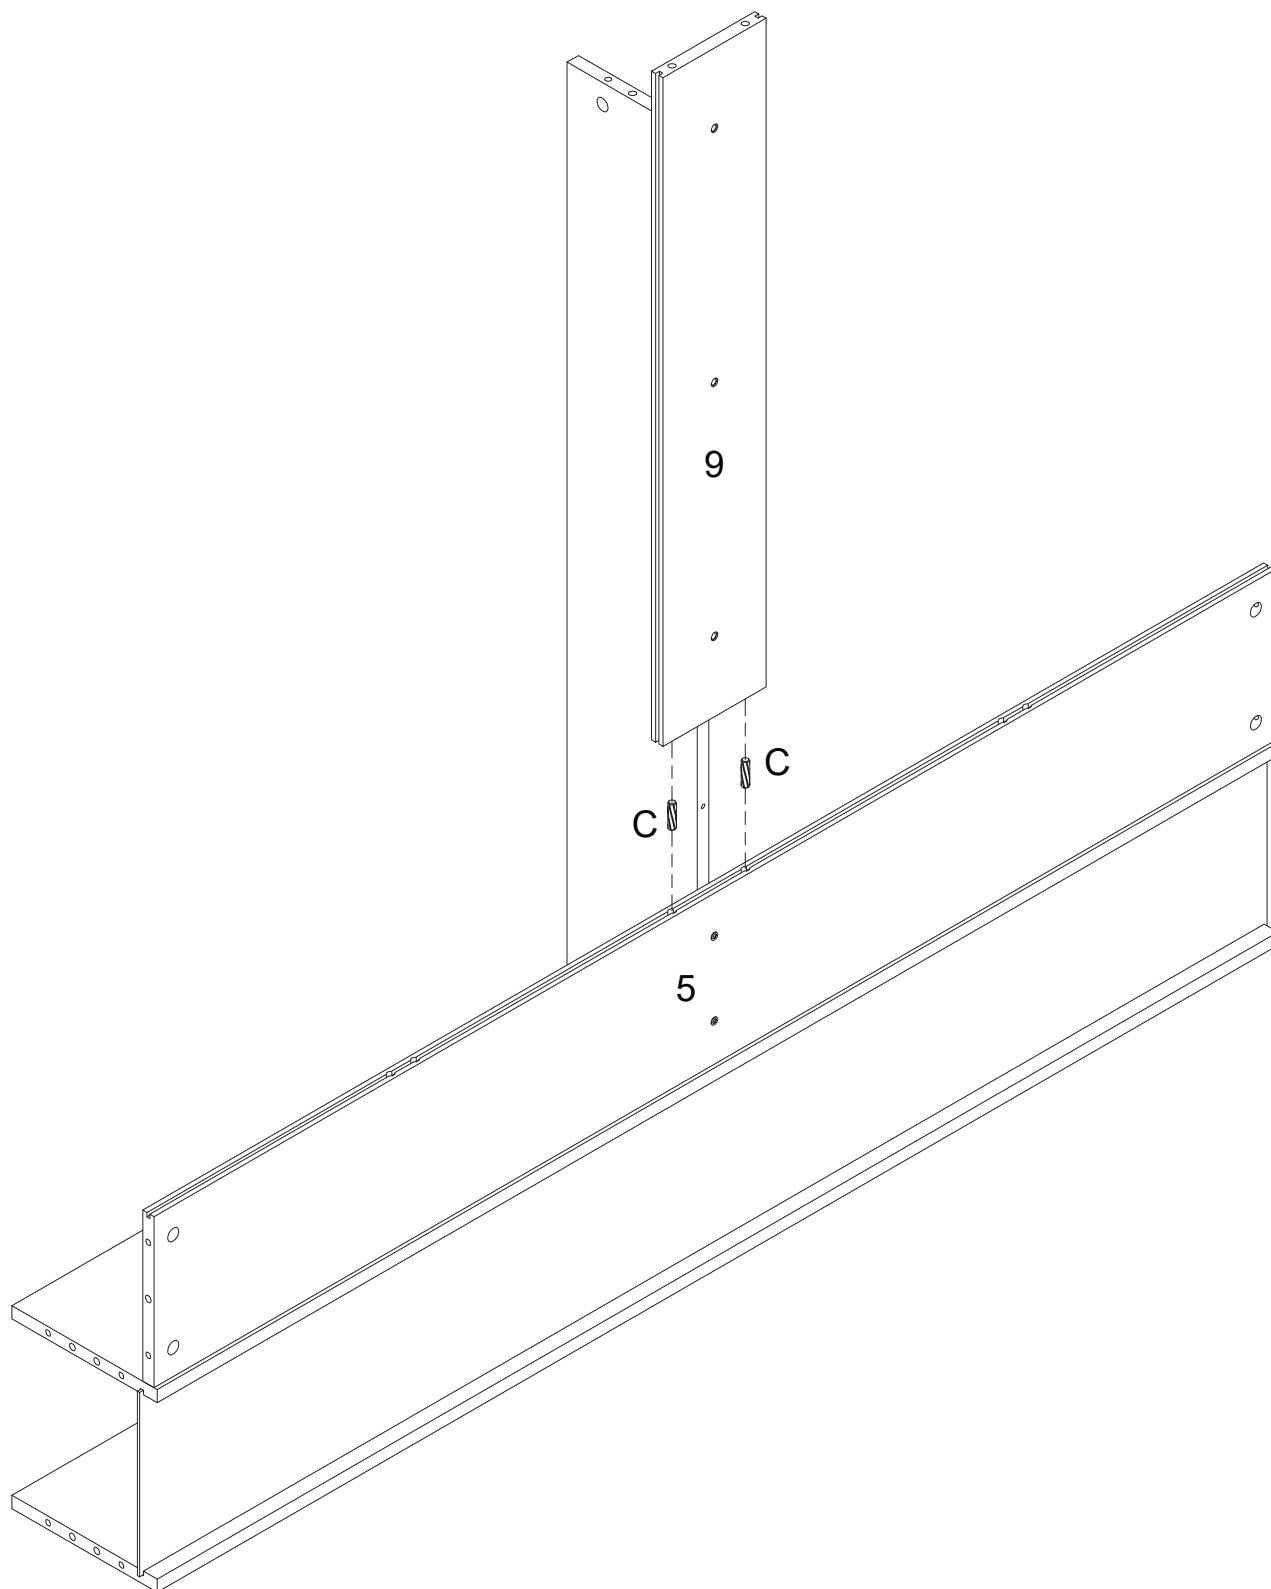


Step 8

 D x 3

 N




Step 9

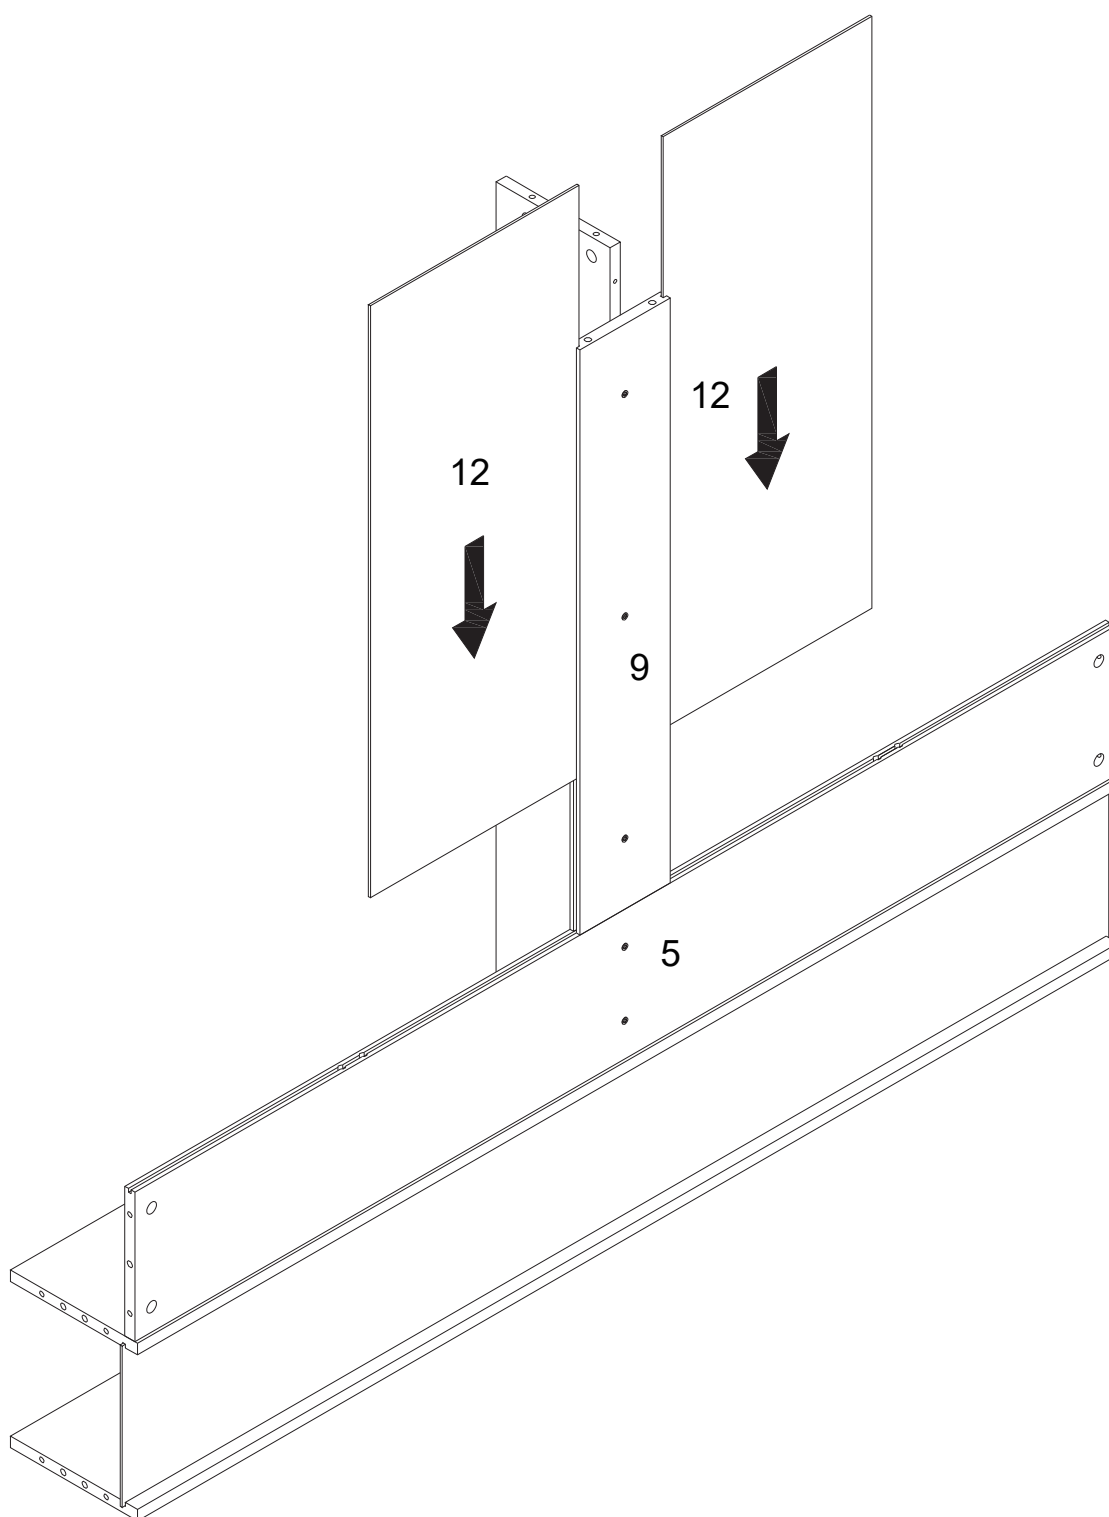


Step 10



C x 4

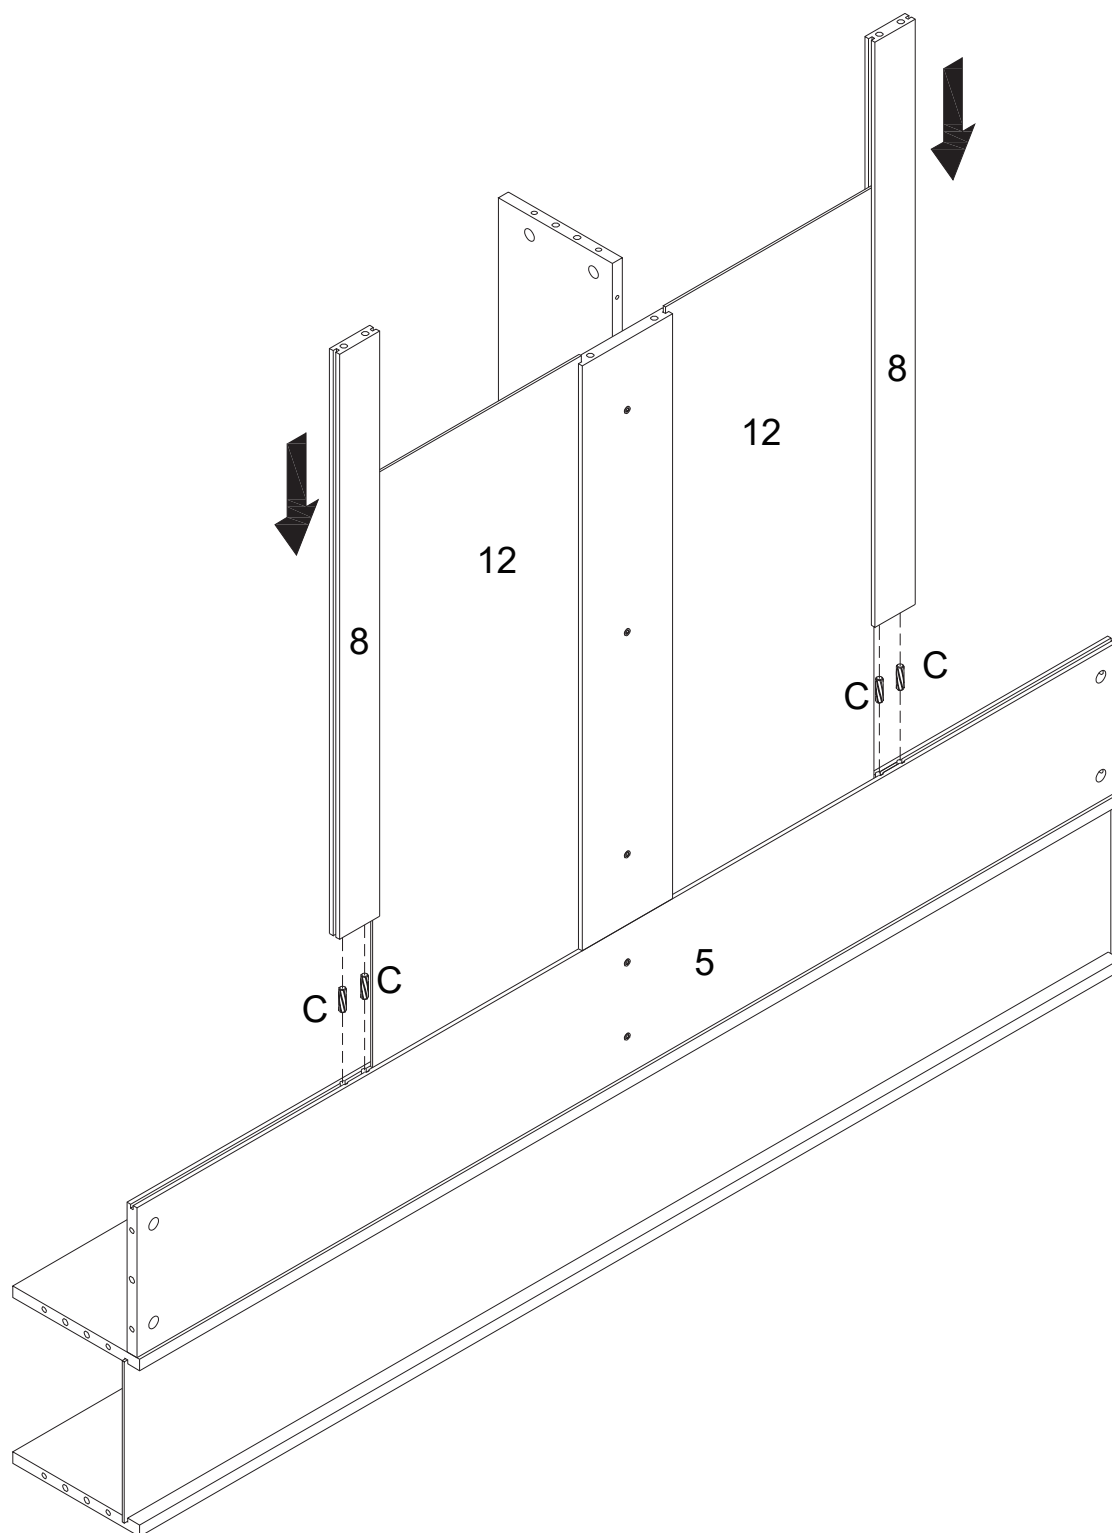


Step 11

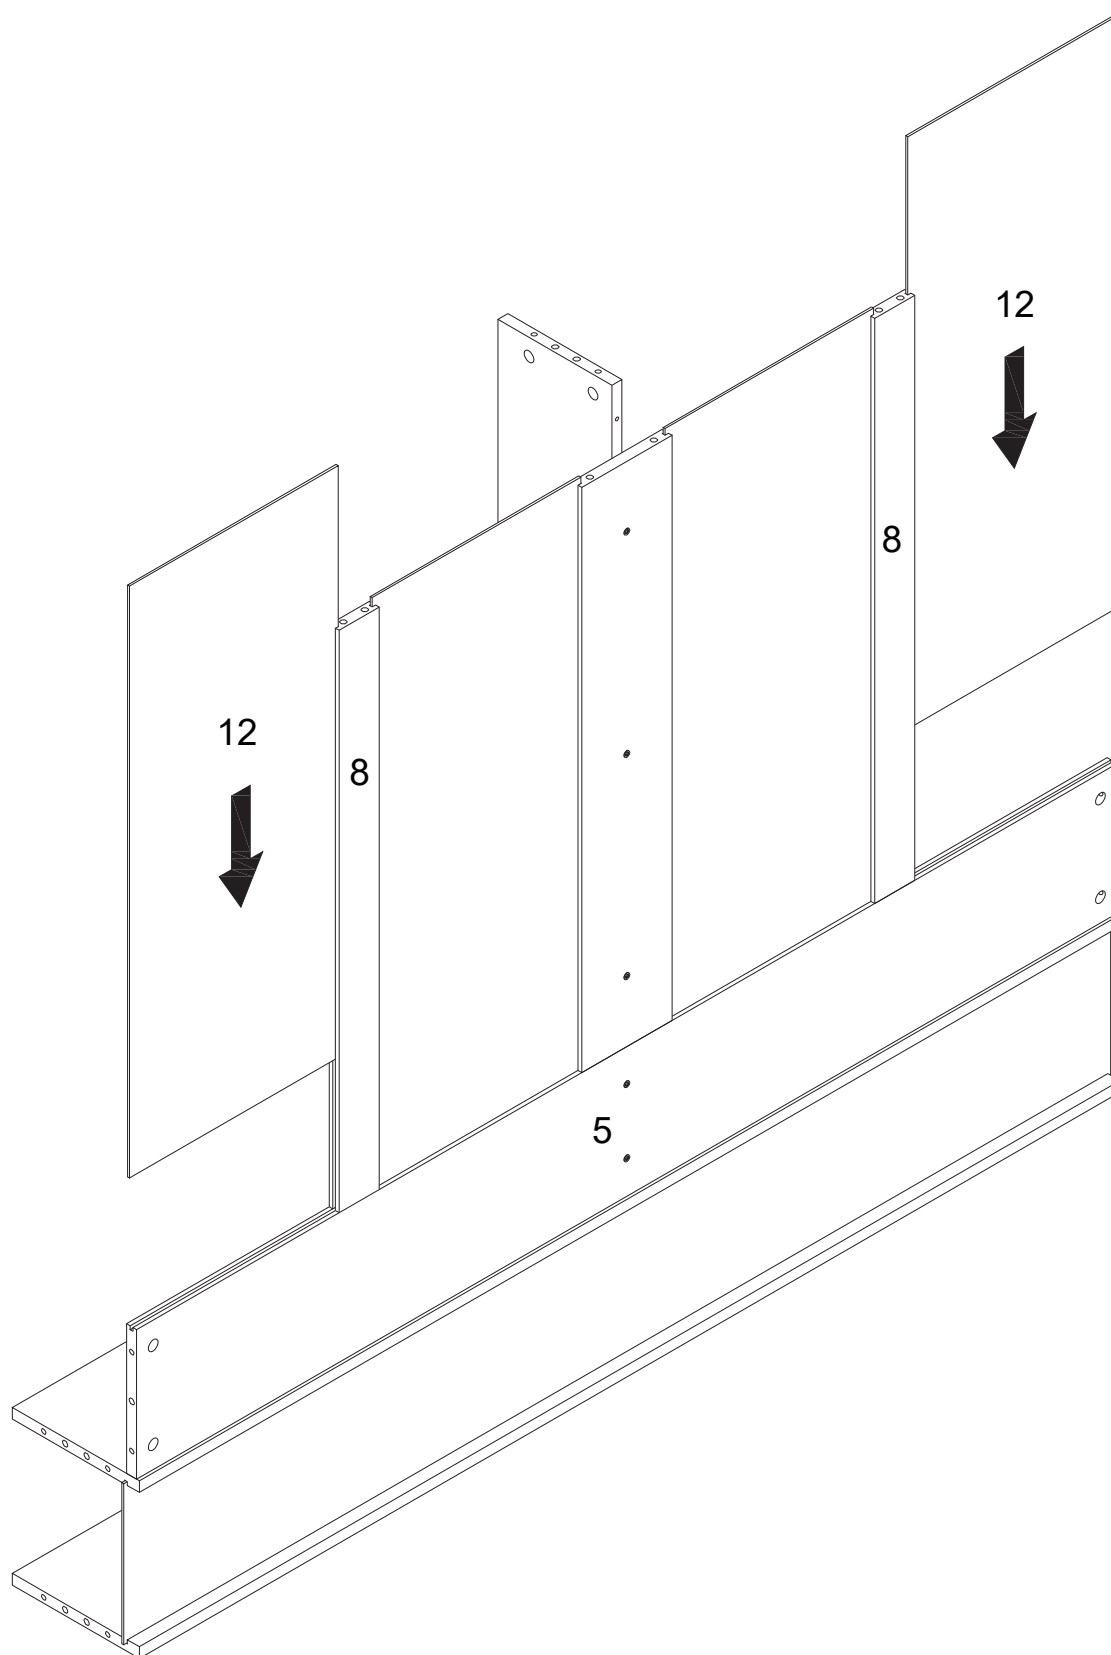

Step 12



C x 6

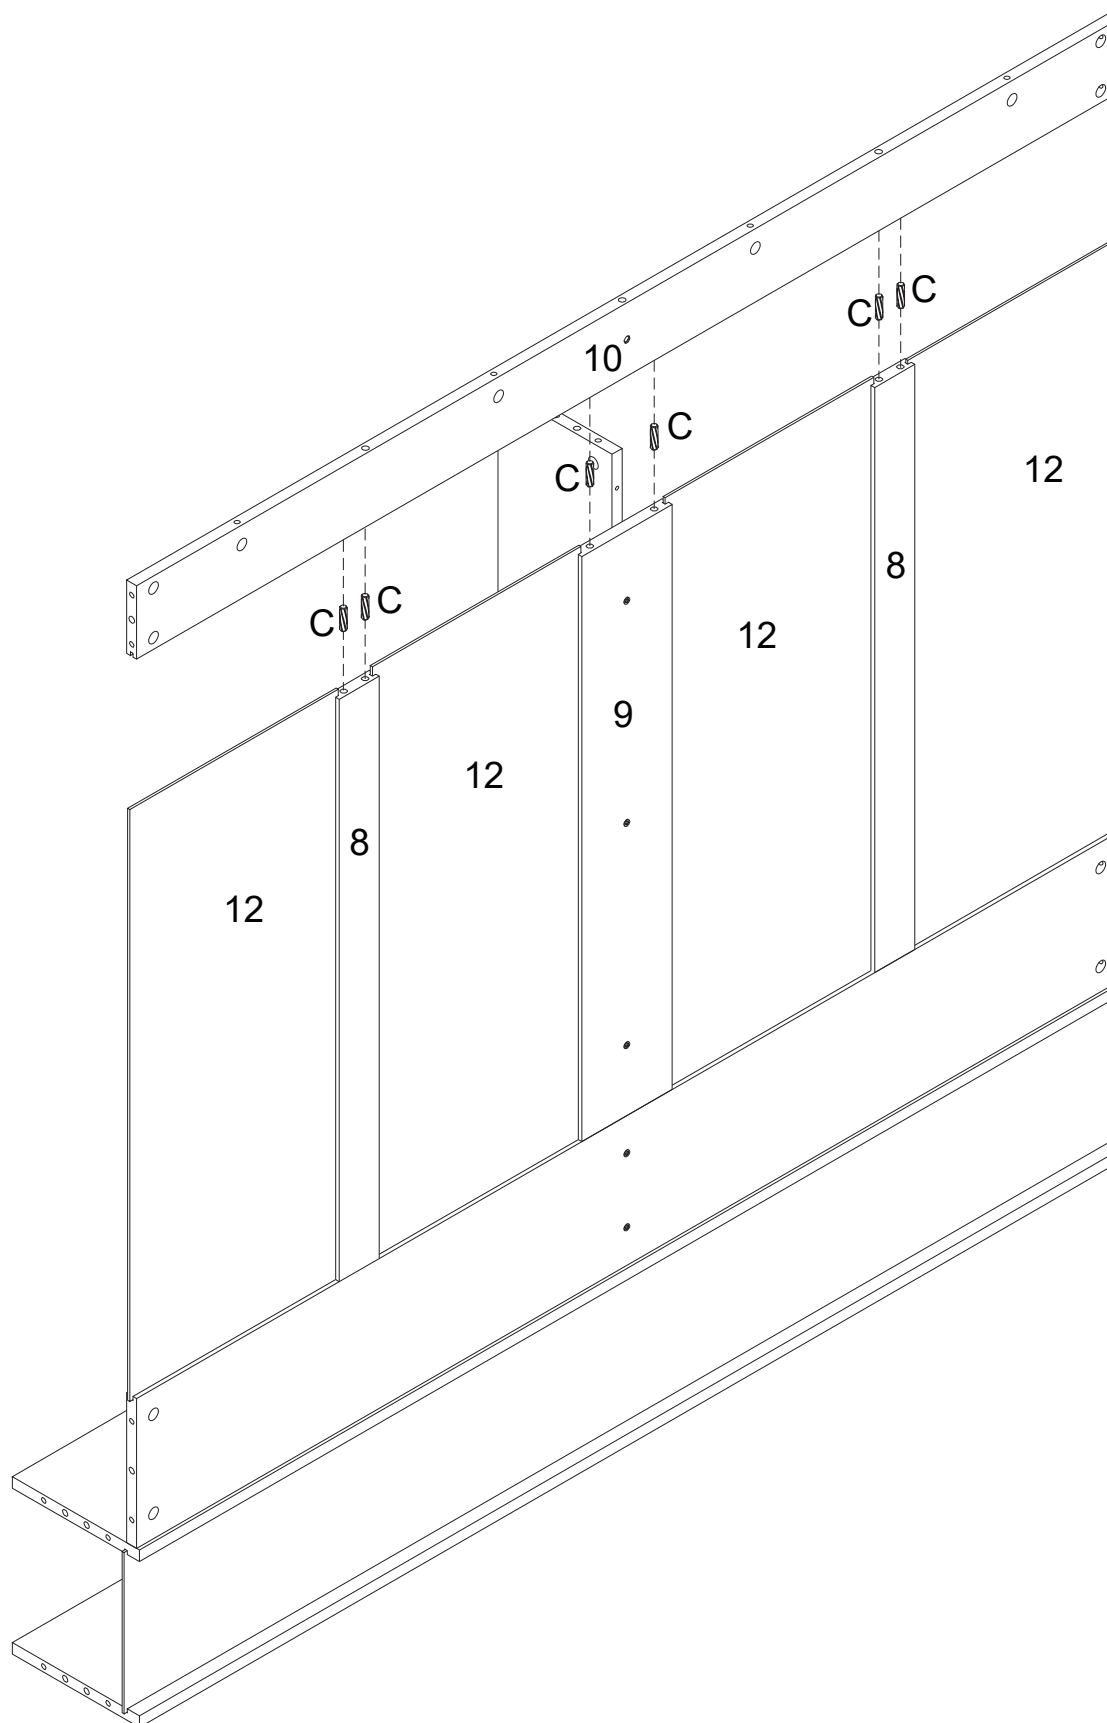

Step 13




C x 12



D x 1




N

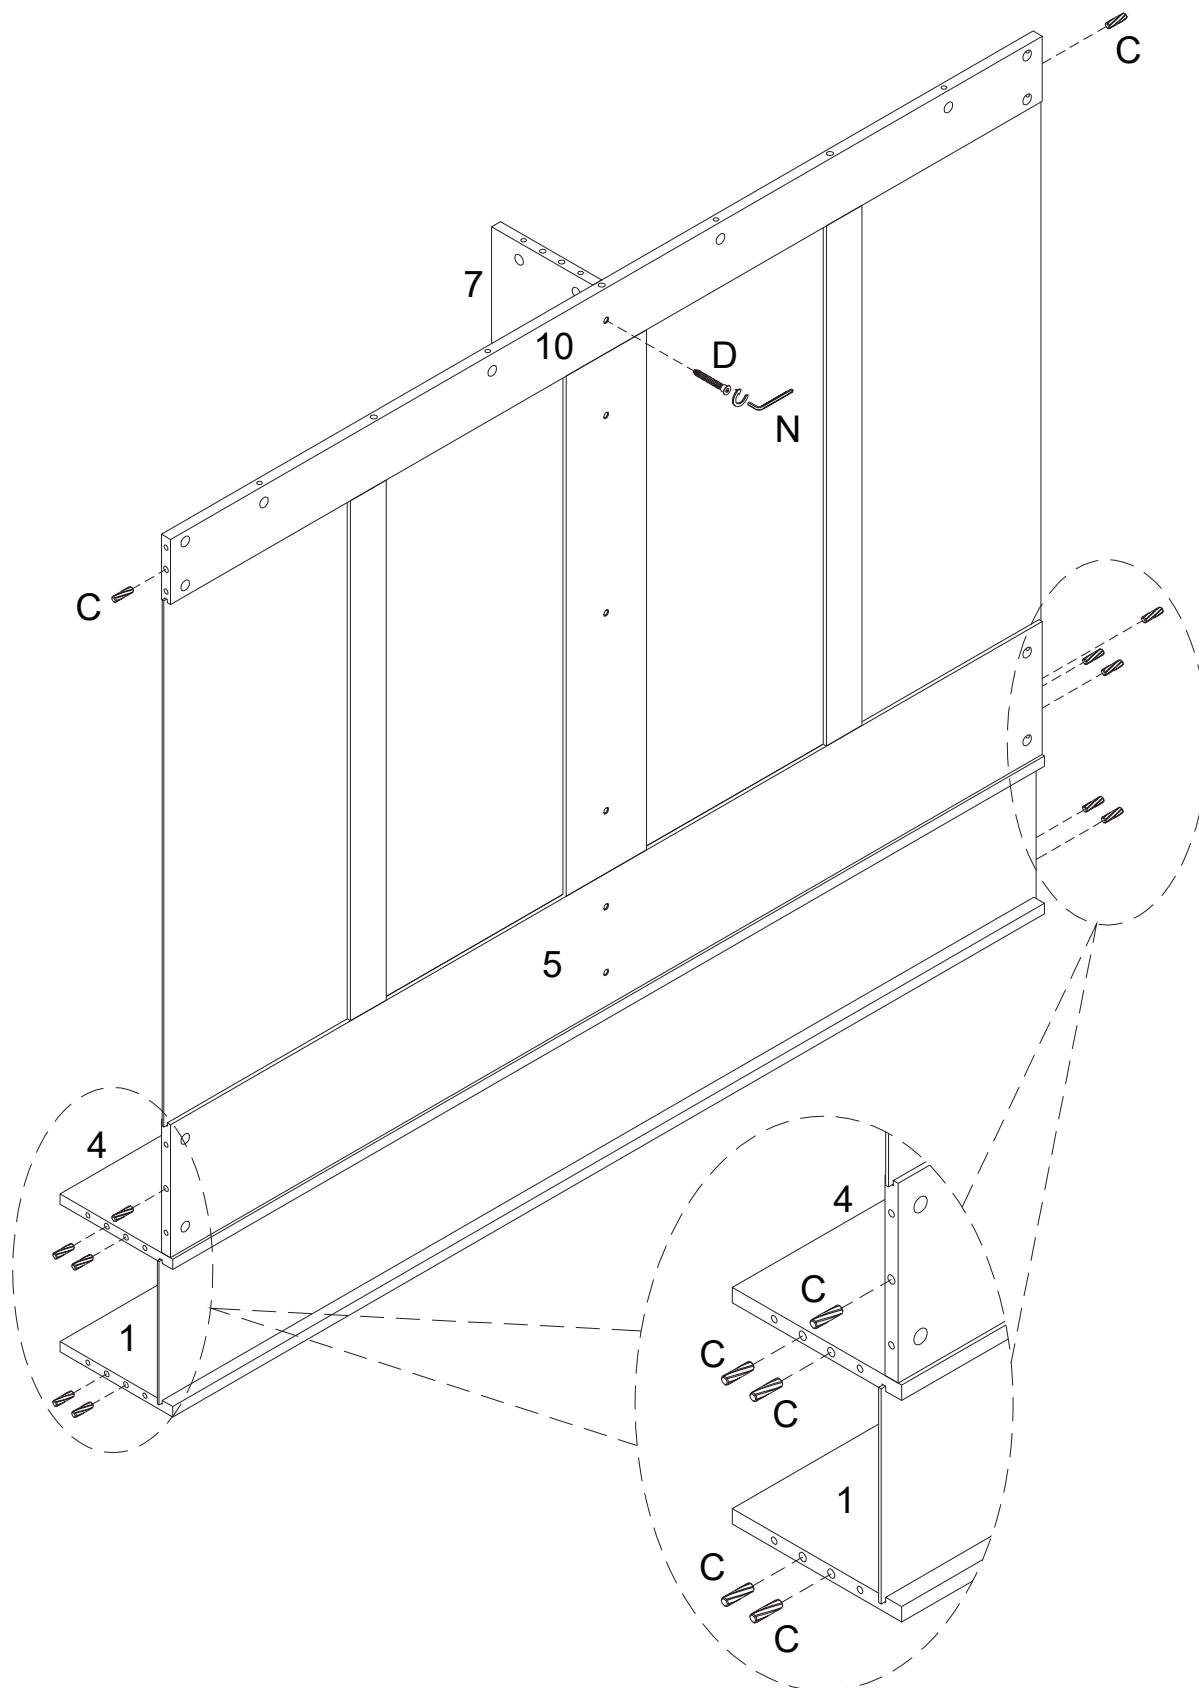


Step 14





A x 16

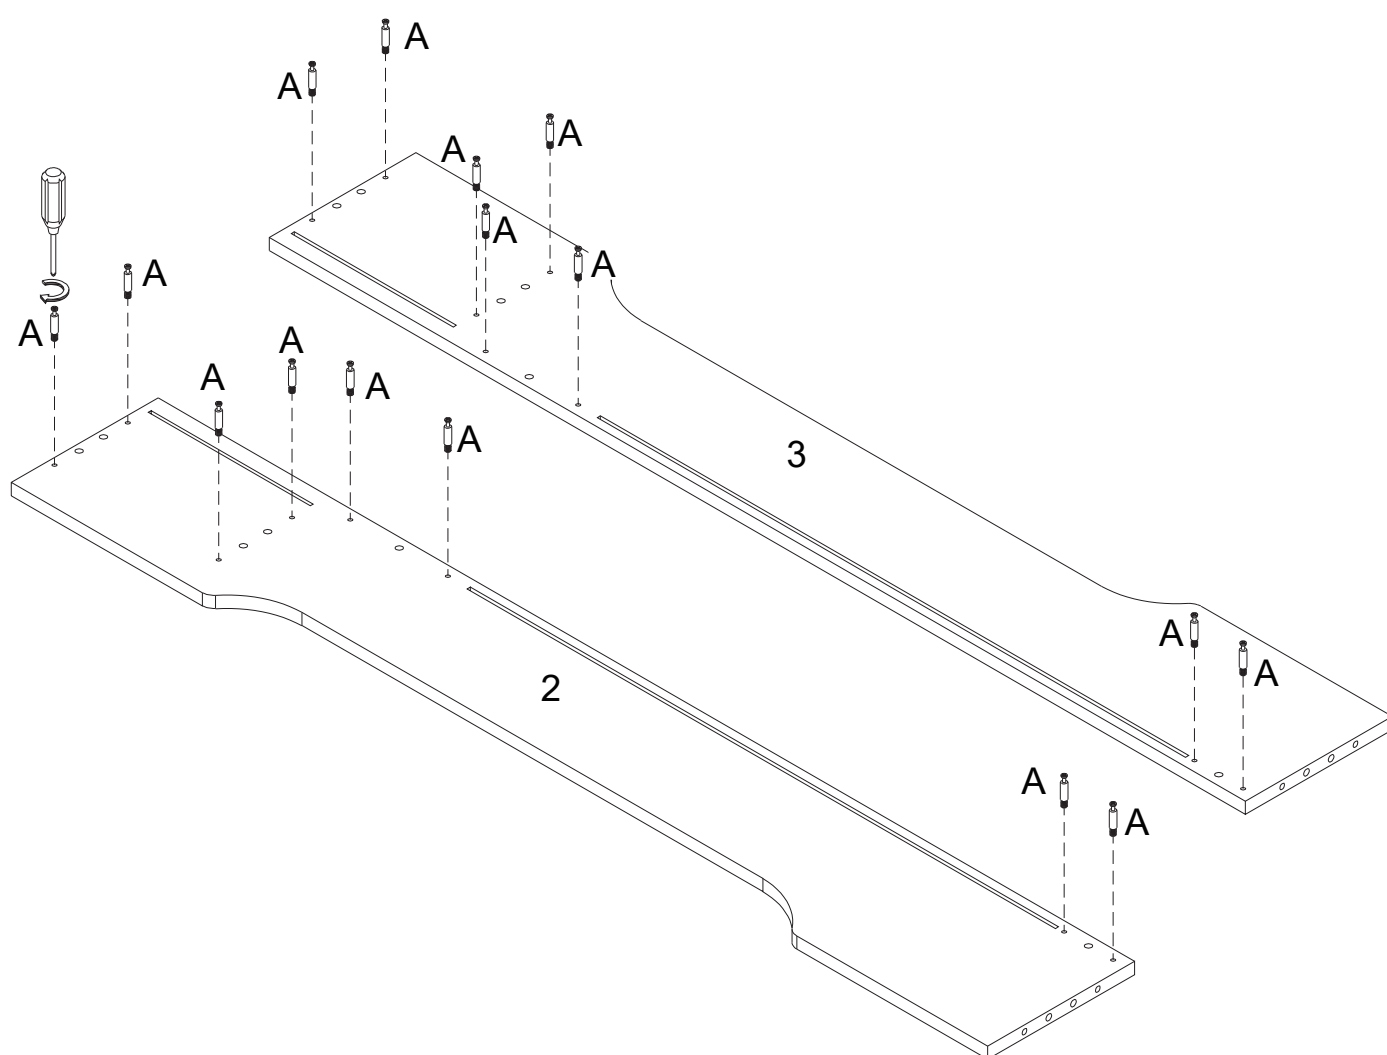


Step 15





B x 8

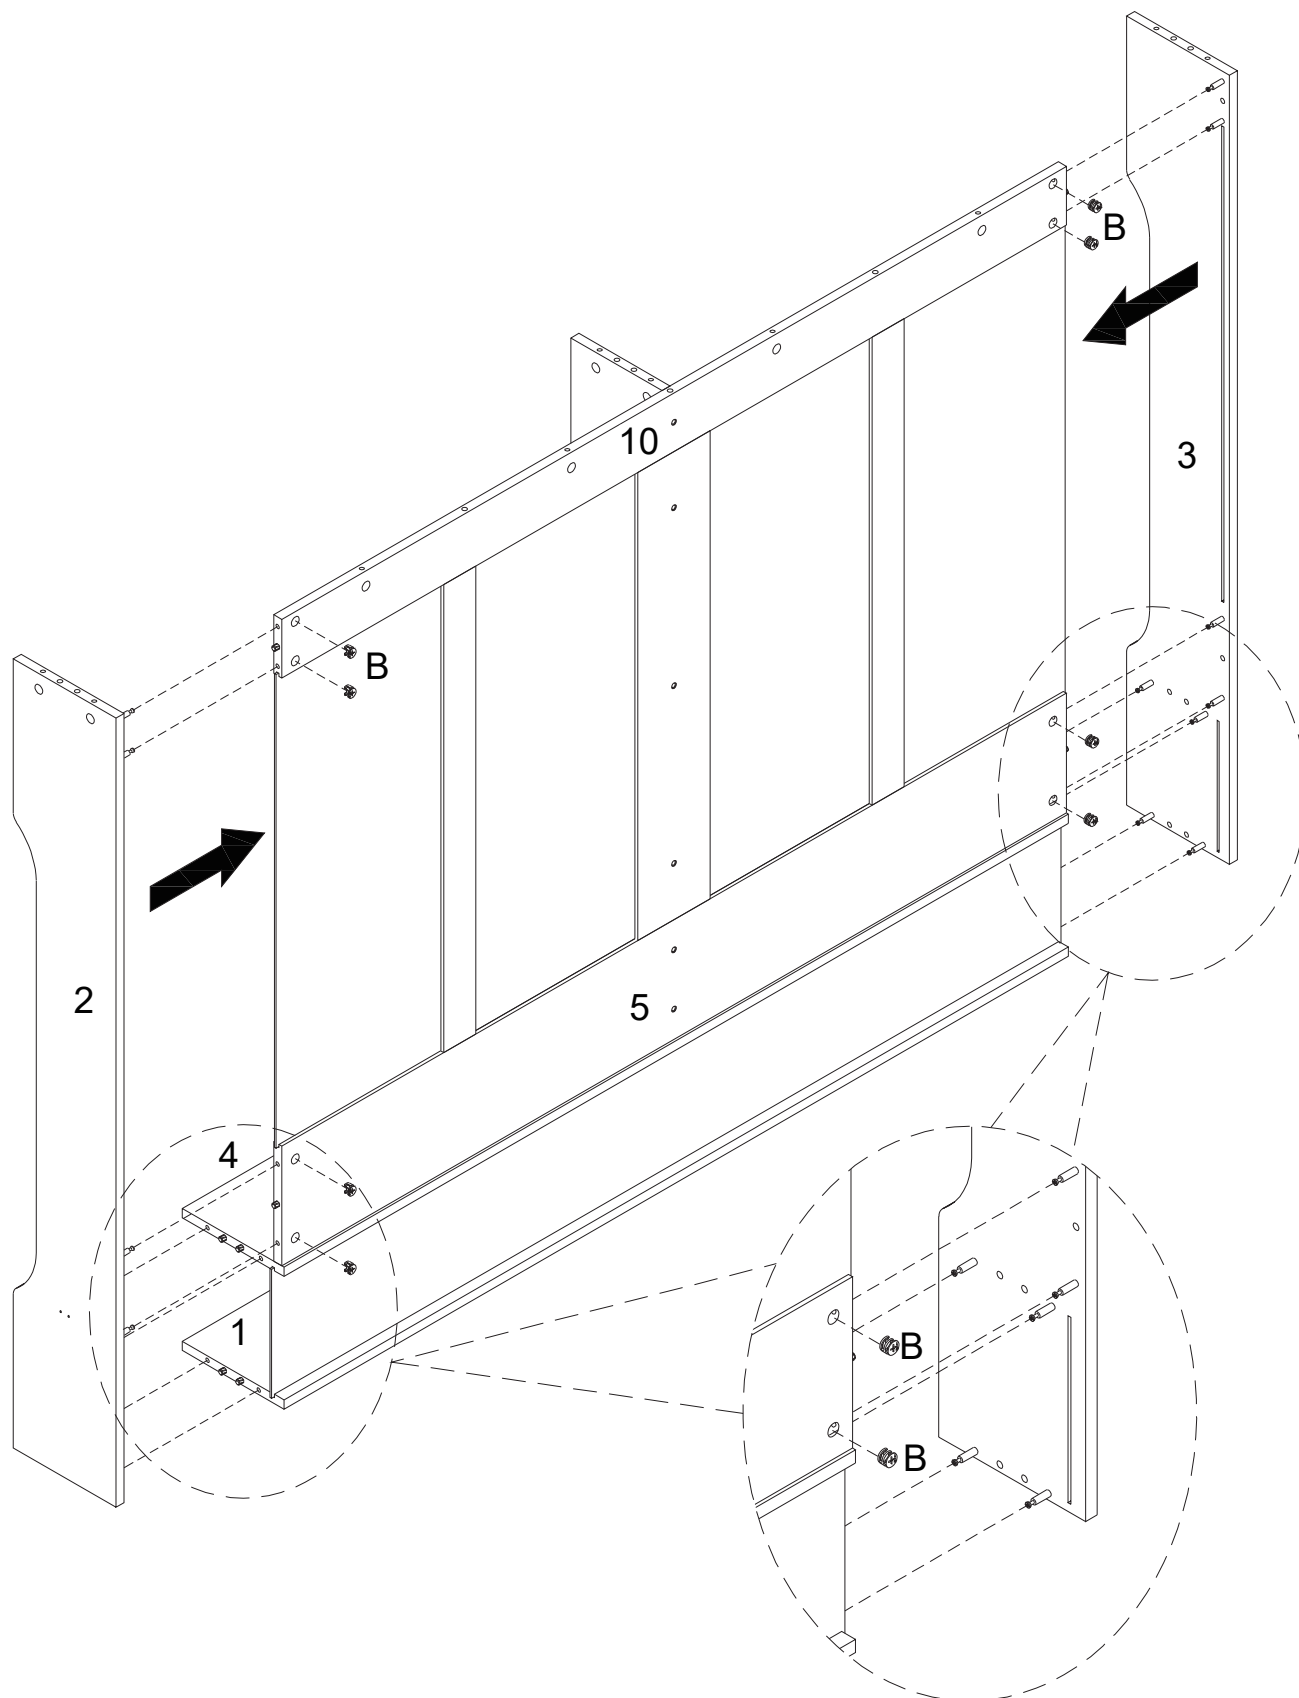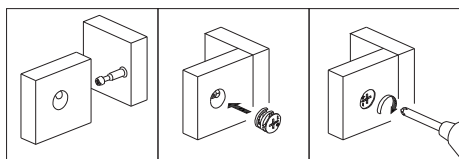

Step 16



B x 8

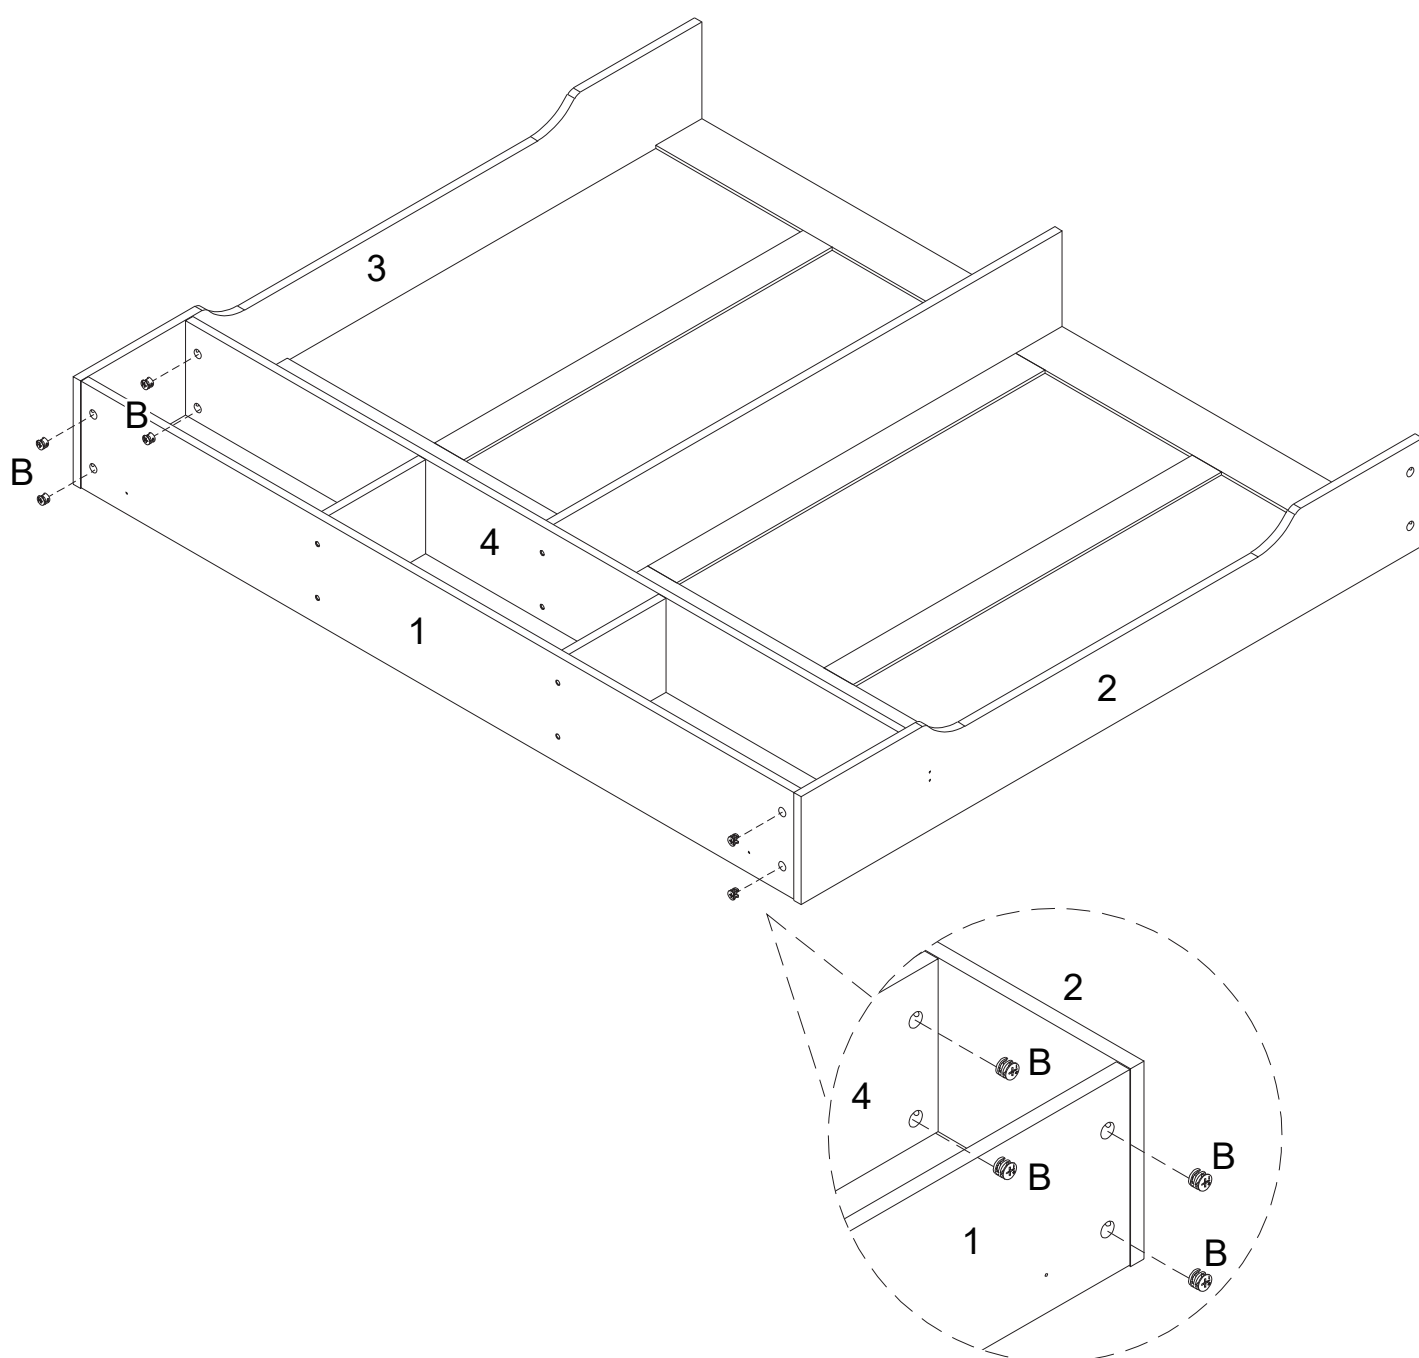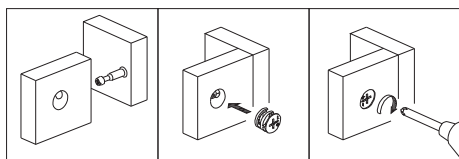




Step 17




T x 12




U x 12

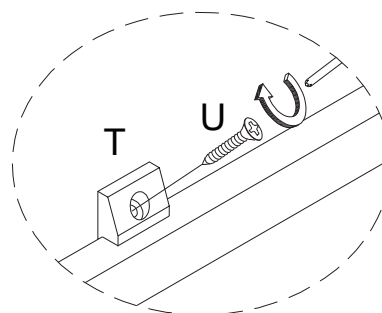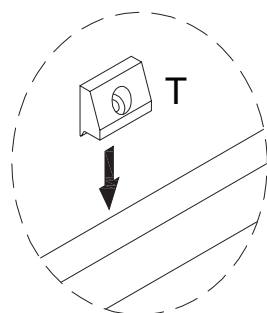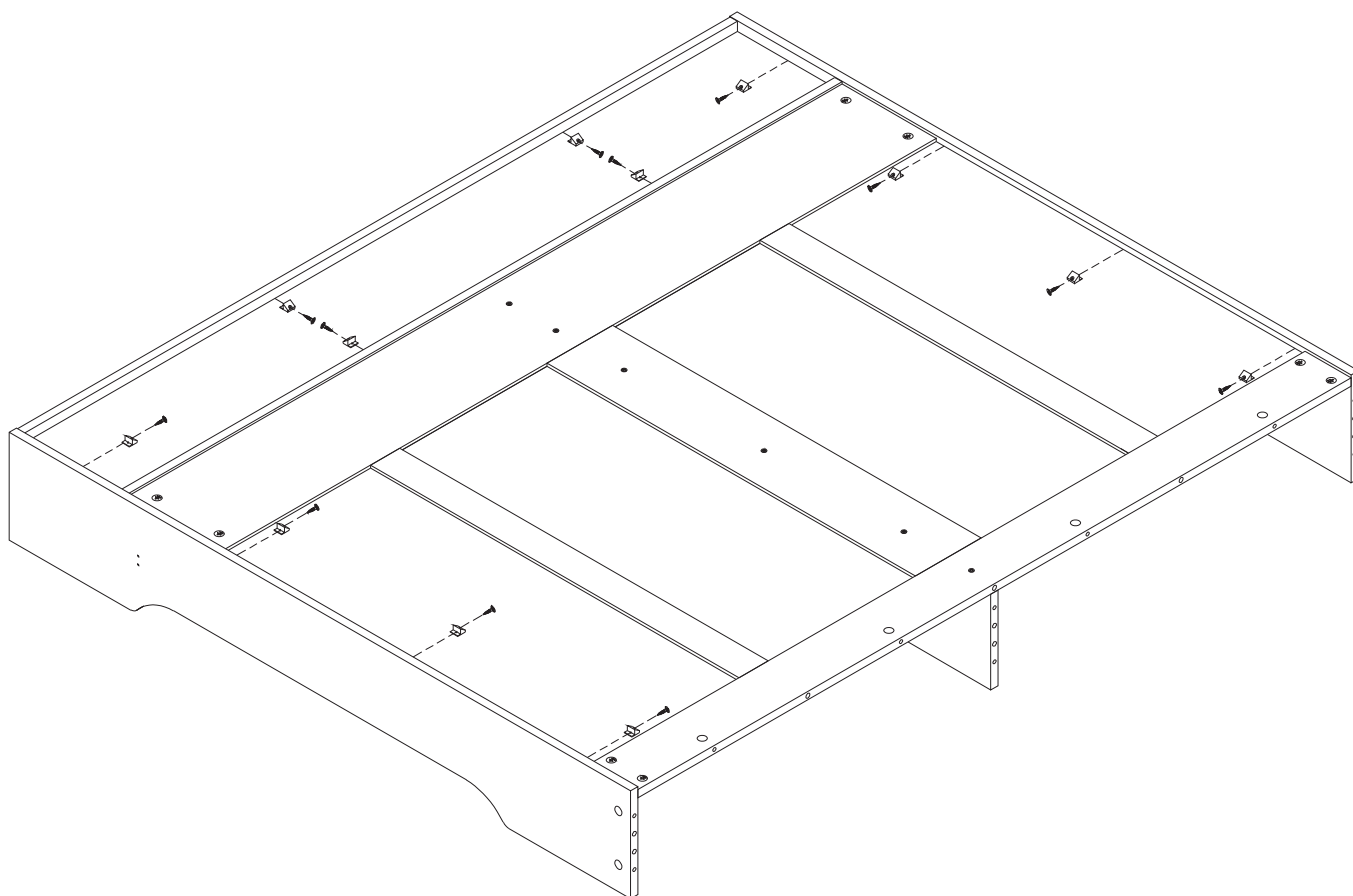


Step 18




M x 4




P x 2



R x 2

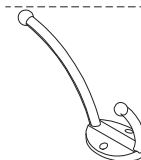

V x 2

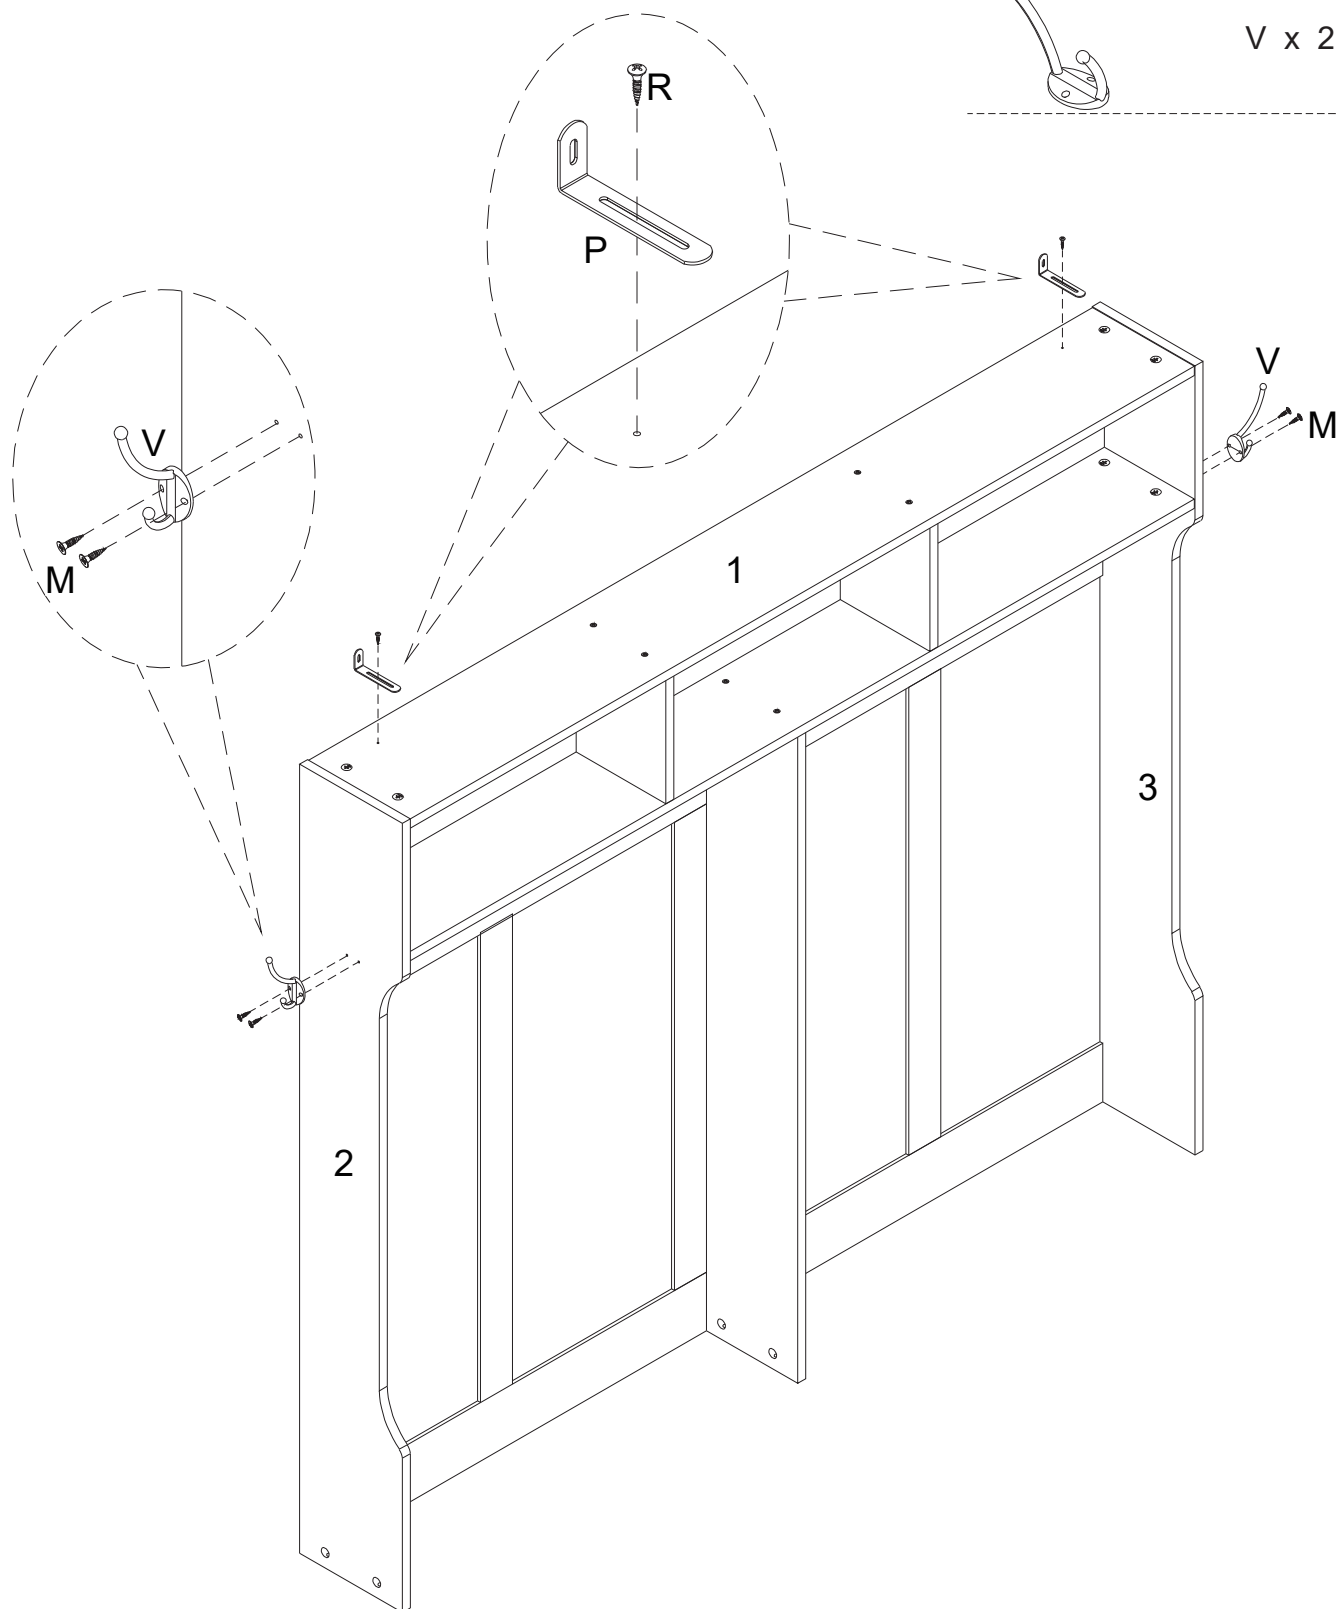


Step 19




A x 8




C x 8

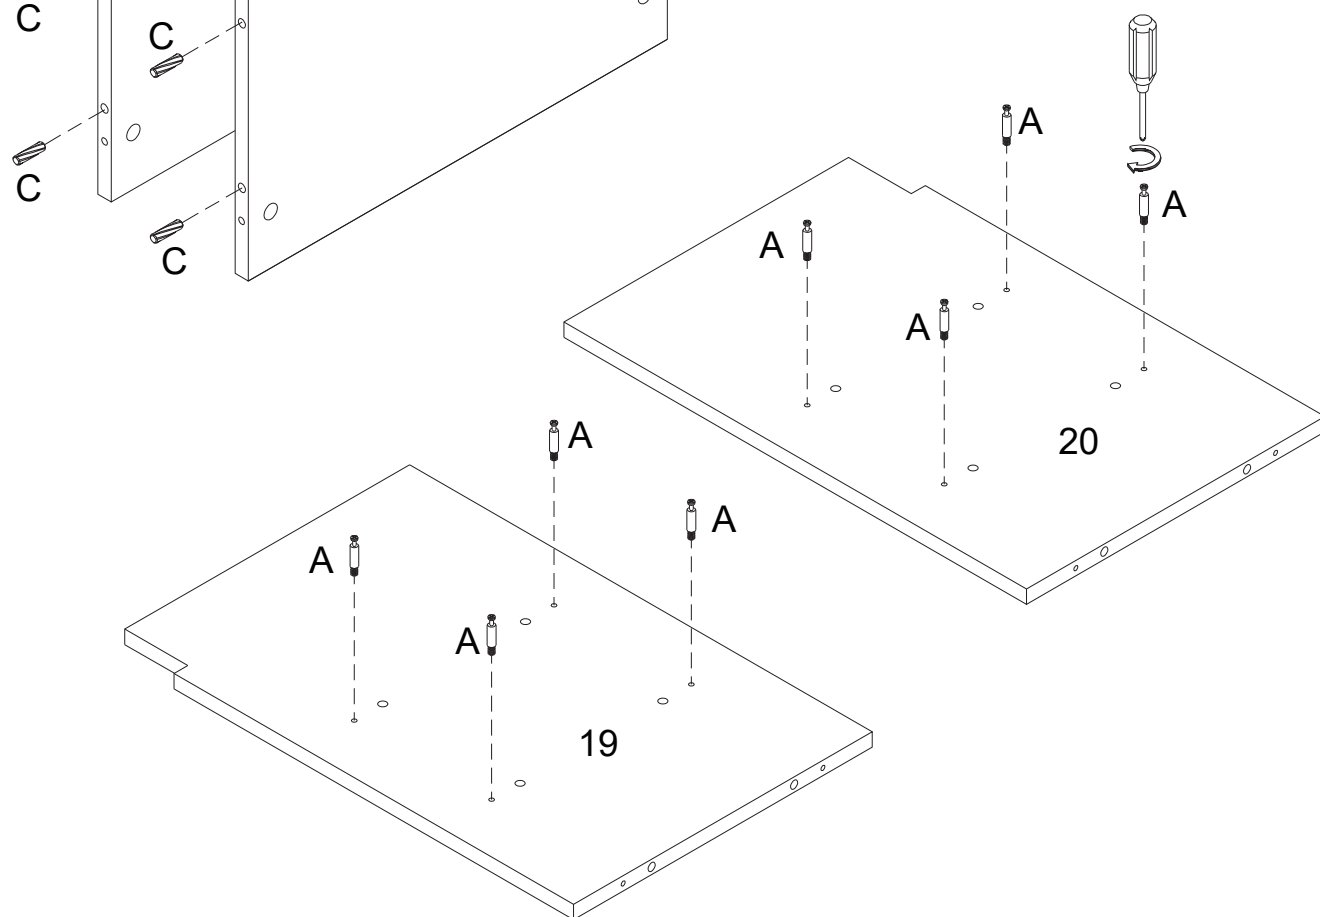

Step 20




B x 8

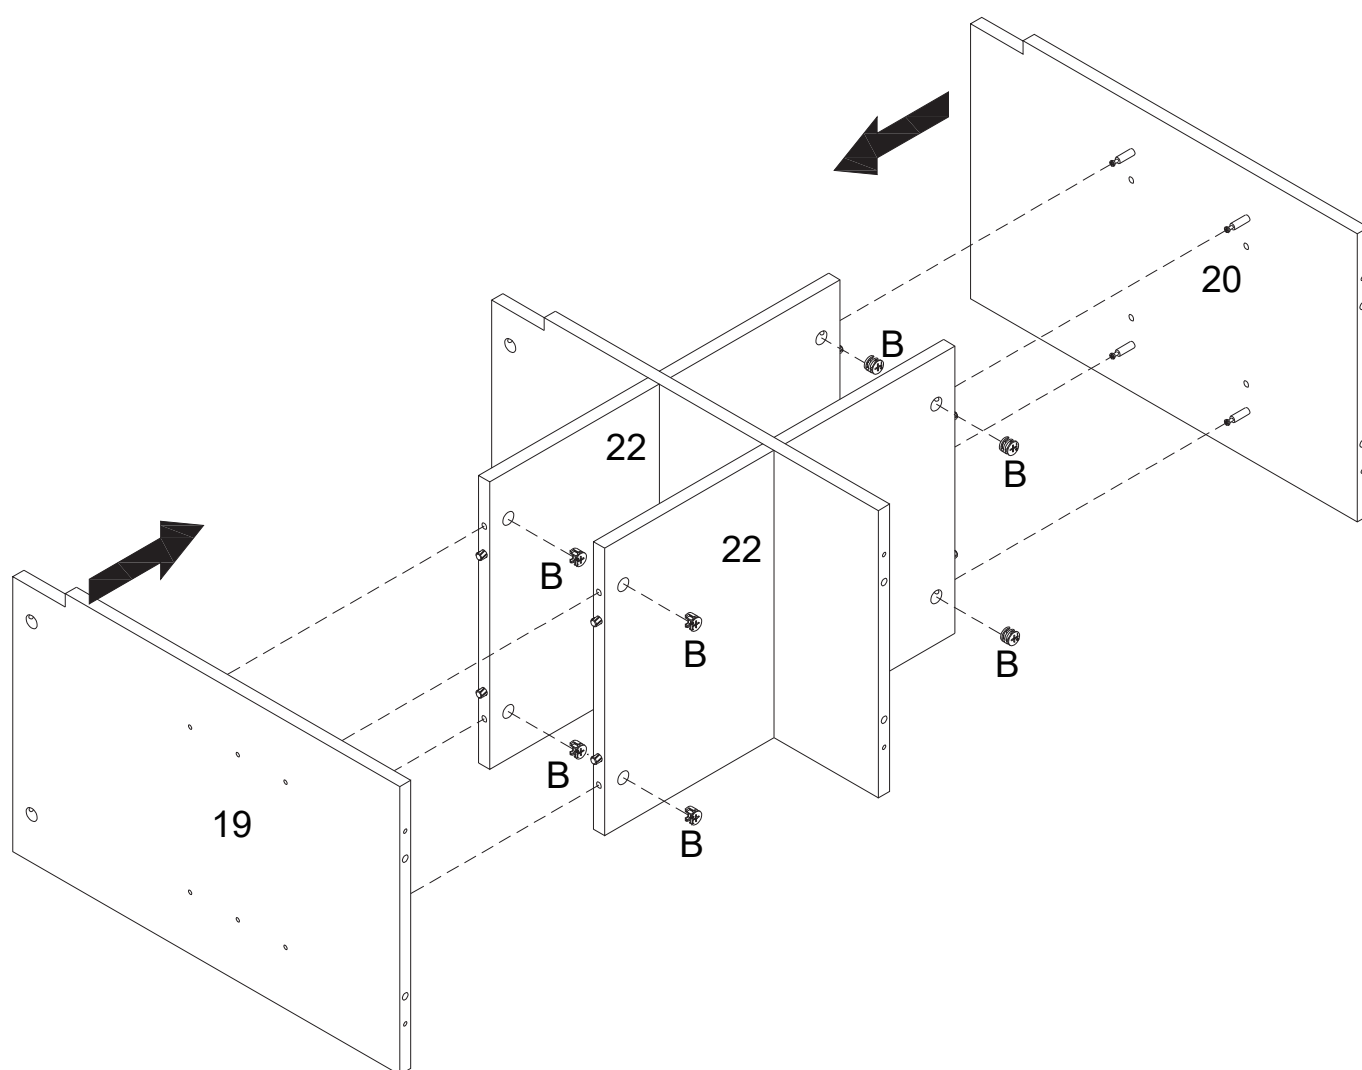

Step 21




C x 6

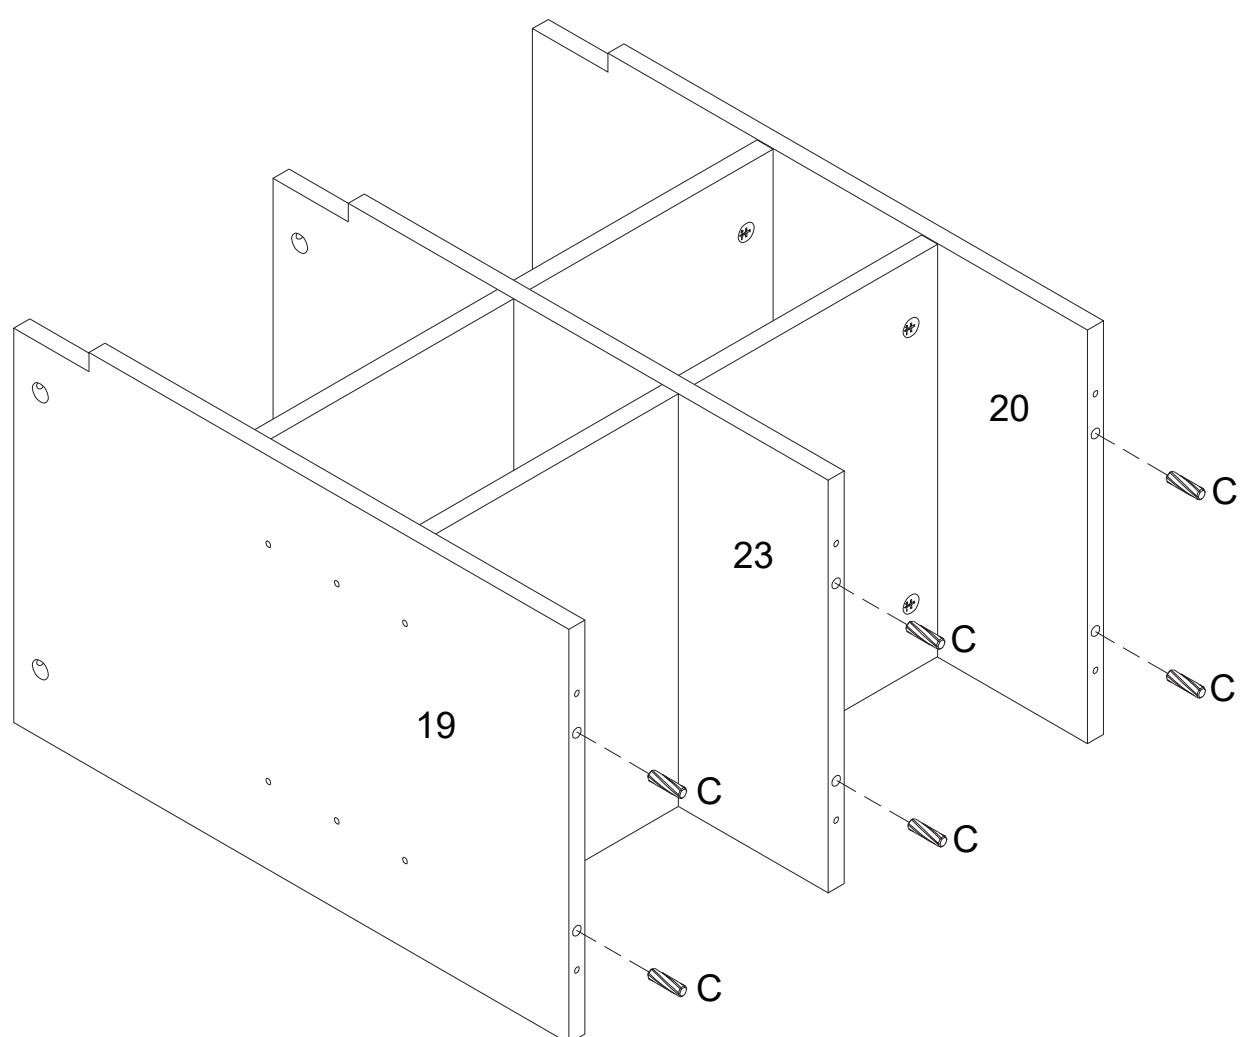


Step 22



A x 10

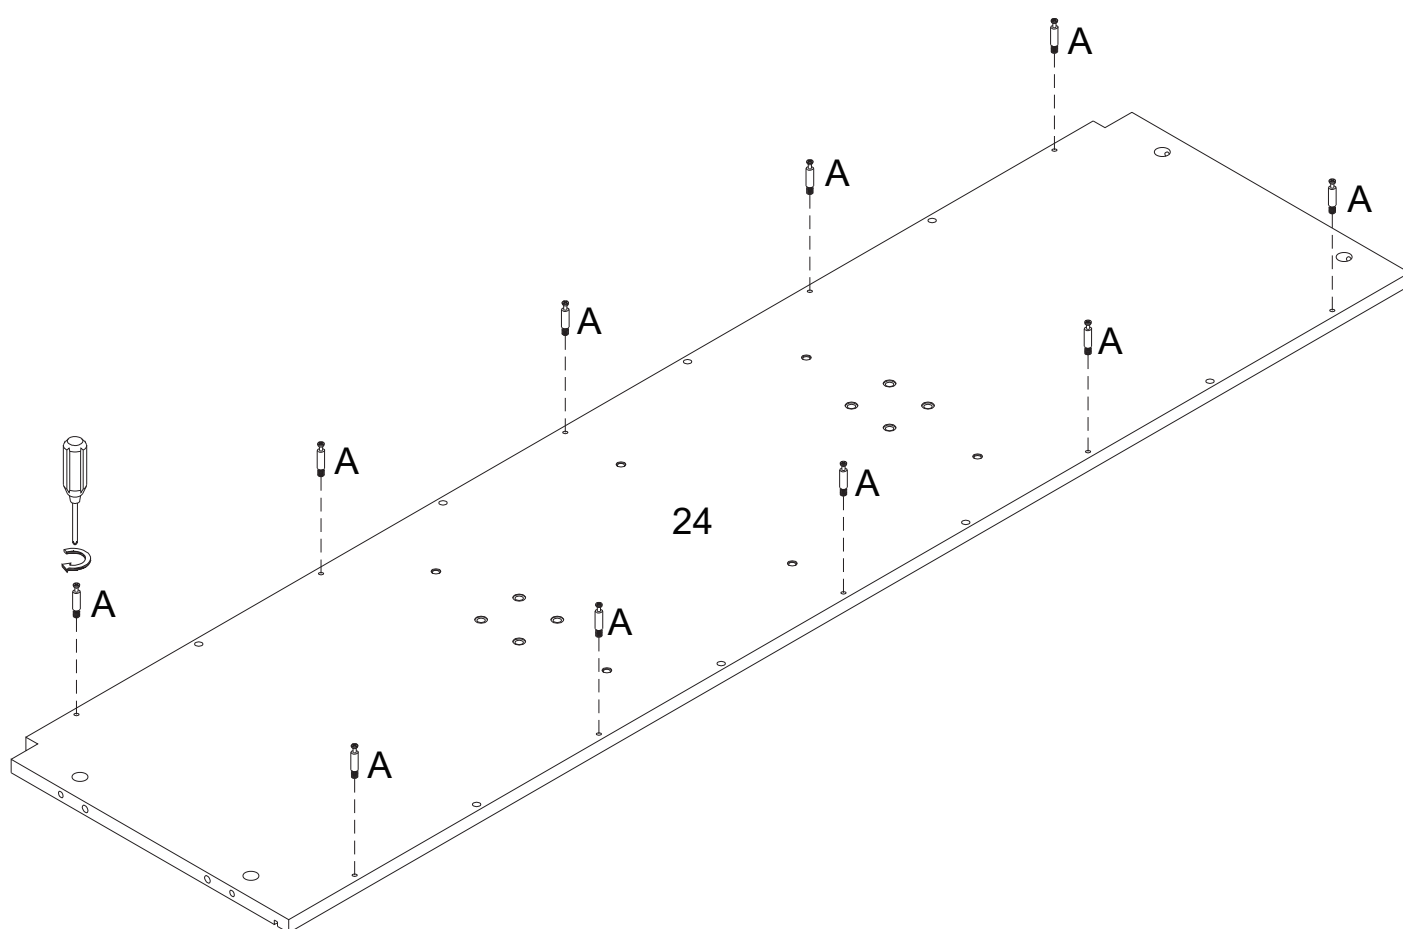


Step 23



B x 10



C x 8

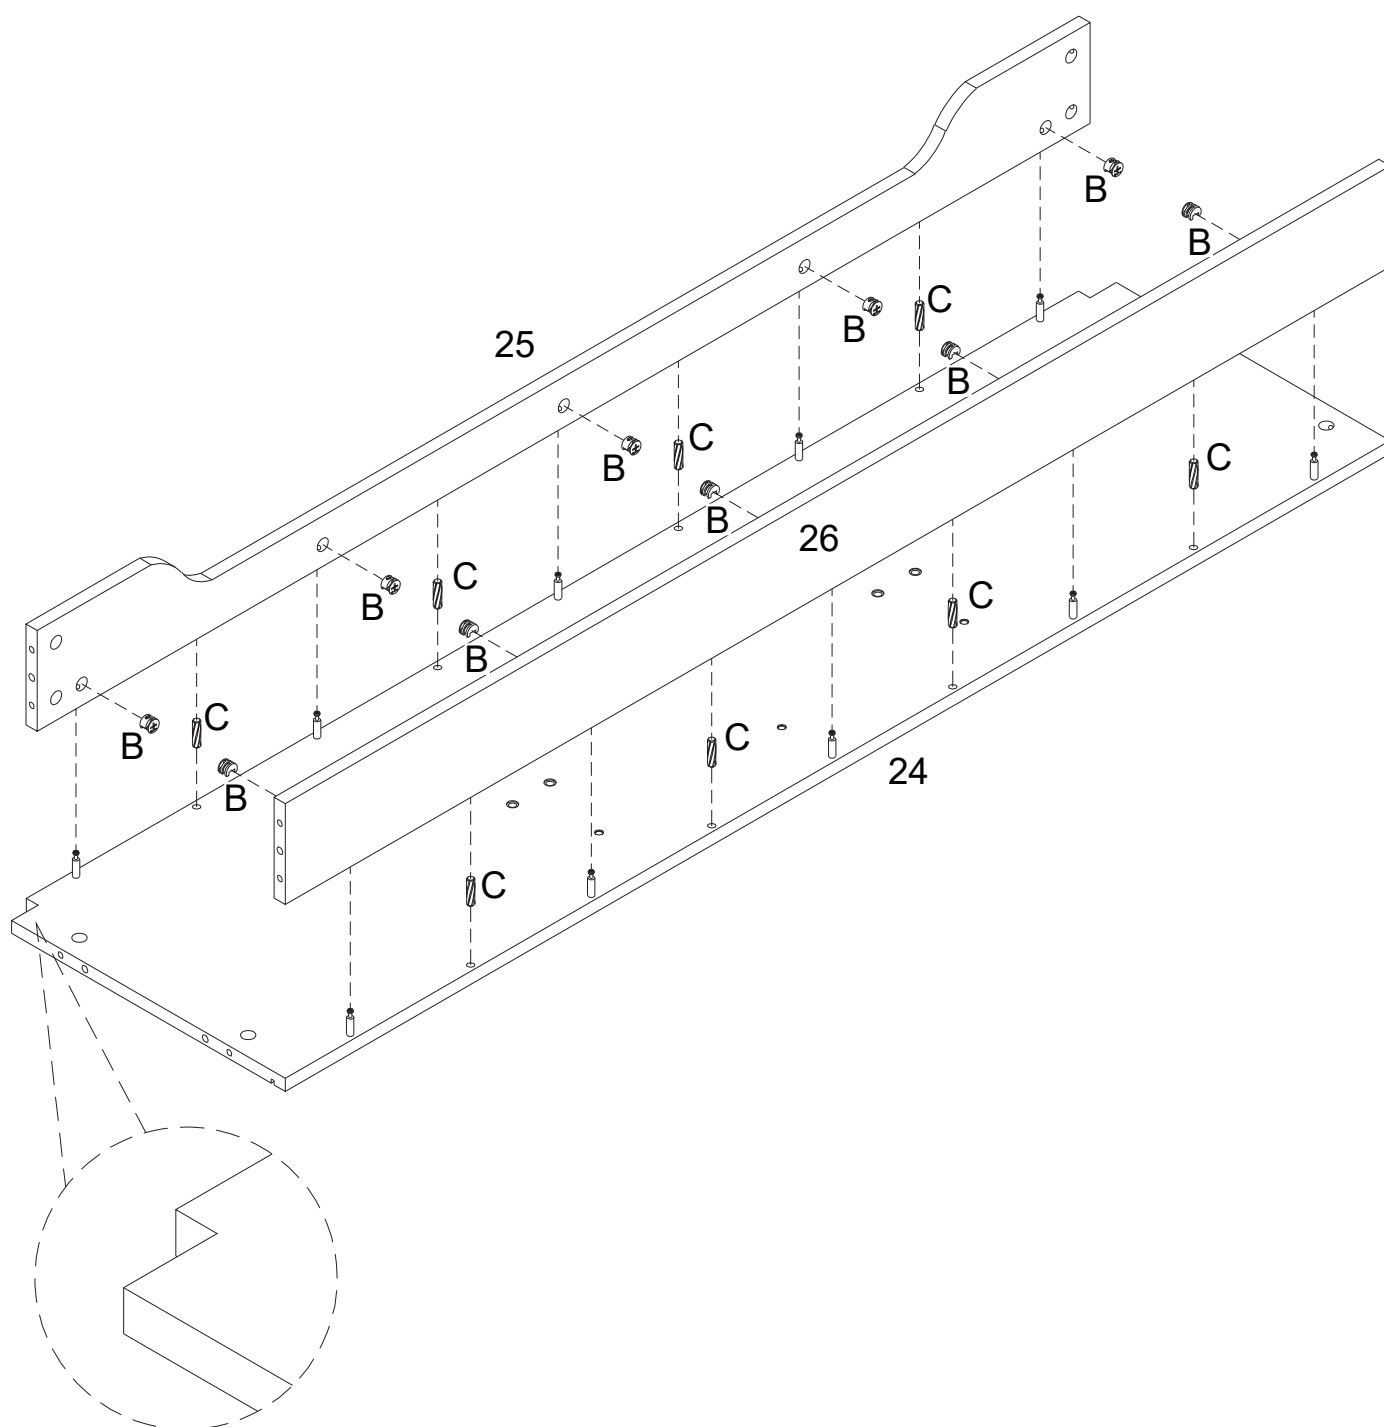

Step 24




C x 8




D x 6



N

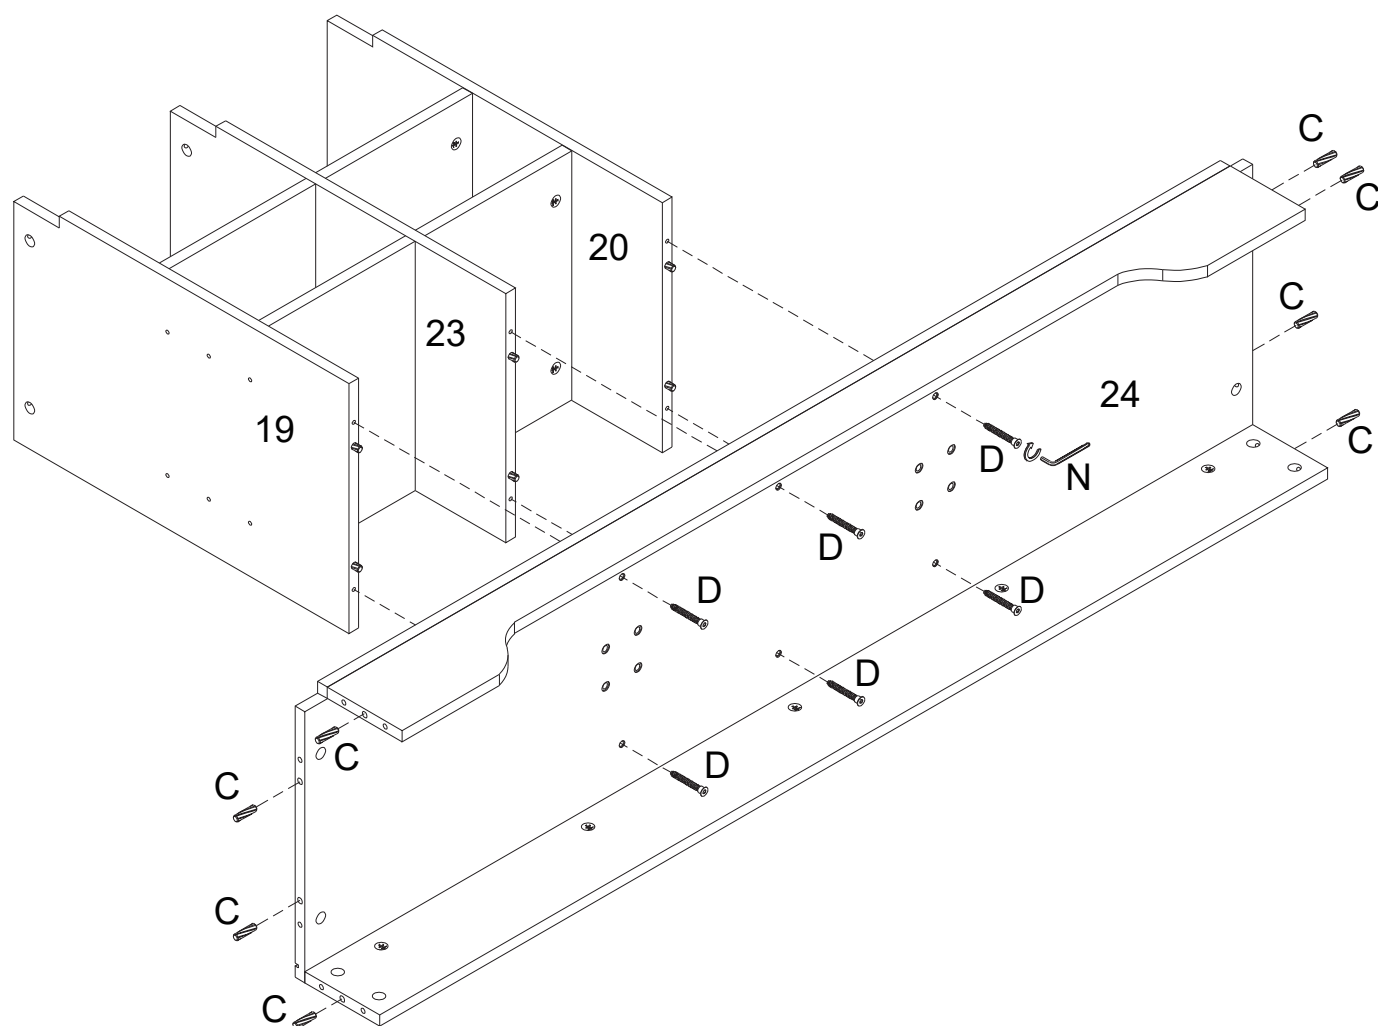

Step 25




H x 5



N




A x 14

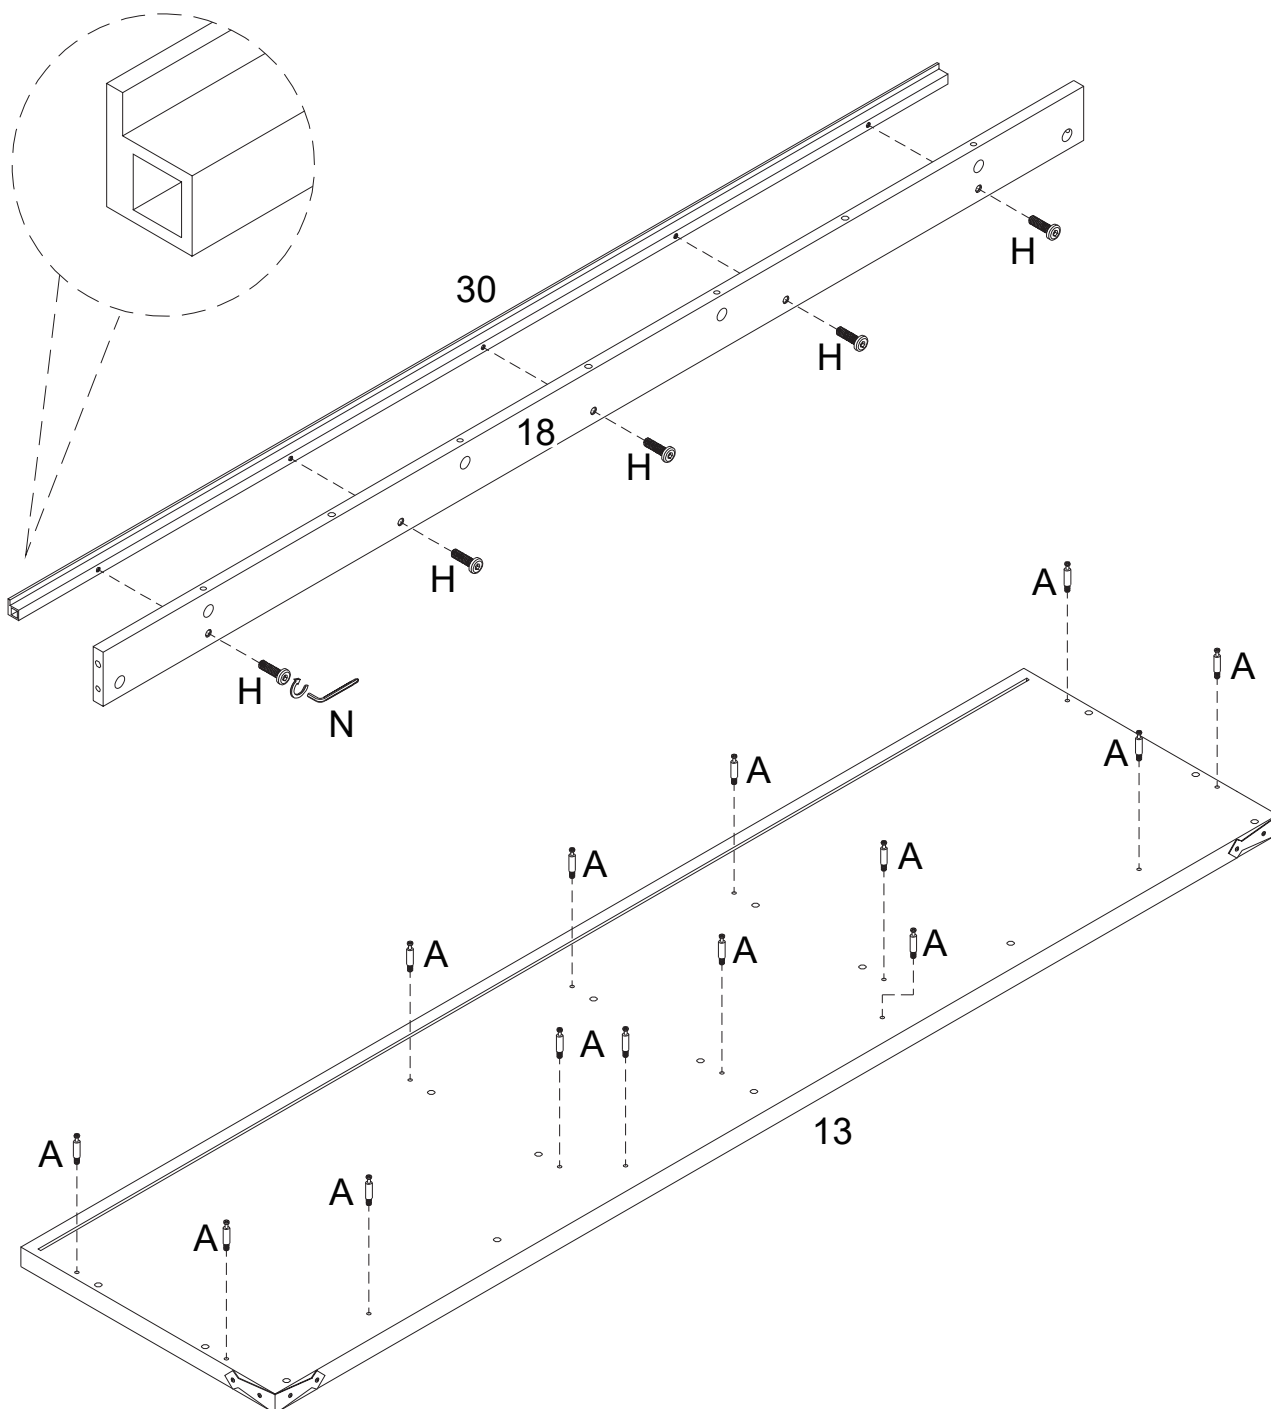

Step 26




A x 20



B x 6




C x 4

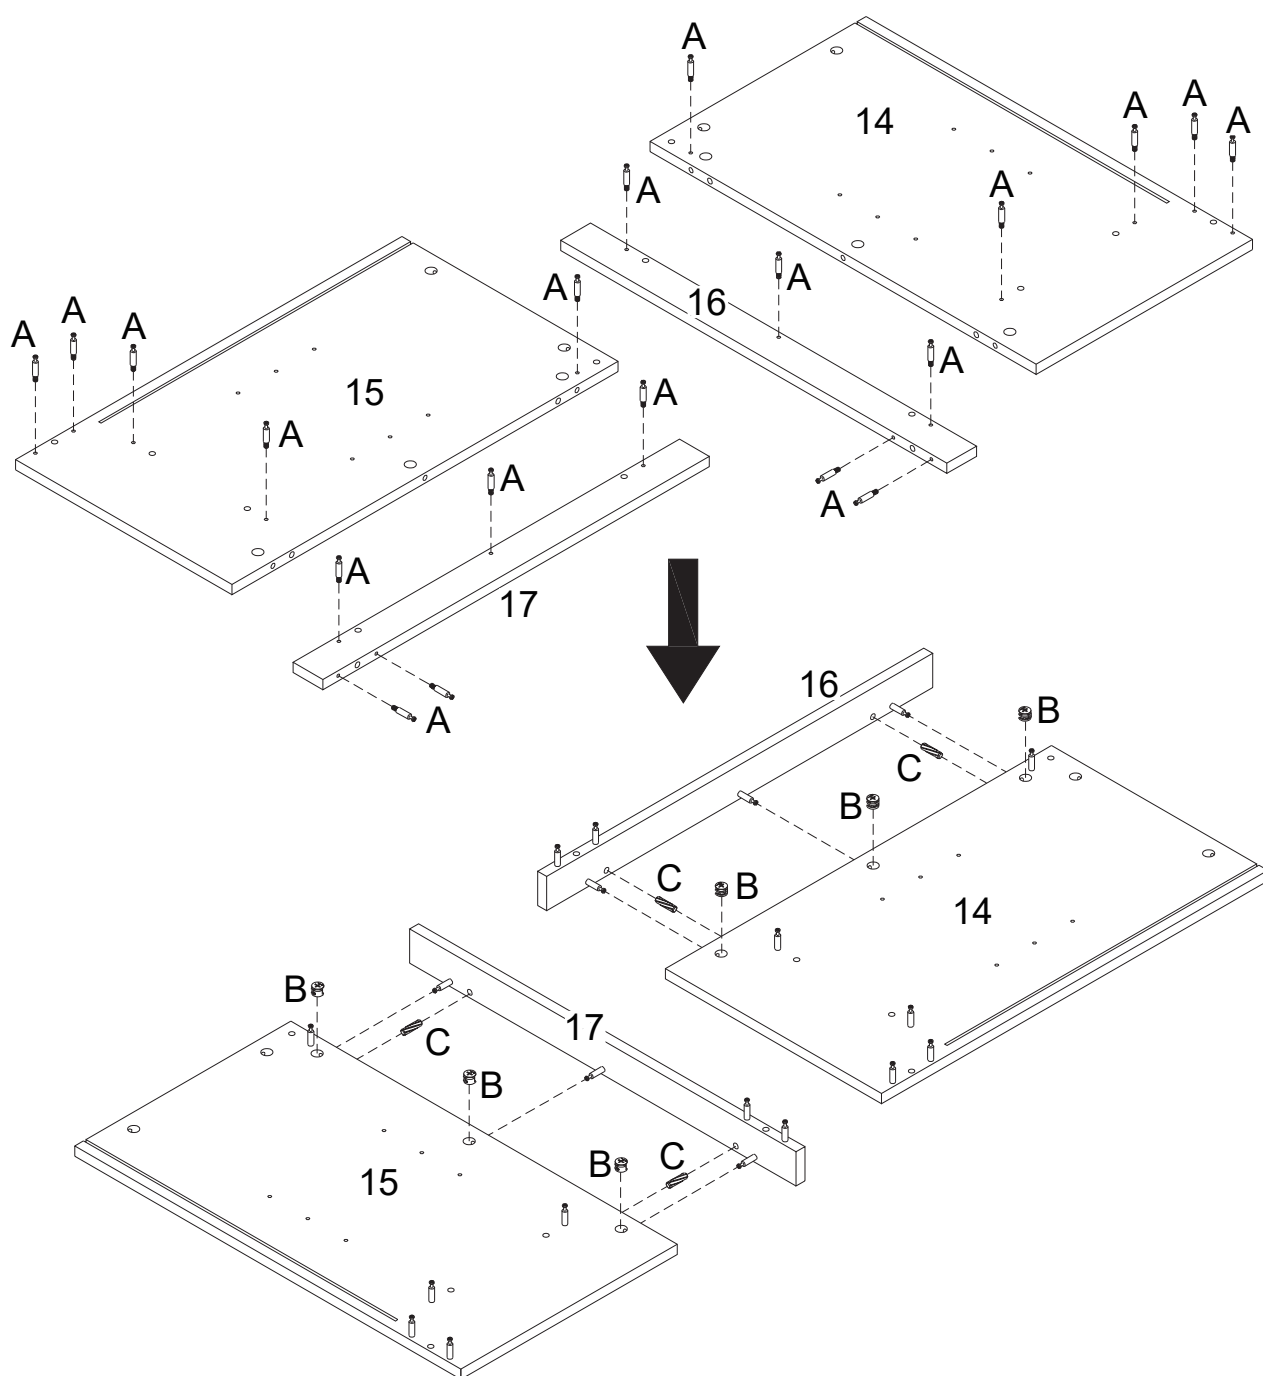

Step 27




C x 2




G x 8





N

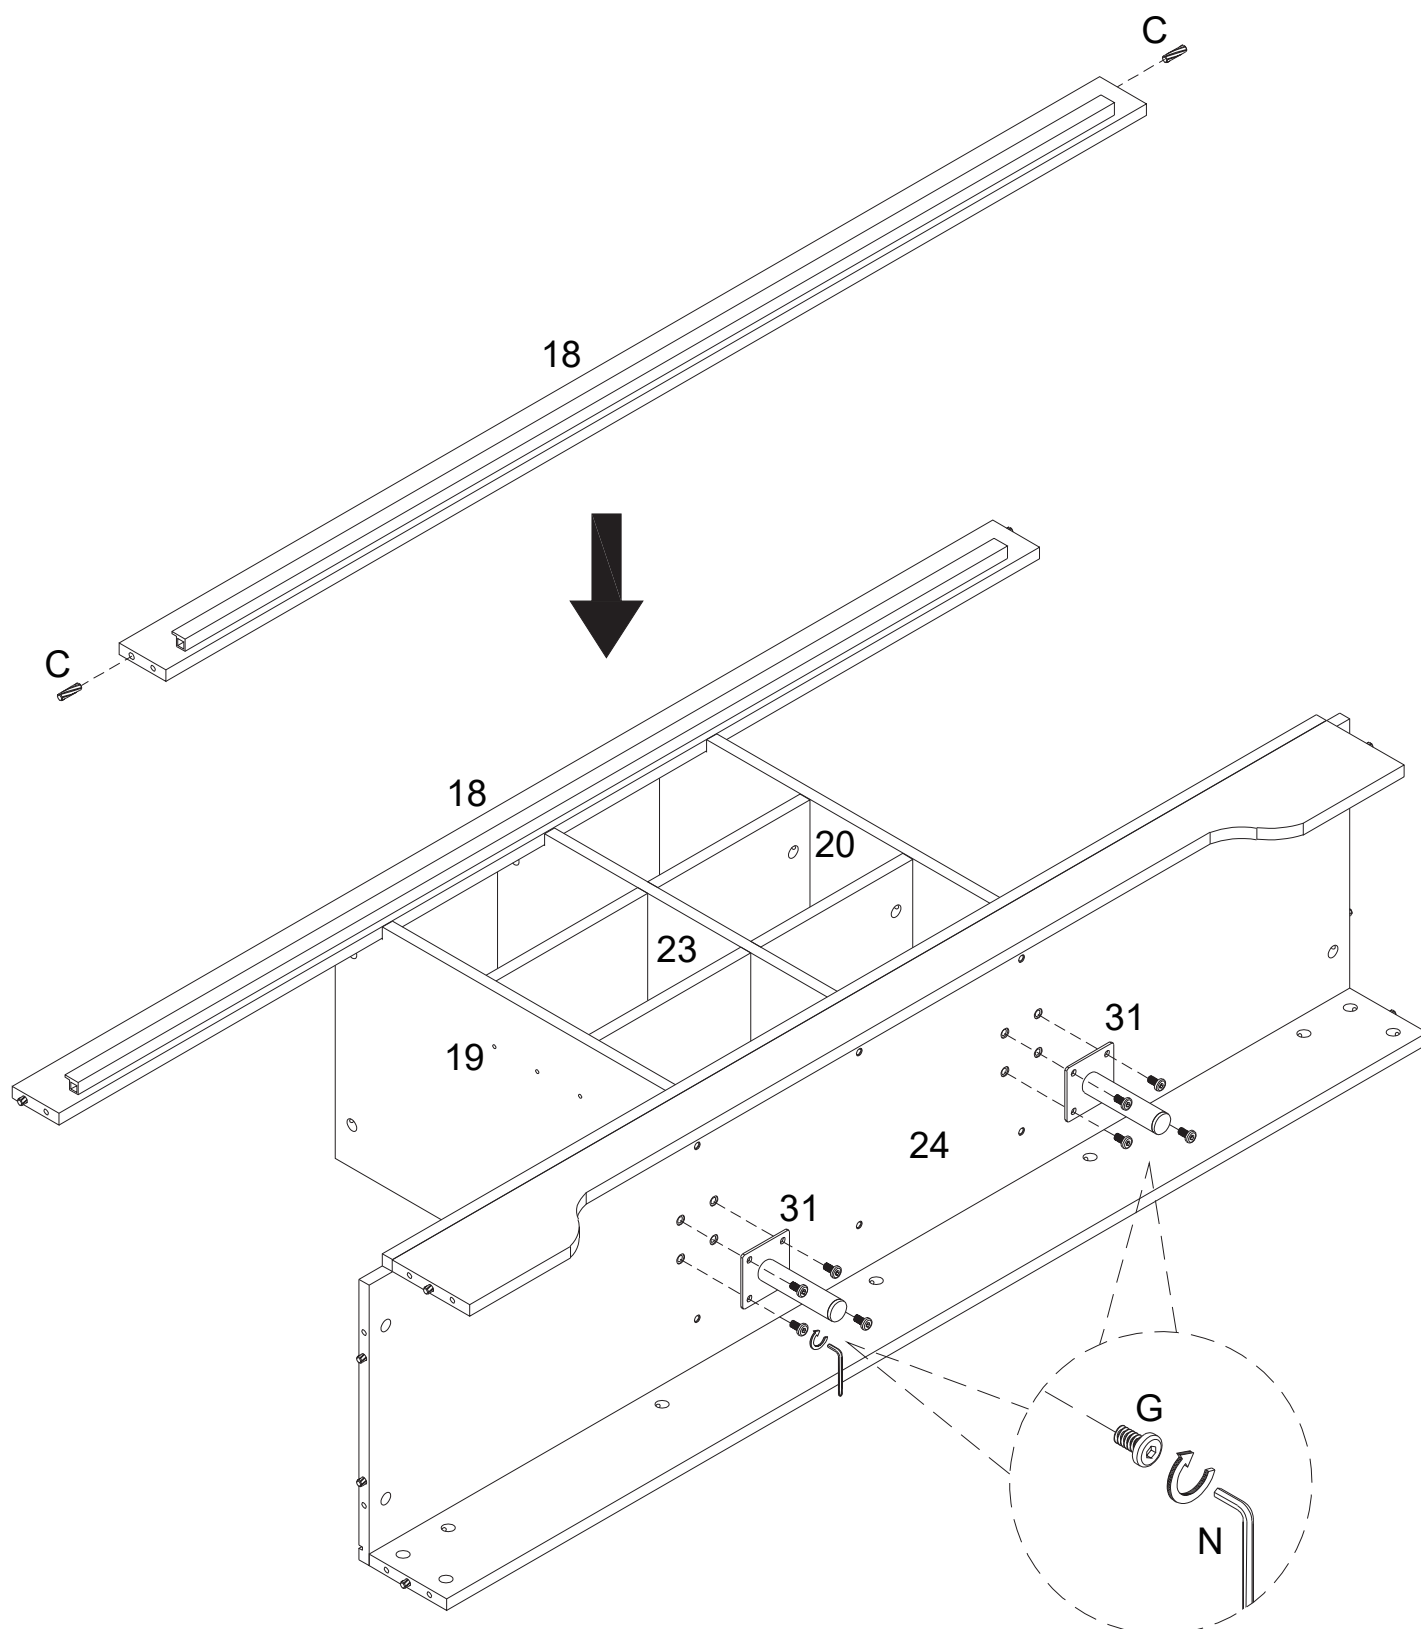

Step 28




B x 14

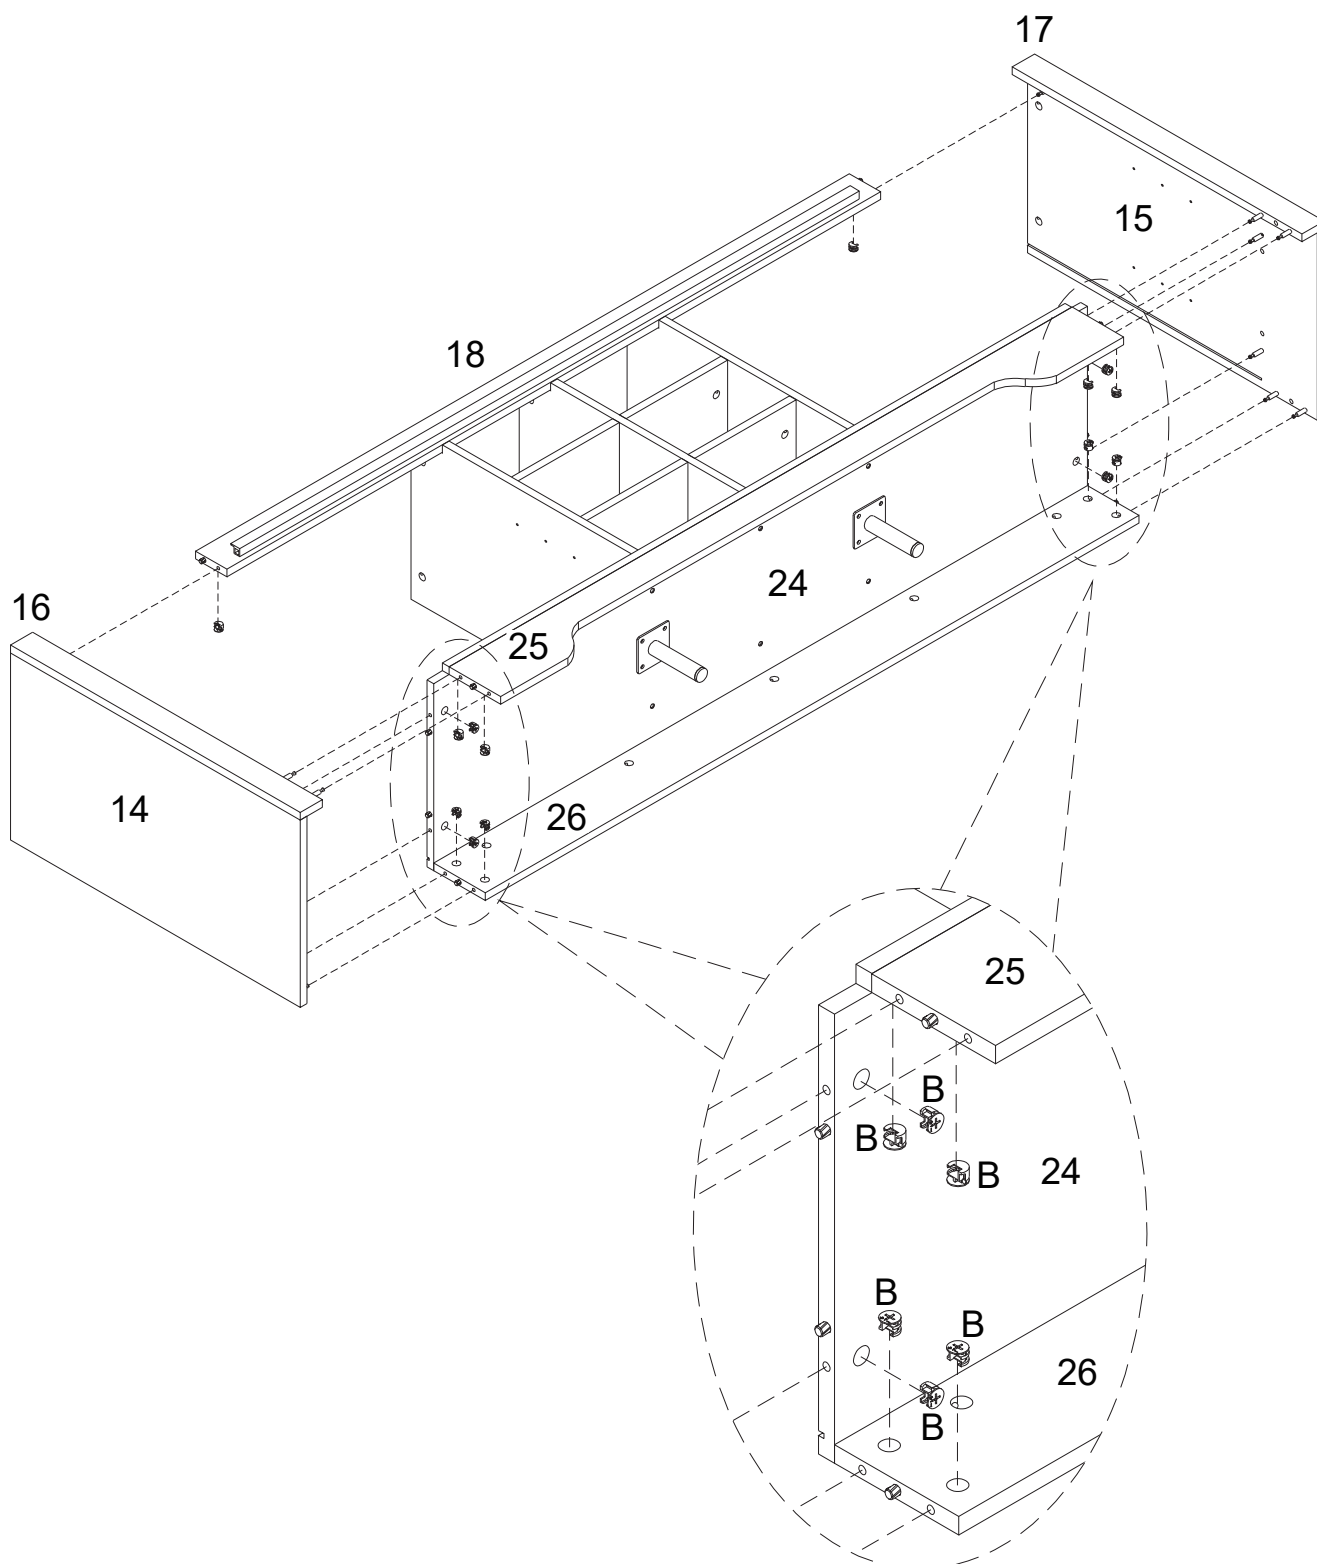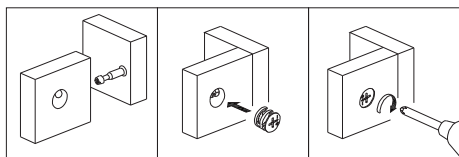


Step 29





C x 15

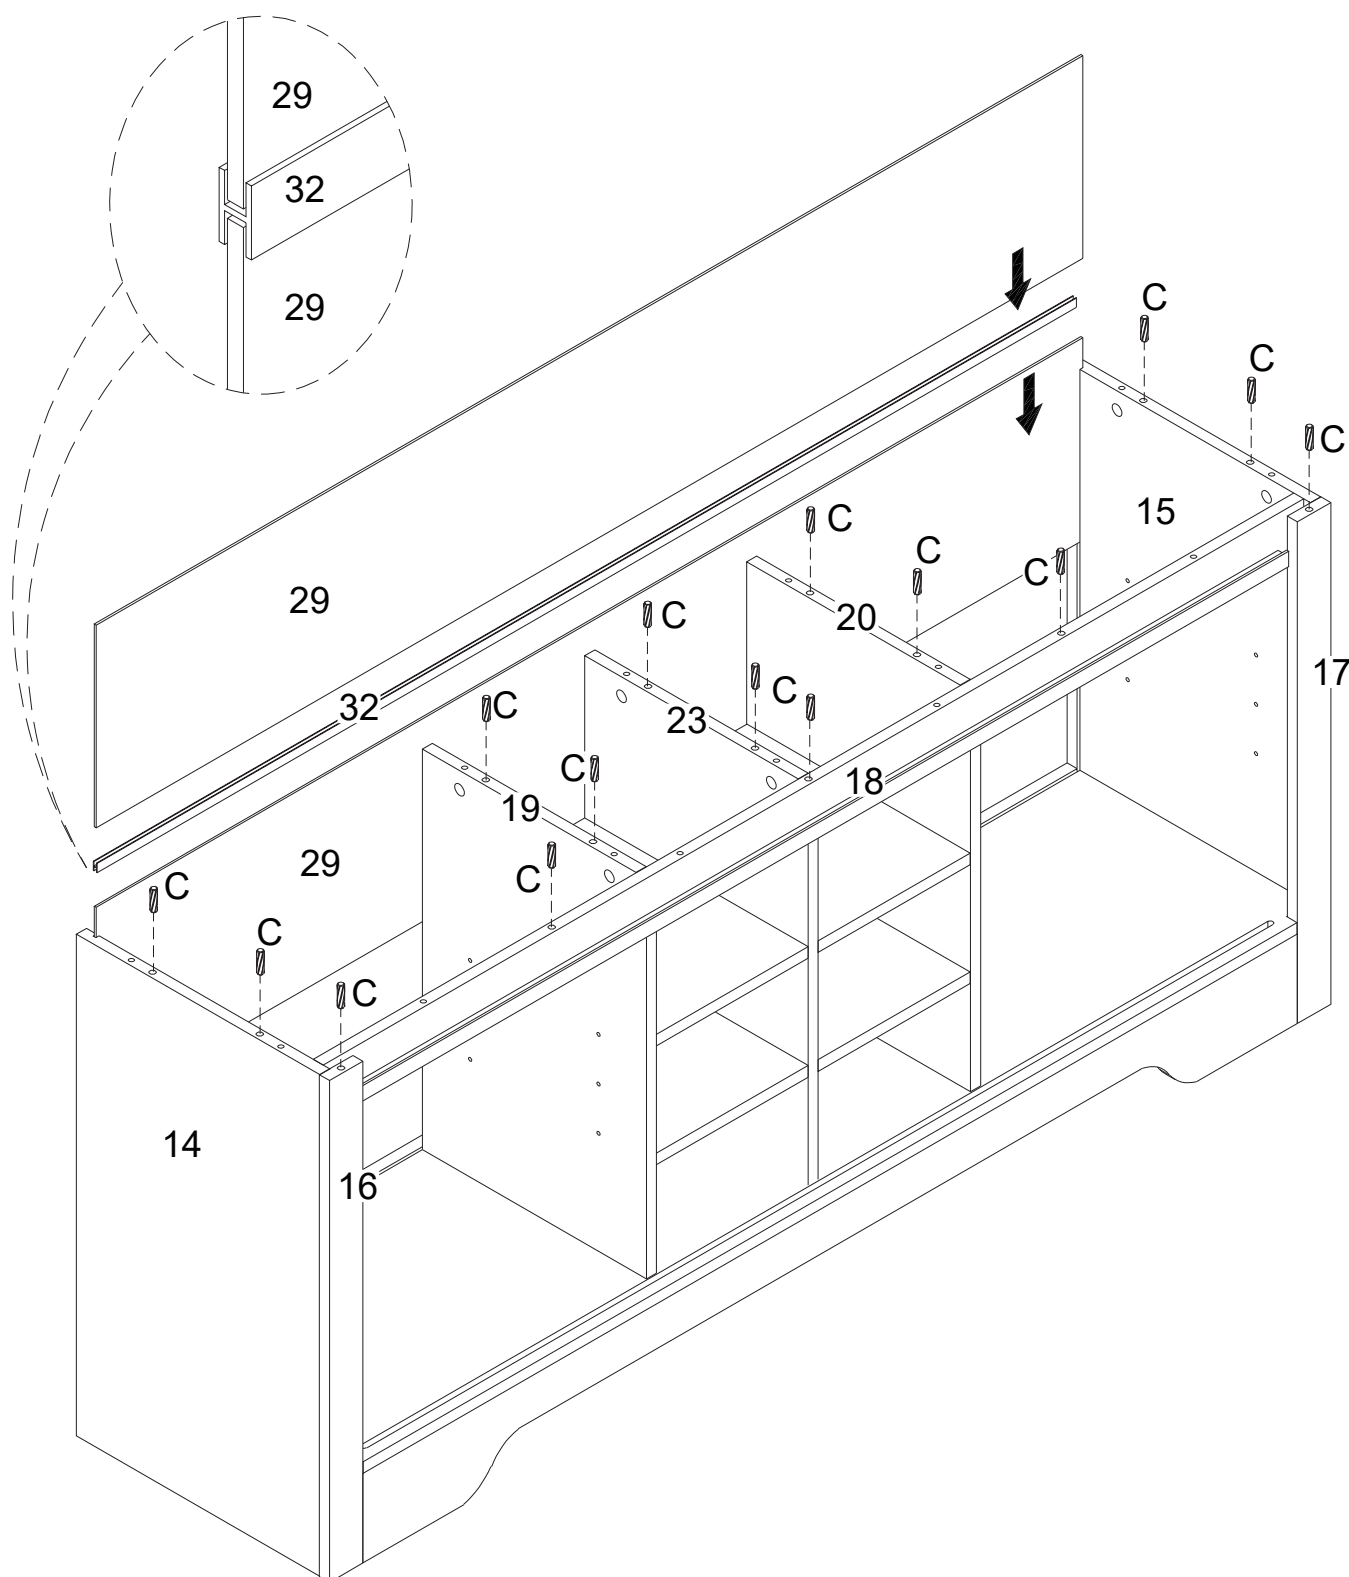

Step 30




B x 14

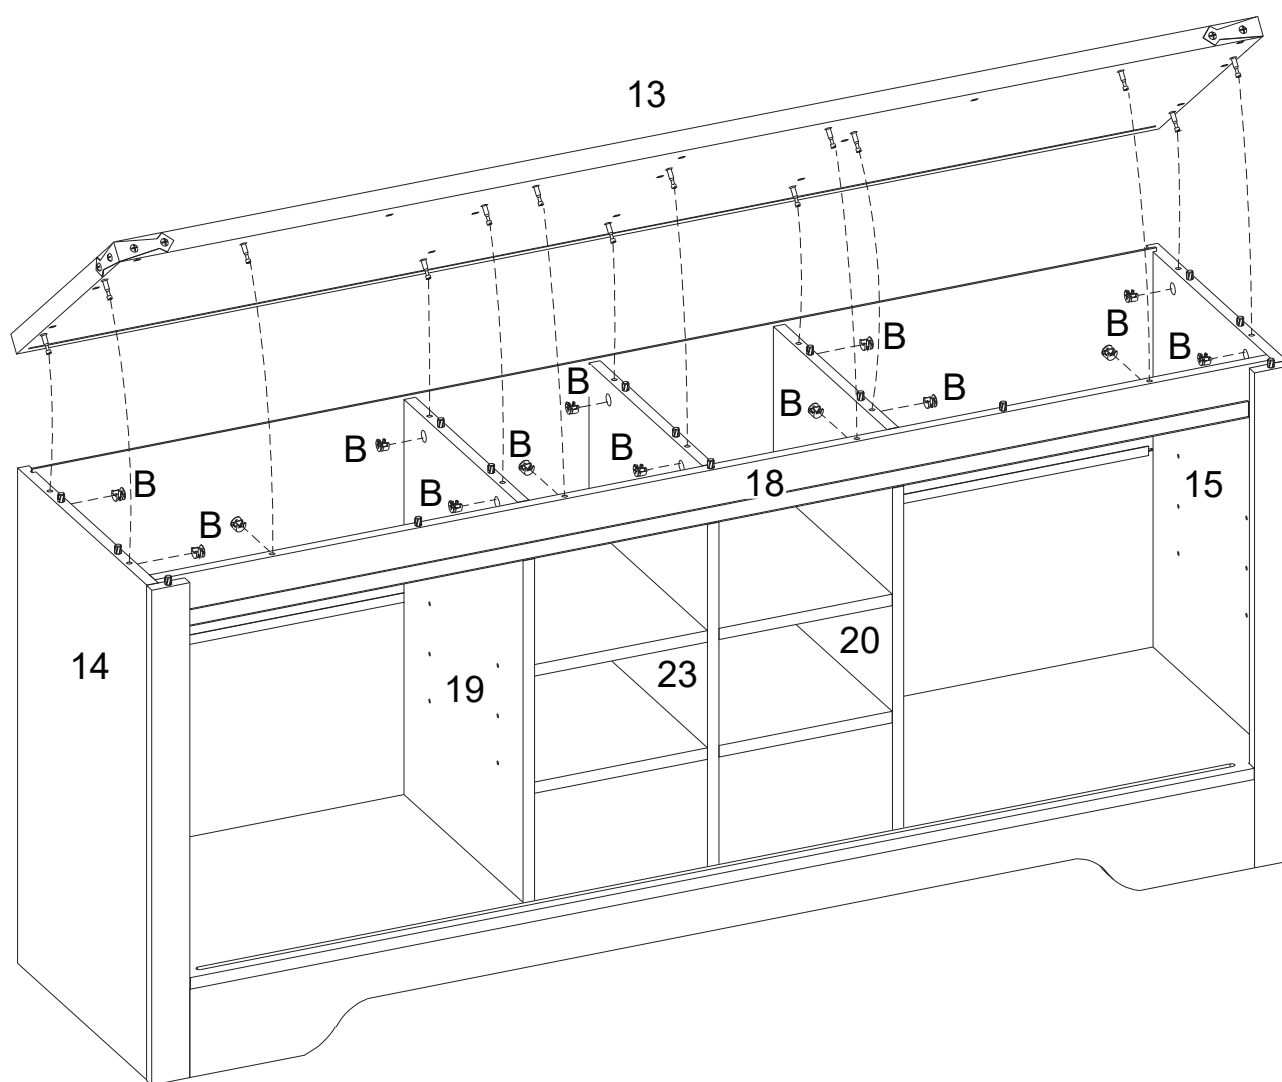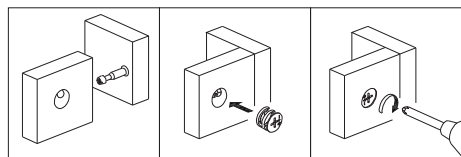




Step 31



T x 8




U x 8

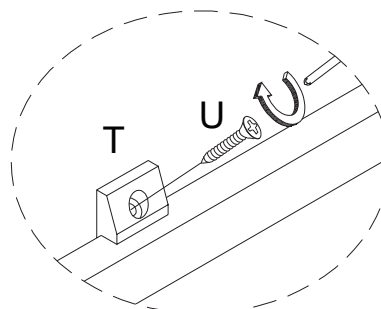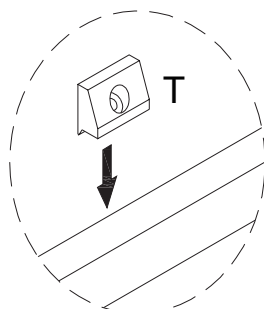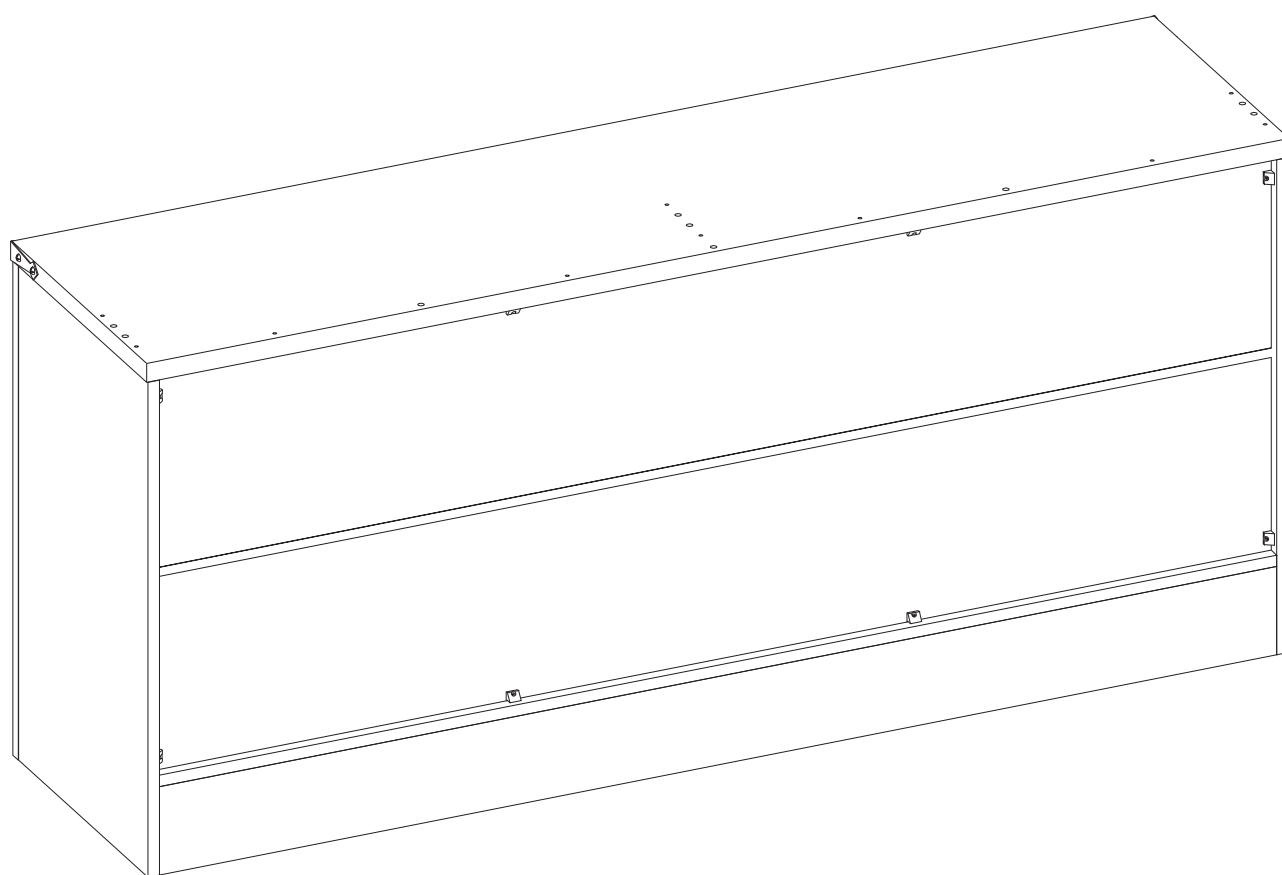


Step 32




E x 8

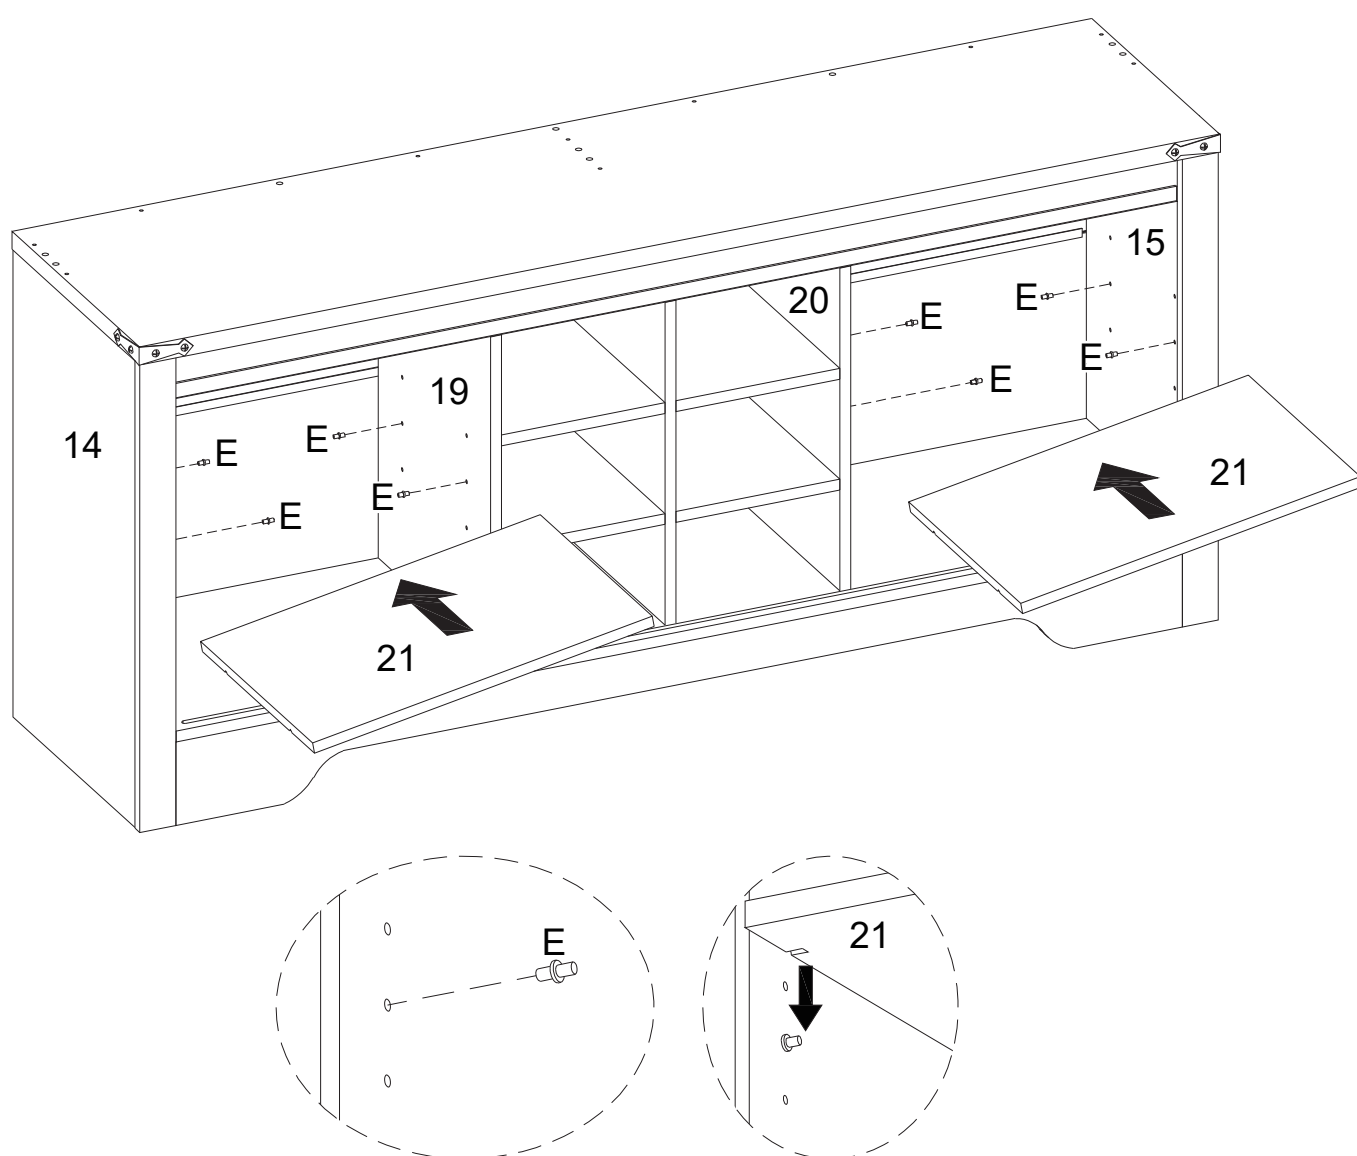

Step 33



G x 8



J x 4




K x 4




L x 8




N

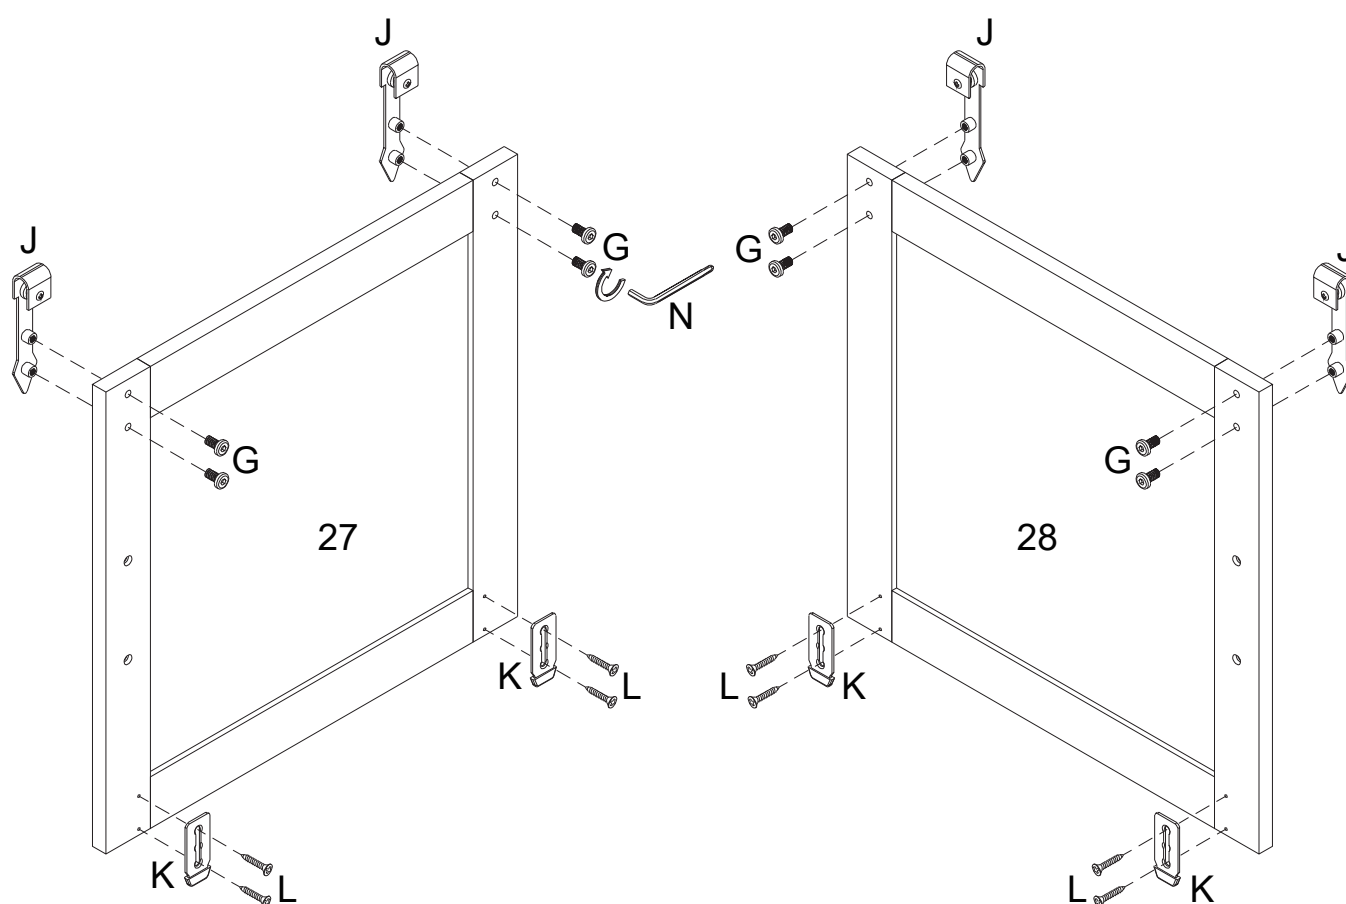



Step 34





F x 4



I x 2

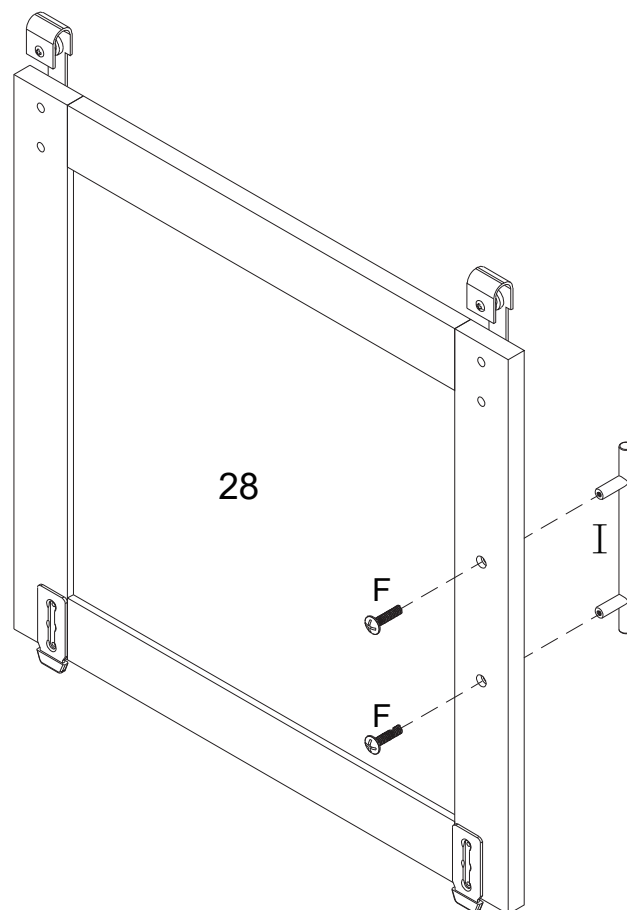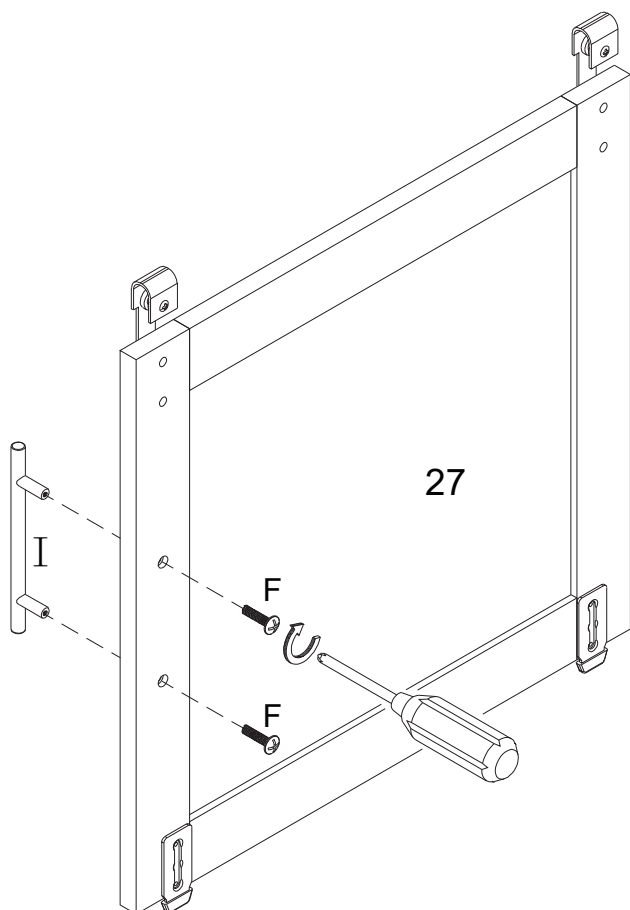

Step 35

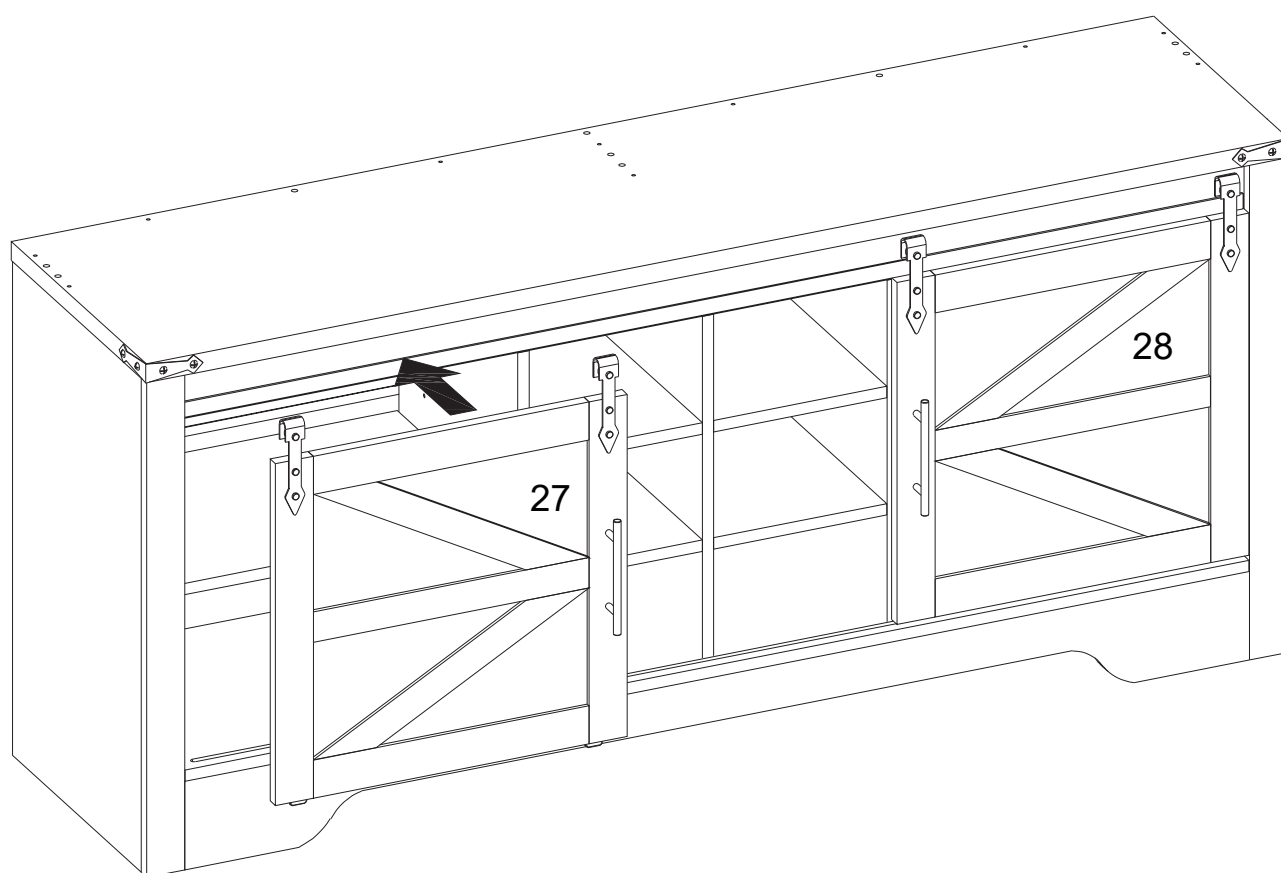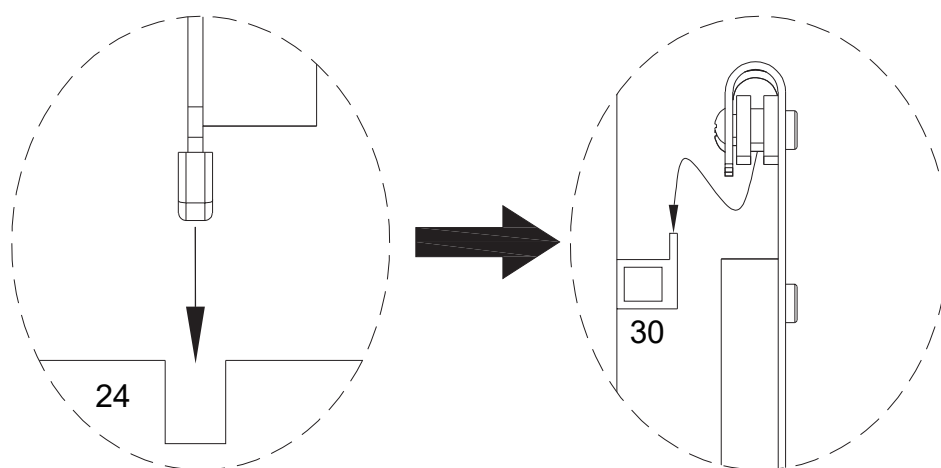


Step 36




A x 10





C x 9

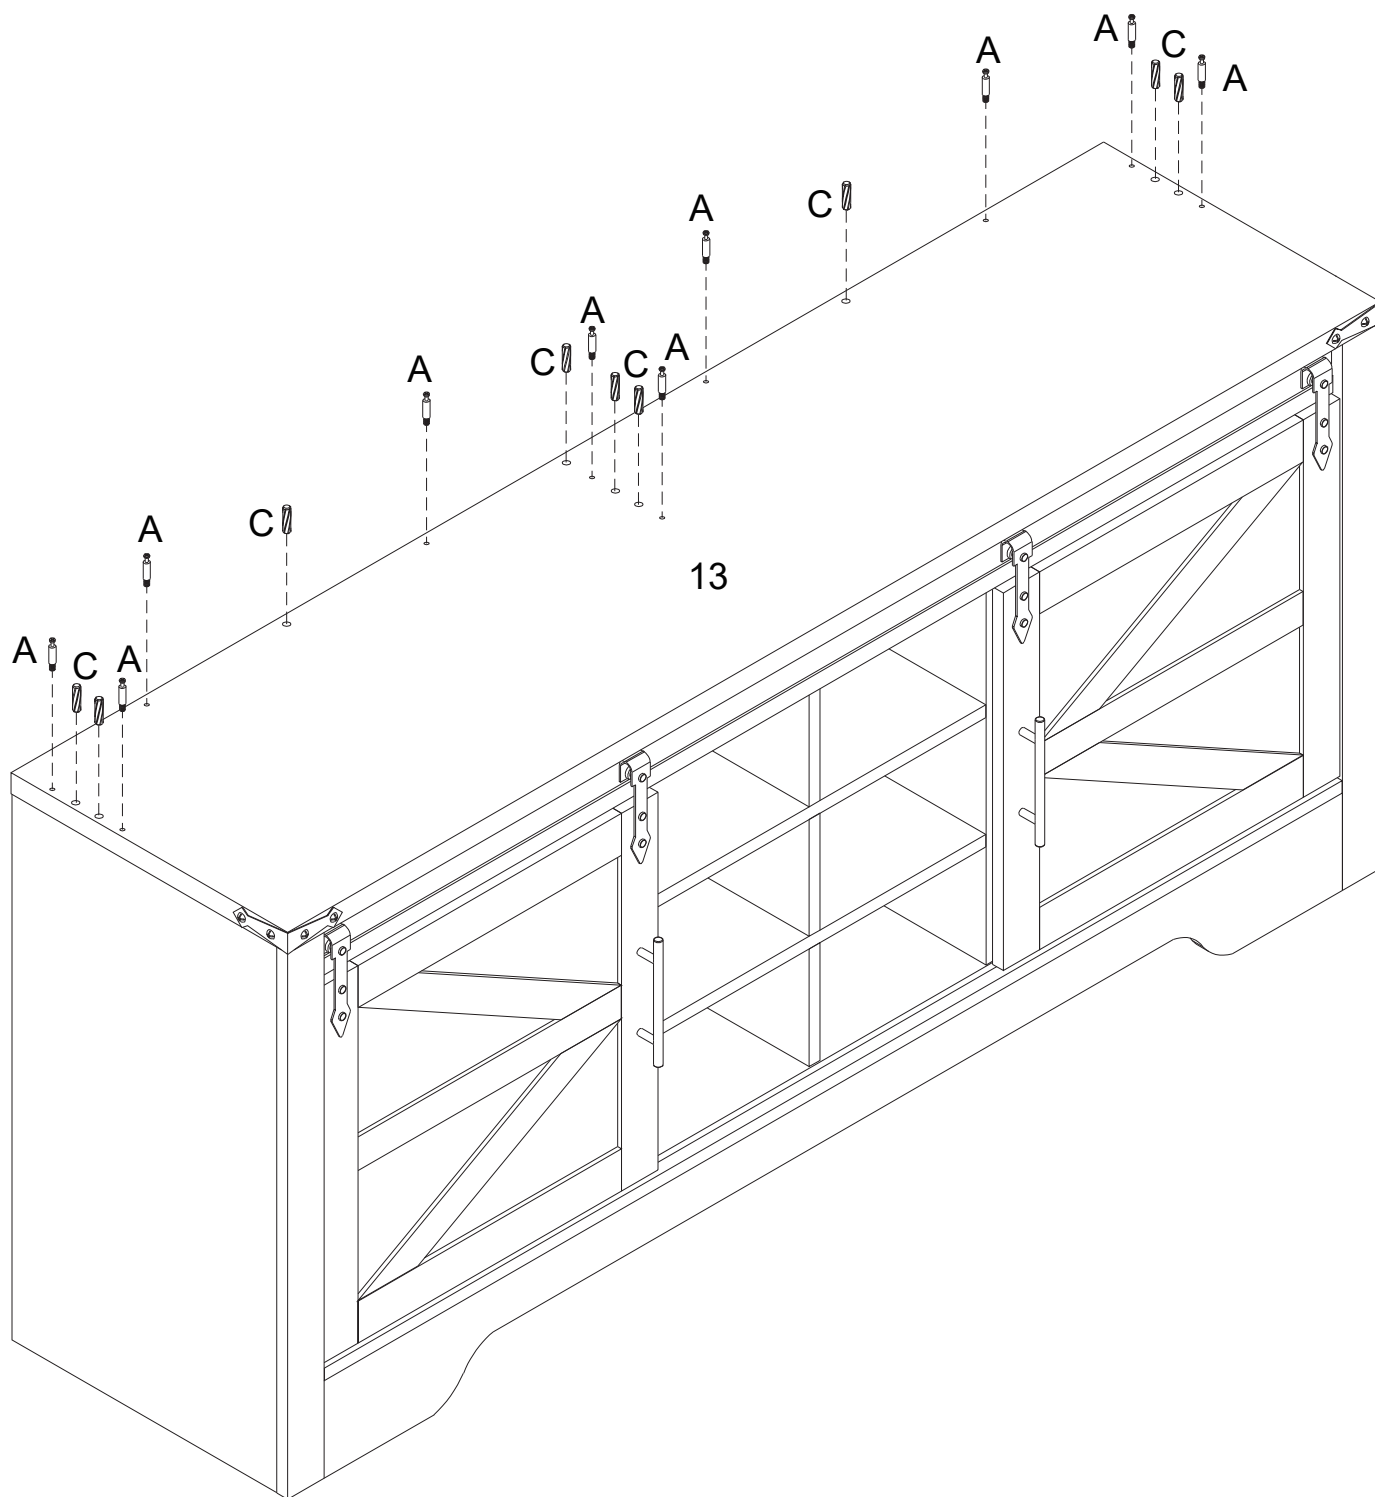


Step 37





B x 6

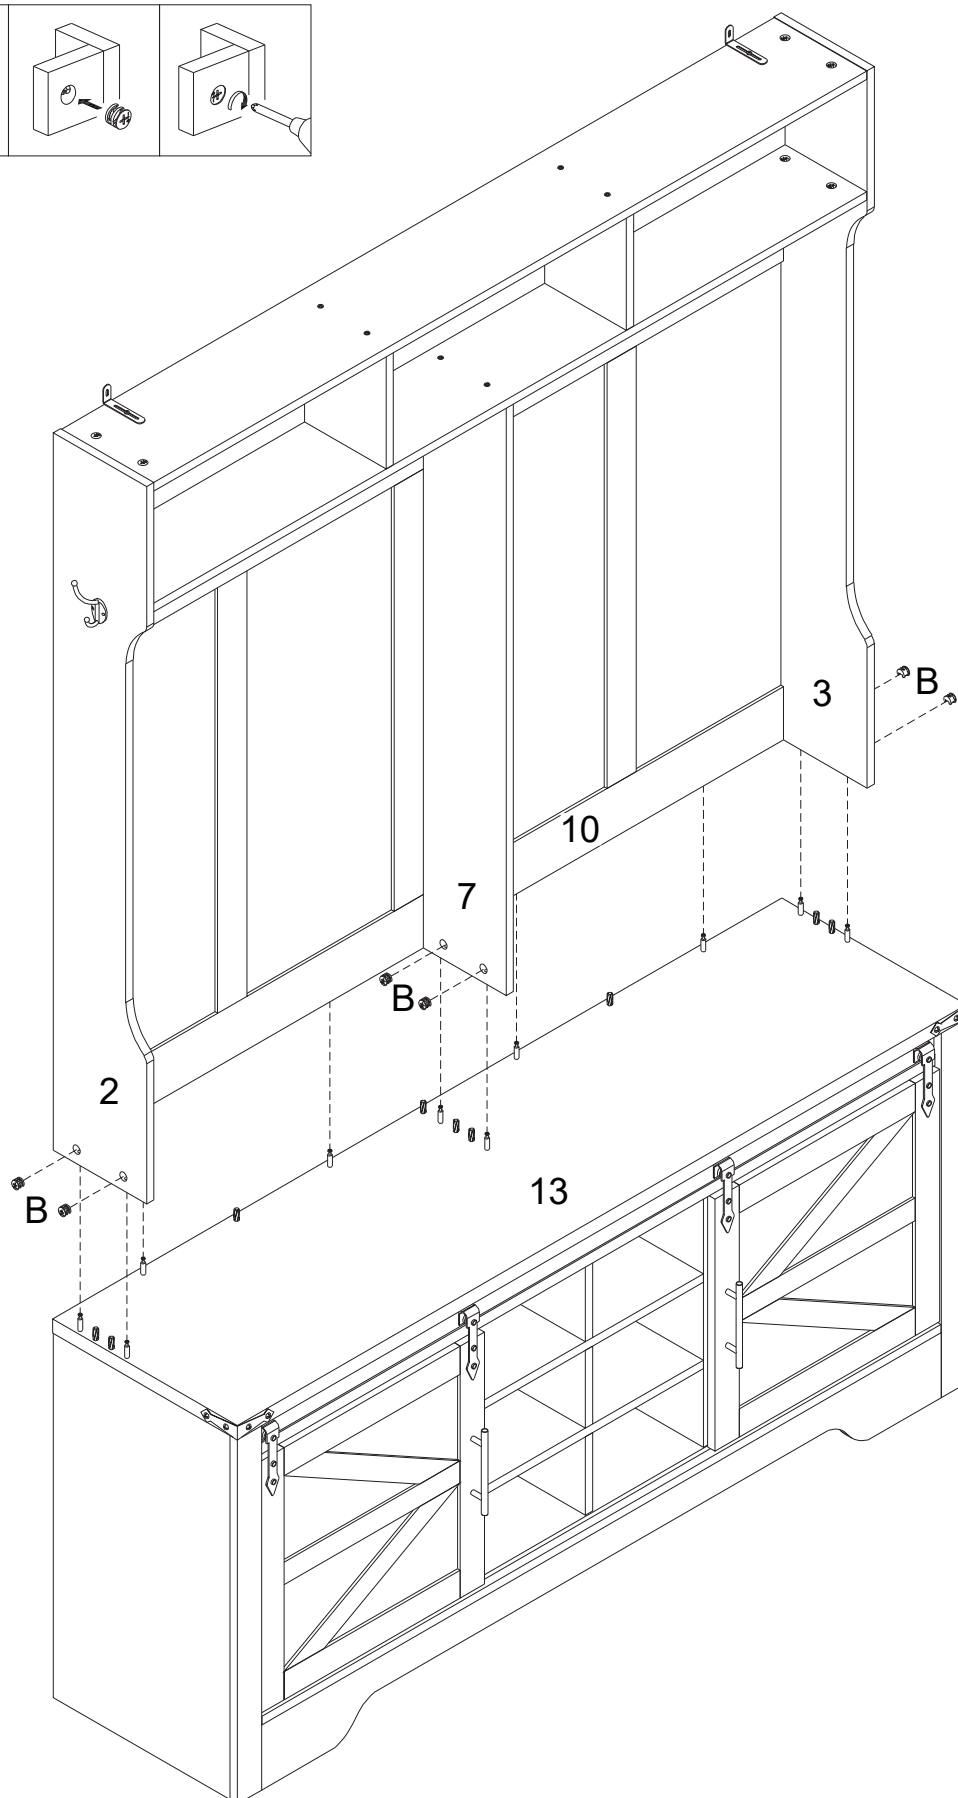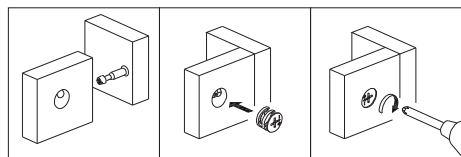



Step 38



B x 4

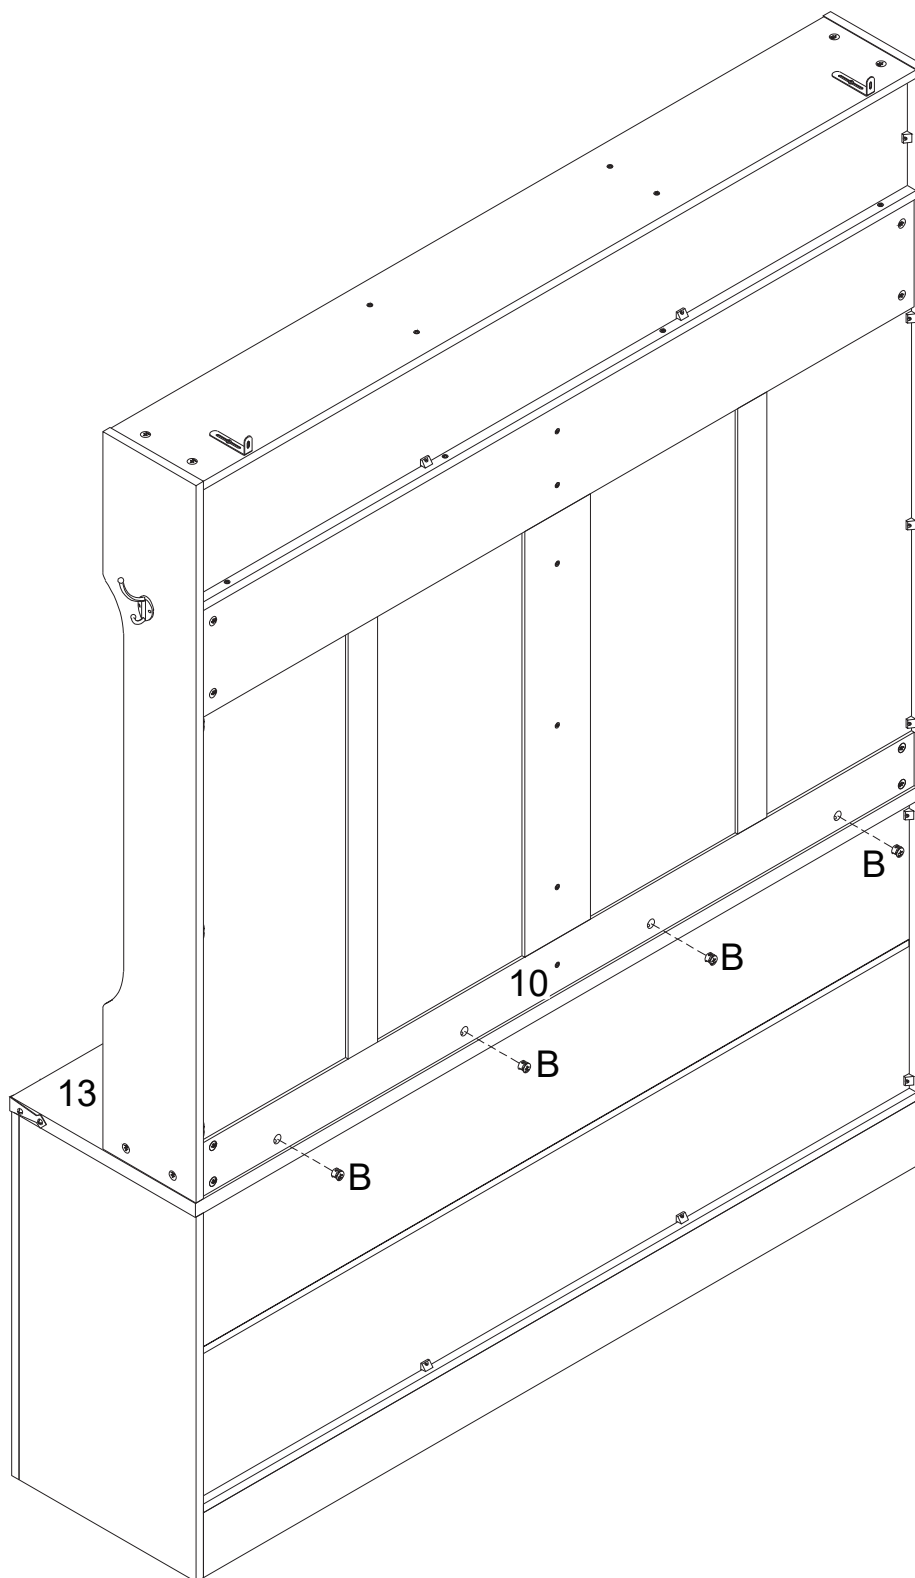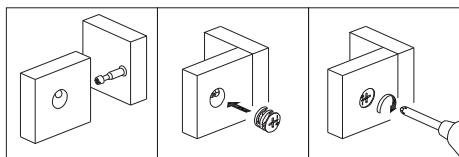

Step 39

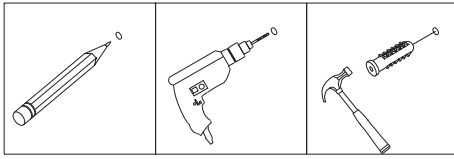

Q x 2




S x 2




O x 78

WARNING: Serious or fatal injuries can occur from furniture tipping over. To prevent the furniture from tipping over we recommend that it is permanently fixed to the wall. Wall anchor and hardware are included with this product. Please make sure hardware is suitable for your walls before installing, as different wall materials may require different types of anchors.

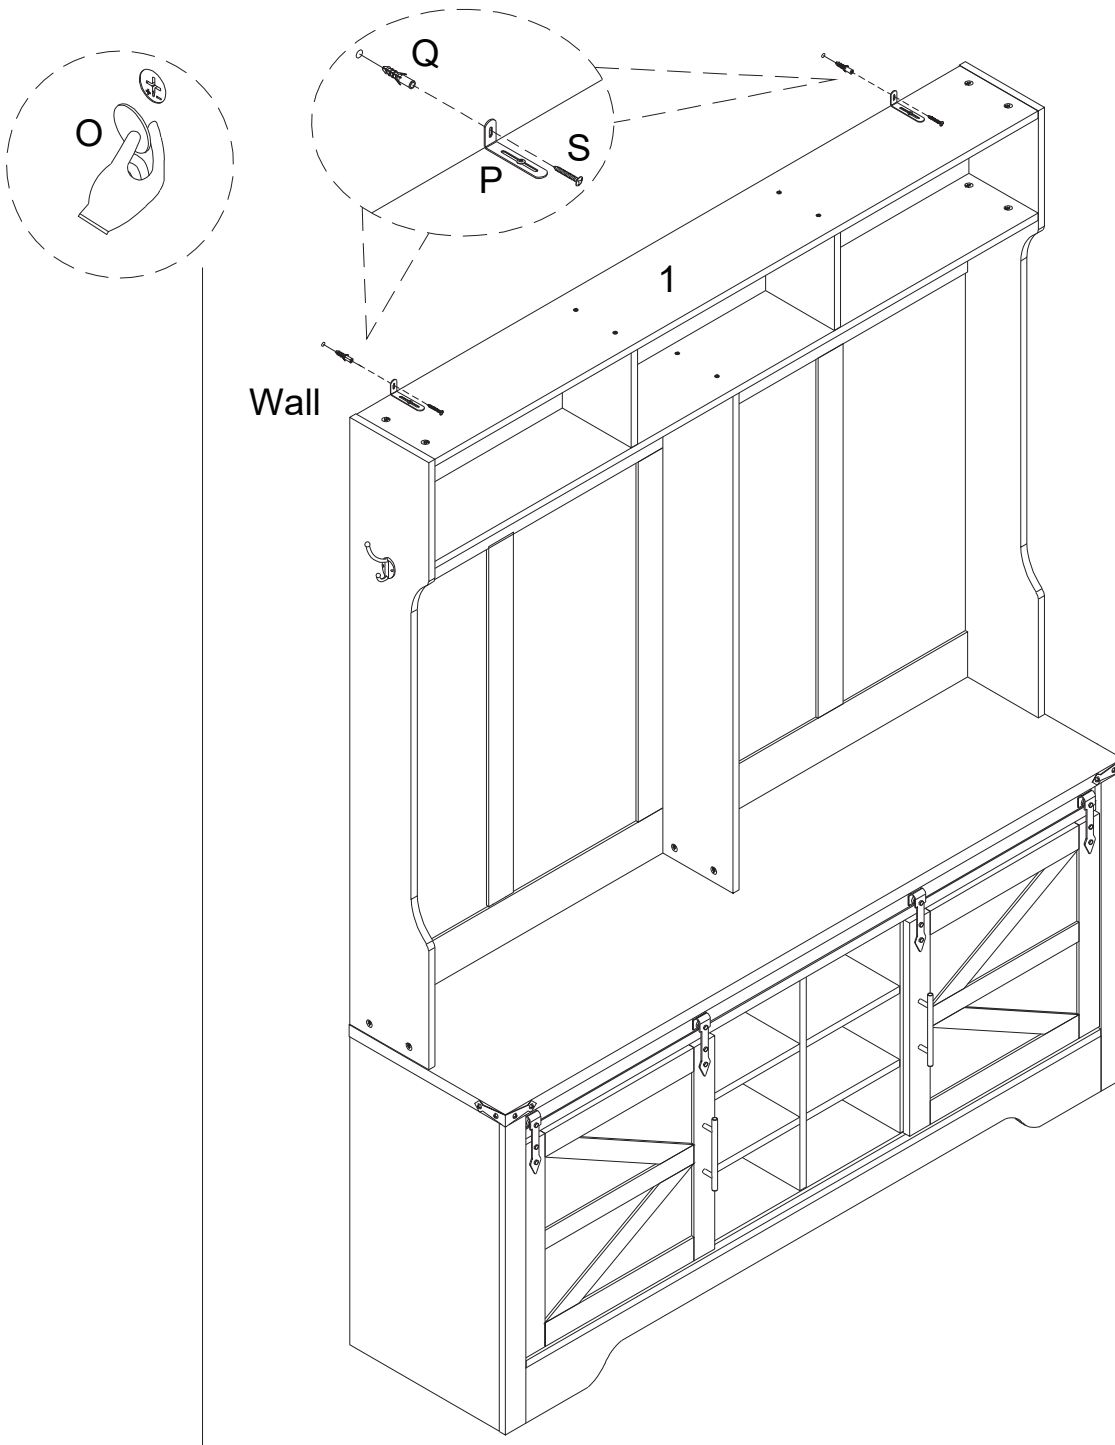

Step 40

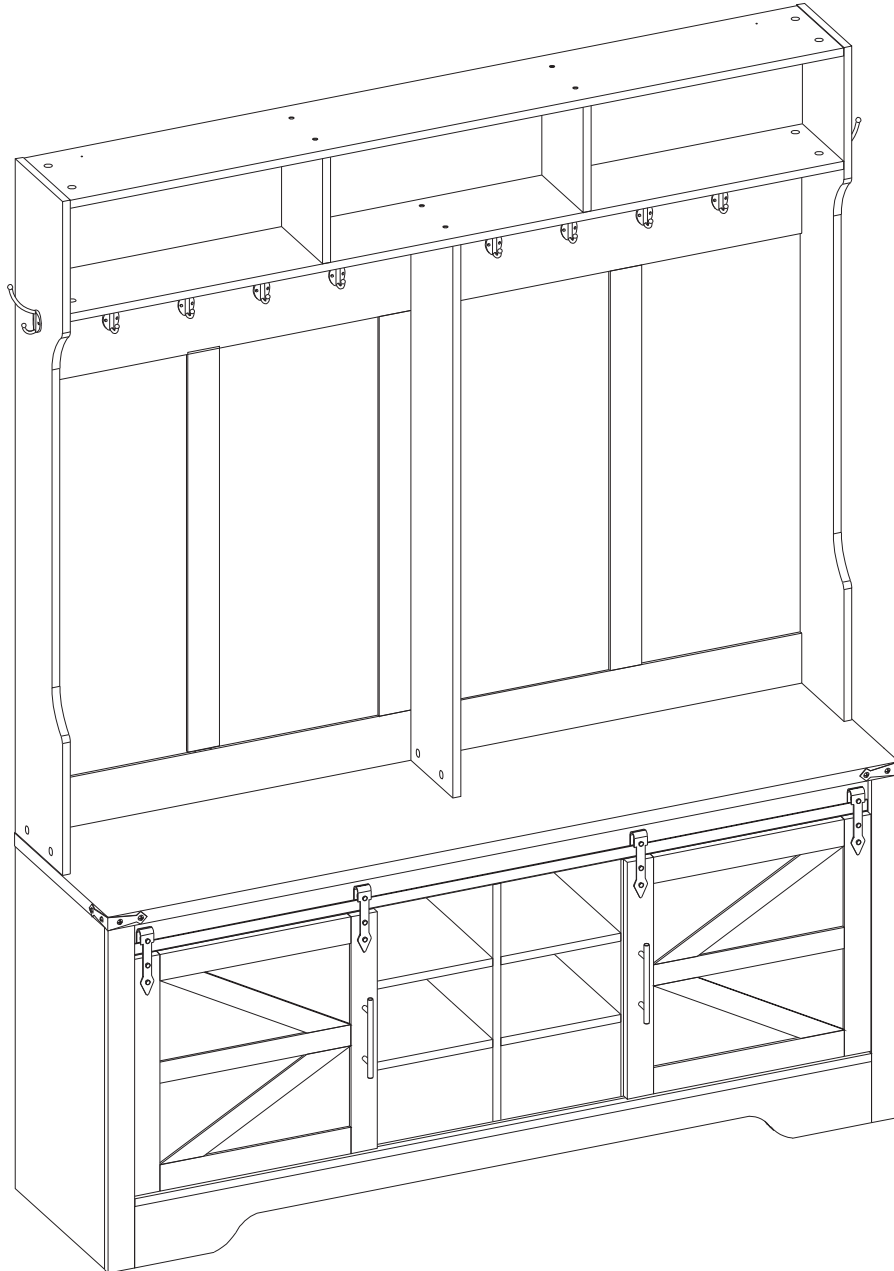

Final Assembly

AFTER-SALES SERVICE CARD

We sincerely thank you for trusting our service and our products, and may this product add enrichment to your home. We guarantee that the product has undergone strict quality inspection and meticulous packaging. If you encounter any issue regarding either shipping or the product, please feel free to contact us at any time. We'd be more than happy to serve you wholeheartedly.

Yours Sincerely

- Please avoid harsh, corrosive and abrasive cleaners.

***Customer Service:(800)209.3199(MON-FRI 9:00am-5:00pm
Eastern Time) or contact help@EverythingSupport.com***

Address: 3005 Breckinridge Blvd, Suite 200, Duluth, GA 30096

If you have any questions or concerns please feel free to contact us. We're committed to providing our customers with the quality service.